

Inception System Alarm Contact ID Map

Event	Event Code	Point ID								
Controller										
Cabinet Tamper	145	513								
AC Fail	301	514								
Low Battery	302	515								
Battery Test	309	516								
Reset	305	517								
SkyTunnel Reporting Path	350	518								
GSM Reporting Path	350	519								
Dialer Reporting Path	350	520								
Short Detected	300	521								
Battery Missing	311	522								
Door 1 Reader Tamper	144	523								
Door 2 Reader Tamper	144	524								
Door 3 Reader Tamper	144	525								
Door 4 Reader Tamper	144	526								
Spare		527								
Spare		528								
Spare		529								
Spare		530								
LCD Terminal No.										
		1	2	3	4	5	6	7	8	9+
Module Offline	143	531	536	541	546	551	556	561	566	571
Cabinet Tamper	145	532	537	542	547	552	557	562	567	572
User Duress	120	533	538	543	548	553	558	563	568	573
PIN Attempts	461	534	539	544	549	554	559	564	569	574
Spare		535	540	545	550	555	560	565	570	575
8 Zone Expander No.										
		1	2	3	4	5	6	7	8	9+
Module Offline	143	576	586	596	606	616	626	636	646	656
Cabinet Tamper	145	577	587	597	607	617	627	637	647	657
Siren Tamper	320	578	588	598	608	618	628	638	648	658
Power Supply AC Failure	301	579	589	599	609	619	629	639	649	659
Power Supply Low Battery	302	580	590	600	610	620	630	640	650	660
Power Supply Battery Test	309	581	591	601	611	621	631	641	651	661
Power Supply Short Detected	300	582	592	602	612	622	632	642	652	662
Power Supply Comms Fail	300	583	593	603	613	623	633	643	653	663
Module Offline Power Issue	143	584	594	604	614	624	634	644	654	664
Spare		585	595	605	615	625	635	645	655	665

Inception System Alarm Contact ID Map

Event	Event Code	Point ID								
		1	2	3	4	5	6	7	8	9+
8 Aux Expander No. (Future product)		1	2	3	4	5	6	7	8	9+
Module Offline	143	666	676	686	696	706	716	726	736	746
Cabinet Tamper	145	667	677	687	697	707	717	727	737	747
Siren Tamper	320	668	678	688	698	708	718	728	738	748
Power Supply AC Failure	301	669	679	689	699	709	719	729	739	749
Power Supply Low Battery	302	670	680	690	700	710	720	730	740	750
Power Supply Battery Test	309	671	681	691	701	711	721	731	741	751
Power Supply Short Detected	300	672	682	692	702	712	722	732	742	752
Power Supply Comms Fail	300	673	683	693	703	713	723	733	743	753
Module Offline Power Issue	143	674	684	694	704	714	724	734	744	754
Spare		675	685	695	705	715	725	735	745	755
SLAM No.		1	2	3	4	5	6	7	8	9+
Module Offline	143	756	766	776	786	796	806	816	826	836
Cabinet Tamper	145	757	767	777	787	797	807	817	827	837
Power Supply AC Failure	301	758	768	778	788	798	808	818	828	838
Power Supply Low Battery	302	759	769	779	789	799	809	819	829	839
Power Supply Battery Test	309	760	770	780	790	800	810	820	830	840
Power Supply Short Detected	300	761	771	781	791	801	811	821	831	841
Power Supply Comms Fail	300	762	772	782	792	802	812	822	832	842
User Duress	120	763	773	783	793	803	813	823	833	843
Door 1 Reader Tamper	144	764	774	784	794	804	814	824	834	844
Door 2 Reader Tamper	144	765	775	785	795	805	815	825	835	845
Module Offline Power Issue	143	E01	E11	E21	E31	E41	E51	E61	E71	E81
RF Expander No.		1	2	3	4	5+				
Module Offline	143	846	851	856	861	866				
Cabinet Tamper	145	847	852	857	862	867				
Xmit Jammed	344	848	853	858	863	868				
Spare		849	854	859	864	869				
Spare		850	855	860	865	870				