

INTEGRITI SIA DECIMAL MAPPING				FIRMWARE: V21		
ID letter	Module Type	Point Number Range			End ID	
		Start #	End #			
C	Controller	0001	0198	C01:S099		
T	LCD Terminal	0201	0520	T32:S008		
P	LAN Ethernet Bridge*	1865	2440	P32:S016	* See Note 3	
	Legacy Concept LAN Pwr Supply	1865	2440	P32:S016		
G	Graphic Terminal	2441	3080	G26:S13		
E	Expander Module	3081	4424	E26:Z19		
R	2-Door Reader Module	4425	5256	R27:S018		
I	Intelligent Reader Module	5257	6824	I13:S036		
F	RF Expander Module	6825	8168	F30:Z010		
V	Virtual Module	8167	9190	V32:S032		
NOTES:						
1) Module Inputs higher than the "End ID" specified above report on Point Number 9999						
2) The default UA/UR Block Data Code for a Zone Input will be overridden by the Block Data Code relevant to the "SIA Type" (or "Report Type" for P2P reporting) selected in the Process Group assigned to the input, or the "SIA Type" selected for the input, if either is programmed.						
3) LAN Ethernet Bridge:						
a) Requires Controller Firmware V21 or later.						
b) Only 10 of the 16 System Inputs allocated to the 'P' type Module are utilized.						
S1-S3, S5, S6, S9 & S13-S16. Refer to the LAN Ethernet Bridge Installation Manual for details.						
Note that LAN Ethernet Bridge Pnn:S09 'LAN Fault' indicates that a Controller or another LAN Ethernet Bridge is connected to the RS485 LAN Port.						
ID	Description	Block Data Code		Point Number	Block Code & Point No.	
		Activate	Restore		Activate	Restore
C01:Z001	C01:Z001	UA	UR	1	UA0001	UR0001
C01:Z002	C01:Z002	UA	UR	2	UA0002	UR0002
C01:Z003	C01:Z003	UA	UR	3	UA0003	UR0003
C01:Z004	C01:Z004	UA	UR	4	UA0004	UR0004
C01:Z005	C01:Z005	UA	UR	5	UA0005	UR0005
C01:Z006	C01:Z006	UA	UR	6	UA0006	UR0006
C01:Z007	C01:Z007	UA	UR	7	UA0007	UR0007
C01:Z008	C01:Z008	UA	UR	8	UA0008	UR0008
C01:Z009	C01:Z009	UA	UR	9	UA0009	UR0009
C01:Z010	C01:Z010	UA	UR	10	UA0010	UR0010
C01:Z011	C01:Z011	UA	UR	11	UA0011	UR0011
C01:Z012	C01:Z012	UA	UR	12	UA0012	UR0012
C01:Z013	C01:Z013	UA	UR	13	UA0013	UR0013
C01:Z014	C01:Z014	UA	UR	14	UA0014	UR0014
C01:Z015	C01:Z015	UA	UR	15	UA0015	UR0015
C01:Z016	C01:Z016	UA	UR	16	UA0016	UR0016
C01:Z017	C01:Z017	UA	UR	17	UA0017	UR0017
C01:Z018	C01:Z018	UA	UR	18	UA0018	UR0018
C01:Z019	C01:Z019	UA	UR	19	UA0019	UR0019
C01:Z020	C01:Z020	UA	UR	20	UA0020	UR0020
C01:Z021	C01:Z021	UA	UR	21	UA0021	UR0021
C01:Z022	C01:Z022	UA	UR	22	UA0022	UR0022
C01:Z023	C01:Z023	UA	UR	23	UA0023	UR0023
C01:Z024	C01:Z024	UA	UR	24	UA0024	UR0024
C01:Z025	C01:Z025	UA	UR	25	UA0025	UR0025
C01:Z026	C01:Z026	UA	UR	26	UA0026	UR0026
C01:Z027	C01:Z027	UA	UR	27	UA0027	UR0027
C01:Z028	C01:Z028	UA	UR	28	UA0028	UR0028
C01:Z029	C01:Z029	UA	UR	29	UA0029	UR0029
C01:Z030	C01:Z030	UA	UR	30	UA0030	UR0030
C01:Z031	C01:Z031	UA	UR	31	UA0031	UR0031
C01:Z032	C01:Z032	UA	UR	32	UA0032	UR0032
C01:Z033	C01:Z033	UA	UR	33	UA0033	UR0033
C01:Z034	C01:Z034	UA	UR	34	UA0034	UR0034

Integriti SIA DECIMAL Map. V21

C01:Z035	C01:Z035	UA	UR	35	JA0035	UR0035
C01:Z036	C01:Z036	UA	UR	36	JA0036	UR0036
C01:Z037	C01:Z037	UA	UR	37	JA0037	UR0037
C01:Z038	C01:Z038	UA	UR	38	JA0038	UR0038
C01:Z039	C01:Z039	UA	UR	39	JA0039	UR0039
C01:Z040	C01:Z040	UA	UR	40	JA0040	UR0040
C01:Z041	C01:Z041	UA	UR	41	JA0041	UR0041
C01:Z042	C01:Z042	UA	UR	42	JA0042	UR0042
C01:Z043	C01:Z043	UA	UR	43	JA0043	UR0043
C01:Z044	C01:Z044	UA	UR	44	JA0044	UR0044
C01:Z045	C01:Z045	UA	UR	45	JA0045	UR0045
C01:Z046	C01:Z046	UA	UR	46	JA0046	UR0046
C01:Z047	C01:Z047	UA	UR	47	JA0047	UR0047
C01:Z048	C01:Z048	UA	UR	48	JA0048	UR0048
C01:Z049	C01:Z049	UA	UR	49	JA0049	UR0049
C01:Z050	C01:Z050	UA	UR	50	JA0050	UR0050
C01:Z051	C01:Z051	UA	UR	51	JA0051	UR0051
C01:Z052	C01:Z052	UA	UR	52	JA0052	UR0052
C01:Z053	C01:Z053	UA	UR	53	JA0053	UR0053
C01:Z054	C01:Z054	UA	UR	54	JA0054	UR0054
C01:Z055	C01:Z055	UA	UR	55	JA0055	UR0055
C01:Z056	C01:Z056	UA	UR	56	JA0056	UR0056
C01:Z057	C01:Z057	UA	UR	57	JA0057	UR0057
C01:Z058	C01:Z058	UA	UR	58	JA0058	UR0058
C01:Z059	C01:Z059	UA	UR	59	JA0059	UR0059
C01:Z060	C01:Z060	UA	UR	60	JA0060	UR0060
C01:Z061	C01:Z061	UA	UR	61	JA0061	UR0061
C01:Z062	C01:Z062	UA	UR	62	JA0062	UR0062
C01:Z063	C01:Z063	UA	UR	63	JA0063	UR0063
C01:Z064	C01:Z064	UA	UR	64	JA0064	UR0064
C01:Z065	C01:Z065	UA	UR	65	JA0065	UR0065
C01:Z066	C01:Z066	UA	UR	66	JA0066	UR0066
C01:Z067	C01:Z067	UA	UR	67	JA0067	UR0067
C01:Z068	C01:Z068	UA	UR	68	JA0068	UR0068
C01:Z069	C01:Z069	UA	UR	69	JA0069	UR0069
C01:Z070	C01:Z070	UA	UR	70	JA0070	UR0070
C01:Z071	C01:Z071	UA	UR	71	JA0071	UR0071
C01:Z072	C01:Z072	UA	UR	72	JA0072	UR0072
C01:Z073	C01:Z073	UA	UR	73	JA0073	UR0073
C01:Z074	C01:Z074	UA	UR	74	JA0074	UR0074
C01:Z075	C01:Z075	UA	UR	75	JA0075	UR0075
C01:Z076	C01:Z076	UA	UR	76	JA0076	UR0076
C01:Z077	C01:Z077	UA	UR	77	JA0077	UR0077
C01:Z078	C01:Z078	UA	UR	78	JA0078	UR0078
C01:Z079	C01:Z079	UA	UR	79	JA0079	UR0079
C01:Z080	C01:Z080	UA	UR	80	JA0080	UR0080
C01:Z081	C01:Z081	UA	UR	81	JA0081	UR0081
C01:Z082	C01:Z082	UA	UR	82	JA0082	UR0082
C01:Z083	C01:Z083	UA	UR	83	JA0083	UR0083
C01:Z084	C01:Z084	UA	UR	84	JA0084	UR0084
C01:Z085	C01:Z085	UA	UR	85	JA0085	UR0085
C01:Z086	C01:Z086	UA	UR	86	JA0086	UR0086
C01:Z087	C01:Z087	UA	UR	87	JA0087	UR0087
C01:Z088	C01:Z088	UA	UR	88	JA0088	UR0088
C01:Z089	C01:Z089	UA	UR	89	JA0089	UR0089
C01:Z090	C01:Z090	UA	UR	90	JA0090	UR0090
C01:Z091	C01:Z091	UA	UR	91	JA0091	UR0091
C01:Z092	C01:Z092	UA	UR	92	JA0092	UR0092
C01:Z093	C01:Z093	UA	UR	93	JA0093	UR0093
C01:Z094	C01:Z094	UA	UR	94	JA0094	UR0094
C01:Z095	C01:Z095	UA	UR	95	JA0095	UR0095
C01:Z096	C01:Z096	UA	UR	96	JA0096	UR0096
C01:Z097	C01:Z097	UA	UR	97	JA0097	UR0097
C01:Z098	C01:Z098	UA	UR	98	JA0098	UR0098
C01:Z099	C01:Z099	UA	UR	99	JA0099	UR0099
C01:S001	C01 Cab Tamper	TA	TR	100	TA0100	TR0100
C01:S002	C01 Int Sir Tamp	YA	YH	101	YA0101	YH0101
C01:S003	C01 Ext Sir Tamp	YA	YH	102	YA0102	YH0102
C01:S004	C01 AC fail	AT	AR	103	AT0103	AR0103
C01:S005	C01 Low Batt	YT	YR	104	YT0104	YR0104

Integriti SIA DECIMAL Map. V21

C01:S006	C01 LAN Fuse	YP	YQ	105	YP0105	YQ0105
C01:S007	C01 DET Fuse	YP	YQ	106	YP0106	YQ0106
C01:S008	C01 Low Volts	YP	YQ	107	YP0107	YQ0107
C01:S009	C01 PS Fail	YP	YQ	108	YP0108	YQ0108
C01:S010	C01 Batt Test	IA	IR	109	IA0109	IR0109
C01:S011	C01 LAN Comms	EM	EN	110	EM0110	EN0110
C01:S012	C01 DBase Changed	YF	UX	111	YF0111	UX0111
C01:S013	C01 Reset	RR	UX	112	RR0112	UX0112
C01:S014	C01 Phone Line	LT	LR	113	LT0113	LR0113
C01:S015	C01 Unibus	EM	EN	114	EM0114	EN0114
C01:S016	C01 Time Report	RP	UX	115	RP0115	UX0115
C01:S017	C01 Unsecured	ET	ER	116	ET0116	ER0116
C01:S018	C01 Spr116	UA	UR	117	UA0117	UR0117
C01:S019	C01 Spr117	UA	UR	118	UA0118	UR0118
C01:S020	C01 Spr118	UA	UR	119	UA0119	UR0119
C01:S021	C01 Spr119	UA	UR	120	UA0120	UR0120
C01:S022	C01 Spr120	UA	UR	121	UA0121	UR0121
C01:S023	C01 Spr121	UA	UR	122	UA0122	UR0122
C01:S024	C01 Spr122	UA	UR	123	UA0123	UR0123
C01:S025	C01 Spr123	UA	UR	124	UA0124	UR0124
C01:S026	C01 Spr124	UA	UR	125	UA0125	UR0125
C01:S027	C01 Spr125	UA	UR	126	UA0126	UR0126
C01:S028	C01 Spr126	UA	UR	127	UA0127	UR0127
C01:S029	C01 Spr127	UA	UR	128	UA0128	UR0128
C01:S030	C01 Spr128	UA	UR	129	UA0129	UR0129
C01:S031	C01 Spr129	UA	UR	130	UA0130	UR0130
C01:S032	C01 Spr130	UA	UR	131	UA0131	UR0131
C01:S033	C01 Spr131	UA	UR	132	UA0132	UR0132
C01:S034	C01 Door1 Fault	IA	IR	133	IA0133	IR0133
C01:S035	C01 Door2 Fault	IA	IR	134	IA0134	IR0134
C01:S036	C01 Door3 Fault	IA	IR	135	IA0135	IR0135
C01:S037	C01 Door4 Fault	IA	IR	136	IA0136	IR0136
C01:S038	C01 Door5 Fault	IA	IR	137	IA0137	IR0137
C01:S039	C01 Door6 Fault	IA	IR	138	IA0138	IR0138
C01:S040	C01 Door7 Fault	IA	IR	139	IA0139	IR0139
C01:S041	C01 Door8 Fault	IA	IR	140	IA0140	IR0140
C01:S042	C01 Door1 Forced	DF	DR	141	DF0141	DR0141
C01:S043	C01 Door2 Forced	DF	DR	142	DF0142	DR0142
C01:S044	C01 Door3 Forced	DF	DR	143	DF0143	DR0143
C01:S045	C01 Door4 Forced	DF	DR	144	DF0144	DR0144
C01:S046	C01 Door5 Forced	DF	DR	145	DF0145	DR0145
C01:S047	C01 Door6 Forced	DF	DR	146	DF0146	DR0146
C01:S048	C01 Door7 Forced	DF	DR	147	DF0147	DR0147
C01:S049	C01 Door8 Forced	DF	DR	148	DF0148	DR0148
C01:S050	C01 Door1 DOTL	DL	DH	149	DL0149	DH0149
C01:S051	C01 Door2 DOTL	DL	DH	150	DL0150	DH0150
C01:S052	C01 Door3 DOTL	DL	DH	151	DL0151	DH0151
C01:S053	C01 Door4 DOTL	DL	DH	152	DL0152	DH0152
C01:S054	C01 Door5 DOTL	DL	DH	153	DL0153	DH0153
C01:S055	C01 Door6 DOTL	DL	DH	154	DL0154	DH0154
C01:S056	C01 Door7 DOTL	DL	DH	155	DL0155	DH0155
C01:S057	C01 Door8 DOTL	DL	DH	156	DL0156	DH0156
C01:S058	C01 Rdr1 Invalid	DD	DR	157	DD0157	DR0157
C01:S059	C01 Rdr2 Invalid	DD	DR	158	DD0158	DR0158
C01:S060	C01 Rdr3 Invalid	DD	DR	159	DD0159	DR0159
C01:S061	C01 Rdr4 Invalid	DD	DR	160	DD0160	DR0160
C01:S062	C01 Rdr5 Invalid	DD	DR	161	DD0161	DR0161
C01:S063	C01 Rdr6 Invalid	DD	DR	162	DD0162	DR0162
C01:S064	C01 Rdr7 Invalid	DD	DR	163	DD0163	DR0163
C01:S065	C01 Rdr8 Invalid	DD	DR	164	DD0164	DR0164
C01:S066	C01 Rdr9 Invalid	DD	DR	165	DD0165	DR0165
C01:S067	C01 Rdr10 Invalid	DD	DR	166	DD0166	DR0166
C01:S068	C01 Rdr11 Invalid	DD	DR	167	DD0167	DR0167
C01:S069	C01 Rdr12 Invalid	DD	DR	168	DD0168	DR0168
C01:S070	C01 Rdr13 Invalid	DD	DR	169	DD0169	DR0169
C01:S071	C01 Rdr14 Invalid	DD	DR	170	DD0170	DR0170
C01:S072	C01 Rdr15 Invalid	DD	DR	171	DD0171	DR0171
C01:S073	C01 Rdr16 Invalid	DD	DR	172	DD0172	DR0172
C01:S074	C01 Rdr1 Duress	HA	HR	173	HA0173	HR0173
C01:S075	C01 Rdr2 Duress	HA	HR	174	HA0174	HR0174

Integriti SIA DECIMAL Map. V21

C01:S076	C01 Rdr3 Duress	HA	HR	175	HA0175	HR0175
C01:S077	C01 Rdr4 Duress	HA	HR	176	HA0176	HR0176
C01:S078	C01 Rdr5 Duress	HA	HR	177	HA0177	HR0177
C01:S079	C01 Rdr6 Duress	HA	HR	178	HA0178	HR0178
C01:S080	C01 Rdr7 Duress	HA	HR	179	HA0179	HR0179
C01:S081	C01 Rdr8 Duress	HA	HR	180	HA0180	HR0180
C01:S082	C01 Rdr9 Duress	HA	HR	181	HA0181	HR0181
C01:S083	C01 Rdr10 Duress	HA	HR	182	HA0182	HR0182
C01:S084	C01 Rdr11 Duress	HA	HR	183	HA0183	HR0183
C01:S085	C01 Rdr12 Duress	HA	HR	184	HA0184	HR0184
C01:S086	C01 Rdr13 Duress	HA	HR	185	HA0185	HR0185
C01:S087	C01 Rdr14 Duress	HA	HR	186	HA0186	HR0186
C01:S088	C01 Rdr15 Duress	HA	HR	187	HA0187	HR0187
C01:S089	C01 Rdr16 Duress	HA	HR	188	HA0188	HR0188
C01:S090	C01 Rdr1 Fault	IA	IR	189	IA0189	IR0189
C01:S091	C01 Rdr2 Fault	IA	IR	190	IA0190	IR0190
C01:S092	C01 Rdr3 Fault	IA	IR	191	IA0191	IR0191
C01:S093	C01 Rdr4 Fault	IA	IR	192	IA0192	IR0192
C01:S094	C01 Rdr5 Fault	IA	IR	193	IA0193	IR0193
C01:S095	C01 Rdr6 Fault	IA	IR	194	IA0194	IR0194
C01:S096	C01 Rdr7 Fault	IA	IR	195	IA0195	IR0195
C01:S097	C01 Rdr8 Fault	IA	IR	196	IA0196	IR0196
C01:S098	C01 Rdr9 Fault	IA	IR	197	IA0197	IR0197
C01:S099	C01 Rdr10 Fault	IA	IR	198	IA0198	IR0198
C01:S100	C01 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
C01:S101	C01 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
C01:S102	C01 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
C01:S103	C01 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
C01:S104	C01 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
C01:S105	C01 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
C01:S106	C01 Spr180	UA	UR	9999	UA9999	UR9999
C01:S107	C01 Spr181	UA	UR	9999	UA9999	UR9999
C01:S108	C01 Spr182	UA	UR	9999	UA9999	UR9999
C01:S109	C01 Spr183	UA	UR	9999	UA9999	UR9999
C01:S110	C01 Spr184	UA	UR	9999	UA9999	UR9999
C01:S111	C01 Spr185	UA	UR	9999	UA9999	UR9999
C01:S112	C01 Spr186	UA	UR	9999	UA9999	UR9999
C01:S113	C01 Spr187	UA	UR	9999	UA9999	UR9999
C01:S114	C01 Spr188	UA	UR	9999	UA9999	UR9999
C01:S115	C01 Spr189	UA	UR	9999	UA9999	UR9999
C01:S116	C01 Spr190	UA	UR	9999	UA9999	UR9999
C01:S117	C01 Spr191	UA	UR	9999	UA9999	UR9999
C01:S118	C01 Spr192	UA	UR	9999	UA9999	UR9999
C01:S119	C01 Spr193	UA	UR	9999	UA9999	UR9999
C01:S120	C01 Spr194	UA	UR	9999	UA9999	UR9999
C01:S121	C01 Spr195	UA	UR	9999	UA9999	UR9999
C01:S122	C01 Spr196	UA	UR	9999	UA9999	UR9999
C01:S123	C01 Spr197	UA	UR	9999	UA9999	UR9999
T01:Z001	T01:Z001	UA	UR	201	UA0201	UR0201
T01:Z002	T01:Z002	UA	UR	202	UA0202	UR0202
T01:S001	T01 Cab Tamper	TA	TR	203	TA0203	TR0203
T01:S002	T01 Panic	PA	PR	204	PA0204	PR0204
T01:S003	T01 Door Forced	DF	DR	205	DF0205	DR0205
T01:S004	T01 Door DOTL	DL	DH	206	DL0206	DH0206
T01:S005	T01 Duress	HA	HR	207	HA0207	HR0207
T01:S006	T01 Deadman	UA	UR	208	UA0208	UR0208
T01:S007	T01 Pin Attempts	JA	UX	209	JA0209	UX0209
T01:S008	T01 LAN Comms	EM	EN	210	EM0210	EN0210
T02:Z001	T02:Z001	UA	UR	211	UA0211	UR0211
T02:Z002	T02:Z002	UA	UR	212	UA0212	UR0212
T02:S001	T02 Cab Tamper	TA	TR	213	TA0213	TR0213
T02:S002	T02 Panic	PA	PR	214	PA0214	PR0214
T02:S003	T02 Door Forced	DF	DR	215	DF0215	DR0215
T02:S004	T02 Door DOTL	DL	DH	216	DL0216	DH0216
T02:S005	T02 Duress	HA	HR	217	HA0217	HR0217
T02:S006	T02 Deadman	UA	UR	218	UA0218	UR0218
T02:S007	T02 Pin Attempts	JA	UX	219	JA0219	UX0219
T02:S008	T02 LAN Comms	EM	EN	220	EM0220	EN0220
T03:Z001	T03:Z001	UA	UR	221	UA0221	UR0221
T03:Z002	T03:Z002	UA	UR	222	UA0222	UR0222

Integriti SIA DECIMAL Map. V21

T03:S001	T03 Cab Tamper	TA	TR	223	TA0223	TR0223
T03:S002	T03 Panic	PA	PR	224	PA0224	PR0224
T03:S003	T03 Door Forced	DF	DR	225	DF0225	DR0225
T03:S004	T03 Door DOTL	DL	DH	226	DL0226	DH0226
T03:S005	T03 Duress	HA	HR	227	HA0227	HR0227
T03:S006	T03 Deadman	UA	UR	228	UA0228	UR0228
T03:S007	T03 Pin Attempts	JA	UX	229	JA0229	UX0229
T03:S008	T03 LAN Comms	EM	EN	230	EM0230	EN0230
T04:Z001	T04:Z001	UA	UR	231	UA0231	UR0231
T04:Z002	T04:Z002	UA	UR	232	UA0232	UR0232
T04:S001	T04 Cab Tamper	TA	TR	233	TA0233	TR0233
T04:S002	T04 Panic	PA	PR	234	PA0234	PR0234
T04:S003	T04 Door Forced	DF	DR	235	DF0235	DR0235
T04:S004	T04 Door DOTL	DL	DH	236	DL0236	DH0236
T04:S005	T04 Duress	HA	HR	237	HA0237	HR0237
T04:S006	T04 Deadman	UA	UR	238	UA0238	UR0238
T04:S007	T04 Pin Attempts	JA	UX	239	JA0239	UX0239
T04:S008	T04 LAN Comms	EM	EN	240	EM0240	EN0240
T05:Z001	T05:Z001	UA	UR	241	UA0241	UR0241
T05:Z002	T05:Z002	UA	UR	242	UA0242	UR0242
T05:S001	T05 Cab Tamper	TA	TR	243	TA0243	TR0243
T05:S002	T05 Panic	PA	PR	244	PA0244	PR0244
T05:S003	T05 Door Forced	DF	DR	245	DF0245	DR0245
T05:S004	T05 Door DOTL	DL	DH	246	DL0246	DH0246
T05:S005	T05 Duress	HA	HR	247	HA0247	HR0247
T05:S006	T05 Deadman	UA	UR	248	UA0248	UR0248
T05:S007	T05 Pin Attempts	JA	UX	249	JA0249	UX0249
T05:S008	T05 LAN Comms	EM	EN	250	EM0250	EN0250
T06:Z001	T06:Z001	UA	UR	251	UA0251	UR0251
T06:Z002	T06:Z002	UA	UR	252	UA0252	UR0252
T06:S001	T06 Cab Tamper	TA	TR	253	TA0253	TR0253
T06:S002	T06 Panic	PA	PR	254	PA0254	PR0254
T06:S003	T06 Door Forced	DF	DR	255	DF0255	DR0255
T06:S004	T06 Door DOTL	DL	DH	256	DL0256	DH0256
T06:S005	T06 Duress	HA	HR	257	HA0257	HR0257
T06:S006	T06 Deadman	UA	UR	258	UA0258	UR0258
T06:S007	T06 Pin Attempts	JA	UX	259	JA0259	UX0259
T06:S008	T06 LAN Comms	EM	EN	260	EM0260	EN0260
T07:Z001	T07:Z001	UA	UR	261	UA0261	UR0261
T07:Z002	T07:Z002	UA	UR	262	UA0262	UR0262
T07:S001	T07 Cab Tamper	TA	TR	263	TA0263	TR0263
T07:S002	T07 Panic	PA	PR	264	PA0264	PR0264
T07:S003	T07 Door Forced	DF	DR	265	DF0265	DR0265
T07:S004	T07 Door DOTL	DL	DH	266	DL0266	DH0266
T07:S005	T07 Duress	HA	HR	267	HA0267	HR0267
T07:S006	T07 Deadman	UA	UR	268	UA0268	UR0268
T07:S007	T07 Pin Attempts	JA	UX	269	JA0269	UX0269
T07:S008	T07 LAN Comms	EM	EN	270	EM0270	EN0270
T08:Z001	T08:Z001	UA	UR	271	UA0271	UR0271
T08:Z002	T08:Z002	UA	UR	272	UA0272	UR0272
T08:S001	T08 Cab Tamper	TA	TR	273	TA0273	TR0273
T08:S002	T08 Panic	PA	PR	274	PA0274	PR0274
T08:S003	T08 Door Forced	DF	DR	275	DF0275	DR0275
T08:S004	T08 Door DOTL	DL	DH	276	DL0276	DH0276
T08:S005	T08 Duress	HA	HR	277	HA0277	HR0277
T08:S006	T08 Deadman	UA	UR	278	UA0278	UR0278
T08:S007	T08 Pin Attempts	JA	UX	279	JA0279	UX0279
T08:S008	T08 LAN Comms	EM	EN	280	EM0280	EN0280
T09:Z001	T09:Z001	UA	UR	281	UA0281	UR0281
T09:Z002	T09:Z002	UA	UR	282	UA0282	UR0282
T09:S001	T09 Cab Tamper	TA	TR	283	TA0283	TR0283
T09:S002	T09 Panic	PA	PR	284	PA0284	PR0284
T09:S003	T09 Door Forced	DF	DR	285	DF0285	DR0285
T09:S004	T09 Door DOTL	DL	DH	286	DL0286	DH0286
T09:S005	T09 Duress	HA	HR	287	HA0287	HR0287
T09:S006	T09 Deadman	UA	UR	288	UA0288	UR0288
T09:S007	T09 Pin Attempts	JA	UX	289	JA0289	UX0289
T09:S008	T09 LAN Comms	EM	EN	290	EM0290	EN0290
T10:Z001	T10:Z001	UA	UR	291	UA0291	UR0291
T10:Z002	T10:Z002	UA	UR	292	UA0292	UR0292

Integriti SIA DECIMAL Map. V21

T10:S001	T10 Cab Tamper	TA	TR	293	TA0293	TR0293
T10:S002	T10 Panic	PA	PR	294	PA0294	PR0294
T10:S003	T10 Door Forced	DF	DR	295	DF0295	DR0295
T10:S004	T10 Door DOTL	DL	DH	296	DL0296	DH0296
T10:S005	T10 Duress	HA	HR	297	HA0297	HR0297
T10:S006	T10 Deadman	UA	UR	298	UA0298	UR0298
T10:S007	T10 Pin Attempts	JA	UX	299	JA0299	UX0299
T10:S008	T10 LAN Comms	EM	EN	300	EM0300	EN0300
T11:Z001	T11:Z001	UA	UR	301	UA0301	UR0301
T11:Z002	T11:Z002	UA	UR	302	UA0302	UR0302
T11:S001	T11 Cab Tamper	TA	TR	303	TA0303	TR0303
T11:S002	T11 Panic	PA	PR	304	PA0304	PR0304
T11:S003	T11 Door Forced	DF	DR	305	DF0305	DR0305
T11:S004	T11 Door DOTL	DL	DH	306	DL0306	DH0306
T11:S005	T11 Duress	HA	HR	307	HA0307	HR0307
T11:S006	T11 Deadman	UA	UR	308	UA0308	UR0308
T11:S007	T11 Pin Attempts	JA	UX	309	JA0309	UX0309
T11:S008	T11 LAN Comms	EM	EN	310	EM0310	EN0310
T12:Z001	T12:Z001	UA	UR	311	UA0311	UR0311
T12:Z002	T12:Z002	UA	UR	312	UA0312	UR0312
T12:S001	T12 Cab Tamper	TA	TR	313	TA0313	TR0313
T12:S002	T12 Panic	PA	PR	314	PA0314	PR0314
T12:S003	T12 Door Forced	DF	DR	315	DF0315	DR0315
T12:S004	T12 Door DOTL	DL	DH	316	DL0316	DH0316
T12:S005	T12 Duress	HA	HR	317	HA0317	HR0317
T12:S006	T12 Deadman	UA	UR	318	UA0318	UR0318
T12:S007	T12 Pin Attempts	JA	UX	319	JA0319	UX0319
T12:S008	T12 LAN Comms	EM	EN	320	EM0320	EN0320
T13:Z001	T13:Z001	UA	UR	321	UA0321	UR0321
T13:Z002	T13:Z002	UA	UR	322	UA0322	UR0322
T13:S001	T13 Cab Tamper	TA	TR	323	TA0323	TR0323
T13:S002	T13 Panic	PA	PR	324	PA0324	PR0324
T13:S003	T13 Door Forced	DF	DR	325	DF0325	DR0325
T13:S004	T13 Door DOTL	DL	DH	326	DL0326	DH0326
T13:S005	T13 Duress	HA	HR	327	HA0327	HR0327
T13:S006	T13 Deadman	UA	UR	328	UA0328	UR0328
T13:S007	T13 Pin Attempts	JA	UX	329	JA0329	UX0329
T13:S008	T13 LAN Comms	EM	EN	330	EM0330	EN0330
T14:Z001	T14:Z001	UA	UR	331	UA0331	UR0331
T14:Z002	T14:Z002	UA	UR	332	UA0332	UR0332
T14:S001	T14 Cab Tamper	TA	TR	333	TA0333	TR0333
T14:S002	T14 Panic	PA	PR	334	PA0334	PR0334
T14:S003	T14 Door Forced	DF	DR	335	DF0335	DR0335
T14:S004	T14 Door DOTL	DL	DH	336	DL0336	DH0336
T14:S005	T14 Duress	HA	HR	337	HA0337	HR0337
T14:S006	T14 Deadman	UA	UR	338	UA0338	UR0338
T14:S007	T14 Pin Attempts	JA	UX	339	JA0339	UX0339
T14:S008	T14 LAN Comms	EM	EN	340	EM0340	EN0340
T15:Z001	T15:Z001	UA	UR	341	UA0341	UR0341
T15:Z002	T15:Z002	UA	UR	342	UA0342	UR0342
T15:S001	T15 Cab Tamper	TA	TR	343	TA0343	TR0343
T15:S002	T15 Panic	PA	PR	344	PA0344	PR0344
T15:S003	T15 Door Forced	DF	DR	345	DF0345	DR0345
T15:S004	T15 Door DOTL	DL	DH	346	DL0346	DH0346
T15:S005	T15 Duress	HA	HR	347	HA0347	HR0347
T15:S006	T15 Deadman	UA	UR	348	UA0348	UR0348
T15:S007	T15 Pin Attempts	JA	UX	349	JA0349	UX0349
T15:S008	T15 LAN Comms	EM	EN	350	EM0350	EN0350
T16:Z001	T16:Z001	UA	UR	351	UA0351	UR0351
T16:Z002	T16:Z002	UA	UR	352	UA0352	UR0352
T16:S001	T16 Cab Tamper	TA	TR	353	TA0353	TR0353
T16:S002	T16 Panic	PA	PR	354	PA0354	PR0354
T16:S003	T16 Door Forced	DF	DR	355	DF0355	DR0355
T16:S004	T16 Door DOTL	DL	DH	356	DL0356	DH0356
T16:S005	T16 Duress	HA	HR	357	HA0357	HR0357
T16:S006	T16 Deadman	UA	UR	358	UA0358	UR0358
T16:S007	T16 Pin Attempts	JA	UX	359	JA0359	UX0359
T16:S008	T16 LAN Comms	EM	EN	360	EM0360	EN0360
T17:Z001	T17:Z001	UA	UR	361	UA0361	UR0361
T17:Z002	T17:Z002	UA	UR	362	UA0362	UR0362

Integriti SIA DECIMAL Map. V21

T17:S001	T17 Cab Tamper	TA	TR	363	TA0363	TR0363
T17:S002	T17 Panic	PA	PR	364	PA0364	PR0364
T17:S003	T17 Door Forced	DF	DR	365	DF0365	DR0365
T17:S004	T17 Door DOTL	DL	DH	366	DL0366	DH0366
T17:S005	T17 Duress	HA	HR	367	HA0367	HR0367
T17:S006	T17 Deadman	UA	UR	368	UA0368	UR0368
T17:S007	T17 Pin Attempts	JA	UX	369	JA0369	UX0369
T17:S008	T17 LAN Comms	EM	EN	370	EM0370	EN0370
T18:Z001	T18:Z001	UA	UR	371	UA0371	UR0371
T18:Z002	T18:Z002	UA	UR	372	UA0372	UR0372
T18:S001	T18 Cab Tamper	TA	TR	373	TA0373	TR0373
T18:S002	T18 Panic	PA	PR	374	PA0374	PR0374
T18:S003	T18 Door Forced	DF	DR	375	DF0375	DR0375
T18:S004	T18 Door DOTL	DL	DH	376	DL0376	DH0376
T18:S005	T18 Duress	HA	HR	377	HA0377	HR0377
T18:S006	T18 Deadman	UA	UR	378	UA0378	UR0378
T18:S007	T18 Pin Attempts	JA	UX	379	JA0379	UX0379
T18:S008	T18 LAN Comms	EM	EN	380	EM0380	EN0380
T19:Z001	T19:Z001	UA	UR	381	UA0381	UR0381
T19:Z002	T19:Z002	UA	UR	382	UA0382	UR0382
T19:S001	T19 Cab Tamper	TA	TR	383	TA0383	TR0383
T19:S002	T19 Panic	PA	PR	384	PA0384	PR0384
T19:S003	T19 Door Forced	DF	DR	385	DF0385	DR0385
T19:S004	T19 Door DOTL	DL	DH	386	DL0386	DH0386
T19:S005	T19 Duress	HA	HR	387	HA0387	HR0387
T19:S006	T19 Deadman	UA	UR	388	UA0388	UR0388
T19:S007	T19 Pin Attempts	JA	UX	389	JA0389	UX0389
T19:S008	T19 LAN Comms	EM	EN	390	EM0390	EN0390
T20:Z001	T20:Z001	UA	UR	391	UA0391	UR0391
T20:Z002	T20:Z002	UA	UR	392	UA0392	UR0392
T20:S001	T20 Cab Tamper	TA	TR	393	TA0393	TR0393
T20:S002	T20 Panic	PA	PR	394	PA0394	PR0394
T20:S003	T20 Door Forced	DF	DR	395	DF0395	DR0395
T20:S004	T20 Door DOTL	DL	DH	396	DL0396	DH0396
T20:S005	T20 Duress	HA	HR	397	HA0397	HR0397
T20:S006	T20 Deadman	UA	UR	398	UA0398	UR0398
T20:S007	T20 Pin Attempts	JA	UX	399	JA0399	UX0399
T20:S008	T20 LAN Comms	EM	EN	400	EM0400	EN0400
T21:Z001	T21:Z001	UA	UR	401	UA0401	UR0401
T21:Z002	T21:Z002	UA	UR	402	UA0402	UR0402
T21:S001	T21 Cab Tamper	TA	TR	403	TA0403	TR0403
T21:S002	T21 Panic	PA	PR	404	PA0404	PR0404
T21:S003	T21 Door Forced	DF	DR	405	DF0405	DR0405
T21:S004	T21 Door DOTL	DL	DH	406	DL0406	DH0406
T21:S005	T21 Duress	HA	HR	407	HA0407	HR0407
T21:S006	T21 Deadman	UA	UR	408	UA0408	UR0408
T21:S007	T21 Pin Attempts	JA	UX	409	JA0409	UX0409
T21:S008	T21 LAN Comms	EM	EN	410	EM0410	EN0410
T22:Z001	T22:Z001	UA	UR	411	UA0411	UR0411
T22:Z002	T22:Z002	UA	UR	412	UA0412	UR0412
T22:S001	T22 Cab Tamper	TA	TR	413	TA0413	TR0413
T22:S002	T22 Panic	PA	PR	414	PA0414	PR0414
T22:S003	T22 Door Forced	DF	DR	415	DF0415	DR0415
T22:S004	T22 Door DOTL	DL	DH	416	DL0416	DH0416
T22:S005	T22 Duress	HA	HR	417	HA0417	HR0417
T22:S006	T22 Deadman	UA	UR	418	UA0418	UR0418
T22:S007	T22 Pin Attempts	JA	UX	419	JA0419	UX0419
T22:S008	T22 LAN Comms	EM	EN	420	EM0420	EN0420
T23:Z001	T23:Z001	UA	UR	421	UA0421	UR0421
T23:Z002	T23:Z002	UA	UR	422	UA0422	UR0422
T23:S001	T23 Cab Tamper	TA	TR	423	TA0423	TR0423
T23:S002	T23 Panic	PA	PR	424	PA0424	PR0424
T23:S003	T23 Door Forced	DF	DR	425	DF0425	DR0425
T23:S004	T23 Door DOTL	DL	DH	426	DL0426	DH0426
T23:S005	T23 Duress	HA	HR	427	HA0427	HR0427
T23:S006	T23 Deadman	UA	UR	428	UA0428	UR0428
T23:S007	T23 Pin Attempts	JA	UX	429	JA0429	UX0429
T23:S008	T23 LAN Comms	EM	EN	430	EM0430	EN0430
T24:Z001	T24:Z001	UA	UR	431	UA0431	UR0431
T24:Z002	T24:Z002	UA	UR	432	UA0432	UR0432

Integriti SIA DECIMAL Map. V21

T24:S001	T24 Cab Tamper	TA	TR	433	TA0433	TR0433
T24:S002	T24 Panic	PA	PR	434	PA0434	PR0434
T24:S003	T24 Door Forced	DF	DR	435	DF0435	DR0435
T24:S004	T24 Door DOTL	DL	DH	436	DL0436	DH0436
T24:S005	T24 Duress	HA	HR	437	HA0437	HR0437
T24:S006	T24 Deadman	UA	UR	438	UA0438	UR0438
T24:S007	T24 Pin Attempts	JA	UX	439	JA0439	UX0439
T24:S008	T24 LAN Comms	EM	EN	440	EM0440	EN0440
T25:Z001	T25:Z001	UA	UR	441	UA0441	UR0441
T25:Z002	T25:Z002	UA	UR	442	UA0442	UR0442
T25:S001	T25 Cab Tamper	TA	TR	443	TA0443	TR0443
T25:S002	T25 Panic	PA	PR	444	PA0444	PR0444
T25:S003	T25 Door Forced	DF	DR	445	DF0445	DR0445
T25:S004	T25 Door DOTL	DL	DH	446	DL0446	DH0446
T25:S005	T25 Duress	HA	HR	447	HA0447	HR0447
T25:S006	T25 Deadman	UA	UR	448	UA0448	UR0448
T25:S007	T25 Pin Attempts	JA	UX	449	JA0449	UX0449
T25:S008	T25 LAN Comms	EM	EN	450	EM0450	EN0450
T26:Z001	T26:Z001	UA	UR	451	UA0451	UR0451
T26:Z002	T26:Z002	UA	UR	452	UA0452	UR0452
T26:S001	T26 Cab Tamper	TA	TR	453	TA0453	TR0453
T26:S002	T26 Panic	PA	PR	454	PA0454	PR0454
T26:S003	T26 Door Forced	DF	DR	455	DF0455	DR0455
T26:S004	T26 Door DOTL	DL	DH	456	DL0456	DH0456
T26:S005	T26 Duress	HA	HR	457	HA0457	HR0457
T26:S006	T26 Deadman	UA	UR	458	UA0458	UR0458
T26:S007	T26 Pin Attempts	JA	UX	459	JA0459	UX0459
T26:S008	T26 LAN Comms	EM	EN	460	EM0460	EN0460
T27:Z001	T27:Z001	UA	UR	461	UA0461	UR0461
T27:Z002	T27:Z002	UA	UR	462	UA0462	UR0462
T27:S001	T27 Cab Tamper	TA	TR	463	TA0463	TR0463
T27:S002	T27 Panic	PA	PR	464	PA0464	PR0464
T27:S003	T27 Door Forced	DF	DR	465	DF0465	DR0465
T27:S004	T27 Door DOTL	DL	DH	466	DL0466	DH0466
T27:S005	T27 Duress	HA	HR	467	HA0467	HR0467
T27:S006	T27 Deadman	UA	UR	468	UA0468	UR0468
T27:S007	T27 Pin Attempts	JA	UX	469	JA0469	UX0469
T27:S008	T27 LAN Comms	EM	EN	470	EM0470	EN0470
T28:Z001	T28:Z001	UA	UR	471	UA0471	UR0471
T28:Z002	T28:Z002	UA	UR	472	UA0472	UR0472
T28:S001	T28 Cab Tamper	TA	TR	473	TA0473	TR0473
T28:S002	T28 Panic	PA	PR	474	PA0474	PR0474
T28:S003	T28 Door Forced	DF	DR	475	DF0475	DR0475
T28:S004	T28 Door DOTL	DL	DH	476	DL0476	DH0476
T28:S005	T28 Duress	HA	HR	477	HA0477	HR0477
T28:S006	T28 Deadman	UA	UR	478	UA0478	UR0478
T28:S007	T28 Pin Attempts	JA	UX	479	JA0479	UX0479
T28:S008	T28 LAN Comms	EM	EN	480	EM0480	EN0480
T29:Z001	T29:Z001	UA	UR	481	UA0481	UR0481
T29:Z002	T29:Z002	UA	UR	482	UA0482	UR0482
T29:S001	T29 Cab Tamper	TA	TR	483	TA0483	TR0483
T29:S002	T29 Panic	PA	PR	484	PA0484	PR0484
T29:S003	T29 Door Forced	DF	DR	485	DF0485	DR0485
T29:S004	T29 Door DOTL	DL	DH	486	DL0486	DH0486
T29:S005	T29 Duress	HA	HR	487	HA0487	HR0487
T29:S006	T29 Deadman	UA	UR	488	UA0488	UR0488
T29:S007	T29 Pin Attempts	JA	UX	489	JA0489	UX0489
T29:S008	T29 LAN Comms	EM	EN	490	EM0490	EN0490
T30:Z001	T30:Z001	UA	UR	491	UA0491	UR0491
T30:Z002	T30:Z002	UA	UR	492	UA0492	UR0492
T30:S001	T30 Cab Tamper	TA	TR	493	TA0493	TR0493
T30:S002	T30 Panic	PA	PR	494	PA0494	PR0494
T30:S003	T30 Door Forced	DF	DR	495	DF0495	DR0495
T30:S004	T30 Door DOTL	DL	DH	496	DL0496	DH0496
T30:S005	T30 Duress	HA	HR	497	HA0497	HR0497
T30:S006	T30 Deadman	UA	UR	498	UA0498	UR0498
T30:S007	T30 Pin Attempts	JA	UX	499	JA0499	UX0499
T30:S008	T30 LAN Comms	EM	EN	500	EM0500	EN0500
T31:Z001	T31:Z001	UA	UR	501	UA0501	UR0501
T31:Z002	T31:Z002	UA	UR	502	UA0502	UR0502

Integriti SIA DECIMAL Map. V21

T31:S001	T31 Cab Tamper	TA	TR	503	TA0503	TR0503
T31:S002	T31 Panic	PA	PR	504	PA0504	PR0504
T31:S003	T31 Door Forced	DF	DR	505	DF0505	DR0505
T31:S004	T31 Door DOTL	DL	DH	506	DL0506	DH0506
T31:S005	T31 Duress	HA	HR	507	HA0507	HR0507
T31:S006	T31 Deadman	UA	UR	508	UA0508	UR0508
T31:S007	T31 Pin Attempts	JA	UX	509	JA0509	UX0509
T31:S008	T31 LAN Comms	EM	EN	510	EM0510	EN0510
T32:Z001	T32:Z001	UA	UR	511	UA0511	UR0511
T32:Z002	T32:Z002	UA	UR	512	UA0512	UR0512
T32:S001	T32 Cab Tamper	TA	TR	513	TA0513	TR0513
T32:S002	T32 Panic	PA	PR	514	PA0514	PR0514
T32:S003	T32 Door Forced	DF	DR	515	DF0515	DR0515
T32:S004	T32 Door DOTL	DL	DH	516	DL0516	DH0516
T32:S005	T32 Duress	HA	HR	517	HA0517	HR0517
T32:S006	T32 Deadman	UA	UR	518	UA0518	UR0518
T32:S007	T32 Pin Attempts	JA	UX	519	JA0519	UX0519
T32:S008	T32 LAN Comms	EM	EN	520	EM0520	EN0520
T33:Z001	T33:Z001	UA	UR	9999	UA9999	UR9999
T33:Z002	T33:Z002	UA	UR	9999	UA9999	UR9999
T33:S001	T33 Cab Tamper	TA	TR	9999	TA9999	TR9999
T33:S002	T33 Panic	PA	PR	9999	PA9999	PR9999
T33:S003	T33 Door Forced	DF	DR	9999	DF9999	DR9999
T33:S004	T33 Door DOTL	DL	DH	9999	DL9999	DH9999
T33:S005	T33 Duress	HA	HR	9999	HA9999	HR9999
T33:S006	T33 Deadman	UA	UR	9999	UA9999	UR9999
T33:S007	T33 Pin Attempts	JA	UX	9999	JA9999	UX9999
T33:S008	T33 LAN Comms	EM	EN	9999	EM9999	EN9999
T34:Z001	T34:Z001	UA	UR	9999	UA9999	UR9999
T34:Z002	T34:Z002	UA	UR	9999	UA9999	UR9999
T34:S001	T34 Cab Tamper	TA	TR	9999	TA9999	TR9999
T34:S002	T34 Panic	PA	PR	9999	PA9999	PR9999
T34:S003	T34 Door Forced	DF	DR	9999	DF9999	DR9999
T34:S004	T34 Door DOTL	DL	DH	9999	DL9999	DH9999
T34:S005	T34 Duress	HA	HR	9999	HA9999	HR9999
T34:S006	T34 Deadman	UA	UR	9999	UA9999	UR9999
T34:S007	T34 Pin Attempts	JA	UX	9999	JA9999	UX9999
T34:S008	T34 LAN Comms	EM	EN	9999	EM9999	EN9999
T35:Z001	T35:Z001	UA	UR	9999	UA9999	UR9999
T35:Z002	T35:Z002	UA	UR	9999	UA9999	UR9999
T35:S001	T35 Cab Tamper	TA	TR	9999	TA9999	TR9999
T35:S002	T35 Panic	PA	PR	9999	PA9999	PR9999
T35:S003	T35 Door Forced	DF	DR	9999	DF9999	DR9999
T35:S004	T35 Door DOTL	DL	DH	9999	DL9999	DH9999
T35:S005	T35 Duress	HA	HR	9999	HA9999	HR9999
T35:S006	T35 Deadman	UA	UR	9999	UA9999	UR9999
T35:S007	T35 Pin Attempts	JA	UX	9999	JA9999	UX9999
T35:S008	T35 LAN Comms	EM	EN	9999	EM9999	EN9999
T36:Z001	T36:Z001	UA	UR	9999	UA9999	UR9999
T36:Z002	T36:Z002	UA	UR	9999	UA9999	UR9999
T36:S001	T36 Cab Tamper	TA	TR	9999	TA9999	TR9999
T36:S002	T36 Panic	PA	PR	9999	PA9999	PR9999
T36:S003	T36 Door Forced	DF	DR	9999	DF9999	DR9999
T36:S004	T36 Door DOTL	DL	DH	9999	DL9999	DH9999
T36:S005	T36 Duress	HA	HR	9999	HA9999	HR9999
T36:S006	T36 Deadman	UA	UR	9999	UA9999	UR9999
T36:S007	T36 Pin Attempts	JA	UX	9999	JA9999	UX9999
T36:S008	T36 LAN Comms	EM	EN	9999	EM9999	EN9999
T37:Z001	T37:Z001	UA	UR	9999	UA9999	UR9999
T37:Z002	T37:Z002	UA	UR	9999	UA9999	UR9999
T37:S001	T37 Cab Tamper	TA	TR	9999	TA9999	TR9999
T37:S002	T37 Panic	PA	PR	9999	PA9999	PR9999
T37:S003	T37 Door Forced	DF	DR	9999	DF9999	DR9999
T37:S004	T37 Door DOTL	DL	DH	9999	DL9999	DH9999
T37:S005	T37 Duress	HA	HR	9999	HA9999	HR9999
T37:S006	T37 Deadman	UA	UR	9999	UA9999	UR9999
T37:S007	T37 Pin Attempts	JA	UX	9999	JA9999	UX9999
T37:S008	T37 LAN Comms	EM	EN	9999	EM9999	EN9999
T38:Z001	T38:Z001	UA	UR	9999	UA9999	UR9999
T38:Z002	T38:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

T38:S001	T38 Cab Tamper	TA	TR	9999	TA9999	TR9999
T38:S002	T38 Panic	PA	PR	9999	PA9999	PR9999
T38:S003	T38 Door Forced	DF	DR	9999	DF9999	DR9999
T38:S004	T38 Door DOTL	DL	DH	9999	DL9999	DH9999
T38:S005	T38 Duress	HA	HR	9999	HA9999	HR9999
T38:S006	T38 Deadman	UA	UR	9999	UA9999	UR9999
T38:S007	T38 Pin Attempts	JA	UX	9999	JA9999	UX9999
T38:S008	T38 LAN Comms	EM	EN	9999	EM9999	EN9999
T39:Z001	T39:Z001	UA	UR	9999	UA9999	UR9999
T39:Z002	T39:Z002	UA	UR	9999	UA9999	UR9999
T39:S001	T39 Cab Tamper	TA	TR	9999	TA9999	TR9999
T39:S002	T39 Panic	PA	PR	9999	PA9999	PR9999
T39:S003	T39 Door Forced	DF	DR	9999	DF9999	DR9999
T39:S004	T39 Door DOTL	DL	DH	9999	DL9999	DH9999
T39:S005	T39 Duress	HA	HR	9999	HA9999	HR9999
T39:S006	T39 Deadman	UA	UR	9999	UA9999	UR9999
T39:S007	T39 Pin Attempts	JA	UX	9999	JA9999	UX9999
T39:S008	T39 LAN Comms	EM	EN	9999	EM9999	EN9999
T40:Z001	T40:Z001	UA	UR	9999	UA9999	UR9999
T40:Z002	T40:Z002	UA	UR	9999	UA9999	UR9999
T40:S001	T40 Cab Tamper	TA	TR	9999	TA9999	TR9999
T40:S002	T40 Panic	PA	PR	9999	PA9999	PR9999
T40:S003	T40 Door Forced	DF	DR	9999	DF9999	DR9999
T40:S004	T40 Door DOTL	DL	DH	9999	DL9999	DH9999
T40:S005	T40 Duress	HA	HR	9999	HA9999	HR9999
T40:S006	T40 Deadman	UA	UR	9999	UA9999	UR9999
T40:S007	T40 Pin Attempts	JA	UX	9999	JA9999	UX9999
T40:S008	T40 LAN Comms	EM	EN	9999	EM9999	EN9999
T41:Z001	T41:Z001	UA	UR	9999	UA9999	UR9999
T41:Z002	T41:Z002	UA	UR	9999	UA9999	UR9999
T41:S001	T41 Cab Tamper	TA	TR	9999	TA9999	TR9999
T41:S002	T41 Panic	PA	PR	9999	PA9999	PR9999
T41:S003	T41 Door Forced	DF	DR	9999	DF9999	DR9999
T41:S004	T41 Door DOTL	DL	DH	9999	DL9999	DH9999
T41:S005	T41 Duress	HA	HR	9999	HA9999	HR9999
T41:S006	T41 Deadman	UA	UR	9999	UA9999	UR9999
T41:S007	T41 Pin Attempts	JA	UX	9999	JA9999	UX9999
T41:S008	T41 LAN Comms	EM	EN	9999	EM9999	EN9999
T42:Z001	T42:Z001	UA	UR	9999	UA9999	UR9999
T42:Z002	T42:Z002	UA	UR	9999	UA9999	UR9999
T42:S001	T42 Cab Tamper	TA	TR	9999	TA9999	TR9999
T42:S002	T42 Panic	PA	PR	9999	PA9999	PR9999
T42:S003	T42 Door Forced	DF	DR	9999	DF9999	DR9999
T42:S004	T42 Door DOTL	DL	DH	9999	DL9999	DH9999
T42:S005	T42 Duress	HA	HR	9999	HA9999	HR9999
T42:S006	T42 Deadman	UA	UR	9999	UA9999	UR9999
T42:S007	T42 Pin Attempts	JA	UX	9999	JA9999	UX9999
T42:S008	T42 LAN Comms	EM	EN	9999	EM9999	EN9999
T43:Z001	T43:Z001	UA	UR	9999	UA9999	UR9999
T43:Z002	T43:Z002	UA	UR	9999	UA9999	UR9999
T43:S001	T43 Cab Tamper	TA	TR	9999	TA9999	TR9999
T43:S002	T43 Panic	PA	PR	9999	PA9999	PR9999
T43:S003	T43 Door Forced	DF	DR	9999	DF9999	DR9999
T43:S004	T43 Door DOTL	DL	DH	9999	DL9999	DH9999
T43:S005	T43 Duress	HA	HR	9999	HA9999	HR9999
T43:S006	T43 Deadman	UA	UR	9999	UA9999	UR9999
T43:S007	T43 Pin Attempts	JA	UX	9999	JA9999	UX9999
T43:S008	T43 LAN Comms	EM	EN	9999	EM9999	EN9999
T44:Z001	T44:Z001	UA	UR	9999	UA9999	UR9999
T44:Z002	T44:Z002	UA	UR	9999	UA9999	UR9999
T44:S001	T44 Cab Tamper	TA	TR	9999	TA9999	TR9999
T44:S002	T44 Panic	PA	PR	9999	PA9999	PR9999
T44:S003	T44 Door Forced	DF	DR	9999	DF9999	DR9999
T44:S004	T44 Door DOTL	DL	DH	9999	DL9999	DH9999
T44:S005	T44 Duress	HA	HR	9999	HA9999	HR9999
T44:S006	T44 Deadman	UA	UR	9999	UA9999	UR9999
T44:S007	T44 Pin Attempts	JA	UX	9999	JA9999	UX9999
T44:S008	T44 LAN Comms	EM	EN	9999	EM9999	EN9999
T45:Z001	T45:Z001	UA	UR	9999	UA9999	UR9999
T45:Z002	T45:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

T45:S001	T45 Cab Tamper	TA	TR	9999	TA9999	TR9999
T45:S002	T45 Panic	PA	PR	9999	PA9999	PR9999
T45:S003	T45 Door Forced	DF	DR	9999	DF9999	DR9999
T45:S004	T45 Door DOTL	DL	DH	9999	DL9999	DH9999
T45:S005	T45 Duress	HA	HR	9999	HA9999	HR9999
T45:S006	T45 Deadman	UA	UR	9999	UA9999	UR9999
T45:S007	T45 Pin Attempts	JA	UX	9999	JA9999	UX9999
T45:S008	T45 LAN Comms	EM	EN	9999	EM9999	EN9999
T46:Z001	T46:Z001	UA	UR	9999	UA9999	UR9999
T46:Z002	T46:Z002	UA	UR	9999	UA9999	UR9999
T46:S001	T46 Cab Tamper	TA	TR	9999	TA9999	TR9999
T46:S002	T46 Panic	PA	PR	9999	PA9999	PR9999
T46:S003	T46 Door Forced	DF	DR	9999	DF9999	DR9999
T46:S004	T46 Door DOTL	DL	DH	9999	DL9999	DH9999
T46:S005	T46 Duress	HA	HR	9999	HA9999	HR9999
T46:S006	T46 Deadman	UA	UR	9999	UA9999	UR9999
T46:S007	T46 Pin Attempts	JA	UX	9999	JA9999	UX9999
T46:S008	T46 LAN Comms	EM	EN	9999	EM9999	EN9999
T47:Z001	T47:Z001	UA	UR	9999	UA9999	UR9999
T47:Z002	T47:Z002	UA	UR	9999	UA9999	UR9999
T47:S001	T47 Cab Tamper	TA	TR	9999	TA9999	TR9999
T47:S002	T47 Panic	PA	PR	9999	PA9999	PR9999
T47:S003	T47 Door Forced	DF	DR	9999	DF9999	DR9999
T47:S004	T47 Door DOTL	DL	DH	9999	DL9999	DH9999
T47:S005	T47 Duress	HA	HR	9999	HA9999	HR9999
T47:S006	T47 Deadman	UA	UR	9999	UA9999	UR9999
T47:S007	T47 Pin Attempts	JA	UX	9999	JA9999	UX9999
T47:S008	T47 LAN Comms	EM	EN	9999	EM9999	EN9999
T48:Z001	T48:Z001	UA	UR	9999	UA9999	UR9999
T48:Z002	T48:Z002	UA	UR	9999	UA9999	UR9999
T48:S001	T48 Cab Tamper	TA	TR	9999	TA9999	TR9999
T48:S002	T48 Panic	PA	PR	9999	PA9999	PR9999
T48:S003	T48 Door Forced	DF	DR	9999	DF9999	DR9999
T48:S004	T48 Door DOTL	DL	DH	9999	DL9999	DH9999
T48:S005	T48 Duress	HA	HR	9999	HA9999	HR9999
T48:S006	T48 Deadman	UA	UR	9999	UA9999	UR9999
T48:S007	T48 Pin Attempts	JA	UX	9999	JA9999	UX9999
T48:S008	T48 LAN Comms	EM	EN	9999	EM9999	EN9999
T49:Z001	T49:Z001	UA	UR	9999	UA9999	UR9999
T49:Z002	T49:Z002	UA	UR	9999	UA9999	UR9999
T49:S001	T49 Cab Tamper	TA	TR	9999	TA9999	TR9999
T49:S002	T49 Panic	PA	PR	9999	PA9999	PR9999
T49:S003	T49 Door Forced	DF	DR	9999	DF9999	DR9999
T49:S004	T49 Door DOTL	DL	DH	9999	DL9999	DH9999
T49:S005	T49 Duress	HA	HR	9999	HA9999	HR9999
T49:S006	T49 Deadman	UA	UR	9999	UA9999	UR9999
T49:S007	T49 Pin Attempts	JA	UX	9999	JA9999	UX9999
T49:S008	T49 LAN Comms	EM	EN	9999	EM9999	EN9999
T50:Z001	T50:Z001	UA	UR	9999	UA9999	UR9999
T50:Z002	T50:Z002	UA	UR	9999	UA9999	UR9999
T50:S001	T50 Cab Tamper	TA	TR	9999	TA9999	TR9999
T50:S002	T50 Panic	PA	PR	9999	PA9999	PR9999
T50:S003	T50 Door Forced	DF	DR	9999	DF9999	DR9999
T50:S004	T50 Door DOTL	DL	DH	9999	DL9999	DH9999
T50:S005	T50 Duress	HA	HR	9999	HA9999	HR9999
T50:S006	T50 Deadman	UA	UR	9999	UA9999	UR9999
T50:S007	T50 Pin Attempts	JA	UX	9999	JA9999	UX9999
T50:S008	T50 LAN Comms	EM	EN	9999	EM9999	EN9999
T51:Z001	T51:Z001	UA	UR	9999	UA9999	UR9999
T51:Z002	T51:Z002	UA	UR	9999	UA9999	UR9999
T51:S001	T51 Cab Tamper	TA	TR	9999	TA9999	TR9999
T51:S002	T51 Panic	PA	PR	9999	PA9999	PR9999
T51:S003	T51 Door Forced	DF	DR	9999	DF9999	DR9999
T51:S004	T51 Door DOTL	DL	DH	9999	DL9999	DH9999
T51:S005	T51 Duress	HA	HR	9999	HA9999	HR9999
T51:S006	T51 Deadman	UA	UR	9999	UA9999	UR9999
T51:S007	T51 Pin Attempts	JA	UX	9999	JA9999	UX9999
T51:S008	T51 LAN Comms	EM	EN	9999	EM9999	EN9999
T52:Z001	T52:Z001	UA	UR	9999	UA9999	UR9999
T52:Z002	T52:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

T52:S001	T52 Cab Tamper	TA	TR	9999	TA9999	TR9999
T52:S002	T52 Panic	PA	PR	9999	PA9999	PR9999
T52:S003	T52 Door Forced	DF	DR	9999	DF9999	DR9999
T52:S004	T52 Door DOTL	DL	DH	9999	DL9999	DH9999
T52:S005	T52 Duress	HA	HR	9999	HA9999	HR9999
T52:S006	T52 Deadman	UA	UR	9999	UA9999	UR9999
T52:S007	T52 Pin Attempts	JA	UX	9999	JA9999	UX9999
T52:S008	T52 LAN Comms	EM	EN	9999	EM9999	EN9999
T53:Z001	T53:Z001	UA	UR	9999	UA9999	UR9999
T53:Z002	T53:Z002	UA	UR	9999	UA9999	UR9999
T53:S001	T53 Cab Tamper	TA	TR	9999	TA9999	TR9999
T53:S002	T53 Panic	PA	PR	9999	PA9999	PR9999
T53:S003	T53 Door Forced	DF	DR	9999	DF9999	DR9999
T53:S004	T53 Door DOTL	DL	DH	9999	DL9999	DH9999
T53:S005	T53 Duress	HA	HR	9999	HA9999	HR9999
T53:S006	T53 Deadman	UA	UR	9999	UA9999	UR9999
T53:S007	T53 Pin Attempts	JA	UX	9999	JA9999	UX9999
T53:S008	T53 LAN Comms	EM	EN	9999	EM9999	EN9999
T54:Z001	T54:Z001	UA	UR	9999	UA9999	UR9999
T54:Z002	T54:Z002	UA	UR	9999	UA9999	UR9999
T54:S001	T54 Cab Tamper	TA	TR	9999	TA9999	TR9999
T54:S002	T54 Panic	PA	PR	9999	PA9999	PR9999
T54:S003	T54 Door Forced	DF	DR	9999	DF9999	DR9999
T54:S004	T54 Door DOTL	DL	DH	9999	DL9999	DH9999
T54:S005	T54 Duress	HA	HR	9999	HA9999	HR9999
T54:S006	T54 Deadman	UA	UR	9999	UA9999	UR9999
T54:S007	T54 Pin Attempts	JA	UX	9999	JA9999	UX9999
T54:S008	T54 LAN Comms	EM	EN	9999	EM9999	EN9999
T55:Z001	T55:Z001	UA	UR	9999	UA9999	UR9999
T55:Z002	T55:Z002	UA	UR	9999	UA9999	UR9999
T55:S001	T55 Cab Tamper	TA	TR	9999	TA9999	TR9999
T55:S002	T55 Panic	PA	PR	9999	PA9999	PR9999
T55:S003	T55 Door Forced	DF	DR	9999	DF9999	DR9999
T55:S004	T55 Door DOTL	DL	DH	9999	DL9999	DH9999
T55:S005	T55 Duress	HA	HR	9999	HA9999	HR9999
T55:S006	T55 Deadman	UA	UR	9999	UA9999	UR9999
T55:S007	T55 Pin Attempts	JA	UX	9999	JA9999	UX9999
T55:S008	T55 LAN Comms	EM	EN	9999	EM9999	EN9999
T56:Z001	T56:Z001	UA	UR	9999	UA9999	UR9999
T56:Z002	T56:Z002	UA	UR	9999	UA9999	UR9999
T56:S001	T56 Cab Tamper	TA	TR	9999	TA9999	TR9999
T56:S002	T56 Panic	PA	PR	9999	PA9999	PR9999
T56:S003	T56 Door Forced	DF	DR	9999	DF9999	DR9999
T56:S004	T56 Door DOTL	DL	DH	9999	DL9999	DH9999
T56:S005	T56 Duress	HA	HR	9999	HA9999	HR9999
T56:S006	T56 Deadman	UA	UR	9999	UA9999	UR9999
T56:S007	T56 Pin Attempts	JA	UX	9999	JA9999	UX9999
T56:S008	T56 LAN Comms	EM	EN	9999	EM9999	EN9999
T57:Z001	T57:Z001	UA	UR	9999	UA9999	UR9999
T57:Z002	T57:Z002	UA	UR	9999	UA9999	UR9999
T57:S001	T57 Cab Tamper	TA	TR	9999	TA9999	TR9999
T57:S002	T57 Panic	PA	PR	9999	PA9999	PR9999
T57:S003	T57 Door Forced	DF	DR	9999	DF9999	DR9999
T57:S004	T57 Door DOTL	DL	DH	9999	DL9999	DH9999
T57:S005	T57 Duress	HA	HR	9999	HA9999	HR9999
T57:S006	T57 Deadman	UA	UR	9999	UA9999	UR9999
T57:S007	T57 Pin Attempts	JA	UX	9999	JA9999	UX9999
T57:S008	T57 LAN Comms	EM	EN	9999	EM9999	EN9999
T58:Z001	T58:Z001	UA	UR	9999	UA9999	UR9999
T58:Z002	T58:Z002	UA	UR	9999	UA9999	UR9999
T58:S001	T58 Cab Tamper	TA	TR	9999	TA9999	TR9999
T58:S002	T58 Panic	PA	PR	9999	PA9999	PR9999
T58:S003	T58 Door Forced	DF	DR	9999	DF9999	DR9999
T58:S004	T58 Door DOTL	DL	DH	9999	DL9999	DH9999
T58:S005	T58 Duress	HA	HR	9999	HA9999	HR9999
T58:S006	T58 Deadman	UA	UR	9999	UA9999	UR9999
T58:S007	T58 Pin Attempts	JA	UX	9999	JA9999	UX9999
T58:S008	T58 LAN Comms	EM	EN	9999	EM9999	EN9999
T59:Z001	T59:Z001	UA	UR	9999	UA9999	UR9999
T59:Z002	T59:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

T59:S001	T59 Cab Tamper	TA	TR	9999	TA9999	TR9999
T59:S002	T59 Panic	PA	PR	9999	PA9999	PR9999
T59:S003	T59 Door Forced	DF	DR	9999	DF9999	DR9999
T59:S004	T59 Door DOTL	DL	DH	9999	DL9999	DH9999
T59:S005	T59 Duress	HA	HR	9999	HA9999	HR9999
T59:S006	T59 Deadman	UA	UR	9999	UA9999	UR9999
T59:S007	T59 Pin Attempts	JA	UX	9999	JA9999	UX9999
T59:S008	T59 LAN Comms	EM	EN	9999	EM9999	EN9999
T60:Z001	T60:Z001	UA	UR	9999	UA9999	UR9999
T60:Z002	T60:Z002	UA	UR	9999	UA9999	UR9999
T60:S001	T60 Cab Tamper	TA	TR	9999	TA9999	TR9999
T60:S002	T60 Panic	PA	PR	9999	PA9999	PR9999
T60:S003	T60 Door Forced	DF	DR	9999	DF9999	DR9999
T60:S004	T60 Door DOTL	DL	DH	9999	DL9999	DH9999
T60:S005	T60 Duress	HA	HR	9999	HA9999	HR9999
T60:S006	T60 Deadman	UA	UR	9999	UA9999	UR9999
T60:S007	T60 Pin Attempts	JA	UX	9999	JA9999	UX9999
T60:S008	T60 LAN Comms	EM	EN	9999	EM9999	EN9999
T61:Z001	T61:Z001	UA	UR	9999	UA9999	UR9999
T61:Z002	T61:Z002	UA	UR	9999	UA9999	UR9999
T61:S001	T61 Cab Tamper	TA	TR	9999	TA9999	TR9999
T61:S002	T61 Panic	PA	PR	9999	PA9999	PR9999
T61:S003	T61 Door Forced	DF	DR	9999	DF9999	DR9999
T61:S004	T61 Door DOTL	DL	DH	9999	DL9999	DH9999
T61:S005	T61 Duress	HA	HR	9999	HA9999	HR9999
T61:S006	T61 Deadman	UA	UR	9999	UA9999	UR9999
T61:S007	T61 Pin Attempts	JA	UX	9999	JA9999	UX9999
T61:S008	T61 LAN Comms	EM	EN	9999	EM9999	EN9999
T62:Z001	T62:Z001	UA	UR	9999	UA9999	UR9999
T62:Z002	T62:Z002	UA	UR	9999	UA9999	UR9999
T62:S001	T62 Cab Tamper	TA	TR	9999	TA9999	TR9999
T62:S002	T62 Panic	PA	PR	9999	PA9999	PR9999
T62:S003	T62 Door Forced	DF	DR	9999	DF9999	DR9999
T62:S004	T62 Door DOTL	DL	DH	9999	DL9999	DH9999
T62:S005	T62 Duress	HA	HR	9999	HA9999	HR9999
T62:S006	T62 Deadman	UA	UR	9999	UA9999	UR9999
T62:S007	T62 Pin Attempts	JA	UX	9999	JA9999	UX9999
T62:S008	T62 LAN Comms	EM	EN	9999	EM9999	EN9999
T63:Z001	T63:Z001	UA	UR	9999	UA9999	UR9999
T63:Z002	T63:Z002	UA	UR	9999	UA9999	UR9999
T63:S001	T63 Cab Tamper	TA	TR	9999	TA9999	TR9999
T63:S002	T63 Panic	PA	PR	9999	PA9999	PR9999
T63:S003	T63 Door Forced	DF	DR	9999	DF9999	DR9999
T63:S004	T63 Door DOTL	DL	DH	9999	DL9999	DH9999
T63:S005	T63 Duress	HA	HR	9999	HA9999	HR9999
T63:S006	T63 Deadman	UA	UR	9999	UA9999	UR9999
T63:S007	T63 Pin Attempts	JA	UX	9999	JA9999	UX9999
T63:S008	T63 LAN Comms	EM	EN	9999	EM9999	EN9999
T64:Z001	T64:Z001	UA	UR	9999	UA9999	UR9999
T64:Z002	T64:Z002	UA	UR	9999	UA9999	UR9999
T64:S001	T64 Cab Tamper	TA	TR	9999	TA9999	TR9999
T64:S002	T64 Panic	PA	PR	9999	PA9999	PR9999
T64:S003	T64 Door Forced	DF	DR	9999	DF9999	DR9999
T64:S004	T64 Door DOTL	DL	DH	9999	DL9999	DH9999
T64:S005	T64 Duress	HA	HR	9999	HA9999	HR9999
T64:S006	T64 Deadman	UA	UR	9999	UA9999	UR9999
T64:S007	T64 Pin Attempts	JA	UX	9999	JA9999	UX9999
T64:S008	T64 LAN Comms	EM	EN	9999	EM9999	EN9999
T65:Z001	T65:Z001	UA	UR	9999	UA9999	UR9999
T65:Z002	T65:Z002	UA	UR	9999	UA9999	UR9999
T65:S001	T65 Cab Tamper	TA	TR	9999	TA9999	TR9999
T65:S002	T65 Panic	PA	PR	9999	PA9999	PR9999
T65:S003	T65 Door Forced	DF	DR	9999	DF9999	DR9999
T65:S004	T65 Door DOTL	DL	DH	9999	DL9999	DH9999
T65:S005	T65 Duress	HA	HR	9999	HA9999	HR9999
T65:S006	T65 Deadman	UA	UR	9999	UA9999	UR9999
T65:S007	T65 Pin Attempts	JA	UX	9999	JA9999	UX9999
T65:S008	T65 LAN Comms	EM	EN	9999	EM9999	EN9999
T66:Z001	T66:Z001	UA	UR	9999	UA9999	UR9999
T66:Z002	T66:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

T66:S001	T66 Cab Tamper	TA	TR	9999	TA9999	TR9999
T66:S002	T66 Panic	PA	PR	9999	PA9999	PR9999
T66:S003	T66 Door Forced	DF	DR	9999	DF9999	DR9999
T66:S004	T66 Door DOTL	DL	DH	9999	DL9999	DH9999
T66:S005	T66 Duress	HA	HR	9999	HA9999	HR9999
T66:S006	T66 Deadman	UA	UR	9999	UA9999	UR9999
T66:S007	T66 Pin Attempts	JA	UX	9999	JA9999	UX9999
T66:S008	T66 LAN Comms	EM	EN	9999	EM9999	EN9999
T67:Z001	T67:Z001	UA	UR	9999	UA9999	UR9999
T67:Z002	T67:Z002	UA	UR	9999	UA9999	UR9999
T67:S001	T67 Cab Tamper	TA	TR	9999	TA9999	TR9999
T67:S002	T67 Panic	PA	PR	9999	PA9999	PR9999
T67:S003	T67 Door Forced	DF	DR	9999	DF9999	DR9999
T67:S004	T67 Door DOTL	DL	DH	9999	DL9999	DH9999
T67:S005	T67 Duress	HA	HR	9999	HA9999	HR9999
T67:S006	T67 Deadman	UA	UR	9999	UA9999	UR9999
T67:S007	T67 Pin Attempts	JA	UX	9999	JA9999	UX9999
T67:S008	T67 LAN Comms	EM	EN	9999	EM9999	EN9999
T68:Z001	T68:Z001	UA	UR	9999	UA9999	UR9999
T68:Z002	T68:Z002	UA	UR	9999	UA9999	UR9999
T68:S001	T68 Cab Tamper	TA	TR	9999	TA9999	TR9999
T68:S002	T68 Panic	PA	PR	9999	PA9999	PR9999
T68:S003	T68 Door Forced	DF	DR	9999	DF9999	DR9999
T68:S004	T68 Door DOTL	DL	DH	9999	DL9999	DH9999
T68:S005	T68 Duress	HA	HR	9999	HA9999	HR9999
T68:S006	T68 Deadman	UA	UR	9999	UA9999	UR9999
T68:S007	T68 Pin Attempts	JA	UX	9999	JA9999	UX9999
T68:S008	T68 LAN Comms	EM	EN	9999	EM9999	EN9999
T69:Z001	T69:Z001	UA	UR	9999	UA9999	UR9999
T69:Z002	T69:Z002	UA	UR	9999	UA9999	UR9999
T69:S001	T69 Cab Tamper	TA	TR	9999	TA9999	TR9999
T69:S002	T69 Panic	PA	PR	9999	PA9999	PR9999
T69:S003	T69 Door Forced	DF	DR	9999	DF9999	DR9999
T69:S004	T69 Door DOTL	DL	DH	9999	DL9999	DH9999
T69:S005	T69 Duress	HA	HR	9999	HA9999	HR9999
T69:S006	T69 Deadman	UA	UR	9999	UA9999	UR9999
T69:S007	T69 Pin Attempts	JA	UX	9999	JA9999	UX9999
T69:S008	T69 LAN Comms	EM	EN	9999	EM9999	EN9999
T70:Z001	T70:Z001	UA	UR	9999	UA9999	UR9999
T70:Z002	T70:Z002	UA	UR	9999	UA9999	UR9999
T70:S001	T70 Cab Tamper	TA	TR	9999	TA9999	TR9999
T70:S002	T70 Panic	PA	PR	9999	PA9999	PR9999
T70:S003	T70 Door Forced	DF	DR	9999	DF9999	DR9999
T70:S004	T70 Door DOTL	DL	DH	9999	DL9999	DH9999
T70:S005	T70 Duress	HA	HR	9999	HA9999	HR9999
T70:S006	T70 Deadman	UA	UR	9999	UA9999	UR9999
T70:S007	T70 Pin Attempts	JA	UX	9999	JA9999	UX9999
T70:S008	T70 LAN Comms	EM	EN	9999	EM9999	EN9999
T71:Z001	T71:Z001	UA	UR	9999	UA9999	UR9999
T71:Z002	T71:Z002	UA	UR	9999	UA9999	UR9999
T71:S001	T71 Cab Tamper	TA	TR	9999	TA9999	TR9999
T71:S002	T71 Panic	PA	PR	9999	PA9999	PR9999
T71:S003	T71 Door Forced	DF	DR	9999	DF9999	DR9999
T71:S004	T71 Door DOTL	DL	DH	9999	DL9999	DH9999
T71:S005	T71 Duress	HA	HR	9999	HA9999	HR9999
T71:S006	T71 Deadman	UA	UR	9999	UA9999	UR9999
T71:S007	T71 Pin Attempts	JA	UX	9999	JA9999	UX9999
T71:S008	T71 LAN Comms	EM	EN	9999	EM9999	EN9999
T72:Z001	T72:Z001	UA	UR	9999	UA9999	UR9999
T72:Z002	T72:Z002	UA	UR	9999	UA9999	UR9999
T72:S001	T72 Cab Tamper	TA	TR	9999	TA9999	TR9999
T72:S002	T72 Panic	PA	PR	9999	PA9999	PR9999
T72:S003	T72 Door Forced	DF	DR	9999	DF9999	DR9999
T72:S004	T72 Door DOTL	DL	DH	9999	DL9999	DH9999
T72:S005	T72 Duress	HA	HR	9999	HA9999	HR9999
T72:S006	T72 Deadman	UA	UR	9999	UA9999	UR9999
T72:S007	T72 Pin Attempts	JA	UX	9999	JA9999	UX9999
T72:S008	T72 LAN Comms	EM	EN	9999	EM9999	EN9999
T73:Z001	T73:Z001	UA	UR	9999	UA9999	UR9999
T73:Z002	T73:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

T73:S001	T73 Cab Tamper	TA	TR	9999	TA9999	TR9999
T73:S002	T73 Panic	PA	PR	9999	PA9999	PR9999
T73:S003	T73 Door Forced	DF	DR	9999	DF9999	DR9999
T73:S004	T73 Door DOTL	DL	DH	9999	DL9999	DH9999
T73:S005	T73 Duress	HA	HR	9999	HA9999	HR9999
T73:S006	T73 Deadman	UA	UR	9999	UA9999	UR9999
T73:S007	T73 Pin Attempts	JA	UX	9999	JA9999	UX9999
T73:S008	T73 LAN Comms	EM	EN	9999	EM9999	EN9999
T74:Z001	T74:Z001	UA	UR	9999	UA9999	UR9999
T74:Z002	T74:Z002	UA	UR	9999	UA9999	UR9999
T74:S001	T74 Cab Tamper	TA	TR	9999	TA9999	TR9999
T74:S002	T74 Panic	PA	PR	9999	PA9999	PR9999
T74:S003	T74 Door Forced	DF	DR	9999	DF9999	DR9999
T74:S004	T74 Door DOTL	DL	DH	9999	DL9999	DH9999
T74:S005	T74 Duress	HA	HR	9999	HA9999	HR9999
T74:S006	T74 Deadman	UA	UR	9999	UA9999	UR9999
T74:S007	T74 Pin Attempts	JA	UX	9999	JA9999	UX9999
T74:S008	T74 LAN Comms	EM	EN	9999	EM9999	EN9999
T75:Z001	T75:Z001	UA	UR	9999	UA9999	UR9999
T75:Z002	T75:Z002	UA	UR	9999	UA9999	UR9999
T75:S001	T75 Cab Tamper	TA	TR	9999	TA9999	TR9999
T75:S002	T75 Panic	PA	PR	9999	PA9999	PR9999
T75:S003	T75 Door Forced	DF	DR	9999	DF9999	DR9999
T75:S004	T75 Door DOTL	DL	DH	9999	DL9999	DH9999
T75:S005	T75 Duress	HA	HR	9999	HA9999	HR9999
T75:S006	T75 Deadman	UA	UR	9999	UA9999	UR9999
T75:S007	T75 Pin Attempts	JA	UX	9999	JA9999	UX9999
T75:S008	T75 LAN Comms	EM	EN	9999	EM9999	EN9999
T76:Z001	T76:Z001	UA	UR	9999	UA9999	UR9999
T76:Z002	T76:Z002	UA	UR	9999	UA9999	UR9999
T76:S001	T76 Cab Tamper	TA	TR	9999	TA9999	TR9999
T76:S002	T76 Panic	PA	PR	9999	PA9999	PR9999
T76:S003	T76 Door Forced	DF	DR	9999	DF9999	DR9999
T76:S004	T76 Door DOTL	DL	DH	9999	DL9999	DH9999
T76:S005	T76 Duress	HA	HR	9999	HA9999	HR9999
T76:S006	T76 Deadman	UA	UR	9999	UA9999	UR9999
T76:S007	T76 Pin Attempts	JA	UX	9999	JA9999	UX9999
T76:S008	T76 LAN Comms	EM	EN	9999	EM9999	EN9999
T77:Z001	T77:Z001	UA	UR	9999	UA9999	UR9999
T77:Z002	T77:Z002	UA	UR	9999	UA9999	UR9999
T77:S001	T77 Cab Tamper	TA	TR	9999	TA9999	TR9999
T77:S002	T77 Panic	PA	PR	9999	PA9999	PR9999
T77:S003	T77 Door Forced	DF	DR	9999	DF9999	DR9999
T77:S004	T77 Door DOTL	DL	DH	9999	DL9999	DH9999
T77:S005	T77 Duress	HA	HR	9999	HA9999	HR9999
T77:S006	T77 Deadman	UA	UR	9999	UA9999	UR9999
T77:S007	T77 Pin Attempts	JA	UX	9999	JA9999	UX9999
T77:S008	T77 LAN Comms	EM	EN	9999	EM9999	EN9999
T78:Z001	T78:Z001	UA	UR	9999	UA9999	UR9999
T78:Z002	T78:Z002	UA	UR	9999	UA9999	UR9999
T78:S001	T78 Cab Tamper	TA	TR	9999	TA9999	TR9999
T78:S002	T78 Panic	PA	PR	9999	PA9999	PR9999
T78:S003	T78 Door Forced	DF	DR	9999	DF9999	DR9999
T78:S004	T78 Door DOTL	DL	DH	9999	DL9999	DH9999
T78:S005	T78 Duress	HA	HR	9999	HA9999	HR9999
T78:S006	T78 Deadman	UA	UR	9999	UA9999	UR9999
T78:S007	T78 Pin Attempts	JA	UX	9999	JA9999	UX9999
T78:S008	T78 LAN Comms	EM	EN	9999	EM9999	EN9999
T79:Z001	T79:Z001	UA	UR	9999	UA9999	UR9999
T79:Z002	T79:Z002	UA	UR	9999	UA9999	UR9999
T79:S001	T79 Cab Tamper	TA	TR	9999	TA9999	TR9999
T79:S002	T79 Panic	PA	PR	9999	PA9999	PR9999
T79:S003	T79 Door Forced	DF	DR	9999	DF9999	DR9999
T79:S004	T79 Door DOTL	DL	DH	9999	DL9999	DH9999
T79:S005	T79 Duress	HA	HR	9999	HA9999	HR9999
T79:S006	T79 Deadman	UA	UR	9999	UA9999	UR9999
T79:S007	T79 Pin Attempts	JA	UX	9999	JA9999	UX9999
T79:S008	T79 LAN Comms	EM	EN	9999	EM9999	EN9999
T80:Z001	T80:Z001	UA	UR	9999	UA9999	UR9999
T80:Z002	T80:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

T80:S001	T80 Cab Tamper	TA	TR	9999	TA9999	TR9999
T80:S002	T80 Panic	PA	PR	9999	PA9999	PR9999
T80:S003	T80 Door Forced	DF	DR	9999	DF9999	DR9999
T80:S004	T80 Door DOTL	DL	DH	9999	DL9999	DH9999
T80:S005	T80 Duress	HA	HR	9999	HA9999	HR9999
T80:S006	T80 Deadman	UA	UR	9999	UA9999	UR9999
T80:S007	T80 Pin Attempts	JA	UX	9999	JA9999	UX9999
T80:S008	T80 LAN Comms	EM	EN	9999	EM9999	EN9999
T81:Z001	T81:Z001	UA	UR	9999	UA9999	UR9999
T81:Z002	T81:Z002	UA	UR	9999	UA9999	UR9999
T81:S001	T81 Cab Tamper	TA	TR	9999	TA9999	TR9999
T81:S002	T81 Panic	PA	PR	9999	PA9999	PR9999
T81:S003	T81 Door Forced	DF	DR	9999	DF9999	DR9999
T81:S004	T81 Door DOTL	DL	DH	9999	DL9999	DH9999
T81:S005	T81 Duress	HA	HR	9999	HA9999	HR9999
T81:S006	T81 Deadman	UA	UR	9999	UA9999	UR9999
T81:S007	T81 Pin Attempts	JA	UX	9999	JA9999	UX9999
T81:S008	T81 LAN Comms	EM	EN	9999	EM9999	EN9999
T82:Z001	T82:Z001	UA	UR	9999	UA9999	UR9999
T82:Z002	T82:Z002	UA	UR	9999	UA9999	UR9999
T82:S001	T82 Cab Tamper	TA	TR	9999	TA9999	TR9999
T82:S002	T82 Panic	PA	PR	9999	PA9999	PR9999
T82:S003	T82 Door Forced	DF	DR	9999	DF9999	DR9999
T82:S004	T82 Door DOTL	DL	DH	9999	DL9999	DH9999
T82:S005	T82 Duress	HA	HR	9999	HA9999	HR9999
T82:S006	T82 Deadman	UA	UR	9999	UA9999	UR9999
T82:S007	T82 Pin Attempts	JA	UX	9999	JA9999	UX9999
T82:S008	T82 LAN Comms	EM	EN	9999	EM9999	EN9999
T83:Z001	T83:Z001	UA	UR	9999	UA9999	UR9999
T83:Z002	T83:Z002	UA	UR	9999	UA9999	UR9999
T83:S001	T83 Cab Tamper	TA	TR	9999	TA9999	TR9999
T83:S002	T83 Panic	PA	PR	9999	PA9999	PR9999
T83:S003	T83 Door Forced	DF	DR	9999	DF9999	DR9999
T83:S004	T83 Door DOTL	DL	DH	9999	DL9999	DH9999
T83:S005	T83 Duress	HA	HR	9999	HA9999	HR9999
T83:S006	T83 Deadman	UA	UR	9999	UA9999	UR9999
T83:S007	T83 Pin Attempts	JA	UX	9999	JA9999	UX9999
T83:S008	T83 LAN Comms	EM	EN	9999	EM9999	EN9999
T84:Z001	T84:Z001	UA	UR	9999	UA9999	UR9999
T84:Z002	T84:Z002	UA	UR	9999	UA9999	UR9999
T84:S001	T84 Cab Tamper	TA	TR	9999	TA9999	TR9999
T84:S002	T84 Panic	PA	PR	9999	PA9999	PR9999
T84:S003	T84 Door Forced	DF	DR	9999	DF9999	DR9999
T84:S004	T84 Door DOTL	DL	DH	9999	DL9999	DH9999
T84:S005	T84 Duress	HA	HR	9999	HA9999	HR9999
T84:S006	T84 Deadman	UA	UR	9999	UA9999	UR9999
T84:S007	T84 Pin Attempts	JA	UX	9999	JA9999	UX9999
T84:S008	T84 LAN Comms	EM	EN	9999	EM9999	EN9999
T85:Z001	T85:Z001	UA	UR	9999	UA9999	UR9999
T85:Z002	T85:Z002	UA	UR	9999	UA9999	UR9999
T85:S001	T85 Cab Tamper	TA	TR	9999	TA9999	TR9999
T85:S002	T85 Panic	PA	PR	9999	PA9999	PR9999
T85:S003	T85 Door Forced	DF	DR	9999	DF9999	DR9999
T85:S004	T85 Door DOTL	DL	DH	9999	DL9999	DH9999
T85:S005	T85 Duress	HA	HR	9999	HA9999	HR9999
T85:S006	T85 Deadman	UA	UR	9999	UA9999	UR9999
T85:S007	T85 Pin Attempts	JA	UX	9999	JA9999	UX9999
T85:S008	T85 LAN Comms	EM	EN	9999	EM9999	EN9999
T86:Z001	T86:Z001	UA	UR	9999	UA9999	UR9999
T86:Z002	T86:Z002	UA	UR	9999	UA9999	UR9999
T86:S001	T86 Cab Tamper	TA	TR	9999	TA9999	TR9999
T86:S002	T86 Panic	PA	PR	9999	PA9999	PR9999
T86:S003	T86 Door Forced	DF	DR	9999	DF9999	DR9999
T86:S004	T86 Door DOTL	DL	DH	9999	DL9999	DH9999
T86:S005	T86 Duress	HA	HR	9999	HA9999	HR9999
T86:S006	T86 Deadman	UA	UR	9999	UA9999	UR9999
T86:S007	T86 Pin Attempts	JA	UX	9999	JA9999	UX9999
T86:S008	T86 LAN Comms	EM	EN	9999	EM9999	EN9999
T87:Z001	T87:Z001	UA	UR	9999	UA9999	UR9999
T87:Z002	T87:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

T87:S001	T87 Cab Tamper	TA	TR	9999	TA9999	TR9999
T87:S002	T87 Panic	PA	PR	9999	PA9999	PR9999
T87:S003	T87 Door Forced	DF	DR	9999	DF9999	DR9999
T87:S004	T87 Door DOTL	DL	DH	9999	DL9999	DH9999
T87:S005	T87 Duress	HA	HR	9999	HA9999	HR9999
T87:S006	T87 Deadman	UA	UR	9999	UA9999	UR9999
T87:S007	T87 Pin Attempts	JA	UX	9999	JA9999	UX9999
T87:S008	T87 LAN Comms	EM	EN	9999	EM9999	EN9999
T88:Z001	T88:Z001	UA	UR	9999	UA9999	UR9999
T88:Z002	T88:Z002	UA	UR	9999	UA9999	UR9999
T88:S001	T88 Cab Tamper	TA	TR	9999	TA9999	TR9999
T88:S002	T88 Panic	PA	PR	9999	PA9999	PR9999
T88:S003	T88 Door Forced	DF	DR	9999	DF9999	DR9999
T88:S004	T88 Door DOTL	DL	DH	9999	DL9999	DH9999
T88:S005	T88 Duress	HA	HR	9999	HA9999	HR9999
T88:S006	T88 Deadman	UA	UR	9999	UA9999	UR9999
T88:S007	T88 Pin Attempts	JA	UX	9999	JA9999	UX9999
T88:S008	T88 LAN Comms	EM	EN	9999	EM9999	EN9999
T89:Z001	T89:Z001	UA	UR	9999	UA9999	UR9999
T89:Z002	T89:Z002	UA	UR	9999	UA9999	UR9999
T89:S001	T89 Cab Tamper	TA	TR	9999	TA9999	TR9999
T89:S002	T89 Panic	PA	PR	9999	PA9999	PR9999
T89:S003	T89 Door Forced	DF	DR	9999	DF9999	DR9999
T89:S004	T89 Door DOTL	DL	DH	9999	DL9999	DH9999
T89:S005	T89 Duress	HA	HR	9999	HA9999	HR9999
T89:S006	T89 Deadman	UA	UR	9999	UA9999	UR9999
T89:S007	T89 Pin Attempts	JA	UX	9999	JA9999	UX9999
T89:S008	T89 LAN Comms	EM	EN	9999	EM9999	EN9999
T90:Z001	T90:Z001	UA	UR	9999	UA9999	UR9999
T90:Z002	T90:Z002	UA	UR	9999	UA9999	UR9999
T90:S001	T90 Cab Tamper	TA	TR	9999	TA9999	TR9999
T90:S002	T90 Panic	PA	PR	9999	PA9999	PR9999
T90:S003	T90 Door Forced	DF	DR	9999	DF9999	DR9999
T90:S004	T90 Door DOTL	DL	DH	9999	DL9999	DH9999
T90:S005	T90 Duress	HA	HR	9999	HA9999	HR9999
T90:S006	T90 Deadman	UA	UR	9999	UA9999	UR9999
T90:S007	T90 Pin Attempts	JA	UX	9999	JA9999	UX9999
T90:S008	T90 LAN Comms	EM	EN	9999	EM9999	EN9999
T91:Z001	T91:Z001	UA	UR	9999	UA9999	UR9999
T91:Z002	T91:Z002	UA	UR	9999	UA9999	UR9999
T91:S001	T91 Cab Tamper	TA	TR	9999	TA9999	TR9999
T91:S002	T91 Panic	PA	PR	9999	PA9999	PR9999
T91:S003	T91 Door Forced	DF	DR	9999	DF9999	DR9999
T91:S004	T91 Door DOTL	DL	DH	9999	DL9999	DH9999
T91:S005	T91 Duress	HA	HR	9999	HA9999	HR9999
T91:S006	T91 Deadman	UA	UR	9999	UA9999	UR9999
T91:S007	T91 Pin Attempts	JA	UX	9999	JA9999	UX9999
T91:S008	T91 LAN Comms	EM	EN	9999	EM9999	EN9999
T92:Z001	T92:Z001	UA	UR	9999	UA9999	UR9999
T92:Z002	T92:Z002	UA	UR	9999	UA9999	UR9999
T92:S001	T92 Cab Tamper	TA	TR	9999	TA9999	TR9999
T92:S002	T92 Panic	PA	PR	9999	PA9999	PR9999
T92:S003	T92 Door Forced	DF	DR	9999	DF9999	DR9999
T92:S004	T92 Door DOTL	DL	DH	9999	DL9999	DH9999
T92:S005	T92 Duress	HA	HR	9999	HA9999	HR9999
T92:S006	T92 Deadman	UA	UR	9999	UA9999	UR9999
T92:S007	T92 Pin Attempts	JA	UX	9999	JA9999	UX9999
T92:S008	T92 LAN Comms	EM	EN	9999	EM9999	EN9999
T93:Z001	T93:Z001	UA	UR	9999	UA9999	UR9999
T93:Z002	T93:Z002	UA	UR	9999	UA9999	UR9999
T93:S001	T93 Cab Tamper	TA	TR	9999	TA9999	TR9999
T93:S002	T93 Panic	PA	PR	9999	PA9999	PR9999
T93:S003	T93 Door Forced	DF	DR	9999	DF9999	DR9999
T93:S004	T93 Door DOTL	DL	DH	9999	DL9999	DH9999
T93:S005	T93 Duress	HA	HR	9999	HA9999	HR9999
T93:S006	T93 Deadman	UA	UR	9999	UA9999	UR9999
T93:S007	T93 Pin Attempts	JA	UX	9999	JA9999	UX9999
T93:S008	T93 LAN Comms	EM	EN	9999	EM9999	EN9999
T94:Z001	T94:Z001	UA	UR	9999	UA9999	UR9999
T94:Z002	T94:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

T94:S001	T94 Cab Tamper	TA	TR	9999	TA9999	TR9999
T94:S002	T94 Panic	PA	PR	9999	PA9999	PR9999
T94:S003	T94 Door Forced	DF	DR	9999	DF9999	DR9999
T94:S004	T94 Door DOTL	DL	DH	9999	DL9999	DH9999
T94:S005	T94 Duress	HA	HR	9999	HA9999	HR9999
T94:S006	T94 Deadman	UA	UR	9999	UA9999	UR9999
T94:S007	T94 Pin Attempts	JA	UX	9999	JA9999	UX9999
T94:S008	T94 LAN Comms	EM	EN	9999	EM9999	EN9999
T95:Z001	T95:Z001	UA	UR	9999	UA9999	UR9999
T95:Z002	T95:Z002	UA	UR	9999	UA9999	UR9999
T95:S001	T95 Cab Tamper	TA	TR	9999	TA9999	TR9999
T95:S002	T95 Panic	PA	PR	9999	PA9999	PR9999
T95:S003	T95 Door Forced	DF	DR	9999	DF9999	DR9999
T95:S004	T95 Door DOTL	DL	DH	9999	DL9999	DH9999
T95:S005	T95 Duress	HA	HR	9999	HA9999	HR9999
T95:S006	T95 Deadman	UA	UR	9999	UA9999	UR9999
T95:S007	T95 Pin Attempts	JA	UX	9999	JA9999	UX9999
T95:S008	T95 LAN Comms	EM	EN	9999	EM9999	EN9999
T96:Z001	T96:Z001	UA	UR	9999	UA9999	UR9999
T96:Z002	T96:Z002	UA	UR	9999	UA9999	UR9999
T96:S001	T96 Cab Tamper	TA	TR	9999	TA9999	TR9999
T96:S002	T96 Panic	PA	PR	9999	PA9999	PR9999
T96:S003	T96 Door Forced	DF	DR	9999	DF9999	DR9999
T96:S004	T96 Door DOTL	DL	DH	9999	DL9999	DH9999
T96:S005	T96 Duress	HA	HR	9999	HA9999	HR9999
T96:S006	T96 Deadman	UA	UR	9999	UA9999	UR9999
T96:S007	T96 Pin Attempts	JA	UX	9999	JA9999	UX9999
T96:S008	T96 LAN Comms	EM	EN	9999	EM9999	EN9999
T97:Z001	T97:Z001	UA	UR	9999	UA9999	UR9999
T97:Z002	T97:Z002	UA	UR	9999	UA9999	UR9999
T97:S001	T97 Cab Tamper	TA	TR	9999	TA9999	TR9999
T97:S002	T97 Panic	PA	PR	9999	PA9999	PR9999
T97:S003	T97 Door Forced	DF	DR	9999	DF9999	DR9999
T97:S004	T97 Door DOTL	DL	DH	9999	DL9999	DH9999
T97:S005	T97 Duress	HA	HR	9999	HA9999	HR9999
T97:S006	T97 Deadman	UA	UR	9999	UA9999	UR9999
T97:S007	T97 Pin Attempts	JA	UX	9999	JA9999	UX9999
T97:S008	T97 LAN Comms	EM	EN	9999	EM9999	EN9999
T98:Z001	T98:Z001	UA	UR	9999	UA9999	UR9999
T98:Z002	T98:Z002	UA	UR	9999	UA9999	UR9999
T98:S001	T98 Cab Tamper	TA	TR	9999	TA9999	TR9999
T98:S002	T98 Panic	PA	PR	9999	PA9999	PR9999
T98:S003	T98 Door Forced	DF	DR	9999	DF9999	DR9999
T98:S004	T98 Door DOTL	DL	DH	9999	DL9999	DH9999
T98:S005	T98 Duress	HA	HR	9999	HA9999	HR9999
T98:S006	T98 Deadman	UA	UR	9999	UA9999	UR9999
T98:S007	T98 Pin Attempts	JA	UX	9999	JA9999	UX9999
T98:S008	T98 LAN Comms	EM	EN	9999	EM9999	EN9999
T99:Z001	T99:Z001	UA	UR	9999	UA9999	UR9999
T99:Z002	T99:Z002	UA	UR	9999	UA9999	UR9999
T99:S001	T99 Cab Tamper	TA	TR	9999	TA9999	TR9999
T99:S002	T99 Panic	PA	PR	9999	PA9999	PR9999
T99:S003	T99 Door Forced	DF	DR	9999	DF9999	DR9999
T99:S004	T99 Door DOTL	DL	DH	9999	DL9999	DH9999
T99:S005	T99 Duress	HA	HR	9999	HA9999	HR9999
T99:S006	T99 Deadman	UA	UR	9999	UA9999	UR9999
T99:S007	T99 Pin Attempts	JA	UX	9999	JA9999	UX9999
T99:S008	T99 LAN Comms	EM	EN	9999	EM9999	EN9999
P01:Z001	P01:Z001	UA	UR	1865	UA1865	UR1865
P01:Z002	P01:Z002	UA	UR	1866	UA1866	UR1866
P01:S001	P01 Cab Tamper	TA	TR	1867	TA1867	TR1867
P01:S002	P01 AC fail	AT	AR	1868	AT1868	AR1868
P01:S003	P01 Low Batt	YT	YR	1869	YT1869	YR1869
P01:S004	P01 Batt Fail	YP	YQ	1870	YP1870	YQ1870
P01:S005	P01 DET Fuse	YP	YQ	1871	YP1871	YQ1871
P01:S006	P01 LAN Fuse	YP	YQ	1872	YP1872	YQ1872
P01:S007	P01 Batt. Fuse	YP	YQ	1873	YP1873	YQ1873
P01:S008	P01 Aux2 Fuse	YP	YQ	1874	YP1874	YQ1874
P01:S009	P01 Aux2 Tamper/LAN Fault	YA	YH	1875	YA1875	YH1875
P01:S010	P01 Det OverCurr	YI	YJ	1876	YI1876	YJ1876

Integriti SIA DECIMAL Map. V21

P01:S011	P01 Chg OverCurr	YI	YJ	1877	YI1877	YJ1877
P01:S012	P01 Over Volts	YP	YQ	1878	YP1878	YQ1878
P01:S013	P01 Low Volts	YP	YQ	1879	YP1879	YQ1879
P01:S014	P01 PS Fail	YP	YQ	1880	YP1880	YQ1880
P01:S015	P01 Batt. Test	IA	IR	1881	IA1881	IR1881
P01:S016	P01 LAN Comms	EM	EN	1882	EM1882	EN1882
P02:Z001	P02:Z001	UA	UR	1883	UA1883	UR1883
P02:Z002	P02:Z002	UA	UR	1884	UA1884	UR1884
P02:S001	P02 Cab Tamper	TA	TR	1885	TA1885	TR1885
P02:S002	P02 AC fail	AT	AR	1886	AT1886	AR1886
P02:S003	P02 Low Batt	YT	YR	1887	YT1887	YR1887
P02:S004	P02 Batt Fail	YP	YQ	1888	YP1888	YQ1888
P02:S005	P02 DET Fuse	YP	YQ	1889	YP1889	YQ1889
P02:S006	P02 LAN Fuse	YP	YQ	1890	YP1890	YQ1890
P02:S007	P02 Batt. Fuse	YP	YQ	1891	YP1891	YQ1891
P02:S008	P02 Aux2 Fuse	YP	YQ	1892	YP1892	YQ1892
P02:S009	P02 Aux2 Tamper/LAN Fault	YA	YH	1893	YA1893	YH1893
P02:S010	P02 Det OverCurr	YI	YJ	1894	YI1894	YJ1894
P02:S011	P02 Chg OverCurr	YI	YJ	1895	YI1895	YJ1895
P02:S012	P02 Over Volts	YP	YQ	1896	YP1896	YQ1896
P02:S013	P02 Low Volts	YP	YQ	1897	YP1897	YQ1897
P02:S014	P02 PS Fail	YP	YQ	1898	YP1898	YQ1898
P02:S015	P02 Batt. Test	IA	IR	1899	IA1899	IR1899
P02:S016	P02 LAN Comms	EM	EN	1900	EM1900	EN1900
P03:Z001	P03:Z001	UA	UR	1901	UA1901	UR1901
P03:Z002	P03:Z002	UA	UR	1902	UA1902	UR1902
P03:S001	P03 Cab Tamper	TA	TR	1903	TA1903	TR1903
P03:S002	P03 AC fail	AT	AR	1904	AT1904	AR1904
P03:S003	P03 Low Batt	YT	YR	1905	YT1905	YR1905
P03:S004	P03 Batt Fail	YP	YQ	1906	YP1906	YQ1906
P03:S005	P03 DET Fuse	YP	YQ	1907	YP1907	YQ1907
P03:S006	P03 LAN Fuse	YP	YQ	1908	YP1908	YQ1908
P03:S007	P03 Batt. Fuse	YP	YQ	1909	YP1909	YQ1909
P03:S008	P03 Aux2 Fuse	YP	YQ	1910	YP1910	YQ1910
P03:S009	P03 Aux2 Tamper/LAN Fault	YA	YH	1911	YA1911	YH1911
P03:S010	P03 Det OverCurr	YI	YJ	1912	YI1912	YJ1912
P03:S011	P03 Chg OverCurr	YI	YJ	1913	YI1913	YJ1913
P03:S012	P03 Over Volts	YP	YQ	1914	YP1914	YQ1914
P03:S013	P03 Low Volts	YP	YQ	1915	YP1915	YQ1915
P03:S014	P03 PS Fail	YP	YQ	1916	YP1916	YQ1916
P03:S015	P03 Batt. Test	IA	IR	1917	IA1917	IR1917
P03:S016	P03 LAN Comms	EM	EN	1918	EM1918	EN1918
P04:Z001	P04:Z001	UA	UR	1919	UA1919	UR1919
P04:Z002	P04:Z002	UA	UR	1920	UA1920	UR1920
P04:S001	P04 Cab Tamper	TA	TR	1921	TA1921	TR1921
P04:S002	P04 AC fail	AT	AR	1922	AT1922	AR1922
P04:S003	P04 Low Batt	YT	YR	1923	YT1923	YR1923
P04:S004	P04 Batt Fail	YP	YQ	1924	YP1924	YQ1924
P04:S005	P04 DET Fuse	YP	YQ	1925	YP1925	YQ1925
P04:S006	P04 LAN Fuse	YP	YQ	1926	YP1926	YQ1926
P04:S007	P04 Batt. Fuse	YP	YQ	1927	YP1927	YQ1927
P04:S008	P04 Aux2 Fuse	YP	YQ	1928	YP1928	YQ1928
P04:S009	P04 Aux2 Tamper/LAN Fault	YA	YH	1929	YA1929	YH1929
P04:S010	P04 Det OverCurr	YI	YJ	1930	YI1930	YJ1930
P04:S011	P04 Chg OverCurr	YI	YJ	1931	YI1931	YJ1931
P04:S012	P04 Over Volts	YP	YQ	1932	YP1932	YQ1932
P04:S013	P04 Low Volts	YP	YQ	1933	YP1933	YQ1933
P04:S014	P04 PS Fail	YP	YQ	1934	YP1934	YQ1934
P04:S015	P04 Batt. Test	IA	IR	1935	IA1935	IR1935
P04:S016	P04 LAN Comms	EM	EN	1936	EM1936	EN1936
P05:Z001	P05:Z001	UA	UR	1937	UA1937	UR1937
P05:Z002	P05:Z002	UA	UR	1938	UA1938	UR1938
P05:S001	P05 Cab Tamper	TA	TR	1939	TA1939	TR1939
P05:S002	P05 AC fail	AT	AR	1940	AT1940	AR1940
P05:S003	P05 Low Batt	YT	YR	1941	YT1941	YR1941
P05:S004	P05 Batt Fail	YP	YQ	1942	YP1942	YQ1942
P05:S005	P05 DET Fuse	YP	YQ	1943	YP1943	YQ1943
P05:S006	P05 LAN Fuse	YP	YQ	1944	YP1944	YQ1944
P05:S007	P05 Batt. Fuse	YP	YQ	1945	YP1945	YQ1945
P05:S008	P05 Aux2 Fuse	YP	YQ	1946	YP1946	YQ1946

Integriti SIA DECIMAL Map. V21

P05:S009	P05 Aux2 Tamper/LAN Fault	YA	YH	1947	YA1947	YH1947
P05:S010	P05 Det OverCurr	YI	YJ	1948	YI1948	YJ1948
P05:S011	P05 Chg OverCurr	YI	YJ	1949	YI1949	YJ1949
P05:S012	P05 Over Volts	YP	YQ	1950	YP1950	YQ1950
P05:S013	P05 Low Volts	YP	YQ	1951	YP1951	YQ1951
P05:S014	P05 PS Fail	YP	YQ	1952	YP1952	YQ1952
P05:S015	P05 Batt. Test	IA	IR	1953	IA1953	IR1953
P05:S016	P05 LAN Comms	EM	EN	1954	EM1954	EN1954
P06:Z001	P06:Z001	UA	UR	1955	UA1955	UR1955
P06:Z002	P06:Z002	UA	UR	1956	UA1956	UR1956
P06:S001	P06 Cab Tamper	TA	TR	1957	TA1957	TR1957
P06:S002	P06 AC fail	AT	AR	1958	AT1958	AR1958
P06:S003	P06 Low Batt	YT	YR	1959	YT1959	YR1959
P06:S004	P06 Batt Fail	YP	YQ	1960	YP1960	YQ1960
P06:S005	P06 DET Fuse	YP	YQ	1961	YP1961	YQ1961
P06:S006	P06 LAN Fuse	YP	YQ	1962	YP1962	YQ1962
P06:S007	P06 Batt. Fuse	YP	YQ	1963	YP1963	YQ1963
P06:S008	P06 Aux2 Fuse	YP	YQ	1964	YP1964	YQ1964
P06:S009	P06 Aux2 Tamper/LAN Fault	YA	YH	1965	YA1965	YH1965
P06:S010	P06 Det OverCurr	YI	YJ	1966	YI1966	YJ1966
P06:S011	P06 Chg OverCurr	YI	YJ	1967	YI1967	YJ1967
P06:S012	P06 Over Volts	YP	YQ	1968	YP1968	YQ1968
P06:S013	P06 Low Volts	YP	YQ	1969	YP1969	YQ1969
P06:S014	P06 PS Fail	YP	YQ	1970	YP1970	YQ1970
P06:S015	P06 Batt. Test	IA	IR	1971	IA1971	IR1971
P06:S016	P06 LAN Comms	EM	EN	1972	EM1972	EN1972
P07:Z001	P07:Z001	UA	UR	1973	UA1973	UR1973
P07:Z002	P07:Z002	UA	UR	1974	UA1974	UR1974
P07:S001	P07 Cab Tamper	TA	TR	1975	TA1975	TR1975
P07:S002	P07 AC fail	AT	AR	1976	AT1976	AR1976
P07:S003	P07 Low Batt	YT	YR	1977	YT1977	YR1977
P07:S004	P07 Batt Fail	YP	YQ	1978	YP1978	YQ1978
P07:S005	P07 DET Fuse	YP	YQ	1979	YP1979	YQ1979
P07:S006	P07 LAN Fuse	YP	YQ	1980	YP1980	YQ1980
P07:S007	P07 Batt. Fuse	YP	YQ	1981	YP1981	YQ1981
P07:S008	P07 Aux2 Fuse	YP	YQ	1982	YP1982	YQ1982
P07:S009	P07 Aux2 Tamper/LAN Fault	YA	YH	1983	YA1983	YH1983
P07:S010	P07 Det OverCurr	YI	YJ	1984	YI1984	YJ1984
P07:S011	P07 Chg OverCurr	YI	YJ	1985	YI1985	YJ1985
P07:S012	P07 Over Volts	YP	YQ	1986	YP1986	YQ1986
P07:S013	P07 Low Volts	YP	YQ	1987	YP1987	YQ1987
P07:S014	P07 PS Fail	YP	YQ	1988	YP1988	YQ1988
P07:S015	P07 Batt. Test	IA	IR	1989	IA1989	IR1989
P07:S016	P07 LAN Comms	EM	EN	1990	EM1990	EN1990
P08:Z001	P08:Z001	UA	UR	1991	UA1991	UR1991
P08:Z002	P08:Z002	UA	UR	1992	UA1992	UR1992
P08:S001	P08 Cab Tamper	TA	TR	1993	TA1993	TR1993
P08:S002	P08 AC fail	AT	AR	1994	AT1994	AR1994
P08:S003	P08 Low Batt	YT	YR	1995	YT1995	YR1995
P08:S004	P08 Batt Fail	YP	YQ	1996	YP1996	YQ1996
P08:S005	P08 DET Fuse	YP	YQ	1997	YP1997	YQ1997
P08:S006	P08 LAN Fuse	YP	YQ	1998	YP1998	YQ1998
P08:S007	P08 Batt. Fuse	YP	YQ	1999	YP1999	YQ1999
P08:S008	P08 Aux2 Fuse	YP	YQ	2000	YP2000	YQ2000
P08:S009	P08 Aux2 Tamper/LAN Fault	YA	YH	2001	YA2001	YH2001
P08:S010	P08 Det OverCurr	YI	YJ	2002	YI2002	YJ2002
P08:S011	P08 Chg OverCurr	YI	YJ	2003	YI2003	YJ2003
P08:S012	P08 Over Volts	YP	YQ	2004	YP2004	YQ2004
P08:S013	P08 Low Volts	YP	YQ	2005	YP2005	YQ2005
P08:S014	P08 PS Fail	YP	YQ	2006	YP2006	YQ2006
P08:S015	P08 Batt. Test	IA	IR	2007	IA2007	IR2007
P08:S016	P08 LAN Comms	EM	EN	2008	EM2008	EN2008
P09:Z001	P09:Z001	UA	UR	2009	UA2009	UR2009
P09:Z002	P09:Z002	UA	UR	2010	UA2010	UR2010
P09:S001	P09 Cab Tamper	TA	TR	2011	TA2011	TR2011
P09:S002	P09 AC fail	AT	AR	2012	AT2012	AR2012
P09:S003	P09 Low Batt	YT	YR	2013	YT2013	YR2013
P09:S004	P09 Batt Fail	YP	YQ	2014	YP2014	YQ2014
P09:S005	P09 DET Fuse	YP	YQ	2015	YP2015	YQ2015
P09:S006	P09 LAN Fuse	YP	YQ	2016	YP2016	YQ2016

Integriti SIA DECIMAL Map. V21

P09:S007	P09 Batt. Fuse	YP	YQ	2017	YP2017	YQ2017
P09:S008	P09 Aux2 Fuse	YP	YQ	2018	YP2018	YQ2018
P09:S009	P09 Aux2 Tamper/LAN Fault	YA	YH	2019	YA2019	YH2019
P09:S010	P09 Det OverCurr	YI	YJ	2020	YI2020	YJ2020
P09:S011	P09 Chg OverCurr	YI	YJ	2021	YI2021	YJ2021
P09:S012	P09 Over Volts	YP	YQ	2022	YP2022	YQ2022
P09:S013	P09 Low Volts	YP	YQ	2023	YP2023	YQ2023
P09:S014	P09 PS Fail	YP	YQ	2024	YP2024	YQ2024
P09:S015	P09 Batt. Test	IA	IR	2025	IA2025	IR2025
P09:S016	P09 LAN Comms	EM	EN	2026	EM2026	EN2026
P10:Z001	P10:Z001	UA	UR	2027	UA2027	UR2027
P10:Z002	P10:Z002	UA	UR	2028	UA2028	UR2028
P10:S001	P10 Cab Tamper	TA	TR	2029	TA2029	TR2029
P10:S002	P10 AC fail	AT	AR	2030	AT2030	AR2030
P10:S003	P10 Low Batt	YT	YR	2031	YT2031	YR2031
P10:S004	P10 Batt Fail	YP	YQ	2032	YP2032	YQ2032
P10:S005	P10 DET Fuse	YP	YQ	2033	YP2033	YQ2033
P10:S006	P10 LAN Fuse	YP	YQ	2034	YP2034	YQ2034
P10:S007	P10 Batt. Fuse	YP	YQ	2035	YP2035	YQ2035
P10:S008	P10 Aux2 Fuse	YP	YQ	2036	YP2036	YQ2036
P10:S009	P10 Aux2 Tamper/LAN Fault	YA	YH	2037	YA2037	YH2037
P10:S010	P10 Det OverCurr	YI	YJ	2038	YI2038	YJ2038
P10:S011	P10 Chg OverCurr	YI	YJ	2039	YI2039	YJ2039
P10:S012	P10 Over Volts	YP	YQ	2040	YP2040	YQ2040
P10:S013	P10 Low Volts	YP	YQ	2041	YP2041	YQ2041
P10:S014	P10 PS Fail	YP	YQ	2042	YP2042	YQ2042
P10:S015	P10 Batt. Test	IA	IR	2043	IA2043	IR2043
P10:S016	P10 LAN Comms	EM	EN	2044	EM2044	EN2044
P11:Z001	P11:Z001	UA	UR	2045	UA2045	UR2045
P11:Z002	P11:Z002	UA	UR	2046	UA2046	UR2046
P11:S001	P11 Cab Tamper	TA	TR	2047	TA2047	TR2047
P11:S002	P11 AC fail	AT	AR	2048	AT2048	AR2048
P11:S003	P11 Low Batt	YT	YR	2049	YT2049	YR2049
P11:S004	P11 Batt Fail	YP	YQ	2050	YP2050	YQ2050
P11:S005	P11 DET Fuse	YP	YQ	2051	YP2051	YQ2051
P11:S006	P11 LAN Fuse	YP	YQ	2052	YP2052	YQ2052
P11:S007	P11 Batt. Fuse	YP	YQ	2053	YP2053	YQ2053
P11:S008	P11 Aux2 Fuse	YP	YQ	2054	YP2054	YQ2054
P11:S009	P11 Aux2 Tamper/LAN Fault	YA	YH	2055	YA2055	YH2055
P11:S010	P11 Det OverCurr	YI	YJ	2056	YI2056	YJ2056
P11:S011	P11 Chg OverCurr	YI	YJ	2057	YI2057	YJ2057
P11:S012	P11 Over Volts	YP	YQ	2058	YP2058	YQ2058
P11:S013	P11 Low Volts	YP	YQ	2059	YP2059	YQ2059
P11:S014	P11 PS Fail	YP	YQ	2060	YP2060	YQ2060
P11:S015	P11 Batt. Test	IA	IR	2061	IA2061	IR2061
P11:S016	P11 LAN Comms	EM	EN	2062	EM2062	EN2062
P12:Z001	P12:Z001	UA	UR	2063	UA2063	UR2063
P12:Z002	P12:Z002	UA	UR	2064	UA2064	UR2064
P12:S001	P12 Cab Tamper	TA	TR	2065	TA2065	TR2065
P12:S002	P12 AC fail	AT	AR	2066	AT2066	AR2066
P12:S003	P12 Low Batt	YT	YR	2067	YT2067	YR2067
P12:S004	P12 Batt Fail	YP	YQ	2068	YP2068	YQ2068
P12:S005	P12 DET Fuse	YP	YQ	2069	YP2069	YQ2069
P12:S006	P12 LAN Fuse	YP	YQ	2070	YP2070	YQ2070
P12:S007	P12 Batt. Fuse	YP	YQ	2071	YP2071	YQ2071
P12:S008	P12 Aux2 Fuse	YP	YQ	2072	YP2072	YQ2072
P12:S009	P12 Aux2 Tamper/LAN Fault	YA	YH	2073	YA2073	YH2073
P12:S010	P12 Det OverCurr	YI	YJ	2074	YI2074	YJ2074
P12:S011	P12 Chg OverCurr	YI	YJ	2075	YI2075	YJ2075
P12:S012	P12 Over Volts	YP	YQ	2076	YP2076	YQ2076
P12:S013	P12 Low Volts	YP	YQ	2077	YP2077	YQ2077
P12:S014	P12 PS Fail	YP	YQ	2078	YP2078	YQ2078
P12:S015	P12 Batt. Test	IA	IR	2079	IA2079	IR2079
P12:S016	P12 LAN Comms	EM	EN	2080	EM2080	EN2080
P13:Z001	P13:Z001	UA	UR	2081	UA2081	UR2081
P13:Z002	P13:Z002	UA	UR	2082	UA2082	UR2082
P13:S001	P13 Cab Tamper	TA	TR	2083	TA2083	TR2083
P13:S002	P13 AC fail	AT	AR	2084	AT2084	AR2084
P13:S003	P13 Low Batt	YT	YR	2085	YT2085	YR2085
P13:S004	P13 Batt Fail	YP	YQ	2086	YP2086	YQ2086

Integriti SIA DECIMAL Map. V21

P13:S005	P13 DET Fuse	YP	YQ	2087	YP2087	YQ2087
P13:S006	P13 LAN Fuse	YP	YQ	2088	YP2088	YQ2088
P13:S007	P13 Batt. Fuse	YP	YQ	2089	YP2089	YQ2089
P13:S008	P13 Aux2 Fuse	YP	YQ	2090	YP2090	YQ2090
P13:S009	P13 Aux2 Tamper/LAN Fault	YA	YH	2091	YA2091	YH2091
P13:S010	P13 Det OverCurr	YI	YJ	2092	YI2092	YJ2092
P13:S011	P13 Chg OverCurr	YI	YJ	2093	YI2093	YJ2093
P13:S012	P13 Over Volts	YP	YQ	2094	YP2094	YQ2094
P13:S013	P13 Low Volts	YP	YQ	2095	YP2095	YQ2095
P13:S014	P13 PS Fail	YP	YQ	2096	YP2096	YQ2096
P13:S015	P13 Batt. Test	IA	IR	2097	IA2097	IR2097
P13:S016	P13 LAN Comms	EM	EN	2098	EM2098	EN2098
P14:Z001	P14:Z001	UA	UR	2099	UA2099	UR2099
P14:Z002	P14:Z002	UA	UR	2100	UA2100	UR2100
P14:S001	P14 Cab Tamper	TA	TR	2101	TA2101	TR2101
P14:S002	P14 AC fail	AT	AR	2102	AT2102	AR2102
P14:S003	P14 Low Batt	YT	YR	2103	YT2103	YR2103
P14:S004	P14 Batt Fail	YP	YQ	2104	YP2104	YQ2104
P14:S005	P14 DET Fuse	YP	YQ	2105	YP2105	YQ2105
P14:S006	P14 LAN Fuse	YP	YQ	2106	YP2106	YQ2106
P14:S007	P14 Batt. Fuse	YP	YQ	2107	YP2107	YQ2107
P14:S008	P14 Aux2 Fuse	YP	YQ	2108	YP2108	YQ2108
P14:S009	P14 Aux2 Tamper/LAN Fault	YA	YH	2109	YA2109	YH2109
P14:S010	P14 Det OverCurr	YI	YJ	2110	YI2110	YJ2110
P14:S011	P14 Chg OverCurr	YI	YJ	2111	YI2111	YJ2111
P14:S012	P14 Over Volts	YP	YQ	2112	YP2112	YQ2112
P14:S013	P14 Low Volts	YP	YQ	2113	YP2113	YQ2113
P14:S014	P14 PS Fail	YP	YQ	2114	YP2114	YQ2114
P14:S015	P14 Batt. Test	IA	IR	2115	IA2115	IR2115
P14:S016	P14 LAN Comms	EM	EN	2116	EM2116	EN2116
P15:Z001	P15:Z001	UA	UR	2117	UA2117	UR2117
P15:Z002	P15:Z002	UA	UR	2118	UA2118	UR2118
P15:S001	P15 Cab Tamper	TA	TR	2119	TA2119	TR2119
P15:S002	P15 AC fail	AT	AR	2120	AT2120	AR2120
P15:S003	P15 Low Batt	YT	YR	2121	YT2121	YR2121
P15:S004	P15 Batt Fail	YP	YQ	2122	YP2122	YQ2122
P15:S005	P15 DET Fuse	YP	YQ	2123	YP2123	YQ2123
P15:S006	P15 LAN Fuse	YP	YQ	2124	YP2124	YQ2124
P15:S007	P15 Batt. Fuse	YP	YQ	2125	YP2125	YQ2125
P15:S008	P15 Aux2 Fuse	YP	YQ	2126	YP2126	YQ2126
P15:S009	P15 Aux2 Tamper/LAN Fault	YA	YH	2127	YA2127	YH2127
P15:S010	P15 Det OverCurr	YI	YJ	2128	YI2128	YJ2128
P15:S011	P15 Chg OverCurr	YI	YJ	2129	YI2129	YJ2129
P15:S012	P15 Over Volts	YP	YQ	2130	YP2130	YQ2130
P15:S013	P15 Low Volts	YP	YQ	2131	YP2131	YQ2131
P15:S014	P15 PS Fail	YP	YQ	2132	YP2132	YQ2132
P15:S015	P15 Batt. Test	IA	IR	2133	IA2133	IR2133
P15:S016	P15 LAN Comms	EM	EN	2134	EM2134	EN2134
P16:Z001	P16:Z001	UA	UR	2135	UA2135	UR2135
P16:Z002	P16:Z002	UA	UR	2136	UA2136	UR2136
P16:S001	P16 Cab Tamper	TA	TR	2137	TA2137	TR2137
P16:S002	P16 AC fail	AT	AR	2138	AT2138	AR2138
P16:S003	P16 Low Batt	YT	YR	2139	YT2139	YR2139
P16:S004	P16 Batt Fail	YP	YQ	2140	YP2140	YQ2140
P16:S005	P16 DET Fuse	YP	YQ	2141	YP2141	YQ2141
P16:S006	P16 LAN Fuse	YP	YQ	2142	YP2142	YQ2142
P16:S007	P16 Batt. Fuse	YP	YQ	2143	YP2143	YQ2143
P16:S008	P16 Aux2 Fuse	YP	YQ	2144	YP2144	YQ2144
P16:S009	P16 Aux2 Tamper/LAN Fault	YA	YH	2145	YA2145	YH2145
P16:S010	P16 Det OverCurr	YI	YJ	2146	YI2146	YJ2146
P16:S011	P16 Chg OverCurr	YI	YJ	2147	YI2147	YJ2147
P16:S012	P16 Over Volts	YP	YQ	2148	YP2148	YQ2148
P16:S013	P16 Low Volts	YP	YQ	2149	YP2149	YQ2149
P16:S014	P16 PS Fail	YP	YQ	2150	YP2150	YQ2150
P16:S015	P16 Batt. Test	IA	IR	2151	IA2151	IR2151
P16:S016	P16 LAN Comms	EM	EN	2152	EM2152	EN2152
P17:Z001	P17:Z001	UA	UR	2153	UA2153	UR2153
P17:Z002	P17:Z002	UA	UR	2154	UA2154	UR2154
P17:S001	P17 Cab Tamper	TA	TR	2155	TA2155	TR2155
P17:S002	P17 AC fail	AT	AR	2156	AT2156	AR2156

Integriti SIA DECIMAL Map. V21

P17:S003	P17 Low Batt	YT	YR	2157	YT2157	YR2157
P17:S004	P17 Batt Fail	YP	YQ	2158	YP2158	YQ2158
P17:S005	P17 DET Fuse	YP	YQ	2159	YP2159	YQ2159
P17:S006	P17 LAN Fuse	YP	YQ	2160	YP2160	YQ2160
P17:S007	P17 Batt. Fuse	YP	YQ	2161	YP2161	YQ2161
P17:S008	P17 Aux2 Fuse	YP	YQ	2162	YP2162	YQ2162
P17:S009	P17 Aux2 Tamper/LAN Fault	YA	YH	2163	YA2163	YH2163
P17:S010	P17 Det OverCurr	YI	YJ	2164	YI2164	YJ2164
P17:S011	P17 Chg OverCurr	YI	YJ	2165	YI2165	YJ2165
P17:S012	P17 Over Volts	YP	YQ	2166	YP2166	YQ2166
P17:S013	P17 Low Volts	YP	YQ	2167	YP2167	YQ2167
P17:S014	P17 PS Fail	YP	YQ	2168	YP2168	YQ2168
P17:S015	P17 Batt. Test	IA	IR	2169	IA2169	IR2169
P17:S016	P17 LAN Comms	EM	EN	2170	EM2170	EN2170
P18:Z001	P18:Z001	UA	UR	2171	UA2171	UR2171
P18:Z002	P18:Z002	UA	UR	2172	UA2172	UR2172
P18:S001	P18 Cab Tamper	TA	TR	2173	TA2173	TR2173
P18:S002	P18 AC fail	AT	AR	2174	AT2174	AR2174
P18:S003	P18 Low Batt	YT	YR	2175	YT2175	YR2175
P18:S004	P18 Batt Fail	YP	YQ	2176	YP2176	YQ2176
P18:S005	P18 DET Fuse	YP	YQ	2177	YP2177	YQ2177
P18:S006	P18 LAN Fuse	YP	YQ	2178	YP2178	YQ2178
P18:S007	P18 Batt. Fuse	YP	YQ	2179	YP2179	YQ2179
P18:S008	P18 Aux2 Fuse	YP	YQ	2180	YP2180	YQ2180
P18:S009	P18 Aux2 Tamper/LAN Fault	YA	YH	2181	YA2181	YH2181
P18:S010	P18 Det OverCurr	YI	YJ	2182	YI2182	YJ2182
P18:S011	P18 Chg OverCurr	YI	YJ	2183	YI2183	YJ2183
P18:S012	P18 Over Volts	YP	YQ	2184	YP2184	YQ2184
P18:S013	P18 Low Volts	YP	YQ	2185	YP2185	YQ2185
P18:S014	P18 PS Fail	YP	YQ	2186	YP2186	YQ2186
P18:S015	P18 Batt. Test	IA	IR	2187	IA2187	IR2187
P18:S016	P18 LAN Comms	EM	EN	2188	EM2188	EN2188
P19:Z001	P19:Z001	UA	UR	2189	UA2189	UR2189
P19:Z002	P19:Z002	UA	UR	2190	UA2190	UR2190
P19:S001	P19 Cab Tamper	TA	TR	2191	TA2191	TR2191
P19:S002	P19 AC fail	AT	AR	2192	AT2192	AR2192
P19:S003	P19 Low Batt	YT	YR	2193	YT2193	YR2193
P19:S004	P19 Batt Fail	YP	YQ	2194	YP2194	YQ2194
P19:S005	P19 DET Fuse	YP	YQ	2195	YP2195	YQ2195
P19:S006	P19 LAN Fuse	YP	YQ	2196	YP2196	YQ2196
P19:S007	P19 Batt. Fuse	YP	YQ	2197	YP2197	YQ2197
P19:S008	P19 Aux2 Fuse	YP	YQ	2198	YP2198	YQ2198
P19:S009	P19 Aux2 Tamper/LAN Fault	YA	YH	2199	YA2199	YH2199
P19:S010	P19 Det OverCurr	YI	YJ	2200	YI2200	YJ2200
P19:S011	P19 Chg OverCurr	YI	YJ	2201	YI2201	YJ2201
P19:S012	P19 Over Volts	YP	YQ	2202	YP2202	YQ2202
P19:S013	P19 Low Volts	YP	YQ	2203	YP2203	YQ2203
P19:S014	P19 PS Fail	YP	YQ	2204	YP2204	YQ2204
P19:S015	P19 Batt. Test	IA	IR	2205	IA2205	IR2205
P19:S016	P19 LAN Comms	EM	EN	2206	EM2206	EN2206
P20:Z001	P20:Z001	UA	UR	2207	UA2207	UR2207
P20:Z002	P20:Z002	UA	UR	2208	UA2208	UR2208
P20:S001	P20 Cab Tamper	TA	TR	2209	TA2209	TR2209
P20:S002	P20 AC fail	AT	AR	2210	AT2210	AR2210
P20:S003	P20 Low Batt	YT	YR	2211	YT2211	YR2211
P20:S004	P20 Batt Fail	YP	YQ	2212	YP2212	YQ2212
P20:S005	P20 DET Fuse	YP	YQ	2213	YP2213	YQ2213
P20:S006	P20 LAN Fuse	YP	YQ	2214	YP2214	YQ2214
P20:S007	P20 Batt. Fuse	YP	YQ	2215	YP2215	YQ2215
P20:S008	P20 Aux2 Fuse	YP	YQ	2216	YP2216	YQ2216
P20:S009	P20 Aux2 Tamper/LAN Fault	YA	YH	2217	YA2217	YH2217
P20:S010	P20 Det OverCurr	YI	YJ	2218	YI2218	YJ2218
P20:S011	P20 Chg OverCurr	YI	YJ	2219	YI2219	YJ2219
P20:S012	P20 Over Volts	YP	YQ	2220	YP2220	YQ2220
P20:S013	P20 Low Volts	YP	YQ	2221	YP2221	YQ2221
P20:S014	P20 PS Fail	YP	YQ	2222	YP2222	YQ2222
P20:S015	P20 Batt. Test	IA	IR	2223	IA2223	IR2223
P20:S016	P20 LAN Comms	EM	EN	2224	EM2224	EN2224
P21:Z001	P21:Z001	UA	UR	2225	UA2225	UR2225
P21:Z002	P21:Z002	UA	UR	2226	UA2226	UR2226

Integriti SIA DECIMAL Map. V21

P21:S001	P21 Cab Tamper	TA	TR	2227	TA2227	TR2227
P21:S002	P21 AC fail	AT	AR	2228	AT2228	AR2228
P21:S003	P21 Low Batt	YT	YR	2229	YT2229	YR2229
P21:S004	P21 Batt Fail	YP	YQ	2230	YP2230	YQ2230
P21:S005	P21 DET Fuse	YP	YQ	2231	YP2231	YQ2231
P21:S006	P21 LAN Fuse	YP	YQ	2232	YP2232	YQ2232
P21:S007	P21 Batt. Fuse	YP	YQ	2233	YP2233	YQ2233
P21:S008	P21 Aux2 Fuse	YP	YQ	2234	YP2234	YQ2234
P21:S009	P21 Aux2 Tamper/LAN Fault	YA	YH	2235	YA2235	YH2235
P21:S010	P21 Det OverCurr	YI	YJ	2236	YI2236	YJ2236
P21:S011	P21 Chg OverCurr	YI	YJ	2237	YI2237	YJ2237
P21:S012	P21 Over Volts	YP	YQ	2238	YP2238	YQ2238
P21:S013	P21 Low Volts	YP	YQ	2239	YP2239	YQ2239
P21:S014	P21 PS Fail	YP	YQ	2240	YP2240	YQ2240
P21:S015	P21 Batt. Test	IA	IR	2241	IA2241	IR2241
P21:S016	P21 LAN Comms	EM	EN	2242	EM2242	EN2242
P22:Z001	P22:Z001	UA	UR	2243	UA2243	UR2243
P22:Z002	P22:Z002	UA	UR	2244	UA2244	UR2244
P22:S001	P22 Cab Tamper	TA	TR	2245	TA2245	TR2245
P22:S002	P22 AC fail	AT	AR	2246	AT2246	AR2246
P22:S003	P22 Low Batt	YT	YR	2247	YT2247	YR2247
P22:S004	P22 Batt Fail	YP	YQ	2248	YP2248	YQ2248
P22:S005	P22 DET Fuse	YP	YQ	2249	YP2249	YQ2249
P22:S006	P22 LAN Fuse	YP	YQ	2250	YP2250	YQ2250
P22:S007	P22 Batt. Fuse	YP	YQ	2251	YP2251	YQ2251
P22:S008	P22 Aux2 Fuse	YP	YQ	2252	YP2252	YQ2252
P22:S009	P22 Aux2 Tamper/LAN Fault	YA	YH	2253	YA2253	YH2253
P22:S010	P22 Det OverCurr	YI	YJ	2254	YI2254	YJ2254
P22:S011	P22 Chg OverCurr	YI	YJ	2255	YI2255	YJ2255
P22:S012	P22 Over Volts	YP	YQ	2256	YP2256	YQ2256
P22:S013	P22 Low Volts	YP	YQ	2257	YP2257	YQ2257
P22:S014	P22 PS Fail	YP	YQ	2258	YP2258	YQ2258
P22:S015	P22 Batt. Test	IA	IR	2259	IA2259	IR2259
P22:S016	P22 LAN Comms	EM	EN	2260	EM2260	EN2260
P23:Z001	P23:Z001	UA	UR	2261	UA2261	UR2261
P23:Z002	P23:Z002	UA	UR	2262	UA2262	UR2262
P23:S001	P23 Cab Tamper	TA	TR	2263	TA2263	TR2263
P23:S002	P23 AC fail	AT	AR	2264	AT2264	AR2264
P23:S003	P23 Low Batt	YT	YR	2265	YT2265	YR2265
P23:S004	P23 Batt Fail	YP	YQ	2266	YP2266	YQ2266
P23:S005	P23 DET Fuse	YP	YQ	2267	YP2267	YQ2267
P23:S006	P23 LAN Fuse	YP	YQ	2268	YP2268	YQ2268
P23:S007	P23 Batt. Fuse	YP	YQ	2269	YP2269	YQ2269
P23:S008	P23 Aux2 Fuse	YP	YQ	2270	YP2270	YQ2270
P23:S009	P23 Aux2 Tamper/LAN Fault	YA	YH	2271	YA2271	YH2271
P23:S010	P23 Det OverCurr	YI	YJ	2272	YI2272	YJ2272
P23:S011	P23 Chg OverCurr	YI	YJ	2273	YI2273	YJ2273
P23:S012	P23 Over Volts	YP	YQ	2274	YP2274	YQ2274
P23:S013	P23 Low Volts	YP	YQ	2275	YP2275	YQ2275
P23:S014	P23 PS Fail	YP	YQ	2276	YP2276	YQ2276
P23:S015	P23 Batt. Test	IA	IR	2277	IA2277	IR2277
P23:S016	P23 LAN Comms	EM	EN	2278	EM2278	EN2278
P24:Z001	P24:Z001	UA	UR	2279	UA2279	UR2279
P24:Z002	P24:Z002	UA	UR	2280	UA2280	UR2280
P24:S001	P24 Cab Tamper	TA	TR	2281	TA2281	TR2281
P24:S002	P24 AC fail	AT	AR	2282	AT2282	AR2282
P24:S003	P24 Low Batt	YT	YR	2283	YT2283	YR2283
P24:S004	P24 Batt Fail	YP	YQ	2284	YP2284	YQ2284
P24:S005	P24 DET Fuse	YP	YQ	2285	YP2285	YQ2285
P24:S006	P24 LAN Fuse	YP	YQ	2286	YP2286	YQ2286
P24:S007	P24 Batt. Fuse	YP	YQ	2287	YP2287	YQ2287
P24:S008	P24 Aux2 Fuse	YP	YQ	2288	YP2288	YQ2288
P24:S009	P24 Aux2 Tamper/LAN Fault	YA	YH	2289	YA2289	YH2289
P24:S010	P24 Det OverCurr	YI	YJ	2290	YI2290	YJ2290
P24:S011	P24 Chg OverCurr	YI	YJ	2291	YI2291	YJ2291
P24:S012	P24 Over Volts	YP	YQ	2292	YP2292	YQ2292
P24:S013	P24 Low Volts	YP	YQ	2293	YP2293	YQ2293
P24:S014	P24 PS Fail	YP	YQ	2294	YP2294	YQ2294
P24:S015	P24 Batt. Test	IA	IR	2295	IA2295	IR2295
P24:S016	P24 LAN Comms	EM	EN	2296	EM2296	EN2296

Integriti SIA DECIMAL Map. V21

P25:Z001	P25:Z001	UA	UR	2297	UA2297	UR2297
P25:Z002	P25:Z002	UA	UR	2298	UA2298	UR2298
P25:S001	P25 Cab Tamper	TA	TR	2299	TA2299	TR2299
P25:S002	P25 AC fail	AT	AR	2300	AT2300	AR2300
P25:S003	P25 Low Batt	YT	YR	2301	YT2301	YR2301
P25:S004	P25 Batt Fail	YP	YQ	2302	YP2302	YQ2302
P25:S005	P25 DET Fuse	YP	YQ	2303	YP2303	YQ2303
P25:S006	P25 LAN Fuse	YP	YQ	2304	YP2304	YQ2304
P25:S007	P25 Batt. Fuse	YP	YQ	2305	YP2305	YQ2305
P25:S008	P25 Aux2 Fuse	YP	YQ	2306	YP2306	YQ2306
P25:S009	P25 Aux2 Tamper/LAN Fault	YA	YH	2307	YA2307	YH2307
P25:S010	P25 Det OverCurr	YI	YJ	2308	YI2308	YJ2308
P25:S011	P25 Chg OverCurr	YI	YJ	2309	YI2309	YJ2309
P25:S012	P25 Over Volts	YP	YQ	2310	YP2310	YQ2310
P25:S013	P25 Low Volts	YP	YQ	2311	YP2311	YQ2311
P25:S014	P25 PS Fail	YP	YQ	2312	YP2312	YQ2312
P25:S015	P25 Batt. Test	IA	IR	2313	IA2313	IR2313
P25:S016	P25 LAN Comms	EM	EN	2314	EM2314	EN2314
P26:Z001	P26:Z001	UA	UR	2315	UA2315	UR2315
P26:Z002	P26:Z002	UA	UR	2316	UA2316	UR2316
P26:S001	P26 Cab Tamper	TA	TR	2317	TA2317	TR2317
P26:S002	P26 AC fail	AT	AR	2318	AT2318	AR2318
P26:S003	P26 Low Batt	YT	YR	2319	YT2319	YR2319
P26:S004	P26 Batt Fail	YP	YQ	2320	YP2320	YQ2320
P26:S005	P26 DET Fuse	YP	YQ	2321	YP2321	YQ2321
P26:S006	P26 LAN Fuse	YP	YQ	2322	YP2322	YQ2322
P26:S007	P26 Batt. Fuse	YP	YQ	2323	YP2323	YQ2323
P26:S008	P26 Aux2 Fuse	YP	YQ	2324	YP2324	YQ2324
P26:S009	P26 Aux2 Tamper/LAN Fault	YA	YH	2325	YA2325	YH2325
P26:S010	P26 Det OverCurr	YI	YJ	2326	YI2326	YJ2326
P26:S011	P26 Chg OverCurr	YI	YJ	2327	YI2327	YJ2327
P26:S012	P26 Over Volts	YP	YQ	2328	YP2328	YQ2328
P26:S013	P26 Low Volts	YP	YQ	2329	YP2329	YQ2329
P26:S014	P26 PS Fail	YP	YQ	2330	YP2330	YQ2330
P26:S015	P26 Batt. Test	IA	IR	2331	IA2331	IR2331
P26:S016	P26 LAN Comms	EM	EN	2332	EM2332	EN2332
P27:Z001	P27:Z001	UA	UR	2333	UA2333	UR2333
P27:Z002	P27:Z002	UA	UR	2334	UA2334	UR2334
P27:S001	P27 Cab Tamper	TA	TR	2335	TA2335	TR2335
P27:S002	P27 AC fail	AT	AR	2336	AT2336	AR2336
P27:S003	P27 Low Batt	YT	YR	2337	YT2337	YR2337
P27:S004	P27 Batt Fail	YP	YQ	2338	YP2338	YQ2338
P27:S005	P27 DET Fuse	YP	YQ	2339	YP2339	YQ2339
P27:S006	P27 LAN Fuse	YP	YQ	2340	YP2340	YQ2340
P27:S007	P27 Batt. Fuse	YP	YQ	2341	YP2341	YQ2341
P27:S008	P27 Aux2 Fuse	YP	YQ	2342	YP2342	YQ2342
P27:S009	P27 Aux2 Tamper/LAN Fault	YA	YH	2343	YA2343	YH2343
P27:S010	P27 Det OverCurr	YI	YJ	2344	YI2344	YJ2344
P27:S011	P27 Chg OverCurr	YI	YJ	2345	YI2345	YJ2345
P27:S012	P27 Over Volts	YP	YQ	2346	YP2346	YQ2346
P27:S013	P27 Low Volts	YP	YQ	2347	YP2347	YQ2347
P27:S014	P27 PS Fail	YP	YQ	2348	YP2348	YQ2348
P27:S015	P27 Batt. Test	IA	IR	2349	IA2349	IR2349
P27:S016	P27 LAN Comms	EM	EN	2350	EM2350	EN2350
P28:Z001	P28:Z001	UA	UR	2351	UA2351	UR2351
P28:Z002	P28:Z002	UA	UR	2352	UA2352	UR2352
P28:S001	P28 Cab Tamper	TA	TR	2353	TA2353	TR2353
P28:S002	P28 AC fail	AT	AR	2354	AT2354	AR2354
P28:S003	P28 Low Batt	YT	YR	2355	YT2355	YR2355
P28:S004	P28 Batt Fail	YP	YQ	2356	YP2356	YQ2356
P28:S005	P28 DET Fuse	YP	YQ	2357	YP2357	YQ2357
P28:S006	P28 LAN Fuse	YP	YQ	2358	YP2358	YQ2358
P28:S007	P28 Batt. Fuse	YP	YQ	2359	YP2359	YQ2359
P28:S008	P28 Aux2 Fuse	YP	YQ	2360	YP2360	YQ2360
P28:S009	P28 Aux2 Tamper/LAN Fault	YA	YH	2361	YA2361	YH2361
P28:S010	P28 Det OverCurr	YI	YJ	2362	YI2362	YJ2362
P28:S011	P28 Chg OverCurr	YI	YJ	2363	YI2363	YJ2363
P28:S012	P28 Over Volts	YP	YQ	2364	YP2364	YQ2364
P28:S013	P28 Low Volts	YP	YQ	2365	YP2365	YQ2365
P28:S014	P28 PS Fail	YP	YQ	2366	YP2366	YQ2366

Integriti SIA DECIMAL Map. V21

P28:S015	P28 Batt. Test	IA	IR	2367	IA2367	IR2367
P28:S016	P28 LAN Comms	EM	EN	2368	EM2368	EN2368
P29:Z001	P29:Z001	UA	UR	2369	UA2369	UR2369
P29:Z002	P29:Z002	UA	UR	2370	UA2370	UR2370
P29:S001	P29 Cab Tamper	TA	TR	2371	TA2371	TR2371
P29:S002	P29 AC fail	AT	AR	2372	AT2372	AR2372
P29:S003	P29 Low Batt	YT	YR	2373	YT2373	YR2373
P29:S004	P29 Batt Fail	YP	YQ	2374	YP2374	YQ2374
P29:S005	P29 DET Fuse	YP	YQ	2375	YP2375	YQ2375
P29:S006	P29 LAN Fuse	YP	YQ	2376	YP2376	YQ2376
P29:S007	P29 Batt. Fuse	YP	YQ	2377	YP2377	YQ2377
P29:S008	P29 Aux2 Fuse	YP	YQ	2378	YP2378	YQ2378
P29:S009	P29 Aux2 Tamper/LAN Fault	YA	YH	2379	YA2379	YH2379
P29:S010	P29 Det OverCurr	YI	YJ	2380	YI2380	YJ2380
P29:S011	P29 Chg OverCurr	YI	YJ	2381	YI2381	YJ2381
P29:S012	P29 Over Volts	YP	YQ	2382	YP2382	YQ2382
P29:S013	P29 Low Volts	YP	YQ	2383	YP2383	YQ2383
P29:S014	P29 PS Fail	YP	YQ	2384	YP2384	YQ2384
P29:S015	P29 Batt. Test	IA	IR	2385	IA2385	IR2385
P29:S016	P29 LAN Comms	EM	EN	2386	EM2386	EN2386
P30:Z001	P30:Z001	UA	UR	2387	UA2387	UR2387
P30:Z002	P30:Z002	UA	UR	2388	UA2388	UR2388
P30:S001	P30 Cab Tamper	TA	TR	2389	TA2389	TR2389
P30:S002	P30 AC fail	AT	AR	2390	AT2390	AR2390
P30:S003	P30 Low Batt	YT	YR	2391	YT2391	YR2391
P30:S004	P30 Batt Fail	YP	YQ	2392	YP2392	YQ2392
P30:S005	P30 DET Fuse	YP	YQ	2393	YP2393	YQ2393
P30:S006	P30 LAN Fuse	YP	YQ	2394	YP2394	YQ2394
P30:S007	P30 Batt. Fuse	YP	YQ	2395	YP2395	YQ2395
P30:S008	P30 Aux2 Fuse	YP	YQ	2396	YP2396	YQ2396
P30:S009	P30 Aux2 Tamper/LAN Fault	YA	YH	2397	YA2397	YH2397
P30:S010	P30 Det OverCurr	YI	YJ	2398	YI2398	YJ2398
P30:S011	P30 Chg OverCurr	YI	YJ	2399	YI2399	YJ2399
P30:S012	P30 Over Volts	YP	YQ	2400	YP2400	YQ2400
P30:S013	P30 Low Volts	YP	YQ	2401	YP2401	YQ2401
P30:S014	P30 PS Fail	YP	YQ	2402	YP2402	YQ2402
P30:S015	P30 Batt. Test	IA	IR	2403	IA2403	IR2403
P30:S016	P30 LAN Comms	EM	EN	2404	EM2404	EN2404
P31:Z001	P31:Z001	UA	UR	2405	UA2405	UR2405
P31:Z002	P31:Z002	UA	UR	2406	UA2406	UR2406
P31:S001	P31 Cab Tamper	TA	TR	2407	TA2407	TR2407
P31:S002	P31 AC fail	AT	AR	2408	AT2408	AR2408
P31:S003	P31 Low Batt	YT	YR	2409	YT2409	YR2409
P31:S004	P31 Batt Fail	YP	YQ	2410	YP2410	YQ2410
P31:S005	P31 DET Fuse	YP	YQ	2411	YP2411	YQ2411
P31:S006	P31 LAN Fuse	YP	YQ	2412	YP2412	YQ2412
P31:S007	P31 Batt. Fuse	YP	YQ	2413	YP2413	YQ2413
P31:S008	P31 Aux2 Fuse	YP	YQ	2414	YP2414	YQ2414
P31:S009	P31 Aux2 Tamper/LAN Fault	YA	YH	2415	YA2415	YH2415
P31:S010	P31 Det OverCurr	YI	YJ	2416	YI2416	YJ2416
P31:S011	P31 Chg OverCurr	YI	YJ	2417	YI2417	YJ2417
P31:S012	P31 Over Volts	YP	YQ	2418	YP2418	YQ2418
P31:S013	P31 Low Volts	YP	YQ	2419	YP2419	YQ2419
P31:S014	P31 PS Fail	YP	YQ	2420	YP2420	YQ2420
P31:S015	P31 Batt. Test	IA	IR	2421	IA2421	IR2421
P31:S016	P31 LAN Comms	EM	EN	2422	EM2422	EN2422
P32:Z001	P32:Z001	UA	UR	2423	UA2423	UR2423
P32:Z002	P32:Z002	UA	UR	2424	UA2424	UR2424
P32:S001	P32 Cab Tamper	TA	TR	2425	TA2425	TR2425
P32:S002	P32 AC fail	AT	AR	2426	AT2426	AR2426
P32:S003	P32 Low Batt	YT	YR	2427	YT2427	YR2427
P32:S004	P32 Batt Fail	YP	YQ	2428	YP2428	YQ2428
P32:S005	P32 DET Fuse	YP	YQ	2429	YP2429	YQ2429
P32:S006	P32 LAN Fuse	YP	YQ	2430	YP2430	YQ2430
P32:S007	P32 Batt. Fuse	YP	YQ	2431	YP2431	YQ2431
P32:S008	P32 Aux2 Fuse	YP	YQ	2432	YP2432	YQ2432
P32:S009	P32 Aux2 Tamper/LAN Fault	YA	YH	2433	YA2433	YH2433
P32:S010	P32 Det OverCurr	YI	YJ	2434	YI2434	YJ2434
P32:S011	P32 Chg OverCurr	YI	YJ	2435	YI2435	YJ2435
P32:S012	P32 Over Volts	YP	YQ	2436	YP2436	YQ2436

Integriti SIA DECIMAL Map. V21

P32:S013	P32 Low Volts	YP	YQ	2437	YP2437	YQ2437
P32:S014	P32 PS Fail	YP	YQ	2438	YP2438	YQ2438
P32:S015	P32 Batt. Test	IA	IR	2439	IA2439	IR2439
P32:S016	P32 LAN Comms	EM	EN	2440	EM2440	EN2440
P33:Z001	P33:Z001	UA	UR	9999	UA9999	UR9999
P33:Z002	P33:Z002	UA	UR	9999	UA9999	UR9999
P33:S001	P33 Cab Tamper	TA	TR	9999	TA9999	TR9999
P33:S002	P33 AC fail	AT	AR	9999	AT9999	AR9999
P33:S003	P33 Low Batt	YT	YR	9999	YT9999	YR9999
P33:S004	P33 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P33:S005	P33 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P33:S006	P33 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P33:S007	P33 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P33:S008	P33 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P33:S009	P33 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P33:S010	P33 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P33:S011	P33 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P33:S012	P33 Over Volts	YP	YQ	9999	YP9999	YQ9999
P33:S013	P33 Low Volts	YP	YQ	9999	YP9999	YQ9999
P33:S014	P33 PS Fail	YP	YQ	9999	YP9999	YQ9999
P33:S015	P33 Batt. Test	IA	IR	9999	IA9999	IR9999
P33:S016	P33 LAN Comms	EM	EN	9999	EM9999	EN9999
P34:Z001	P34:Z001	UA	UR	9999	UA9999	UR9999
P34:Z002	P34:Z002	UA	UR	9999	UA9999	UR9999
P34:S001	P34 Cab Tamper	TA	TR	9999	TA9999	TR9999
P34:S002	P34 AC fail	AT	AR	9999	AT9999	AR9999
P34:S003	P34 Low Batt	YT	YR	9999	YT9999	YR9999
P34:S004	P34 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P34:S005	P34 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P34:S006	P34 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P34:S007	P34 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P34:S008	P34 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P34:S009	P34 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P34:S010	P34 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P34:S011	P34 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P34:S012	P34 Over Volts	YP	YQ	9999	YP9999	YQ9999
P34:S013	P34 Low Volts	YP	YQ	9999	YP9999	YQ9999
P34:S014	P34 PS Fail	YP	YQ	9999	YP9999	YQ9999
P34:S015	P34 Batt. Test	IA	IR	9999	IA9999	IR9999
P34:S016	P34 LAN Comms	EM	EN	9999	EM9999	EN9999
P35:Z001	P35:Z001	UA	UR	9999	UA9999	UR9999
P35:Z002	P35:Z002	UA	UR	9999	UA9999	UR9999
P35:S001	P35 Cab Tamper	TA	TR	9999	TA9999	TR9999
P35:S002	P35 AC fail	AT	AR	9999	AT9999	AR9999
P35:S003	P35 Low Batt	YT	YR	9999	YT9999	YR9999
P35:S004	P35 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P35:S005	P35 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P35:S006	P35 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P35:S007	P35 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P35:S008	P35 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P35:S009	P35 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P35:S010	P35 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P35:S011	P35 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P35:S012	P35 Over Volts	YP	YQ	9999	YP9999	YQ9999
P35:S013	P35 Low Volts	YP	YQ	9999	YP9999	YQ9999
P35:S014	P35 PS Fail	YP	YQ	9999	YP9999	YQ9999
P35:S015	P35 Batt. Test	IA	IR	9999	IA9999	IR9999
P35:S016	P35 LAN Comms	EM	EN	9999	EM9999	EN9999
P36:Z001	P36:Z001	UA	UR	9999	UA9999	UR9999
P36:Z002	P36:Z002	UA	UR	9999	UA9999	UR9999
P36:S001	P36 Cab Tamper	TA	TR	9999	TA9999	TR9999
P36:S002	P36 AC fail	AT	AR	9999	AT9999	AR9999
P36:S003	P36 Low Batt	YT	YR	9999	YT9999	YR9999
P36:S004	P36 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P36:S005	P36 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P36:S006	P36 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P36:S007	P36 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P36:S008	P36 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P36:S009	P36 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P36:S010	P36 Det OverCurr	YI	YJ	9999	YI9999	YJ9999

Integriti SIA DECIMAL Map. V21

P36:S011	P36 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P36:S012	P36 Over Volts	YP	YQ	9999	YP9999	YQ9999
P36:S013	P36 Low Volts	YP	YQ	9999	YP9999	YQ9999
P36:S014	P36 PS Fail	YP	YQ	9999	YP9999	YQ9999
P36:S015	P36 Batt. Test	IA	IR	9999	IA9999	IR9999
P36:S016	P36 LAN Comms	EM	EN	9999	EM9999	EN9999
P37:Z001	P37:Z001	UA	UR	9999	UA9999	UR9999
P37:Z002	P37:Z002	UA	UR	9999	UA9999	UR9999
P37:S001	P37 Cab Tamper	TA	TR	9999	TA9999	TR9999
P37:S002	P37 AC fail	AT	AR	9999	AT9999	AR9999
P37:S003	P37 Low Batt	YT	YR	9999	YT9999	YR9999
P37:S004	P37 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P37:S005	P37 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P37:S006	P37 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P37:S007	P37 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P37:S008	P37 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P37:S009	P37 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P37:S010	P37 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P37:S011	P37 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P37:S012	P37 Over Volts	YP	YQ	9999	YP9999	YQ9999
P37:S013	P37 Low Volts	YP	YQ	9999	YP9999	YQ9999
P37:S014	P37 PS Fail	YP	YQ	9999	YP9999	YQ9999
P37:S015	P37 Batt. Test	IA	IR	9999	IA9999	IR9999
P37:S016	P37 LAN Comms	EM	EN	9999	EM9999	EN9999
P38:Z001	P38:Z001	UA	UR	9999	UA9999	UR9999
P38:Z002	P38:Z002	UA	UR	9999	UA9999	UR9999
P38:S001	P38 Cab Tamper	TA	TR	9999	TA9999	TR9999
P38:S002	P38 AC fail	AT	AR	9999	AT9999	AR9999
P38:S003	P38 Low Batt	YT	YR	9999	YT9999	YR9999
P38:S004	P38 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P38:S005	P38 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P38:S006	P38 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P38:S007	P38 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P38:S008	P38 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P38:S009	P38 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P38:S010	P38 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P38:S011	P38 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P38:S012	P38 Over Volts	YP	YQ	9999	YP9999	YQ9999
P38:S013	P38 Low Volts	YP	YQ	9999	YP9999	YQ9999
P38:S014	P38 PS Fail	YP	YQ	9999	YP9999	YQ9999
P38:S015	P38 Batt. Test	IA	IR	9999	IA9999	IR9999
P38:S016	P38 LAN Comms	EM	EN	9999	EM9999	EN9999
P39:Z001	P39:Z001	UA	UR	9999	UA9999	UR9999
P39:Z002	P39:Z002	UA	UR	9999	UA9999	UR9999
P39:S001	P39 Cab Tamper	TA	TR	9999	TA9999	TR9999
P39:S002	P39 AC fail	AT	AR	9999	AT9999	AR9999
P39:S003	P39 Low Batt	YT	YR	9999	YT9999	YR9999
P39:S004	P39 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P39:S005	P39 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P39:S006	P39 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P39:S007	P39 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P39:S008	P39 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P39:S009	P39 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P39:S010	P39 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P39:S011	P39 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P39:S012	P39 Over Volts	YP	YQ	9999	YP9999	YQ9999
P39:S013	P39 Low Volts	YP	YQ	9999	YP9999	YQ9999
P39:S014	P39 PS Fail	YP	YQ	9999	YP9999	YQ9999
P39:S015	P39 Batt. Test	IA	IR	9999	IA9999	IR9999
P39:S016	P39 LAN Comms	EM	EN	9999	EM9999	EN9999
P40:Z001	P40:Z001	UA	UR	9999	UA9999	UR9999
P40:Z002	P40:Z002	UA	UR	9999	UA9999	UR9999
P40:S001	P40 Cab Tamper	TA	TR	9999	TA9999	TR9999
P40:S002	P40 AC fail	AT	AR	9999	AT9999	AR9999
P40:S003	P40 Low Batt	YT	YR	9999	YT9999	YR9999
P40:S004	P40 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P40:S005	P40 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P40:S006	P40 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P40:S007	P40 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P40:S008	P40 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

P40:S009	P40 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P40:S010	P40 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P40:S011	P40 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P40:S012	P40 Over Volts	YP	YQ	9999	YP9999	YQ9999
P40:S013	P40 Low Volts	YP	YQ	9999	YP9999	YQ9999
P40:S014	P40 PS Fail	YP	YQ	9999	YP9999	YQ9999
P40:S015	P40 Batt. Test	IA	IR	9999	IA9999	IR9999
P40:S016	P40 LAN Comms	EM	EN	9999	EM9999	EN9999
P41:Z001	P41:Z001	UA	UR	9999	UA9999	UR9999
P41:Z002	P41:Z002	UA	UR	9999	UA9999	UR9999
P41:S001	P41 Cab Tamper	TA	TR	9999	TA9999	TR9999
P41:S002	P41 AC fail	AT	AR	9999	AT9999	AR9999
P41:S003	P41 Low Batt	YT	YR	9999	YT9999	YR9999
P41:S004	P41 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P41:S005	P41 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P41:S006	P41 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P41:S007	P41 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P41:S008	P41 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P41:S009	P41 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P41:S010	P41 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P41:S011	P41 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P41:S012	P41 Over Volts	YP	YQ	9999	YP9999	YQ9999
P41:S013	P41 Low Volts	YP	YQ	9999	YP9999	YQ9999
P41:S014	P41 PS Fail	YP	YQ	9999	YP9999	YQ9999
P41:S015	P41 Batt. Test	IA	IR	9999	IA9999	IR9999
P41:S016	P41 LAN Comms	EM	EN	9999	EM9999	EN9999
P42:Z001	P42:Z001	UA	UR	9999	UA9999	UR9999
P42:Z002	P42:Z002	UA	UR	9999	UA9999	UR9999
P42:S001	P42 Cab Tamper	TA	TR	9999	TA9999	TR9999
P42:S002	P42 AC fail	AT	AR	9999	AT9999	AR9999
P42:S003	P42 Low Batt	YT	YR	9999	YT9999	YR9999
P42:S004	P42 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P42:S005	P42 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P42:S006	P42 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P42:S007	P42 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P42:S008	P42 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P42:S009	P42 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P42:S010	P42 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P42:S011	P42 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P42:S012	P42 Over Volts	YP	YQ	9999	YP9999	YQ9999
P42:S013	P42 Low Volts	YP	YQ	9999	YP9999	YQ9999
P42:S014	P42 PS Fail	YP	YQ	9999	YP9999	YQ9999
P42:S015	P42 Batt. Test	IA	IR	9999	IA9999	IR9999
P42:S016	P42 LAN Comms	EM	EN	9999	EM9999	EN9999
P43:Z001	P43:Z001	UA	UR	9999	UA9999	UR9999
P43:Z002	P43:Z002	UA	UR	9999	UA9999	UR9999
P43:S001	P43 Cab Tamper	TA	TR	9999	TA9999	TR9999
P43:S002	P43 AC fail	AT	AR	9999	AT9999	AR9999
P43:S003	P43 Low Batt	YT	YR	9999	YT9999	YR9999
P43:S004	P43 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P43:S005	P43 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P43:S006	P43 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P43:S007	P43 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P43:S008	P43 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P43:S009	P43 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P43:S010	P43 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P43:S011	P43 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P43:S012	P43 Over Volts	YP	YQ	9999	YP9999	YQ9999
P43:S013	P43 Low Volts	YP	YQ	9999	YP9999	YQ9999
P43:S014	P43 PS Fail	YP	YQ	9999	YP9999	YQ9999
P43:S015	P43 Batt. Test	IA	IR	9999	IA9999	IR9999
P43:S016	P43 LAN Comms	EM	EN	9999	EM9999	EN9999
P44:Z001	P44:Z001	UA	UR	9999	UA9999	UR9999
P44:Z002	P44:Z002	UA	UR	9999	UA9999	UR9999
P44:S001	P44 Cab Tamper	TA	TR	9999	TA9999	TR9999
P44:S002	P44 AC fail	AT	AR	9999	AT9999	AR9999
P44:S003	P44 Low Batt	YT	YR	9999	YT9999	YR9999
P44:S004	P44 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P44:S005	P44 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P44:S006	P44 LAN Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

P44:S007	P44 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P44:S008	P44 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P44:S009	P44 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P44:S010	P44 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P44:S011	P44 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P44:S012	P44 Over Volts	YP	YQ	9999	YP9999	YQ9999
P44:S013	P44 Low Volts	YP	YQ	9999	YP9999	YQ9999
P44:S014	P44 PS Fail	YP	YQ	9999	YP9999	YQ9999
P44:S015	P44 Batt. Test	IA	IR	9999	IA9999	IR9999
P44:S016	P44 LAN Comms	EM	EN	9999	EM9999	EN9999
P45:Z001	P45:Z001	UA	UR	9999	UA9999	UR9999
P45:Z002	P45:Z002	UA	UR	9999	UA9999	UR9999
P45:S001	P45 Cab Tamper	TA	TR	9999	TA9999	TR9999
P45:S002	P45 AC fail	AT	AR	9999	AT9999	AR9999
P45:S003	P45 Low Batt	YT	YR	9999	YT9999	YR9999
P45:S004	P45 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P45:S005	P45 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P45:S006	P45 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P45:S007	P45 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P45:S008	P45 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P45:S009	P45 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P45:S010	P45 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P45:S011	P45 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P45:S012	P45 Over Volts	YP	YQ	9999	YP9999	YQ9999
P45:S013	P45 Low Volts	YP	YQ	9999	YP9999	YQ9999
P45:S014	P45 PS Fail	YP	YQ	9999	YP9999	YQ9999
P45:S015	P45 Batt. Test	IA	IR	9999	IA9999	IR9999
P45:S016	P45 LAN Comms	EM	EN	9999	EM9999	EN9999
P46:Z001	P46:Z001	UA	UR	9999	UA9999	UR9999
P46:Z002	P46:Z002	UA	UR	9999	UA9999	UR9999
P46:S001	P46 Cab Tamper	TA	TR	9999	TA9999	TR9999
P46:S002	P46 AC fail	AT	AR	9999	AT9999	AR9999
P46:S003	P46 Low Batt	YT	YR	9999	YT9999	YR9999
P46:S004	P46 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P46:S005	P46 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P46:S006	P46 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P46:S007	P46 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P46:S008	P46 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P46:S009	P46 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P46:S010	P46 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P46:S011	P46 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P46:S012	P46 Over Volts	YP	YQ	9999	YP9999	YQ9999
P46:S013	P46 Low Volts	YP	YQ	9999	YP9999	YQ9999
P46:S014	P46 PS Fail	YP	YQ	9999	YP9999	YQ9999
P46:S015	P46 Batt. Test	IA	IR	9999	IA9999	IR9999
P46:S016	P46 LAN Comms	EM	EN	9999	EM9999	EN9999
P47:Z001	P47:Z001	UA	UR	9999	UA9999	UR9999
P47:Z002	P47:Z002	UA	UR	9999	UA9999	UR9999
P47:S001	P47 Cab Tamper	TA	TR	9999	TA9999	TR9999
P47:S002	P47 AC fail	AT	AR	9999	AT9999	AR9999
P47:S003	P47 Low Batt	YT	YR	9999	YT9999	YR9999
P47:S004	P47 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P47:S005	P47 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P47:S006	P47 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P47:S007	P47 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P47:S008	P47 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P47:S009	P47 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P47:S010	P47 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P47:S011	P47 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P47:S012	P47 Over Volts	YP	YQ	9999	YP9999	YQ9999
P47:S013	P47 Low Volts	YP	YQ	9999	YP9999	YQ9999
P47:S014	P47 PS Fail	YP	YQ	9999	YP9999	YQ9999
P47:S015	P47 Batt. Test	IA	IR	9999	IA9999	IR9999
P47:S016	P47 LAN Comms	EM	EN	9999	EM9999	EN9999
P48:Z001	P48:Z001	UA	UR	9999	UA9999	UR9999
P48:Z002	P48:Z002	UA	UR	9999	UA9999	UR9999
P48:S001	P48 Cab Tamper	TA	TR	9999	TA9999	TR9999
P48:S002	P48 AC fail	AT	AR	9999	AT9999	AR9999
P48:S003	P48 Low Batt	YT	YR	9999	YT9999	YR9999
P48:S004	P48 Batt Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

P48:S005	P48 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P48:S006	P48 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P48:S007	P48 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P48:S008	P48 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P48:S009	P48 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P48:S010	P48 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P48:S011	P48 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P48:S012	P48 Over Volts	YP	YQ	9999	YP9999	YQ9999
P48:S013	P48 Low Volts	YP	YQ	9999	YP9999	YQ9999
P48:S014	P48 PS Fail	YP	YQ	9999	YP9999	YQ9999
P48:S015	P48 Batt. Test	IA	IR	9999	IA9999	IR9999
P48:S016	P48 LAN Comms	EM	EN	9999	EM9999	EN9999
P49:Z001	P49:Z001	UA	UR	9999	UA9999	UR9999
P49:Z002	P49:Z002	UA	UR	9999	UA9999	UR9999
P49:S001	P49 Cab Tamper	TA	TR	9999	TA9999	TR9999
P49:S002	P49 AC fail	AT	AR	9999	AT9999	AR9999
P49:S003	P49 Low Batt	YT	YR	9999	YT9999	YR9999
P49:S004	P49 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P49:S005	P49 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P49:S006	P49 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P49:S007	P49 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P49:S008	P49 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P49:S009	P49 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P49:S010	P49 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P49:S011	P49 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P49:S012	P49 Over Volts	YP	YQ	9999	YP9999	YQ9999
P49:S013	P49 Low Volts	YP	YQ	9999	YP9999	YQ9999
P49:S014	P49 PS Fail	YP	YQ	9999	YP9999	YQ9999
P49:S015	P49 Batt. Test	IA	IR	9999	IA9999	IR9999
P49:S016	P49 LAN Comms	EM	EN	9999	EM9999	EN9999
P50:Z001	P50:Z001	UA	UR	9999	UA9999	UR9999
P50:Z002	P50:Z002	UA	UR	9999	UA9999	UR9999
P50:S001	P50 Cab Tamper	TA	TR	9999	TA9999	TR9999
P50:S002	P50 AC fail	AT	AR	9999	AT9999	AR9999
P50:S003	P50 Low Batt	YT	YR	9999	YT9999	YR9999
P50:S004	P50 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P50:S005	P50 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P50:S006	P50 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P50:S007	P50 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P50:S008	P50 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P50:S009	P50 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P50:S010	P50 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P50:S011	P50 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P50:S012	P50 Over Volts	YP	YQ	9999	YP9999	YQ9999
P50:S013	P50 Low Volts	YP	YQ	9999	YP9999	YQ9999
P50:S014	P50 PS Fail	YP	YQ	9999	YP9999	YQ9999
P50:S015	P50 Batt. Test	IA	IR	9999	IA9999	IR9999
P50:S016	P50 LAN Comms	EM	EN	9999	EM9999	EN9999
P51:Z001	P51:Z001	UA	UR	9999	UA9999	UR9999
P51:Z002	P51:Z002	UA	UR	9999	UA9999	UR9999
P51:S001	P51 Cab Tamper	TA	TR	9999	TA9999	TR9999
P51:S002	P51 AC fail	AT	AR	9999	AT9999	AR9999
P51:S003	P51 Low Batt	YT	YR	9999	YT9999	YR9999
P51:S004	P51 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P51:S005	P51 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P51:S006	P51 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P51:S007	P51 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P51:S008	P51 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P51:S009	P51 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P51:S010	P51 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P51:S011	P51 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P51:S012	P51 Over Volts	YP	YQ	9999	YP9999	YQ9999
P51:S013	P51 Low Volts	YP	YQ	9999	YP9999	YQ9999
P51:S014	P51 PS Fail	YP	YQ	9999	YP9999	YQ9999
P51:S015	P51 Batt. Test	IA	IR	9999	IA9999	IR9999
P51:S016	P51 LAN Comms	EM	EN	9999	EM9999	EN9999
P52:Z001	P52:Z001	UA	UR	9999	UA9999	UR9999
P52:Z002	P52:Z002	UA	UR	9999	UA9999	UR9999
P52:S001	P52 Cab Tamper	TA	TR	9999	TA9999	TR9999
P52:S002	P52 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

P52:S003	P52 Low Batt	YT	YR	9999	YT9999	YR9999
P52:S004	P52 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P52:S005	P52 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P52:S006	P52 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P52:S007	P52 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P52:S008	P52 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P52:S009	P52 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P52:S010	P52 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P52:S011	P52 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P52:S012	P52 Over Volts	YP	YQ	9999	YP9999	YQ9999
P52:S013	P52 Low Volts	YP	YQ	9999	YP9999	YQ9999
P52:S014	P52 PS Fail	YP	YQ	9999	YP9999	YQ9999
P52:S015	P52 Batt. Test	IA	IR	9999	IA9999	IR9999
P52:S016	P52 LAN Comms	EM	EN	9999	EM9999	EN9999
P53:Z001	P53:Z001	UA	UR	9999	UA9999	UR9999
P53:Z002	P53:Z002	UA	UR	9999	UA9999	UR9999
P53:S001	P53 Cab Tamper	TA	TR	9999	TA9999	TR9999
P53:S002	P53 AC fail	AT	AR	9999	AT9999	AR9999
P53:S003	P53 Low Batt	YT	YR	9999	YT9999	YR9999
P53:S004	P53 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P53:S005	P53 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P53:S006	P53 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P53:S007	P53 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P53:S008	P53 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P53:S009	P53 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P53:S010	P53 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P53:S011	P53 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P53:S012	P53 Over Volts	YP	YQ	9999	YP9999	YQ9999
P53:S013	P53 Low Volts	YP	YQ	9999	YP9999	YQ9999
P53:S014	P53 PS Fail	YP	YQ	9999	YP9999	YQ9999
P53:S015	P53 Batt. Test	IA	IR	9999	IA9999	IR9999
P53:S016	P53 LAN Comms	EM	EN	9999	EM9999	EN9999
P54:Z001	P54:Z001	UA	UR	9999	UA9999	UR9999
P54:Z002	P54:Z002	UA	UR	9999	UA9999	UR9999
P54:S001	P54 Cab Tamper	TA	TR	9999	TA9999	TR9999
P54:S002	P54 AC fail	AT	AR	9999	AT9999	AR9999
P54:S003	P54 Low Batt	YT	YR	9999	YT9999	YR9999
P54:S004	P54 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P54:S005	P54 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P54:S006	P54 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P54:S007	P54 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P54:S008	P54 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P54:S009	P54 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P54:S010	P54 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P54:S011	P54 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P54:S012	P54 Over Volts	YP	YQ	9999	YP9999	YQ9999
P54:S013	P54 Low Volts	YP	YQ	9999	YP9999	YQ9999
P54:S014	P54 PS Fail	YP	YQ	9999	YP9999	YQ9999
P54:S015	P54 Batt. Test	IA	IR	9999	IA9999	IR9999
P54:S016	P54 LAN Comms	EM	EN	9999	EM9999	EN9999
P55:Z001	P55:Z001	UA	UR	9999	UA9999	UR9999
P55:Z002	P55:Z002	UA	UR	9999	UA9999	UR9999
P55:S001	P55 Cab Tamper	TA	TR	9999	TA9999	TR9999
P55:S002	P55 AC fail	AT	AR	9999	AT9999	AR9999
P55:S003	P55 Low Batt	YT	YR	9999	YT9999	YR9999
P55:S004	P55 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P55:S005	P55 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P55:S006	P55 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P55:S007	P55 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P55:S008	P55 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P55:S009	P55 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P55:S010	P55 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P55:S011	P55 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P55:S012	P55 Over Volts	YP	YQ	9999	YP9999	YQ9999
P55:S013	P55 Low Volts	YP	YQ	9999	YP9999	YQ9999
P55:S014	P55 PS Fail	YP	YQ	9999	YP9999	YQ9999
P55:S015	P55 Batt. Test	IA	IR	9999	IA9999	IR9999
P55:S016	P55 LAN Comms	EM	EN	9999	EM9999	EN9999
P56:Z001	P56:Z001	UA	UR	9999	UA9999	UR9999
P56:Z002	P56:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

P56:S001	P56 Cab Tamper	TA	TR	9999	TA9999	TR9999
P56:S002	P56 AC fail	AT	AR	9999	AT9999	AR9999
P56:S003	P56 Low Batt	YT	YR	9999	YT9999	YR9999
P56:S004	P56 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P56:S005	P56 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P56:S006	P56 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P56:S007	P56 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P56:S008	P56 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P56:S009	P56 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P56:S010	P56 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P56:S011	P56 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P56:S012	P56 Over Volts	YP	YQ	9999	YP9999	YQ9999
P56:S013	P56 Low Volts	YP	YQ	9999	YP9999	YQ9999
P56:S014	P56 PS Fail	YP	YQ	9999	YP9999	YQ9999
P56:S015	P56 Batt. Test	IA	IR	9999	IA9999	IR9999
P56:S016	P56 LAN Comms	EM	EN	9999	EM9999	EN9999
P57:Z001	P57:Z001	UA	UR	9999	UA9999	UR9999
P57:Z002	P57:Z002	UA	UR	9999	UA9999	UR9999
P57:S001	P57 Cab Tamper	TA	TR	9999	TA9999	TR9999
P57:S002	P57 AC fail	AT	AR	9999	AT9999	AR9999
P57:S003	P57 Low Batt	YT	YR	9999	YT9999	YR9999
P57:S004	P57 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P57:S005	P57 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P57:S006	P57 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P57:S007	P57 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P57:S008	P57 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P57:S009	P57 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P57:S010	P57 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P57:S011	P57 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P57:S012	P57 Over Volts	YP	YQ	9999	YP9999	YQ9999
P57:S013	P57 Low Volts	YP	YQ	9999	YP9999	YQ9999
P57:S014	P57 PS Fail	YP	YQ	9999	YP9999	YQ9999
P57:S015	P57 Batt. Test	IA	IR	9999	IA9999	IR9999
P57:S016	P57 LAN Comms	EM	EN	9999	EM9999	EN9999
P58:Z001	P58:Z001	UA	UR	9999	UA9999	UR9999
P58:Z002	P58:Z002	UA	UR	9999	UA9999	UR9999
P58:S001	P58 Cab Tamper	TA	TR	9999	TA9999	TR9999
P58:S002	P58 AC fail	AT	AR	9999	AT9999	AR9999
P58:S003	P58 Low Batt	YT	YR	9999	YT9999	YR9999
P58:S004	P58 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P58:S005	P58 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P58:S006	P58 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P58:S007	P58 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P58:S008	P58 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P58:S009	P58 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P58:S010	P58 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P58:S011	P58 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P58:S012	P58 Over Volts	YP	YQ	9999	YP9999	YQ9999
P58:S013	P58 Low Volts	YP	YQ	9999	YP9999	YQ9999
P58:S014	P58 PS Fail	YP	YQ	9999	YP9999	YQ9999
P58:S015	P58 Batt. Test	IA	IR	9999	IA9999	IR9999
P58:S016	P58 LAN Comms	EM	EN	9999	EM9999	EN9999
P59:Z001	P59:Z001	UA	UR	9999	UA9999	UR9999
P59:Z002	P59:Z002	UA	UR	9999	UA9999	UR9999
P59:S001	P59 Cab Tamper	TA	TR	9999	TA9999	TR9999
P59:S002	P59 AC fail	AT	AR	9999	AT9999	AR9999
P59:S003	P59 Low Batt	YT	YR	9999	YT9999	YR9999
P59:S004	P59 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P59:S005	P59 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P59:S006	P59 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P59:S007	P59 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P59:S008	P59 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P59:S009	P59 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P59:S010	P59 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P59:S011	P59 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P59:S012	P59 Over Volts	YP	YQ	9999	YP9999	YQ9999
P59:S013	P59 Low Volts	YP	YQ	9999	YP9999	YQ9999
P59:S014	P59 PS Fail	YP	YQ	9999	YP9999	YQ9999
P59:S015	P59 Batt. Test	IA	IR	9999	IA9999	IR9999
P59:S016	P59 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

P60:Z001	P60:Z001	UA	UR	9999	UA9999	UR9999
P60:Z002	P60:Z002	UA	UR	9999	UA9999	UR9999
P60:S001	P60 Cab Tamper	TA	TR	9999	TA9999	TR9999
P60:S002	P60 AC fail	AT	AR	9999	AT9999	AR9999
P60:S003	P60 Low Batt	YT	YR	9999	YT9999	YR9999
P60:S004	P60 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P60:S005	P60 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P60:S006	P60 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P60:S007	P60 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P60:S008	P60 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P60:S009	P60 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P60:S010	P60 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P60:S011	P60 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P60:S012	P60 Over Volts	YP	YQ	9999	YP9999	YQ9999
P60:S013	P60 Low Volts	YP	YQ	9999	YP9999	YQ9999
P60:S014	P60 PS Fail	YP	YQ	9999	YP9999	YQ9999
P60:S015	P60 Batt. Test	IA	IR	9999	IA9999	IR9999
P60:S016	P60 LAN Comms	EM	EN	9999	EM9999	EN9999
P61:Z001	P61:Z001	UA	UR	9999	UA9999	UR9999
P61:Z002	P61:Z002	UA	UR	9999	UA9999	UR9999
P61:S001	P61 Cab Tamper	TA	TR	9999	TA9999	TR9999
P61:S002	P61 AC fail	AT	AR	9999	AT9999	AR9999
P61:S003	P61 Low Batt	YT	YR	9999	YT9999	YR9999
P61:S004	P61 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P61:S005	P61 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P61:S006	P61 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P61:S007	P61 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P61:S008	P61 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P61:S009	P61 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P61:S010	P61 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P61:S011	P61 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P61:S012	P61 Over Volts	YP	YQ	9999	YP9999	YQ9999
P61:S013	P61 Low Volts	YP	YQ	9999	YP9999	YQ9999
P61:S014	P61 PS Fail	YP	YQ	9999	YP9999	YQ9999
P61:S015	P61 Batt. Test	IA	IR	9999	IA9999	IR9999
P61:S016	P61 LAN Comms	EM	EN	9999	EM9999	EN9999
P62:Z001	P62:Z001	UA	UR	9999	UA9999	UR9999
P62:Z002	P62:Z002	UA	UR	9999	UA9999	UR9999
P62:S001	P62 Cab Tamper	TA	TR	9999	TA9999	TR9999
P62:S002	P62 AC fail	AT	AR	9999	AT9999	AR9999
P62:S003	P62 Low Batt	YT	YR	9999	YT9999	YR9999
P62:S004	P62 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P62:S005	P62 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P62:S006	P62 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P62:S007	P62 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P62:S008	P62 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P62:S009	P62 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P62:S010	P62 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P62:S011	P62 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P62:S012	P62 Over Volts	YP	YQ	9999	YP9999	YQ9999
P62:S013	P62 Low Volts	YP	YQ	9999	YP9999	YQ9999
P62:S014	P62 PS Fail	YP	YQ	9999	YP9999	YQ9999
P62:S015	P62 Batt. Test	IA	IR	9999	IA9999	IR9999
P62:S016	P62 LAN Comms	EM	EN	9999	EM9999	EN9999
P63:Z001	P63:Z001	UA	UR	9999	UA9999	UR9999
P63:Z002	P63:Z002	UA	UR	9999	UA9999	UR9999
P63:S001	P63 Cab Tamper	TA	TR	9999	TA9999	TR9999
P63:S002	P63 AC fail	AT	AR	9999	AT9999	AR9999
P63:S003	P63 Low Batt	YT	YR	9999	YT9999	YR9999
P63:S004	P63 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P63:S005	P63 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P63:S006	P63 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P63:S007	P63 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P63:S008	P63 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P63:S009	P63 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P63:S010	P63 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P63:S011	P63 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P63:S012	P63 Over Volts	YP	YQ	9999	YP9999	YQ9999
P63:S013	P63 Low Volts	YP	YQ	9999	YP9999	YQ9999
P63:S014	P63 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

P63:S015	P63 Batt. Test	IA	IR	9999	IA9999	IR9999
P63:S016	P63 LAN Comms	EM	EN	9999	EM9999	EN9999
P64:Z001	P64:Z001	UA	UR	9999	UA9999	UR9999
P64:Z002	P64:Z002	UA	UR	9999	UA9999	UR9999
P64:S001	P64 Cab Tamper	TA	TR	9999	TA9999	TR9999
P64:S002	P64 AC fail	AT	AR	9999	AT9999	AR9999
P64:S003	P64 Low Batt	YT	YR	9999	YT9999	YR9999
P64:S004	P64 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P64:S005	P64 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P64:S006	P64 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P64:S007	P64 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P64:S008	P64 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P64:S009	P64 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P64:S010	P64 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P64:S011	P64 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P64:S012	P64 Over Volts	YP	YQ	9999	YP9999	YQ9999
P64:S013	P64 Low Volts	YP	YQ	9999	YP9999	YQ9999
P64:S014	P64 PS Fail	YP	YQ	9999	YP9999	YQ9999
P64:S015	P64 Batt. Test	IA	IR	9999	IA9999	IR9999
P64:S016	P64 LAN Comms	EM	EN	9999	EM9999	EN9999
P65:Z001	P65:Z001	UA	UR	9999	UA9999	UR9999
P65:Z002	P65:Z002	UA	UR	9999	UA9999	UR9999
P65:S001	P65 Cab Tamper	TA	TR	9999	TA9999	TR9999
P65:S002	P65 AC fail	AT	AR	9999	AT9999	AR9999
P65:S003	P65 Low Batt	YT	YR	9999	YT9999	YR9999
P65:S004	P65 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P65:S005	P65 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P65:S006	P65 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P65:S007	P65 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P65:S008	P65 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P65:S009	P65 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P65:S010	P65 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P65:S011	P65 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P65:S012	P65 Over Volts	YP	YQ	9999	YP9999	YQ9999
P65:S013	P65 Low Volts	YP	YQ	9999	YP9999	YQ9999
P65:S014	P65 PS Fail	YP	YQ	9999	YP9999	YQ9999
P65:S015	P65 Batt. Test	IA	IR	9999	IA9999	IR9999
P65:S016	P65 LAN Comms	EM	EN	9999	EM9999	EN9999
P66:Z001	P66:Z001	UA	UR	9999	UA9999	UR9999
P66:Z002	P66:Z002	UA	UR	9999	UA9999	UR9999
P66:S001	P66 Cab Tamper	TA	TR	9999	TA9999	TR9999
P66:S002	P66 AC fail	AT	AR	9999	AT9999	AR9999
P66:S003	P66 Low Batt	YT	YR	9999	YT9999	YR9999
P66:S004	P66 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P66:S005	P66 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P66:S006	P66 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P66:S007	P66 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P66:S008	P66 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P66:S009	P66 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P66:S010	P66 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P66:S011	P66 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P66:S012	P66 Over Volts	YP	YQ	9999	YP9999	YQ9999
P66:S013	P66 Low Volts	YP	YQ	9999	YP9999	YQ9999
P66:S014	P66 PS Fail	YP	YQ	9999	YP9999	YQ9999
P66:S015	P66 Batt. Test	IA	IR	9999	IA9999	IR9999
P66:S016	P66 LAN Comms	EM	EN	9999	EM9999	EN9999
P67:Z001	P67:Z001	UA	UR	9999	UA9999	UR9999
P67:Z002	P67:Z002	UA	UR	9999	UA9999	UR9999
P67:S001	P67 Cab Tamper	TA	TR	9999	TA9999	TR9999
P67:S002	P67 AC fail	AT	AR	9999	AT9999	AR9999
P67:S003	P67 Low Batt	YT	YR	9999	YT9999	YR9999
P67:S004	P67 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P67:S005	P67 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P67:S006	P67 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P67:S007	P67 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P67:S008	P67 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P67:S009	P67 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P67:S010	P67 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P67:S011	P67 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P67:S012	P67 Over Volts	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

P67:S013	P67 Low Volts	YP	YQ	9999	YP9999	YQ9999
P67:S014	P67 PS Fail	YP	YQ	9999	YP9999	YQ9999
P67:S015	P67 Batt. Test	IA	IR	9999	IA9999	IR9999
P67:S016	P67 LAN Comms	EM	EN	9999	EM9999	EN9999
P68:Z001	P68:Z001	UA	UR	9999	UA9999	UR9999
P68:Z002	P68:Z002	UA	UR	9999	UA9999	UR9999
P68:S001	P68 Cab Tamper	TA	TR	9999	TA9999	TR9999
P68:S002	P68 AC fail	AT	AR	9999	AT9999	AR9999
P68:S003	P68 Low Batt	YT	YR	9999	YT9999	YR9999
P68:S004	P68 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P68:S005	P68 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P68:S006	P68 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P68:S007	P68 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P68:S008	P68 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P68:S009	P68 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P68:S010	P68 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P68:S011	P68 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P68:S012	P68 Over Volts	YP	YQ	9999	YP9999	YQ9999
P68:S013	P68 Low Volts	YP	YQ	9999	YP9999	YQ9999
P68:S014	P68 PS Fail	YP	YQ	9999	YP9999	YQ9999
P68:S015	P68 Batt. Test	IA	IR	9999	IA9999	IR9999
P68:S016	P68 LAN Comms	EM	EN	9999	EM9999	EN9999
P69:Z001	P69:Z001	UA	UR	9999	UA9999	UR9999
P69:Z002	P69:Z002	UA	UR	9999	UA9999	UR9999
P69:S001	P69 Cab Tamper	TA	TR	9999	TA9999	TR9999
P69:S002	P69 AC fail	AT	AR	9999	AT9999	AR9999
P69:S003	P69 Low Batt	YT	YR	9999	YT9999	YR9999
P69:S004	P69 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P69:S005	P69 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P69:S006	P69 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P69:S007	P69 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P69:S008	P69 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P69:S009	P69 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P69:S010	P69 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P69:S011	P69 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P69:S012	P69 Over Volts	YP	YQ	9999	YP9999	YQ9999
P69:S013	P69 Low Volts	YP	YQ	9999	YP9999	YQ9999
P69:S014	P69 PS Fail	YP	YQ	9999	YP9999	YQ9999
P69:S015	P69 Batt. Test	IA	IR	9999	IA9999	IR9999
P69:S016	P69 LAN Comms	EM	EN	9999	EM9999	EN9999
P70:Z001	P70:Z001	UA	UR	9999	UA9999	UR9999
P70:Z002	P70:Z002	UA	UR	9999	UA9999	UR9999
P70:S001	P70 Cab Tamper	TA	TR	9999	TA9999	TR9999
P70:S002	P70 AC fail	AT	AR	9999	AT9999	AR9999
P70:S003	P70 Low Batt	YT	YR	9999	YT9999	YR9999
P70:S004	P70 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P70:S005	P70 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P70:S006	P70 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P70:S007	P70 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P70:S008	P70 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P70:S009	P70 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P70:S010	P70 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P70:S011	P70 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P70:S012	P70 Over Volts	YP	YQ	9999	YP9999	YQ9999
P70:S013	P70 Low Volts	YP	YQ	9999	YP9999	YQ9999
P70:S014	P70 PS Fail	YP	YQ	9999	YP9999	YQ9999
P70:S015	P70 Batt. Test	IA	IR	9999	IA9999	IR9999
P70:S016	P70 LAN Comms	EM	EN	9999	EM9999	EN9999
P71:Z001	P71:Z001	UA	UR	9999	UA9999	UR9999
P71:Z002	P71:Z002	UA	UR	9999	UA9999	UR9999
P71:S001	P71 Cab Tamper	TA	TR	9999	TA9999	TR9999
P71:S002	P71 AC fail	AT	AR	9999	AT9999	AR9999
P71:S003	P71 Low Batt	YT	YR	9999	YT9999	YR9999
P71:S004	P71 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P71:S005	P71 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P71:S006	P71 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P71:S007	P71 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P71:S008	P71 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P71:S009	P71 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P71:S010	P71 Det OverCurr	YI	YJ	9999	YI9999	YJ9999

Integriti SIA DECIMAL Map. V21

P71:S011	P71 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P71:S012	P71 Over Volts	YP	YQ	9999	YP9999	YQ9999
P71:S013	P71 Low Volts	YP	YQ	9999	YP9999	YQ9999
P71:S014	P71 PS Fail	YP	YQ	9999	YP9999	YQ9999
P71:S015	P71 Batt. Test	IA	IR	9999	IA9999	IR9999
P71:S016	P71 LAN Comms	EM	EN	9999	EM9999	EN9999
P72:Z001	P72:Z001	UA	UR	9999	UA9999	UR9999
P72:Z002	P72:Z002	UA	UR	9999	UA9999	UR9999
P72:S001	P72 Cab Tamper	TA	TR	9999	TA9999	TR9999
P72:S002	P72 AC fail	AT	AR	9999	AT9999	AR9999
P72:S003	P72 Low Batt	YT	YR	9999	YT9999	YR9999
P72:S004	P72 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P72:S005	P72 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P72:S006	P72 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P72:S007	P72 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P72:S008	P72 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P72:S009	P72 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P72:S010	P72 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P72:S011	P72 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P72:S012	P72 Over Volts	YP	YQ	9999	YP9999	YQ9999
P72:S013	P72 Low Volts	YP	YQ	9999	YP9999	YQ9999
P72:S014	P72 PS Fail	YP	YQ	9999	YP9999	YQ9999
P72:S015	P72 Batt. Test	IA	IR	9999	IA9999	IR9999
P72:S016	P72 LAN Comms	EM	EN	9999	EM9999	EN9999
P73:Z001	P73:Z001	UA	UR	9999	UA9999	UR9999
P73:Z002	P73:Z002	UA	UR	9999	UA9999	UR9999
P73:S001	P73 Cab Tamper	TA	TR	9999	TA9999	TR9999
P73:S002	P73 AC fail	AT	AR	9999	AT9999	AR9999
P73:S003	P73 Low Batt	YT	YR	9999	YT9999	YR9999
P73:S004	P73 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P73:S005	P73 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P73:S006	P73 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P73:S007	P73 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P73:S008	P73 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P73:S009	P73 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P73:S010	P73 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P73:S011	P73 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P73:S012	P73 Over Volts	YP	YQ	9999	YP9999	YQ9999
P73:S013	P73 Low Volts	YP	YQ	9999	YP9999	YQ9999
P73:S014	P73 PS Fail	YP	YQ	9999	YP9999	YQ9999
P73:S015	P73 Batt. Test	IA	IR	9999	IA9999	IR9999
P73:S016	P73 LAN Comms	EM	EN	9999	EM9999	EN9999
P74:Z001	P74:Z001	UA	UR	9999	UA9999	UR9999
P74:Z002	P74:Z002	UA	UR	9999	UA9999	UR9999
P74:S001	P74 Cab Tamper	TA	TR	9999	TA9999	TR9999
P74:S002	P74 AC fail	AT	AR	9999	AT9999	AR9999
P74:S003	P74 Low Batt	YT	YR	9999	YT9999	YR9999
P74:S004	P74 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P74:S005	P74 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P74:S006	P74 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P74:S007	P74 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P74:S008	P74 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P74:S009	P74 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P74:S010	P74 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P74:S011	P74 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P74:S012	P74 Over Volts	YP	YQ	9999	YP9999	YQ9999
P74:S013	P74 Low Volts	YP	YQ	9999	YP9999	YQ9999
P74:S014	P74 PS Fail	YP	YQ	9999	YP9999	YQ9999
P74:S015	P74 Batt. Test	IA	IR	9999	IA9999	IR9999
P74:S016	P74 LAN Comms	EM	EN	9999	EM9999	EN9999
P75:Z001	P75:Z001	UA	UR	9999	UA9999	UR9999
P75:Z002	P75:Z002	UA	UR	9999	UA9999	UR9999
P75:S001	P75 Cab Tamper	TA	TR	9999	TA9999	TR9999
P75:S002	P75 AC fail	AT	AR	9999	AT9999	AR9999
P75:S003	P75 Low Batt	YT	YR	9999	YT9999	YR9999
P75:S004	P75 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P75:S005	P75 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P75:S006	P75 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P75:S007	P75 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P75:S008	P75 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

P75:S009	P75 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P75:S010	P75 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P75:S011	P75 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P75:S012	P75 Over Volts	YP	YQ	9999	YP9999	YQ9999
P75:S013	P75 Low Volts	YP	YQ	9999	YP9999	YQ9999
P75:S014	P75 PS Fail	YP	YQ	9999	YP9999	YQ9999
P75:S015	P75 Batt. Test	IA	IR	9999	IA9999	IR9999
P75:S016	P75 LAN Comms	EM	EN	9999	EM9999	EN9999
P76:Z001	P76:Z001	UA	UR	9999	UA9999	UR9999
P76:Z002	P76:Z002	UA	UR	9999	UA9999	UR9999
P76:S001	P76 Cab Tamper	TA	TR	9999	TA9999	TR9999
P76:S002	P76 AC fail	AT	AR	9999	AT9999	AR9999
P76:S003	P76 Low Batt	YT	YR	9999	YT9999	YR9999
P76:S004	P76 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P76:S005	P76 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P76:S006	P76 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P76:S007	P76 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P76:S008	P76 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P76:S009	P76 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P76:S010	P76 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P76:S011	P76 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P76:S012	P76 Over Volts	YP	YQ	9999	YP9999	YQ9999
P76:S013	P76 Low Volts	YP	YQ	9999	YP9999	YQ9999
P76:S014	P76 PS Fail	YP	YQ	9999	YP9999	YQ9999
P76:S015	P76 Batt. Test	IA	IR	9999	IA9999	IR9999
P76:S016	P76 LAN Comms	EM	EN	9999	EM9999	EN9999
P77:Z001	P77:Z001	UA	UR	9999	UA9999	UR9999
P77:Z002	P77:Z002	UA	UR	9999	UA9999	UR9999
P77:S001	P77 Cab Tamper	TA	TR	9999	TA9999	TR9999
P77:S002	P77 AC fail	AT	AR	9999	AT9999	AR9999
P77:S003	P77 Low Batt	YT	YR	9999	YT9999	YR9999
P77:S004	P77 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P77:S005	P77 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P77:S006	P77 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P77:S007	P77 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P77:S008	P77 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P77:S009	P77 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P77:S010	P77 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P77:S011	P77 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P77:S012	P77 Over Volts	YP	YQ	9999	YP9999	YQ9999
P77:S013	P77 Low Volts	YP	YQ	9999	YP9999	YQ9999
P77:S014	P77 PS Fail	YP	YQ	9999	YP9999	YQ9999
P77:S015	P77 Batt. Test	IA	IR	9999	IA9999	IR9999
P77:S016	P77 LAN Comms	EM	EN	9999	EM9999	EN9999
P78:Z001	P78:Z001	UA	UR	9999	UA9999	UR9999
P78:Z002	P78:Z002	UA	UR	9999	UA9999	UR9999
P78:S001	P78 Cab Tamper	TA	TR	9999	TA9999	TR9999
P78:S002	P78 AC fail	AT	AR	9999	AT9999	AR9999
P78:S003	P78 Low Batt	YT	YR	9999	YT9999	YR9999
P78:S004	P78 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P78:S005	P78 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P78:S006	P78 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P78:S007	P78 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P78:S008	P78 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P78:S009	P78 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P78:S010	P78 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P78:S011	P78 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P78:S012	P78 Over Volts	YP	YQ	9999	YP9999	YQ9999
P78:S013	P78 Low Volts	YP	YQ	9999	YP9999	YQ9999
P78:S014	P78 PS Fail	YP	YQ	9999	YP9999	YQ9999
P78:S015	P78 Batt. Test	IA	IR	9999	IA9999	IR9999
P78:S016	P78 LAN Comms	EM	EN	9999	EM9999	EN9999
P79:Z001	P79:Z001	UA	UR	9999	UA9999	UR9999
P79:Z002	P79:Z002	UA	UR	9999	UA9999	UR9999
P79:S001	P79 Cab Tamper	TA	TR	9999	TA9999	TR9999
P79:S002	P79 AC fail	AT	AR	9999	AT9999	AR9999
P79:S003	P79 Low Batt	YT	YR	9999	YT9999	YR9999
P79:S004	P79 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P79:S005	P79 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P79:S006	P79 LAN Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

P79:S007	P79 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P79:S008	P79 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P79:S009	P79 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P79:S010	P79 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P79:S011	P79 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P79:S012	P79 Over Volts	YP	YQ	9999	YP9999	YQ9999
P79:S013	P79 Low Volts	YP	YQ	9999	YP9999	YQ9999
P79:S014	P79 PS Fail	YP	YQ	9999	YP9999	YQ9999
P79:S015	P79 Batt. Test	IA	IR	9999	IA9999	IR9999
P79:S016	P79 LAN Comms	EM	EN	9999	EM9999	EN9999
P80:Z001	P80:Z001	UA	UR	9999	UA9999	UR9999
P80:Z002	P80:Z002	UA	UR	9999	UA9999	UR9999
P80:S001	P80 Cab Tamper	TA	TR	9999	TA9999	TR9999
P80:S002	P80 AC fail	AT	AR	9999	AT9999	AR9999
P80:S003	P80 Low Batt	YT	YR	9999	YT9999	YR9999
P80:S004	P80 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P80:S005	P80 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P80:S006	P80 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P80:S007	P80 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P80:S008	P80 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P80:S009	P80 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P80:S010	P80 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P80:S011	P80 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P80:S012	P80 Over Volts	YP	YQ	9999	YP9999	YQ9999
P80:S013	P80 Low Volts	YP	YQ	9999	YP9999	YQ9999
P80:S014	P80 PS Fail	YP	YQ	9999	YP9999	YQ9999
P80:S015	P80 Batt. Test	IA	IR	9999	IA9999	IR9999
P80:S016	P80 LAN Comms	EM	EN	9999	EM9999	EN9999
P81:Z001	P81:Z001	UA	UR	9999	UA9999	UR9999
P81:Z002	P81:Z002	UA	UR	9999	UA9999	UR9999
P81:S001	P81 Cab Tamper	TA	TR	9999	TA9999	TR9999
P81:S002	P81 AC fail	AT	AR	9999	AT9999	AR9999
P81:S003	P81 Low Batt	YT	YR	9999	YT9999	YR9999
P81:S004	P81 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P81:S005	P81 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P81:S006	P81 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P81:S007	P81 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P81:S008	P81 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P81:S009	P81 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P81:S010	P81 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P81:S011	P81 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P81:S012	P81 Over Volts	YP	YQ	9999	YP9999	YQ9999
P81:S013	P81 Low Volts	YP	YQ	9999	YP9999	YQ9999
P81:S014	P81 PS Fail	YP	YQ	9999	YP9999	YQ9999
P81:S015	P81 Batt. Test	IA	IR	9999	IA9999	IR9999
P81:S016	P81 LAN Comms	EM	EN	9999	EM9999	EN9999
P82:Z001	P82:Z001	UA	UR	9999	UA9999	UR9999
P82:Z002	P82:Z002	UA	UR	9999	UA9999	UR9999
P82:S001	P82 Cab Tamper	TA	TR	9999	TA9999	TR9999
P82:S002	P82 AC fail	AT	AR	9999	AT9999	AR9999
P82:S003	P82 Low Batt	YT	YR	9999	YT9999	YR9999
P82:S004	P82 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P82:S005	P82 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P82:S006	P82 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P82:S007	P82 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P82:S008	P82 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P82:S009	P82 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P82:S010	P82 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P82:S011	P82 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P82:S012	P82 Over Volts	YP	YQ	9999	YP9999	YQ9999
P82:S013	P82 Low Volts	YP	YQ	9999	YP9999	YQ9999
P82:S014	P82 PS Fail	YP	YQ	9999	YP9999	YQ9999
P82:S015	P82 Batt. Test	IA	IR	9999	IA9999	IR9999
P82:S016	P82 LAN Comms	EM	EN	9999	EM9999	EN9999
P83:Z001	P83:Z001	UA	UR	9999	UA9999	UR9999
P83:Z002	P83:Z002	UA	UR	9999	UA9999	UR9999
P83:S001	P83 Cab Tamper	TA	TR	9999	TA9999	TR9999
P83:S002	P83 AC fail	AT	AR	9999	AT9999	AR9999
P83:S003	P83 Low Batt	YT	YR	9999	YT9999	YR9999
P83:S004	P83 Batt Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

P83:S005	P83 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P83:S006	P83 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P83:S007	P83 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P83:S008	P83 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P83:S009	P83 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P83:S010	P83 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P83:S011	P83 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P83:S012	P83 Over Volts	YP	YQ	9999	YP9999	YQ9999
P83:S013	P83 Low Volts	YP	YQ	9999	YP9999	YQ9999
P83:S014	P83 PS Fail	YP	YQ	9999	YP9999	YQ9999
P83:S015	P83 Batt. Test	IA	IR	9999	IA9999	IR9999
P83:S016	P83 LAN Comms	EM	EN	9999	EM9999	EN9999
P84:Z001	P84:Z001	UA	UR	9999	UA9999	UR9999
P84:Z002	P84:Z002	UA	UR	9999	UA9999	UR9999
P84:S001	P84 Cab Tamper	TA	TR	9999	TA9999	TR9999
P84:S002	P84 AC fail	AT	AR	9999	AT9999	AR9999
P84:S003	P84 Low Batt	YT	YR	9999	YT9999	YR9999
P84:S004	P84 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P84:S005	P84 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P84:S006	P84 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P84:S007	P84 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P84:S008	P84 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P84:S009	P84 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P84:S010	P84 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P84:S011	P84 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P84:S012	P84 Over Volts	YP	YQ	9999	YP9999	YQ9999
P84:S013	P84 Low Volts	YP	YQ	9999	YP9999	YQ9999
P84:S014	P84 PS Fail	YP	YQ	9999	YP9999	YQ9999
P84:S015	P84 Batt. Test	IA	IR	9999	IA9999	IR9999
P84:S016	P84 LAN Comms	EM	EN	9999	EM9999	EN9999
P85:Z001	P85:Z001	UA	UR	9999	UA9999	UR9999
P85:Z002	P85:Z002	UA	UR	9999	UA9999	UR9999
P85:S001	P85 Cab Tamper	TA	TR	9999	TA9999	TR9999
P85:S002	P85 AC fail	AT	AR	9999	AT9999	AR9999
P85:S003	P85 Low Batt	YT	YR	9999	YT9999	YR9999
P85:S004	P85 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P85:S005	P85 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P85:S006	P85 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P85:S007	P85 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P85:S008	P85 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P85:S009	P85 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P85:S010	P85 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P85:S011	P85 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P85:S012	P85 Over Volts	YP	YQ	9999	YP9999	YQ9999
P85:S013	P85 Low Volts	YP	YQ	9999	YP9999	YQ9999
P85:S014	P85 PS Fail	YP	YQ	9999	YP9999	YQ9999
P85:S015	P85 Batt. Test	IA	IR	9999	IA9999	IR9999
P85:S016	P85 LAN Comms	EM	EN	9999	EM9999	EN9999
P86:Z001	P86:Z001	UA	UR	9999	UA9999	UR9999
P86:Z002	P86:Z002	UA	UR	9999	UA9999	UR9999
P86:S001	P86 Cab Tamper	TA	TR	9999	TA9999	TR9999
P86:S002	P86 AC fail	AT	AR	9999	AT9999	AR9999
P86:S003	P86 Low Batt	YT	YR	9999	YT9999	YR9999
P86:S004	P86 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P86:S005	P86 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P86:S006	P86 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P86:S007	P86 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P86:S008	P86 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P86:S009	P86 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P86:S010	P86 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P86:S011	P86 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P86:S012	P86 Over Volts	YP	YQ	9999	YP9999	YQ9999
P86:S013	P86 Low Volts	YP	YQ	9999	YP9999	YQ9999
P86:S014	P86 PS Fail	YP	YQ	9999	YP9999	YQ9999
P86:S015	P86 Batt. Test	IA	IR	9999	IA9999	IR9999
P86:S016	P86 LAN Comms	EM	EN	9999	EM9999	EN9999
P87:Z001	P87:Z001	UA	UR	9999	UA9999	UR9999
P87:Z002	P87:Z002	UA	UR	9999	UA9999	UR9999
P87:S001	P87 Cab Tamper	TA	TR	9999	TA9999	TR9999
P87:S002	P87 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

P87:S003	P87 Low Batt	YT	YR	9999	YT9999	YR9999
P87:S004	P87 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P87:S005	P87 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P87:S006	P87 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P87:S007	P87 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P87:S008	P87 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P87:S009	P87 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P87:S010	P87 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P87:S011	P87 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P87:S012	P87 Over Volts	YP	YQ	9999	YP9999	YQ9999
P87:S013	P87 Low Volts	YP	YQ	9999	YP9999	YQ9999
P87:S014	P87 PS Fail	YP	YQ	9999	YP9999	YQ9999
P87:S015	P87 Batt. Test	IA	IR	9999	IA9999	IR9999
P87:S016	P87 LAN Comms	EM	EN	9999	EM9999	EN9999
P88:Z001	P88:Z001	UA	UR	9999	UA9999	UR9999
P88:Z002	P88:Z002	UA	UR	9999	UA9999	UR9999
P88:S001	P88 Cab Tamper	TA	TR	9999	TA9999	TR9999
P88:S002	P88 AC fail	AT	AR	9999	AT9999	AR9999
P88:S003	P88 Low Batt	YT	YR	9999	YT9999	YR9999
P88:S004	P88 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P88:S005	P88 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P88:S006	P88 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P88:S007	P88 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P88:S008	P88 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P88:S009	P88 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P88:S010	P88 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P88:S011	P88 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P88:S012	P88 Over Volts	YP	YQ	9999	YP9999	YQ9999
P88:S013	P88 Low Volts	YP	YQ	9999	YP9999	YQ9999
P88:S014	P88 PS Fail	YP	YQ	9999	YP9999	YQ9999
P88:S015	P88 Batt. Test	IA	IR	9999	IA9999	IR9999
P88:S016	P88 LAN Comms	EM	EN	9999	EM9999	EN9999
P89:Z001	P89:Z001	UA	UR	9999	UA9999	UR9999
P89:Z002	P89:Z002	UA	UR	9999	UA9999	UR9999
P89:S001	P89 Cab Tamper	TA	TR	9999	TA9999	TR9999
P89:S002	P89 AC fail	AT	AR	9999	AT9999	AR9999
P89:S003	P89 Low Batt	YT	YR	9999	YT9999	YR9999
P89:S004	P89 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P89:S005	P89 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P89:S006	P89 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P89:S007	P89 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P89:S008	P89 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P89:S009	P89 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P89:S010	P89 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P89:S011	P89 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P89:S012	P89 Over Volts	YP	YQ	9999	YP9999	YQ9999
P89:S013	P89 Low Volts	YP	YQ	9999	YP9999	YQ9999
P89:S014	P89 PS Fail	YP	YQ	9999	YP9999	YQ9999
P89:S015	P89 Batt. Test	IA	IR	9999	IA9999	IR9999
P89:S016	P89 LAN Comms	EM	EN	9999	EM9999	EN9999
P90:Z001	P90:Z001	UA	UR	9999	UA9999	UR9999
P90:Z002	P90:Z002	UA	UR	9999	UA9999	UR9999
P90:S001	P90 Cab Tamper	TA	TR	9999	TA9999	TR9999
P90:S002	P90 AC fail	AT	AR	9999	AT9999	AR9999
P90:S003	P90 Low Batt	YT	YR	9999	YT9999	YR9999
P90:S004	P90 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P90:S005	P90 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P90:S006	P90 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P90:S007	P90 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P90:S008	P90 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P90:S009	P90 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P90:S010	P90 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P90:S011	P90 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P90:S012	P90 Over Volts	YP	YQ	9999	YP9999	YQ9999
P90:S013	P90 Low Volts	YP	YQ	9999	YP9999	YQ9999
P90:S014	P90 PS Fail	YP	YQ	9999	YP9999	YQ9999
P90:S015	P90 Batt. Test	IA	IR	9999	IA9999	IR9999
P90:S016	P90 LAN Comms	EM	EN	9999	EM9999	EN9999
P91:Z001	P91:Z001	UA	UR	9999	UA9999	UR9999
P91:Z002	P91:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

P91:S001	P91 Cab Tamper	TA	TR	9999	TA9999	TR9999
P91:S002	P91 AC fail	AT	AR	9999	AT9999	AR9999
P91:S003	P91 Low Batt	YT	YR	9999	YT9999	YR9999
P91:S004	P91 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P91:S005	P91 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P91:S006	P91 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P91:S007	P91 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P91:S008	P91 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P91:S009	P91 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P91:S010	P91 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P91:S011	P91 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P91:S012	P91 Over Volts	YP	YQ	9999	YP9999	YQ9999
P91:S013	P91 Low Volts	YP	YQ	9999	YP9999	YQ9999
P91:S014	P91 PS Fail	YP	YQ	9999	YP9999	YQ9999
P91:S015	P91 Batt. Test	IA	IR	9999	IA9999	IR9999
P91:S016	P91 LAN Comms	EM	EN	9999	EM9999	EN9999
P92:Z001	P92:Z001	UA	UR	9999	UA9999	UR9999
P92:Z002	P92:Z002	UA	UR	9999	UA9999	UR9999
P92:S001	P92 Cab Tamper	TA	TR	9999	TA9999	TR9999
P92:S002	P92 AC fail	AT	AR	9999	AT9999	AR9999
P92:S003	P92 Low Batt	YT	YR	9999	YT9999	YR9999
P92:S004	P92 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P92:S005	P92 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P92:S006	P92 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P92:S007	P92 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P92:S008	P92 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P92:S009	P92 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P92:S010	P92 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P92:S011	P92 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P92:S012	P92 Over Volts	YP	YQ	9999	YP9999	YQ9999
P92:S013	P92 Low Volts	YP	YQ	9999	YP9999	YQ9999
P92:S014	P92 PS Fail	YP	YQ	9999	YP9999	YQ9999
P92:S015	P92 Batt. Test	IA	IR	9999	IA9999	IR9999
P92:S016	P92 LAN Comms	EM	EN	9999	EM9999	EN9999
P93:Z001	P93:Z001	UA	UR	9999	UA9999	UR9999
P93:Z002	P93:Z002	UA	UR	9999	UA9999	UR9999
P93:S001	P93 Cab Tamper	TA	TR	9999	TA9999	TR9999
P93:S002	P93 AC fail	AT	AR	9999	AT9999	AR9999
P93:S003	P93 Low Batt	YT	YR	9999	YT9999	YR9999
P93:S004	P93 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P93:S005	P93 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P93:S006	P93 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P93:S007	P93 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P93:S008	P93 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P93:S009	P93 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P93:S010	P93 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P93:S011	P93 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P93:S012	P93 Over Volts	YP	YQ	9999	YP9999	YQ9999
P93:S013	P93 Low Volts	YP	YQ	9999	YP9999	YQ9999
P93:S014	P93 PS Fail	YP	YQ	9999	YP9999	YQ9999
P93:S015	P93 Batt. Test	IA	IR	9999	IA9999	IR9999
P93:S016	P93 LAN Comms	EM	EN	9999	EM9999	EN9999
P94:Z001	P94:Z001	UA	UR	9999	UA9999	UR9999
P94:Z002	P94:Z002	UA	UR	9999	UA9999	UR9999
P94:S001	P94 Cab Tamper	TA	TR	9999	TA9999	TR9999
P94:S002	P94 AC fail	AT	AR	9999	AT9999	AR9999
P94:S003	P94 Low Batt	YT	YR	9999	YT9999	YR9999
P94:S004	P94 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P94:S005	P94 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P94:S006	P94 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P94:S007	P94 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P94:S008	P94 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P94:S009	P94 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P94:S010	P94 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P94:S011	P94 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P94:S012	P94 Over Volts	YP	YQ	9999	YP9999	YQ9999
P94:S013	P94 Low Volts	YP	YQ	9999	YP9999	YQ9999
P94:S014	P94 PS Fail	YP	YQ	9999	YP9999	YQ9999
P94:S015	P94 Batt. Test	IA	IR	9999	IA9999	IR9999
P94:S016	P94 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

P95:Z001	P95:Z001	UA	UR	9999	UA9999	UR9999
P95:Z002	P95:Z002	UA	UR	9999	UA9999	UR9999
P95:S001	P95 Cab Tamper	TA	TR	9999	TA9999	TR9999
P95:S002	P95 AC fail	AT	AR	9999	AT9999	AR9999
P95:S003	P95 Low Batt	YT	YR	9999	YT9999	YR9999
P95:S004	P95 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P95:S005	P95 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P95:S006	P95 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P95:S007	P95 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P95:S008	P95 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P95:S009	P95 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P95:S010	P95 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P95:S011	P95 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P95:S012	P95 Over Volts	YP	YQ	9999	YP9999	YQ9999
P95:S013	P95 Low Volts	YP	YQ	9999	YP9999	YQ9999
P95:S014	P95 PS Fail	YP	YQ	9999	YP9999	YQ9999
P95:S015	P95 Batt. Test	IA	IR	9999	IA9999	IR9999
P95:S016	P95 LAN Comms	EM	EN	9999	EM9999	EN9999
P96:Z001	P96:Z001	UA	UR	9999	UA9999	UR9999
P96:Z002	P96:Z002	UA	UR	9999	UA9999	UR9999
P96:S001	P96 Cab Tamper	TA	TR	9999	TA9999	TR9999
P96:S002	P96 AC fail	AT	AR	9999	AT9999	AR9999
P96:S003	P96 Low Batt	YT	YR	9999	YT9999	YR9999
P96:S004	P96 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P96:S005	P96 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P96:S006	P96 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P96:S007	P96 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P96:S008	P96 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P96:S009	P96 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P96:S010	P96 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P96:S011	P96 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P96:S012	P96 Over Volts	YP	YQ	9999	YP9999	YQ9999
P96:S013	P96 Low Volts	YP	YQ	9999	YP9999	YQ9999
P96:S014	P96 PS Fail	YP	YQ	9999	YP9999	YQ9999
P96:S015	P96 Batt. Test	IA	IR	9999	IA9999	IR9999
P96:S016	P96 LAN Comms	EM	EN	9999	EM9999	EN9999
P97:Z001	P97:Z001	UA	UR	9999	UA9999	UR9999
P97:Z002	P97:Z002	UA	UR	9999	UA9999	UR9999
P97:S001	P97 Cab Tamper	TA	TR	9999	TA9999	TR9999
P97:S002	P97 AC fail	AT	AR	9999	AT9999	AR9999
P97:S003	P97 Low Batt	YT	YR	9999	YT9999	YR9999
P97:S004	P97 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P97:S005	P97 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P97:S006	P97 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P97:S007	P97 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P97:S008	P97 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P97:S009	P97 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P97:S010	P97 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P97:S011	P97 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P97:S012	P97 Over Volts	YP	YQ	9999	YP9999	YQ9999
P97:S013	P97 Low Volts	YP	YQ	9999	YP9999	YQ9999
P97:S014	P97 PS Fail	YP	YQ	9999	YP9999	YQ9999
P97:S015	P97 Batt. Test	IA	IR	9999	IA9999	IR9999
P97:S016	P97 LAN Comms	EM	EN	9999	EM9999	EN9999
P98:Z001	P98:Z001	UA	UR	9999	UA9999	UR9999
P98:Z002	P98:Z002	UA	UR	9999	UA9999	UR9999
P98:S001	P98 Cab Tamper	TA	TR	9999	TA9999	TR9999
P98:S002	P98 AC fail	AT	AR	9999	AT9999	AR9999
P98:S003	P98 Low Batt	YT	YR	9999	YT9999	YR9999
P98:S004	P98 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P98:S005	P98 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P98:S006	P98 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P98:S007	P98 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P98:S008	P98 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P98:S009	P98 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P98:S010	P98 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P98:S011	P98 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P98:S012	P98 Over Volts	YP	YQ	9999	YP9999	YQ9999
P98:S013	P98 Low Volts	YP	YQ	9999	YP9999	YQ9999
P98:S014	P98 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

P98:S015	P98 Batt. Test	IA	IR	9999	IA9999	IR9999
P98:S016	P98 LAN Comms	EM	EN	9999	EM9999	EN9999
P99:Z001	P99:Z001	UA	UR	9999	UA9999	UR9999
P99:Z002	P99:Z002	UA	UR	9999	UA9999	UR9999
P99:S001	P99 Cab Tamper	TA	TR	9999	TA9999	TR9999
P99:S002	P99 AC fail	AT	AR	9999	AT9999	AR9999
P99:S003	P99 Low Batt	YT	YR	9999	YT9999	YR9999
P99:S004	P99 Batt Fail	YP	YQ	9999	YP9999	YQ9999
P99:S005	P99 DET Fuse	YP	YQ	9999	YP9999	YQ9999
P99:S006	P99 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
P99:S007	P99 Batt. Fuse	YP	YQ	9999	YP9999	YQ9999
P99:S008	P99 Aux2 Fuse	YP	YQ	9999	YP9999	YQ9999
P99:S009	P99 Aux2 Tamper/LAN Fault	YA	YH	9999	YA9999	YH9999
P99:S010	P99 Det OverCurr	YI	YJ	9999	YI9999	YJ9999
P99:S011	P99 Chg OverCurr	YI	YJ	9999	YI9999	YJ9999
P99:S012	P99 Over Volts	YP	YQ	9999	YP9999	YQ9999
P99:S013	P99 Low Volts	YP	YQ	9999	YP9999	YQ9999
P99:S014	P99 PS Fail	YP	YQ	9999	YP9999	YQ9999
P99:S015	P99 Batt. Test	IA	IR	9999	IA9999	IR9999
P99:S016	P99 LAN Comms	EM	EN	9999	EM9999	EN9999
G01:Z001	G01:Z001	UA	UR	2441	UA2441	UR2441
G01:Z002	G01:Z002	UA	UR	2442	UA2442	UR2442
G01:S001	G01 Door Reed	UA	UR	2443	UA2443	UR2443
G01:S002	G01 Door Tongue	UA	UR	2444	UA2444	UR2444
G01:S003	G01 Door Tamper	IA	IR	2445	IA2445	IR2445
G01:S004	G01 Door Forced	DF	DR	2446	DF2446	DR2446
G01:S005	G01 Door DOTL	DL	DH	2447	DL2447	DH2447
G01:S006	G01 Cab Tamper	TA	TR	2448	TA2448	TR2448
G01:S007	G01 AC fail	AT	AR	2449	AT2449	AR2449
G01:S008	G01 Low Batt	YT	YR	2450	YT2450	YR2450
G01:S009	G01 LAN Fuse	YP	YQ	2451	YP2451	YQ2451
G01:S010	G01 DET Fuse	YP	YQ	2452	YP2452	YQ2452
G01:S011	G01 Low Volts	YP	YQ	2453	YP2453	YQ2453
G01:S012	G01 PS Fail	YP	YQ	2454	YP2454	YQ2454
G01:S013	G01 Batt Test	IA	IR	2455	IA2455	IR2455
G01:S014	G01 Invalid Card	DD	DR	2456	DD2456	DR2456
G01:S015	G01 Duress	HA	HR	2457	HA2457	HR2457
G01:S016	G01 Rdr Tamper	IA	IR	2458	IA2458	IR2458
G01:S017	G01 Panic	PA	PR	2459	PA2459	PR2459
G01:S018	G01 Pin Attempts	JA	UX	2460	JA2460	UX2460
G01:S019	G01 Temperature	UA	UR	2461	UA2461	UR2461
G01:S020	G01 Light Level	UA	UR	2462	UA2462	UR2462
G01:S021	G01 LAN Comms	EM	EN	2463	EM2463	EN2463
G01:S022	G01 Spare1	UA	UR	2464	UA2464	UR2464
G01:S023	G01 Spare2	UA	UR	2465	UA2465	UR2465
G02:Z001	G02:Z001	UA	UR	2466	UA2466	UR2466
G02:Z002	G02:Z002	UA	UR	2467	UA2467	UR2467
G02:S001	G02 Door Reed	UA	UR	2468	UA2468	UR2468
G02:S002	G02 Door Tongue	UA	UR	2469	UA2469	UR2469
G02:S003	G02 Door Tamper	IA	IR	2470	IA2470	IR2470
G02:S004	G02 Door Forced	DF	DR	2471	DF2471	DR2471
G02:S005	G02 Door DOTL	DL	DH	2472	DL2472	DH2472
G02:S006	G02 Cab Tamper	TA	TR	2473	TA2473	TR2473
G02:S007	G02 AC fail	AT	AR	2474	AT2474	AR2474
G02:S008	G02 Low Batt	YT	YR	2475	YT2475	YR2475
G02:S009	G02 LAN Fuse	YP	YQ	2476	YP2476	YQ2476
G02:S010	G02 DET Fuse	YP	YQ	2477	YP2477	YQ2477
G02:S011	G02 Low Volts	YP	YQ	2478	YP2478	YQ2478
G02:S012	G02 PS Fail	YP	YQ	2479	YP2479	YQ2479
G02:S013	G02 Batt Test	IA	IR	2480	IA2480	IR2480
G02:S014	G02 Invalid Card	DD	DR	2481	DD2481	DR2481
G02:S015	G02 Duress	HA	HR	2482	HA2482	HR2482
G02:S016	G02 Rdr Tamper	IA	IR	2483	IA2483	IR2483
G02:S017	G02 Panic	PA	PR	2484	PA2484	PR2484
G02:S018	G02 Pin Attempts	JA	UX	2485	JA2485	UX2485
G02:S019	G02 Temperature	UA	UR	2486	UA2486	UR2486
G02:S020	G02 Light Level	UA	UR	2487	UA2487	UR2487
G02:S021	G02 LAN Comms	EM	EN	2488	EM2488	EN2488
G02:S022	G02 Spare1	UA	UR	2489	UA2489	UR2489
G02:S023	G02 Spare2	UA	UR	2490	UA2490	UR2490

Integriti SIA DECIMAL Map. V21

G03:Z001	G03:Z001	UA	UR	2491	UA2491	UR2491
G03:Z002	G03:Z002	UA	UR	2492	UA2492	UR2492
G03:S001	G03 Door Reed	UA	UR	2493	UA2493	UR2493
G03:S002	G03 Door Tongue	UA	UR	2494	UA2494	UR2494
G03:S003	G03 Door Tamper	IA	IR	2495	IA2495	IR2495
G03:S004	G03 Door Forced	DF	DR	2496	DF2496	DR2496
G03:S005	G03 Door DOTL	DL	DH	2497	DL2497	DH2497
G03:S006	G03 Cab Tamper	TA	TR	2498	TA2498	TR2498
G03:S007	G03 AC fail	AT	AR	2499	AT2499	AR2499
G03:S008	G03 Low Batt	YT	YR	2500	YT2500	YR2500
G03:S009	G03 LAN Fuse	YP	YQ	2501	YP2501	YQ2501
G03:S010	G03 DET Fuse	YP	YQ	2502	YP2502	YQ2502
G03:S011	G03 Low Volts	YP	YQ	2503	YP2503	YQ2503
G03:S012	G03 PS Fail	YP	YQ	2504	YP2504	YQ2504
G03:S013	G03 Batt Test	IA	IR	2505	IA2505	IR2505
G03:S014	G03 Invalid Card	DD	DR	2506	DD2506	DR2506
G03:S015	G03 Duress	HA	HR	2507	HA2507	HR2507
G03:S016	G03 Rdr Tamper	IA	IR	2508	IA2508	IR2508
G03:S017	G03 Panic	PA	PR	2509	PA2509	PR2509
G03:S018	G03 Pin Attempts	JA	UX	2510	JA2510	UX2510
G03:S019	G03 Temperature	UA	UR	2511	UA2511	UR2511
G03:S020	G03 Light Level	UA	UR	2512	UA2512	UR2512
G03:S021	G03 LAN Comms	EM	EN	2513	EM2513	EN2513
G03:S022	G03 Spare1	UA	UR	2514	UA2514	UR2514
G03:S023	G03 Spare2	UA	UR	2515	UA2515	UR2515
G04:Z001	G04:Z001	UA	UR	2516	UA2516	UR2516
G04:Z002	G04:Z002	UA	UR	2517	UA2517	UR2517
G04:S001	G04 Door Reed	UA	UR	2518	UA2518	UR2518
G04:S002	G04 Door Tongue	UA	UR	2519	UA2519	UR2519
G04:S003	G04 Door Tamper	IA	IR	2520	IA2520	IR2520
G04:S004	G04 Door Forced	DF	DR	2521	DF2521	DR2521
G04:S005	G04 Door DOTL	DL	DH	2522	DL2522	DH2522
G04:S006	G04 Cab Tamper	TA	TR	2523	TA2523	TR2523
G04:S007	G04 AC fail	AT	AR	2524	AT2524	AR2524
G04:S008	G04 Low Batt	YT	YR	2525	YT2525	YR2525
G04:S009	G04 LAN Fuse	YP	YQ	2526	YP2526	YQ2526
G04:S010	G04 DET Fuse	YP	YQ	2527	YP2527	YQ2527
G04:S011	G04 Low Volts	YP	YQ	2528	YP2528	YQ2528
G04:S012	G04 PS Fail	YP	YQ	2529	YP2529	YQ2529
G04:S013	G04 Batt Test	IA	IR	2530	IA2530	IR2530
G04:S014	G04 Invalid Card	DD	DR	2531	DD2531	DR2531
G04:S015	G04 Duress	HA	HR	2532	HA2532	HR2532
G04:S016	G04 Rdr Tamper	IA	IR	2533	IA2533	IR2533
G04:S017	G04 Panic	PA	PR	2534	PA2534	PR2534
G04:S018	G04 Pin Attempts	JA	UX	2535	JA2535	UX2535
G04:S019	G04 Temperature	UA	UR	2536	UA2536	UR2536
G04:S020	G04 Light Level	UA	UR	2537	UA2537	UR2537
G04:S021	G04 LAN Comms	EM	EN	2538	EM2538	EN2538
G04:S022	G04 Spare1	UA	UR	2539	UA2539	UR2539
G04:S023	G04 Spare2	UA	UR	2540	UA2540	UR2540
G05:Z001	G05:Z001	UA	UR	2541	UA2541	UR2541
G05:Z002	G05:Z002	UA	UR	2542	UA2542	UR2542
G05:S001	G05 Door Reed	UA	UR	2543	UA2543	UR2543
G05:S002	G05 Door Tongue	UA	UR	2544	UA2544	UR2544
G05:S003	G05 Door Tamper	IA	IR	2545	IA2545	IR2545
G05:S004	G05 Door Forced	DF	DR	2546	DF2546	DR2546
G05:S005	G05 Door DOTL	DL	DH	2547	DL2547	DH2547
G05:S006	G05 Cab Tamper	TA	TR	2548	TA2548	TR2548
G05:S007	G05 AC fail	AT	AR	2549	AT2549	AR2549
G05:S008	G05 Low Batt	YT	YR	2550	YT2550	YR2550
G05:S009	G05 LAN Fuse	YP	YQ	2551	YP2551	YQ2551
G05:S010	G05 DET Fuse	YP	YQ	2552	YP2552	YQ2552
G05:S011	G05 Low Volts	YP	YQ	2553	YP2553	YQ2553
G05:S012	G05 PS Fail	YP	YQ	2554	YP2554	YQ2554
G05:S013	G05 Batt Test	IA	IR	2555	IA2555	IR2555
G05:S014	G05 Invalid Card	DD	DR	2556	DD2556	DR2556
G05:S015	G05 Duress	HA	HR	2557	HA2557	HR2557
G05:S016	G05 Rdr Tamper	IA	IR	2558	IA2558	IR2558
G05:S017	G05 Panic	PA	PR	2559	PA2559	PR2559
G05:S018	G05 Pin Attempts	JA	UX	2560	JA2560	UX2560

Integriti SIA DECIMAL Map. V21

G05:S019	G05 Temperature	UA	UR	2561	UA2561	UR2561
G05:S020	G05 Light Level	UA	UR	2562	UA2562	UR2562
G05:S021	G05 LAN Comms	EM	EN	2563	EM2563	EN2563
G05:S022	G05 Spare1	UA	UR	2564	UA2564	UR2564
G05:S023	G05 Spare2	UA	UR	2565	UA2565	UR2565
G06:Z001	G06:Z001	UA	UR	2566	UA2566	UR2566
G06:Z002	G06:Z002	UA	UR	2567	UA2567	UR2567
G06:S001	G06 Door Reed	UA	UR	2568	UA2568	UR2568
G06:S002	G06 Door Tongue	UA	UR	2569	UA2569	UR2569
G06:S003	G06 Door Tamper	IA	IR	2570	IA2570	IR2570
G06:S004	G06 Door Forced	DF	DR	2571	DF2571	DR2571
G06:S005	G06 Door DOTL	DL	DH	2572	DL2572	DH2572
G06:S006	G06 Cab Tamper	TA	TR	2573	TA2573	TR2573
G06:S007	G06 AC fail	AT	AR	2574	AT2574	AR2574
G06:S008	G06 Low Batt	YT	YR	2575	YT2575	YR2575
G06:S009	G06 LAN Fuse	YP	YQ	2576	YP2576	YQ2576
G06:S010	G06 DET Fuse	YP	YQ	2577	YP2577	YQ2577
G06:S011	G06 Low Volts	YP	YQ	2578	YP2578	YQ2578
G06:S012	G06 PS Fail	YP	YQ	2579	YP2579	YQ2579
G06:S013	G06 Batt Test	IA	IR	2580	IA2580	IR2580
G06:S014	G06 Invalid Card	DD	DR	2581	DD2581	DR2581
G06:S015	G06 Duress	HA	HR	2582	HA2582	HR2582
G06:S016	G06 Rdr Tamper	IA	IR	2583	IA2583	IR2583
G06:S017	G06 Panic	PA	PR	2584	PA2584	PR2584
G06:S018	G06 Pin Attempts	JA	UX	2585	JA2585	UX2585
G06:S019	G06 Temperature	UA	UR	2586	UA2586	UR2586
G06:S020	G06 Light Level	UA	UR	2587	UA2587	UR2587
G06:S021	G06 LAN Comms	EM	EN	2588	EM2588	EN2588
G06:S022	G06 Spare1	UA	UR	2589	UA2589	UR2589
G06:S023	G06 Spare2	UA	UR	2590	UA2590	UR2590
G07:Z001	G07:Z001	UA	UR	2591	UA2591	UR2591
G07:Z002	G07:Z002	UA	UR	2592	UA2592	UR2592
G07:S001	G07 Door Reed	UA	UR	2593	UA2593	UR2593
G07:S002	G07 Door Tongue	UA	UR	2594	UA2594	UR2594
G07:S003	G07 Door Tamper	IA	IR	2595	IA2595	IR2595
G07:S004	G07 Door Forced	DF	DR	2596	DF2596	DR2596
G07:S005	G07 Door DOTL	DL	DH	2597	DL2597	DH2597
G07:S006	G07 Cab Tamper	TA	TR	2598	TA2598	TR2598
G07:S007	G07 AC fail	AT	AR	2599	AT2599	AR2599
G07:S008	G07 Low Batt	YT	YR	2600	YT2600	YR2600
G07:S009	G07 LAN Fuse	YP	YQ	2601	YP2601	YQ2601
G07:S010	G07 DET Fuse	YP	YQ	2602	YP2602	YQ2602
G07:S011	G07 Low Volts	YP	YQ	2603	YP2603	YQ2603
G07:S012	G07 PS Fail	YP	YQ	2604	YP2604	YQ2604
G07:S013	G07 Batt Test	IA	IR	2605	IA2605	IR2605
G07:S014	G07 Invalid Card	DD	DR	2606	DD2606	DR2606
G07:S015	G07 Duress	HA	HR	2607	HA2607	HR2607
G07:S016	G07 Rdr Tamper	IA	IR	2608	IA2608	IR2608
G07:S017	G07 Panic	PA	PR	2609	PA2609	PR2609
G07:S018	G07 Pin Attempts	JA	UX	2610	JA2610	UX2610
G07:S019	G07 Temperature	UA	UR	2611	UA2611	UR2611
G07:S020	G07 Light Level	UA	UR	2612	UA2612	UR2612
G07:S021	G07 LAN Comms	EM	EN	2613	EM2613	EN2613
G07:S022	G07 Spare1	UA	UR	2614	UA2614	UR2614
G07:S023	G07 Spare2	UA	UR	2615	UA2615	UR2615
G08:Z001	G08:Z001	UA	UR	2616	UA2616	UR2616
G08:Z002	G08:Z002	UA	UR	2617	UA2617	UR2617
G08:S001	G08 Door Reed	UA	UR	2618	UA2618	UR2618
G08:S002	G08 Door Tongue	UA	UR	2619	UA2619	UR2619
G08:S003	G08 Door Tamper	IA	IR	2620	IA2620	IR2620
G08:S004	G08 Door Forced	DF	DR	2621	DF2621	DR2621
G08:S005	G08 Door DOTL	DL	DH	2622	DL2622	DH2622
G08:S006	G08 Cab Tamper	TA	TR	2623	TA2623	TR2623
G08:S007	G08 AC fail	AT	AR	2624	AT2624	AR2624
G08:S008	G08 Low Batt	YT	YR	2625	YT2625	YR2625
G08:S009	G08 LAN Fuse	YP	YQ	2626	YP2626	YQ2626
G08:S010	G08 DET Fuse	YP	YQ	2627	YP2627	YQ2627
G08:S011	G08 Low Volts	YP	YQ	2628	YP2628	YQ2628
G08:S012	G08 PS Fail	YP	YQ	2629	YP2629	YQ2629
G08:S013	G08 Batt Test	IA	IR	2630	IA2630	IR2630

Integriti SIA DECIMAL Map. V21

G08:S014	G08 Invalid Card	DD	DR	2631	DD2631	DR2631
G08:S015	G08 Duress	HA	HR	2632	HA2632	HR2632
G08:S016	G08 Rdr Tamper	IA	IR	2633	IA2633	IR2633
G08:S017	G08 Panic	PA	PR	2634	PA2634	PR2634
G08:S018	G08 Pin Attempts	JA	UX	2635	JA2635	UX2635
G08:S019	G08 Temperature	UA	UR	2636	UA2636	UR2636
G08:S020	G08 Light Level	UA	UR	2637	UA2637	UR2637
G08:S021	G08 LAN Comms	EM	EN	2638	EM2638	EN2638
G08:S022	G08 Spare1	UA	UR	2639	UA2639	UR2639
G08:S023	G08 Spare2	UA	UR	2640	UA2640	UR2640
G09:Z001	G09:Z001	UA	UR	2641	UA2641	UR2641
G09:Z002	G09:Z002	UA	UR	2642	UA2642	UR2642
G09:S001	G09 Door Reed	UA	UR	2643	UA2643	UR2643
G09:S002	G09 Door Tongue	UA	UR	2644	UA2644	UR2644
G09:S003	G09 Door Tamper	IA	IR	2645	IA2645	IR2645
G09:S004	G09 Door Forced	DF	DR	2646	DF2646	DR2646
G09:S005	G09 Door DOTL	DL	DH	2647	DL2647	DH2647
G09:S006	G09 Cab Tamper	TA	TR	2648	TA2648	TR2648
G09:S007	G09 AC fail	AT	AR	2649	AT2649	AR2649
G09:S008	G09 Low Batt	YT	YR	2650	YT2650	YR2650
G09:S009	G09 LAN Fuse	YP	YQ	2651	YP2651	YQ2651
G09:S010	G09 DET Fuse	YP	YQ	2652	YP2652	YQ2652
G09:S011	G09 Low Volts	YP	YQ	2653	YP2653	YQ2653
G09:S012	G09 PS Fail	YP	YQ	2654	YP2654	YQ2654
G09:S013	G09 Batt Test	IA	IR	2655	IA2655	IR2655
G09:S014	G09 Invalid Card	DD	DR	2656	DD2656	DR2656
G09:S015	G09 Duress	HA	HR	2657	HA2657	HR2657
G09:S016	G09 Rdr Tamper	IA	IR	2658	IA2658	IR2658
G09:S017	G09 Panic	PA	PR	2659	PA2659	PR2659
G09:S018	G09 Pin Attempts	JA	UX	2660	JA2660	UX2660
G09:S019	G09 Temperature	UA	UR	2661	UA2661	UR2661
G09:S020	G09 Light Level	UA	UR	2662	UA2662	UR2662
G09:S021	G09 LAN Comms	EM	EN	2663	EM2663	EN2663
G09:S022	G09 Spare1	UA	UR	2664	UA2664	UR2664
G09:S023	G09 Spare2	UA	UR	2665	UA2665	UR2665
G10:Z001	G10:Z001	UA	UR	2666	UA2666	UR2666
G10:Z002	G10:Z002	UA	UR	2667	UA2667	UR2667
G10:S001	G10 Door Reed	UA	UR	2668	UA2668	UR2668
G10:S002	G10 Door Tongue	UA	UR	2669	UA2669	UR2669
G10:S003	G10 Door Tamper	IA	IR	2670	IA2670	IR2670
G10:S004	G10 Door Forced	DF	DR	2671	DF2671	DR2671
G10:S005	G10 Door DOTL	DL	DH	2672	DL2672	DH2672
G10:S006	G10 Cab Tamper	TA	TR	2673	TA2673	TR2673
G10:S007	G10 AC fail	AT	AR	2674	AT2674	AR2674
G10:S008	G10 Low Batt	YT	YR	2675	YT2675	YR2675
G10:S009	G10 LAN Fuse	YP	YQ	2676	YP2676	YQ2676
G10:S010	G10 DET Fuse	YP	YQ	2677	YP2677	YQ2677
G10:S011	G10 Low Volts	YP	YQ	2678	YP2678	YQ2678
G10:S012	G10 PS Fail	YP	YQ	2679	YP2679	YQ2679
G10:S013	G10 Batt Test	IA	IR	2680	IA2680	IR2680
G10:S014	G10 Invalid Card	DD	DR	2681	DD2681	DR2681
G10:S015	G10 Duress	HA	HR	2682	HA2682	HR2682
G10:S016	G10 Rdr Tamper	IA	IR	2683	IA2683	IR2683
G10:S017	G10 Panic	PA	PR	2684	PA2684	PR2684
G10:S018	G10 Pin Attempts	JA	UX	2685	JA2685	UX2685
G10:S019	G10 Temperature	UA	UR	2686	UA2686	UR2686
G10:S020	G10 Light Level	UA	UR	2687	UA2687	UR2687
G10:S021	G10 LAN Comms	EM	EN	2688	EM2688	EN2688
G10:S022	G10 Spare1	UA	UR	2689	UA2689	UR2689
G10:S023	G10 Spare2	UA	UR	2690	UA2690	UR2690
G11:Z001	G11:Z001	UA	UR	2691	UA2691	UR2691
G11:Z002	G11:Z002	UA	UR	2692	UA2692	UR2692
G11:S001	G11 Door Reed	UA	UR	2693	UA2693	UR2693
G11:S002	G11 Door Tongue	UA	UR	2694	UA2694	UR2694
G11:S003	G11 Door Tamper	IA	IR	2695	IA2695	IR2695
G11:S004	G11 Door Forced	DF	DR	2696	DF2696	DR2696
G11:S005	G11 Door DOTL	DL	DH	2697	DL2697	DH2697
G11:S006	G11 Cab Tamper	TA	TR	2698	TA2698	TR2698
G11:S007	G11 AC fail	AT	AR	2699	AT2699	AR2699
G11:S008	G11 Low Batt	YT	YR	2700	YT2700	YR2700

Integriti SIA DECIMAL Map. V21

G11:S009	G11 LAN Fuse	YP	YQ	2701	YP2701	YQ2701
G11:S010	G11 DET Fuse	YP	YQ	2702	YP2702	YQ2702
G11:S011	G11 Low Volts	YP	YQ	2703	YP2703	YQ2703
G11:S012	G11 PS Fail	YP	YQ	2704	YP2704	YQ2704
G11:S013	G11 Batt Test	IA	IR	2705	IA2705	IR2705
G11:S014	G11 Invalid Card	DD	DR	2706	DD2706	DR2706
G11:S015	G11 Duress	HA	HR	2707	HA2707	HR2707
G11:S016	G11 Rdr Tamper	IA	IR	2708	IA2708	IR2708
G11:S017	G11 Panic	PA	PR	2709	PA2709	PR2709
G11:S018	G11 Pin Attempts	JA	UX	2710	JA2710	UX2710
G11:S019	G11 Temperature	UA	UR	2711	UA2711	UR2711
G11:S020	G11 Light Level	UA	UR	2712	UA2712	UR2712
G11:S021	G11 LAN Comms	EM	EN	2713	EM2713	EN2713
G11:S022	G11 Spare1	UA	UR	2714	UA2714	UR2714
G11:S023	G11 Spare2	UA	UR	2715	UA2715	UR2715
G12:Z001	G12:Z001	UA	UR	2716	UA2716	UR2716
G12:Z002	G12:Z002	UA	UR	2717	UA2717	UR2717
G12:S001	G12 Door Reed	UA	UR	2718	UA2718	UR2718
G12:S002	G12 Door Tongue	UA	UR	2719	UA2719	UR2719
G12:S003	G12 Door Tamper	IA	IR	2720	IA2720	IR2720
G12:S004	G12 Door Forced	DF	DR	2721	DF2721	DR2721
G12:S005	G12 Door DOTL	DL	DH	2722	DL2722	DH2722
G12:S006	G12 Cab Tamper	TA	TR	2723	TA2723	TR2723
G12:S007	G12 AC fail	AT	AR	2724	AT2724	AR2724
G12:S008	G12 Low Batt	YT	YR	2725	YT2725	YR2725
G12:S009	G12 LAN Fuse	YP	YQ	2726	YP2726	YQ2726
G12:S010	G12 DET Fuse	YP	YQ	2727	YP2727	YQ2727
G12:S011	G12 Low Volts	YP	YQ	2728	YP2728	YQ2728
G12:S012	G12 PS Fail	YP	YQ	2729	YP2729	YQ2729
G12:S013	G12 Batt Test	IA	IR	2730	IA2730	IR2730
G12:S014	G12 Invalid Card	DD	DR	2731	DD2731	DR2731
G12:S015	G12 Duress	HA	HR	2732	HA2732	HR2732
G12:S016	G12 Rdr Tamper	IA	IR	2733	IA2733	IR2733
G12:S017	G12 Panic	PA	PR	2734	PA2734	PR2734
G12:S018	G12 Pin Attempts	JA	UX	2735	JA2735	UX2735
G12:S019	G12 Temperature	UA	UR	2736	UA2736	UR2736
G12:S020	G12 Light Level	UA	UR	2737	UA2737	UR2737
G12:S021	G12 LAN Comms	EM	EN	2738	EM2738	EN2738
G12:S022	G12 Spare1	UA	UR	2739	UA2739	UR2739
G12:S023	G12 Spare2	UA	UR	2740	UA2740	UR2740
G13:Z001	G13:Z001	UA	UR	2741	UA2741	UR2741
G13:Z002	G13:Z002	UA	UR	2742	UA2742	UR2742
G13:S001	G13 Door Reed	UA	UR	2743	UA2743	UR2743
G13:S002	G13 Door Tongue	UA	UR	2744	UA2744	UR2744
G13:S003	G13 Door Tamper	IA	IR	2745	IA2745	IR2745
G13:S004	G13 Door Forced	DF	DR	2746	DF2746	DR2746
G13:S005	G13 Door DOTL	DL	DH	2747	DL2747	DH2747
G13:S006	G13 Cab Tamper	TA	TR	2748	TA2748	TR2748
G13:S007	G13 AC fail	AT	AR	2749	AT2749	AR2749
G13:S008	G13 Low Batt	YT	YR	2750	YT2750	YR2750
G13:S009	G13 LAN Fuse	YP	YQ	2751	YP2751	YQ2751
G13:S010	G13 DET Fuse	YP	YQ	2752	YP2752	YQ2752
G13:S011	G13 Low Volts	YP	YQ	2753	YP2753	YQ2753
G13:S012	G13 PS Fail	YP	YQ	2754	YP2754	YQ2754
G13:S013	G13 Batt Test	IA	IR	2755	IA2755	IR2755
G13:S014	G13 Invalid Card	DD	DR	2756	DD2756	DR2756
G13:S015	G13 Duress	HA	HR	2757	HA2757	HR2757
G13:S016	G13 Rdr Tamper	IA	IR	2758	IA2758	IR2758
G13:S017	G13 Panic	PA	PR	2759	PA2759	PR2759
G13:S018	G13 Pin Attempts	JA	UX	2760	JA2760	UX2760
G13:S019	G13 Temperature	UA	UR	2761	UA2761	UR2761
G13:S020	G13 Light Level	UA	UR	2762	UA2762	UR2762
G13:S021	G13 LAN Comms	EM	EN	2763	EM2763	EN2763
G13:S022	G13 Spare1	UA	UR	2764	UA2764	UR2764
G13:S023	G13 Spare2	UA	UR	2765	UA2765	UR2765
G14:Z001	G14:Z001	UA	UR	2766	UA2766	UR2766
G14:Z002	G14:Z002	UA	UR	2767	UA2767	UR2767
G14:S001	G14 Door Reed	UA	UR	2768	UA2768	UR2768
G14:S002	G14 Door Tongue	UA	UR	2769	UA2769	UR2769
G14:S003	G14 Door Tamper	IA	IR	2770	IA2770	IR2770

Integriti SIA DECIMAL Map. V21

G14:S004	G14 Door Forced	DF	DR	2771	DF2771	DR2771
G14:S005	G14 Door DOTL	DL	DH	2772	DL2772	DH2772
G14:S006	G14 Cab Tamper	TA	TR	2773	TA2773	TR2773
G14:S007	G14 AC fail	AT	AR	2774	AT2774	AR2774
G14:S008	G14 Low Batt	YT	YR	2775	YT2775	YR2775
G14:S009	G14 LAN Fuse	YP	YQ	2776	YP2776	YQ2776
G14:S010	G14 DET Fuse	YP	YQ	2777	YP2777	YQ2777
G14:S011	G14 Low Volts	YP	YQ	2778	YP2778	YQ2778
G14:S012	G14 PS Fail	YP	YQ	2779	YP2779	YQ2779
G14:S013	G14 Batt Test	IA	IR	2780	IA2780	IR2780
G14:S014	G14 Invalid Card	DD	DR	2781	DD2781	DR2781
G14:S015	G14 Duress	HA	HR	2782	HA2782	HR2782
G14:S016	G14 Rdr Tamper	IA	IR	2783	IA2783	IR2783
G14:S017	G14 Panic	PA	PR	2784	PA2784	PR2784
G14:S018	G14 Pin Attempts	JA	UX	2785	JA2785	UX2785
G14:S019	G14 Temperature	UA	UR	2786	UA2786	UR2786
G14:S020	G14 Light Level	UA	UR	2787	UA2787	UR2787
G14:S021	G14 LAN Comms	EM	EN	2788	EM2788	EN2788
G14:S022	G14 Spare1	UA	UR	2789	UA2789	UR2789
G14:S023	G14 Spare2	UA	UR	2790	UA2790	UR2790
G15:Z001	G15:Z001	UA	UR	2791	UA2791	UR2791
G15:Z002	G15:Z002	UA	UR	2792	UA2792	UR2792
G15:S001	G15 Door Reed	UA	UR	2793	UA2793	UR2793
G15:S002	G15 Door Tongue	UA	UR	2794	UA2794	UR2794
G15:S003	G15 Door Tamper	IA	IR	2795	IA2795	IR2795
G15:S004	G15 Door Forced	DF	DR	2796	DF2796	DR2796
G15:S005	G15 Door DOTL	DL	DH	2797	DL2797	DH2797
G15:S006	G15 Cab Tamper	TA	TR	2798	TA2798	TR2798
G15:S007	G15 AC fail	AT	AR	2799	AT2799	AR2799
G15:S008	G15 Low Batt	YT	YR	2800	YT2800	YR2800
G15:S009	G15 LAN Fuse	YP	YQ	2801	YP2801	YQ2801
G15:S010	G15 DET Fuse	YP	YQ	2802	YP2802	YQ2802
G15:S011	G15 Low Volts	YP	YQ	2803	YP2803	YQ2803
G15:S012	G15 PS Fail	YP	YQ	2804	YP2804	YQ2804
G15:S013	G15 Batt Test	IA	IR	2805	IA2805	IR2805
G15:S014	G15 Invalid Card	DD	DR	2806	DD2806	DR2806
G15:S015	G15 Duress	HA	HR	2807	HA2807	HR2807
G15:S016	G15 Rdr Tamper	IA	IR	2808	IA2808	IR2808
G15:S017	G15 Panic	PA	PR	2809	PA2809	PR2809
G15:S018	G15 Pin Attempts	JA	UX	2810	JA2810	UX2810
G15:S019	G15 Temperature	UA	UR	2811	UA2811	UR2811
G15:S020	G15 Light Level	UA	UR	2812	UA2812	UR2812
G15:S021	G15 LAN Comms	EM	EN	2813	EM2813	EN2813
G15:S022	G15 Spare1	UA	UR	2814	UA2814	UR2814
G15:S023	G15 Spare2	UA	UR	2815	UA2815	UR2815
G16:Z001	G16:Z001	UA	UR	2816	UA2816	UR2816
G16:Z002	G16:Z002	UA	UR	2817	UA2817	UR2817
G16:S001	G16 Door Reed	UA	UR	2818	UA2818	UR2818
G16:S002	G16 Door Tongue	UA	UR	2819	UA2819	UR2819
G16:S003	G16 Door Tamper	IA	IR	2820	IA2820	IR2820
G16:S004	G16 Door Forced	DF	DR	2821	DF2821	DR2821
G16:S005	G16 Door DOTL	DL	DH	2822	DL2822	DH2822
G16:S006	G16 Cab Tamper	TA	TR	2823	TA2823	TR2823
G16:S007	G16 AC fail	AT	AR	2824	AT2824	AR2824
G16:S008	G16 Low Batt	YT	YR	2825	YT2825	YR2825
G16:S009	G16 LAN Fuse	YP	YQ	2826	YP2826	YQ2826
G16:S010	G16 DET Fuse	YP	YQ	2827	YP2827	YQ2827
G16:S011	G16 Low Volts	YP	YQ	2828	YP2828	YQ2828
G16:S012	G16 PS Fail	YP	YQ	2829	YP2829	YQ2829
G16:S013	G16 Batt Test	IA	IR	2830	IA2830	IR2830
G16:S014	G16 Invalid Card	DD	DR	2831	DD2831	DR2831
G16:S015	G16 Duress	HA	HR	2832	HA2832	HR2832
G16:S016	G16 Rdr Tamper	IA	IR	2833	IA2833	IR2833
G16:S017	G16 Panic	PA	PR	2834	PA2834	PR2834
G16:S018	G16 Pin Attempts	JA	UX	2835	JA2835	UX2835
G16:S019	G16 Temperature	UA	UR	2836	UA2836	UR2836
G16:S020	G16 Light Level	UA	UR	2837	UA2837	UR2837
G16:S021	G16 LAN Comms	EM	EN	2838	EM2838	EN2838
G16:S022	G16 Spare1	UA	UR	2839	UA2839	UR2839
G16:S023	G16 Spare2	UA	UR	2840	UA2840	UR2840

Integriti SIA DECIMAL Map. V21

G17:Z001	G17:Z001	UA	UR	2841	UA2841	UR2841
G17:Z002	G17:Z002	UA	UR	2842	UA2842	UR2842
G17:S001	G17 Door Reed	UA	UR	2843	UA2843	UR2843
G17:S002	G17 Door Tongue	UA	UR	2844	UA2844	UR2844
G17:S003	G17 Door Tamper	IA	IR	2845	IA2845	IR2845
G17:S004	G17 Door Forced	DF	DR	2846	DF2846	DR2846
G17:S005	G17 Door DOTL	DL	DH	2847	DL2847	DH2847
G17:S006	G17 Cab Tamper	TA	TR	2848	TA2848	TR2848
G17:S007	G17 AC fail	AT	AR	2849	AT2849	AR2849
G17:S008	G17 Low Batt	YT	YR	2850	YT2850	YR2850
G17:S009	G17 LAN Fuse	YP	YQ	2851	YP2851	YQ2851
G17:S010	G17 DET Fuse	YP	YQ	2852	YP2852	YQ2852
G17:S011	G17 Low Volts	YP	YQ	2853	YP2853	YQ2853
G17:S012	G17 PS Fail	YP	YQ	2854	YP2854	YQ2854
G17:S013	G17 Batt Test	IA	IR	2855	IA2855	IR2855
G17:S014	G17 Invalid Card	DD	DR	2856	DD2856	DR2856
G17:S015	G17 Duress	HA	HR	2857	HA2857	HR2857
G17:S016	G17 Rdr Tamper	IA	IR	2858	IA2858	IR2858
G17:S017	G17 Panic	PA	PR	2859	PA2859	PR2859
G17:S018	G17 Pin Attempts	JA	UX	2860	JA2860	UX2860
G17:S019	G17 Temperature	UA	UR	2861	UA2861	UR2861
G17:S020	G17 Light Level	UA	UR	2862	UA2862	UR2862
G17:S021	G17 LAN Comms	EM	EN	2863	EM2863	EN2863
G17:S022	G17 Spare1	UA	UR	2864	UA2864	UR2864
G17:S023	G17 Spare2	UA	UR	2865	UA2865	UR2865
G18:Z001	G18:Z001	UA	UR	2866	UA2866	UR2866
G18:Z002	G18:Z002	UA	UR	2867	UA2867	UR2867
G18:S001	G18 Door Reed	UA	UR	2868	UA2868	UR2868
G18:S002	G18 Door Tongue	UA	UR	2869	UA2869	UR2869
G18:S003	G18 Door Tamper	IA	IR	2870	IA2870	IR2870
G18:S004	G18 Door Forced	DF	DR	2871	DF2871	DR2871
G18:S005	G18 Door DOTL	DL	DH	2872	DL2872	DH2872
G18:S006	G18 Cab Tamper	TA	TR	2873	TA2873	TR2873
G18:S007	G18 AC fail	AT	AR	2874	AT2874	AR2874
G18:S008	G18 Low Batt	YT	YR	2875	YT2875	YR2875
G18:S009	G18 LAN Fuse	YP	YQ	2876	YP2876	YQ2876
G18:S010	G18 DET Fuse	YP	YQ	2877	YP2877	YQ2877
G18:S011	G18 Low Volts	YP	YQ	2878	YP2878	YQ2878
G18:S012	G18 PS Fail	YP	YQ	2879	YP2879	YQ2879
G18:S013	G18 Batt Test	IA	IR	2880	IA2880	IR2880
G18:S014	G18 Invalid Card	DD	DR	2881	DD2881	DR2881
G18:S015	G18 Duress	HA	HR	2882	HA2882	HR2882
G18:S016	G18 Rdr Tamper	IA	IR	2883	IA2883	IR2883
G18:S017	G18 Panic	PA	PR	2884	PA2884	PR2884
G18:S018	G18 Pin Attempts	JA	UX	2885	JA2885	UX2885
G18:S019	G18 Temperature	UA	UR	2886	UA2886	UR2886
G18:S020	G18 Light Level	UA	UR	2887	UA2887	UR2887
G18:S021	G18 LAN Comms	EM	EN	2888	EM2888	EN2888
G18:S022	G18 Spare1	UA	UR	2889	UA2889	UR2889
G18:S023	G18 Spare2	UA	UR	2890	UA2890	UR2890
G19:Z001	G19:Z001	UA	UR	2891	UA2891	UR2891
G19:Z002	G19:Z002	UA	UR	2892	UA2892	UR2892
G19:S001	G19 Door Reed	UA	UR	2893	UA2893	UR2893
G19:S002	G19 Door Tongue	UA	UR	2894	UA2894	UR2894
G19:S003	G19 Door Tamper	IA	IR	2895	IA2895	IR2895
G19:S004	G19 Door Forced	DF	DR	2896	DF2896	DR2896
G19:S005	G19 Door DOTL	DL	DH	2897	DL2897	DH2897
G19:S006	G19 Cab Tamper	TA	TR	2898	TA2898	TR2898
G19:S007	G19 AC fail	AT	AR	2899	AT2899	AR2899
G19:S008	G19 Low Batt	YT	YR	2900	YT2900	YR2900
G19:S009	G19 LAN Fuse	YP	YQ	2901	YP2901	YQ2901
G19:S010	G19 DET Fuse	YP	YQ	2902	YP2902	YQ2902
G19:S011	G19 Low Volts	YP	YQ	2903	YP2903	YQ2903
G19:S012	G19 PS Fail	YP	YQ	2904	YP2904	YQ2904
G19:S013	G19 Batt Test	IA	IR	2905	IA2905	IR2905
G19:S014	G19 Invalid Card	DD	DR	2906	DD2906	DR2906
G19:S015	G19 Duress	HA	HR	2907	HA2907	HR2907
G19:S016	G19 Rdr Tamper	IA	IR	2908	IA2908	IR2908
G19:S017	G19 Panic	PA	PR	2909	PA2909	PR2909
G19:S018	G19 Pin Attempts	JA	UX	2910	JA2910	UX2910

Integriti SIA DECIMAL Map. V21

G19:S019	G19 Temperature	UA	UR	2911	UA2911	UR2911
G19:S020	G19 Light Level	UA	UR	2912	UA2912	UR2912
G19:S021	G19 LAN Comms	EM	EN	2913	EM2913	EN2913
G19:S022	G19 Spare1	UA	UR	2914	UA2914	UR2914
G19:S023	G19 Spare2	UA	UR	2915	UA2915	UR2915
G20:Z001	G20:Z001	UA	UR	2916	UA2916	UR2916
G20:Z002	G20:Z002	UA	UR	2917	UA2917	UR2917
G20:S001	G20 Door Reed	UA	UR	2918	UA2918	UR2918
G20:S002	G20 Door Tongue	UA	UR	2919	UA2919	UR2919
G20:S003	G20 Door Tamper	IA	IR	2920	IA2920	IR2920
G20:S004	G20 Door Forced	DF	DR	2921	DF2921	DR2921
G20:S005	G20 Door DOTL	DL	DH	2922	DL2922	DH2922
G20:S006	G20 Cab Tamper	TA	TR	2923	TA2923	TR2923
G20:S007	G20 AC fail	AT	AR	2924	AT2924	AR2924
G20:S008	G20 Low Batt	YT	YR	2925	YT2925	YR2925
G20:S009	G20 LAN Fuse	YP	YQ	2926	YP2926	YQ2926
G20:S010	G20 DET Fuse	YP	YQ	2927	YP2927	YQ2927
G20:S011	G20 Low Volts	YP	YQ	2928	YP2928	YQ2928
G20:S012	G20 PS Fail	YP	YQ	2929	YP2929	YQ2929
G20:S013	G20 Batt Test	IA	IR	2930	IA2930	IR2930
G20:S014	G20 Invalid Card	DD	DR	2931	DD2931	DR2931
G20:S015	G20 Duress	HA	HR	2932	HA2932	HR2932
G20:S016	G20 Rdr Tamper	IA	IR	2933	IA2933	IR2933
G20:S017	G20 Panic	PA	PR	2934	PA2934	PR2934
G20:S018	G20 Pin Attempts	JA	UX	2935	JA2935	UX2935
G20:S019	G20 Temperature	UA	UR	2936	UA2936	UR2936
G20:S020	G20 Light Level	UA	UR	2937	UA2937	UR2937
G20:S021	G20 LAN Comms	EM	EN	2938	EM2938	EN2938
G20:S022	G20 Spare1	UA	UR	2939	UA2939	UR2939
G20:S023	G20 Spare2	UA	UR	2940	UA2940	UR2940
G21:Z001	G21:Z001	UA	UR	2941	UA2941	UR2941
G21:Z002	G21:Z002	UA	UR	2942	UA2942	UR2942
G21:S001	G21 Door Reed	UA	UR	2943	UA2943	UR2943
G21:S002	G21 Door Tongue	UA	UR	2944	UA2944	UR2944
G21:S003	G21 Door Tamper	IA	IR	2945	IA2945	IR2945
G21:S004	G21 Door Forced	DF	DR	2946	DF2946	DR2946
G21:S005	G21 Door DOTL	DL	DH	2947	DL2947	DH2947
G21:S006	G21 Cab Tamper	TA	TR	2948	TA2948	TR2948
G21:S007	G21 AC fail	AT	AR	2949	AT2949	AR2949
G21:S008	G21 Low Batt	YT	YR	2950	YT2950	YR2950
G21:S009	G21 LAN Fuse	YP	YQ	2951	YP2951	YQ2951
G21:S010	G21 DET Fuse	YP	YQ	2952	YP2952	YQ2952
G21:S011	G21 Low Volts	YP	YQ	2953	YP2953	YQ2953
G21:S012	G21 PS Fail	YP	YQ	2954	YP2954	YQ2954
G21:S013	G21 Batt Test	IA	IR	2955	IA2955	IR2955
G21:S014	G21 Invalid Card	DD	DR	2956	DD2956	DR2956
G21:S015	G21 Duress	HA	HR	2957	HA2957	HR2957
G21:S016	G21 Rdr Tamper	IA	IR	2958	IA2958	IR2958
G21:S017	G21 Panic	PA	PR	2959	PA2959	PR2959
G21:S018	G21 Pin Attempts	JA	UX	2960	JA2960	UX2960
G21:S019	G21 Temperature	UA	UR	2961	UA2961	UR2961
G21:S020	G21 Light Level	UA	UR	2962	UA2962	UR2962
G21:S021	G21 LAN Comms	EM	EN	2963	EM2963	EN2963
G21:S022	G21 Spare1	UA	UR	2964	UA2964	UR2964
G21:S023	G21 Spare2	UA	UR	2965	UA2965	UR2965
G22:Z001	G22:Z001	UA	UR	2966	UA2966	UR2966
G22:Z002	G22:Z002	UA	UR	2967	UA2967	UR2967
G22:S001	G22 Door Reed	UA	UR	2968	UA2968	UR2968
G22:S002	G22 Door Tongue	UA	UR	2969	UA2969	UR2969
G22:S003	G22 Door Tamper	IA	IR	2970	IA2970	IR2970
G22:S004	G22 Door Forced	DF	DR	2971	DF2971	DR2971
G22:S005	G22 Door DOTL	DL	DH	2972	DL2972	DH2972
G22:S006	G22 Cab Tamper	TA	TR	2973	TA2973	TR2973
G22:S007	G22 AC fail	AT	AR	2974	AT2974	AR2974
G22:S008	G22 Low Batt	YT	YR	2975	YT2975	YR2975
G22:S009	G22 LAN Fuse	YP	YQ	2976	YP2976	YQ2976
G22:S010	G22 DET Fuse	YP	YQ	2977	YP2977	YQ2977
G22:S011	G22 Low Volts	YP	YQ	2978	YP2978	YQ2978
G22:S012	G22 PS Fail	YP	YQ	2979	YP2979	YQ2979
G22:S013	G22 Batt Test	IA	IR	2980	IA2980	IR2980

Integriti SIA DECIMAL Map. V21

G22:S014	G22 Invalid Card	DD	DR	2981	DD2981	DR2981
G22:S015	G22 Duress	HA	HR	2982	HA2982	HR2982
G22:S016	G22 Rdr Tamper	IA	IR	2983	IA2983	IR2983
G22:S017	G22 Panic	PA	PR	2984	PA2984	PR2984
G22:S018	G22 Pin Attempts	JA	UX	2985	JA2985	UX2985
G22:S019	G22 Temperature	UA	UR	2986	UA2986	UR2986
G22:S020	G22 Light Level	UA	UR	2987	UA2987	UR2987
G22:S021	G22 LAN Comms	EM	EN	2988	EM2988	EN2988
G22:S022	G22 Spare1	UA	UR	2989	UA2989	UR2989
G22:S023	G22 Spare2	UA	UR	2990	UA2990	UR2990
G23:Z001	G23:Z001	UA	UR	2991	UA2991	UR2991
G23:Z002	G23:Z002	UA	UR	2992	UA2992	UR2992
G23:S001	G23 Door Reed	UA	UR	2993	UA2993	UR2993
G23:S002	G23 Door Tongue	UA	UR	2994	UA2994	UR2994
G23:S003	G23 Door Tamper	IA	IR	2995	IA2995	IR2995
G23:S004	G23 Door Forced	DF	DR	2996	DF2996	DR2996
G23:S005	G23 Door DOTL	DL	DH	2997	DL2997	DH2997
G23:S006	G23 Cab Tamper	TA	TR	2998	TA2998	TR2998
G23:S007	G23 AC fail	AT	AR	2999	AT2999	AR2999
G23:S008	G23 Low Batt	YT	YR	3000	YT3000	YR3000
G23:S009	G23 LAN Fuse	YP	YQ	3001	YP3001	YQ3001
G23:S010	G23 DET Fuse	YP	YQ	3002	YP3002	YQ3002
G23:S011	G23 Low Volts	YP	YQ	3003	YP3003	YQ3003
G23:S012	G23 PS Fail	YP	YQ	3004	YP3004	YQ3004
G23:S013	G23 Batt Test	IA	IR	3005	IA3005	IR3005
G23:S014	G23 Invalid Card	DD	DR	3006	DD3006	DR3006
G23:S015	G23 Duress	HA	HR	3007	HA3007	HR3007
G23:S016	G23 Rdr Tamper	IA	IR	3008	IA3008	IR3008
G23:S017	G23 Panic	PA	PR	3009	PA3009	PR3009
G23:S018	G23 Pin Attempts	JA	UX	3010	JA3010	UX3010
G23:S019	G23 Temperature	UA	UR	3011	UA3011	UR3011
G23:S020	G23 Light Level	UA	UR	3012	UA3012	UR3012
G23:S021	G23 LAN Comms	EM	EN	3013	EM3013	EN3013
G23:S022	G23 Spare1	UA	UR	3014	UA3014	UR3014
G23:S023	G23 Spare2	UA	UR	3015	UA3015	UR3015
G24:Z001	G24:Z001	UA	UR	3016	UA3016	UR3016
G24:Z002	G24:Z002	UA	UR	3017	UA3017	UR3017
G24:S001	G24 Door Reed	UA	UR	3018	UA3018	UR3018
G24:S002	G24 Door Tongue	UA	UR	3019	UA3019	UR3019
G24:S003	G24 Door Tamper	IA	IR	3020	IA3020	IR3020
G24:S004	G24 Door Forced	DF	DR	3021	DF3021	DR3021
G24:S005	G24 Door DOTL	DL	DH	3022	DL3022	DH3022
G24:S006	G24 Cab Tamper	TA	TR	3023	TA3023	TR3023
G24:S007	G24 AC fail	AT	AR	3024	AT3024	AR3024
G24:S008	G24 Low Batt	YT	YR	3025	YT3025	YR3025
G24:S009	G24 LAN Fuse	YP	YQ	3026	YP3026	YQ3026
G24:S010	G24 DET Fuse	YP	YQ	3027	YP3027	YQ3027
G24:S011	G24 Low Volts	YP	YQ	3028	YP3028	YQ3028
G24:S012	G24 PS Fail	YP	YQ	3029	YP3029	YQ3029
G24:S013	G24 Batt Test	IA	IR	3030	IA3030	IR3030
G24:S014	G24 Invalid Card	DD	DR	3031	DD3031	DR3031
G24:S015	G24 Duress	HA	HR	3032	HA3032	HR3032
G24:S016	G24 Rdr Tamper	IA	IR	3033	IA3033	IR3033
G24:S017	G24 Panic	PA	PR	3034	PA3034	PR3034
G24:S018	G24 Pin Attempts	JA	UX	3035	JA3035	UX3035
G24:S019	G24 Temperature	UA	UR	3036	UA3036	UR3036
G24:S020	G24 Light Level	UA	UR	3037	UA3037	UR3037
G24:S021	G24 LAN Comms	EM	EN	3038	EM3038	EN3038
G24:S022	G24 Spare1	UA	UR	3039	UA3039	UR3039
G24:S023	G24 Spare2	UA	UR	3040	UA3040	UR3040
G25:Z001	G25:Z001	UA	UR	3041	UA3041	UR3041
G25:Z002	G25:Z002	UA	UR	3042	UA3042	UR3042
G25:S001	G25 Door Reed	UA	UR	3043	UA3043	UR3043
G25:S002	G25 Door Tongue	UA	UR	3044	UA3044	UR3044
G25:S003	G25 Door Tamper	IA	IR	3045	IA3045	IR3045
G25:S004	G25 Door Forced	DF	DR	3046	DF3046	DR3046
G25:S005	G25 Door DOTL	DL	DH	3047	DL3047	DH3047
G25:S006	G25 Cab Tamper	TA	TR	3048	TA3048	TR3048
G25:S007	G25 AC fail	AT	AR	3049	AT3049	AR3049
G25:S008	G25 Low Batt	YT	YR	3050	YT3050	YR3050

Integriti SIA DECIMAL Map. V21

G25:S009	G25 LAN Fuse	YP	YQ	3051	YP3051	YQ3051
G25:S010	G25 DET Fuse	YP	YQ	3052	YP3052	YQ3052
G25:S011	G25 Low Volts	YP	YQ	3053	YP3053	YQ3053
G25:S012	G25 PS Fail	YP	YQ	3054	YP3054	YQ3054
G25:S013	G25 Batt Test	IA	IR	3055	IA3055	IR3055
G25:S014	G25 Invalid Card	DD	DR	3056	DD3056	DR3056
G25:S015	G25 Duress	HA	HR	3057	HA3057	HR3057
G25:S016	G25 Rdr Tamper	IA	IR	3058	IA3058	IR3058
G25:S017	G25 Panic	PA	PR	3059	PA3059	PR3059
G25:S018	G25 Pin Attempts	JA	UX	3060	JA3060	UX3060
G25:S019	G25 Temperature	UA	UR	3061	UA3061	UR3061
G25:S020	G25 Light Level	UA	UR	3062	UA3062	UR3062
G25:S021	G25 LAN Comms	EM	EN	3063	EM3063	EN3063
G25:S022	G25 Spare1	UA	UR	3064	UA3064	UR3064
G25:S023	G25 Spare2	UA	UR	3065	UA3065	UR3065
G26:Z001	G26:Z001	UA	UR	3066	UA3066	UR3066
G26:Z002	G26:Z002	UA	UR	3067	UA3067	UR3067
G26:S001	G26 Door Reed	UA	UR	3068	UA3068	UR3068
G26:S002	G26 Door Tongue	UA	UR	3069	UA3069	UR3069
G26:S003	G26 Door Tamper	IA	IR	3070	IA3070	IR3070
G26:S004	G26 Door Forced	DF	DR	3071	DF3071	DR3071
G26:S005	G26 Door DOTL	DL	DH	3072	DL3072	DH3072
G26:S006	G26 Cab Tamper	TA	TR	3073	TA3073	TR3073
G26:S007	G26 AC fail	AT	AR	3074	AT3074	AR3074
G26:S008	G26 Low Batt	YT	YR	3075	YT3075	YR3075
G26:S009	G26 LAN Fuse	YP	YQ	3076	YP3076	YQ3076
G26:S010	G26 DET Fuse	YP	YQ	3077	YP3077	YQ3077
G26:S011	G26 Low Volts	YP	YQ	3078	YP3078	YQ3078
G26:S012	G26 PS Fail	YP	YQ	3079	YP3079	YQ3079
G26:S013	G26 Batt Test	IA	IR	3080	IA3080	IR3080
G26:S014	G26 Invalid Card	DD	DR	9999	DD9999	DR9999
G26:S015	G26 Duress	HA	HR	9999	HA9999	HR9999
G26:S016	G26 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G26:S017	G26 Panic	PA	PR	9999	PA9999	PR9999
G26:S018	G26 Pin Attempts	JA	UX	9999	JA9999	UX9999
G26:S019	G26 Temperature	UA	UR	9999	UA9999	UR9999
G26:S020	G26 Light Level	UA	UR	9999	UA9999	UR9999
G26:S021	G26 LAN Comms	EM	EN	9999	EM9999	EN9999
G26:S022	G26 Spare1	UA	UR	9999	UA9999	UR9999
G26:S023	G26 Spare2	UA	UR	9999	UA9999	UR9999
G27:Z001	G27:Z001	UA	UR	9999	UA9999	UR9999
G27:Z002	G27:Z002	UA	UR	9999	UA9999	UR9999
G27:S001	G27 Door Reed	UA	UR	9999	UA9999	UR9999
G27:S002	G27 Door Tongue	UA	UR	9999	UA9999	UR9999
G27:S003	G27 Door Tamper	IA	IR	9999	IA9999	IR9999
G27:S004	G27 Door Forced	DF	DR	9999	DF9999	DR9999
G27:S005	G27 Door DOTL	DL	DH	9999	DL9999	DH9999
G27:S006	G27 Cab Tamper	TA	TR	9999	TA9999	TR9999
G27:S007	G27 AC fail	AT	AR	9999	AT9999	AR9999
G27:S008	G27 Low Batt	YT	YR	9999	YT9999	YR9999
G27:S009	G27 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G27:S010	G27 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G27:S011	G27 Low Volts	YP	YQ	9999	YP9999	YQ9999
G27:S012	G27 PS Fail	YP	YQ	9999	YP9999	YQ9999
G27:S013	G27 Batt Test	IA	IR	9999	IA9999	IR9999
G27:S014	G27 Invalid Card	DD	DR	9999	DD9999	DR9999
G27:S015	G27 Duress	HA	HR	9999	HA9999	HR9999
G27:S016	G27 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G27:S017	G27 Panic	PA	PR	9999	PA9999	PR9999
G27:S018	G27 Pin Attempts	JA	UX	9999	JA9999	UX9999
G27:S019	G27 Temperature	UA	UR	9999	UA9999	UR9999
G27:S020	G27 Light Level	UA	UR	9999	UA9999	UR9999
G27:S021	G27 LAN Comms	EM	EN	9999	EM9999	EN9999
G27:S022	G27 Spare1	UA	UR	9999	UA9999	UR9999
G27:S023	G27 Spare2	UA	UR	9999	UA9999	UR9999
G28:Z001	G28:Z001	UA	UR	9999	UA9999	UR9999
G28:Z002	G28:Z002	UA	UR	9999	UA9999	UR9999
G28:S001	G28 Door Reed	UA	UR	9999	UA9999	UR9999
G28:S002	G28 Door Tongue	UA	UR	9999	UA9999	UR9999
G28:S003	G28 Door Tamper	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G28:S004	G28 Door Forced	DF	DR	9999	DF9999	DR9999
G28:S005	G28 Door DOTL	DL	DH	9999	DL9999	DH9999
G28:S006	G28 Cab Tamper	TA	TR	9999	TA9999	TR9999
G28:S007	G28 AC fail	AT	AR	9999	AT9999	AR9999
G28:S008	G28 Low Batt	YT	YR	9999	YT9999	YR9999
G28:S009	G28 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G28:S010	G28 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G28:S011	G28 Low Volts	YP	YQ	9999	YP9999	YQ9999
G28:S012	G28 PS Fail	YP	YQ	9999	YP9999	YQ9999
G28:S013	G28 Batt Test	IA	IR	9999	IA9999	IR9999
G28:S014	G28 Invalid Card	DD	DR	9999	DD9999	DR9999
G28:S015	G28 Duress	HA	HR	9999	HA9999	HR9999
G28:S016	G28 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G28:S017	G28 Panic	PA	PR	9999	PA9999	PR9999
G28:S018	G28 Pin Attempts	JA	UX	9999	JA9999	UX9999
G28:S019	G28 Temperature	UA	UR	9999	UA9999	UR9999
G28:S020	G28 Light Level	UA	UR	9999	UA9999	UR9999
G28:S021	G28 LAN Comms	EM	EN	9999	EM9999	EN9999
G28:S022	G28 Spare1	UA	UR	9999	UA9999	UR9999
G28:S023	G28 Spare2	UA	UR	9999	UA9999	UR9999
G29:Z001	G29:Z001	UA	UR	9999	UA9999	UR9999
G29:Z002	G29:Z002	UA	UR	9999	UA9999	UR9999
G29:S001	G29 Door Reed	UA	UR	9999	UA9999	UR9999
G29:S002	G29 Door Tongue	UA	UR	9999	UA9999	UR9999
G29:S003	G29 Door Tamper	IA	IR	9999	IA9999	IR9999
G29:S004	G29 Door Forced	DF	DR	9999	DF9999	DR9999
G29:S005	G29 Door DOTL	DL	DH	9999	DL9999	DH9999
G29:S006	G29 Cab Tamper	TA	TR	9999	TA9999	TR9999
G29:S007	G29 AC fail	AT	AR	9999	AT9999	AR9999
G29:S008	G29 Low Batt	YT	YR	9999	YT9999	YR9999
G29:S009	G29 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G29:S010	G29 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G29:S011	G29 Low Volts	YP	YQ	9999	YP9999	YQ9999
G29:S012	G29 PS Fail	YP	YQ	9999	YP9999	YQ9999
G29:S013	G29 Batt Test	IA	IR	9999	IA9999	IR9999
G29:S014	G29 Invalid Card	DD	DR	9999	DD9999	DR9999
G29:S015	G29 Duress	HA	HR	9999	HA9999	HR9999
G29:S016	G29 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G29:S017	G29 Panic	PA	PR	9999	PA9999	PR9999
G29:S018	G29 Pin Attempts	JA	UX	9999	JA9999	UX9999
G29:S019	G29 Temperature	UA	UR	9999	UA9999	UR9999
G29:S020	G29 Light Level	UA	UR	9999	UA9999	UR9999
G29:S021	G29 LAN Comms	EM	EN	9999	EM9999	EN9999
G29:S022	G29 Spare1	UA	UR	9999	UA9999	UR9999
G29:S023	G29 Spare2	UA	UR	9999	UA9999	UR9999
G30:Z001	G30:Z001	UA	UR	9999	UA9999	UR9999
G30:Z002	G30:Z002	UA	UR	9999	UA9999	UR9999
G30:S001	G30 Door Reed	UA	UR	9999	UA9999	UR9999
G30:S002	G30 Door Tongue	UA	UR	9999	UA9999	UR9999
G30:S003	G30 Door Tamper	IA	IR	9999	IA9999	IR9999
G30:S004	G30 Door Forced	DF	DR	9999	DF9999	DR9999
G30:S005	G30 Door DOTL	DL	DH	9999	DL9999	DH9999
G30:S006	G30 Cab Tamper	TA	TR	9999	TA9999	TR9999
G30:S007	G30 AC fail	AT	AR	9999	AT9999	AR9999
G30:S008	G30 Low Batt	YT	YR	9999	YT9999	YR9999
G30:S009	G30 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G30:S010	G30 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G30:S011	G30 Low Volts	YP	YQ	9999	YP9999	YQ9999
G30:S012	G30 PS Fail	YP	YQ	9999	YP9999	YQ9999
G30:S013	G30 Batt Test	IA	IR	9999	IA9999	IR9999
G30:S014	G30 Invalid Card	DD	DR	9999	DD9999	DR9999
G30:S015	G30 Duress	HA	HR	9999	HA9999	HR9999
G30:S016	G30 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G30:S017	G30 Panic	PA	PR	9999	PA9999	PR9999
G30:S018	G30 Pin Attempts	JA	UX	9999	JA9999	UX9999
G30:S019	G30 Temperature	UA	UR	9999	UA9999	UR9999
G30:S020	G30 Light Level	UA	UR	9999	UA9999	UR9999
G30:S021	G30 LAN Comms	EM	EN	9999	EM9999	EN9999
G30:S022	G30 Spare1	UA	UR	9999	UA9999	UR9999
G30:S023	G30 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

G31:Z001	G31:Z001	UA	UR	9999	UA9999	UR9999
G31:Z002	G31:Z002	UA	UR	9999	UA9999	UR9999
G31:S001	G31 Door Reed	UA	UR	9999	UA9999	UR9999
G31:S002	G31 Door Tongue	UA	UR	9999	UA9999	UR9999
G31:S003	G31 Door Tamper	IA	IR	9999	IA9999	IR9999
G31:S004	G31 Door Forced	DF	DR	9999	DF9999	DR9999
G31:S005	G31 Door DOTL	DL	DH	9999	DL9999	DH9999
G31:S006	G31 Cab Tamper	TA	TR	9999	TA9999	TR9999
G31:S007	G31 AC fail	AT	AR	9999	AT9999	AR9999
G31:S008	G31 Low Batt	YT	YR	9999	YT9999	YR9999
G31:S009	G31 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G31:S010	G31 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G31:S011	G31 Low Volts	YP	YQ	9999	YP9999	YQ9999
G31:S012	G31 PS Fail	YP	YQ	9999	YP9999	YQ9999
G31:S013	G31 Batt Test	IA	IR	9999	IA9999	IR9999
G31:S014	G31 Invalid Card	DD	DR	9999	DD9999	DR9999
G31:S015	G31 Duress	HA	HR	9999	HA9999	HR9999
G31:S016	G31 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G31:S017	G31 Panic	PA	PR	9999	PA9999	PR9999
G31:S018	G31 Pin Attempts	JA	UX	9999	JA9999	UX9999
G31:S019	G31 Temperature	UA	UR	9999	UA9999	UR9999
G31:S020	G31 Light Level	UA	UR	9999	UA9999	UR9999
G31:S021	G31 LAN Comms	EM	EN	9999	EM9999	EN9999
G31:S022	G31 Spare1	UA	UR	9999	UA9999	UR9999
G31:S023	G31 Spare2	UA	UR	9999	UA9999	UR9999
G32:Z001	G32:Z001	UA	UR	9999	UA9999	UR9999
G32:Z002	G32:Z002	UA	UR	9999	UA9999	UR9999
G32:S001	G32 Door Reed	UA	UR	9999	UA9999	UR9999
G32:S002	G32 Door Tongue	UA	UR	9999	UA9999	UR9999
G32:S003	G32 Door Tamper	IA	IR	9999	IA9999	IR9999
G32:S004	G32 Door Forced	DF	DR	9999	DF9999	DR9999
G32:S005	G32 Door DOTL	DL	DH	9999	DL9999	DH9999
G32:S006	G32 Cab Tamper	TA	TR	9999	TA9999	TR9999
G32:S007	G32 AC fail	AT	AR	9999	AT9999	AR9999
G32:S008	G32 Low Batt	YT	YR	9999	YT9999	YR9999
G32:S009	G32 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G32:S010	G32 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G32:S011	G32 Low Volts	YP	YQ	9999	YP9999	YQ9999
G32:S012	G32 PS Fail	YP	YQ	9999	YP9999	YQ9999
G32:S013	G32 Batt Test	IA	IR	9999	IA9999	IR9999
G32:S014	G32 Invalid Card	DD	DR	9999	DD9999	DR9999
G32:S015	G32 Duress	HA	HR	9999	HA9999	HR9999
G32:S016	G32 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G32:S017	G32 Panic	PA	PR	9999	PA9999	PR9999
G32:S018	G32 Pin Attempts	JA	UX	9999	JA9999	UX9999
G32:S019	G32 Temperature	UA	UR	9999	UA9999	UR9999
G32:S020	G32 Light Level	UA	UR	9999	UA9999	UR9999
G32:S021	G32 LAN Comms	EM	EN	9999	EM9999	EN9999
G32:S022	G32 Spare1	UA	UR	9999	UA9999	UR9999
G32:S023	G32 Spare2	UA	UR	9999	UA9999	UR9999
G33:Z001	G33:Z001	UA	UR	9999	UA9999	UR9999
G33:Z002	G33:Z002	UA	UR	9999	UA9999	UR9999
G33:S001	G33 Door Reed	UA	UR	9999	UA9999	UR9999
G33:S002	G33 Door Tongue	UA	UR	9999	UA9999	UR9999
G33:S003	G33 Door Tamper	IA	IR	9999	IA9999	IR9999
G33:S004	G33 Door Forced	DF	DR	9999	DF9999	DR9999
G33:S005	G33 Door DOTL	DL	DH	9999	DL9999	DH9999
G33:S006	G33 Cab Tamper	TA	TR	9999	TA9999	TR9999
G33:S007	G33 AC fail	AT	AR	9999	AT9999	AR9999
G33:S008	G33 Low Batt	YT	YR	9999	YT9999	YR9999
G33:S009	G33 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G33:S010	G33 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G33:S011	G33 Low Volts	YP	YQ	9999	YP9999	YQ9999
G33:S012	G33 PS Fail	YP	YQ	9999	YP9999	YQ9999
G33:S013	G33 Batt Test	IA	IR	9999	IA9999	IR9999
G33:S014	G33 Invalid Card	DD	DR	9999	DD9999	DR9999
G33:S015	G33 Duress	HA	HR	9999	HA9999	HR9999
G33:S016	G33 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G33:S017	G33 Panic	PA	PR	9999	PA9999	PR9999
G33:S018	G33 Pin Attempts	JA	UX	9999	JA9999	UX9999

Integriti SIA DECIMAL Map. V21

G33:S019	G33 Temperature	UA	UR	9999	UA9999	UR9999
G33:S020	G33 Light Level	UA	UR	9999	UA9999	UR9999
G33:S021	G33 LAN Comms	EM	EN	9999	EM9999	EN9999
G33:S022	G33 Spare1	UA	UR	9999	UA9999	UR9999
G33:S023	G33 Spare2	UA	UR	9999	UA9999	UR9999
G34:Z001	G34:Z001	UA	UR	9999	UA9999	UR9999
G34:Z002	G34:Z002	UA	UR	9999	UA9999	UR9999
G34:S001	G34 Door Reed	UA	UR	9999	UA9999	UR9999
G34:S002	G34 Door Tongue	UA	UR	9999	UA9999	UR9999
G34:S003	G34 Door Tamper	IA	IR	9999	IA9999	IR9999
G34:S004	G34 Door Forced	DF	DR	9999	DF9999	DR9999
G34:S005	G34 Door DOTL	DL	DH	9999	DL9999	DH9999
G34:S006	G34 Cab Tamper	TA	TR	9999	TA9999	TR9999
G34:S007	G34 AC fail	AT	AR	9999	AT9999	AR9999
G34:S008	G34 Low Batt	YT	YR	9999	YT9999	YR9999
G34:S009	G34 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G34:S010	G34 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G34:S011	G34 Low Volts	YP	YQ	9999	YP9999	YQ9999
G34:S012	G34 PS Fail	YP	YQ	9999	YP9999	YQ9999
G34:S013	G34 Batt Test	IA	IR	9999	IA9999	IR9999
G34:S014	G34 Invalid Card	DD	DR	9999	DD9999	DR9999
G34:S015	G34 Duress	HA	HR	9999	HA9999	HR9999
G34:S016	G34 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G34:S017	G34 Panic	PA	PR	9999	PA9999	PR9999
G34:S018	G34 Pin Attempts	JA	UX	9999	JA9999	UX9999
G34:S019	G34 Temperature	UA	UR	9999	UA9999	UR9999
G34:S020	G34 Light Level	UA	UR	9999	UA9999	UR9999
G34:S021	G34 LAN Comms	EM	EN	9999	EM9999	EN9999
G34:S022	G34 Spare1	UA	UR	9999	UA9999	UR9999
G34:S023	G34 Spare2	UA	UR	9999	UA9999	UR9999
G35:Z001	G35:Z001	UA	UR	9999	UA9999	UR9999
G35:Z002	G35:Z002	UA	UR	9999	UA9999	UR9999
G35:S001	G35 Door Reed	UA	UR	9999	UA9999	UR9999
G35:S002	G35 Door Tongue	UA	UR	9999	UA9999	UR9999
G35:S003	G35 Door Tamper	IA	IR	9999	IA9999	IR9999
G35:S004	G35 Door Forced	DF	DR	9999	DF9999	DR9999
G35:S005	G35 Door DOTL	DL	DH	9999	DL9999	DH9999
G35:S006	G35 Cab Tamper	TA	TR	9999	TA9999	TR9999
G35:S007	G35 AC fail	AT	AR	9999	AT9999	AR9999
G35:S008	G35 Low Batt	YT	YR	9999	YT9999	YR9999
G35:S009	G35 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G35:S010	G35 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G35:S011	G35 Low Volts	YP	YQ	9999	YP9999	YQ9999
G35:S012	G35 PS Fail	YP	YQ	9999	YP9999	YQ9999
G35:S013	G35 Batt Test	IA	IR	9999	IA9999	IR9999
G35:S014	G35 Invalid Card	DD	DR	9999	DD9999	DR9999
G35:S015	G35 Duress	HA	HR	9999	HA9999	HR9999
G35:S016	G35 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G35:S017	G35 Panic	PA	PR	9999	PA9999	PR9999
G35:S018	G35 Pin Attempts	JA	UX	9999	JA9999	UX9999
G35:S019	G35 Temperature	UA	UR	9999	UA9999	UR9999
G35:S020	G35 Light Level	UA	UR	9999	UA9999	UR9999
G35:S021	G35 LAN Comms	EM	EN	9999	EM9999	EN9999
G35:S022	G35 Spare1	UA	UR	9999	UA9999	UR9999
G35:S023	G35 Spare2	UA	UR	9999	UA9999	UR9999
G36:Z001	G36:Z001	UA	UR	9999	UA9999	UR9999
G36:Z002	G36:Z002	UA	UR	9999	UA9999	UR9999
G36:S001	G36 Door Reed	UA	UR	9999	UA9999	UR9999
G36:S002	G36 Door Tongue	UA	UR	9999	UA9999	UR9999
G36:S003	G36 Door Tamper	IA	IR	9999	IA9999	IR9999
G36:S004	G36 Door Forced	DF	DR	9999	DF9999	DR9999
G36:S005	G36 Door DOTL	DL	DH	9999	DL9999	DH9999
G36:S006	G36 Cab Tamper	TA	TR	9999	TA9999	TR9999
G36:S007	G36 AC fail	AT	AR	9999	AT9999	AR9999
G36:S008	G36 Low Batt	YT	YR	9999	YT9999	YR9999
G36:S009	G36 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G36:S010	G36 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G36:S011	G36 Low Volts	YP	YQ	9999	YP9999	YQ9999
G36:S012	G36 PS Fail	YP	YQ	9999	YP9999	YQ9999
G36:S013	G36 Batt Test	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G36:S014	G36 Invalid Card	DD	DR	9999	DD9999	DR9999
G36:S015	G36 Duress	HA	HR	9999	HA9999	HR9999
G36:S016	G36 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G36:S017	G36 Panic	PA	PR	9999	PA9999	PR9999
G36:S018	G36 Pin Attempts	JA	UX	9999	JA9999	UX9999
G36:S019	G36 Temperature	UA	UR	9999	UA9999	UR9999
G36:S020	G36 Light Level	UA	UR	9999	UA9999	UR9999
G36:S021	G36 LAN Comms	EM	EN	9999	EM9999	EN9999
G36:S022	G36 Spare1	UA	UR	9999	UA9999	UR9999
G36:S023	G36 Spare2	UA	UR	9999	UA9999	UR9999
G37:Z001	G37:Z001	UA	UR	9999	UA9999	UR9999
G37:Z002	G37:Z002	UA	UR	9999	UA9999	UR9999
G37:S001	G37 Door Reed	UA	UR	9999	UA9999	UR9999
G37:S002	G37 Door Tongue	UA	UR	9999	UA9999	UR9999
G37:S003	G37 Door Tamper	IA	IR	9999	IA9999	IR9999
G37:S004	G37 Door Forced	DF	DR	9999	DF9999	DR9999
G37:S005	G37 Door DOTL	DL	DH	9999	DL9999	DH9999
G37:S006	G37 Cab Tamper	TA	TR	9999	TA9999	TR9999
G37:S007	G37 AC fail	AT	AR	9999	AT9999	AR9999
G37:S008	G37 Low Batt	YT	YR	9999	YT9999	YR9999
G37:S009	G37 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G37:S010	G37 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G37:S011	G37 Low Volts	YP	YQ	9999	YP9999	YQ9999
G37:S012	G37 PS Fail	YP	YQ	9999	YP9999	YQ9999
G37:S013	G37 Batt Test	IA	IR	9999	IA9999	IR9999
G37:S014	G37 Invalid Card	DD	DR	9999	DD9999	DR9999
G37:S015	G37 Duress	HA	HR	9999	HA9999	HR9999
G37:S016	G37 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G37:S017	G37 Panic	PA	PR	9999	PA9999	PR9999
G37:S018	G37 Pin Attempts	JA	UX	9999	JA9999	UX9999
G37:S019	G37 Temperature	UA	UR	9999	UA9999	UR9999
G37:S020	G37 Light Level	UA	UR	9999	UA9999	UR9999
G37:S021	G37 LAN Comms	EM	EN	9999	EM9999	EN9999
G37:S022	G37 Spare1	UA	UR	9999	UA9999	UR9999
G37:S023	G37 Spare2	UA	UR	9999	UA9999	UR9999
G38:Z001	G38:Z001	UA	UR	9999	UA9999	UR9999
G38:Z002	G38:Z002	UA	UR	9999	UA9999	UR9999
G38:S001	G38 Door Reed	UA	UR	9999	UA9999	UR9999
G38:S002	G38 Door Tongue	UA	UR	9999	UA9999	UR9999
G38:S003	G38 Door Tamper	IA	IR	9999	IA9999	IR9999
G38:S004	G38 Door Forced	DF	DR	9999	DF9999	DR9999
G38:S005	G38 Door DOTL	DL	DH	9999	DL9999	DH9999
G38:S006	G38 Cab Tamper	TA	TR	9999	TA9999	TR9999
G38:S007	G38 AC fail	AT	AR	9999	AT9999	AR9999
G38:S008	G38 Low Batt	YT	YR	9999	YT9999	YR9999
G38:S009	G38 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G38:S010	G38 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G38:S011	G38 Low Volts	YP	YQ	9999	YP9999	YQ9999
G38:S012	G38 PS Fail	YP	YQ	9999	YP9999	YQ9999
G38:S013	G38 Batt Test	IA	IR	9999	IA9999	IR9999
G38:S014	G38 Invalid Card	DD	DR	9999	DD9999	DR9999
G38:S015	G38 Duress	HA	HR	9999	HA9999	HR9999
G38:S016	G38 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G38:S017	G38 Panic	PA	PR	9999	PA9999	PR9999
G38:S018	G38 Pin Attempts	JA	UX	9999	JA9999	UX9999
G38:S019	G38 Temperature	UA	UR	9999	UA9999	UR9999
G38:S020	G38 Light Level	UA	UR	9999	UA9999	UR9999
G38:S021	G38 LAN Comms	EM	EN	9999	EM9999	EN9999
G38:S022	G38 Spare1	UA	UR	9999	UA9999	UR9999
G38:S023	G38 Spare2	UA	UR	9999	UA9999	UR9999
G39:Z001	G39:Z001	UA	UR	9999	UA9999	UR9999
G39:Z002	G39:Z002	UA	UR	9999	UA9999	UR9999
G39:S001	G39 Door Reed	UA	UR	9999	UA9999	UR9999
G39:S002	G39 Door Tongue	UA	UR	9999	UA9999	UR9999
G39:S003	G39 Door Tamper	IA	IR	9999	IA9999	IR9999
G39:S004	G39 Door Forced	DF	DR	9999	DF9999	DR9999
G39:S005	G39 Door DOTL	DL	DH	9999	DL9999	DH9999
G39:S006	G39 Cab Tamper	TA	TR	9999	TA9999	TR9999
G39:S007	G39 AC fail	AT	AR	9999	AT9999	AR9999
G39:S008	G39 Low Batt	YT	YR	9999	YT9999	YR9999

Integriti SIA DECIMAL Map. V21

G39:S009	G39 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G39:S010	G39 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G39:S011	G39 Low Volts	YP	YQ	9999	YP9999	YQ9999
G39:S012	G39 PS Fail	YP	YQ	9999	YP9999	YQ9999
G39:S013	G39 Batt Test	IA	IR	9999	IA9999	IR9999
G39:S014	G39 Invalid Card	DD	DR	9999	DD9999	DR9999
G39:S015	G39 Duress	HA	HR	9999	HA9999	HR9999
G39:S016	G39 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G39:S017	G39 Panic	PA	PR	9999	PA9999	PR9999
G39:S018	G39 Pin Attempts	JA	UX	9999	JA9999	UX9999
G39:S019	G39 Temperature	UA	UR	9999	UA9999	UR9999
G39:S020	G39 Light Level	UA	UR	9999	UA9999	UR9999
G39:S021	G39 LAN Comms	EM	EN	9999	EM9999	EN9999
G39:S022	G39 Spare1	UA	UR	9999	UA9999	UR9999
G39:S023	G39 Spare2	UA	UR	9999	UA9999	UR9999
G40:Z001	G40:Z001	UA	UR	9999	UA9999	UR9999
G40:Z002	G40:Z002	UA	UR	9999	UA9999	UR9999
G40:S001	G40 Door Reed	UA	UR	9999	UA9999	UR9999
G40:S002	G40 Door Tongue	UA	UR	9999	UA9999	UR9999
G40:S003	G40 Door Tamper	IA	IR	9999	IA9999	IR9999
G40:S004	G40 Door Forced	DF	DR	9999	DF9999	DR9999
G40:S005	G40 Door DOTL	DL	DH	9999	DL9999	DH9999
G40:S006	G40 Cab Tamper	TA	TR	9999	TA9999	TR9999
G40:S007	G40 AC fail	AT	AR	9999	AT9999	AR9999
G40:S008	G40 Low Batt	YT	YR	9999	YT9999	YR9999
G40:S009	G40 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G40:S010	G40 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G40:S011	G40 Low Volts	YP	YQ	9999	YP9999	YQ9999
G40:S012	G40 PS Fail	YP	YQ	9999	YP9999	YQ9999
G40:S013	G40 Batt Test	IA	IR	9999	IA9999	IR9999
G40:S014	G40 Invalid Card	DD	DR	9999	DD9999	DR9999
G40:S015	G40 Duress	HA	HR	9999	HA9999	HR9999
G40:S016	G40 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G40:S017	G40 Panic	PA	PR	9999	PA9999	PR9999
G40:S018	G40 Pin Attempts	JA	UX	9999	JA9999	UX9999
G40:S019	G40 Temperature	UA	UR	9999	UA9999	UR9999
G40:S020	G40 Light Level	UA	UR	9999	UA9999	UR9999
G40:S021	G40 LAN Comms	EM	EN	9999	EM9999	EN9999
G40:S022	G40 Spare1	UA	UR	9999	UA9999	UR9999
G40:S023	G40 Spare2	UA	UR	9999	UA9999	UR9999
G41:Z001	G41:Z001	UA	UR	9999	UA9999	UR9999
G41:Z002	G41:Z002	UA	UR	9999	UA9999	UR9999
G41:S001	G41 Door Reed	UA	UR	9999	UA9999	UR9999
G41:S002	G41 Door Tongue	UA	UR	9999	UA9999	UR9999
G41:S003	G41 Door Tamper	IA	IR	9999	IA9999	IR9999
G41:S004	G41 Door Forced	DF	DR	9999	DF9999	DR9999
G41:S005	G41 Door DOTL	DL	DH	9999	DL9999	DH9999
G41:S006	G41 Cab Tamper	TA	TR	9999	TA9999	TR9999
G41:S007	G41 AC fail	AT	AR	9999	AT9999	AR9999
G41:S008	G41 Low Batt	YT	YR	9999	YT9999	YR9999
G41:S009	G41 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G41:S010	G41 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G41:S011	G41 Low Volts	YP	YQ	9999	YP9999	YQ9999
G41:S012	G41 PS Fail	YP	YQ	9999	YP9999	YQ9999
G41:S013	G41 Batt Test	IA	IR	9999	IA9999	IR9999
G41:S014	G41 Invalid Card	DD	DR	9999	DD9999	DR9999
G41:S015	G41 Duress	HA	HR	9999	HA9999	HR9999
G41:S016	G41 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G41:S017	G41 Panic	PA	PR	9999	PA9999	PR9999
G41:S018	G41 Pin Attempts	JA	UX	9999	JA9999	UX9999
G41:S019	G41 Temperature	UA	UR	9999	UA9999	UR9999
G41:S020	G41 Light Level	UA	UR	9999	UA9999	UR9999
G41:S021	G41 LAN Comms	EM	EN	9999	EM9999	EN9999
G41:S022	G41 Spare1	UA	UR	9999	UA9999	UR9999
G41:S023	G41 Spare2	UA	UR	9999	UA9999	UR9999
G42:Z001	G42:Z001	UA	UR	9999	UA9999	UR9999
G42:Z002	G42:Z002	UA	UR	9999	UA9999	UR9999
G42:S001	G42 Door Reed	UA	UR	9999	UA9999	UR9999
G42:S002	G42 Door Tongue	UA	UR	9999	UA9999	UR9999
G42:S003	G42 Door Tamper	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G42:S004	G42 Door Forced	DF	DR	9999	DF9999	DR9999
G42:S005	G42 Door DOTL	DL	DH	9999	DL9999	DH9999
G42:S006	G42 Cab Tamper	TA	TR	9999	TA9999	TR9999
G42:S007	G42 AC fail	AT	AR	9999	AT9999	AR9999
G42:S008	G42 Low Batt	YT	YR	9999	YT9999	YR9999
G42:S009	G42 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G42:S010	G42 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G42:S011	G42 Low Volts	YP	YQ	9999	YP9999	YQ9999
G42:S012	G42 PS Fail	YP	YQ	9999	YP9999	YQ9999
G42:S013	G42 Batt Test	IA	IR	9999	IA9999	IR9999
G42:S014	G42 Invalid Card	DD	DR	9999	DD9999	DR9999
G42:S015	G42 Duress	HA	HR	9999	HA9999	HR9999
G42:S016	G42 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G42:S017	G42 Panic	PA	PR	9999	PA9999	PR9999
G42:S018	G42 Pin Attempts	JA	UX	9999	JA9999	UX9999
G42:S019	G42 Temperature	UA	UR	9999	UA9999	UR9999
G42:S020	G42 Light Level	UA	UR	9999	UA9999	UR9999
G42:S021	G42 LAN Comms	EM	EN	9999	EM9999	EN9999
G42:S022	G42 Spare1	UA	UR	9999	UA9999	UR9999
G42:S023	G42 Spare2	UA	UR	9999	UA9999	UR9999
G43:Z001	G43:Z001	UA	UR	9999	UA9999	UR9999
G43:Z002	G43:Z002	UA	UR	9999	UA9999	UR9999
G43:S001	G43 Door Reed	UA	UR	9999	UA9999	UR9999
G43:S002	G43 Door Tongue	UA	UR	9999	UA9999	UR9999
G43:S003	G43 Door Tamper	IA	IR	9999	IA9999	IR9999
G43:S004	G43 Door Forced	DF	DR	9999	DF9999	DR9999
G43:S005	G43 Door DOTL	DL	DH	9999	DL9999	DH9999
G43:S006	G43 Cab Tamper	TA	TR	9999	TA9999	TR9999
G43:S007	G43 AC fail	AT	AR	9999	AT9999	AR9999
G43:S008	G43 Low Batt	YT	YR	9999	YT9999	YR9999
G43:S009	G43 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G43:S010	G43 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G43:S011	G43 Low Volts	YP	YQ	9999	YP9999	YQ9999
G43:S012	G43 PS Fail	YP	YQ	9999	YP9999	YQ9999
G43:S013	G43 Batt Test	IA	IR	9999	IA9999	IR9999
G43:S014	G43 Invalid Card	DD	DR	9999	DD9999	DR9999
G43:S015	G43 Duress	HA	HR	9999	HA9999	HR9999
G43:S016	G43 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G43:S017	G43 Panic	PA	PR	9999	PA9999	PR9999
G43:S018	G43 Pin Attempts	JA	UX	9999	JA9999	UX9999
G43:S019	G43 Temperature	UA	UR	9999	UA9999	UR9999
G43:S020	G43 Light Level	UA	UR	9999	UA9999	UR9999
G43:S021	G43 LAN Comms	EM	EN	9999	EM9999	EN9999
G43:S022	G43 Spare1	UA	UR	9999	UA9999	UR9999
G43:S023	G43 Spare2	UA	UR	9999	UA9999	UR9999
G44:Z001	G44:Z001	UA	UR	9999	UA9999	UR9999
G44:Z002	G44:Z002	UA	UR	9999	UA9999	UR9999
G44:S001	G44 Door Reed	UA	UR	9999	UA9999	UR9999
G44:S002	G44 Door Tongue	UA	UR	9999	UA9999	UR9999
G44:S003	G44 Door Tamper	IA	IR	9999	IA9999	IR9999
G44:S004	G44 Door Forced	DF	DR	9999	DF9999	DR9999
G44:S005	G44 Door DOTL	DL	DH	9999	DL9999	DH9999
G44:S006	G44 Cab Tamper	TA	TR	9999	TA9999	TR9999
G44:S007	G44 AC fail	AT	AR	9999	AT9999	AR9999
G44:S008	G44 Low Batt	YT	YR	9999	YT9999	YR9999
G44:S009	G44 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G44:S010	G44 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G44:S011	G44 Low Volts	YP	YQ	9999	YP9999	YQ9999
G44:S012	G44 PS Fail	YP	YQ	9999	YP9999	YQ9999
G44:S013	G44 Batt Test	IA	IR	9999	IA9999	IR9999
G44:S014	G44 Invalid Card	DD	DR	9999	DD9999	DR9999
G44:S015	G44 Duress	HA	HR	9999	HA9999	HR9999
G44:S016	G44 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G44:S017	G44 Panic	PA	PR	9999	PA9999	PR9999
G44:S018	G44 Pin Attempts	JA	UX	9999	JA9999	UX9999
G44:S019	G44 Temperature	UA	UR	9999	UA9999	UR9999
G44:S020	G44 Light Level	UA	UR	9999	UA9999	UR9999
G44:S021	G44 LAN Comms	EM	EN	9999	EM9999	EN9999
G44:S022	G44 Spare1	UA	UR	9999	UA9999	UR9999
G44:S023	G44 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

G45:Z001	G45:Z001	UA	UR	9999	UA9999	UR9999
G45:Z002	G45:Z002	UA	UR	9999	UA9999	UR9999
G45:S001	G45 Door Reed	UA	UR	9999	UA9999	UR9999
G45:S002	G45 Door Tongue	UA	UR	9999	UA9999	UR9999
G45:S003	G45 Door Tamper	IA	IR	9999	IA9999	IR9999
G45:S004	G45 Door Forced	DF	DR	9999	DF9999	DR9999
G45:S005	G45 Door DOTL	DL	DH	9999	DL9999	DH9999
G45:S006	G45 Cab Tamper	TA	TR	9999	TA9999	TR9999
G45:S007	G45 AC fail	AT	AR	9999	AT9999	AR9999
G45:S008	G45 Low Batt	YT	YR	9999	YT9999	YR9999
G45:S009	G45 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G45:S010	G45 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G45:S011	G45 Low Volts	YP	YQ	9999	YP9999	YQ9999
G45:S012	G45 PS Fail	YP	YQ	9999	YP9999	YQ9999
G45:S013	G45 Batt Test	IA	IR	9999	IA9999	IR9999
G45:S014	G45 Invalid Card	DD	DR	9999	DD9999	DR9999
G45:S015	G45 Duress	HA	HR	9999	HA9999	HR9999
G45:S016	G45 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G45:S017	G45 Panic	PA	PR	9999	PA9999	PR9999
G45:S018	G45 Pin Attempts	JA	UX	9999	JA9999	UX9999
G45:S019	G45 Temperature	UA	UR	9999	UA9999	UR9999
G45:S020	G45 Light Level	UA	UR	9999	UA9999	UR9999
G45:S021	G45 LAN Comms	EM	EN	9999	EM9999	EN9999
G45:S022	G45 Spare1	UA	UR	9999	UA9999	UR9999
G45:S023	G45 Spare2	UA	UR	9999	UA9999	UR9999
G46:Z001	G46:Z001	UA	UR	9999	UA9999	UR9999
G46:Z002	G46:Z002	UA	UR	9999	UA9999	UR9999
G46:S001	G46 Door Reed	UA	UR	9999	UA9999	UR9999
G46:S002	G46 Door Tongue	UA	UR	9999	UA9999	UR9999
G46:S003	G46 Door Tamper	IA	IR	9999	IA9999	IR9999
G46:S004	G46 Door Forced	DF	DR	9999	DF9999	DR9999
G46:S005	G46 Door DOTL	DL	DH	9999	DL9999	DH9999
G46:S006	G46 Cab Tamper	TA	TR	9999	TA9999	TR9999
G46:S007	G46 AC fail	AT	AR	9999	AT9999	AR9999
G46:S008	G46 Low Batt	YT	YR	9999	YT9999	YR9999
G46:S009	G46 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G46:S010	G46 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G46:S011	G46 Low Volts	YP	YQ	9999	YP9999	YQ9999
G46:S012	G46 PS Fail	YP	YQ	9999	YP9999	YQ9999
G46:S013	G46 Batt Test	IA	IR	9999	IA9999	IR9999
G46:S014	G46 Invalid Card	DD	DR	9999	DD9999	DR9999
G46:S015	G46 Duress	HA	HR	9999	HA9999	HR9999
G46:S016	G46 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G46:S017	G46 Panic	PA	PR	9999	PA9999	PR9999
G46:S018	G46 Pin Attempts	JA	UX	9999	JA9999	UX9999
G46:S019	G46 Temperature	UA	UR	9999	UA9999	UR9999
G46:S020	G46 Light Level	UA	UR	9999	UA9999	UR9999
G46:S021	G46 LAN Comms	EM	EN	9999	EM9999	EN9999
G46:S022	G46 Spare1	UA	UR	9999	UA9999	UR9999
G46:S023	G46 Spare2	UA	UR	9999	UA9999	UR9999
G47:Z001	G47:Z001	UA	UR	9999	UA9999	UR9999
G47:Z002	G47:Z002	UA	UR	9999	UA9999	UR9999
G47:S001	G47 Door Reed	UA	UR	9999	UA9999	UR9999
G47:S002	G47 Door Tongue	UA	UR	9999	UA9999	UR9999
G47:S003	G47 Door Tamper	IA	IR	9999	IA9999	IR9999
G47:S004	G47 Door Forced	DF	DR	9999	DF9999	DR9999
G47:S005	G47 Door DOTL	DL	DH	9999	DL9999	DH9999
G47:S006	G47 Cab Tamper	TA	TR	9999	TA9999	TR9999
G47:S007	G47 AC fail	AT	AR	9999	AT9999	AR9999
G47:S008	G47 Low Batt	YT	YR	9999	YT9999	YR9999
G47:S009	G47 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G47:S010	G47 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G47:S011	G47 Low Volts	YP	YQ	9999	YP9999	YQ9999
G47:S012	G47 PS Fail	YP	YQ	9999	YP9999	YQ9999
G47:S013	G47 Batt Test	IA	IR	9999	IA9999	IR9999
G47:S014	G47 Invalid Card	DD	DR	9999	DD9999	DR9999
G47:S015	G47 Duress	HA	HR	9999	HA9999	HR9999
G47:S016	G47 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G47:S017	G47 Panic	PA	PR	9999	PA9999	PR9999
G47:S018	G47 Pin Attempts	JA	UX	9999	JA9999	UX9999

Integriti SIA DECIMAL Map. V21

G47:S019	G47 Temperature	UA	UR	9999	UA9999	UR9999
G47:S020	G47 Light Level	UA	UR	9999	UA9999	UR9999
G47:S021	G47 LAN Comms	EM	EN	9999	EM9999	EN9999
G47:S022	G47 Spare1	UA	UR	9999	UA9999	UR9999
G47:S023	G47 Spare2	UA	UR	9999	UA9999	UR9999
G48:Z001	G48:Z001	UA	UR	9999	UA9999	UR9999
G48:Z002	G48:Z002	UA	UR	9999	UA9999	UR9999
G48:S001	G48 Door Reed	UA	UR	9999	UA9999	UR9999
G48:S002	G48 Door Tongue	UA	UR	9999	UA9999	UR9999
G48:S003	G48 Door Tamper	IA	IR	9999	IA9999	IR9999
G48:S004	G48 Door Forced	DF	DR	9999	DF9999	DR9999
G48:S005	G48 Door DOTL	DL	DH	9999	DL9999	DH9999
G48:S006	G48 Cab Tamper	TA	TR	9999	TA9999	TR9999
G48:S007	G48 AC fail	AT	AR	9999	AT9999	AR9999
G48:S008	G48 Low Batt	YT	YR	9999	YT9999	YR9999
G48:S009	G48 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G48:S010	G48 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G48:S011	G48 Low Volts	YP	YQ	9999	YP9999	YQ9999
G48:S012	G48 PS Fail	YP	YQ	9999	YP9999	YQ9999
G48:S013	G48 Batt Test	IA	IR	9999	IA9999	IR9999
G48:S014	G48 Invalid Card	DD	DR	9999	DD9999	DR9999
G48:S015	G48 Duress	HA	HR	9999	HA9999	HR9999
G48:S016	G48 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G48:S017	G48 Panic	PA	PR	9999	PA9999	PR9999
G48:S018	G48 Pin Attempts	JA	UX	9999	JA9999	UX9999
G48:S019	G48 Temperature	UA	UR	9999	UA9999	UR9999
G48:S020	G48 Light Level	UA	UR	9999	UA9999	UR9999
G48:S021	G48 LAN Comms	EM	EN	9999	EM9999	EN9999
G48:S022	G48 Spare1	UA	UR	9999	UA9999	UR9999
G48:S023	G48 Spare2	UA	UR	9999	UA9999	UR9999
G49:Z001	G49:Z001	UA	UR	9999	UA9999	UR9999
G49:Z002	G49:Z002	UA	UR	9999	UA9999	UR9999
G49:S001	G49 Door Reed	UA	UR	9999	UA9999	UR9999
G49:S002	G49 Door Tongue	UA	UR	9999	UA9999	UR9999
G49:S003	G49 Door Tamper	IA	IR	9999	IA9999	IR9999
G49:S004	G49 Door Forced	DF	DR	9999	DF9999	DR9999
G49:S005	G49 Door DOTL	DL	DH	9999	DL9999	DH9999
G49:S006	G49 Cab Tamper	TA	TR	9999	TA9999	TR9999
G49:S007	G49 AC fail	AT	AR	9999	AT9999	AR9999
G49:S008	G49 Low Batt	YT	YR	9999	YT9999	YR9999
G49:S009	G49 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G49:S010	G49 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G49:S011	G49 Low Volts	YP	YQ	9999	YP9999	YQ9999
G49:S012	G49 PS Fail	YP	YQ	9999	YP9999	YQ9999
G49:S013	G49 Batt Test	IA	IR	9999	IA9999	IR9999
G49:S014	G49 Invalid Card	DD	DR	9999	DD9999	DR9999
G49:S015	G49 Duress	HA	HR	9999	HA9999	HR9999
G49:S016	G49 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G49:S017	G49 Panic	PA	PR	9999	PA9999	PR9999
G49:S018	G49 Pin Attempts	JA	UX	9999	JA9999	UX9999
G49:S019	G49 Temperature	UA	UR	9999	UA9999	UR9999
G49:S020	G49 Light Level	UA	UR	9999	UA9999	UR9999
G49:S021	G49 LAN Comms	EM	EN	9999	EM9999	EN9999
G49:S022	G49 Spare1	UA	UR	9999	UA9999	UR9999
G49:S023	G49 Spare2	UA	UR	9999	UA9999	UR9999
G50:Z001	G50:Z001	UA	UR	9999	UA9999	UR9999
G50:Z002	G50:Z002	UA	UR	9999	UA9999	UR9999
G50:S001	G50 Door Reed	UA	UR	9999	UA9999	UR9999
G50:S002	G50 Door Tongue	UA	UR	9999	UA9999	UR9999
G50:S003	G50 Door Tamper	IA	IR	9999	IA9999	IR9999
G50:S004	G50 Door Forced	DF	DR	9999	DF9999	DR9999
G50:S005	G50 Door DOTL	DL	DH	9999	DL9999	DH9999
G50:S006	G50 Cab Tamper	TA	TR	9999	TA9999	TR9999
G50:S007	G50 AC fail	AT	AR	9999	AT9999	AR9999
G50:S008	G50 Low Batt	YT	YR	9999	YT9999	YR9999
G50:S009	G50 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G50:S010	G50 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G50:S011	G50 Low Volts	YP	YQ	9999	YP9999	YQ9999
G50:S012	G50 PS Fail	YP	YQ	9999	YP9999	YQ9999
G50:S013	G50 Batt Test	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G50:S014	G50 Invalid Card	DD	DR	9999	DD9999	DR9999
G50:S015	G50 Duress	HA	HR	9999	HA9999	HR9999
G50:S016	G50 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G50:S017	G50 Panic	PA	PR	9999	PA9999	PR9999
G50:S018	G50 Pin Attempts	JA	UX	9999	JA9999	UX9999
G50:S019	G50 Temperature	UA	UR	9999	UA9999	UR9999
G50:S020	G50 Light Level	UA	UR	9999	UA9999	UR9999
G50:S021	G50 LAN Comms	EM	EN	9999	EM9999	EN9999
G50:S022	G50 Spare1	UA	UR	9999	UA9999	UR9999
G50:S023	G50 Spare2	UA	UR	9999	UA9999	UR9999
G51:Z001	G51:Z001	UA	UR	9999	UA9999	UR9999
G51:Z002	G51:Z002	UA	UR	9999	UA9999	UR9999
G51:S001	G51 Door Reed	UA	UR	9999	UA9999	UR9999
G51:S002	G51 Door Tongue	UA	UR	9999	UA9999	UR9999
G51:S003	G51 Door Tamper	IA	IR	9999	IA9999	IR9999
G51:S004	G51 Door Forced	DF	DR	9999	DF9999	DR9999
G51:S005	G51 Door DOTL	DL	DH	9999	DL9999	DH9999
G51:S006	G51 Cab Tamper	TA	TR	9999	TA9999	TR9999
G51:S007	G51 AC fail	AT	AR	9999	AT9999	AR9999
G51:S008	G51 Low Batt	YT	YR	9999	YT9999	YR9999
G51:S009	G51 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G51:S010	G51 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G51:S011	G51 Low Volts	YP	YQ	9999	YP9999	YQ9999
G51:S012	G51 PS Fail	YP	YQ	9999	YP9999	YQ9999
G51:S013	G51 Batt Test	IA	IR	9999	IA9999	IR9999
G51:S014	G51 Invalid Card	DD	DR	9999	DD9999	DR9999
G51:S015	G51 Duress	HA	HR	9999	HA9999	HR9999
G51:S016	G51 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G51:S017	G51 Panic	PA	PR	9999	PA9999	PR9999
G51:S018	G51 Pin Attempts	JA	UX	9999	JA9999	UX9999
G51:S019	G51 Temperature	UA	UR	9999	UA9999	UR9999
G51:S020	G51 Light Level	UA	UR	9999	UA9999	UR9999
G51:S021	G51 LAN Comms	EM	EN	9999	EM9999	EN9999
G51:S022	G51 Spare1	UA	UR	9999	UA9999	UR9999
G51:S023	G51 Spare2	UA	UR	9999	UA9999	UR9999
G52:Z001	G52:Z001	UA	UR	9999	UA9999	UR9999
G52:Z002	G52:Z002	UA	UR	9999	UA9999	UR9999
G52:S001	G52 Door Reed	UA	UR	9999	UA9999	UR9999
G52:S002	G52 Door Tongue	UA	UR	9999	UA9999	UR9999
G52:S003	G52 Door Tamper	IA	IR	9999	IA9999	IR9999
G52:S004	G52 Door Forced	DF	DR	9999	DF9999	DR9999
G52:S005	G52 Door DOTL	DL	DH	9999	DL9999	DH9999
G52:S006	G52 Cab Tamper	TA	TR	9999	TA9999	TR9999
G52:S007	G52 AC fail	AT	AR	9999	AT9999	AR9999
G52:S008	G52 Low Batt	YT	YR	9999	YT9999	YR9999
G52:S009	G52 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G52:S010	G52 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G52:S011	G52 Low Volts	YP	YQ	9999	YP9999	YQ9999
G52:S012	G52 PS Fail	YP	YQ	9999	YP9999	YQ9999
G52:S013	G52 Batt Test	IA	IR	9999	IA9999	IR9999
G52:S014	G52 Invalid Card	DD	DR	9999	DD9999	DR9999
G52:S015	G52 Duress	HA	HR	9999	HA9999	HR9999
G52:S016	G52 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G52:S017	G52 Panic	PA	PR	9999	PA9999	PR9999
G52:S018	G52 Pin Attempts	JA	UX	9999	JA9999	UX9999
G52:S019	G52 Temperature	UA	UR	9999	UA9999	UR9999
G52:S020	G52 Light Level	UA	UR	9999	UA9999	UR9999
G52:S021	G52 LAN Comms	EM	EN	9999	EM9999	EN9999
G52:S022	G52 Spare1	UA	UR	9999	UA9999	UR9999
G52:S023	G52 Spare2	UA	UR	9999	UA9999	UR9999
G53:Z001	G53:Z001	UA	UR	9999	UA9999	UR9999
G53:Z002	G53:Z002	UA	UR	9999	UA9999	UR9999
G53:S001	G53 Door Reed	UA	UR	9999	UA9999	UR9999
G53:S002	G53 Door Tongue	UA	UR	9999	UA9999	UR9999
G53:S003	G53 Door Tamper	IA	IR	9999	IA9999	IR9999
G53:S004	G53 Door Forced	DF	DR	9999	DF9999	DR9999
G53:S005	G53 Door DOTL	DL	DH	9999	DL9999	DH9999
G53:S006	G53 Cab Tamper	TA	TR	9999	TA9999	TR9999
G53:S007	G53 AC fail	AT	AR	9999	AT9999	AR9999
G53:S008	G53 Low Batt	YT	YR	9999	YT9999	YR9999

Integriti SIA DECIMAL Map. V21

G53:S009	G53 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G53:S010	G53 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G53:S011	G53 Low Volts	YP	YQ	9999	YP9999	YQ9999
G53:S012	G53 PS Fail	YP	YQ	9999	YP9999	YQ9999
G53:S013	G53 Batt Test	IA	IR	9999	IA9999	IR9999
G53:S014	G53 Invalid Card	DD	DR	9999	DD9999	DR9999
G53:S015	G53 Duress	HA	HR	9999	HA9999	HR9999
G53:S016	G53 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G53:S017	G53 Panic	PA	PR	9999	PA9999	PR9999
G53:S018	G53 Pin Attempts	JA	UX	9999	JA9999	UX9999
G53:S019	G53 Temperature	UA	UR	9999	UA9999	UR9999
G53:S020	G53 Light Level	UA	UR	9999	UA9999	UR9999
G53:S021	G53 LAN Comms	EM	EN	9999	EM9999	EN9999
G53:S022	G53 Spare1	UA	UR	9999	UA9999	UR9999
G53:S023	G53 Spare2	UA	UR	9999	UA9999	UR9999
G54:Z001	G54:Z001	UA	UR	9999	UA9999	UR9999
G54:Z002	G54:Z002	UA	UR	9999	UA9999	UR9999
G54:S001	G54 Door Reed	UA	UR	9999	UA9999	UR9999
G54:S002	G54 Door Tongue	UA	UR	9999	UA9999	UR9999
G54:S003	G54 Door Tamper	IA	IR	9999	IA9999	IR9999
G54:S004	G54 Door Forced	DF	DR	9999	DF9999	DR9999
G54:S005	G54 Door DOTL	DL	DH	9999	DL9999	DH9999
G54:S006	G54 Cab Tamper	TA	TR	9999	TA9999	TR9999
G54:S007	G54 AC fail	AT	AR	9999	AT9999	AR9999
G54:S008	G54 Low Batt	YT	YR	9999	YT9999	YR9999
G54:S009	G54 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G54:S010	G54 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G54:S011	G54 Low Volts	YP	YQ	9999	YP9999	YQ9999
G54:S012	G54 PS Fail	YP	YQ	9999	YP9999	YQ9999
G54:S013	G54 Batt Test	IA	IR	9999	IA9999	IR9999
G54:S014	G54 Invalid Card	DD	DR	9999	DD9999	DR9999
G54:S015	G54 Duress	HA	HR	9999	HA9999	HR9999
G54:S016	G54 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G54:S017	G54 Panic	PA	PR	9999	PA9999	PR9999
G54:S018	G54 Pin Attempts	JA	UX	9999	JA9999	UX9999
G54:S019	G54 Temperature	UA	UR	9999	UA9999	UR9999
G54:S020	G54 Light Level	UA	UR	9999	UA9999	UR9999
G54:S021	G54 LAN Comms	EM	EN	9999	EM9999	EN9999
G54:S022	G54 Spare1	UA	UR	9999	UA9999	UR9999
G54:S023	G54 Spare2	UA	UR	9999	UA9999	UR9999
G55:Z001	G55:Z001	UA	UR	9999	UA9999	UR9999
G55:Z002	G55:Z002	UA	UR	9999	UA9999	UR9999
G55:S001	G55 Door Reed	UA	UR	9999	UA9999	UR9999
G55:S002	G55 Door Tongue	UA	UR	9999	UA9999	UR9999
G55:S003	G55 Door Tamper	IA	IR	9999	IA9999	IR9999
G55:S004	G55 Door Forced	DF	DR	9999	DF9999	DR9999
G55:S005	G55 Door DOTL	DL	DH	9999	DL9999	DH9999
G55:S006	G55 Cab Tamper	TA	TR	9999	TA9999	TR9999
G55:S007	G55 AC fail	AT	AR	9999	AT9999	AR9999
G55:S008	G55 Low Batt	YT	YR	9999	YT9999	YR9999
G55:S009	G55 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G55:S010	G55 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G55:S011	G55 Low Volts	YP	YQ	9999	YP9999	YQ9999
G55:S012	G55 PS Fail	YP	YQ	9999	YP9999	YQ9999
G55:S013	G55 Batt Test	IA	IR	9999	IA9999	IR9999
G55:S014	G55 Invalid Card	DD	DR	9999	DD9999	DR9999
G55:S015	G55 Duress	HA	HR	9999	HA9999	HR9999
G55:S016	G55 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G55:S017	G55 Panic	PA	PR	9999	PA9999	PR9999
G55:S018	G55 Pin Attempts	JA	UX	9999	JA9999	UX9999
G55:S019	G55 Temperature	UA	UR	9999	UA9999	UR9999
G55:S020	G55 Light Level	UA	UR	9999	UA9999	UR9999
G55:S021	G55 LAN Comms	EM	EN	9999	EM9999	EN9999
G55:S022	G55 Spare1	UA	UR	9999	UA9999	UR9999
G55:S023	G55 Spare2	UA	UR	9999	UA9999	UR9999
G56:Z001	G56:Z001	UA	UR	9999	UA9999	UR9999
G56:Z002	G56:Z002	UA	UR	9999	UA9999	UR9999
G56:S001	G56 Door Reed	UA	UR	9999	UA9999	UR9999
G56:S002	G56 Door Tongue	UA	UR	9999	UA9999	UR9999
G56:S003	G56 Door Tamper	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G56:S004	G56 Door Forced	DF	DR	9999	DF9999	DR9999
G56:S005	G56 Door DOTL	DL	DH	9999	DL9999	DH9999
G56:S006	G56 Cab Tamper	TA	TR	9999	TA9999	TR9999
G56:S007	G56 AC fail	AT	AR	9999	AT9999	AR9999
G56:S008	G56 Low Batt	YT	YR	9999	YT9999	YR9999
G56:S009	G56 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G56:S010	G56 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G56:S011	G56 Low Volts	YP	YQ	9999	YP9999	YQ9999
G56:S012	G56 PS Fail	YP	YQ	9999	YP9999	YQ9999
G56:S013	G56 Batt Test	IA	IR	9999	IA9999	IR9999
G56:S014	G56 Invalid Card	DD	DR	9999	DD9999	DR9999
G56:S015	G56 Duress	HA	HR	9999	HA9999	HR9999
G56:S016	G56 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G56:S017	G56 Panic	PA	PR	9999	PA9999	PR9999
G56:S018	G56 Pin Attempts	JA	UX	9999	JA9999	UX9999
G56:S019	G56 Temperature	UA	UR	9999	UA9999	UR9999
G56:S020	G56 Light Level	UA	UR	9999	UA9999	UR9999
G56:S021	G56 LAN Comms	EM	EN	9999	EM9999	EN9999
G56:S022	G56 Spare1	UA	UR	9999	UA9999	UR9999
G56:S023	G56 Spare2	UA	UR	9999	UA9999	UR9999
G57:Z001	G57:Z001	UA	UR	9999	UA9999	UR9999
G57:Z002	G57:Z002	UA	UR	9999	UA9999	UR9999
G57:S001	G57 Door Reed	UA	UR	9999	UA9999	UR9999
G57:S002	G57 Door Tongue	UA	UR	9999	UA9999	UR9999
G57:S003	G57 Door Tamper	IA	IR	9999	IA9999	IR9999
G57:S004	G57 Door Forced	DF	DR	9999	DF9999	DR9999
G57:S005	G57 Door DOTL	DL	DH	9999	DL9999	DH9999
G57:S006	G57 Cab Tamper	TA	TR	9999	TA9999	TR9999
G57:S007	G57 AC fail	AT	AR	9999	AT9999	AR9999
G57:S008	G57 Low Batt	YT	YR	9999	YT9999	YR9999
G57:S009	G57 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G57:S010	G57 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G57:S011	G57 Low Volts	YP	YQ	9999	YP9999	YQ9999
G57:S012	G57 PS Fail	YP	YQ	9999	YP9999	YQ9999
G57:S013	G57 Batt Test	IA	IR	9999	IA9999	IR9999
G57:S014	G57 Invalid Card	DD	DR	9999	DD9999	DR9999
G57:S015	G57 Duress	HA	HR	9999	HA9999	HR9999
G57:S016	G57 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G57:S017	G57 Panic	PA	PR	9999	PA9999	PR9999
G57:S018	G57 Pin Attempts	JA	UX	9999	JA9999	UX9999
G57:S019	G57 Temperature	UA	UR	9999	UA9999	UR9999
G57:S020	G57 Light Level	UA	UR	9999	UA9999	UR9999
G57:S021	G57 LAN Comms	EM	EN	9999	EM9999	EN9999
G57:S022	G57 Spare1	UA	UR	9999	UA9999	UR9999
G57:S023	G57 Spare2	UA	UR	9999	UA9999	UR9999
G58:Z001	G58:Z001	UA	UR	9999	UA9999	UR9999
G58:Z002	G58:Z002	UA	UR	9999	UA9999	UR9999
G58:S001	G58 Door Reed	UA	UR	9999	UA9999	UR9999
G58:S002	G58 Door Tongue	UA	UR	9999	UA9999	UR9999
G58:S003	G58 Door Tamper	IA	IR	9999	IA9999	IR9999
G58:S004	G58 Door Forced	DF	DR	9999	DF9999	DR9999
G58:S005	G58 Door DOTL	DL	DH	9999	DL9999	DH9999
G58:S006	G58 Cab Tamper	TA	TR	9999	TA9999	TR9999
G58:S007	G58 AC fail	AT	AR	9999	AT9999	AR9999
G58:S008	G58 Low Batt	YT	YR	9999	YT9999	YR9999
G58:S009	G58 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G58:S010	G58 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G58:S011	G58 Low Volts	YP	YQ	9999	YP9999	YQ9999
G58:S012	G58 PS Fail	YP	YQ	9999	YP9999	YQ9999
G58:S013	G58 Batt Test	IA	IR	9999	IA9999	IR9999
G58:S014	G58 Invalid Card	DD	DR	9999	DD9999	DR9999
G58:S015	G58 Duress	HA	HR	9999	HA9999	HR9999
G58:S016	G58 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G58:S017	G58 Panic	PA	PR	9999	PA9999	PR9999
G58:S018	G58 Pin Attempts	JA	UX	9999	JA9999	UX9999
G58:S019	G58 Temperature	UA	UR	9999	UA9999	UR9999
G58:S020	G58 Light Level	UA	UR	9999	UA9999	UR9999
G58:S021	G58 LAN Comms	EM	EN	9999	EM9999	EN9999
G58:S022	G58 Spare1	UA	UR	9999	UA9999	UR9999
G58:S023	G58 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

G59:Z001	G59:Z001	UA	UR	9999	UA9999	UR9999
G59:Z002	G59:Z002	UA	UR	9999	UA9999	UR9999
G59:S001	G59 Door Reed	UA	UR	9999	UA9999	UR9999
G59:S002	G59 Door Tongue	UA	UR	9999	UA9999	UR9999
G59:S003	G59 Door Tamper	IA	IR	9999	IA9999	IR9999
G59:S004	G59 Door Forced	DF	DR	9999	DF9999	DR9999
G59:S005	G59 Door DOTL	DL	DH	9999	DL9999	DH9999
G59:S006	G59 Cab Tamper	TA	TR	9999	TA9999	TR9999
G59:S007	G59 AC fail	AT	AR	9999	AT9999	AR9999
G59:S008	G59 Low Batt	YT	YR	9999	YT9999	YR9999
G59:S009	G59 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G59:S010	G59 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G59:S011	G59 Low Volts	YP	YQ	9999	YP9999	YQ9999
G59:S012	G59 PS Fail	YP	YQ	9999	YP9999	YQ9999
G59:S013	G59 Batt Test	IA	IR	9999	IA9999	IR9999
G59:S014	G59 Invalid Card	DD	DR	9999	DD9999	DR9999
G59:S015	G59 Duress	HA	HR	9999	HA9999	HR9999
G59:S016	G59 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G59:S017	G59 Panic	PA	PR	9999	PA9999	PR9999
G59:S018	G59 Pin Attempts	JA	UX	9999	JA9999	UX9999
G59:S019	G59 Temperature	UA	UR	9999	UA9999	UR9999
G59:S020	G59 Light Level	UA	UR	9999	UA9999	UR9999
G59:S021	G59 LAN Comms	EM	EN	9999	EM9999	EN9999
G59:S022	G59 Spare1	UA	UR	9999	UA9999	UR9999
G59:S023	G59 Spare2	UA	UR	9999	UA9999	UR9999
G60:Z001	G60:Z001	UA	UR	9999	UA9999	UR9999
G60:Z002	G60:Z002	UA	UR	9999	UA9999	UR9999
G60:S001	G60 Door Reed	UA	UR	9999	UA9999	UR9999
G60:S002	G60 Door Tongue	UA	UR	9999	UA9999	UR9999
G60:S003	G60 Door Tamper	IA	IR	9999	IA9999	IR9999
G60:S004	G60 Door Forced	DF	DR	9999	DF9999	DR9999
G60:S005	G60 Door DOTL	DL	DH	9999	DL9999	DH9999
G60:S006	G60 Cab Tamper	TA	TR	9999	TA9999	TR9999
G60:S007	G60 AC fail	AT	AR	9999	AT9999	AR9999
G60:S008	G60 Low Batt	YT	YR	9999	YT9999	YR9999
G60:S009	G60 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G60:S010	G60 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G60:S011	G60 Low Volts	YP	YQ	9999	YP9999	YQ9999
G60:S012	G60 PS Fail	YP	YQ	9999	YP9999	YQ9999
G60:S013	G60 Batt Test	IA	IR	9999	IA9999	IR9999
G60:S014	G60 Invalid Card	DD	DR	9999	DD9999	DR9999
G60:S015	G60 Duress	HA	HR	9999	HA9999	HR9999
G60:S016	G60 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G60:S017	G60 Panic	PA	PR	9999	PA9999	PR9999
G60:S018	G60 Pin Attempts	JA	UX	9999	JA9999	UX9999
G60:S019	G60 Temperature	UA	UR	9999	UA9999	UR9999
G60:S020	G60 Light Level	UA	UR	9999	UA9999	UR9999
G60:S021	G60 LAN Comms	EM	EN	9999	EM9999	EN9999
G60:S022	G60 Spare1	UA	UR	9999	UA9999	UR9999
G60:S023	G60 Spare2	UA	UR	9999	UA9999	UR9999
G61:Z001	G61:Z001	UA	UR	9999	UA9999	UR9999
G61:Z002	G61:Z002	UA	UR	9999	UA9999	UR9999
G61:S001	G61 Door Reed	UA	UR	9999	UA9999	UR9999
G61:S002	G61 Door Tongue	UA	UR	9999	UA9999	UR9999
G61:S003	G61 Door Tamper	IA	IR	9999	IA9999	IR9999
G61:S004	G61 Door Forced	DF	DR	9999	DF9999	DR9999
G61:S005	G61 Door DOTL	DL	DH	9999	DL9999	DH9999
G61:S006	G61 Cab Tamper	TA	TR	9999	TA9999	TR9999
G61:S007	G61 AC fail	AT	AR	9999	AT9999	AR9999
G61:S008	G61 Low Batt	YT	YR	9999	YT9999	YR9999
G61:S009	G61 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G61:S010	G61 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G61:S011	G61 Low Volts	YP	YQ	9999	YP9999	YQ9999
G61:S012	G61 PS Fail	YP	YQ	9999	YP9999	YQ9999
G61:S013	G61 Batt Test	IA	IR	9999	IA9999	IR9999
G61:S014	G61 Invalid Card	DD	DR	9999	DD9999	DR9999
G61:S015	G61 Duress	HA	HR	9999	HA9999	HR9999
G61:S016	G61 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G61:S017	G61 Panic	PA	PR	9999	PA9999	PR9999
G61:S018	G61 Pin Attempts	JA	UX	9999	JA9999	UX9999

Integriti SIA DECIMAL Map. V21

G61:S019	G61 Temperature	UA	UR	9999	UA9999	UR9999
G61:S020	G61 Light Level	UA	UR	9999	UA9999	UR9999
G61:S021	G61 LAN Comms	EM	EN	9999	EM9999	EN9999
G61:S022	G61 Spare1	UA	UR	9999	UA9999	UR9999
G61:S023	G61 Spare2	UA	UR	9999	UA9999	UR9999
G62:Z001	G62:Z001	UA	UR	9999	UA9999	UR9999
G62:Z002	G62:Z002	UA	UR	9999	UA9999	UR9999
G62:S001	G62 Door Reed	UA	UR	9999	UA9999	UR9999
G62:S002	G62 Door Tongue	UA	UR	9999	UA9999	UR9999
G62:S003	G62 Door Tamper	IA	IR	9999	IA9999	IR9999
G62:S004	G62 Door Forced	DF	DR	9999	DF9999	DR9999
G62:S005	G62 Door DOTL	DL	DH	9999	DL9999	DH9999
G62:S006	G62 Cab Tamper	TA	TR	9999	TA9999	TR9999
G62:S007	G62 AC fail	AT	AR	9999	AT9999	AR9999
G62:S008	G62 Low Batt	YT	YR	9999	YT9999	YR9999
G62:S009	G62 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G62:S010	G62 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G62:S011	G62 Low Volts	YP	YQ	9999	YP9999	YQ9999
G62:S012	G62 PS Fail	YP	YQ	9999	YP9999	YQ9999
G62:S013	G62 Batt Test	IA	IR	9999	IA9999	IR9999
G62:S014	G62 Invalid Card	DD	DR	9999	DD9999	DR9999
G62:S015	G62 Duress	HA	HR	9999	HA9999	HR9999
G62:S016	G62 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G62:S017	G62 Panic	PA	PR	9999	PA9999	PR9999
G62:S018	G62 Pin Attempts	JA	UX	9999	JA9999	UX9999
G62:S019	G62 Temperature	UA	UR	9999	UA9999	UR9999
G62:S020	G62 Light Level	UA	UR	9999	UA9999	UR9999
G62:S021	G62 LAN Comms	EM	EN	9999	EM9999	EN9999
G62:S022	G62 Spare1	UA	UR	9999	UA9999	UR9999
G62:S023	G62 Spare2	UA	UR	9999	UA9999	UR9999
G63:Z001	G63:Z001	UA	UR	9999	UA9999	UR9999
G63:Z002	G63:Z002	UA	UR	9999	UA9999	UR9999
G63:S001	G63 Door Reed	UA	UR	9999	UA9999	UR9999
G63:S002	G63 Door Tongue	UA	UR	9999	UA9999	UR9999
G63:S003	G63 Door Tamper	IA	IR	9999	IA9999	IR9999
G63:S004	G63 Door Forced	DF	DR	9999	DF9999	DR9999
G63:S005	G63 Door DOTL	DL	DH	9999	DL9999	DH9999
G63:S006	G63 Cab Tamper	TA	TR	9999	TA9999	TR9999
G63:S007	G63 AC fail	AT	AR	9999	AT9999	AR9999
G63:S008	G63 Low Batt	YT	YR	9999	YT9999	YR9999
G63:S009	G63 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G63:S010	G63 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G63:S011	G63 Low Volts	YP	YQ	9999	YP9999	YQ9999
G63:S012	G63 PS Fail	YP	YQ	9999	YP9999	YQ9999
G63:S013	G63 Batt Test	IA	IR	9999	IA9999	IR9999
G63:S014	G63 Invalid Card	DD	DR	9999	DD9999	DR9999
G63:S015	G63 Duress	HA	HR	9999	HA9999	HR9999
G63:S016	G63 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G63:S017	G63 Panic	PA	PR	9999	PA9999	PR9999
G63:S018	G63 Pin Attempts	JA	UX	9999	JA9999	UX9999
G63:S019	G63 Temperature	UA	UR	9999	UA9999	UR9999
G63:S020	G63 Light Level	UA	UR	9999	UA9999	UR9999
G63:S021	G63 LAN Comms	EM	EN	9999	EM9999	EN9999
G63:S022	G63 Spare1	UA	UR	9999	UA9999	UR9999
G63:S023	G63 Spare2	UA	UR	9999	UA9999	UR9999
G64:Z001	G64:Z001	UA	UR	9999	UA9999	UR9999
G64:Z002	G64:Z002	UA	UR	9999	UA9999	UR9999
G64:S001	G64 Door Reed	UA	UR	9999	UA9999	UR9999
G64:S002	G64 Door Tongue	UA	UR	9999	UA9999	UR9999
G64:S003	G64 Door Tamper	IA	IR	9999	IA9999	IR9999
G64:S004	G64 Door Forced	DF	DR	9999	DF9999	DR9999
G64:S005	G64 Door DOTL	DL	DH	9999	DL9999	DH9999
G64:S006	G64 Cab Tamper	TA	TR	9999	TA9999	TR9999
G64:S007	G64 AC fail	AT	AR	9999	AT9999	AR9999
G64:S008	G64 Low Batt	YT	YR	9999	YT9999	YR9999
G64:S009	G64 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G64:S010	G64 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G64:S011	G64 Low Volts	YP	YQ	9999	YP9999	YQ9999
G64:S012	G64 PS Fail	YP	YQ	9999	YP9999	YQ9999
G64:S013	G64 Batt Test	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G64:S014	G64 Invalid Card	DD	DR	9999	DD9999	DR9999
G64:S015	G64 Duress	HA	HR	9999	HA9999	HR9999
G64:S016	G64 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G64:S017	G64 Panic	PA	PR	9999	PA9999	PR9999
G64:S018	G64 Pin Attempts	JA	UX	9999	JA9999	UX9999
G64:S019	G64 Temperature	UA	UR	9999	UA9999	UR9999
G64:S020	G64 Light Level	UA	UR	9999	UA9999	UR9999
G64:S021	G64 LAN Comms	EM	EN	9999	EM9999	EN9999
G64:S022	G64 Spare1	UA	UR	9999	UA9999	UR9999
G64:S023	G64 Spare2	UA	UR	9999	UA9999	UR9999
G65:Z001	G65:Z001	UA	UR	9999	UA9999	UR9999
G65:Z002	G65:Z002	UA	UR	9999	UA9999	UR9999
G65:S001	G65 Door Reed	UA	UR	9999	UA9999	UR9999
G65:S002	G65 Door Tongue	UA	UR	9999	UA9999	UR9999
G65:S003	G65 Door Tamper	IA	IR	9999	IA9999	IR9999
G65:S004	G65 Door Forced	DF	DR	9999	DF9999	DR9999
G65:S005	G65 Door DOTL	DL	DH	9999	DL9999	DH9999
G65:S006	G65 Cab Tamper	TA	TR	9999	TA9999	TR9999
G65:S007	G65 AC fail	AT	AR	9999	AT9999	AR9999
G65:S008	G65 Low Batt	YT	YR	9999	YT9999	YR9999
G65:S009	G65 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G65:S010	G65 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G65:S011	G65 Low Volts	YP	YQ	9999	YP9999	YQ9999
G65:S012	G65 PS Fail	YP	YQ	9999	YP9999	YQ9999
G65:S013	G65 Batt Test	IA	IR	9999	IA9999	IR9999
G65:S014	G65 Invalid Card	DD	DR	9999	DD9999	DR9999
G65:S015	G65 Duress	HA	HR	9999	HA9999	HR9999
G65:S016	G65 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G65:S017	G65 Panic	PA	PR	9999	PA9999	PR9999
G65:S018	G65 Pin Attempts	JA	UX	9999	JA9999	UX9999
G65:S019	G65 Temperature	UA	UR	9999	UA9999	UR9999
G65:S020	G65 Light Level	UA	UR	9999	UA9999	UR9999
G65:S021	G65 LAN Comms	EM	EN	9999	EM9999	EN9999
G65:S022	G65 Spare1	UA	UR	9999	UA9999	UR9999
G65:S023	G65 Spare2	UA	UR	9999	UA9999	UR9999
G66:Z001	G66:Z001	UA	UR	9999	UA9999	UR9999
G66:Z002	G66:Z002	UA	UR	9999	UA9999	UR9999
G66:S001	G66 Door Reed	UA	UR	9999	UA9999	UR9999
G66:S002	G66 Door Tongue	UA	UR	9999	UA9999	UR9999
G66:S003	G66 Door Tamper	IA	IR	9999	IA9999	IR9999
G66:S004	G66 Door Forced	DF	DR	9999	DF9999	DR9999
G66:S005	G66 Door DOTL	DL	DH	9999	DL9999	DH9999
G66:S006	G66 Cab Tamper	TA	TR	9999	TA9999	TR9999
G66:S007	G66 AC fail	AT	AR	9999	AT9999	AR9999
G66:S008	G66 Low Batt	YT	YR	9999	YT9999	YR9999
G66:S009	G66 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G66:S010	G66 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G66:S011	G66 Low Volts	YP	YQ	9999	YP9999	YQ9999
G66:S012	G66 PS Fail	YP	YQ	9999	YP9999	YQ9999
G66:S013	G66 Batt Test	IA	IR	9999	IA9999	IR9999
G66:S014	G66 Invalid Card	DD	DR	9999	DD9999	DR9999
G66:S015	G66 Duress	HA	HR	9999	HA9999	HR9999
G66:S016	G66 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G66:S017	G66 Panic	PA	PR	9999	PA9999	PR9999
G66:S018	G66 Pin Attempts	JA	UX	9999	JA9999	UX9999
G66:S019	G66 Temperature	UA	UR	9999	UA9999	UR9999
G66:S020	G66 Light Level	UA	UR	9999	UA9999	UR9999
G66:S021	G66 LAN Comms	EM	EN	9999	EM9999	EN9999
G66:S022	G66 Spare1	UA	UR	9999	UA9999	UR9999
G66:S023	G66 Spare2	UA	UR	9999	UA9999	UR9999
G67:Z001	G67:Z001	UA	UR	9999	UA9999	UR9999
G67:Z002	G67:Z002	UA	UR	9999	UA9999	UR9999
G67:S001	G67 Door Reed	UA	UR	9999	UA9999	UR9999
G67:S002	G67 Door Tongue	UA	UR	9999	UA9999	UR9999
G67:S003	G67 Door Tamper	IA	IR	9999	IA9999	IR9999
G67:S004	G67 Door Forced	DF	DR	9999	DF9999	DR9999
G67:S005	G67 Door DOTL	DL	DH	9999	DL9999	DH9999
G67:S006	G67 Cab Tamper	TA	TR	9999	TA9999	TR9999
G67:S007	G67 AC fail	AT	AR	9999	AT9999	AR9999
G67:S008	G67 Low Batt	YT	YR	9999	YT9999	YR9999

Integriti SIA DECIMAL Map. V21

G67:S009	G67 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G67:S010	G67 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G67:S011	G67 Low Volts	YP	YQ	9999	YP9999	YQ9999
G67:S012	G67 PS Fail	YP	YQ	9999	YP9999	YQ9999
G67:S013	G67 Batt Test	IA	IR	9999	IA9999	IR9999
G67:S014	G67 Invalid Card	DD	DR	9999	DD9999	DR9999
G67:S015	G67 Duress	HA	HR	9999	HA9999	HR9999
G67:S016	G67 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G67:S017	G67 Panic	PA	PR	9999	PA9999	PR9999
G67:S018	G67 Pin Attempts	JA	UX	9999	JA9999	UX9999
G67:S019	G67 Temperature	UA	UR	9999	UA9999	UR9999
G67:S020	G67 Light Level	UA	UR	9999	UA9999	UR9999
G67:S021	G67 LAN Comms	EM	EN	9999	EM9999	EN9999
G67:S022	G67 Spare1	UA	UR	9999	UA9999	UR9999
G67:S023	G67 Spare2	UA	UR	9999	UA9999	UR9999
G68:Z001	G68:Z001	UA	UR	9999	UA9999	UR9999
G68:Z002	G68:Z002	UA	UR	9999	UA9999	UR9999
G68:S001	G68 Door Reed	UA	UR	9999	UA9999	UR9999
G68:S002	G68 Door Tongue	UA	UR	9999	UA9999	UR9999
G68:S003	G68 Door Tamper	IA	IR	9999	IA9999	IR9999
G68:S004	G68 Door Forced	DF	DR	9999	DF9999	DR9999
G68:S005	G68 Door DOTL	DL	DH	9999	DL9999	DH9999
G68:S006	G68 Cab Tamper	TA	TR	9999	TA9999	TR9999
G68:S007	G68 AC fail	AT	AR	9999	AT9999	AR9999
G68:S008	G68 Low Batt	YT	YR	9999	YT9999	YR9999
G68:S009	G68 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G68:S010	G68 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G68:S011	G68 Low Volts	YP	YQ	9999	YP9999	YQ9999
G68:S012	G68 PS Fail	YP	YQ	9999	YP9999	YQ9999
G68:S013	G68 Batt Test	IA	IR	9999	IA9999	IR9999
G68:S014	G68 Invalid Card	DD	DR	9999	DD9999	DR9999
G68:S015	G68 Duress	HA	HR	9999	HA9999	HR9999
G68:S016	G68 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G68:S017	G68 Panic	PA	PR	9999	PA9999	PR9999
G68:S018	G68 Pin Attempts	JA	UX	9999	JA9999	UX9999
G68:S019	G68 Temperature	UA	UR	9999	UA9999	UR9999
G68:S020	G68 Light Level	UA	UR	9999	UA9999	UR9999
G68:S021	G68 LAN Comms	EM	EN	9999	EM9999	EN9999
G68:S022	G68 Spare1	UA	UR	9999	UA9999	UR9999
G68:S023	G68 Spare2	UA	UR	9999	UA9999	UR9999
G69:Z001	G69:Z001	UA	UR	9999	UA9999	UR9999
G69:Z002	G69:Z002	UA	UR	9999	UA9999	UR9999
G69:S001	G69 Door Reed	UA	UR	9999	UA9999	UR9999
G69:S002	G69 Door Tongue	UA	UR	9999	UA9999	UR9999
G69:S003	G69 Door Tamper	IA	IR	9999	IA9999	IR9999
G69:S004	G69 Door Forced	DF	DR	9999	DF9999	DR9999
G69:S005	G69 Door DOTL	DL	DH	9999	DL9999	DH9999
G69:S006	G69 Cab Tamper	TA	TR	9999	TA9999	TR9999
G69:S007	G69 AC fail	AT	AR	9999	AT9999	AR9999
G69:S008	G69 Low Batt	YT	YR	9999	YT9999	YR9999
G69:S009	G69 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G69:S010	G69 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G69:S011	G69 Low Volts	YP	YQ	9999	YP9999	YQ9999
G69:S012	G69 PS Fail	YP	YQ	9999	YP9999	YQ9999
G69:S013	G69 Batt Test	IA	IR	9999	IA9999	IR9999
G69:S014	G69 Invalid Card	DD	DR	9999	DD9999	DR9999
G69:S015	G69 Duress	HA	HR	9999	HA9999	HR9999
G69:S016	G69 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G69:S017	G69 Panic	PA	PR	9999	PA9999	PR9999
G69:S018	G69 Pin Attempts	JA	UX	9999	JA9999	UX9999
G69:S019	G69 Temperature	UA	UR	9999	UA9999	UR9999
G69:S020	G69 Light Level	UA	UR	9999	UA9999	UR9999
G69:S021	G69 LAN Comms	EM	EN	9999	EM9999	EN9999
G69:S022	G69 Spare1	UA	UR	9999	UA9999	UR9999
G69:S023	G69 Spare2	UA	UR	9999	UA9999	UR9999
G70:Z001	G70:Z001	UA	UR	9999	UA9999	UR9999
G70:Z002	G70:Z002	UA	UR	9999	UA9999	UR9999
G70:S001	G70 Door Reed	UA	UR	9999	UA9999	UR9999
G70:S002	G70 Door Tongue	UA	UR	9999	UA9999	UR9999
G70:S003	G70 Door Tamper	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G70:S004	G70 Door Forced	DF	DR	9999	DF9999	DR9999
G70:S005	G70 Door DOTL	DL	DH	9999	DL9999	DH9999
G70:S006	G70 Cab Tamper	TA	TR	9999	TA9999	TR9999
G70:S007	G70 AC fail	AT	AR	9999	AT9999	AR9999
G70:S008	G70 Low Batt	YT	YR	9999	YT9999	YR9999
G70:S009	G70 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G70:S010	G70 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G70:S011	G70 Low Volts	YP	YQ	9999	YP9999	YQ9999
G70:S012	G70 PS Fail	YP	YQ	9999	YP9999	YQ9999
G70:S013	G70 Batt Test	IA	IR	9999	IA9999	IR9999
G70:S014	G70 Invalid Card	DD	DR	9999	DD9999	DR9999
G70:S015	G70 Duress	HA	HR	9999	HA9999	HR9999
G70:S016	G70 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G70:S017	G70 Panic	PA	PR	9999	PA9999	PR9999
G70:S018	G70 Pin Attempts	JA	UX	9999	JA9999	UX9999
G70:S019	G70 Temperature	UA	UR	9999	UA9999	UR9999
G70:S020	G70 Light Level	UA	UR	9999	UA9999	UR9999
G70:S021	G70 LAN Comms	EM	EN	9999	EM9999	EN9999
G70:S022	G70 Spare1	UA	UR	9999	UA9999	UR9999
G70:S023	G70 Spare2	UA	UR	9999	UA9999	UR9999
G71:Z001	G71:Z001	UA	UR	9999	UA9999	UR9999
G71:Z002	G71:Z002	UA	UR	9999	UA9999	UR9999
G71:S001	G71 Door Reed	UA	UR	9999	UA9999	UR9999
G71:S002	G71 Door Tongue	UA	UR	9999	UA9999	UR9999
G71:S003	G71 Door Tamper	IA	IR	9999	IA9999	IR9999
G71:S004	G71 Door Forced	DF	DR	9999	DF9999	DR9999
G71:S005	G71 Door DOTL	DL	DH	9999	DL9999	DH9999
G71:S006	G71 Cab Tamper	TA	TR	9999	TA9999	TR9999
G71:S007	G71 AC fail	AT	AR	9999	AT9999	AR9999
G71:S008	G71 Low Batt	YT	YR	9999	YT9999	YR9999
G71:S009	G71 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G71:S010	G71 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G71:S011	G71 Low Volts	YP	YQ	9999	YP9999	YQ9999
G71:S012	G71 PS Fail	YP	YQ	9999	YP9999	YQ9999
G71:S013	G71 Batt Test	IA	IR	9999	IA9999	IR9999
G71:S014	G71 Invalid Card	DD	DR	9999	DD9999	DR9999
G71:S015	G71 Duress	HA	HR	9999	HA9999	HR9999
G71:S016	G71 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G71:S017	G71 Panic	PA	PR	9999	PA9999	PR9999
G71:S018	G71 Pin Attempts	JA	UX	9999	JA9999	UX9999
G71:S019	G71 Temperature	UA	UR	9999	UA9999	UR9999
G71:S020	G71 Light Level	UA	UR	9999	UA9999	UR9999
G71:S021	G71 LAN Comms	EM	EN	9999	EM9999	EN9999
G71:S022	G71 Spare1	UA	UR	9999	UA9999	UR9999
G71:S023	G71 Spare2	UA	UR	9999	UA9999	UR9999
G72:Z001	G72:Z001	UA	UR	9999	UA9999	UR9999
G72:Z002	G72:Z002	UA	UR	9999	UA9999	UR9999
G72:S001	G72 Door Reed	UA	UR	9999	UA9999	UR9999
G72:S002	G72 Door Tongue	UA	UR	9999	UA9999	UR9999
G72:S003	G72 Door Tamper	IA	IR	9999	IA9999	IR9999
G72:S004	G72 Door Forced	DF	DR	9999	DF9999	DR9999
G72:S005	G72 Door DOTL	DL	DH	9999	DL9999	DH9999
G72:S006	G72 Cab Tamper	TA	TR	9999	TA9999	TR9999
G72:S007	G72 AC fail	AT	AR	9999	AT9999	AR9999
G72:S008	G72 Low Batt	YT	YR	9999	YT9999	YR9999
G72:S009	G72 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G72:S010	G72 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G72:S011	G72 Low Volts	YP	YQ	9999	YP9999	YQ9999
G72:S012	G72 PS Fail	YP	YQ	9999	YP9999	YQ9999
G72:S013	G72 Batt Test	IA	IR	9999	IA9999	IR9999
G72:S014	G72 Invalid Card	DD	DR	9999	DD9999	DR9999
G72:S015	G72 Duress	HA	HR	9999	HA9999	HR9999
G72:S016	G72 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G72:S017	G72 Panic	PA	PR	9999	PA9999	PR9999
G72:S018	G72 Pin Attempts	JA	UX	9999	JA9999	UX9999
G72:S019	G72 Temperature	UA	UR	9999	UA9999	UR9999
G72:S020	G72 Light Level	UA	UR	9999	UA9999	UR9999
G72:S021	G72 LAN Comms	EM	EN	9999	EM9999	EN9999
G72:S022	G72 Spare1	UA	UR	9999	UA9999	UR9999
G72:S023	G72 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

G73:Z001	G73:Z001	UA	UR	9999	UA9999	UR9999
G73:Z002	G73:Z002	UA	UR	9999	UA9999	UR9999
G73:S001	G73 Door Reed	UA	UR	9999	UA9999	UR9999
G73:S002	G73 Door Tongue	UA	UR	9999	UA9999	UR9999
G73:S003	G73 Door Tamper	IA	IR	9999	IA9999	IR9999
G73:S004	G73 Door Forced	DF	DR	9999	DF9999	DR9999
G73:S005	G73 Door DOTL	DL	DH	9999	DL9999	DH9999
G73:S006	G73 Cab Tamper	TA	TR	9999	TA9999	TR9999
G73:S007	G73 AC fail	AT	AR	9999	AT9999	AR9999
G73:S008	G73 Low Batt	YT	YR	9999	YT9999	YR9999
G73:S009	G73 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G73:S010	G73 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G73:S011	G73 Low Volts	YP	YQ	9999	YP9999	YQ9999
G73:S012	G73 PS Fail	YP	YQ	9999	YP9999	YQ9999
G73:S013	G73 Batt Test	IA	IR	9999	IA9999	IR9999
G73:S014	G73 Invalid Card	DD	DR	9999	DD9999	DR9999
G73:S015	G73 Duress	HA	HR	9999	HA9999	HR9999
G73:S016	G73 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G73:S017	G73 Panic	PA	PR	9999	PA9999	PR9999
G73:S018	G73 Pin Attempts	JA	UX	9999	JA9999	UX9999
G73:S019	G73 Temperature	UA	UR	9999	UA9999	UR9999
G73:S020	G73 Light Level	UA	UR	9999	UA9999	UR9999
G73:S021	G73 LAN Comms	EM	EN	9999	EM9999	EN9999
G73:S022	G73 Spare1	UA	UR	9999	UA9999	UR9999
G73:S023	G73 Spare2	UA	UR	9999	UA9999	UR9999
G74:Z001	G74:Z001	UA	UR	9999	UA9999	UR9999
G74:Z002	G74:Z002	UA	UR	9999	UA9999	UR9999
G74:S001	G74 Door Reed	UA	UR	9999	UA9999	UR9999
G74:S002	G74 Door Tongue	UA	UR	9999	UA9999	UR9999
G74:S003	G74 Door Tamper	IA	IR	9999	IA9999	IR9999
G74:S004	G74 Door Forced	DF	DR	9999	DF9999	DR9999
G74:S005	G74 Door DOTL	DL	DH	9999	DL9999	DH9999
G74:S006	G74 Cab Tamper	TA	TR	9999	TA9999	TR9999
G74:S007	G74 AC fail	AT	AR	9999	AT9999	AR9999
G74:S008	G74 Low Batt	YT	YR	9999	YT9999	YR9999
G74:S009	G74 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G74:S010	G74 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G74:S011	G74 Low Volts	YP	YQ	9999	YP9999	YQ9999
G74:S012	G74 PS Fail	YP	YQ	9999	YP9999	YQ9999
G74:S013	G74 Batt Test	IA	IR	9999	IA9999	IR9999
G74:S014	G74 Invalid Card	DD	DR	9999	DD9999	DR9999
G74:S015	G74 Duress	HA	HR	9999	HA9999	HR9999
G74:S016	G74 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G74:S017	G74 Panic	PA	PR	9999	PA9999	PR9999
G74:S018	G74 Pin Attempts	JA	UX	9999	JA9999	UX9999
G74:S019	G74 Temperature	UA	UR	9999	UA9999	UR9999
G74:S020	G74 Light Level	UA	UR	9999	UA9999	UR9999
G74:S021	G74 LAN Comms	EM	EN	9999	EM9999	EN9999
G74:S022	G74 Spare1	UA	UR	9999	UA9999	UR9999
G74:S023	G74 Spare2	UA	UR	9999	UA9999	UR9999
G75:Z001	G75:Z001	UA	UR	9999	UA9999	UR9999
G75:Z002	G75:Z002	UA	UR	9999	UA9999	UR9999
G75:S001	G75 Door Reed	UA	UR	9999	UA9999	UR9999
G75:S002	G75 Door Tongue	UA	UR	9999	UA9999	UR9999
G75:S003	G75 Door Tamper	IA	IR	9999	IA9999	IR9999
G75:S004	G75 Door Forced	DF	DR	9999	DF9999	DR9999
G75:S005	G75 Door DOTL	DL	DH	9999	DL9999	DH9999
G75:S006	G75 Cab Tamper	TA	TR	9999	TA9999	TR9999
G75:S007	G75 AC fail	AT	AR	9999	AT9999	AR9999
G75:S008	G75 Low Batt	YT	YR	9999	YT9999	YR9999
G75:S009	G75 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G75:S010	G75 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G75:S011	G75 Low Volts	YP	YQ	9999	YP9999	YQ9999
G75:S012	G75 PS Fail	YP	YQ	9999	YP9999	YQ9999
G75:S013	G75 Batt Test	IA	IR	9999	IA9999	IR9999
G75:S014	G75 Invalid Card	DD	DR	9999	DD9999	DR9999
G75:S015	G75 Duress	HA	HR	9999	HA9999	HR9999
G75:S016	G75 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G75:S017	G75 Panic	PA	PR	9999	PA9999	PR9999
G75:S018	G75 Pin Attempts	JA	UX	9999	JA9999	UX9999

Integriti SIA DECIMAL Map. V21

G75:S019	G75 Temperature	UA	UR	9999	UA9999	UR9999
G75:S020	G75 Light Level	UA	UR	9999	UA9999	UR9999
G75:S021	G75 LAN Comms	EM	EN	9999	EM9999	EN9999
G75:S022	G75 Spare1	UA	UR	9999	UA9999	UR9999
G75:S023	G75 Spare2	UA	UR	9999	UA9999	UR9999
G76:Z001	G76:Z001	UA	UR	9999	UA9999	UR9999
G76:Z002	G76:Z002	UA	UR	9999	UA9999	UR9999
G76:S001	G76 Door Reed	UA	UR	9999	UA9999	UR9999
G76:S002	G76 Door Tongue	UA	UR	9999	UA9999	UR9999
G76:S003	G76 Door Tamper	IA	IR	9999	IA9999	IR9999
G76:S004	G76 Door Forced	DF	DR	9999	DF9999	DR9999
G76:S005	G76 Door DOTL	DL	DH	9999	DL9999	DH9999
G76:S006	G76 Cab Tamper	TA	TR	9999	TA9999	TR9999
G76:S007	G76 AC fail	AT	AR	9999	AT9999	AR9999
G76:S008	G76 Low Batt	YT	YR	9999	YT9999	YR9999
G76:S009	G76 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G76:S010	G76 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G76:S011	G76 Low Volts	YP	YQ	9999	YP9999	YQ9999
G76:S012	G76 PS Fail	YP	YQ	9999	YP9999	YQ9999
G76:S013	G76 Batt Test	IA	IR	9999	IA9999	IR9999
G76:S014	G76 Invalid Card	DD	DR	9999	DD9999	DR9999
G76:S015	G76 Duress	HA	HR	9999	HA9999	HR9999
G76:S016	G76 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G76:S017	G76 Panic	PA	PR	9999	PA9999	PR9999
G76:S018	G76 Pin Attempts	JA	UX	9999	JA9999	UX9999
G76:S019	G76 Temperature	UA	UR	9999	UA9999	UR9999
G76:S020	G76 Light Level	UA	UR	9999	UA9999	UR9999
G76:S021	G76 LAN Comms	EM	EN	9999	EM9999	EN9999
G76:S022	G76 Spare1	UA	UR	9999	UA9999	UR9999
G76:S023	G76 Spare2	UA	UR	9999	UA9999	UR9999
G77:Z001	G77:Z001	UA	UR	9999	UA9999	UR9999
G77:Z002	G77:Z002	UA	UR	9999	UA9999	UR9999
G77:S001	G77 Door Reed	UA	UR	9999	UA9999	UR9999
G77:S002	G77 Door Tongue	UA	UR	9999	UA9999	UR9999
G77:S003	G77 Door Tamper	IA	IR	9999	IA9999	IR9999
G77:S004	G77 Door Forced	DF	DR	9999	DF9999	DR9999
G77:S005	G77 Door DOTL	DL	DH	9999	DL9999	DH9999
G77:S006	G77 Cab Tamper	TA	TR	9999	TA9999	TR9999
G77:S007	G77 AC fail	AT	AR	9999	AT9999	AR9999
G77:S008	G77 Low Batt	YT	YR	9999	YT9999	YR9999
G77:S009	G77 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G77:S010	G77 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G77:S011	G77 Low Volts	YP	YQ	9999	YP9999	YQ9999
G77:S012	G77 PS Fail	YP	YQ	9999	YP9999	YQ9999
G77:S013	G77 Batt Test	IA	IR	9999	IA9999	IR9999
G77:S014	G77 Invalid Card	DD	DR	9999	DD9999	DR9999
G77:S015	G77 Duress	HA	HR	9999	HA9999	HR9999
G77:S016	G77 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G77:S017	G77 Panic	PA	PR	9999	PA9999	PR9999
G77:S018	G77 Pin Attempts	JA	UX	9999	JA9999	UX9999
G77:S019	G77 Temperature	UA	UR	9999	UA9999	UR9999
G77:S020	G77 Light Level	UA	UR	9999	UA9999	UR9999
G77:S021	G77 LAN Comms	EM	EN	9999	EM9999	EN9999
G77:S022	G77 Spare1	UA	UR	9999	UA9999	UR9999
G77:S023	G77 Spare2	UA	UR	9999	UA9999	UR9999
G78:Z001	G78:Z001	UA	UR	9999	UA9999	UR9999
G78:Z002	G78:Z002	UA	UR	9999	UA9999	UR9999
G78:S001	G78 Door Reed	UA	UR	9999	UA9999	UR9999
G78:S002	G78 Door Tongue	UA	UR	9999	UA9999	UR9999
G78:S003	G78 Door Tamper	IA	IR	9999	IA9999	IR9999
G78:S004	G78 Door Forced	DF	DR	9999	DF9999	DR9999
G78:S005	G78 Door DOTL	DL	DH	9999	DL9999	DH9999
G78:S006	G78 Cab Tamper	TA	TR	9999	TA9999	TR9999
G78:S007	G78 AC fail	AT	AR	9999	AT9999	AR9999
G78:S008	G78 Low Batt	YT	YR	9999	YT9999	YR9999
G78:S009	G78 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G78:S010	G78 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G78:S011	G78 Low Volts	YP	YQ	9999	YP9999	YQ9999
G78:S012	G78 PS Fail	YP	YQ	9999	YP9999	YQ9999
G78:S013	G78 Batt Test	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G78:S014	G78 Invalid Card	DD	DR	9999	DD9999	DR9999
G78:S015	G78 Duress	HA	HR	9999	HA9999	HR9999
G78:S016	G78 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G78:S017	G78 Panic	PA	PR	9999	PA9999	PR9999
G78:S018	G78 Pin Attempts	JA	UX	9999	JA9999	UX9999
G78:S019	G78 Temperature	UA	UR	9999	UA9999	UR9999
G78:S020	G78 Light Level	UA	UR	9999	UA9999	UR9999
G78:S021	G78 LAN Comms	EM	EN	9999	EM9999	EN9999
G78:S022	G78 Spare1	UA	UR	9999	UA9999	UR9999
G78:S023	G78 Spare2	UA	UR	9999	UA9999	UR9999
G79:Z001	G79:Z001	UA	UR	9999	UA9999	UR9999
G79:Z002	G79:Z002	UA	UR	9999	UA9999	UR9999
G79:S001	G79 Door Reed	UA	UR	9999	UA9999	UR9999
G79:S002	G79 Door Tongue	UA	UR	9999	UA9999	UR9999
G79:S003	G79 Door Tamper	IA	IR	9999	IA9999	IR9999
G79:S004	G79 Door Forced	DF	DR	9999	DF9999	DR9999
G79:S005	G79 Door DOTL	DL	DH	9999	DL9999	DH9999
G79:S006	G79 Cab Tamper	TA	TR	9999	TA9999	TR9999
G79:S007	G79 AC fail	AT	AR	9999	AT9999	AR9999
G79:S008	G79 Low Batt	YT	YR	9999	YT9999	YR9999
G79:S009	G79 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G79:S010	G79 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G79:S011	G79 Low Volts	YP	YQ	9999	YP9999	YQ9999
G79:S012	G79 PS Fail	YP	YQ	9999	YP9999	YQ9999
G79:S013	G79 Batt Test	IA	IR	9999	IA9999	IR9999
G79:S014	G79 Invalid Card	DD	DR	9999	DD9999	DR9999
G79:S015	G79 Duress	HA	HR	9999	HA9999	HR9999
G79:S016	G79 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G79:S017	G79 Panic	PA	PR	9999	PA9999	PR9999
G79:S018	G79 Pin Attempts	JA	UX	9999	JA9999	UX9999
G79:S019	G79 Temperature	UA	UR	9999	UA9999	UR9999
G79:S020	G79 Light Level	UA	UR	9999	UA9999	UR9999
G79:S021	G79 LAN Comms	EM	EN	9999	EM9999	EN9999
G79:S022	G79 Spare1	UA	UR	9999	UA9999	UR9999
G79:S023	G79 Spare2	UA	UR	9999	UA9999	UR9999
G80:Z001	G80:Z001	UA	UR	9999	UA9999	UR9999
G80:Z002	G80:Z002	UA	UR	9999	UA9999	UR9999
G80:S001	G80 Door Reed	UA	UR	9999	UA9999	UR9999
G80:S002	G80 Door Tongue	UA	UR	9999	UA9999	UR9999
G80:S003	G80 Door Tamper	IA	IR	9999	IA9999	IR9999
G80:S004	G80 Door Forced	DF	DR	9999	DF9999	DR9999
G80:S005	G80 Door DOTL	DL	DH	9999	DL9999	DH9999
G80:S006	G80 Cab Tamper	TA	TR	9999	TA9999	TR9999
G80:S007	G80 AC fail	AT	AR	9999	AT9999	AR9999
G80:S008	G80 Low Batt	YT	YR	9999	YT9999	YR9999
G80:S009	G80 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G80:S010	G80 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G80:S011	G80 Low Volts	YP	YQ	9999	YP9999	YQ9999
G80:S012	G80 PS Fail	YP	YQ	9999	YP9999	YQ9999
G80:S013	G80 Batt Test	IA	IR	9999	IA9999	IR9999
G80:S014	G80 Invalid Card	DD	DR	9999	DD9999	DR9999
G80:S015	G80 Duress	HA	HR	9999	HA9999	HR9999
G80:S016	G80 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G80:S017	G80 Panic	PA	PR	9999	PA9999	PR9999
G80:S018	G80 Pin Attempts	JA	UX	9999	JA9999	UX9999
G80:S019	G80 Temperature	UA	UR	9999	UA9999	UR9999
G80:S020	G80 Light Level	UA	UR	9999	UA9999	UR9999
G80:S021	G80 LAN Comms	EM	EN	9999	EM9999	EN9999
G80:S022	G80 Spare1	UA	UR	9999	UA9999	UR9999
G80:S023	G80 Spare2	UA	UR	9999	UA9999	UR9999
G81:Z001	G81:Z001	UA	UR	9999	UA9999	UR9999
G81:Z002	G81:Z002	UA	UR	9999	UA9999	UR9999
G81:S001	G81 Door Reed	UA	UR	9999	UA9999	UR9999
G81:S002	G81 Door Tongue	UA	UR	9999	UA9999	UR9999
G81:S003	G81 Door Tamper	IA	IR	9999	IA9999	IR9999
G81:S004	G81 Door Forced	DF	DR	9999	DF9999	DR9999
G81:S005	G81 Door DOTL	DL	DH	9999	DL9999	DH9999
G81:S006	G81 Cab Tamper	TA	TR	9999	TA9999	TR9999
G81:S007	G81 AC fail	AT	AR	9999	AT9999	AR9999
G81:S008	G81 Low Batt	YT	YR	9999	YT9999	YR9999

Integriti SIA DECIMAL Map. V21

G81:S009	G81 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G81:S010	G81 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G81:S011	G81 Low Volts	YP	YQ	9999	YP9999	YQ9999
G81:S012	G81 PS Fail	YP	YQ	9999	YP9999	YQ9999
G81:S013	G81 Batt Test	IA	IR	9999	IA9999	IR9999
G81:S014	G81 Invalid Card	DD	DR	9999	DD9999	DR9999
G81:S015	G81 Duress	HA	HR	9999	HA9999	HR9999
G81:S016	G81 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G81:S017	G81 Panic	PA	PR	9999	PA9999	PR9999
G81:S018	G81 Pin Attempts	JA	UX	9999	JA9999	UX9999
G81:S019	G81 Temperature	UA	UR	9999	UA9999	UR9999
G81:S020	G81 Light Level	UA	UR	9999	UA9999	UR9999
G81:S021	G81 LAN Comms	EM	EN	9999	EM9999	EN9999
G81:S022	G81 Spare1	UA	UR	9999	UA9999	UR9999
G81:S023	G81 Spare2	UA	UR	9999	UA9999	UR9999
G82:Z001	G82:Z001	UA	UR	9999	UA9999	UR9999
G82:Z002	G82:Z002	UA	UR	9999	UA9999	UR9999
G82:S001	G82 Door Reed	UA	UR	9999	UA9999	UR9999
G82:S002	G82 Door Tongue	UA	UR	9999	UA9999	UR9999
G82:S003	G82 Door Tamper	IA	IR	9999	IA9999	IR9999
G82:S004	G82 Door Forced	DF	DR	9999	DF9999	DR9999
G82:S005	G82 Door DOTL	DL	DH	9999	DL9999	DH9999
G82:S006	G82 Cab Tamper	TA	TR	9999	TA9999	TR9999
G82:S007	G82 AC fail	AT	AR	9999	AT9999	AR9999
G82:S008	G82 Low Batt	YT	YR	9999	YT9999	YR9999
G82:S009	G82 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G82:S010	G82 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G82:S011	G82 Low Volts	YP	YQ	9999	YP9999	YQ9999
G82:S012	G82 PS Fail	YP	YQ	9999	YP9999	YQ9999
G82:S013	G82 Batt Test	IA	IR	9999	IA9999	IR9999
G82:S014	G82 Invalid Card	DD	DR	9999	DD9999	DR9999
G82:S015	G82 Duress	HA	HR	9999	HA9999	HR9999
G82:S016	G82 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G82:S017	G82 Panic	PA	PR	9999	PA9999	PR9999
G82:S018	G82 Pin Attempts	JA	UX	9999	JA9999	UX9999
G82:S019	G82 Temperature	UA	UR	9999	UA9999	UR9999
G82:S020	G82 Light Level	UA	UR	9999	UA9999	UR9999
G82:S021	G82 LAN Comms	EM	EN	9999	EM9999	EN9999
G82:S022	G82 Spare1	UA	UR	9999	UA9999	UR9999
G82:S023	G82 Spare2	UA	UR	9999	UA9999	UR9999
G83:Z001	G83:Z001	UA	UR	9999	UA9999	UR9999
G83:Z002	G83:Z002	UA	UR	9999	UA9999	UR9999
G83:S001	G83 Door Reed	UA	UR	9999	UA9999	UR9999
G83:S002	G83 Door Tongue	UA	UR	9999	UA9999	UR9999
G83:S003	G83 Door Tamper	IA	IR	9999	IA9999	IR9999
G83:S004	G83 Door Forced	DF	DR	9999	DF9999	DR9999
G83:S005	G83 Door DOTL	DL	DH	9999	DL9999	DH9999
G83:S006	G83 Cab Tamper	TA	TR	9999	TA9999	TR9999
G83:S007	G83 AC fail	AT	AR	9999	AT9999	AR9999
G83:S008	G83 Low Batt	YT	YR	9999	YT9999	YR9999
G83:S009	G83 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G83:S010	G83 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G83:S011	G83 Low Volts	YP	YQ	9999	YP9999	YQ9999
G83:S012	G83 PS Fail	YP	YQ	9999	YP9999	YQ9999
G83:S013	G83 Batt Test	IA	IR	9999	IA9999	IR9999
G83:S014	G83 Invalid Card	DD	DR	9999	DD9999	DR9999
G83:S015	G83 Duress	HA	HR	9999	HA9999	HR9999
G83:S016	G83 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G83:S017	G83 Panic	PA	PR	9999	PA9999	PR9999
G83:S018	G83 Pin Attempts	JA	UX	9999	JA9999	UX9999
G83:S019	G83 Temperature	UA	UR	9999	UA9999	UR9999
G83:S020	G83 Light Level	UA	UR	9999	UA9999	UR9999
G83:S021	G83 LAN Comms	EM	EN	9999	EM9999	EN9999
G83:S022	G83 Spare1	UA	UR	9999	UA9999	UR9999
G83:S023	G83 Spare2	UA	UR	9999	UA9999	UR9999
G84:Z001	G84:Z001	UA	UR	9999	UA9999	UR9999
G84:Z002	G84:Z002	UA	UR	9999	UA9999	UR9999
G84:S001	G84 Door Reed	UA	UR	9999	UA9999	UR9999
G84:S002	G84 Door Tongue	UA	UR	9999	UA9999	UR9999
G84:S003	G84 Door Tamper	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G84:S004	G84 Door Forced	DF	DR	9999	DF9999	DR9999
G84:S005	G84 Door DOTL	DL	DH	9999	DL9999	DH9999
G84:S006	G84 Cab Tamper	TA	TR	9999	TA9999	TR9999
G84:S007	G84 AC fail	AT	AR	9999	AT9999	AR9999
G84:S008	G84 Low Batt	YT	YR	9999	YT9999	YR9999
G84:S009	G84 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G84:S010	G84 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G84:S011	G84 Low Volts	YP	YQ	9999	YP9999	YQ9999
G84:S012	G84 PS Fail	YP	YQ	9999	YP9999	YQ9999
G84:S013	G84 Batt Test	IA	IR	9999	IA9999	IR9999
G84:S014	G84 Invalid Card	DD	DR	9999	DD9999	DR9999
G84:S015	G84 Duress	HA	HR	9999	HA9999	HR9999
G84:S016	G84 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G84:S017	G84 Panic	PA	PR	9999	PA9999	PR9999
G84:S018	G84 Pin Attempts	JA	UX	9999	JA9999	UX9999
G84:S019	G84 Temperature	UA	UR	9999	UA9999	UR9999
G84:S020	G84 Light Level	UA	UR	9999	UA9999	UR9999
G84:S021	G84 LAN Comms	EM	EN	9999	EM9999	EN9999
G84:S022	G84 Spare1	UA	UR	9999	UA9999	UR9999
G84:S023	G84 Spare2	UA	UR	9999	UA9999	UR9999
G85:Z001	G85:Z001	UA	UR	9999	UA9999	UR9999
G85:Z002	G85:Z002	UA	UR	9999	UA9999	UR9999
G85:S001	G85 Door Reed	UA	UR	9999	UA9999	UR9999
G85:S002	G85 Door Tongue	UA	UR	9999	UA9999	UR9999
G85:S003	G85 Door Tamper	IA	IR	9999	IA9999	IR9999
G85:S004	G85 Door Forced	DF	DR	9999	DF9999	DR9999
G85:S005	G85 Door DOTL	DL	DH	9999	DL9999	DH9999
G85:S006	G85 Cab Tamper	TA	TR	9999	TA9999	TR9999
G85:S007	G85 AC fail	AT	AR	9999	AT9999	AR9999
G85:S008	G85 Low Batt	YT	YR	9999	YT9999	YR9999
G85:S009	G85 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G85:S010	G85 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G85:S011	G85 Low Volts	YP	YQ	9999	YP9999	YQ9999
G85:S012	G85 PS Fail	YP	YQ	9999	YP9999	YQ9999
G85:S013	G85 Batt Test	IA	IR	9999	IA9999	IR9999
G85:S014	G85 Invalid Card	DD	DR	9999	DD9999	DR9999
G85:S015	G85 Duress	HA	HR	9999	HA9999	HR9999
G85:S016	G85 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G85:S017	G85 Panic	PA	PR	9999	PA9999	PR9999
G85:S018	G85 Pin Attempts	JA	UX	9999	JA9999	UX9999
G85:S019	G85 Temperature	UA	UR	9999	UA9999	UR9999
G85:S020	G85 Light Level	UA	UR	9999	UA9999	UR9999
G85:S021	G85 LAN Comms	EM	EN	9999	EM9999	EN9999
G85:S022	G85 Spare1	UA	UR	9999	UA9999	UR9999
G85:S023	G85 Spare2	UA	UR	9999	UA9999	UR9999
G86:Z001	G86:Z001	UA	UR	9999	UA9999	UR9999
G86:Z002	G86:Z002	UA	UR	9999	UA9999	UR9999
G86:S001	G86 Door Reed	UA	UR	9999	UA9999	UR9999
G86:S002	G86 Door Tongue	UA	UR	9999	UA9999	UR9999
G86:S003	G86 Door Tamper	IA	IR	9999	IA9999	IR9999
G86:S004	G86 Door Forced	DF	DR	9999	DF9999	DR9999
G86:S005	G86 Door DOTL	DL	DH	9999	DL9999	DH9999
G86:S006	G86 Cab Tamper	TA	TR	9999	TA9999	TR9999
G86:S007	G86 AC fail	AT	AR	9999	AT9999	AR9999
G86:S008	G86 Low Batt	YT	YR	9999	YT9999	YR9999
G86:S009	G86 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G86:S010	G86 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G86:S011	G86 Low Volts	YP	YQ	9999	YP9999	YQ9999
G86:S012	G86 PS Fail	YP	YQ	9999	YP9999	YQ9999
G86:S013	G86 Batt Test	IA	IR	9999	IA9999	IR9999
G86:S014	G86 Invalid Card	DD	DR	9999	DD9999	DR9999
G86:S015	G86 Duress	HA	HR	9999	HA9999	HR9999
G86:S016	G86 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G86:S017	G86 Panic	PA	PR	9999	PA9999	PR9999
G86:S018	G86 Pin Attempts	JA	UX	9999	JA9999	UX9999
G86:S019	G86 Temperature	UA	UR	9999	UA9999	UR9999
G86:S020	G86 Light Level	UA	UR	9999	UA9999	UR9999
G86:S021	G86 LAN Comms	EM	EN	9999	EM9999	EN9999
G86:S022	G86 Spare1	UA	UR	9999	UA9999	UR9999
G86:S023	G86 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

G87:Z001	G87:Z001	UA	UR	9999	UA9999	UR9999
G87:Z002	G87:Z002	UA	UR	9999	UA9999	UR9999
G87:S001	G87 Door Reed	UA	UR	9999	UA9999	UR9999
G87:S002	G87 Door Tongue	UA	UR	9999	UA9999	UR9999
G87:S003	G87 Door Tamper	IA	IR	9999	IA9999	IR9999
G87:S004	G87 Door Forced	DF	DR	9999	DF9999	DR9999
G87:S005	G87 Door DOTL	DL	DH	9999	DL9999	DH9999
G87:S006	G87 Cab Tamper	TA	TR	9999	TA9999	TR9999
G87:S007	G87 AC fail	AT	AR	9999	AT9999	AR9999
G87:S008	G87 Low Batt	YT	YR	9999	YT9999	YR9999
G87:S009	G87 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G87:S010	G87 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G87:S011	G87 Low Volts	YP	YQ	9999	YP9999	YQ9999
G87:S012	G87 PS Fail	YP	YQ	9999	YP9999	YQ9999
G87:S013	G87 Batt Test	IA	IR	9999	IA9999	IR9999
G87:S014	G87 Invalid Card	DD	DR	9999	DD9999	DR9999
G87:S015	G87 Duress	HA	HR	9999	HA9999	HR9999
G87:S016	G87 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G87:S017	G87 Panic	PA	PR	9999	PA9999	PR9999
G87:S018	G87 Pin Attempts	JA	UX	9999	JA9999	UX9999
G87:S019	G87 Temperature	UA	UR	9999	UA9999	UR9999
G87:S020	G87 Light Level	UA	UR	9999	UA9999	UR9999
G87:S021	G87 LAN Comms	EM	EN	9999	EM9999	EN9999
G87:S022	G87 Spare1	UA	UR	9999	UA9999	UR9999
G87:S023	G87 Spare2	UA	UR	9999	UA9999	UR9999
G88:Z001	G88:Z001	UA	UR	9999	UA9999	UR9999
G88:Z002	G88:Z002	UA	UR	9999	UA9999	UR9999
G88:S001	G88 Door Reed	UA	UR	9999	UA9999	UR9999
G88:S002	G88 Door Tongue	UA	UR	9999	UA9999	UR9999
G88:S003	G88 Door Tamper	IA	IR	9999	IA9999	IR9999
G88:S004	G88 Door Forced	DF	DR	9999	DF9999	DR9999
G88:S005	G88 Door DOTL	DL	DH	9999	DL9999	DH9999
G88:S006	G88 Cab Tamper	TA	TR	9999	TA9999	TR9999
G88:S007	G88 AC fail	AT	AR	9999	AT9999	AR9999
G88:S008	G88 Low Batt	YT	YR	9999	YT9999	YR9999
G88:S009	G88 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G88:S010	G88 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G88:S011	G88 Low Volts	YP	YQ	9999	YP9999	YQ9999
G88:S012	G88 PS Fail	YP	YQ	9999	YP9999	YQ9999
G88:S013	G88 Batt Test	IA	IR	9999	IA9999	IR9999
G88:S014	G88 Invalid Card	DD	DR	9999	DD9999	DR9999
G88:S015	G88 Duress	HA	HR	9999	HA9999	HR9999
G88:S016	G88 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G88:S017	G88 Panic	PA	PR	9999	PA9999	PR9999
G88:S018	G88 Pin Attempts	JA	UX	9999	JA9999	UX9999
G88:S019	G88 Temperature	UA	UR	9999	UA9999	UR9999
G88:S020	G88 Light Level	UA	UR	9999	UA9999	UR9999
G88:S021	G88 LAN Comms	EM	EN	9999	EM9999	EN9999
G88:S022	G88 Spare1	UA	UR	9999	UA9999	UR9999
G88:S023	G88 Spare2	UA	UR	9999	UA9999	UR9999
G89:Z001	G89:Z001	UA	UR	9999	UA9999	UR9999
G89:Z002	G89:Z002	UA	UR	9999	UA9999	UR9999
G89:S001	G89 Door Reed	UA	UR	9999	UA9999	UR9999
G89:S002	G89 Door Tongue	UA	UR	9999	UA9999	UR9999
G89:S003	G89 Door Tamper	IA	IR	9999	IA9999	IR9999
G89:S004	G89 Door Forced	DF	DR	9999	DF9999	DR9999
G89:S005	G89 Door DOTL	DL	DH	9999	DL9999	DH9999
G89:S006	G89 Cab Tamper	TA	TR	9999	TA9999	TR9999
G89:S007	G89 AC fail	AT	AR	9999	AT9999	AR9999
G89:S008	G89 Low Batt	YT	YR	9999	YT9999	YR9999
G89:S009	G89 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G89:S010	G89 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G89:S011	G89 Low Volts	YP	YQ	9999	YP9999	YQ9999
G89:S012	G89 PS Fail	YP	YQ	9999	YP9999	YQ9999
G89:S013	G89 Batt Test	IA	IR	9999	IA9999	IR9999
G89:S014	G89 Invalid Card	DD	DR	9999	DD9999	DR9999
G89:S015	G89 Duress	HA	HR	9999	HA9999	HR9999
G89:S016	G89 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G89:S017	G89 Panic	PA	PR	9999	PA9999	PR9999
G89:S018	G89 Pin Attempts	JA	UX	9999	JA9999	UX9999

G89:S019	G89 Temperature	UA	UR	9999	UA9999	UR9999
G89:S020	G89 Light Level	UA	UR	9999	UA9999	UR9999
G89:S021	G89 LAN Comms	EM	EN	9999	EM9999	EN9999
G89:S022	G89 Spare1	UA	UR	9999	UA9999	UR9999
G89:S023	G89 Spare2	UA	UR	9999	UA9999	UR9999
G90:Z001	G90:Z001	UA	UR	9999	UA9999	UR9999
G90:Z002	G90:Z002	UA	UR	9999	UA9999	UR9999
G90:S001	G90 Door Reed	UA	UR	9999	UA9999	UR9999
G90:S002	G90 Door Tongue	UA	UR	9999	UA9999	UR9999
G90:S003	G90 Door Tamper	IA	IR	9999	IA9999	IR9999
G90:S004	G90 Door Forced	DF	DR	9999	DF9999	DR9999
G90:S005	G90 Door DOTL	DL	DH	9999	DL9999	DH9999
G90:S006	G90 Cab Tamper	TA	TR	9999	TA9999	TR9999
G90:S007	G90 AC fail	AT	AR	9999	AT9999	AR9999
G90:S008	G90 Low Batt	YT	YR	9999	YT9999	YR9999
G90:S009	G90 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G90:S010	G90 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G90:S011	G90 Low Volts	YP	YQ	9999	YP9999	YQ9999
G90:S012	G90 PS Fail	YP	YQ	9999	YP9999	YQ9999
G90:S013	G90 Batt Test	IA	IR	9999	IA9999	IR9999
G90:S014	G90 Invalid Card	DD	DR	9999	DD9999	DR9999
G90:S015	G90 Duress	HA	HR	9999	HA9999	HR9999
G90:S016	G90 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G90:S017	G90 Panic	PA	PR	9999	PA9999	PR9999
G90:S018	G90 Pin Attempts	JA	UX	9999	JA9999	UX9999
G90:S019	G90 Temperature	UA	UR	9999	UA9999	UR9999
G90:S020	G90 Light Level	UA	UR	9999	UA9999	UR9999
G90:S021	G90 LAN Comms	EM	EN	9999	EM9999	EN9999
G90:S022	G90 Spare1	UA	UR	9999	UA9999	UR9999
G90:S023	G90 Spare2	UA	UR	9999	UA9999	UR9999
G91:Z001	G91:Z001	UA	UR	9999	UA9999	UR9999
G91:Z002	G91:Z002	UA	UR	9999	UA9999	UR9999
G91:S001	G91 Door Reed	UA	UR	9999	UA9999	UR9999
G91:S002	G91 Door Tongue	UA	UR	9999	UA9999	UR9999
G91:S003	G91 Door Tamper	IA	IR	9999	IA9999	IR9999
G91:S004	G91 Door Forced	DF	DR	9999	DF9999	DR9999
G91:S005	G91 Door DOTL	DL	DH	9999	DL9999	DH9999
G91:S006	G91 Cab Tamper	TA	TR	9999	TA9999	TR9999
G91:S007	G91 AC fail	AT	AR	9999	AT9999	AR9999
G91:S008	G91 Low Batt	YT	YR	9999	YT9999	YR9999
G91:S009	G91 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G91:S010	G91 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G91:S011	G91 Low Volts	YP	YQ	9999	YP9999	YQ9999
G91:S012	G91 PS Fail	YP	YQ	9999	YP9999	YQ9999
G91:S013	G91 Batt Test	IA	IR	9999	IA9999	IR9999
G91:S014	G91 Invalid Card	DD	DR	9999	DD9999	DR9999
G91:S015	G91 Duress	HA	HR	9999	HA9999	HR9999
G91:S016	G91 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G91:S017	G91 Panic	PA	PR	9999	PA9999	PR9999
G91:S018	G91 Pin Attempts	JA	UX	9999	JA9999	UX9999
G91:S019	G91 Temperature	UA	UR	9999	UA9999	UR9999
G91:S020	G91 Light Level	UA	UR	9999	UA9999	UR9999
G91:S021	G91 LAN Comms	EM	EN	9999	EM9999	EN9999
G91:S022	G91 Spare1	UA	UR	9999	UA9999	UR9999
G91:S023	G91 Spare2	UA	UR	9999	UA9999	UR9999
G92:Z001	G92:Z001	UA	UR	9999	UA9999	UR9999
G92:Z002	G92:Z002	UA	UR	9999	UA9999	UR9999
G92:S001	G92 Door Reed	UA	UR	9999	UA9999	UR9999
G92:S002	G92 Door Tongue	UA	UR	9999	UA9999	UR9999
G92:S003	G92 Door Tamper	IA	IR	9999	IA9999	IR9999
G92:S004	G92 Door Forced	DF	DR	9999	DF9999	DR9999
G92:S005	G92 Door DOTL	DL	DH	9999	DL9999	DH9999
G92:S006	G92 Cab Tamper	TA	TR	9999	TA9999	TR9999
G92:S007	G92 AC fail	AT	AR	9999	AT9999	AR9999
G92:S008	G92 Low Batt	YT	YR	9999	YT9999	YR9999
G92:S009	G92 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G92:S010	G92 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G92:S011	G92 Low Volts	YP	YQ	9999	YP9999	YQ9999
G92:S012	G92 PS Fail	YP	YQ	9999	YP9999	YQ9999
G92:S013	G92 Batt Test	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G92:S014	G92 Invalid Card	DD	DR	9999	DD9999	DR9999
G92:S015	G92 Duress	HA	HR	9999	HA9999	HR9999
G92:S016	G92 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G92:S017	G92 Panic	PA	PR	9999	PA9999	PR9999
G92:S018	G92 Pin Attempts	JA	UX	9999	JA9999	UX9999
G92:S019	G92 Temperature	UA	UR	9999	UA9999	UR9999
G92:S020	G92 Light Level	UA	UR	9999	UA9999	UR9999
G92:S021	G92 LAN Comms	EM	EN	9999	EM9999	EN9999
G92:S022	G92 Spare1	UA	UR	9999	UA9999	UR9999
G92:S023	G92 Spare2	UA	UR	9999	UA9999	UR9999
G93:Z001	G93:Z001	UA	UR	9999	UA9999	UR9999
G93:Z002	G93:Z002	UA	UR	9999	UA9999	UR9999
G93:S001	G93 Door Reed	UA	UR	9999	UA9999	UR9999
G93:S002	G93 Door Tongue	UA	UR	9999	UA9999	UR9999
G93:S003	G93 Door Tamper	IA	IR	9999	IA9999	IR9999
G93:S004	G93 Door Forced	DF	DR	9999	DF9999	DR9999
G93:S005	G93 Door DOTL	DL	DH	9999	DL9999	DH9999
G93:S006	G93 Cab Tamper	TA	TR	9999	TA9999	TR9999
G93:S007	G93 AC fail	AT	AR	9999	AT9999	AR9999
G93:S008	G93 Low Batt	YT	YR	9999	YT9999	YR9999
G93:S009	G93 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G93:S010	G93 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G93:S011	G93 Low Volts	YP	YQ	9999	YP9999	YQ9999
G93:S012	G93 PS Fail	YP	YQ	9999	YP9999	YQ9999
G93:S013	G93 Batt Test	IA	IR	9999	IA9999	IR9999
G93:S014	G93 Invalid Card	DD	DR	9999	DD9999	DR9999
G93:S015	G93 Duress	HA	HR	9999	HA9999	HR9999
G93:S016	G93 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G93:S017	G93 Panic	PA	PR	9999	PA9999	PR9999
G93:S018	G93 Pin Attempts	JA	UX	9999	JA9999	UX9999
G93:S019	G93 Temperature	UA	UR	9999	UA9999	UR9999
G93:S020	G93 Light Level	UA	UR	9999	UA9999	UR9999
G93:S021	G93 LAN Comms	EM	EN	9999	EM9999	EN9999
G93:S022	G93 Spare1	UA	UR	9999	UA9999	UR9999
G93:S023	G93 Spare2	UA	UR	9999	UA9999	UR9999
G94:Z001	G94:Z001	UA	UR	9999	UA9999	UR9999
G94:Z002	G94:Z002	UA	UR	9999	UA9999	UR9999
G94:S001	G94 Door Reed	UA	UR	9999	UA9999	UR9999
G94:S002	G94 Door Tongue	UA	UR	9999	UA9999	UR9999
G94:S003	G94 Door Tamper	IA	IR	9999	IA9999	IR9999
G94:S004	G94 Door Forced	DF	DR	9999	DF9999	DR9999
G94:S005	G94 Door DOTL	DL	DH	9999	DL9999	DH9999
G94:S006	G94 Cab Tamper	TA	TR	9999	TA9999	TR9999
G94:S007	G94 AC fail	AT	AR	9999	AT9999	AR9999
G94:S008	G94 Low Batt	YT	YR	9999	YT9999	YR9999
G94:S009	G94 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G94:S010	G94 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G94:S011	G94 Low Volts	YP	YQ	9999	YP9999	YQ9999
G94:S012	G94 PS Fail	YP	YQ	9999	YP9999	YQ9999
G94:S013	G94 Batt Test	IA	IR	9999	IA9999	IR9999
G94:S014	G94 Invalid Card	DD	DR	9999	DD9999	DR9999
G94:S015	G94 Duress	HA	HR	9999	HA9999	HR9999
G94:S016	G94 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G94:S017	G94 Panic	PA	PR	9999	PA9999	PR9999
G94:S018	G94 Pin Attempts	JA	UX	9999	JA9999	UX9999
G94:S019	G94 Temperature	UA	UR	9999	UA9999	UR9999
G94:S020	G94 Light Level	UA	UR	9999	UA9999	UR9999
G94:S021	G94 LAN Comms	EM	EN	9999	EM9999	EN9999
G94:S022	G94 Spare1	UA	UR	9999	UA9999	UR9999
G94:S023	G94 Spare2	UA	UR	9999	UA9999	UR9999
G95:Z001	G95:Z001	UA	UR	9999	UA9999	UR9999
G95:Z002	G95:Z002	UA	UR	9999	UA9999	UR9999
G95:S001	G95 Door Reed	UA	UR	9999	UA9999	UR9999
G95:S002	G95 Door Tongue	UA	UR	9999	UA9999	UR9999
G95:S003	G95 Door Tamper	IA	IR	9999	IA9999	IR9999
G95:S004	G95 Door Forced	DF	DR	9999	DF9999	DR9999
G95:S005	G95 Door DOTL	DL	DH	9999	DL9999	DH9999
G95:S006	G95 Cab Tamper	TA	TR	9999	TA9999	TR9999
G95:S007	G95 AC fail	AT	AR	9999	AT9999	AR9999
G95:S008	G95 Low Batt	YT	YR	9999	YT9999	YR9999

Integriti SIA DECIMAL Map. V21

G95:S009	G95 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G95:S010	G95 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G95:S011	G95 Low Volts	YP	YQ	9999	YP9999	YQ9999
G95:S012	G95 PS Fail	YP	YQ	9999	YP9999	YQ9999
G95:S013	G95 Batt Test	IA	IR	9999	IA9999	IR9999
G95:S014	G95 Invalid Card	DD	DR	9999	DD9999	DR9999
G95:S015	G95 Duress	HA	HR	9999	HA9999	HR9999
G95:S016	G95 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G95:S017	G95 Panic	PA	PR	9999	PA9999	PR9999
G95:S018	G95 Pin Attempts	JA	UX	9999	JA9999	UX9999
G95:S019	G95 Temperature	UA	UR	9999	UA9999	UR9999
G95:S020	G95 Light Level	UA	UR	9999	UA9999	UR9999
G95:S021	G95 LAN Comms	EM	EN	9999	EM9999	EN9999
G95:S022	G95 Spare1	UA	UR	9999	UA9999	UR9999
G95:S023	G95 Spare2	UA	UR	9999	UA9999	UR9999
G96:Z001	G96:Z001	UA	UR	9999	UA9999	UR9999
G96:Z002	G96:Z002	UA	UR	9999	UA9999	UR9999
G96:S001	G96 Door Reed	UA	UR	9999	UA9999	UR9999
G96:S002	G96 Door Tongue	UA	UR	9999	UA9999	UR9999
G96:S003	G96 Door Tamper	IA	IR	9999	IA9999	IR9999
G96:S004	G96 Door Forced	DF	DR	9999	DF9999	DR9999
G96:S005	G96 Door DOTL	DL	DH	9999	DL9999	DH9999
G96:S006	G96 Cab Tamper	TA	TR	9999	TA9999	TR9999
G96:S007	G96 AC fail	AT	AR	9999	AT9999	AR9999
G96:S008	G96 Low Batt	YT	YR	9999	YT9999	YR9999
G96:S009	G96 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G96:S010	G96 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G96:S011	G96 Low Volts	YP	YQ	9999	YP9999	YQ9999
G96:S012	G96 PS Fail	YP	YQ	9999	YP9999	YQ9999
G96:S013	G96 Batt Test	IA	IR	9999	IA9999	IR9999
G96:S014	G96 Invalid Card	DD	DR	9999	DD9999	DR9999
G96:S015	G96 Duress	HA	HR	9999	HA9999	HR9999
G96:S016	G96 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G96:S017	G96 Panic	PA	PR	9999	PA9999	PR9999
G96:S018	G96 Pin Attempts	JA	UX	9999	JA9999	UX9999
G96:S019	G96 Temperature	UA	UR	9999	UA9999	UR9999
G96:S020	G96 Light Level	UA	UR	9999	UA9999	UR9999
G96:S021	G96 LAN Comms	EM	EN	9999	EM9999	EN9999
G96:S022	G96 Spare1	UA	UR	9999	UA9999	UR9999
G96:S023	G96 Spare2	UA	UR	9999	UA9999	UR9999
G97:Z001	G97:Z001	UA	UR	9999	UA9999	UR9999
G97:Z002	G97:Z002	UA	UR	9999	UA9999	UR9999
G97:S001	G97 Door Reed	UA	UR	9999	UA9999	UR9999
G97:S002	G97 Door Tongue	UA	UR	9999	UA9999	UR9999
G97:S003	G97 Door Tamper	IA	IR	9999	IA9999	IR9999
G97:S004	G97 Door Forced	DF	DR	9999	DF9999	DR9999
G97:S005	G97 Door DOTL	DL	DH	9999	DL9999	DH9999
G97:S006	G97 Cab Tamper	TA	TR	9999	TA9999	TR9999
G97:S007	G97 AC fail	AT	AR	9999	AT9999	AR9999
G97:S008	G97 Low Batt	YT	YR	9999	YT9999	YR9999
G97:S009	G97 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G97:S010	G97 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G97:S011	G97 Low Volts	YP	YQ	9999	YP9999	YQ9999
G97:S012	G97 PS Fail	YP	YQ	9999	YP9999	YQ9999
G97:S013	G97 Batt Test	IA	IR	9999	IA9999	IR9999
G97:S014	G97 Invalid Card	DD	DR	9999	DD9999	DR9999
G97:S015	G97 Duress	HA	HR	9999	HA9999	HR9999
G97:S016	G97 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G97:S017	G97 Panic	PA	PR	9999	PA9999	PR9999
G97:S018	G97 Pin Attempts	JA	UX	9999	JA9999	UX9999
G97:S019	G97 Temperature	UA	UR	9999	UA9999	UR9999
G97:S020	G97 Light Level	UA	UR	9999	UA9999	UR9999
G97:S021	G97 LAN Comms	EM	EN	9999	EM9999	EN9999
G97:S022	G97 Spare1	UA	UR	9999	UA9999	UR9999
G97:S023	G97 Spare2	UA	UR	9999	UA9999	UR9999
G98:Z001	G98:Z001	UA	UR	9999	UA9999	UR9999
G98:Z002	G98:Z002	UA	UR	9999	UA9999	UR9999
G98:S001	G98 Door Reed	UA	UR	9999	UA9999	UR9999
G98:S002	G98 Door Tongue	UA	UR	9999	UA9999	UR9999
G98:S003	G98 Door Tamper	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

G98:S004	G98 Door Forced	DF	DR	9999	DF9999	DR9999
G98:S005	G98 Door DOTL	DL	DH	9999	DL9999	DH9999
G98:S006	G98 Cab Tamper	TA	TR	9999	TA9999	TR9999
G98:S007	G98 AC fail	AT	AR	9999	AT9999	AR9999
G98:S008	G98 Low Batt	YT	YR	9999	YT9999	YR9999
G98:S009	G98 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G98:S010	G98 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G98:S011	G98 Low Volts	YP	YQ	9999	YP9999	YQ9999
G98:S012	G98 PS Fail	YP	YQ	9999	YP9999	YQ9999
G98:S013	G98 Batt Test	IA	IR	9999	IA9999	IR9999
G98:S014	G98 Invalid Card	DD	DR	9999	DD9999	DR9999
G98:S015	G98 Duress	HA	HR	9999	HA9999	HR9999
G98:S016	G98 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G98:S017	G98 Panic	PA	PR	9999	PA9999	PR9999
G98:S018	G98 Pin Attempts	JA	UX	9999	JA9999	UX9999
G98:S019	G98 Temperature	UA	UR	9999	UA9999	UR9999
G98:S020	G98 Light Level	UA	UR	9999	UA9999	UR9999
G98:S021	G98 LAN Comms	EM	EN	9999	EM9999	EN9999
G98:S022	G98 Spare1	UA	UR	9999	UA9999	UR9999
G98:S023	G98 Spare2	UA	UR	9999	UA9999	UR9999
G99:Z001	G99:Z001	UA	UR	9999	UA9999	UR9999
G99:Z002	G99:Z002	UA	UR	9999	UA9999	UR9999
G99:S001	G99 Door Reed	UA	UR	9999	UA9999	UR9999
G99:S002	G99 Door Tongue	UA	UR	9999	UA9999	UR9999
G99:S003	G99 Door Tamper	IA	IR	9999	IA9999	IR9999
G99:S004	G99 Door Forced	DF	DR	9999	DF9999	DR9999
G99:S005	G99 Door DOTL	DL	DH	9999	DL9999	DH9999
G99:S006	G99 Cab Tamper	TA	TR	9999	TA9999	TR9999
G99:S007	G99 AC fail	AT	AR	9999	AT9999	AR9999
G99:S008	G99 Low Batt	YT	YR	9999	YT9999	YR9999
G99:S009	G99 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
G99:S010	G99 DET Fuse	YP	YQ	9999	YP9999	YQ9999
G99:S011	G99 Low Volts	YP	YQ	9999	YP9999	YQ9999
G99:S012	G99 PS Fail	YP	YQ	9999	YP9999	YQ9999
G99:S013	G99 Batt Test	IA	IR	9999	IA9999	IR9999
G99:S014	G99 Invalid Card	DD	DR	9999	DD9999	DR9999
G99:S015	G99 Duress	HA	HR	9999	HA9999	HR9999
G99:S016	G99 Rdr Tamper	IA	IR	9999	IA9999	IR9999
G99:S017	G99 Panic	PA	PR	9999	PA9999	PR9999
G99:S018	G99 Pin Attempts	JA	UX	9999	JA9999	UX9999
G99:S019	G99 Temperature	UA	UR	9999	UA9999	UR9999
G99:S020	G99 Light Level	UA	UR	9999	UA9999	UR9999
G99:S021	G99 LAN Comms	EM	EN	9999	EM9999	EN9999
G99:S022	G99 Spare1	UA	UR	9999	UA9999	UR9999
G99:S023	G99 Spare2	UA	UR	9999	UA9999	UR9999
E01:Z001	E01:Z001	UA	UR	3081	UA3081	UR3081
E01:Z002	E01:Z002	UA	UR	3082	UA3082	UR3082
E01:Z003	E01:Z003	UA	UR	3083	UA3083	UR3083
E01:Z004	E01:Z004	UA	UR	3084	UA3084	UR3084
E01:Z005	E01:Z005	UA	UR	3085	UA3085	UR3085
E01:Z006	E01:Z006	UA	UR	3086	UA3086	UR3086
E01:Z007	E01:Z007	UA	UR	3087	UA3087	UR3087
E01:Z008	E01:Z008	UA	UR	3088	UA3088	UR3088
E01:Z009	E01:Z009	UA	UR	3089	UA3089	UR3089
E01:Z010	E01:Z010	UA	UR	3090	UA3090	UR3090
E01:Z011	E01:Z011	UA	UR	3091	UA3091	UR3091
E01:Z012	E01:Z012	UA	UR	3092	UA3092	UR3092
E01:Z013	E01:Z013	UA	UR	3093	UA3093	UR3093
E01:Z014	E01:Z014	UA	UR	3094	UA3094	UR3094
E01:Z015	E01:Z015	UA	UR	3095	UA3095	UR3095
E01:Z016	E01:Z016	UA	UR	3096	UA3096	UR3096
E01:Z017	E01:Z017	UA	UR	3097	UA3097	UR3097
E01:Z018	E01:Z018	UA	UR	3098	UA3098	UR3098
E01:Z019	E01:Z019	UA	UR	3099	UA3099	UR3099
E01:Z020	E01:Z020	UA	UR	3100	UA3100	UR3100
E01:Z021	E01:Z021	UA	UR	3101	UA3101	UR3101
E01:Z022	E01:Z022	UA	UR	3102	UA3102	UR3102
E01:Z023	E01:Z023	UA	UR	3103	UA3103	UR3103
E01:Z024	E01:Z024	UA	UR	3104	UA3104	UR3104
E01:Z025	E01:Z025	UA	UR	3105	UA3105	UR3105

Integriti SIA DECIMAL Map. V21

E01:Z026	E01:Z026	UA	UR	3106	UA3106	UR3106
E01:Z027	E01:Z027	UA	UR	3107	UA3107	UR3107
E01:Z028	E01:Z028	UA	UR	3108	UA3108	UR3108
E01:Z029	E01:Z029	UA	UR	3109	UA3109	UR3109
E01:Z030	E01:Z030	UA	UR	3110	UA3110	UR3110
E01:Z031	E01:Z031	UA	UR	3111	UA3111	UR3111
E01:Z032	E01:Z032	UA	UR	3112	UA3112	UR3112
E01:S001	E01 Cab Tamper	TA	TR	3113	TA3113	TR3113
E01:S002	E01 Int Sir Tamp	YA	YH	3114	YA3114	YH3114
E01:S003	E01 Ext Sir Tamp	YA	YH	3115	YA3115	YH3115
E01:S004	E01 AC fail	AT	AR	3116	AT3116	AR3116
E01:S005	E01 Low Batt	YT	YR	3117	YT3117	YR3117
E01:S006	E01 LAN Fuse	YP	YQ	3118	YP3118	YQ3118
E01:S007	E01 DET Fuse	YP	YQ	3119	YP3119	YQ3119
E01:S008	E01 Low Volts	YP	YQ	3120	YP3120	YQ3120
E01:S009	E01 PS Fail	YP	YQ	3121	YP3121	YQ3121
E01:S010	E01 Batt Test	IA	IR	3122	IA3122	IR3122
E01:S011	E01 Spare1	UA	UR	3123	UA3123	UR3123
E01:S012	E01 Spare2	UA	UR	3124	UA3124	UR3124
E01:S013	E01 Spare3	UA	UR	3125	UA3125	UR3125
E01:S014	E01 Spare4	UA	UR	3126	UA3126	UR3126
E01:S015	E01 Spare5	UA	UR	3127	UA3127	UR3127
E01:S016	E01 Spare6	UA	UR	3128	UA3128	UR3128
E01:S017	E01 Spare7	UA	UR	3129	UA3129	UR3129
E01:S018	E01 Unibus	EM	EN	3130	EM3130	EN3130
E01:S019	E01 LAN Comms	EM	EN	3131	EM3131	EN3131
E01:S020	E01 Spare8	UA	UR	3132	UA3132	UR3132
E01:S021	E01 Spare9	UA	UR	3133	UA3133	UR3133
E02:Z001	E02:Z001	UA	UR	3134	UA3134	UR3134
E02:Z002	E02:Z002	UA	UR	3135	UA3135	UR3135
E02:Z003	E02:Z003	UA	UR	3136	UA3136	UR3136
E02:Z004	E02:Z004	UA	UR	3137	UA3137	UR3137
E02:Z005	E02:Z005	UA	UR	3138	UA3138	UR3138
E02:Z006	E02:Z006	UA	UR	3139	UA3139	UR3139
E02:Z007	E02:Z007	UA	UR	3140	UA3140	UR3140
E02:Z008	E02:Z008	UA	UR	3141	UA3141	UR3141
E02:Z009	E02:Z009	UA	UR	3142	UA3142	UR3142
E02:Z010	E02:Z010	UA	UR	3143	UA3143	UR3143
E02:Z011	E02:Z011	UA	UR	3144	UA3144	UR3144
E02:Z012	E02:Z012	UA	UR	3145	UA3145	UR3145
E02:Z013	E02:Z013	UA	UR	3146	UA3146	UR3146
E02:Z014	E02:Z014	UA	UR	3147	UA3147	UR3147
E02:Z015	E02:Z015	UA	UR	3148	UA3148	UR3148
E02:Z016	E02:Z016	UA	UR	3149	UA3149	UR3149
E02:Z017	E02:Z017	UA	UR	3150	UA3150	UR3150
E02:Z018	E02:Z018	UA	UR	3151	UA3151	UR3151
E02:Z019	E02:Z019	UA	UR	3152	UA3152	UR3152
E02:Z020	E02:Z020	UA	UR	3153	UA3153	UR3153
E02:Z021	E02:Z021	UA	UR	3154	UA3154	UR3154
E02:Z022	E02:Z022	UA	UR	3155	UA3155	UR3155
E02:Z023	E02:Z023	UA	UR	3156	UA3156	UR3156
E02:Z024	E02:Z024	UA	UR	3157	UA3157	UR3157
E02:Z025	E02:Z025	UA	UR	3158	UA3158	UR3158
E02:Z026	E02:Z026	UA	UR	3159	UA3159	UR3159
E02:Z027	E02:Z027	UA	UR	3160	UA3160	UR3160
E02:Z028	E02:Z028	UA	UR	3161	UA3161	UR3161
E02:Z029	E02:Z029	UA	UR	3162	UA3162	UR3162
E02:Z030	E02:Z030	UA	UR	3163	UA3163	UR3163
E02:Z031	E02:Z031	UA	UR	3164	UA3164	UR3164
E02:Z032	E02:Z032	UA	UR	3165	UA3165	UR3165
E02:S001	E02 Cab Tamper	TA	TR	3166	TA3166	TR3166
E02:S002	E02 Int Sir Tamp	YA	YH	3167	YA3167	YH3167
E02:S003	E02 Ext Sir Tamp	YA	YH	3168	YA3168	YH3168
E02:S004	E02 AC fail	AT	AR	3169	AT3169	AR3169
E02:S005	E02 Low Batt	YT	YR	3170	YT3170	YR3170
E02:S006	E02 LAN Fuse	YP	YQ	3171	YP3171	YQ3171
E02:S007	E02 DET Fuse	YP	YQ	3172	YP3172	YQ3172
E02:S008	E02 Low Volts	YP	YQ	3173	YP3173	YQ3173
E02:S009	E02 PS Fail	YP	YQ	3174	YP3174	YQ3174
E02:S010	E02 Batt Test	IA	IR	3175	IA3175	IR3175

Integriti SIA DECIMAL Map. V21

E02:S011	E02 Spare1	UA	UR	3176	UA3176	UR3176
E02:S012	E02 Spare2	UA	UR	3177	UA3177	UR3177
E02:S013	E02 Spare3	UA	UR	3178	UA3178	UR3178
E02:S014	E02 Spare4	UA	UR	3179	UA3179	UR3179
E02:S015	E02 Spare5	UA	UR	3180	UA3180	UR3180
E02:S016	E02 Spare6	UA	UR	3181	UA3181	UR3181
E02:S017	E02 Spare7	UA	UR	3182	UA3182	UR3182
E02:S018	E02 Unibus	EM	EN	3183	EM3183	EN3183
E02:S019	E02 LAN Comms	EM	EN	3184	EM3184	EN3184
E02:S020	E02 Spare8	UA	UR	3185	UA3185	UR3185
E02:S021	E02 Spare9	UA	UR	3186	UA3186	UR3186
E03:Z001	E03:Z001	UA	UR	3187	UA3187	UR3187
E03:Z002	E03:Z002	UA	UR	3188	UA3188	UR3188
E03:Z003	E03:Z003	UA	UR	3189	UA3189	UR3189
E03:Z004	E03:Z004	UA	UR	3190	UA3190	UR3190
E03:Z005	E03:Z005	UA	UR	3191	UA3191	UR3191
E03:Z006	E03:Z006	UA	UR	3192	UA3192	UR3192
E03:Z007	E03:Z007	UA	UR	3193	UA3193	UR3193
E03:Z008	E03:Z008	UA	UR	3194	UA3194	UR3194
E03:Z009	E03:Z009	UA	UR	3195	UA3195	UR3195
E03:Z010	E03:Z010	UA	UR	3196	UA3196	UR3196
E03:Z011	E03:Z011	UA	UR	3197	UA3197	UR3197
E03:Z012	E03:Z012	UA	UR	3198	UA3198	UR3198
E03:Z013	E03:Z013	UA	UR	3199	UA3199	UR3199
E03:Z014	E03:Z014	UA	UR	3200	UA3200	UR3200
E03:Z015	E03:Z015	UA	UR	3201	UA3201	UR3201
E03:Z016	E03:Z016	UA	UR	3202	UA3202	UR3202
E03:Z017	E03:Z017	UA	UR	3203	UA3203	UR3203
E03:Z018	E03:Z018	UA	UR	3204	UA3204	UR3204
E03:Z019	E03:Z019	UA	UR	3205	UA3205	UR3205
E03:Z020	E03:Z020	UA	UR	3206	UA3206	UR3206
E03:Z021	E03:Z021	UA	UR	3207	UA3207	UR3207
E03:Z022	E03:Z022	UA	UR	3208	UA3208	UR3208
E03:Z023	E03:Z023	UA	UR	3209	UA3209	UR3209
E03:Z024	E03:Z024	UA	UR	3210	UA3210	UR3210
E03:Z025	E03:Z025	UA	UR	3211	UA3211	UR3211
E03:Z026	E03:Z026	UA	UR	3212	UA3212	UR3212
E03:Z027	E03:Z027	UA	UR	3213	UA3213	UR3213
E03:Z028	E03:Z028	UA	UR	3214	UA3214	UR3214
E03:Z029	E03:Z029	UA	UR	3215	UA3215	UR3215
E03:Z030	E03:Z030	UA	UR	3216	UA3216	UR3216
E03:Z031	E03:Z031	UA	UR	3217	UA3217	UR3217
E03:Z032	E03:Z032	UA	UR	3218	UA3218	UR3218
E03:S001	E03 Cab Tamper	TA	TR	3219	TA3219	TR3219
E03:S002	E03 Int Sir Tamp	YA	YH	3220	YA3220	YH3220
E03:S003	E03 Ext Sir Tamp	YA	YH	3221	YA3221	YH3221
E03:S004	E03 AC fail	AT	AR	3222	AT3222	AR3222
E03:S005	E03 Low Batt	YT	YR	3223	YT3223	YR3223
E03:S006	E03 LAN Fuse	YP	YQ	3224	YP3224	YQ3224
E03:S007	E03 DET Fuse	YP	YQ	3225	YP3225	YQ3225
E03:S008	E03 Low Volts	YP	YQ	3226	YP3226	YQ3226
E03:S009	E03 PS Fail	YP	YQ	3227	YP3227	YQ3227
E03:S010	E03 Batt Test	IA	IR	3228	IA3228	IR3228
E03:S011	E03 Spare1	UA	UR	3229	UA3229	UR3229
E03:S012	E03 Spare2	UA	UR	3230	UA3230	UR3230
E03:S013	E03 Spare3	UA	UR	3231	UA3231	UR3231
E03:S014	E03 Spare4	UA	UR	3232	UA3232	UR3232
E03:S015	E03 Spare5	UA	UR	3233	UA3233	UR3233
E03:S016	E03 Spare6	UA	UR	3234	UA3234	UR3234
E03:S017	E03 Spare7	UA	UR	3235	UA3235	UR3235
E03:S018	E03 Unibus	EM	EN	3236	EM3236	EN3236
E03:S019	E03 LAN Comms	EM	EN	3237	EM3237	EN3237
E03:S020	E03 Spare8	UA	UR	3238	UA3238	UR3238
E03:S021	E03 Spare9	UA	UR	3239	UA3239	UR3239
E04:Z001	E04:Z001	UA	UR	3240	UA3240	UR3240
E04:Z002	E04:Z002	UA	UR	3241	UA3241	UR3241
E04:Z003	E04:Z003	UA	UR	3242	UA3242	UR3242
E04:Z004	E04:Z004	UA	UR	3243	UA3243	UR3243
E04:Z005	E04:Z005	UA	UR	3244	UA3244	UR3244
E04:Z006	E04:Z006	UA	UR	3245	UA3245	UR3245

Integriti SIA DECIMAL Map. V21

E04:Z007	E04:Z007	UA	UR	3246	UA3246	UR3246
E04:Z008	E04:Z008	UA	UR	3247	UA3247	UR3247
E04:Z009	E04:Z009	UA	UR	3248	UA3248	UR3248
E04:Z010	E04:Z010	UA	UR	3249	UA3249	UR3249
E04:Z011	E04:Z011	UA	UR	3250	UA3250	UR3250
E04:Z012	E04:Z012	UA	UR	3251	UA3251	UR3251
E04:Z013	E04:Z013	UA	UR	3252	UA3252	UR3252
E04:Z014	E04:Z014	UA	UR	3253	UA3253	UR3253
E04:Z015	E04:Z015	UA	UR	3254	UA3254	UR3254
E04:Z016	E04:Z016	UA	UR	3255	UA3255	UR3255
E04:Z017	E04:Z017	UA	UR	3256	UA3256	UR3256
E04:Z018	E04:Z018	UA	UR	3257	UA3257	UR3257
E04:Z019	E04:Z019	UA	UR	3258	UA3258	UR3258
E04:Z020	E04:Z020	UA	UR	3259	UA3259	UR3259
E04:Z021	E04:Z021	UA	UR	3260	UA3260	UR3260
E04:Z022	E04:Z022	UA	UR	3261	UA3261	UR3261
E04:Z023	E04:Z023	UA	UR	3262	UA3262	UR3262
E04:Z024	E04:Z024	UA	UR	3263	UA3263	UR3263
E04:Z025	E04:Z025	UA	UR	3264	UA3264	UR3264
E04:Z026	E04:Z026	UA	UR	3265	UA3265	UR3265
E04:Z027	E04:Z027	UA	UR	3266	UA3266	UR3266
E04:Z028	E04:Z028	UA	UR	3267	UA3267	UR3267
E04:Z029	E04:Z029	UA	UR	3268	UA3268	UR3268
E04:Z030	E04:Z030	UA	UR	3269	UA3269	UR3269
E04:Z031	E04:Z031	UA	UR	3270	UA3270	UR3270
E04:Z032	E04:Z032	UA	UR	3271	UA3271	UR3271
E04:S001	E04 Cab Tamper	TA	TR	3272	TA3272	TR3272
E04:S002	E04 Int Sir Tamp	YA	YH	3273	YA3273	YH3273
E04:S003	E04 Ext Sir Tamp	YA	YH	3274	YA3274	YH3274
E04:S004	E04 AC fail	AT	AR	3275	AT3275	AR3275
E04:S005	E04 Low Batt	YT	YR	3276	YT3276	YR3276
E04:S006	E04 LAN Fuse	YP	YQ	3277	YP3277	YQ3277
E04:S007	E04 DET Fuse	YP	YQ	3278	YP3278	YQ3278
E04:S008	E04 Low Volts	YP	YQ	3279	YP3279	YQ3279
E04:S009	E04 PS Fail	YP	YQ	3280	YP3280	YQ3280
E04:S010	E04 Batt Test	IA	IR	3281	IA3281	IR3281
E04:S011	E04 Spare1	UA	UR	3282	UA3282	UR3282
E04:S012	E04 Spare2	UA	UR	3283	UA3283	UR3283
E04:S013	E04 Spare3	UA	UR	3284	UA3284	UR3284
E04:S014	E04 Spare4	UA	UR	3285	UA3285	UR3285
E04:S015	E04 Spare5	UA	UR	3286	UA3286	UR3286
E04:S016	E04 Spare6	UA	UR	3287	UA3287	UR3287
E04:S017	E04 Spare7	UA	UR	3288	UA3288	UR3288
E04:S018	E04 Unibus	EM	EN	3289	EM3289	EN3289
E04:S019	E04 LAN Comms	EM	EN	3290	EM3290	EN3290
E04:S020	E04 Spare8	UA	UR	3291	UA3291	UR3291
E04:S021	E04 Spare9	UA	UR	3292	UA3292	UR3292
E05:Z001	E05:Z001	UA	UR	3293	UA3293	UR3293
E05:Z002	E05:Z002	UA	UR	3294	UA3294	UR3294
E05:Z003	E05:Z003	UA	UR	3295	UA3295	UR3295
E05:Z004	E05:Z004	UA	UR	3296	UA3296	UR3296
E05:Z005	E05:Z005	UA	UR	3297	UA3297	UR3297
E05:Z006	E05:Z006	UA	UR	3298	UA3298	UR3298
E05:Z007	E05:Z007	UA	UR	3299	UA3299	UR3299
E05:Z008	E05:Z008	UA	UR	3300	UA3300	UR3300
E05:Z009	E05:Z009	UA	UR	3301	UA3301	UR3301
E05:Z010	E05:Z010	UA	UR	3302	UA3302	UR3302
E05:Z011	E05:Z011	UA	UR	3303	UA3303	UR3303
E05:Z012	E05:Z012	UA	UR	3304	UA3304	UR3304
E05:Z013	E05:Z013	UA	UR	3305	UA3305	UR3305
E05:Z014	E05:Z014	UA	UR	3306	UA3306	UR3306
E05:Z015	E05:Z015	UA	UR	3307	UA3307	UR3307
E05:Z016	E05:Z016	UA	UR	3308	UA3308	UR3308
E05:Z017	E05:Z017	UA	UR	3309	UA3309	UR3309
E05:Z018	E05:Z018	UA	UR	3310	UA3310	UR3310
E05:Z019	E05:Z019	UA	UR	3311	UA3311	UR3311
E05:Z020	E05:Z020	UA	UR	3312	UA3312	UR3312
E05:Z021	E05:Z021	UA	UR	3313	UA3313	UR3313
E05:Z022	E05:Z022	UA	UR	3314	UA3314	UR3314
E05:Z023	E05:Z023	UA	UR	3315	UA3315	UR3315

Integriti SIA DECIMAL Map. V21

E05:Z024	E05:Z024	UA	UR	3316	UA3316	UR3316
E05:Z025	E05:Z025	UA	UR	3317	UA3317	UR3317
E05:Z026	E05:Z026	UA	UR	3318	UA3318	UR3318
E05:Z027	E05:Z027	UA	UR	3319	UA3319	UR3319
E05:Z028	E05:Z028	UA	UR	3320	UA3320	UR3320
E05:Z029	E05:Z029	UA	UR	3321	UA3321	UR3321
E05:Z030	E05:Z030	UA	UR	3322	UA3322	UR3322
E05:Z031	E05:Z031	UA	UR	3323	UA3323	UR3323
E05:Z032	E05:Z032	UA	UR	3324	UA3324	UR3324
E05:S001	E05 Cab Tamper	TA	TR	3325	TA3325	TR3325
E05:S002	E05 Int Sir Tamp	YA	YH	3326	YA3326	YH3326
E05:S003	E05 Ext Sir Tamp	YA	YH	3327	YA3327	YH3327
E05:S004	E05 AC fail	AT	AR	3328	AT3328	AR3328
E05:S005	E05 Low Batt	YT	YR	3329	YT3329	YR3329
E05:S006	E05 LAN Fuse	YP	YQ	3330	YP3330	YQ3330
E05:S007	E05 DET Fuse	YP	YQ	3331	YP3331	YQ3331
E05:S008	E05 Low Volts	YP	YQ	3332	YP3332	YQ3332
E05:S009	E05 PS Fail	YP	YQ	3333	YP3333	YQ3333
E05:S010	E05 Batt Test	IA	IR	3334	IA3334	IR3334
E05:S011	E05 Spare1	UA	UR	3335	UA3335	UR3335
E05:S012	E05 Spare2	UA	UR	3336	UA3336	UR3336
E05:S013	E05 Spare3	UA	UR	3337	UA3337	UR3337
E05:S014	E05 Spare4	UA	UR	3338	UA3338	UR3338
E05:S015	E05 Spare5	UA	UR	3339	UA3339	UR3339
E05:S016	E05 Spare6	UA	UR	3340	UA3340	UR3340
E05:S017	E05 Spare7	UA	UR	3341	UA3341	UR3341
E05:S018	E05 Unibus	EM	EN	3342	EM3342	EN3342
E05:S019	E05 LAN Comms	EM	EN	3343	EM3343	EN3343
E05:S020	E05 Spare8	UA	UR	3344	UA3344	UR3344
E05:S021	E05 Spare9	UA	UR	3345	UA3345	UR3345
E06:Z001	E06:Z001	UA	UR	3346	UA3346	UR3346
E06:Z002	E06:Z002	UA	UR	3347	UA3347	UR3347
E06:Z003	E06:Z003	UA	UR	3348	UA3348	UR3348
E06:Z004	E06:Z004	UA	UR	3349	UA3349	UR3349
E06:Z005	E06:Z005	UA	UR	3350	UA3350	UR3350
E06:Z006	E06:Z006	UA	UR	3351	UA3351	UR3351
E06:Z007	E06:Z007	UA	UR	3352	UA3352	UR3352
E06:Z008	E06:Z008	UA	UR	3353	UA3353	UR3353
E06:Z009	E06:Z009	UA	UR	3354	UA3354	UR3354
E06:Z010	E06:Z010	UA	UR	3355	UA3355	UR3355
E06:Z011	E06:Z011	UA	UR	3356	UA3356	UR3356
E06:Z012	E06:Z012	UA	UR	3357	UA3357	UR3357
E06:Z013	E06:Z013	UA	UR	3358	UA3358	UR3358
E06:Z014	E06:Z014	UA	UR	3359	UA3359	UR3359
E06:Z015	E06:Z015	UA	UR	3360	UA3360	UR3360
E06:Z016	E06:Z016	UA	UR	3361	UA3361	UR3361
E06:Z017	E06:Z017	UA	UR	3362	UA3362	UR3362
E06:Z018	E06:Z018	UA	UR	3363	UA3363	UR3363
E06:Z019	E06:Z019	UA	UR	3364	UA3364	UR3364
E06:Z020	E06:Z020	UA	UR	3365	UA3365	UR3365
E06:Z021	E06:Z021	UA	UR	3366	UA3366	UR3366
E06:Z022	E06:Z022	UA	UR	3367	UA3367	UR3367
E06:Z023	E06:Z023	UA	UR	3368	UA3368	UR3368
E06:Z024	E06:Z024	UA	UR	3369	UA3369	UR3369
E06:Z025	E06:Z025	UA	UR	3370	UA3370	UR3370
E06:Z026	E06:Z026	UA	UR	3371	UA3371	UR3371
E06:Z027	E06:Z027	UA	UR	3372	UA3372	UR3372
E06:Z028	E06:Z028	UA	UR	3373	UA3373	UR3373
E06:Z029	E06:Z029	UA	UR	3374	UA3374	UR3374
E06:Z030	E06:Z030	UA	UR	3375	UA3375	UR3375
E06:Z031	E06:Z031	UA	UR	3376	UA3376	UR3376
E06:Z032	E06:Z032	UA	UR	3377	UA3377	UR3377
E06:S001	E06 Cab Tamper	TA	TR	3378	TA3378	TR3378
E06:S002	E06 Int Sir Tamp	YA	YH	3379	YA3379	YH3379
E06:S003	E06 Ext Sir Tamp	YA	YH	3380	YA3380	YH3380
E06:S004	E06 AC fail	AT	AR	3381	AT3381	AR3381
E06:S005	E06 Low Batt	YT	YR	3382	YT3382	YR3382
E06:S006	E06 LAN Fuse	YP	YQ	3383	YP3383	YQ3383
E06:S007	E06 DET Fuse	YP	YQ	3384	YP3384	YQ3384
E06:S008	E06 Low Volts	YP	YQ	3385	YP3385	YQ3385

Integriti SIA DECIMAL Map. V21

E06:S009	E06 PS Fail	YP	YQ	3386	YP3386	YQ3386
E06:S010	E06 Batt Test	IA	IR	3387	IA3387	IR3387
E06:S011	E06 Spare1	UA	UR	3388	UA3388	UR3388
E06:S012	E06 Spare2	UA	UR	3389	UA3389	UR3389
E06:S013	E06 Spare3	UA	UR	3390	UA3390	UR3390
E06:S014	E06 Spare4	UA	UR	3391	UA3391	UR3391
E06:S015	E06 Spare5	UA	UR	3392	UA3392	UR3392
E06:S016	E06 Spare6	UA	UR	3393	UA3393	UR3393
E06:S017	E06 Spare7	UA	UR	3394	UA3394	UR3394
E06:S018	E06 Unibus	EM	EN	3395	EM3395	EN3395
E06:S019	E06 LAN Comms	EM	EN	3396	EM3396	EN3396
E06:S020	E06 Spare8	UA	UR	3397	UA3397	UR3397
E06:S021	E06 Spare9	UA	UR	3398	UA3398	UR3398
E07:Z001	E07:Z001	UA	UR	3399	UA3399	UR3399
E07:Z002	E07:Z002	UA	UR	3400	UA3400	UR3400
E07:Z003	E07:Z003	UA	UR	3401	UA3401	UR3401
E07:Z004	E07:Z004	UA	UR	3402	UA3402	UR3402
E07:Z005	E07:Z005	UA	UR	3403	UA3403	UR3403
E07:Z006	E07:Z006	UA	UR	3404	UA3404	UR3404
E07:Z007	E07:Z007	UA	UR	3405	UA3405	UR3405
E07:Z008	E07:Z008	UA	UR	3406	UA3406	UR3406
E07:Z009	E07:Z009	UA	UR	3407	UA3407	UR3407
E07:Z010	E07:Z010	UA	UR	3408	UA3408	UR3408
E07:Z011	E07:Z011	UA	UR	3409	UA3409	UR3409
E07:Z012	E07:Z012	UA	UR	3410	UA3410	UR3410
E07:Z013	E07:Z013	UA	UR	3411	UA3411	UR3411
E07:Z014	E07:Z014	UA	UR	3412	UA3412	UR3412
E07:Z015	E07:Z015	UA	UR	3413	UA3413	UR3413
E07:Z016	E07:Z016	UA	UR	3414	UA3414	UR3414
E07:Z017	E07:Z017	UA	UR	3415	UA3415	UR3415
E07:Z018	E07:Z018	UA	UR	3416	UA3416	UR3416
E07:Z019	E07:Z019	UA	UR	3417	UA3417	UR3417
E07:Z020	E07:Z020	UA	UR	3418	UA3418	UR3418
E07:Z021	E07:Z021	UA	UR	3419	UA3419	UR3419
E07:Z022	E07:Z022	UA	UR	3420	UA3420	UR3420
E07:Z023	E07:Z023	UA	UR	3421	UA3421	UR3421
E07:Z024	E07:Z024	UA	UR	3422	UA3422	UR3422
E07:Z025	E07:Z025	UA	UR	3423	UA3423	UR3423
E07:Z026	E07:Z026	UA	UR	3424	UA3424	UR3424
E07:Z027	E07:Z027	UA	UR	3425	UA3425	UR3425
E07:Z028	E07:Z028	UA	UR	3426	UA3426	UR3426
E07:Z029	E07:Z029	UA	UR	3427	UA3427	UR3427
E07:Z030	E07:Z030	UA	UR	3428	UA3428	UR3428
E07:Z031	E07:Z031	UA	UR	3429	UA3429	UR3429
E07:Z032	E07:Z032	UA	UR	3430	UA3430	UR3430
E07:S001	E07 Cab Tamper	TA	TR	3431	TA3431	TR3431
E07:S002	E07 Int Sir Tamp	YA	YH	3432	YA3432	YH3432
E07:S003	E07 Ext Sir Tamp	YA	YH	3433	YA3433	YH3433
E07:S004	E07 AC fail	AT	AR	3434	AT3434	AR3434
E07:S005	E07 Low Batt	YT	YR	3435	YT3435	YR3435
E07:S006	E07 LAN Fuse	YP	YQ	3436	YP3436	YQ3436
E07:S007	E07 DET Fuse	YP	YQ	3437	YP3437	YQ3437
E07:S008	E07 Low Volts	YP	YQ	3438	YP3438	YQ3438
E07:S009	E07 PS Fail	YP	YQ	3439	YP3439	YQ3439
E07:S010	E07 Batt Test	IA	IR	3440	IA3440	IR3440
E07:S011	E07 Spare1	UA	UR	3441	UA3441	UR3441
E07:S012	E07 Spare2	UA	UR	3442	UA3442	UR3442
E07:S013	E07 Spare3	UA	UR	3443	UA3443	UR3443
E07:S014	E07 Spare4	UA	UR	3444	UA3444	UR3444
E07:S015	E07 Spare5	UA	UR	3445	UA3445	UR3445
E07:S016	E07 Spare6	UA	UR	3446	UA3446	UR3446
E07:S017	E07 Spare7	UA	UR	3447	UA3447	UR3447
E07:S018	E07 Unibus	EM	EN	3448	EM3448	EN3448
E07:S019	E07 LAN Comms	EM	EN	3449	EM3449	EN3449
E07:S020	E07 Spare8	UA	UR	3450	UA3450	UR3450
E07:S021	E07 Spare9	UA	UR	3451	UA3451	UR3451
E08:Z001	E08:Z001	UA	UR	3452	UA3452	UR3452
E08:Z002	E08:Z002	UA	UR	3453	UA3453	UR3453
E08:Z003	E08:Z003	UA	UR	3454	UA3454	UR3454
E08:Z004	E08:Z004	UA	UR	3455	UA3455	UR3455

Integriti SIA DECIMAL Map. V21

E08:Z005	E08:Z005	UA	UR	3456	UA3456	UR3456
E08:Z006	E08:Z006	UA	UR	3457	UA3457	UR3457
E08:Z007	E08:Z007	UA	UR	3458	UA3458	UR3458
E08:Z008	E08:Z008	UA	UR	3459	UA3459	UR3459
E08:Z009	E08:Z009	UA	UR	3460	UA3460	UR3460
E08:Z010	E08:Z010	UA	UR	3461	UA3461	UR3461
E08:Z011	E08:Z011	UA	UR	3462	UA3462	UR3462
E08:Z012	E08:Z012	UA	UR	3463	UA3463	UR3463
E08:Z013	E08:Z013	UA	UR	3464	UA3464	UR3464
E08:Z014	E08:Z014	UA	UR	3465	UA3465	UR3465
E08:Z015	E08:Z015	UA	UR	3466	UA3466	UR3466
E08:Z016	E08:Z016	UA	UR	3467	UA3467	UR3467
E08:Z017	E08:Z017	UA	UR	3468	UA3468	UR3468
E08:Z018	E08:Z018	UA	UR	3469	UA3469	UR3469
E08:Z019	E08:Z019	UA	UR	3470	UA3470	UR3470
E08:Z020	E08:Z020	UA	UR	3471	UA3471	UR3471
E08:Z021	E08:Z021	UA	UR	3472	UA3472	UR3472
E08:Z022	E08:Z022	UA	UR	3473	UA3473	UR3473
E08:Z023	E08:Z023	UA	UR	3474	UA3474	UR3474
E08:Z024	E08:Z024	UA	UR	3475	UA3475	UR3475
E08:Z025	E08:Z025	UA	UR	3476	UA3476	UR3476
E08:Z026	E08:Z026	UA	UR	3477	UA3477	UR3477
E08:Z027	E08:Z027	UA	UR	3478	UA3478	UR3478
E08:Z028	E08:Z028	UA	UR	3479	UA3479	UR3479
E08:Z029	E08:Z029	UA	UR	3480	UA3480	UR3480
E08:Z030	E08:Z030	UA	UR	3481	UA3481	UR3481
E08:Z031	E08:Z031	UA	UR	3482	UA3482	UR3482
E08:Z032	E08:Z032	UA	UR	3483	UA3483	UR3483
E08:S001	E08 Cab Tamper	TA	TR	3484	TA3484	TR3484
E08:S002	E08 Int Sir Tamp	YA	YH	3485	YA3485	YH3485
E08:S003	E08 Ext Sir Tamp	YA	YH	3486	YA3486	YH3486
E08:S004	E08 AC fail	AT	AR	3487	AT3487	AR3487
E08:S005	E08 Low Batt	YT	YR	3488	YT3488	YR3488
E08:S006	E08 LAN Fuse	YP	YQ	3489	YP3489	YQ3489
E08:S007	E08 DET Fuse	YP	YQ	3490	YP3490	YQ3490
E08:S008	E08 Low Volts	YP	YQ	3491	YP3491	YQ3491
E08:S009	E08 PS Fail	YP	YQ	3492	YP3492	YQ3492
E08:S010	E08 Batt Test	IA	IR	3493	IA3493	IR3493
E08:S011	E08 Spare1	UA	UR	3494	UA3494	UR3494
E08:S012	E08 Spare2	UA	UR	3495	UA3495	UR3495
E08:S013	E08 Spare3	UA	UR	3496	UA3496	UR3496
E08:S014	E08 Spare4	UA	UR	3497	UA3497	UR3497
E08:S015	E08 Spare5	UA	UR	3498	UA3498	UR3498
E08:S016	E08 Spare6	UA	UR	3499	UA3499	UR3499
E08:S017	E08 Spare7	UA	UR	3500	UA3500	UR3500
E08:S018	E08 Unibus	EM	EN	3501	EM3501	EN3501
E08:S019	E08 LAN Comms	EM	EN	3502	EM3502	EN3502
E08:S020	E08 Spare8	UA	UR	3503	UA3503	UR3503
E08:S021	E08 Spare9	UA	UR	3504	UA3504	UR3504
E09:Z001	E09:Z001	UA	UR	3505	UA3505	UR3505
E09:Z002	E09:Z002	UA	UR	3506	UA3506	UR3506
E09:Z003	E09:Z003	UA	UR	3507	UA3507	UR3507
E09:Z004	E09:Z004	UA	UR	3508	UA3508	UR3508
E09:Z005	E09:Z005	UA	UR	3509	UA3509	UR3509
E09:Z006	E09:Z006	UA	UR	3510	UA3510	UR3510
E09:Z007	E09:Z007	UA	UR	3511	UA3511	UR3511
E09:Z008	E09:Z008	UA	UR	3512	UA3512	UR3512
E09:Z009	E09:Z009	UA	UR	3513	UA3513	UR3513
E09:Z010	E09:Z010	UA	UR	3514	UA3514	UR3514
E09:Z011	E09:Z011	UA	UR	3515	UA3515	UR3515
E09:Z012	E09:Z012	UA	UR	3516	UA3516	UR3516
E09:Z013	E09:Z013	UA	UR	3517	UA3517	UR3517
E09:Z014	E09:Z014	UA	UR	3518	UA3518	UR3518
E09:Z015	E09:Z015	UA	UR	3519	UA3519	UR3519
E09:Z016	E09:Z016	UA	UR	3520	UA3520	UR3520
E09:Z017	E09:Z017	UA	UR	3521	UA3521	UR3521
E09:Z018	E09:Z018	UA	UR	3522	UA3522	UR3522
E09:Z019	E09:Z019	UA	UR	3523	UA3523	UR3523
E09:Z020	E09:Z020	UA	UR	3524	UA3524	UR3524
E09:Z021	E09:Z021	UA	UR	3525	UA3525	UR3525

Integriti SIA DECIMAL Map. V21

E09:Z022	E09:Z022	UA	UR	3526	UA3526	UR3526
E09:Z023	E09:Z023	UA	UR	3527	UA3527	UR3527
E09:Z024	E09:Z024	UA	UR	3528	UA3528	UR3528
E09:Z025	E09:Z025	UA	UR	3529	UA3529	UR3529
E09:Z026	E09:Z026	UA	UR	3530	UA3530	UR3530
E09:Z027	E09:Z027	UA	UR	3531	UA3531	UR3531
E09:Z028	E09:Z028	UA	UR	3532	UA3532	UR3532
E09:Z029	E09:Z029	UA	UR	3533	UA3533	UR3533
E09:Z030	E09:Z030	UA	UR	3534	UA3534	UR3534
E09:Z031	E09:Z031	UA	UR	3535	UA3535	UR3535
E09:Z032	E09:Z032	UA	UR	3536	UA3536	UR3536
E09:S001	E09 Cab Tamper	TA	TR	3537	TA3537	TR3537
E09:S002	E09 Int Sir Tamp	YA	YH	3538	YA3538	YH3538
E09:S003	E09 Ext Sir Tamp	YA	YH	3539	YA3539	YH3539
E09:S004	E09 AC fail	AT	AR	3540	AT3540	AR3540
E09:S005	E09 Low Batt	YT	YR	3541	YT3541	YR3541
E09:S006	E09 LAN Fuse	YP	YQ	3542	YP3542	YQ3542
E09:S007	E09 DET Fuse	YP	YQ	3543	YP3543	YQ3543
E09:S008	E09 Low Volts	YP	YQ	3544	YP3544	YQ3544
E09:S009	E09 PS Fail	YP	YQ	3545	YP3545	YQ3545
E09:S010	E09 Batt Test	IA	IR	3546	IA3546	IR3546
E09:S011	E09 Spare1	UA	UR	3547	UA3547	UR3547
E09:S012	E09 Spare2	UA	UR	3548	UA3548	UR3548
E09:S013	E09 Spare3	UA	UR	3549	UA3549	UR3549
E09:S014	E09 Spare4	UA	UR	3550	UA3550	UR3550
E09:S015	E09 Spare5	UA	UR	3551	UA3551	UR3551
E09:S016	E09 Spare6	UA	UR	3552	UA3552	UR3552
E09:S017	E09 Spare7	UA	UR	3553	UA3553	UR3553
E09:S018	E09 Unibus	EM	EN	3554	EM3554	EN3554
E09:S019	E09 LAN Comms	EM	EN	3555	EM3555	EN3555
E09:S020	E09 Spare8	UA	UR	3556	UA3556	UR3556
E09:S021	E09 Spare9	UA	UR	3557	UA3557	UR3557
E10:Z001	E10:Z001	UA	UR	3558	UA3558	UR3558
E10:Z002	E10:Z002	UA	UR	3559	UA3559	UR3559
E10:Z003	E10:Z003	UA	UR	3560	UA3560	UR3560
E10:Z004	E10:Z004	UA	UR	3561	UA3561	UR3561
E10:Z005	E10:Z005	UA	UR	3562	UA3562	UR3562
E10:Z006	E10:Z006	UA	UR	3563	UA3563	UR3563
E10:Z007	E10:Z007	UA	UR	3564	UA3564	UR3564
E10:Z008	E10:Z008	UA	UR	3565	UA3565	UR3565
E10:Z009	E10:Z009	UA	UR	3566	UA3566	UR3566
E10:Z010	E10:Z010	UA	UR	3567	UA3567	UR3567
E10:Z011	E10:Z011	UA	UR	3568	UA3568	UR3568
E10:Z012	E10:Z012	UA	UR	3569	UA3569	UR3569
E10:Z013	E10:Z013	UA	UR	3570	UA3570	UR3570
E10:Z014	E10:Z014	UA	UR	3571	UA3571	UR3571
E10:Z015	E10:Z015	UA	UR	3572	UA3572	UR3572
E10:Z016	E10:Z016	UA	UR	3573	UA3573	UR3573
E10:Z017	E10:Z017	UA	UR	3574	UA3574	UR3574
E10:Z018	E10:Z018	UA	UR	3575	UA3575	UR3575
E10:Z019	E10:Z019	UA	UR	3576	UA3576	UR3576
E10:Z020	E10:Z020	UA	UR	3577	UA3577	UR3577
E10:Z021	E10:Z021	UA	UR	3578	UA3578	UR3578
E10:Z022	E10:Z022	UA	UR	3579	UA3579	UR3579
E10:Z023	E10:Z023	UA	UR	3580	UA3580	UR3580
E10:Z024	E10:Z024	UA	UR	3581	UA3581	UR3581
E10:Z025	E10:Z025	UA	UR	3582	UA3582	UR3582
E10:Z026	E10:Z026	UA	UR	3583	UA3583	UR3583
E10:Z027	E10:Z027	UA	UR	3584	UA3584	UR3584
E10:Z028	E10:Z028	UA	UR	3585	UA3585	UR3585
E10:Z029	E10:Z029	UA	UR	3586	UA3586	UR3586
E10:Z030	E10:Z030	UA	UR	3587	UA3587	UR3587
E10:Z031	E10:Z031	UA	UR	3588	UA3588	UR3588
E10:Z032	E10:Z032	UA	UR	3589	UA3589	UR3589
E10:S001	E10 Cab Tamper	TA	TR	3590	TA3590	TR3590
E10:S002	E10 Int Sir Tamp	YA	YH	3591	YA3591	YH3591
E10:S003	E10 Ext Sir Tamp	YA	YH	3592	YA3592	YH3592
E10:S004	E10 AC fail	AT	AR	3593	AT3593	AR3593
E10:S005	E10 Low Batt	YT	YR	3594	YT3594	YR3594
E10:S006	E10 LAN Fuse	YP	YQ	3595	YP3595	YQ3595

Integriti SIA DECIMAL Map. V21

E10:S007	E10 DET Fuse	YP	YQ	3596	YP3596	YQ3596
E10:S008	E10 Low Volts	YP	YQ	3597	YP3597	YQ3597
E10:S009	E10 PS Fail	YP	YQ	3598	YP3598	YQ3598
E10:S010	E10 Batt Test	IA	IR	3599	IA3599	IR3599
E10:S011	E10 Spare1	UA	UR	3600	UA3600	UR3600
E10:S012	E10 Spare2	UA	UR	3601	UA3601	UR3601
E10:S013	E10 Spare3	UA	UR	3602	UA3602	UR3602
E10:S014	E10 Spare4	UA	UR	3603	UA3603	UR3603
E10:S015	E10 Spare5	UA	UR	3604	UA3604	UR3604
E10:S016	E10 Spare6	UA	UR	3605	UA3605	UR3605
E10:S017	E10 Spare7	UA	UR	3606	UA3606	UR3606
E10:S018	E10 Unibus	EM	EN	3607	EM3607	EN3607
E10:S019	E10 LAN Comms	EM	EN	3608	EM3608	EN3608
E10:S020	E10 Spare8	UA	UR	3609	UA3609	UR3609
E10:S021	E10 Spare9	UA	UR	3610	UA3610	UR3610
E11:Z001	E11:Z001	UA	UR	3611	UA3611	UR3611
E11:Z002	E11:Z002	UA	UR	3612	UA3612	UR3612
E11:Z003	E11:Z003	UA	UR	3613	UA3613	UR3613
E11:Z004	E11:Z004	UA	UR	3614	UA3614	UR3614
E11:Z005	E11:Z005	UA	UR	3615	UA3615	UR3615
E11:Z006	E11:Z006	UA	UR	3616	UA3616	UR3616
E11:Z007	E11:Z007	UA	UR	3617	UA3617	UR3617
E11:Z008	E11:Z008	UA	UR	3618	UA3618	UR3618
E11:Z009	E11:Z009	UA	UR	3619	UA3619	UR3619
E11:Z010	E11:Z010	UA	UR	3620	UA3620	UR3620
E11:Z011	E11:Z011	UA	UR	3621	UA3621	UR3621
E11:Z012	E11:Z012	UA	UR	3622	UA3622	UR3622
E11:Z013	E11:Z013	UA	UR	3623	UA3623	UR3623
E11:Z014	E11:Z014	UA	UR	3624	UA3624	UR3624
E11:Z015	E11:Z015	UA	UR	3625	UA3625	UR3625
E11:Z016	E11:Z016	UA	UR	3626	UA3626	UR3626
E11:Z017	E11:Z017	UA	UR	3627	UA3627	UR3627
E11:Z018	E11:Z018	UA	UR	3628	UA3628	UR3628
E11:Z019	E11:Z019	UA	UR	3629	UA3629	UR3629
E11:Z020	E11:Z020	UA	UR	3630	UA3630	UR3630
E11:Z021	E11:Z021	UA	UR	3631	UA3631	UR3631
E11:Z022	E11:Z022	UA	UR	3632	UA3632	UR3632
E11:Z023	E11:Z023	UA	UR	3633	UA3633	UR3633
E11:Z024	E11:Z024	UA	UR	3634	UA3634	UR3634
E11:Z025	E11:Z025	UA	UR	3635	UA3635	UR3635
E11:Z026	E11:Z026	UA	UR	3636	UA3636	UR3636
E11:Z027	E11:Z027	UA	UR	3637	UA3637	UR3637
E11:Z028	E11:Z028	UA	UR	3638	UA3638	UR3638
E11:Z029	E11:Z029	UA	UR	3639	UA3639	UR3639
E11:Z030	E11:Z030	UA	UR	3640	UA3640	UR3640
E11:Z031	E11:Z031	UA	UR	3641	UA3641	UR3641
E11:Z032	E11:Z032	UA	UR	3642	UA3642	UR3642
E11:S001	E11 Cab Tamper	TA	TR	3643	TA3643	TR3643
E11:S002	E11 Int Sir Tamp	YA	YH	3644	YA3644	YH3644
E11:S003	E11 Ext Sir Tamp	YA	YH	3645	YA3645	YH3645
E11:S004	E11 AC fail	AT	AR	3646	AT3646	AR3646
E11:S005	E11 Low Batt	YT	YR	3647	YT3647	YR3647
E11:S006	E11 LAN Fuse	YP	YQ	3648	YP3648	YQ3648
E11:S007	E11 DET Fuse	YP	YQ	3649	YP3649	YQ3649
E11:S008	E11 Low Volts	YP	YQ	3650	YP3650	YQ3650
E11:S009	E11 PS Fail	YP	YQ	3651	YP3651	YQ3651
E11:S010	E11 Batt Test	IA	IR	3652	IA3652	IR3652
E11:S011	E11 Spare1	UA	UR	3653	UA3653	UR3653
E11:S012	E11 Spare2	UA	UR	3654	UA3654	UR3654
E11:S013	E11 Spare3	UA	UR	3655	UA3655	UR3655
E11:S014	E11 Spare4	UA	UR	3656	UA3656	UR3656
E11:S015	E11 Spare5	UA	UR	3657	UA3657	UR3657
E11:S016	E11 Spare6	UA	UR	3658	UA3658	UR3658
E11:S017	E11 Spare7	UA	UR	3659	UA3659	UR3659
E11:S018	E11 Unibus	EM	EN	3660	EM3660	EN3660
E11:S019	E11 LAN Comms	EM	EN	3661	EM3661	EN3661
E11:S020	E11 Spare8	UA	UR	3662	UA3662	UR3662
E11:S021	E11 Spare9	UA	UR	3663	UA3663	UR3663
E12:Z001	E12:Z001	UA	UR	3664	UA3664	UR3664
E12:Z002	E12:Z002	UA	UR	3665	UA3665	UR3665

Integriti SIA DECIMAL Map. V21

E12:Z003	E12:Z003	UA	UR	3666	UA3666	UR3666
E12:Z004	E12:Z004	UA	UR	3667	UA3667	UR3667
E12:Z005	E12:Z005	UA	UR	3668	UA3668	UR3668
E12:Z006	E12:Z006	UA	UR	3669	UA3669	UR3669
E12:Z007	E12:Z007	UA	UR	3670	UA3670	UR3670
E12:Z008	E12:Z008	UA	UR	3671	UA3671	UR3671
E12:Z009	E12:Z009	UA	UR	3672	UA3672	UR3672
E12:Z010	E12:Z010	UA	UR	3673	UA3673	UR3673
E12:Z011	E12:Z011	UA	UR	3674	UA3674	UR3674
E12:Z012	E12:Z012	UA	UR	3675	UA3675	UR3675
E12:Z013	E12:Z013	UA	UR	3676	UA3676	UR3676
E12:Z014	E12:Z014	UA	UR	3677	UA3677	UR3677
E12:Z015	E12:Z015	UA	UR	3678	UA3678	UR3678
E12:Z016	E12:Z016	UA	UR	3679	UA3679	UR3679
E12:Z017	E12:Z017	UA	UR	3680	UA3680	UR3680
E12:Z018	E12:Z018	UA	UR	3681	UA3681	UR3681
E12:Z019	E12:Z019	UA	UR	3682	UA3682	UR3682
E12:Z020	E12:Z020	UA	UR	3683	UA3683	UR3683
E12:Z021	E12:Z021	UA	UR	3684	UA3684	UR3684
E12:Z022	E12:Z022	UA	UR	3685	UA3685	UR3685
E12:Z023	E12:Z023	UA	UR	3686	UA3686	UR3686
E12:Z024	E12:Z024	UA	UR	3687	UA3687	UR3687
E12:Z025	E12:Z025	UA	UR	3688	UA3688	UR3688
E12:Z026	E12:Z026	UA	UR	3689	UA3689	UR3689
E12:Z027	E12:Z027	UA	UR	3690	UA3690	UR3690
E12:Z028	E12:Z028	UA	UR	3691	UA3691	UR3691
E12:Z029	E12:Z029	UA	UR	3692	UA3692	UR3692
E12:Z030	E12:Z030	UA	UR	3693	UA3693	UR3693
E12:Z031	E12:Z031	UA	UR	3694	UA3694	UR3694
E12:Z032	E12:Z032	UA	UR	3695	UA3695	UR3695
E12:S001	E12 Cab Tamper	TA	TR	3696	TA3696	TR3696
E12:S002	E12 Int Sir Tamp	YA	YH	3697	YA3697	YH3697
E12:S003	E12 Ext Sir Tamp	YA	YH	3698	YA3698	YH3698
E12:S004	E12 AC fail	AT	AR	3699	AT3699	AR3699
E12:S005	E12 Low Batt	YT	YR	3700	YT3700	YR3700
E12:S006	E12 LAN Fuse	YP	YQ	3701	YP3701	YQ3701
E12:S007	E12 DET Fuse	YP	YQ	3702	YP3702	YQ3702
E12:S008	E12 Low Volts	YP	YQ	3703	YP3703	YQ3703
E12:S009	E12 PS Fail	YP	YQ	3704	YP3704	YQ3704
E12:S010	E12 Batt Test	IA	IR	3705	IA3705	IR3705
E12:S011	E12 Spare1	UA	UR	3706	UA3706	UR3706
E12:S012	E12 Spare2	UA	UR	3707	UA3707	UR3707
E12:S013	E12 Spare3	UA	UR	3708	UA3708	UR3708
E12:S014	E12 Spare4	UA	UR	3709	UA3709	UR3709
E12:S015	E12 Spare5	UA	UR	3710	UA3710	UR3710
E12:S016	E12 Spare6	UA	UR	3711	UA3711	UR3711
E12:S017	E12 Spare7	UA	UR	3712	UA3712	UR3712
E12:S018	E12 Unibus	EM	EN	3713	EM3713	EN3713
E12:S019	E12 LAN Comms	EM	EN	3714	EM3714	EN3714
E12:S020	E12 Spare8	UA	UR	3715	UA3715	UR3715
E12:S021	E12 Spare9	UA	UR	3716	UA3716	UR3716
E13:Z001	E13:Z001	UA	UR	3717	UA3717	UR3717
E13:Z002	E13:Z002	UA	UR	3718	UA3718	UR3718
E13:Z003	E13:Z003	UA	UR	3719	UA3719	UR3719
E13:Z004	E13:Z004	UA	UR	3720	UA3720	UR3720
E13:Z005	E13:Z005	UA	UR	3721	UA3721	UR3721
E13:Z006	E13:Z006	UA	UR	3722	UA3722	UR3722
E13:Z007	E13:Z007	UA	UR	3723	UA3723	UR3723
E13:Z008	E13:Z008	UA	UR	3724	UA3724	UR3724
E13:Z009	E13:Z009	UA	UR	3725	UA3725	UR3725
E13:Z010	E13:Z010	UA	UR	3726	UA3726	UR3726
E13:Z011	E13:Z011	UA	UR	3727	UA3727	UR3727
E13:Z012	E13:Z012	UA	UR	3728	UA3728	UR3728
E13:Z013	E13:Z013	UA	UR	3729	UA3729	UR3729
E13:Z014	E13:Z014	UA	UR	3730	UA3730	UR3730
E13:Z015	E13:Z015	UA	UR	3731	UA3731	UR3731
E13:Z016	E13:Z016	UA	UR	3732	UA3732	UR3732
E13:Z017	E13:Z017	UA	UR	3733	UA3733	UR3733
E13:Z018	E13:Z018	UA	UR	3734	UA3734	UR3734
E13:Z019	E13:Z019	UA	UR	3735	UA3735	UR3735

Integriti SIA DECIMAL Map. V21

E13:Z020	E13:Z020	UA	UR	3736	UA3736	UR3736
E13:Z021	E13:Z021	UA	UR	3737	UA3737	UR3737
E13:Z022	E13:Z022	UA	UR	3738	UA3738	UR3738
E13:Z023	E13:Z023	UA	UR	3739	UA3739	UR3739
E13:Z024	E13:Z024	UA	UR	3740	UA3740	UR3740
E13:Z025	E13:Z025	UA	UR	3741	UA3741	UR3741
E13:Z026	E13:Z026	UA	UR	3742	UA3742	UR3742
E13:Z027	E13:Z027	UA	UR	3743	UA3743	UR3743
E13:Z028	E13:Z028	UA	UR	3744	UA3744	UR3744
E13:Z029	E13:Z029	UA	UR	3745	UA3745	UR3745
E13:Z030	E13:Z030	UA	UR	3746	UA3746	UR3746
E13:Z031	E13:Z031	UA	UR	3747	UA3747	UR3747
E13:Z032	E13:Z032	UA	UR	3748	UA3748	UR3748
E13:S001	E13 Cab Tamper	TA	TR	3749	TA3749	TR3749
E13:S002	E13 Int Sir Tamp	YA	YH	3750	YA3750	YH3750
E13:S003	E13 Ext Sir Tamp	YA	YH	3751	YA3751	YH3751
E13:S004	E13 AC fail	AT	AR	3752	AT3752	AR3752
E13:S005	E13 Low Batt	YT	YR	3753	YT3753	YR3753
E13:S006	E13 LAN Fuse	YP	YQ	3754	YP3754	YQ3754
E13:S007	E13 DET Fuse	YP	YQ	3755	YP3755	YQ3755
E13:S008	E13 Low Volts	YP	YQ	3756	YP3756	YQ3756
E13:S009	E13 PS Fail	YP	YQ	3757	YP3757	YQ3757
E13:S010	E13 Batt Test	IA	IR	3758	IA3758	IR3758
E13:S011	E13 Spare1	UA	UR	3759	UA3759	UR3759
E13:S012	E13 Spare2	UA	UR	3760	UA3760	UR3760
E13:S013	E13 Spare3	UA	UR	3761	UA3761	UR3761
E13:S014	E13 Spare4	UA	UR	3762	UA3762	UR3762
E13:S015	E13 Spare5	UA	UR	3763	UA3763	UR3763
E13:S016	E13 Spare6	UA	UR	3764	UA3764	UR3764
E13:S017	E13 Spare7	UA	UR	3765	UA3765	UR3765
E13:S018	E13 Unibus	EM	EN	3766	EM3766	EN3766
E13:S019	E13 LAN Comms	EM	EN	3767	EM3767	EN3767
E13:S020	E13 Spare8	UA	UR	3768	UA3768	UR3768
E13:S021	E13 Spare9	UA	UR	3769	UA3769	UR3769
E14:Z001	E14:Z001	UA	UR	3770	UA3770	UR3770
E14:Z002	E14:Z002	UA	UR	3771	UA3771	UR3771
E14:Z003	E14:Z003	UA	UR	3772	UA3772	UR3772
E14:Z004	E14:Z004	UA	UR	3773	UA3773	UR3773
E14:Z005	E14:Z005	UA	UR	3774	UA3774	UR3774
E14:Z006	E14:Z006	UA	UR	3775	UA3775	UR3775
E14:Z007	E14:Z007	UA	UR	3776	UA3776	UR3776
E14:Z008	E14:Z008	UA	UR	3777	UA3777	UR3777
E14:Z009	E14:Z009	UA	UR	3778	UA3778	UR3778
E14:Z010	E14:Z010	UA	UR	3779	UA3779	UR3779
E14:Z011	E14:Z011	UA	UR	3780	UA3780	UR3780
E14:Z012	E14:Z012	UA	UR	3781	UA3781	UR3781
E14:Z013	E14:Z013	UA	UR	3782	UA3782	UR3782
E14:Z014	E14:Z014	UA	UR	3783	UA3783	UR3783
E14:Z015	E14:Z015	UA	UR	3784	UA3784	UR3784
E14:Z016	E14:Z016	UA	UR	3785	UA3785	UR3785
E14:Z017	E14:Z017	UA	UR	3786	UA3786	UR3786
E14:Z018	E14:Z018	UA	UR	3787	UA3787	UR3787
E14:Z019	E14:Z019	UA	UR	3788	UA3788	UR3788
E14:Z020	E14:Z020	UA	UR	3789	UA3789	UR3789
E14:Z021	E14:Z021	UA	UR	3790	UA3790	UR3790
E14:Z022	E14:Z022	UA	UR	3791	UA3791	UR3791
E14:Z023	E14:Z023	UA	UR	3792	UA3792	UR3792
E14:Z024	E14:Z024	UA	UR	3793	UA3793	UR3793
E14:Z025	E14:Z025	UA	UR	3794	UA3794	UR3794
E14:Z026	E14:Z026	UA	UR	3795	UA3795	UR3795
E14:Z027	E14:Z027	UA	UR	3796	UA3796	UR3796
E14:Z028	E14:Z028	UA	UR	3797	UA3797	UR3797
E14:Z029	E14:Z029	UA	UR	3798	UA3798	UR3798
E14:Z030	E14:Z030	UA	UR	3799	UA3799	UR3799
E14:Z031	E14:Z031	UA	UR	3800	UA3800	UR3800
E14:Z032	E14:Z032	UA	UR	3801	UA3801	UR3801
E14:S001	E14 Cab Tamper	TA	TR	3802	TA3802	TR3802
E14:S002	E14 Int Sir Tamp	YA	YH	3803	YA3803	YH3803
E14:S003	E14 Ext Sir Tamp	YA	YH	3804	YA3804	YH3804
E14:S004	E14 AC fail	AT	AR	3805	AT3805	AR3805

Integriti SIA DECIMAL Map. V21

E14:S005	E14 Low Batt	YT	YR	3806	YT3806	YR3806
E14:S006	E14 LAN Fuse	YP	YQ	3807	YP3807	YQ3807
E14:S007	E14 DET Fuse	YP	YQ	3808	YP3808	YQ3808
E14:S008	E14 Low Volts	YP	YQ	3809	YP3809	YQ3809
E14:S009	E14 PS Fail	YP	YQ	3810	YP3810	YQ3810
E14:S010	E14 Batt Test	IA	IR	3811	IA3811	IR3811
E14:S011	E14 Spare1	UA	UR	3812	UA3812	UR3812
E14:S012	E14 Spare2	UA	UR	3813	UA3813	UR3813
E14:S013	E14 Spare3	UA	UR	3814	UA3814	UR3814
E14:S014	E14 Spare4	UA	UR	3815	UA3815	UR3815
E14:S015	E14 Spare5	UA	UR	3816	UA3816	UR3816
E14:S016	E14 Spare6	UA	UR	3817	UA3817	UR3817
E14:S017	E14 Spare7	UA	UR	3818	UA3818	UR3818
E14:S018	E14 Unibus	EM	EN	3819	EM3819	EN3819
E14:S019	E14 LAN Comms	EM	EN	3820	EM3820	EN3820
E14:S020	E14 Spare8	UA	UR	3821	UA3821	UR3821
E14:S021	E14 Spare9	UA	UR	3822	UA3822	UR3822
E15:Z001	E15:Z001	UA	UR	3823	UA3823	UR3823
E15:Z002	E15:Z002	UA	UR	3824	UA3824	UR3824
E15:Z003	E15:Z003	UA	UR	3825	UA3825	UR3825
E15:Z004	E15:Z004	UA	UR	3826	UA3826	UR3826
E15:Z005	E15:Z005	UA	UR	3827	UA3827	UR3827
E15:Z006	E15:Z006	UA	UR	3828	UA3828	UR3828
E15:Z007	E15:Z007	UA	UR	3829	UA3829	UR3829
E15:Z008	E15:Z008	UA	UR	3830	UA3830	UR3830
E15:Z009	E15:Z009	UA	UR	3831	UA3831	UR3831
E15:Z010	E15:Z010	UA	UR	3832	UA3832	UR3832
E15:Z011	E15:Z011	UA	UR	3833	UA3833	UR3833
E15:Z012	E15:Z012	UA	UR	3834	UA3834	UR3834
E15:Z013	E15:Z013	UA	UR	3835	UA3835	UR3835
E15:Z014	E15:Z014	UA	UR	3836	UA3836	UR3836
E15:Z015	E15:Z015	UA	UR	3837	UA3837	UR3837
E15:Z016	E15:Z016	UA	UR	3838	UA3838	UR3838
E15:Z017	E15:Z017	UA	UR	3839	UA3839	UR3839
E15:Z018	E15:Z018	UA	UR	3840	UA3840	UR3840
E15:Z019	E15:Z019	UA	UR	3841	UA3841	UR3841
E15:Z020	E15:Z020	UA	UR	3842	UA3842	UR3842
E15:Z021	E15:Z021	UA	UR	3843	UA3843	UR3843
E15:Z022	E15:Z022	UA	UR	3844	UA3844	UR3844
E15:Z023	E15:Z023	UA	UR	3845	UA3845	UR3845
E15:Z024	E15:Z024	UA	UR	3846	UA3846	UR3846
E15:Z025	E15:Z025	UA	UR	3847	UA3847	UR3847
E15:Z026	E15:Z026	UA	UR	3848	UA3848	UR3848
E15:Z027	E15:Z027	UA	UR	3849	UA3849	UR3849
E15:Z028	E15:Z028	UA	UR	3850	UA3850	UR3850
E15:Z029	E15:Z029	UA	UR	3851	UA3851	UR3851
E15:Z030	E15:Z030	UA	UR	3852	UA3852	UR3852
E15:Z031	E15:Z031	UA	UR	3853	UA3853	UR3853
E15:Z032	E15:Z032	UA	UR	3854	UA3854	UR3854
E15:S001	E15 Cab Tamper	TA	TR	3855	TA3855	TR3855
E15:S002	E15 Int Sir Tamp	YA	YH	3856	YA3856	YH3856
E15:S003	E15 Ext Sir Tamp	YA	YH	3857	YA3857	YH3857
E15:S004	E15 AC fail	AT	AR	3858	AT3858	AR3858
E15:S005	E15 Low Batt	YT	YR	3859	YT3859	YR3859
E15:S006	E15 LAN Fuse	YP	YQ	3860	YP3860	YQ3860
E15:S007	E15 DET Fuse	YP	YQ	3861	YP3861	YQ3861
E15:S008	E15 Low Volts	YP	YQ	3862	YP3862	YQ3862
E15:S009	E15 PS Fail	YP	YQ	3863	YP3863	YQ3863
E15:S010	E15 Batt Test	IA	IR	3864	IA3864	IR3864
E15:S011	E15 Spare1	UA	UR	3865	UA3865	UR3865
E15:S012	E15 Spare2	UA	UR	3866	UA3866	UR3866
E15:S013	E15 Spare3	UA	UR	3867	UA3867	UR3867
E15:S014	E15 Spare4	UA	UR	3868	UA3868	UR3868
E15:S015	E15 Spare5	UA	UR	3869	UA3869	UR3869
E15:S016	E15 Spare6	UA	UR	3870	UA3870	UR3870
E15:S017	E15 Spare7	UA	UR	3871	UA3871	UR3871
E15:S018	E15 Unibus	EM	EN	3872	EM3872	EN3872
E15:S019	E15 LAN Comms	EM	EN	3873	EM3873	EN3873
E15:S020	E15 Spare8	UA	UR	3874	UA3874	UR3874
E15:S021	E15 Spare9	UA	UR	3875	UA3875	UR3875

Integriti SIA DECIMAL Map. V21

E16:Z001	E16:Z001	UA	UR	3876	UA3876	UR3876
E16:Z002	E16:Z002	UA	UR	3877	UA3877	UR3877
E16:Z003	E16:Z003	UA	UR	3878	UA3878	UR3878
E16:Z004	E16:Z004	UA	UR	3879	UA3879	UR3879
E16:Z005	E16:Z005	UA	UR	3880	UA3880	UR3880
E16:Z006	E16:Z006	UA	UR	3881	UA3881	UR3881
E16:Z007	E16:Z007	UA	UR	3882	UA3882	UR3882
E16:Z008	E16:Z008	UA	UR	3883	UA3883	UR3883
E16:Z009	E16:Z009	UA	UR	3884	UA3884	UR3884
E16:Z010	E16:Z010	UA	UR	3885	UA3885	UR3885
E16:Z011	E16:Z011	UA	UR	3886	UA3886	UR3886
E16:Z012	E16:Z012	UA	UR	3887	UA3887	UR3887
E16:Z013	E16:Z013	UA	UR	3888	UA3888	UR3888
E16:Z014	E16:Z014	UA	UR	3889	UA3889	UR3889
E16:Z015	E16:Z015	UA	UR	3890	UA3890	UR3890
E16:Z016	E16:Z016	UA	UR	3891	UA3891	UR3891
E16:Z017	E16:Z017	UA	UR	3892	UA3892	UR3892
E16:Z018	E16:Z018	UA	UR	3893	UA3893	UR3893
E16:Z019	E16:Z019	UA	UR	3894	UA3894	UR3894
E16:Z020	E16:Z020	UA	UR	3895	UA3895	UR3895
E16:Z021	E16:Z021	UA	UR	3896	UA3896	UR3896
E16:Z022	E16:Z022	UA	UR	3897	UA3897	UR3897
E16:Z023	E16:Z023	UA	UR	3898	UA3898	UR3898
E16:Z024	E16:Z024	UA	UR	3899	UA3899	UR3899
E16:Z025	E16:Z025	UA	UR	3900	UA3900	UR3900
E16:Z026	E16:Z026	UA	UR	3901	UA3901	UR3901
E16:Z027	E16:Z027	UA	UR	3902	UA3902	UR3902
E16:Z028	E16:Z028	UA	UR	3903	UA3903	UR3903
E16:Z029	E16:Z029	UA	UR	3904	UA3904	UR3904
E16:Z030	E16:Z030	UA	UR	3905	UA3905	UR3905
E16:Z031	E16:Z031	UA	UR	3906	UA3906	UR3906
E16:Z032	E16:Z032	UA	UR	3907	UA3907	UR3907
E16:S001	E16 Cab Tamper	TA	TR	3908	TA3908	TR3908
E16:S002	E16 Int Sir Tamp	YA	YH	3909	YA3909	YH3909
E16:S003	E16 Ext Sir Tamp	YA	YH	3910	YA3910	YH3910
E16:S004	E16 AC fail	AT	AR	3911	AT3911	AR3911
E16:S005	E16 Low Batt	YT	YR	3912	YT3912	YR3912
E16:S006	E16 LAN Fuse	YP	YQ	3913	YP3913	YQ3913
E16:S007	E16 DET Fuse	YP	YQ	3914	YP3914	YQ3914
E16:S008	E16 Low Volts	YP	YQ	3915	YP3915	YQ3915
E16:S009	E16 PS Fail	YP	YQ	3916	YP3916	YQ3916
E16:S010	E16 Batt Test	IA	IR	3917	IA3917	IR3917
E16:S011	E16 Spare1	UA	UR	3918	UA3918	UR3918
E16:S012	E16 Spare2	UA	UR	3919	UA3919	UR3919
E16:S013	E16 Spare3	UA	UR	3920	UA3920	UR3920
E16:S014	E16 Spare4	UA	UR	3921	UA3921	UR3921
E16:S015	E16 Spare5	UA	UR	3922	UA3922	UR3922
E16:S016	E16 Spare6	UA	UR	3923	UA3923	UR3923
E16:S017	E16 Spare7	UA	UR	3924	UA3924	UR3924
E16:S018	E16 Unibus	EM	EN	3925	EM3925	EN3925
E16:S019	E16 LAN Comms	EM	EN	3926	EM3926	EN3926
E16:S020	E16 Spare8	UA	UR	3927	UA3927	UR3927
E16:S021	E16 Spare9	UA	UR	3928	UA3928	UR3928
E17:Z001	E17:Z001	UA	UR	3929	UA3929	UR3929
E17:Z002	E17:Z002	UA	UR	3930	UA3930	UR3930
E17:Z003	E17:Z003	UA	UR	3931	UA3931	UR3931
E17:Z004	E17:Z004	UA	UR	3932	UA3932	UR3932
E17:Z005	E17:Z005	UA	UR	3933	UA3933	UR3933
E17:Z006	E17:Z006	UA	UR	3934	UA3934	UR3934
E17:Z007	E17:Z007	UA	UR	3935	UA3935	UR3935
E17:Z008	E17:Z008	UA	UR	3936	UA3936	UR3936
E17:Z009	E17:Z009	UA	UR	3937	UA3937	UR3937
E17:Z010	E17:Z010	UA	UR	3938	UA3938	UR3938
E17:Z011	E17:Z011	UA	UR	3939	UA3939	UR3939
E17:Z012	E17:Z012	UA	UR	3940	UA3940	UR3940
E17:Z013	E17:Z013	UA	UR	3941	UA3941	UR3941
E17:Z014	E17:Z014	UA	UR	3942	UA3942	UR3942
E17:Z015	E17:Z015	UA	UR	3943	UA3943	UR3943
E17:Z016	E17:Z016	UA	UR	3944	UA3944	UR3944
E17:Z017	E17:Z017	UA	UR	3945	UA3945	UR3945

Integriti SIA DECIMAL Map. V21

E17:Z018	E17:Z018	UA	UR	3946	UA3946	UR3946
E17:Z019	E17:Z019	UA	UR	3947	UA3947	UR3947
E17:Z020	E17:Z020	UA	UR	3948	UA3948	UR3948
E17:Z021	E17:Z021	UA	UR	3949	UA3949	UR3949
E17:Z022	E17:Z022	UA	UR	3950	UA3950	UR3950
E17:Z023	E17:Z023	UA	UR	3951	UA3951	UR3951
E17:Z024	E17:Z024	UA	UR	3952	UA3952	UR3952
E17:Z025	E17:Z025	UA	UR	3953	UA3953	UR3953
E17:Z026	E17:Z026	UA	UR	3954	UA3954	UR3954
E17:Z027	E17:Z027	UA	UR	3955	UA3955	UR3955
E17:Z028	E17:Z028	UA	UR	3956	UA3956	UR3956
E17:Z029	E17:Z029	UA	UR	3957	UA3957	UR3957
E17:Z030	E17:Z030	UA	UR	3958	UA3958	UR3958
E17:Z031	E17:Z031	UA	UR	3959	UA3959	UR3959
E17:Z032	E17:Z032	UA	UR	3960	UA3960	UR3960
E17:S001	E17 Cab Tamper	TA	TR	3961	TA3961	TR3961
E17:S002	E17 Int Sir Tamp	YA	YH	3962	YA3962	YH3962
E17:S003	E17 Ext Sir Tamp	YA	YH	3963	YA3963	YH3963
E17:S004	E17 AC fail	AT	AR	3964	AT3964	AR3964
E17:S005	E17 Low Batt	YT	YR	3965	YT3965	YR3965
E17:S006	E17 LAN Fuse	YP	YQ	3966	YP3966	YQ3966
E17:S007	E17 DET Fuse	YP	YQ	3967	YP3967	YQ3967
E17:S008	E17 Low Volts	YP	YQ	3968	YP3968	YQ3968
E17:S009	E17 PS Fail	YP	YQ	3969	YP3969	YQ3969
E17:S010	E17 Batt Test	IA	IR	3970	IA3970	IR3970
E17:S011	E17 Spare1	UA	UR	3971	UA3971	UR3971
E17:S012	E17 Spare2	UA	UR	3972	UA3972	UR3972
E17:S013	E17 Spare3	UA	UR	3973	UA3973	UR3973
E17:S014	E17 Spare4	UA	UR	3974	UA3974	UR3974
E17:S015	E17 Spare5	UA	UR	3975	UA3975	UR3975
E17:S016	E17 Spare6	UA	UR	3976	UA3976	UR3976
E17:S017	E17 Spare7	UA	UR	3977	UA3977	UR3977
E17:S018	E17 Unibus	EM	EN	3978	EM3978	EN3978
E17:S019	E17 LAN Comms	EM	EN	3979	EM3979	EN3979
E17:S020	E17 Spare8	UA	UR	3980	UA3980	UR3980
E17:S021	E17 Spare9	UA	UR	3981	UA3981	UR3981
E18:Z001	E18:Z001	UA	UR	3982	UA3982	UR3982
E18:Z002	E18:Z002	UA	UR	3983	UA3983	UR3983
E18:Z003	E18:Z003	UA	UR	3984	UA3984	UR3984
E18:Z004	E18:Z004	UA	UR	3985	UA3985	UR3985
E18:Z005	E18:Z005	UA	UR	3986	UA3986	UR3986
E18:Z006	E18:Z006	UA	UR	3987	UA3987	UR3987
E18:Z007	E18:Z007	UA	UR	3988	UA3988	UR3988
E18:Z008	E18:Z008	UA	UR	3989	UA3989	UR3989
E18:Z009	E18:Z009	UA	UR	3990	UA3990	UR3990
E18:Z010	E18:Z010	UA	UR	3991	UA3991	UR3991
E18:Z011	E18:Z011	UA	UR	3992	UA3992	UR3992
E18:Z012	E18:Z012	UA	UR	3993	UA3993	UR3993
E18:Z013	E18:Z013	UA	UR	3994	UA3994	UR3994
E18:Z014	E18:Z014	UA	UR	3995	UA3995	UR3995
E18:Z015	E18:Z015	UA	UR	3996	UA3996	UR3996
E18:Z016	E18:Z016	UA	UR	3997	UA3997	UR3997
E18:Z017	E18:Z017	UA	UR	3998	UA3998	UR3998
E18:Z018	E18:Z018	UA	UR	3999	UA3999	UR3999
E18:Z019	E18:Z019	UA	UR	4000	UA4000	UR4000
E18:Z020	E18:Z020	UA	UR	4001	UA4001	UR4001
E18:Z021	E18:Z021	UA	UR	4002	UA4002	UR4002
E18:Z022	E18:Z022	UA	UR	4003	UA4003	UR4003
E18:Z023	E18:Z023	UA	UR	4004	UA4004	UR4004
E18:Z024	E18:Z024	UA	UR	4005	UA4005	UR4005
E18:Z025	E18:Z025	UA	UR	4006	UA4006	UR4006
E18:Z026	E18:Z026	UA	UR	4007	UA4007	UR4007
E18:Z027	E18:Z027	UA	UR	4008	UA4008	UR4008
E18:Z028	E18:Z028	UA	UR	4009	UA4009	UR4009
E18:Z029	E18:Z029	UA	UR	4010	UA4010	UR4010
E18:Z030	E18:Z030	UA	UR	4011	UA4011	UR4011
E18:Z031	E18:Z031	UA	UR	4012	UA4012	UR4012
E18:Z032	E18:Z032	UA	UR	4013	UA4013	UR4013
E18:S001	E18 Cab Tamper	TA	TR	4014	TA4014	TR4014
E18:S002	E18 Int Sir Tamp	YA	YH	4015	YA4015	YH4015

Integriti SIA DECIMAL Map. V21

E18:S003	E18 Ext Sir Tamp	YA	YH	4016	YA4016	YH4016
E18:S004	E18 AC fail	AT	AR	4017	AT4017	AR4017
E18:S005	E18 Low Batt	YT	YR	4018	YT4018	YR4018
E18:S006	E18 LAN Fuse	YP	YQ	4019	YP4019	YQ4019
E18:S007	E18 DET Fuse	YP	YQ	4020	YP4020	YQ4020
E18:S008	E18 Low Volts	YP	YQ	4021	YP4021	YQ4021
E18:S009	E18 PS Fail	YP	YQ	4022	YP4022	YQ4022
E18:S010	E18 Batt Test	IA	IR	4023	IA4023	IR4023
E18:S011	E18 Spare1	UA	UR	4024	UA4024	UR4024
E18:S012	E18 Spare2	UA	UR	4025	UA4025	UR4025
E18:S013	E18 Spare3	UA	UR	4026	UA4026	UR4026
E18:S014	E18 Spare4	UA	UR	4027	UA4027	UR4027
E18:S015	E18 Spare5	UA	UR	4028	UA4028	UR4028
E18:S016	E18 Spare6	UA	UR	4029	UA4029	UR4029
E18:S017	E18 Spare7	UA	UR	4030	UA4030	UR4030
E18:S018	E18 Unibus	EM	EN	4031	EM4031	EN4031
E18:S019	E18 LAN Comms	EM	EN	4032	EM4032	EN4032
E18:S020	E18 Spare8	UA	UR	4033	UA4033	UR4033
E18:S021	E18 Spare9	UA	UR	4034	UA4034	UR4034
E19:Z001	E19:Z001	UA	UR	4035	UA4035	UR4035
E19:Z002	E19:Z002	UA	UR	4036	UA4036	UR4036
E19:Z003	E19:Z003	UA	UR	4037	UA4037	UR4037
E19:Z004	E19:Z004	UA	UR	4038	UA4038	UR4038
E19:Z005	E19:Z005	UA	UR	4039	UA4039	UR4039
E19:Z006	E19:Z006	UA	UR	4040	UA4040	UR4040
E19:Z007	E19:Z007	UA	UR	4041	UA4041	UR4041
E19:Z008	E19:Z008	UA	UR	4042	UA4042	UR4042
E19:Z009	E19:Z009	UA	UR	4043	UA4043	UR4043
E19:Z010	E19:Z010	UA	UR	4044	UA4044	UR4044
E19:Z011	E19:Z011	UA	UR	4045	UA4045	UR4045
E19:Z012	E19:Z012	UA	UR	4046	UA4046	UR4046
E19:Z013	E19:Z013	UA	UR	4047	UA4047	UR4047
E19:Z014	E19:Z014	UA	UR	4048	UA4048	UR4048
E19:Z015	E19:Z015	UA	UR	4049	UA4049	UR4049
E19:Z016	E19:Z016	UA	UR	4050	UA4050	UR4050
E19:Z017	E19:Z017	UA	UR	4051	UA4051	UR4051
E19:Z018	E19:Z018	UA	UR	4052	UA4052	UR4052
E19:Z019	E19:Z019	UA	UR	4053	UA4053	UR4053
E19:Z020	E19:Z020	UA	UR	4054	UA4054	UR4054
E19:Z021	E19:Z021	UA	UR	4055	UA4055	UR4055
E19:Z022	E19:Z022	UA	UR	4056	UA4056	UR4056
E19:Z023	E19:Z023	UA	UR	4057	UA4057	UR4057
E19:Z024	E19:Z024	UA	UR	4058	UA4058	UR4058
E19:Z025	E19:Z025	UA	UR	4059	UA4059	UR4059
E19:Z026	E19:Z026	UA	UR	4060	UA4060	UR4060
E19:Z027	E19:Z027	UA	UR	4061	UA4061	UR4061
E19:Z028	E19:Z028	UA	UR	4062	UA4062	UR4062
E19:Z029	E19:Z029	UA	UR	4063	UA4063	UR4063
E19:Z030	E19:Z030	UA	UR	4064	UA4064	UR4064
E19:Z031	E19:Z031	UA	UR	4065	UA4065	UR4065
E19:Z032	E19:Z032	UA	UR	4066	UA4066	UR4066
E19:S001	E19 Cab Tamper	TA	TR	4067	TA4067	TR4067
E19:S002	E19 Int Sir Tamp	YA	YH	4068	YA4068	YH4068
E19:S003	E19 Ext Sir Tamp	YA	YH	4069	YA4069	YH4069
E19:S004	E19 AC fail	AT	AR	4070	AT4070	AR4070
E19:S005	E19 Low Batt	YT	YR	4071	YT4071	YR4071
E19:S006	E19 LAN Fuse	YP	YQ	4072	YP4072	YQ4072
E19:S007	E19 DET Fuse	YP	YQ	4073	YP4073	YQ4073
E19:S008	E19 Low Volts	YP	YQ	4074	YP4074	YQ4074
E19:S009	E19 PS Fail	YP	YQ	4075	YP4075	YQ4075
E19:S010	E19 Batt Test	IA	IR	4076	IA4076	IR4076
E19:S011	E19 Spare1	UA	UR	4077	UA4077	UR4077
E19:S012	E19 Spare2	UA	UR	4078	UA4078	UR4078
E19:S013	E19 Spare3	UA	UR	4079	UA4079	UR4079
E19:S014	E19 Spare4	UA	UR	4080	UA4080	UR4080
E19:S015	E19 Spare5	UA	UR	4081	UA4081	UR4081
E19:S016	E19 Spare6	UA	UR	4082	UA4082	UR4082
E19:S017	E19 Spare7	UA	UR	4083	UA4083	UR4083
E19:S018	E19 Unibus	EM	EN	4084	EM4084	EN4084
E19:S019	E19 LAN Comms	EM	EN	4085	EM4085	EN4085

Integriti SIA DECIMAL Map. V21

E19:S020	E19 Spare8	UA	UR	4086	UA4086	UR4086
E19:S021	E19 Spare9	UA	UR	4087	UA4087	UR4087
E20:Z001	E20:Z001	UA	UR	4088	UA4088	UR4088
E20:Z002	E20:Z002	UA	UR	4089	UA4089	UR4089
E20:Z003	E20:Z003	UA	UR	4090	UA4090	UR4090
E20:Z004	E20:Z004	UA	UR	4091	UA4091	UR4091
E20:Z005	E20:Z005	UA	UR	4092	UA4092	UR4092
E20:Z006	E20:Z006	UA	UR	4093	UA4093	UR4093
E20:Z007	E20:Z007	UA	UR	4094	UA4094	UR4094
E20:Z008	E20:Z008	UA	UR	4095	UA4095	UR4095
E20:Z009	E20:Z009	UA	UR	4096	UA4096	UR4096
E20:Z010	E20:Z010	UA	UR	4097	UA4097	UR4097
E20:Z011	E20:Z011	UA	UR	4098	UA4098	UR4098
E20:Z012	E20:Z012	UA	UR	4099	UA4099	UR4099
E20:Z013	E20:Z013	UA	UR	4100	UA4100	UR4100
E20:Z014	E20:Z014	UA	UR	4101	UA4101	UR4101
E20:Z015	E20:Z015	UA	UR	4102	UA4102	UR4102
E20:Z016	E20:Z016	UA	UR	4103	UA4103	UR4103
E20:Z017	E20:Z017	UA	UR	4104	UA4104	UR4104
E20:Z018	E20:Z018	UA	UR	4105	UA4105	UR4105
E20:Z019	E20:Z019	UA	UR	4106	UA4106	UR4106
E20:Z020	E20:Z020	UA	UR	4107	UA4107	UR4107
E20:Z021	E20:Z021	UA	UR	4108	UA4108	UR4108
E20:Z022	E20:Z022	UA	UR	4109	UA4109	UR4109
E20:Z023	E20:Z023	UA	UR	4110	UA4110	UR4110
E20:Z024	E20:Z024	UA	UR	4111	UA4111	UR4111
E20:Z025	E20:Z025	UA	UR	4112	UA4112	UR4112
E20:Z026	E20:Z026	UA	UR	4113	UA4113	UR4113
E20:Z027	E20:Z027	UA	UR	4114	UA4114	UR4114
E20:Z028	E20:Z028	UA	UR	4115	UA4115	UR4115
E20:Z029	E20:Z029	UA	UR	4116	UA4116	UR4116
E20:Z030	E20:Z030	UA	UR	4117	UA4117	UR4117
E20:Z031	E20:Z031	UA	UR	4118	UA4118	UR4118
E20:Z032	E20:Z032	UA	UR	4119	UA4119	UR4119
E20:S001	E20 Cab Tamper	TA	TR	4120	TA4120	TR4120
E20:S002	E20 Int Sir Tamp	YA	YH	4121	YA4121	YH4121
E20:S003	E20 Ext Sir Tamp	YA	YH	4122	YA4122	YH4122
E20:S004	E20 AC fail	AT	AR	4123	AT4123	AR4123
E20:S005	E20 Low Batt	YT	YR	4124	YT4124	YR4124
E20:S006	E20 LAN Fuse	YP	YQ	4125	YP4125	YQ4125
E20:S007	E20 DET Fuse	YP	YQ	4126	YP4126	YQ4126
E20:S008	E20 Low Volts	YP	YQ	4127	YP4127	YQ4127
E20:S009	E20 PS Fail	YP	YQ	4128	YP4128	YQ4128
E20:S010	E20 Batt Test	IA	IR	4129	IA4129	IR4129
E20:S011	E20 Spare1	UA	UR	4130	UA4130	UR4130
E20:S012	E20 Spare2	UA	UR	4131	UA4131	UR4131
E20:S013	E20 Spare3	UA	UR	4132	UA4132	UR4132
E20:S014	E20 Spare4	UA	UR	4133	UA4133	UR4133
E20:S015	E20 Spare5	UA	UR	4134	UA4134	UR4134
E20:S016	E20 Spare6	UA	UR	4135	UA4135	UR4135
E20:S017	E20 Spare7	UA	UR	4136	UA4136	UR4136
E20:S018	E20 Unibus	EM	EN	4137	EM4137	EN4137
E20:S019	E20 LAN Comms	EM	EN	4138	EM4138	EN4138
E20:S020	E20 Spare8	UA	UR	4139	UA4139	UR4139
E20:S021	E20 Spare9	UA	UR	4140	UA4140	UR4140
E21:Z001	E21:Z001	UA	UR	4141	UA4141	UR4141
E21:Z002	E21:Z002	UA	UR	4142	UA4142	UR4142
E21:Z003	E21:Z003	UA	UR	4143	UA4143	UR4143
E21:Z004	E21:Z004	UA	UR	4144	UA4144	UR4144
E21:Z005	E21:Z005	UA	UR	4145	UA4145	UR4145
E21:Z006	E21:Z006	UA	UR	4146	UA4146	UR4146
E21:Z007	E21:Z007	UA	UR	4147	UA4147	UR4147
E21:Z008	E21:Z008	UA	UR	4148	UA4148	UR4148
E21:Z009	E21:Z009	UA	UR	4149	UA4149	UR4149
E21:Z010	E21:Z010	UA	UR	4150	UA4150	UR4150
E21:Z011	E21:Z011	UA	UR	4151	UA4151	UR4151
E21:Z012	E21:Z012	UA	UR	4152	UA4152	UR4152
E21:Z013	E21:Z013	UA	UR	4153	UA4153	UR4153
E21:Z014	E21:Z014	UA	UR	4154	UA4154	UR4154
E21:Z015	E21:Z015	UA	UR	4155	UA4155	UR4155

Integriti SIA DECIMAL Map. V21

E21:Z016	E21:Z016	UA	UR	4156	UA4156	UR4156
E21:Z017	E21:Z017	UA	UR	4157	UA4157	UR4157
E21:Z018	E21:Z018	UA	UR	4158	UA4158	UR4158
E21:Z019	E21:Z019	UA	UR	4159	UA4159	UR4159
E21:Z020	E21:Z020	UA	UR	4160	UA4160	UR4160
E21:Z021	E21:Z021	UA	UR	4161	UA4161	UR4161
E21:Z022	E21:Z022	UA	UR	4162	UA4162	UR4162
E21:Z023	E21:Z023	UA	UR	4163	UA4163	UR4163
E21:Z024	E21:Z024	UA	UR	4164	UA4164	UR4164
E21:Z025	E21:Z025	UA	UR	4165	UA4165	UR4165
E21:Z026	E21:Z026	UA	UR	4166	UA4166	UR4166
E21:Z027	E21:Z027	UA	UR	4167	UA4167	UR4167
E21:Z028	E21:Z028	UA	UR	4168	UA4168	UR4168
E21:Z029	E21:Z029	UA	UR	4169	UA4169	UR4169
E21:Z030	E21:Z030	UA	UR	4170	UA4170	UR4170
E21:Z031	E21:Z031	UA	UR	4171	UA4171	UR4171
E21:Z032	E21:Z032	UA	UR	4172	UA4172	UR4172
E21:S001	E21 Cab Tamper	TA	TR	4173	TA4173	TR4173
E21:S002	E21 Int Sir Tamp	YA	YH	4174	YA4174	YH4174
E21:S003	E21 Ext Sir Tamp	YA	YH	4175	YA4175	YH4175
E21:S004	E21 AC fail	AT	AR	4176	AT4176	AR4176
E21:S005	E21 Low Batt	YT	YR	4177	YT4177	YR4177
E21:S006	E21 LAN Fuse	YP	YQ	4178	YP4178	YQ4178
E21:S007	E21 DET Fuse	YP	YQ	4179	YP4179	YQ4179
E21:S008	E21 Low Volts	YP	YQ	4180	YP4180	YQ4180
E21:S009	E21 PS Fail	YP	YQ	4181	YP4181	YQ4181
E21:S010	E21 Batt Test	IA	IR	4182	IA4182	IR4182
E21:S011	E21 Spare1	UA	UR	4183	UA4183	UR4183
E21:S012	E21 Spare2	UA	UR	4184	UA4184	UR4184
E21:S013	E21 Spare3	UA	UR	4185	UA4185	UR4185
E21:S014	E21 Spare4	UA	UR	4186	UA4186	UR4186
E21:S015	E21 Spare5	UA	UR	4187	UA4187	UR4187
E21:S016	E21 Spare6	UA	UR	4188	UA4188	UR4188
E21:S017	E21 Spare7	UA	UR	4189	UA4189	UR4189
E21:S018	E21 Unibus	EM	EN	4190	EM4190	EN4190
E21:S019	E21 LAN Comms	EM	EN	4191	EM4191	EN4191
E21:S020	E21 Spare8	UA	UR	4192	UA4192	UR4192
E21:S021	E21 Spare9	UA	UR	4193	UA4193	UR4193
E22:Z001	E22:Z001	UA	UR	4194	UA4194	UR4194
E22:Z002	E22:Z002	UA	UR	4195	UA4195	UR4195
E22:Z003	E22:Z003	UA	UR	4196	UA4196	UR4196
E22:Z004	E22:Z004	UA	UR	4197	UA4197	UR4197
E22:Z005	E22:Z005	UA	UR	4198	UA4198	UR4198
E22:Z006	E22:Z006	UA	UR	4199	UA4199	UR4199
E22:Z007	E22:Z007	UA	UR	4200	UA4200	UR4200
E22:Z008	E22:Z008	UA	UR	4201	UA4201	UR4201
E22:Z009	E22:Z009	UA	UR	4202	UA4202	UR4202
E22:Z010	E22:Z010	UA	UR	4203	UA4203	UR4203
E22:Z011	E22:Z011	UA	UR	4204	UA4204	UR4204
E22:Z012	E22:Z012	UA	UR	4205	UA4205	UR4205
E22:Z013	E22:Z013	UA	UR	4206	UA4206	UR4206
E22:Z014	E22:Z014	UA	UR	4207	UA4207	UR4207
E22:Z015	E22:Z015	UA	UR	4208	UA4208	UR4208
E22:Z016	E22:Z016	UA	UR	4209	UA4209	UR4209
E22:Z017	E22:Z017	UA	UR	4210	UA4210	UR4210
E22:Z018	E22:Z018	UA	UR	4211	UA4211	UR4211
E22:Z019	E22:Z019	UA	UR	4212	UA4212	UR4212
E22:Z020	E22:Z020	UA	UR	4213	UA4213	UR4213
E22:Z021	E22:Z021	UA	UR	4214	UA4214	UR4214
E22:Z022	E22:Z022	UA	UR	4215	UA4215	UR4215
E22:Z023	E22:Z023	UA	UR	4216	UA4216	UR4216
E22:Z024	E22:Z024	UA	UR	4217	UA4217	UR4217
E22:Z025	E22:Z025	UA	UR	4218	UA4218	UR4218
E22:Z026	E22:Z026	UA	UR	4219	UA4219	UR4219
E22:Z027	E22:Z027	UA	UR	4220	UA4220	UR4220
E22:Z028	E22:Z028	UA	UR	4221	UA4221	UR4221
E22:Z029	E22:Z029	UA	UR	4222	UA4222	UR4222
E22:Z030	E22:Z030	UA	UR	4223	UA4223	UR4223
E22:Z031	E22:Z031	UA	UR	4224	UA4224	UR4224
E22:Z032	E22:Z032	UA	UR	4225	UA4225	UR4225

Integriti SIA DECIMAL Map. V21

E22:S001	E22 Cab Tamper	TA	TR	4226	TA4226	TR4226
E22:S002	E22 Int Sir Tamp	YA	YH	4227	YA4227	YH4227
E22:S003	E22 Ext Sir Tamp	YA	YH	4228	YA4228	YH4228
E22:S004	E22 AC fail	AT	AR	4229	AT4229	AR4229
E22:S005	E22 Low Batt	YT	YR	4230	YT4230	YR4230
E22:S006	E22 LAN Fuse	YP	YQ	4231	YP4231	YQ4231
E22:S007	E22 DET Fuse	YP	YQ	4232	YP4232	YQ4232
E22:S008	E22 Low Volts	YP	YQ	4233	YP4233	YQ4233
E22:S009	E22 PS Fail	YP	YQ	4234	YP4234	YQ4234
E22:S010	E22 Batt Test	IA	IR	4235	IA4235	IR4235
E22:S011	E22 Spare1	UA	UR	4236	UA4236	UR4236
E22:S012	E22 Spare2	UA	UR	4237	UA4237	UR4237
E22:S013	E22 Spare3	UA	UR	4238	UA4238	UR4238
E22:S014	E22 Spare4	UA	UR	4239	UA4239	UR4239
E22:S015	E22 Spare5	UA	UR	4240	UA4240	UR4240
E22:S016	E22 Spare6	UA	UR	4241	UA4241	UR4241
E22:S017	E22 Spare7	UA	UR	4242	UA4242	UR4242
E22:S018	E22 Unibus	EM	EN	4243	EM4243	EN4243
E22:S019	E22 LAN Comms	EM	EN	4244	EM4244	EN4244
E22:S020	E22 Spare8	UA	UR	4245	UA4245	UR4245
E22:S021	E22 Spare9	UA	UR	4246	UA4246	UR4246
E23:Z001	E23:Z001	UA	UR	4247	UA4247	UR4247
E23:Z002	E23:Z002	UA	UR	4248	UA4248	UR4248
E23:Z003	E23:Z003	UA	UR	4249	UA4249	UR4249
E23:Z004	E23:Z004	UA	UR	4250	UA4250	UR4250
E23:Z005	E23:Z005	UA	UR	4251	UA4251	UR4251
E23:Z006	E23:Z006	UA	UR	4252	UA4252	UR4252
E23:Z007	E23:Z007	UA	UR	4253	UA4253	UR4253
E23:Z008	E23:Z008	UA	UR	4254	UA4254	UR4254
E23:Z009	E23:Z009	UA	UR	4255	UA4255	UR4255
E23:Z010	E23:Z010	UA	UR	4256	UA4256	UR4256
E23:Z011	E23:Z011	UA	UR	4257	UA4257	UR4257
E23:Z012	E23:Z012	UA	UR	4258	UA4258	UR4258
E23:Z013	E23:Z013	UA	UR	4259	UA4259	UR4259
E23:Z014	E23:Z014	UA	UR	4260	UA4260	UR4260
E23:Z015	E23:Z015	UA	UR	4261	UA4261	UR4261
E23:Z016	E23:Z016	UA	UR	4262	UA4262	UR4262
E23:Z017	E23:Z017	UA	UR	4263	UA4263	UR4263
E23:Z018	E23:Z018	UA	UR	4264	UA4264	UR4264
E23:Z019	E23:Z019	UA	UR	4265	UA4265	UR4265
E23:Z020	E23:Z020	UA	UR	4266	UA4266	UR4266
E23:Z021	E23:Z021	UA	UR	4267	UA4267	UR4267
E23:Z022	E23:Z022	UA	UR	4268	UA4268	UR4268
E23:Z023	E23:Z023	UA	UR	4269	UA4269	UR4269
E23:Z024	E23:Z024	UA	UR	4270	UA4270	UR4270
E23:Z025	E23:Z025	UA	UR	4271	UA4271	UR4271
E23:Z026	E23:Z026	UA	UR	4272	UA4272	UR4272
E23:Z027	E23:Z027	UA	UR	4273	UA4273	UR4273
E23:Z028	E23:Z028	UA	UR	4274	UA4274	UR4274
E23:Z029	E23:Z029	UA	UR	4275	UA4275	UR4275
E23:Z030	E23:Z030	UA	UR	4276	UA4276	UR4276
E23:Z031	E23:Z031	UA	UR	4277	UA4277	UR4277
E23:Z032	E23:Z032	UA	UR	4278	UA4278	UR4278
E23:S001	E23 Cab Tamper	TA	TR	4279	TA4279	TR4279
E23:S002	E23 Int Sir Tamp	YA	YH	4280	YA4280	YH4280
E23:S003	E23 Ext Sir Tamp	YA	YH	4281	YA4281	YH4281
E23:S004	E23 AC fail	AT	AR	4282	AT4282	AR4282
E23:S005	E23 Low Batt	YT	YR	4283	YT4283	YR4283
E23:S006	E23 LAN Fuse	YP	YQ	4284	YP4284	YQ4284
E23:S007	E23 DET Fuse	YP	YQ	4285	YP4285	YQ4285
E23:S008	E23 Low Volts	YP	YQ	4286	YP4286	YQ4286
E23:S009	E23 PS Fail	YP	YQ	4287	YP4287	YQ4287
E23:S010	E23 Batt Test	IA	IR	4288	IA4288	IR4288
E23:S011	E23 Spare1	UA	UR	4289	UA4289	UR4289
E23:S012	E23 Spare2	UA	UR	4290	UA4290	UR4290
E23:S013	E23 Spare3	UA	UR	4291	UA4291	UR4291
E23:S014	E23 Spare4	UA	UR	4292	UA4292	UR4292
E23:S015	E23 Spare5	UA	UR	4293	UA4293	UR4293
E23:S016	E23 Spare6	UA	UR	4294	UA4294	UR4294
E23:S017	E23 Spare7	UA	UR	4295	UA4295	UR4295

Integriti SIA DECIMAL Map. V21

E23:S018	E23 Unibus	EM	EN	4296	EM4296	EN4296
E23:S019	E23 LAN Comms	EM	EN	4297	EM4297	EN4297
E23:S020	E23 Spare8	UA	UR	4298	UA4298	UR4298
E23:S021	E23 Spare9	UA	UR	4299	UA4299	UR4299
E24:Z001	E24:Z001	UA	UR	4300	UA4300	UR4300
E24:Z002	E24:Z002	UA	UR	4301	UA4301	UR4301
E24:Z003	E24:Z003	UA	UR	4302	UA4302	UR4302
E24:Z004	E24:Z004	UA	UR	4303	UA4303	UR4303
E24:Z005	E24:Z005	UA	UR	4304	UA4304	UR4304
E24:Z006	E24:Z006	UA	UR	4305	UA4305	UR4305
E24:Z007	E24:Z007	UA	UR	4306	UA4306	UR4306
E24:Z008	E24:Z008	UA	UR	4307	UA4307	UR4307
E24:Z009	E24:Z009	UA	UR	4308	UA4308	UR4308
E24:Z010	E24:Z010	UA	UR	4309	UA4309	UR4309
E24:Z011	E24:Z011	UA	UR	4310	UA4310	UR4310
E24:Z012	E24:Z012	UA	UR	4311	UA4311	UR4311
E24:Z013	E24:Z013	UA	UR	4312	UA4312	UR4312
E24:Z014	E24:Z014	UA	UR	4313	UA4313	UR4313
E24:Z015	E24:Z015	UA	UR	4314	UA4314	UR4314
E24:Z016	E24:Z016	UA	UR	4315	UA4315	UR4315
E24:Z017	E24:Z017	UA	UR	4316	UA4316	UR4316
E24:Z018	E24:Z018	UA	UR	4317	UA4317	UR4317
E24:Z019	E24:Z019	UA	UR	4318	UA4318	UR4318
E24:Z020	E24:Z020	UA	UR	4319	UA4319	UR4319
E24:Z021	E24:Z021	UA	UR	4320	UA4320	UR4320
E24:Z022	E24:Z022	UA	UR	4321	UA4321	UR4321
E24:Z023	E24:Z023	UA	UR	4322	UA4322	UR4322
E24:Z024	E24:Z024	UA	UR	4323	UA4323	UR4323
E24:Z025	E24:Z025	UA	UR	4324	UA4324	UR4324
E24:Z026	E24:Z026	UA	UR	4325	UA4325	UR4325
E24:Z027	E24:Z027	UA	UR	4326	UA4326	UR4326
E24:Z028	E24:Z028	UA	UR	4327	UA4327	UR4327
E24:Z029	E24:Z029	UA	UR	4328	UA4328	UR4328
E24:Z030	E24:Z030	UA	UR	4329	UA4329	UR4329
E24:Z031	E24:Z031	UA	UR	4330	UA4330	UR4330
E24:Z032	E24:Z032	UA	UR	4331	UA4331	UR4331
E24:S001	E24 Cab Tamper	TA	TR	4332	TA4332	TR4332
E24:S002	E24 Int Sir Tamp	YA	YH	4333	YA4333	YH4333
E24:S003	E24 Ext Sir Tamp	YA	YH	4334	YA4334	YH4334
E24:S004	E24 AC fail	AT	AR	4335	AT4335	AR4335
E24:S005	E24 Low Batt	YT	YR	4336	YT4336	YR4336
E24:S006	E24 LAN Fuse	YP	YQ	4337	YP4337	YQ4337
E24:S007	E24 DET Fuse	YP	YQ	4338	YP4338	YQ4338
E24:S008	E24 Low Volts	YP	YQ	4339	YP4339	YQ4339
E24:S009	E24 PS Fail	YP	YQ	4340	YP4340	YQ4340
E24:S010	E24 Batt Test	IA	IR	4341	IA4341	IR4341
E24:S011	E24 Spare1	UA	UR	4342	UA4342	UR4342
E24:S012	E24 Spare2	UA	UR	4343	UA4343	UR4343
E24:S013	E24 Spare3	UA	UR	4344	UA4344	UR4344
E24:S014	E24 Spare4	UA	UR	4345	UA4345	UR4345
E24:S015	E24 Spare5	UA	UR	4346	UA4346	UR4346
E24:S016	E24 Spare6	UA	UR	4347	UA4347	UR4347
E24:S017	E24 Spare7	UA	UR	4348	UA4348	UR4348
E24:S018	E24 Unibus	EM	EN	4349	EM4349	EN4349
E24:S019	E24 LAN Comms	EM	EN	4350	EM4350	EN4350
E24:S020	E24 Spare8	UA	UR	4351	UA4351	UR4351
E24:S021	E24 Spare9	UA	UR	4352	UA4352	UR4352
E25:Z001	E25:Z001	UA	UR	4353	UA4353	UR4353
E25:Z002	E25:Z002	UA	UR	4354	UA4354	UR4354
E25:Z003	E25:Z003	UA	UR	4355	UA4355	UR4355
E25:Z004	E25:Z004	UA	UR	4356	UA4356	UR4356
E25:Z005	E25:Z005	UA	UR	4357	UA4357	UR4357
E25:Z006	E25:Z006	UA	UR	4358	UA4358	UR4358
E25:Z007	E25:Z007	UA	UR	4359	UA4359	UR4359
E25:Z008	E25:Z008	UA	UR	4360	UA4360	UR4360
E25:Z009	E25:Z009	UA	UR	4361	UA4361	UR4361
E25:Z010	E25:Z010	UA	UR	4362	UA4362	UR4362
E25:Z011	E25:Z011	UA	UR	4363	UA4363	UR4363
E25:Z012	E25:Z012	UA	UR	4364	UA4364	UR4364
E25:Z013	E25:Z013	UA	UR	4365	UA4365	UR4365

Integriti SIA DECIMAL Map. V21

E25:Z014	E25:Z014	UA	UR	4366	UA4366	UR4366
E25:Z015	E25:Z015	UA	UR	4367	UA4367	UR4367
E25:Z016	E25:Z016	UA	UR	4368	UA4368	UR4368
E25:Z017	E25:Z017	UA	UR	4369	UA4369	UR4369
E25:Z018	E25:Z018	UA	UR	4370	UA4370	UR4370
E25:Z019	E25:Z019	UA	UR	4371	UA4371	UR4371
E25:Z020	E25:Z020	UA	UR	4372	UA4372	UR4372
E25:Z021	E25:Z021	UA	UR	4373	UA4373	UR4373
E25:Z022	E25:Z022	UA	UR	4374	UA4374	UR4374
E25:Z023	E25:Z023	UA	UR	4375	UA4375	UR4375
E25:Z024	E25:Z024	UA	UR	4376	UA4376	UR4376
E25:Z025	E25:Z025	UA	UR	4377	UA4377	UR4377
E25:Z026	E25:Z026	UA	UR	4378	UA4378	UR4378
E25:Z027	E25:Z027	UA	UR	4379	UA4379	UR4379
E25:Z028	E25:Z028	UA	UR	4380	UA4380	UR4380
E25:Z029	E25:Z029	UA	UR	4381	UA4381	UR4381
E25:Z030	E25:Z030	UA	UR	4382	UA4382	UR4382
E25:Z031	E25:Z031	UA	UR	4383	UA4383	UR4383
E25:Z032	E25:Z032	UA	UR	4384	UA4384	UR4384
E25:S001	E25 Cab Tamper	TA	TR	4385	TA4385	TR4385
E25:S002	E25 Int Sir Tamp	YA	YH	4386	YA4386	YH4386
E25:S003	E25 Ext Sir Tamp	YA	YH	4387	YA4387	YH4387
E25:S004	E25 AC fail	AT	AR	4388	AT4388	AR4388
E25:S005	E25 Low Batt	YT	YR	4389	YT4389	YR4389
E25:S006	E25 LAN Fuse	YP	YQ	4390	YP4390	YQ4390
E25:S007	E25 DET Fuse	YP	YQ	4391	YP4391	YQ4391
E25:S008	E25 Low Volts	YP	YQ	4392	YP4392	YQ4392
E25:S009	E25 PS Fail	YP	YQ	4393	YP4393	YQ4393
E25:S010	E25 Batt Test	IA	IR	4394	IA4394	IR4394
E25:S011	E25 Spare1	UA	UR	4395	UA4395	UR4395
E25:S012	E25 Spare2	UA	UR	4396	UA4396	UR4396
E25:S013	E25 Spare3	UA	UR	4397	UA4397	UR4397
E25:S014	E25 Spare4	UA	UR	4398	UA4398	UR4398
E25:S015	E25 Spare5	UA	UR	4399	UA4399	UR4399
E25:S016	E25 Spare6	UA	UR	4400	UA4400	UR4400
E25:S017	E25 Spare7	UA	UR	4401	UA4401	UR4401
E25:S018	E25 Unibus	EM	EN	4402	EM4402	EN4402
E25:S019	E25 LAN Comms	EM	EN	4403	EM4403	EN4403
E25:S020	E25 Spare8	UA	UR	4404	UA4404	UR4404
E25:S021	E25 Spare9	UA	UR	4405	UA4405	UR4405
E26:Z001	E26:Z001	UA	UR	4406	UA4406	UR4406
E26:Z002	E26:Z002	UA	UR	4407	UA4407	UR4407
E26:Z003	E26:Z003	UA	UR	4408	UA4408	UR4408
E26:Z004	E26:Z004	UA	UR	4409	UA4409	UR4409
E26:Z005	E26:Z005	UA	UR	4410	UA4410	UR4410
E26:Z006	E26:Z006	UA	UR	4411	UA4411	UR4411
E26:Z007	E26:Z007	UA	UR	4412	UA4412	UR4412
E26:Z008	E26:Z008	UA	UR	4413	UA4413	UR4413
E26:Z009	E26:Z009	UA	UR	4414	UA4414	UR4414
E26:Z010	E26:Z010	UA	UR	4415	UA4415	UR4415
E26:Z011	E26:Z011	UA	UR	4416	UA4416	UR4416
E26:Z012	E26:Z012	UA	UR	4417	UA4417	UR4417
E26:Z013	E26:Z013	UA	UR	4418	UA4418	UR4418
E26:Z014	E26:Z014	UA	UR	4419	UA4419	UR4419
E26:Z015	E26:Z015	UA	UR	4420	UA4420	UR4420
E26:Z016	E26:Z016	UA	UR	4421	UA4421	UR4421
E26:Z017	E26:Z017	UA	UR	4422	UA4422	UR4422
E26:Z018	E26:Z018	UA	UR	4423	UA4423	UR4423
E26:Z019	E26:Z019	UA	UR	4424	UA4424	UR4424
E26:Z020	E26:Z020	UA	UR	9999	UA9999	UR9999
E26:Z021	E26:Z021	UA	UR	9999	UA9999	UR9999
E26:Z022	E26:Z022	UA	UR	9999	UA9999	UR9999
E26:Z023	E26:Z023	UA	UR	9999	UA9999	UR9999
E26:Z024	E26:Z024	UA	UR	9999	UA9999	UR9999
E26:Z025	E26:Z025	UA	UR	9999	UA9999	UR9999
E26:Z026	E26:Z026	UA	UR	9999	UA9999	UR9999
E26:Z027	E26:Z027	UA	UR	9999	UA9999	UR9999
E26:Z028	E26:Z028	UA	UR	9999	UA9999	UR9999
E26:Z029	E26:Z029	UA	UR	9999	UA9999	UR9999
E26:Z030	E26:Z030	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E26:Z031	E26:Z031	UA	UR	9999	UA9999	UR9999
E26:Z032	E26:Z032	UA	UR	9999	UA9999	UR9999
E26:S001	E26 Cab Tamper	TA	TR	9999	TA9999	TR9999
E26:S002	E26 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E26:S003	E26 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E26:S004	E26 AC fail	AT	AR	9999	AT9999	AR9999
E26:S005	E26 Low Batt	YT	YR	9999	YT9999	YR9999
E26:S006	E26 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E26:S007	E26 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E26:S008	E26 Low Volts	YP	YQ	9999	YP9999	YQ9999
E26:S009	E26 PS Fail	YP	YQ	9999	YP9999	YQ9999
E26:S010	E26 Batt Test	IA	IR	9999	IA9999	IR9999
E26:S011	E26 Spare1	UA	UR	9999	UA9999	UR9999
E26:S012	E26 Spare2	UA	UR	9999	UA9999	UR9999
E26:S013	E26 Spare3	UA	UR	9999	UA9999	UR9999
E26:S014	E26 Spare4	UA	UR	9999	UA9999	UR9999
E26:S015	E26 Spare5	UA	UR	9999	UA9999	UR9999
E26:S016	E26 Spare6	UA	UR	9999	UA9999	UR9999
E26:S017	E26 Spare7	UA	UR	9999	UA9999	UR9999
E26:S018	E26 Unibus	EM	EN	9999	EM9999	EN9999
E26:S019	E26 LAN Comms	EM	EN	9999	EM9999	EN9999
E26:S020	E26 Spare8	UA	UR	9999	UA9999	UR9999
E26:S021	E26 Spare9	UA	UR	9999	UA9999	UR9999
E27:Z001	E27:Z001	UA	UR	9999	UA9999	UR9999
E27:Z002	E27:Z002	UA	UR	9999	UA9999	UR9999
E27:Z003	E27:Z003	UA	UR	9999	UA9999	UR9999
E27:Z004	E27:Z004	UA	UR	9999	UA9999	UR9999
E27:Z005	E27:Z005	UA	UR	9999	UA9999	UR9999
E27:Z006	E27:Z006	UA	UR	9999	UA9999	UR9999
E27:Z007	E27:Z007	UA	UR	9999	UA9999	UR9999
E27:Z008	E27:Z008	UA	UR	9999	UA9999	UR9999
E27:Z009	E27:Z009	UA	UR	9999	UA9999	UR9999
E27:Z010	E27:Z010	UA	UR	9999	UA9999	UR9999
E27:Z011	E27:Z011	UA	UR	9999	UA9999	UR9999
E27:Z012	E27:Z012	UA	UR	9999	UA9999	UR9999
E27:Z013	E27:Z013	UA	UR	9999	UA9999	UR9999
E27:Z014	E27:Z014	UA	UR	9999	UA9999	UR9999
E27:Z015	E27:Z015	UA	UR	9999	UA9999	UR9999
E27:Z016	E27:Z016	UA	UR	9999	UA9999	UR9999
E27:Z017	E27:Z017	UA	UR	9999	UA9999	UR9999
E27:Z018	E27:Z018	UA	UR	9999	UA9999	UR9999
E27:Z019	E27:Z019	UA	UR	9999	UA9999	UR9999
E27:Z020	E27:Z020	UA	UR	9999	UA9999	UR9999
E27:Z021	E27:Z021	UA	UR	9999	UA9999	UR9999
E27:Z022	E27:Z022	UA	UR	9999	UA9999	UR9999
E27:Z023	E27:Z023	UA	UR	9999	UA9999	UR9999
E27:Z024	E27:Z024	UA	UR	9999	UA9999	UR9999
E27:Z025	E27:Z025	UA	UR	9999	UA9999	UR9999
E27:Z026	E27:Z026	UA	UR	9999	UA9999	UR9999
E27:Z027	E27:Z027	UA	UR	9999	UA9999	UR9999
E27:Z028	E27:Z028	UA	UR	9999	UA9999	UR9999
E27:Z029	E27:Z029	UA	UR	9999	UA9999	UR9999
E27:Z030	E27:Z030	UA	UR	9999	UA9999	UR9999
E27:Z031	E27:Z031	UA	UR	9999	UA9999	UR9999
E27:Z032	E27:Z032	UA	UR	9999	UA9999	UR9999
E27:S001	E27 Cab Tamper	TA	TR	9999	TA9999	TR9999
E27:S002	E27 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E27:S003	E27 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E27:S004	E27 AC fail	AT	AR	9999	AT9999	AR9999
E27:S005	E27 Low Batt	YT	YR	9999	YT9999	YR9999
E27:S006	E27 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E27:S007	E27 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E27:S008	E27 Low Volts	YP	YQ	9999	YP9999	YQ9999
E27:S009	E27 PS Fail	YP	YQ	9999	YP9999	YQ9999
E27:S010	E27 Batt Test	IA	IR	9999	IA9999	IR9999
E27:S011	E27 Spare1	UA	UR	9999	UA9999	UR9999
E27:S012	E27 Spare2	UA	UR	9999	UA9999	UR9999
E27:S013	E27 Spare3	UA	UR	9999	UA9999	UR9999
E27:S014	E27 Spare4	UA	UR	9999	UA9999	UR9999
E27:S015	E27 Spare5	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E27:S016	E27 Spare6	UA	UR	9999	UA9999	UR9999
E27:S017	E27 Spare7	UA	UR	9999	UA9999	UR9999
E27:S018	E27 Unibus	EM	EN	9999	EM9999	EN9999
E27:S019	E27 LAN Comms	EM	EN	9999	EM9999	EN9999
E27:S020	E27 Spare8	UA	UR	9999	UA9999	UR9999
E27:S021	E27 Spare9	UA	UR	9999	UA9999	UR9999
E28:Z001	E28:Z001	UA	UR	9999	UA9999	UR9999
E28:Z002	E28:Z002	UA	UR	9999	UA9999	UR9999
E28:Z003	E28:Z003	UA	UR	9999	UA9999	UR9999
E28:Z004	E28:Z004	UA	UR	9999	UA9999	UR9999
E28:Z005	E28:Z005	UA	UR	9999	UA9999	UR9999
E28:Z006	E28:Z006	UA	UR	9999	UA9999	UR9999
E28:Z007	E28:Z007	UA	UR	9999	UA9999	UR9999
E28:Z008	E28:Z008	UA	UR	9999	UA9999	UR9999
E28:Z009	E28:Z009	UA	UR	9999	UA9999	UR9999
E28:Z010	E28:Z010	UA	UR	9999	UA9999	UR9999
E28:Z011	E28:Z011	UA	UR	9999	UA9999	UR9999
E28:Z012	E28:Z012	UA	UR	9999	UA9999	UR9999
E28:Z013	E28:Z013	UA	UR	9999	UA9999	UR9999
E28:Z014	E28:Z014	UA	UR	9999	UA9999	UR9999
E28:Z015	E28:Z015	UA	UR	9999	UA9999	UR9999
E28:Z016	E28:Z016	UA	UR	9999	UA9999	UR9999
E28:Z017	E28:Z017	UA	UR	9999	UA9999	UR9999
E28:Z018	E28:Z018	UA	UR	9999	UA9999	UR9999
E28:Z019	E28:Z019	UA	UR	9999	UA9999	UR9999
E28:Z020	E28:Z020	UA	UR	9999	UA9999	UR9999
E28:Z021	E28:Z021	UA	UR	9999	UA9999	UR9999
E28:Z022	E28:Z022	UA	UR	9999	UA9999	UR9999
E28:Z023	E28:Z023	UA	UR	9999	UA9999	UR9999
E28:Z024	E28:Z024	UA	UR	9999	UA9999	UR9999
E28:Z025	E28:Z025	UA	UR	9999	UA9999	UR9999
E28:Z026	E28:Z026	UA	UR	9999	UA9999	UR9999
E28:Z027	E28:Z027	UA	UR	9999	UA9999	UR9999
E28:Z028	E28:Z028	UA	UR	9999	UA9999	UR9999
E28:Z029	E28:Z029	UA	UR	9999	UA9999	UR9999
E28:Z030	E28:Z030	UA	UR	9999	UA9999	UR9999
E28:Z031	E28:Z031	UA	UR	9999	UA9999	UR9999
E28:Z032	E28:Z032	UA	UR	9999	UA9999	UR9999
E28:S001	E28 Cab Tamper	TA	TR	9999	TA9999	TR9999
E28:S002	E28 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E28:S003	E28 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E28:S004	E28 AC fail	AT	AR	9999	AT9999	AR9999
E28:S005	E28 Low Batt	YT	YR	9999	YT9999	YR9999
E28:S006	E28 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E28:S007	E28 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E28:S008	E28 Low Volts	YP	YQ	9999	YP9999	YQ9999
E28:S009	E28 PS Fail	YP	YQ	9999	YP9999	YQ9999
E28:S010	E28 Batt Test	IA	IR	9999	IA9999	IR9999
E28:S011	E28 Spare1	UA	UR	9999	UA9999	UR9999
E28:S012	E28 Spare2	UA	UR	9999	UA9999	UR9999
E28:S013	E28 Spare3	UA	UR	9999	UA9999	UR9999
E28:S014	E28 Spare4	UA	UR	9999	UA9999	UR9999
E28:S015	E28 Spare5	UA	UR	9999	UA9999	UR9999
E28:S016	E28 Spare6	UA	UR	9999	UA9999	UR9999
E28:S017	E28 Spare7	UA	UR	9999	UA9999	UR9999
E28:S018	E28 Unibus	EM	EN	9999	EM9999	EN9999
E28:S019	E28 LAN Comms	EM	EN	9999	EM9999	EN9999
E28:S020	E28 Spare8	UA	UR	9999	UA9999	UR9999
E28:S021	E28 Spare9	UA	UR	9999	UA9999	UR9999
E29:Z001	E29:Z001	UA	UR	9999	UA9999	UR9999
E29:Z002	E29:Z002	UA	UR	9999	UA9999	UR9999
E29:Z003	E29:Z003	UA	UR	9999	UA9999	UR9999
E29:Z004	E29:Z004	UA	UR	9999	UA9999	UR9999
E29:Z005	E29:Z005	UA	UR	9999	UA9999	UR9999
E29:Z006	E29:Z006	UA	UR	9999	UA9999	UR9999
E29:Z007	E29:Z007	UA	UR	9999	UA9999	UR9999
E29:Z008	E29:Z008	UA	UR	9999	UA9999	UR9999
E29:Z009	E29:Z009	UA	UR	9999	UA9999	UR9999
E29:Z010	E29:Z010	UA	UR	9999	UA9999	UR9999
E29:Z011	E29:Z011	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E29:Z012	E29:Z012	UA	UR	9999	UA9999	UR9999
E29:Z013	E29:Z013	UA	UR	9999	UA9999	UR9999
E29:Z014	E29:Z014	UA	UR	9999	UA9999	UR9999
E29:Z015	E29:Z015	UA	UR	9999	UA9999	UR9999
E29:Z016	E29:Z016	UA	UR	9999	UA9999	UR9999
E29:Z017	E29:Z017	UA	UR	9999	UA9999	UR9999
E29:Z018	E29:Z018	UA	UR	9999	UA9999	UR9999
E29:Z019	E29:Z019	UA	UR	9999	UA9999	UR9999
E29:Z020	E29:Z020	UA	UR	9999	UA9999	UR9999
E29:Z021	E29:Z021	UA	UR	9999	UA9999	UR9999
E29:Z022	E29:Z022	UA	UR	9999	UA9999	UR9999
E29:Z023	E29:Z023	UA	UR	9999	UA9999	UR9999
E29:Z024	E29:Z024	UA	UR	9999	UA9999	UR9999
E29:Z025	E29:Z025	UA	UR	9999	UA9999	UR9999
E29:Z026	E29:Z026	UA	UR	9999	UA9999	UR9999
E29:Z027	E29:Z027	UA	UR	9999	UA9999	UR9999
E29:Z028	E29:Z028	UA	UR	9999	UA9999	UR9999
E29:Z029	E29:Z029	UA	UR	9999	UA9999	UR9999
E29:Z030	E29:Z030	UA	UR	9999	UA9999	UR9999
E29:Z031	E29:Z031	UA	UR	9999	UA9999	UR9999
E29:Z032	E29:Z032	UA	UR	9999	UA9999	UR9999
E29:S001	E29 Cab Tamper	TA	TR	9999	TA9999	TR9999
E29:S002	E29 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E29:S003	E29 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E29:S004	E29 AC fail	AT	AR	9999	AT9999	AR9999
E29:S005	E29 Low Batt	YT	YR	9999	YT9999	YR9999
E29:S006	E29 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E29:S007	E29 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E29:S008	E29 Low Volts	YP	YQ	9999	YP9999	YQ9999
E29:S009	E29 PS Fail	YP	YQ	9999	YP9999	YQ9999
E29:S010	E29 Batt Test	IA	IR	9999	IA9999	IR9999
E29:S011	E29 Spare1	UA	UR	9999	UA9999	UR9999
E29:S012	E29 Spare2	UA	UR	9999	UA9999	UR9999
E29:S013	E29 Spare3	UA	UR	9999	UA9999	UR9999
E29:S014	E29 Spare4	UA	UR	9999	UA9999	UR9999
E29:S015	E29 Spare5	UA	UR	9999	UA9999	UR9999
E29:S016	E29 Spare6	UA	UR	9999	UA9999	UR9999
E29:S017	E29 Spare7	UA	UR	9999	UA9999	UR9999
E29:S018	E29 Unibus	EM	EN	9999	EM9999	EN9999
E29:S019	E29 LAN Comms	EM	EN	9999	EM9999	EN9999
E29:S020	E29 Spare8	UA	UR	9999	UA9999	UR9999
E29:S021	E29 Spare9	UA	UR	9999	UA9999	UR9999
E30:Z001	E30:Z001	UA	UR	9999	UA9999	UR9999
E30:Z002	E30:Z002	UA	UR	9999	UA9999	UR9999
E30:Z003	E30:Z003	UA	UR	9999	UA9999	UR9999
E30:Z004	E30:Z004	UA	UR	9999	UA9999	UR9999
E30:Z005	E30:Z005	UA	UR	9999	UA9999	UR9999
E30:Z006	E30:Z006	UA	UR	9999	UA9999	UR9999
E30:Z007	E30:Z007	UA	UR	9999	UA9999	UR9999
E30:Z008	E30:Z008	UA	UR	9999	UA9999	UR9999
E30:Z009	E30:Z009	UA	UR	9999	UA9999	UR9999
E30:Z010	E30:Z010	UA	UR	9999	UA9999	UR9999
E30:Z011	E30:Z011	UA	UR	9999	UA9999	UR9999
E30:Z012	E30:Z012	UA	UR	9999	UA9999	UR9999
E30:Z013	E30:Z013	UA	UR	9999	UA9999	UR9999
E30:Z014	E30:Z014	UA	UR	9999	UA9999	UR9999
E30:Z015	E30:Z015	UA	UR	9999	UA9999	UR9999
E30:Z016	E30:Z016	UA	UR	9999	UA9999	UR9999
E30:Z017	E30:Z017	UA	UR	9999	UA9999	UR9999
E30:Z018	E30:Z018	UA	UR	9999	UA9999	UR9999
E30:Z019	E30:Z019	UA	UR	9999	UA9999	UR9999
E30:Z020	E30:Z020	UA	UR	9999	UA9999	UR9999
E30:Z021	E30:Z021	UA	UR	9999	UA9999	UR9999
E30:Z022	E30:Z022	UA	UR	9999	UA9999	UR9999
E30:Z023	E30:Z023	UA	UR	9999	UA9999	UR9999
E30:Z024	E30:Z024	UA	UR	9999	UA9999	UR9999
E30:Z025	E30:Z025	UA	UR	9999	UA9999	UR9999
E30:Z026	E30:Z026	UA	UR	9999	UA9999	UR9999
E30:Z027	E30:Z027	UA	UR	9999	UA9999	UR9999
E30:Z028	E30:Z028	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E30:Z029	E30:Z029	UA	UR	9999	UA9999	UR9999
E30:Z030	E30:Z030	UA	UR	9999	UA9999	UR9999
E30:Z031	E30:Z031	UA	UR	9999	UA9999	UR9999
E30:Z032	E30:Z032	UA	UR	9999	UA9999	UR9999
E30:S001	E30 Cab Tamper	TA	TR	9999	TA9999	TR9999
E30:S002	E30 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E30:S003	E30 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E30:S004	E30 AC fail	AT	AR	9999	AT9999	AR9999
E30:S005	E30 Low Batt	YT	YR	9999	YT9999	YR9999
E30:S006	E30 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E30:S007	E30 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E30:S008	E30 Low Volts	YP	YQ	9999	YP9999	YQ9999
E30:S009	E30 PS Fail	YP	YQ	9999	YP9999	YQ9999
E30:S010	E30 Batt Test	IA	IR	9999	IA9999	IR9999
E30:S011	E30 Spare1	UA	UR	9999	UA9999	UR9999
E30:S012	E30 Spare2	UA	UR	9999	UA9999	UR9999
E30:S013	E30 Spare3	UA	UR	9999	UA9999	UR9999
E30:S014	E30 Spare4	UA	UR	9999	UA9999	UR9999
E30:S015	E30 Spare5	UA	UR	9999	UA9999	UR9999
E30:S016	E30 Spare6	UA	UR	9999	UA9999	UR9999
E30:S017	E30 Spare7	UA	UR	9999	UA9999	UR9999
E30:S018	E30 Unibus	EM	EN	9999	EM9999	EN9999
E30:S019	E30 LAN Comms	EM	EN	9999	EM9999	EN9999
E30:S020	E30 Spare8	UA	UR	9999	UA9999	UR9999
E30:S021	E30 Spare9	UA	UR	9999	UA9999	UR9999
E31:Z001	E31:Z001	UA	UR	9999	UA9999	UR9999
E31:Z002	E31:Z002	UA	UR	9999	UA9999	UR9999
E31:Z003	E31:Z003	UA	UR	9999	UA9999	UR9999
E31:Z004	E31:Z004	UA	UR	9999	UA9999	UR9999
E31:Z005	E31:Z005	UA	UR	9999	UA9999	UR9999
E31:Z006	E31:Z006	UA	UR	9999	UA9999	UR9999
E31:Z007	E31:Z007	UA	UR	9999	UA9999	UR9999
E31:Z008	E31:Z008	UA	UR	9999	UA9999	UR9999
E31:Z009	E31:Z009	UA	UR	9999	UA9999	UR9999
E31:Z010	E31:Z010	UA	UR	9999	UA9999	UR9999
E31:Z011	E31:Z011	UA	UR	9999	UA9999	UR9999
E31:Z012	E31:Z012	UA	UR	9999	UA9999	UR9999
E31:Z013	E31:Z013	UA	UR	9999	UA9999	UR9999
E31:Z014	E31:Z014	UA	UR	9999	UA9999	UR9999
E31:Z015	E31:Z015	UA	UR	9999	UA9999	UR9999
E31:Z016	E31:Z016	UA	UR	9999	UA9999	UR9999
E31:Z017	E31:Z017	UA	UR	9999	UA9999	UR9999
E31:Z018	E31:Z018	UA	UR	9999	UA9999	UR9999
E31:Z019	E31:Z019	UA	UR	9999	UA9999	UR9999
E31:Z020	E31:Z020	UA	UR	9999	UA9999	UR9999
E31:Z021	E31:Z021	UA	UR	9999	UA9999	UR9999
E31:Z022	E31:Z022	UA	UR	9999	UA9999	UR9999
E31:Z023	E31:Z023	UA	UR	9999	UA9999	UR9999
E31:Z024	E31:Z024	UA	UR	9999	UA9999	UR9999
E31:Z025	E31:Z025	UA	UR	9999	UA9999	UR9999
E31:Z026	E31:Z026	UA	UR	9999	UA9999	UR9999
E31:Z027	E31:Z027	UA	UR	9999	UA9999	UR9999
E31:Z028	E31:Z028	UA	UR	9999	UA9999	UR9999
E31:Z029	E31:Z029	UA	UR	9999	UA9999	UR9999
E31:Z030	E31:Z030	UA	UR	9999	UA9999	UR9999
E31:Z031	E31:Z031	UA	UR	9999	UA9999	UR9999
E31:Z032	E31:Z032	UA	UR	9999	UA9999	UR9999
E31:S001	E31 Cab Tamper	TA	TR	9999	TA9999	TR9999
E31:S002	E31 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E31:S003	E31 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E31:S004	E31 AC fail	AT	AR	9999	AT9999	AR9999
E31:S005	E31 Low Batt	YT	YR	9999	YT9999	YR9999
E31:S006	E31 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E31:S007	E31 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E31:S008	E31 Low Volts	YP	YQ	9999	YP9999	YQ9999
E31:S009	E31 PS Fail	YP	YQ	9999	YP9999	YQ9999
E31:S010	E31 Batt Test	IA	IR	9999	IA9999	IR9999
E31:S011	E31 Spare1	UA	UR	9999	UA9999	UR9999
E31:S012	E31 Spare2	UA	UR	9999	UA9999	UR9999
E31:S013	E31 Spare3	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E31:S014	E31 Spare4	UA	UR	9999	UA9999	UR9999
E31:S015	E31 Spare5	UA	UR	9999	UA9999	UR9999
E31:S016	E31 Spare6	UA	UR	9999	UA9999	UR9999
E31:S017	E31 Spare7	UA	UR	9999	UA9999	UR9999
E31:S018	E31 Unibus	EM	EN	9999	EM9999	EN9999
E31:S019	E31 LAN Comms	EM	EN	9999	EM9999	EN9999
E31:S020	E31 Spare8	UA	UR	9999	UA9999	UR9999
E31:S021	E31 Spare9	UA	UR	9999	UA9999	UR9999
E32:Z001	E32:Z001	UA	UR	9999	UA9999	UR9999
E32:Z002	E32:Z002	UA	UR	9999	UA9999	UR9999
E32:Z003	E32:Z003	UA	UR	9999	UA9999	UR9999
E32:Z004	E32:Z004	UA	UR	9999	UA9999	UR9999
E32:Z005	E32:Z005	UA	UR	9999	UA9999	UR9999
E32:Z006	E32:Z006	UA	UR	9999	UA9999	UR9999
E32:Z007	E32:Z007	UA	UR	9999	UA9999	UR9999
E32:Z008	E32:Z008	UA	UR	9999	UA9999	UR9999
E32:Z009	E32:Z009	UA	UR	9999	UA9999	UR9999
E32:Z010	E32:Z010	UA	UR	9999	UA9999	UR9999
E32:Z011	E32:Z011	UA	UR	9999	UA9999	UR9999
E32:Z012	E32:Z012	UA	UR	9999	UA9999	UR9999
E32:Z013	E32:Z013	UA	UR	9999	UA9999	UR9999
E32:Z014	E32:Z014	UA	UR	9999	UA9999	UR9999
E32:Z015	E32:Z015	UA	UR	9999	UA9999	UR9999
E32:Z016	E32:Z016	UA	UR	9999	UA9999	UR9999
E32:Z017	E32:Z017	UA	UR	9999	UA9999	UR9999
E32:Z018	E32:Z018	UA	UR	9999	UA9999	UR9999
E32:Z019	E32:Z019	UA	UR	9999	UA9999	UR9999
E32:Z020	E32:Z020	UA	UR	9999	UA9999	UR9999
E32:Z021	E32:Z021	UA	UR	9999	UA9999	UR9999
E32:Z022	E32:Z022	UA	UR	9999	UA9999	UR9999
E32:Z023	E32:Z023	UA	UR	9999	UA9999	UR9999
E32:Z024	E32:Z024	UA	UR	9999	UA9999	UR9999
E32:Z025	E32:Z025	UA	UR	9999	UA9999	UR9999
E32:Z026	E32:Z026	UA	UR	9999	UA9999	UR9999
E32:Z027	E32:Z027	UA	UR	9999	UA9999	UR9999
E32:Z028	E32:Z028	UA	UR	9999	UA9999	UR9999
E32:Z029	E32:Z029	UA	UR	9999	UA9999	UR9999
E32:Z030	E32:Z030	UA	UR	9999	UA9999	UR9999
E32:Z031	E32:Z031	UA	UR	9999	UA9999	UR9999
E32:Z032	E32:Z032	UA	UR	9999	UA9999	UR9999
E32:S001	E32 Cab Tamper	TA	TR	9999	TA9999	TR9999
E32:S002	E32 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E32:S003	E32 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E32:S004	E32 AC fail	AT	AR	9999	AT9999	AR9999
E32:S005	E32 Low Batt	YT	YR	9999	YT9999	YR9999
E32:S006	E32 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E32:S007	E32 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E32:S008	E32 Low Volts	YP	YQ	9999	YP9999	YQ9999
E32:S009	E32 PS Fail	YP	YQ	9999	YP9999	YQ9999
E32:S010	E32 Batt Test	IA	IR	9999	IA9999	IR9999
E32:S011	E32 Spare1	UA	UR	9999	UA9999	UR9999
E32:S012	E32 Spare2	UA	UR	9999	UA9999	UR9999
E32:S013	E32 Spare3	UA	UR	9999	UA9999	UR9999
E32:S014	E32 Spare4	UA	UR	9999	UA9999	UR9999
E32:S015	E32 Spare5	UA	UR	9999	UA9999	UR9999
E32:S016	E32 Spare6	UA	UR	9999	UA9999	UR9999
E32:S017	E32 Spare7	UA	UR	9999	UA9999	UR9999
E32:S018	E32 Unibus	EM	EN	9999	EM9999	EN9999
E32:S019	E32 LAN Comms	EM	EN	9999	EM9999	EN9999
E32:S020	E32 Spare8	UA	UR	9999	UA9999	UR9999
E32:S021	E32 Spare9	UA	UR	9999	UA9999	UR9999
E33:Z001	E33:Z001	UA	UR	9999	UA9999	UR9999
E33:Z002	E33:Z002	UA	UR	9999	UA9999	UR9999
E33:Z003	E33:Z003	UA	UR	9999	UA9999	UR9999
E33:Z004	E33:Z004	UA	UR	9999	UA9999	UR9999
E33:Z005	E33:Z005	UA	UR	9999	UA9999	UR9999
E33:Z006	E33:Z006	UA	UR	9999	UA9999	UR9999
E33:Z007	E33:Z007	UA	UR	9999	UA9999	UR9999
E33:Z008	E33:Z008	UA	UR	9999	UA9999	UR9999
E33:Z009	E33:Z009	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E33:Z010	E33:Z010	UA	UR	9999	UA9999	UR9999
E33:Z011	E33:Z011	UA	UR	9999	UA9999	UR9999
E33:Z012	E33:Z012	UA	UR	9999	UA9999	UR9999
E33:Z013	E33:Z013	UA	UR	9999	UA9999	UR9999
E33:Z014	E33:Z014	UA	UR	9999	UA9999	UR9999
E33:Z015	E33:Z015	UA	UR	9999	UA9999	UR9999
E33:Z016	E33:Z016	UA	UR	9999	UA9999	UR9999
E33:Z017	E33:Z017	UA	UR	9999	UA9999	UR9999
E33:Z018	E33:Z018	UA	UR	9999	UA9999	UR9999
E33:Z019	E33:Z019	UA	UR	9999	UA9999	UR9999
E33:Z020	E33:Z020	UA	UR	9999	UA9999	UR9999
E33:Z021	E33:Z021	UA	UR	9999	UA9999	UR9999
E33:Z022	E33:Z022	UA	UR	9999	UA9999	UR9999
E33:Z023	E33:Z023	UA	UR	9999	UA9999	UR9999
E33:Z024	E33:Z024	UA	UR	9999	UA9999	UR9999
E33:Z025	E33:Z025	UA	UR	9999	UA9999	UR9999
E33:Z026	E33:Z026	UA	UR	9999	UA9999	UR9999
E33:Z027	E33:Z027	UA	UR	9999	UA9999	UR9999
E33:Z028	E33:Z028	UA	UR	9999	UA9999	UR9999
E33:Z029	E33:Z029	UA	UR	9999	UA9999	UR9999
E33:Z030	E33:Z030	UA	UR	9999	UA9999	UR9999
E33:Z031	E33:Z031	UA	UR	9999	UA9999	UR9999
E33:Z032	E33:Z032	UA	UR	9999	UA9999	UR9999
E33:S001	E33 Cab Tamper	TA	TR	9999	TA9999	TR9999
E33:S002	E33 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E33:S003	E33 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E33:S004	E33 AC fail	AT	AR	9999	AT9999	AR9999
E33:S005	E33 Low Batt	YT	YR	9999	YT9999	YR9999
E33:S006	E33 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E33:S007	E33 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E33:S008	E33 Low Volts	YP	YQ	9999	YP9999	YQ9999
E33:S009	E33 PS Fail	YP	YQ	9999	YP9999	YQ9999
E33:S010	E33 Batt Test	IA	IR	9999	IA9999	IR9999
E33:S011	E33 Spare1	UA	UR	9999	UA9999	UR9999
E33:S012	E33 Spare2	UA	UR	9999	UA9999	UR9999
E33:S013	E33 Spare3	UA	UR	9999	UA9999	UR9999
E33:S014	E33 Spare4	UA	UR	9999	UA9999	UR9999
E33:S015	E33 Spare5	UA	UR	9999	UA9999	UR9999
E33:S016	E33 Spare6	UA	UR	9999	UA9999	UR9999
E33:S017	E33 Spare7	UA	UR	9999	UA9999	UR9999
E33:S018	E33 Unibus	EM	EN	9999	EM9999	EN9999
E33:S019	E33 LAN Comms	EM	EN	9999	EM9999	EN9999
E33:S020	E33 Spare8	UA	UR	9999	UA9999	UR9999
E33:S021	E33 Spare9	UA	UR	9999	UA9999	UR9999
E34:Z001	E34:Z001	UA	UR	9999	UA9999	UR9999
E34:Z002	E34:Z002	UA	UR	9999	UA9999	UR9999
E34:Z003	E34:Z003	UA	UR	9999	UA9999	UR9999
E34:Z004	E34:Z004	UA	UR	9999	UA9999	UR9999
E34:Z005	E34:Z005	UA	UR	9999	UA9999	UR9999
E34:Z006	E34:Z006	UA	UR	9999	UA9999	UR9999
E34:Z007	E34:Z007	UA	UR	9999	UA9999	UR9999
E34:Z008	E34:Z008	UA	UR	9999	UA9999	UR9999
E34:Z009	E34:Z009	UA	UR	9999	UA9999	UR9999
E34:Z010	E34:Z010	UA	UR	9999	UA9999	UR9999
E34:Z011	E34:Z011	UA	UR	9999	UA9999	UR9999
E34:Z012	E34:Z012	UA	UR	9999	UA9999	UR9999
E34:Z013	E34:Z013	UA	UR	9999	UA9999	UR9999
E34:Z014	E34:Z014	UA	UR	9999	UA9999	UR9999
E34:Z015	E34:Z015	UA	UR	9999	UA9999	UR9999
E34:Z016	E34:Z016	UA	UR	9999	UA9999	UR9999
E34:Z017	E34:Z017	UA	UR	9999	UA9999	UR9999
E34:Z018	E34:Z018	UA	UR	9999	UA9999	UR9999
E34:Z019	E34:Z019	UA	UR	9999	UA9999	UR9999
E34:Z020	E34:Z020	UA	UR	9999	UA9999	UR9999
E34:Z021	E34:Z021	UA	UR	9999	UA9999	UR9999
E34:Z022	E34:Z022	UA	UR	9999	UA9999	UR9999
E34:Z023	E34:Z023	UA	UR	9999	UA9999	UR9999
E34:Z024	E34:Z024	UA	UR	9999	UA9999	UR9999
E34:Z025	E34:Z025	UA	UR	9999	UA9999	UR9999
E34:Z026	E34:Z026	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E34:Z027	E34:Z027	UA	UR	9999	UA9999	UR9999
E34:Z028	E34:Z028	UA	UR	9999	UA9999	UR9999
E34:Z029	E34:Z029	UA	UR	9999	UA9999	UR9999
E34:Z030	E34:Z030	UA	UR	9999	UA9999	UR9999
E34:Z031	E34:Z031	UA	UR	9999	UA9999	UR9999
E34:Z032	E34:Z032	UA	UR	9999	UA9999	UR9999
E34:S001	E34 Cab Tamper	TA	TR	9999	TA9999	TR9999
E34:S002	E34 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E34:S003	E34 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E34:S004	E34 AC fail	AT	AR	9999	AT9999	AR9999
E34:S005	E34 Low Batt	YT	YR	9999	YT9999	YR9999
E34:S006	E34 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E34:S007	E34 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E34:S008	E34 Low Volts	YP	YQ	9999	YP9999	YQ9999
E34:S009	E34 PS Fail	YP	YQ	9999	YP9999	YQ9999
E34:S010	E34 Batt Test	IA	IR	9999	IA9999	IR9999
E34:S011	E34 Spare1	UA	UR	9999	UA9999	UR9999
E34:S012	E34 Spare2	UA	UR	9999	UA9999	UR9999
E34:S013	E34 Spare3	UA	UR	9999	UA9999	UR9999
E34:S014	E34 Spare4	UA	UR	9999	UA9999	UR9999
E34:S015	E34 Spare5	UA	UR	9999	UA9999	UR9999
E34:S016	E34 Spare6	UA	UR	9999	UA9999	UR9999
E34:S017	E34 Spare7	UA	UR	9999	UA9999	UR9999
E34:S018	E34 Unibus	EM	EN	9999	EM9999	EN9999
E34:S019	E34 LAN Comms	EM	EN	9999	EM9999	EN9999
E34:S020	E34 Spare8	UA	UR	9999	UA9999	UR9999
E34:S021	E34 Spare9	UA	UR	9999	UA9999	UR9999
E35:Z001	E35:Z001	UA	UR	9999	UA9999	UR9999
E35:Z002	E35:Z002	UA	UR	9999	UA9999	UR9999
E35:Z003	E35:Z003	UA	UR	9999	UA9999	UR9999
E35:Z004	E35:Z004	UA	UR	9999	UA9999	UR9999
E35:Z005	E35:Z005	UA	UR	9999	UA9999	UR9999
E35:Z006	E35:Z006	UA	UR	9999	UA9999	UR9999
E35:Z007	E35:Z007	UA	UR	9999	UA9999	UR9999
E35:Z008	E35:Z008	UA	UR	9999	UA9999	UR9999
E35:Z009	E35:Z009	UA	UR	9999	UA9999	UR9999
E35:Z010	E35:Z010	UA	UR	9999	UA9999	UR9999
E35:Z011	E35:Z011	UA	UR	9999	UA9999	UR9999
E35:Z012	E35:Z012	UA	UR	9999	UA9999	UR9999
E35:Z013	E35:Z013	UA	UR	9999	UA9999	UR9999
E35:Z014	E35:Z014	UA	UR	9999	UA9999	UR9999
E35:Z015	E35:Z015	UA	UR	9999	UA9999	UR9999
E35:Z016	E35:Z016	UA	UR	9999	UA9999	UR9999
E35:Z017	E35:Z017	UA	UR	9999	UA9999	UR9999
E35:Z018	E35:Z018	UA	UR	9999	UA9999	UR9999
E35:Z019	E35:Z019	UA	UR	9999	UA9999	UR9999
E35:Z020	E35:Z020	UA	UR	9999	UA9999	UR9999
E35:Z021	E35:Z021	UA	UR	9999	UA9999	UR9999
E35:Z022	E35:Z022	UA	UR	9999	UA9999	UR9999
E35:Z023	E35:Z023	UA	UR	9999	UA9999	UR9999
E35:Z024	E35:Z024	UA	UR	9999	UA9999	UR9999
E35:Z025	E35:Z025	UA	UR	9999	UA9999	UR9999
E35:Z026	E35:Z026	UA	UR	9999	UA9999	UR9999
E35:Z027	E35:Z027	UA	UR	9999	UA9999	UR9999
E35:Z028	E35:Z028	UA	UR	9999	UA9999	UR9999
E35:Z029	E35:Z029	UA	UR	9999	UA9999	UR9999
E35:Z030	E35:Z030	UA	UR	9999	UA9999	UR9999
E35:Z031	E35:Z031	UA	UR	9999	UA9999	UR9999
E35:Z032	E35:Z032	UA	UR	9999	UA9999	UR9999
E35:S001	E35 Cab Tamper	TA	TR	9999	TA9999	TR9999
E35:S002	E35 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E35:S003	E35 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E35:S004	E35 AC fail	AT	AR	9999	AT9999	AR9999
E35:S005	E35 Low Batt	YT	YR	9999	YT9999	YR9999
E35:S006	E35 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E35:S007	E35 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E35:S008	E35 Low Volts	YP	YQ	9999	YP9999	YQ9999
E35:S009	E35 PS Fail	YP	YQ	9999	YP9999	YQ9999
E35:S010	E35 Batt Test	IA	IR	9999	IA9999	IR9999
E35:S011	E35 Spare1	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E35:S012	E35 Spare2	UA	UR	9999	UA9999	UR9999
E35:S013	E35 Spare3	UA	UR	9999	UA9999	UR9999
E35:S014	E35 Spare4	UA	UR	9999	UA9999	UR9999
E35:S015	E35 Spare5	UA	UR	9999	UA9999	UR9999
E35:S016	E35 Spare6	UA	UR	9999	UA9999	UR9999
E35:S017	E35 Spare7	UA	UR	9999	UA9999	UR9999
E35:S018	E35 Unibus	EM	EN	9999	EM9999	EN9999
E35:S019	E35 LAN Comms	EM	EN	9999	EM9999	EN9999
E35:S020	E35 Spare8	UA	UR	9999	UA9999	UR9999
E35:S021	E35 Spare9	UA	UR	9999	UA9999	UR9999
E36:Z001	E36:Z001	UA	UR	9999	UA9999	UR9999
E36:Z002	E36:Z002	UA	UR	9999	UA9999	UR9999
E36:Z003	E36:Z003	UA	UR	9999	UA9999	UR9999
E36:Z004	E36:Z004	UA	UR	9999	UA9999	UR9999
E36:Z005	E36:Z005	UA	UR	9999	UA9999	UR9999
E36:Z006	E36:Z006	UA	UR	9999	UA9999	UR9999
E36:Z007	E36:Z007	UA	UR	9999	UA9999	UR9999
E36:Z008	E36:Z008	UA	UR	9999	UA9999	UR9999
E36:Z009	E36:Z009	UA	UR	9999	UA9999	UR9999
E36:Z010	E36:Z010	UA	UR	9999	UA9999	UR9999
E36:Z011	E36:Z011	UA	UR	9999	UA9999	UR9999
E36:Z012	E36:Z012	UA	UR	9999	UA9999	UR9999
E36:Z013	E36:Z013	UA	UR	9999	UA9999	UR9999
E36:Z014	E36:Z014	UA	UR	9999	UA9999	UR9999
E36:Z015	E36:Z015	UA	UR	9999	UA9999	UR9999
E36:Z016	E36:Z016	UA	UR	9999	UA9999	UR9999
E36:Z017	E36:Z017	UA	UR	9999	UA9999	UR9999
E36:Z018	E36:Z018	UA	UR	9999	UA9999	UR9999
E36:Z019	E36:Z019	UA	UR	9999	UA9999	UR9999
E36:Z020	E36:Z020	UA	UR	9999	UA9999	UR9999
E36:Z021	E36:Z021	UA	UR	9999	UA9999	UR9999
E36:Z022	E36:Z022	UA	UR	9999	UA9999	UR9999
E36:Z023	E36:Z023	UA	UR	9999	UA9999	UR9999
E36:Z024	E36:Z024	UA	UR	9999	UA9999	UR9999
E36:Z025	E36:Z025	UA	UR	9999	UA9999	UR9999
E36:Z026	E36:Z026	UA	UR	9999	UA9999	UR9999
E36:Z027	E36:Z027	UA	UR	9999	UA9999	UR9999
E36:Z028	E36:Z028	UA	UR	9999	UA9999	UR9999
E36:Z029	E36:Z029	UA	UR	9999	UA9999	UR9999
E36:Z030	E36:Z030	UA	UR	9999	UA9999	UR9999
E36:Z031	E36:Z031	UA	UR	9999	UA9999	UR9999
E36:Z032	E36:Z032	UA	UR	9999	UA9999	UR9999
E36:S001	E36 Cab Tamper	TA	TR	9999	TA9999	TR9999
E36:S002	E36 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E36:S003	E36 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E36:S004	E36 AC fail	AT	AR	9999	AT9999	AR9999
E36:S005	E36 Low Batt	YT	YR	9999	YT9999	YR9999
E36:S006	E36 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E36:S007	E36 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E36:S008	E36 Low Volts	YP	YQ	9999	YP9999	YQ9999
E36:S009	E36 PS Fail	YP	YQ	9999	YP9999	YQ9999
E36:S010	E36 Batt Test	IA	IR	9999	IA9999	IR9999
E36:S011	E36 Spare1	UA	UR	9999	UA9999	UR9999
E36:S012	E36 Spare2	UA	UR	9999	UA9999	UR9999
E36:S013	E36 Spare3	UA	UR	9999	UA9999	UR9999
E36:S014	E36 Spare4	UA	UR	9999	UA9999	UR9999
E36:S015	E36 Spare5	UA	UR	9999	UA9999	UR9999
E36:S016	E36 Spare6	UA	UR	9999	UA9999	UR9999
E36:S017	E36 Spare7	UA	UR	9999	UA9999	UR9999
E36:S018	E36 Unibus	EM	EN	9999	EM9999	EN9999
E36:S019	E36 LAN Comms	EM	EN	9999	EM9999	EN9999
E36:S020	E36 Spare8	UA	UR	9999	UA9999	UR9999
E36:S021	E36 Spare9	UA	UR	9999	UA9999	UR9999
E37:Z001	E37:Z001	UA	UR	9999	UA9999	UR9999
E37:Z002	E37:Z002	UA	UR	9999	UA9999	UR9999
E37:Z003	E37:Z003	UA	UR	9999	UA9999	UR9999
E37:Z004	E37:Z004	UA	UR	9999	UA9999	UR9999
E37:Z005	E37:Z005	UA	UR	9999	UA9999	UR9999
E37:Z006	E37:Z006	UA	UR	9999	UA9999	UR9999
E37:Z007	E37:Z007	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E37:Z008	E37:Z008	UA	UR	9999	UA9999	UR9999
E37:Z009	E37:Z009	UA	UR	9999	UA9999	UR9999
E37:Z010	E37:Z010	UA	UR	9999	UA9999	UR9999
E37:Z011	E37:Z011	UA	UR	9999	UA9999	UR9999
E37:Z012	E37:Z012	UA	UR	9999	UA9999	UR9999
E37:Z013	E37:Z013	UA	UR	9999	UA9999	UR9999
E37:Z014	E37:Z014	UA	UR	9999	UA9999	UR9999
E37:Z015	E37:Z015	UA	UR	9999	UA9999	UR9999
E37:Z016	E37:Z016	UA	UR	9999	UA9999	UR9999
E37:Z017	E37:Z017	UA	UR	9999	UA9999	UR9999
E37:Z018	E37:Z018	UA	UR	9999	UA9999	UR9999
E37:Z019	E37:Z019	UA	UR	9999	UA9999	UR9999
E37:Z020	E37:Z020	UA	UR	9999	UA9999	UR9999
E37:Z021	E37:Z021	UA	UR	9999	UA9999	UR9999
E37:Z022	E37:Z022	UA	UR	9999	UA9999	UR9999
E37:Z023	E37:Z023	UA	UR	9999	UA9999	UR9999
E37:Z024	E37:Z024	UA	UR	9999	UA9999	UR9999
E37:Z025	E37:Z025	UA	UR	9999	UA9999	UR9999
E37:Z026	E37:Z026	UA	UR	9999	UA9999	UR9999
E37:Z027	E37:Z027	UA	UR	9999	UA9999	UR9999
E37:Z028	E37:Z028	UA	UR	9999	UA9999	UR9999
E37:Z029	E37:Z029	UA	UR	9999	UA9999	UR9999
E37:Z030	E37:Z030	UA	UR	9999	UA9999	UR9999
E37:Z031	E37:Z031	UA	UR	9999	UA9999	UR9999
E37:Z032	E37:Z032	UA	UR	9999	UA9999	UR9999
E37:S001	E37 Cab Tamper	TA	TR	9999	TA9999	TR9999
E37:S002	E37 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E37:S003	E37 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E37:S004	E37 AC fail	AT	AR	9999	AT9999	AR9999
E37:S005	E37 Low Batt	YT	YR	9999	YT9999	YR9999
E37:S006	E37 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E37:S007	E37 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E37:S008	E37 Low Volts	YP	YQ	9999	YP9999	YQ9999
E37:S009	E37 PS Fail	YP	YQ	9999	YP9999	YQ9999
E37:S010	E37 Batt Test	IA	IR	9999	IA9999	IR9999
E37:S011	E37 Spare1	UA	UR	9999	UA9999	UR9999
E37:S012	E37 Spare2	UA	UR	9999	UA9999	UR9999
E37:S013	E37 Spare3	UA	UR	9999	UA9999	UR9999
E37:S014	E37 Spare4	UA	UR	9999	UA9999	UR9999
E37:S015	E37 Spare5	UA	UR	9999	UA9999	UR9999
E37:S016	E37 Spare6	UA	UR	9999	UA9999	UR9999
E37:S017	E37 Spare7	UA	UR	9999	UA9999	UR9999
E37:S018	E37 Unibus	EM	EN	9999	EM9999	EN9999
E37:S019	E37 LAN Comms	EM	EN	9999	EM9999	EN9999
E37:S020	E37 Spare8	UA	UR	9999	UA9999	UR9999
E37:S021	E37 Spare9	UA	UR	9999	UA9999	UR9999
E38:Z001	E38:Z001	UA	UR	9999	UA9999	UR9999
E38:Z002	E38:Z002	UA	UR	9999	UA9999	UR9999
E38:Z003	E38:Z003	UA	UR	9999	UA9999	UR9999
E38:Z004	E38:Z004	UA	UR	9999	UA9999	UR9999
E38:Z005	E38:Z005	UA	UR	9999	UA9999	UR9999
E38:Z006	E38:Z006	UA	UR	9999	UA9999	UR9999
E38:Z007	E38:Z007	UA	UR	9999	UA9999	UR9999
E38:Z008	E38:Z008	UA	UR	9999	UA9999	UR9999
E38:Z009	E38:Z009	UA	UR	9999	UA9999	UR9999
E38:Z010	E38:Z010	UA	UR	9999	UA9999	UR9999
E38:Z011	E38:Z011	UA	UR	9999	UA9999	UR9999
E38:Z012	E38:Z012	UA	UR	9999	UA9999	UR9999
E38:Z013	E38:Z013	UA	UR	9999	UA9999	UR9999
E38:Z014	E38:Z014	UA	UR	9999	UA9999	UR9999
E38:Z015	E38:Z015	UA	UR	9999	UA9999	UR9999
E38:Z016	E38:Z016	UA	UR	9999	UA9999	UR9999
E38:Z017	E38:Z017	UA	UR	9999	UA9999	UR9999
E38:Z018	E38:Z018	UA	UR	9999	UA9999	UR9999
E38:Z019	E38:Z019	UA	UR	9999	UA9999	UR9999
E38:Z020	E38:Z020	UA	UR	9999	UA9999	UR9999
E38:Z021	E38:Z021	UA	UR	9999	UA9999	UR9999
E38:Z022	E38:Z022	UA	UR	9999	UA9999	UR9999
E38:Z023	E38:Z023	UA	UR	9999	UA9999	UR9999
E38:Z024	E38:Z024	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E38:Z025	E38:Z025	UA	UR	9999	UA9999	UR9999
E38:Z026	E38:Z026	UA	UR	9999	UA9999	UR9999
E38:Z027	E38:Z027	UA	UR	9999	UA9999	UR9999
E38:Z028	E38:Z028	UA	UR	9999	UA9999	UR9999
E38:Z029	E38:Z029	UA	UR	9999	UA9999	UR9999
E38:Z030	E38:Z030	UA	UR	9999	UA9999	UR9999
E38:Z031	E38:Z031	UA	UR	9999	UA9999	UR9999
E38:Z032	E38:Z032	UA	UR	9999	UA9999	UR9999
E38:S001	E38 Cab Tamper	TA	TR	9999	TA9999	TR9999
E38:S002	E38 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E38:S003	E38 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E38:S004	E38 AC fail	AT	AR	9999	AT9999	AR9999
E38:S005	E38 Low Batt	YT	YR	9999	YT9999	YR9999
E38:S006	E38 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E38:S007	E38 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E38:S008	E38 Low Volts	YP	YQ	9999	YP9999	YQ9999
E38:S009	E38 PS Fail	YP	YQ	9999	YP9999	YQ9999
E38:S010	E38 Batt Test	IA	IR	9999	IA9999	IR9999
E38:S011	E38 Spare1	UA	UR	9999	UA9999	UR9999
E38:S012	E38 Spare2	UA	UR	9999	UA9999	UR9999
E38:S013	E38 Spare3	UA	UR	9999	UA9999	UR9999
E38:S014	E38 Spare4	UA	UR	9999	UA9999	UR9999
E38:S015	E38 Spare5	UA	UR	9999	UA9999	UR9999
E38:S016	E38 Spare6	UA	UR	9999	UA9999	UR9999
E38:S017	E38 Spare7	UA	UR	9999	UA9999	UR9999
E38:S018	E38 Unibus	EM	EN	9999	EM9999	EN9999
E38:S019	E38 LAN Comms	EM	EN	9999	EM9999	EN9999
E38:S020	E38 Spare8	UA	UR	9999	UA9999	UR9999
E38:S021	E38 Spare9	UA	UR	9999	UA9999	UR9999
E39:Z001	E39:Z001	UA	UR	9999	UA9999	UR9999
E39:Z002	E39:Z002	UA	UR	9999	UA9999	UR9999
E39:Z003	E39:Z003	UA	UR	9999	UA9999	UR9999
E39:Z004	E39:Z004	UA	UR	9999	UA9999	UR9999
E39:Z005	E39:Z005	UA	UR	9999	UA9999	UR9999
E39:Z006	E39:Z006	UA	UR	9999	UA9999	UR9999
E39:Z007	E39:Z007	UA	UR	9999	UA9999	UR9999
E39:Z008	E39:Z008	UA	UR	9999	UA9999	UR9999
E39:Z009	E39:Z009	UA	UR	9999	UA9999	UR9999
E39:Z010	E39:Z010	UA	UR	9999	UA9999	UR9999
E39:Z011	E39:Z011	UA	UR	9999	UA9999	UR9999
E39:Z012	E39:Z012	UA	UR	9999	UA9999	UR9999
E39:Z013	E39:Z013	UA	UR	9999	UA9999	UR9999
E39:Z014	E39:Z014	UA	UR	9999	UA9999	UR9999
E39:Z015	E39:Z015	UA	UR	9999	UA9999	UR9999
E39:Z016	E39:Z016	UA	UR	9999	UA9999	UR9999
E39:Z017	E39:Z017	UA	UR	9999	UA9999	UR9999
E39:Z018	E39:Z018	UA	UR	9999	UA9999	UR9999
E39:Z019	E39:Z019	UA	UR	9999	UA9999	UR9999
E39:Z020	E39:Z020	UA	UR	9999	UA9999	UR9999
E39:Z021	E39:Z021	UA	UR	9999	UA9999	UR9999
E39:Z022	E39:Z022	UA	UR	9999	UA9999	UR9999
E39:Z023	E39:Z023	UA	UR	9999	UA9999	UR9999
E39:Z024	E39:Z024	UA	UR	9999	UA9999	UR9999
E39:Z025	E39:Z025	UA	UR	9999	UA9999	UR9999
E39:Z026	E39:Z026	UA	UR	9999	UA9999	UR9999
E39:Z027	E39:Z027	UA	UR	9999	UA9999	UR9999
E39:Z028	E39:Z028	UA	UR	9999	UA9999	UR9999
E39:Z029	E39:Z029	UA	UR	9999	UA9999	UR9999
E39:Z030	E39:Z030	UA	UR	9999	UA9999	UR9999
E39:Z031	E39:Z031	UA	UR	9999	UA9999	UR9999
E39:Z032	E39:Z032	UA	UR	9999	UA9999	UR9999
E39:S001	E39 Cab Tamper	TA	TR	9999	TA9999	TR9999
E39:S002	E39 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E39:S003	E39 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E39:S004	E39 AC fail	AT	AR	9999	AT9999	AR9999
E39:S005	E39 Low Batt	YT	YR	9999	YT9999	YR9999
E39:S006	E39 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E39:S007	E39 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E39:S008	E39 Low Volts	YP	YQ	9999	YP9999	YQ9999
E39:S009	E39 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

E39:S010	E39 Batt Test	IA	IR	9999	IA9999	IR9999
E39:S011	E39 Spare1	UA	UR	9999	UA9999	UR9999
E39:S012	E39 Spare2	UA	UR	9999	UA9999	UR9999
E39:S013	E39 Spare3	UA	UR	9999	UA9999	UR9999
E39:S014	E39 Spare4	UA	UR	9999	UA9999	UR9999
E39:S015	E39 Spare5	UA	UR	9999	UA9999	UR9999
E39:S016	E39 Spare6	UA	UR	9999	UA9999	UR9999
E39:S017	E39 Spare7	UA	UR	9999	UA9999	UR9999
E39:S018	E39 Unibus	EM	EN	9999	EM9999	EN9999
E39:S019	E39 LAN Comms	EM	EN	9999	EM9999	EN9999
E39:S020	E39 Spare8	UA	UR	9999	UA9999	UR9999
E39:S021	E39 Spare9	UA	UR	9999	UA9999	UR9999
E40:Z001	E40:Z001	UA	UR	9999	UA9999	UR9999
E40:Z002	E40:Z002	UA	UR	9999	UA9999	UR9999
E40:Z003	E40:Z003	UA	UR	9999	UA9999	UR9999
E40:Z004	E40:Z004	UA	UR	9999	UA9999	UR9999
E40:Z005	E40:Z005	UA	UR	9999	UA9999	UR9999
E40:Z006	E40:Z006	UA	UR	9999	UA9999	UR9999
E40:Z007	E40:Z007	UA	UR	9999	UA9999	UR9999
E40:Z008	E40:Z008	UA	UR	9999	UA9999	UR9999
E40:Z009	E40:Z009	UA	UR	9999	UA9999	UR9999
E40:Z010	E40:Z010	UA	UR	9999	UA9999	UR9999
E40:Z011	E40:Z011	UA	UR	9999	UA9999	UR9999
E40:Z012	E40:Z012	UA	UR	9999	UA9999	UR9999
E40:Z013	E40:Z013	UA	UR	9999	UA9999	UR9999
E40:Z014	E40:Z014	UA	UR	9999	UA9999	UR9999
E40:Z015	E40:Z015	UA	UR	9999	UA9999	UR9999
E40:Z016	E40:Z016	UA	UR	9999	UA9999	UR9999
E40:Z017	E40:Z017	UA	UR	9999	UA9999	UR9999
E40:Z018	E40:Z018	UA	UR	9999	UA9999	UR9999
E40:Z019	E40:Z019	UA	UR	9999	UA9999	UR9999
E40:Z020	E40:Z020	UA	UR	9999	UA9999	UR9999
E40:Z021	E40:Z021	UA	UR	9999	UA9999	UR9999
E40:Z022	E40:Z022	UA	UR	9999	UA9999	UR9999
E40:Z023	E40:Z023	UA	UR	9999	UA9999	UR9999
E40:Z024	E40:Z024	UA	UR	9999	UA9999	UR9999
E40:Z025	E40:Z025	UA	UR	9999	UA9999	UR9999
E40:Z026	E40:Z026	UA	UR	9999	UA9999	UR9999
E40:Z027	E40:Z027	UA	UR	9999	UA9999	UR9999
E40:Z028	E40:Z028	UA	UR	9999	UA9999	UR9999
E40:Z029	E40:Z029	UA	UR	9999	UA9999	UR9999
E40:Z030	E40:Z030	UA	UR	9999	UA9999	UR9999
E40:Z031	E40:Z031	UA	UR	9999	UA9999	UR9999
E40:Z032	E40:Z032	UA	UR	9999	UA9999	UR9999
E40:S001	E40 Cab Tamper	TA	TR	9999	TA9999	TR9999
E40:S002	E40 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E40:S003	E40 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E40:S004	E40 AC fail	AT	AR	9999	AT9999	AR9999
E40:S005	E40 Low Batt	YT	YR	9999	YT9999	YR9999
E40:S006	E40 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E40:S007	E40 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E40:S008	E40 Low Volts	YP	YQ	9999	YP9999	YQ9999
E40:S009	E40 PS Fail	YP	YQ	9999	YP9999	YQ9999
E40:S010	E40 Batt Test	IA	IR	9999	IA9999	IR9999
E40:S011	E40 Spare1	UA	UR	9999	UA9999	UR9999
E40:S012	E40 Spare2	UA	UR	9999	UA9999	UR9999
E40:S013	E40 Spare3	UA	UR	9999	UA9999	UR9999
E40:S014	E40 Spare4	UA	UR	9999	UA9999	UR9999
E40:S015	E40 Spare5	UA	UR	9999	UA9999	UR9999
E40:S016	E40 Spare6	UA	UR	9999	UA9999	UR9999
E40:S017	E40 Spare7	UA	UR	9999	UA9999	UR9999
E40:S018	E40 Unibus	EM	EN	9999	EM9999	EN9999
E40:S019	E40 LAN Comms	EM	EN	9999	EM9999	EN9999
E40:S020	E40 Spare8	UA	UR	9999	UA9999	UR9999
E40:S021	E40 Spare9	UA	UR	9999	UA9999	UR9999
E41:Z001	E41:Z001	UA	UR	9999	UA9999	UR9999
E41:Z002	E41:Z002	UA	UR	9999	UA9999	UR9999
E41:Z003	E41:Z003	UA	UR	9999	UA9999	UR9999
E41:Z004	E41:Z004	UA	UR	9999	UA9999	UR9999
E41:Z005	E41:Z005	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E41:Z006	E41:Z006	UA	UR	9999	UA9999	UR9999
E41:Z007	E41:Z007	UA	UR	9999	UA9999	UR9999
E41:Z008	E41:Z008	UA	UR	9999	UA9999	UR9999
E41:Z009	E41:Z009	UA	UR	9999	UA9999	UR9999
E41:Z010	E41:Z010	UA	UR	9999	UA9999	UR9999
E41:Z011	E41:Z011	UA	UR	9999	UA9999	UR9999
E41:Z012	E41:Z012	UA	UR	9999	UA9999	UR9999
E41:Z013	E41:Z013	UA	UR	9999	UA9999	UR9999
E41:Z014	E41:Z014	UA	UR	9999	UA9999	UR9999
E41:Z015	E41:Z015	UA	UR	9999	UA9999	UR9999
E41:Z016	E41:Z016	UA	UR	9999	UA9999	UR9999
E41:Z017	E41:Z017	UA	UR	9999	UA9999	UR9999
E41:Z018	E41:Z018	UA	UR	9999	UA9999	UR9999
E41:Z019	E41:Z019	UA	UR	9999	UA9999	UR9999
E41:Z020	E41:Z020	UA	UR	9999	UA9999	UR9999
E41:Z021	E41:Z021	UA	UR	9999	UA9999	UR9999
E41:Z022	E41:Z022	UA	UR	9999	UA9999	UR9999
E41:Z023	E41:Z023	UA	UR	9999	UA9999	UR9999
E41:Z024	E41:Z024	UA	UR	9999	UA9999	UR9999
E41:Z025	E41:Z025	UA	UR	9999	UA9999	UR9999
E41:Z026	E41:Z026	UA	UR	9999	UA9999	UR9999
E41:Z027	E41:Z027	UA	UR	9999	UA9999	UR9999
E41:Z028	E41:Z028	UA	UR	9999	UA9999	UR9999
E41:Z029	E41:Z029	UA	UR	9999	UA9999	UR9999
E41:Z030	E41:Z030	UA	UR	9999	UA9999	UR9999
E41:Z031	E41:Z031	UA	UR	9999	UA9999	UR9999
E41:Z032	E41:Z032	UA	UR	9999	UA9999	UR9999
E41:S001	E41 Cab Tamper	TA	TR	9999	TA9999	TR9999
E41:S002	E41 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E41:S003	E41 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E41:S004	E41 AC fail	AT	AR	9999	AT9999	AR9999
E41:S005	E41 Low Batt	YT	YR	9999	YT9999	YR9999
E41:S006	E41 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E41:S007	E41 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E41:S008	E41 Low Volts	YP	YQ	9999	YP9999	YQ9999
E41:S009	E41 PS Fail	YP	YQ	9999	YP9999	YQ9999
E41:S010	E41 Batt Test	IA	IR	9999	IA9999	IR9999
E41:S011	E41 Spare1	UA	UR	9999	UA9999	UR9999
E41:S012	E41 Spare2	UA	UR	9999	UA9999	UR9999
E41:S013	E41 Spare3	UA	UR	9999	UA9999	UR9999
E41:S014	E41 Spare4	UA	UR	9999	UA9999	UR9999
E41:S015	E41 Spare5	UA	UR	9999	UA9999	UR9999
E41:S016	E41 Spare6	UA	UR	9999	UA9999	UR9999
E41:S017	E41 Spare7	UA	UR	9999	UA9999	UR9999
E41:S018	E41 Unibus	EM	EN	9999	EM9999	EN9999
E41:S019	E41 LAN Comms	EM	EN	9999	EM9999	EN9999
E41:S020	E41 Spare8	UA	UR	9999	UA9999	UR9999
E41:S021	E41 Spare9	UA	UR	9999	UA9999	UR9999
E42:Z001	E42:Z001	UA	UR	9999	UA9999	UR9999
E42:Z002	E42:Z002	UA	UR	9999	UA9999	UR9999
E42:Z003	E42:Z003	UA	UR	9999	UA9999	UR9999
E42:Z004	E42:Z004	UA	UR	9999	UA9999	UR9999
E42:Z005	E42:Z005	UA	UR	9999	UA9999	UR9999
E42:Z006	E42:Z006	UA	UR	9999	UA9999	UR9999
E42:Z007	E42:Z007	UA	UR	9999	UA9999	UR9999
E42:Z008	E42:Z008	UA	UR	9999	UA9999	UR9999
E42:Z009	E42:Z009	UA	UR	9999	UA9999	UR9999
E42:Z010	E42:Z010	UA	UR	9999	UA9999	UR9999
E42:Z011	E42:Z011	UA	UR	9999	UA9999	UR9999
E42:Z012	E42:Z012	UA	UR	9999	UA9999	UR9999
E42:Z013	E42:Z013	UA	UR	9999	UA9999	UR9999
E42:Z014	E42:Z014	UA	UR	9999	UA9999	UR9999
E42:Z015	E42:Z015	UA	UR	9999	UA9999	UR9999
E42:Z016	E42:Z016	UA	UR	9999	UA9999	UR9999
E42:Z017	E42:Z017	UA	UR	9999	UA9999	UR9999
E42:Z018	E42:Z018	UA	UR	9999	UA9999	UR9999
E42:Z019	E42:Z019	UA	UR	9999	UA9999	UR9999
E42:Z020	E42:Z020	UA	UR	9999	UA9999	UR9999
E42:Z021	E42:Z021	UA	UR	9999	UA9999	UR9999
E42:Z022	E42:Z022	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E42:Z023	E42:Z023	UA	UR	9999	UA9999	UR9999
E42:Z024	E42:Z024	UA	UR	9999	UA9999	UR9999
E42:Z025	E42:Z025	UA	UR	9999	UA9999	UR9999
E42:Z026	E42:Z026	UA	UR	9999	UA9999	UR9999
E42:Z027	E42:Z027	UA	UR	9999	UA9999	UR9999
E42:Z028	E42:Z028	UA	UR	9999	UA9999	UR9999
E42:Z029	E42:Z029	UA	UR	9999	UA9999	UR9999
E42:Z030	E42:Z030	UA	UR	9999	UA9999	UR9999
E42:Z031	E42:Z031	UA	UR	9999	UA9999	UR9999
E42:Z032	E42:Z032	UA	UR	9999	UA9999	UR9999
E42:S001	E42 Cab Tamper	TA	TR	9999	TA9999	TR9999
E42:S002	E42 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E42:S003	E42 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E42:S004	E42 AC fail	AT	AR	9999	AT9999	AR9999
E42:S005	E42 Low Batt	YT	YR	9999	YT9999	YR9999
E42:S006	E42 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E42:S007	E42 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E42:S008	E42 Low Volts	YP	YQ	9999	YP9999	YQ9999
E42:S009	E42 PS Fail	YP	YQ	9999	YP9999	YQ9999
E42:S010	E42 Batt Test	IA	IR	9999	IA9999	IR9999
E42:S011	E42 Spare1	UA	UR	9999	UA9999	UR9999
E42:S012	E42 Spare2	UA	UR	9999	UA9999	UR9999
E42:S013	E42 Spare3	UA	UR	9999	UA9999	UR9999
E42:S014	E42 Spare4	UA	UR	9999	UA9999	UR9999
E42:S015	E42 Spare5	UA	UR	9999	UA9999	UR9999
E42:S016	E42 Spare6	UA	UR	9999	UA9999	UR9999
E42:S017	E42 Spare7	UA	UR	9999	UA9999	UR9999
E42:S018	E42 Unibus	EM	EN	9999	EM9999	EN9999
E42:S019	E42 LAN Comms	EM	EN	9999	EM9999	EN9999
E42:S020	E42 Spare8	UA	UR	9999	UA9999	UR9999
E42:S021	E42 Spare9	UA	UR	9999	UA9999	UR9999
E43:Z001	E43:Z001	UA	UR	9999	UA9999	UR9999
E43:Z002	E43:Z002	UA	UR	9999	UA9999	UR9999
E43:Z003	E43:Z003	UA	UR	9999	UA9999	UR9999
E43:Z004	E43:Z004	UA	UR	9999	UA9999	UR9999
E43:Z005	E43:Z005	UA	UR	9999	UA9999	UR9999
E43:Z006	E43:Z006	UA	UR	9999	UA9999	UR9999
E43:Z007	E43:Z007	UA	UR	9999	UA9999	UR9999
E43:Z008	E43:Z008	UA	UR	9999	UA9999	UR9999
E43:Z009	E43:Z009	UA	UR	9999	UA9999	UR9999
E43:Z010	E43:Z010	UA	UR	9999	UA9999	UR9999
E43:Z011	E43:Z011	UA	UR	9999	UA9999	UR9999
E43:Z012	E43:Z012	UA	UR	9999	UA9999	UR9999
E43:Z013	E43:Z013	UA	UR	9999	UA9999	UR9999
E43:Z014	E43:Z014	UA	UR	9999	UA9999	UR9999
E43:Z015	E43:Z015	UA	UR	9999	UA9999	UR9999
E43:Z016	E43:Z016	UA	UR	9999	UA9999	UR9999
E43:Z017	E43:Z017	UA	UR	9999	UA9999	UR9999
E43:Z018	E43:Z018	UA	UR	9999	UA9999	UR9999
E43:Z019	E43:Z019	UA	UR	9999	UA9999	UR9999
E43:Z020	E43:Z020	UA	UR	9999	UA9999	UR9999
E43:Z021	E43:Z021	UA	UR	9999	UA9999	UR9999
E43:Z022	E43:Z022	UA	UR	9999	UA9999	UR9999
E43:Z023	E43:Z023	UA	UR	9999	UA9999	UR9999
E43:Z024	E43:Z024	UA	UR	9999	UA9999	UR9999
E43:Z025	E43:Z025	UA	UR	9999	UA9999	UR9999
E43:Z026	E43:Z026	UA	UR	9999	UA9999	UR9999
E43:Z027	E43:Z027	UA	UR	9999	UA9999	UR9999
E43:Z028	E43:Z028	UA	UR	9999	UA9999	UR9999
E43:Z029	E43:Z029	UA	UR	9999	UA9999	UR9999
E43:Z030	E43:Z030	UA	UR	9999	UA9999	UR9999
E43:Z031	E43:Z031	UA	UR	9999	UA9999	UR9999
E43:Z032	E43:Z032	UA	UR	9999	UA9999	UR9999
E43:S001	E43 Cab Tamper	TA	TR	9999	TA9999	TR9999
E43:S002	E43 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E43:S003	E43 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E43:S004	E43 AC fail	AT	AR	9999	AT9999	AR9999
E43:S005	E43 Low Batt	YT	YR	9999	YT9999	YR9999
E43:S006	E43 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E43:S007	E43 DET Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

E43:S008	E43 Low Volts	YP	YQ	9999	YP9999	YQ9999
E43:S009	E43 PS Fail	YP	YQ	9999	YP9999	YQ9999
E43:S010	E43 Batt Test	IA	IR	9999	IA9999	IR9999
E43:S011	E43 Spare1	UA	UR	9999	UA9999	UR9999
E43:S012	E43 Spare2	UA	UR	9999	UA9999	UR9999
E43:S013	E43 Spare3	UA	UR	9999	UA9999	UR9999
E43:S014	E43 Spare4	UA	UR	9999	UA9999	UR9999
E43:S015	E43 Spare5	UA	UR	9999	UA9999	UR9999
E43:S016	E43 Spare6	UA	UR	9999	UA9999	UR9999
E43:S017	E43 Spare7	UA	UR	9999	UA9999	UR9999
E43:S018	E43 Unibus	EM	EN	9999	EM9999	EN9999
E43:S019	E43 LAN Comms	EM	EN	9999	EM9999	EN9999
E43:S020	E43 Spare8	UA	UR	9999	UA9999	UR9999
E43:S021	E43 Spare9	UA	UR	9999	UA9999	UR9999
E44:Z001	E44:Z001	UA	UR	9999	UA9999	UR9999
E44:Z002	E44:Z002	UA	UR	9999	UA9999	UR9999
E44:Z003	E44:Z003	UA	UR	9999	UA9999	UR9999
E44:Z004	E44:Z004	UA	UR	9999	UA9999	UR9999
E44:Z005	E44:Z005	UA	UR	9999	UA9999	UR9999
E44:Z006	E44:Z006	UA	UR	9999	UA9999	UR9999
E44:Z007	E44:Z007	UA	UR	9999	UA9999	UR9999
E44:Z008	E44:Z008	UA	UR	9999	UA9999	UR9999
E44:Z009	E44:Z009	UA	UR	9999	UA9999	UR9999
E44:Z010	E44:Z010	UA	UR	9999	UA9999	UR9999
E44:Z011	E44:Z011	UA	UR	9999	UA9999	UR9999
E44:Z012	E44:Z012	UA	UR	9999	UA9999	UR9999
E44:Z013	E44:Z013	UA	UR	9999	UA9999	UR9999
E44:Z014	E44:Z014	UA	UR	9999	UA9999	UR9999
E44:Z015	E44:Z015	UA	UR	9999	UA9999	UR9999
E44:Z016	E44:Z016	UA	UR	9999	UA9999	UR9999
E44:Z017	E44:Z017	UA	UR	9999	UA9999	UR9999
E44:Z018	E44:Z018	UA	UR	9999	UA9999	UR9999
E44:Z019	E44:Z019	UA	UR	9999	UA9999	UR9999
E44:Z020	E44:Z020	UA	UR	9999	UA9999	UR9999
E44:Z021	E44:Z021	UA	UR	9999	UA9999	UR9999
E44:Z022	E44:Z022	UA	UR	9999	UA9999	UR9999
E44:Z023	E44:Z023	UA	UR	9999	UA9999	UR9999
E44:Z024	E44:Z024	UA	UR	9999	UA9999	UR9999
E44:Z025	E44:Z025	UA	UR	9999	UA9999	UR9999
E44:Z026	E44:Z026	UA	UR	9999	UA9999	UR9999
E44:Z027	E44:Z027	UA	UR	9999	UA9999	UR9999
E44:Z028	E44:Z028	UA	UR	9999	UA9999	UR9999
E44:Z029	E44:Z029	UA	UR	9999	UA9999	UR9999
E44:Z030	E44:Z030	UA	UR	9999	UA9999	UR9999
E44:Z031	E44:Z031	UA	UR	9999	UA9999	UR9999
E44:Z032	E44:Z032	UA	UR	9999	UA9999	UR9999
E44:S001	E44 Cab Tamper	TA	TR	9999	TA9999	TR9999
E44:S002	E44 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E44:S003	E44 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E44:S004	E44 AC fail	AT	AR	9999	AT9999	AR9999
E44:S005	E44 Low Batt	YT	YR	9999	YT9999	YR9999
E44:S006	E44 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E44:S007	E44 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E44:S008	E44 Low Volts	YP	YQ	9999	YP9999	YQ9999
E44:S009	E44 PS Fail	YP	YQ	9999	YP9999	YQ9999
E44:S010	E44 Batt Test	IA	IR	9999	IA9999	IR9999
E44:S011	E44 Spare1	UA	UR	9999	UA9999	UR9999
E44:S012	E44 Spare2	UA	UR	9999	UA9999	UR9999
E44:S013	E44 Spare3	UA	UR	9999	UA9999	UR9999
E44:S014	E44 Spare4	UA	UR	9999	UA9999	UR9999
E44:S015	E44 Spare5	UA	UR	9999	UA9999	UR9999
E44:S016	E44 Spare6	UA	UR	9999	UA9999	UR9999
E44:S017	E44 Spare7	UA	UR	9999	UA9999	UR9999
E44:S018	E44 Unibus	EM	EN	9999	EM9999	EN9999
E44:S019	E44 LAN Comms	EM	EN	9999	EM9999	EN9999
E44:S020	E44 Spare8	UA	UR	9999	UA9999	UR9999
E44:S021	E44 Spare9	UA	UR	9999	UA9999	UR9999
E45:Z001	E45:Z001	UA	UR	9999	UA9999	UR9999
E45:Z002	E45:Z002	UA	UR	9999	UA9999	UR9999
E45:Z003	E45:Z003	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E45:Z004	E45:Z004	UA	UR	9999	UA9999	UR9999
E45:Z005	E45:Z005	UA	UR	9999	UA9999	UR9999
E45:Z006	E45:Z006	UA	UR	9999	UA9999	UR9999
E45:Z007	E45:Z007	UA	UR	9999	UA9999	UR9999
E45:Z008	E45:Z008	UA	UR	9999	UA9999	UR9999
E45:Z009	E45:Z009	UA	UR	9999	UA9999	UR9999
E45:Z010	E45:Z010	UA	UR	9999	UA9999	UR9999
E45:Z011	E45:Z011	UA	UR	9999	UA9999	UR9999
E45:Z012	E45:Z012	UA	UR	9999	UA9999	UR9999
E45:Z013	E45:Z013	UA	UR	9999	UA9999	UR9999
E45:Z014	E45:Z014	UA	UR	9999	UA9999	UR9999
E45:Z015	E45:Z015	UA	UR	9999	UA9999	UR9999
E45:Z016	E45:Z016	UA	UR	9999	UA9999	UR9999
E45:Z017	E45:Z017	UA	UR	9999	UA9999	UR9999
E45:Z018	E45:Z018	UA	UR	9999	UA9999	UR9999
E45:Z019	E45:Z019	UA	UR	9999	UA9999	UR9999
E45:Z020	E45:Z020	UA	UR	9999	UA9999	UR9999
E45:Z021	E45:Z021	UA	UR	9999	UA9999	UR9999
E45:Z022	E45:Z022	UA	UR	9999	UA9999	UR9999
E45:Z023	E45:Z023	UA	UR	9999	UA9999	UR9999
E45:Z024	E45:Z024	UA	UR	9999	UA9999	UR9999
E45:Z025	E45:Z025	UA	UR	9999	UA9999	UR9999
E45:Z026	E45:Z026	UA	UR	9999	UA9999	UR9999
E45:Z027	E45:Z027	UA	UR	9999	UA9999	UR9999
E45:Z028	E45:Z028	UA	UR	9999	UA9999	UR9999
E45:Z029	E45:Z029	UA	UR	9999	UA9999	UR9999
E45:Z030	E45:Z030	UA	UR	9999	UA9999	UR9999
E45:Z031	E45:Z031	UA	UR	9999	UA9999	UR9999
E45:Z032	E45:Z032	UA	UR	9999	UA9999	UR9999
E45:S001	E45 Cab Tamper	TA	TR	9999	TA9999	TR9999
E45:S002	E45 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E45:S003	E45 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E45:S004	E45 AC fail	AT	AR	9999	AT9999	AR9999
E45:S005	E45 Low Batt	YT	YR	9999	YT9999	YR9999
E45:S006	E45 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E45:S007	E45 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E45:S008	E45 Low Volts	YP	YQ	9999	YP9999	YQ9999
E45:S009	E45 PS Fail	YP	YQ	9999	YP9999	YQ9999
E45:S010	E45 Batt Test	IA	IR	9999	IA9999	IR9999
E45:S011	E45 Spare1	UA	UR	9999	UA9999	UR9999
E45:S012	E45 Spare2	UA	UR	9999	UA9999	UR9999
E45:S013	E45 Spare3	UA	UR	9999	UA9999	UR9999
E45:S014	E45 Spare4	UA	UR	9999	UA9999	UR9999
E45:S015	E45 Spare5	UA	UR	9999	UA9999	UR9999
E45:S016	E45 Spare6	UA	UR	9999	UA9999	UR9999
E45:S017	E45 Spare7	UA	UR	9999	UA9999	UR9999
E45:S018	E45 Unibus	EM	EN	9999	EM9999	EN9999
E45:S019	E45 LAN Comms	EM	EN	9999	EM9999	EN9999
E45:S020	E45 Spare8	UA	UR	9999	UA9999	UR9999
E45:S021	E45 Spare9	UA	UR	9999	UA9999	UR9999
E46:Z001	E46:Z001	UA	UR	9999	UA9999	UR9999
E46:Z002	E46:Z002	UA	UR	9999	UA9999	UR9999
E46:Z003	E46:Z003	UA	UR	9999	UA9999	UR9999
E46:Z004	E46:Z004	UA	UR	9999	UA9999	UR9999
E46:Z005	E46:Z005	UA	UR	9999	UA9999	UR9999
E46:Z006	E46:Z006	UA	UR	9999	UA9999	UR9999
E46:Z007	E46:Z007	UA	UR	9999	UA9999	UR9999
E46:Z008	E46:Z008	UA	UR	9999	UA9999	UR9999
E46:Z009	E46:Z009	UA	UR	9999	UA9999	UR9999
E46:Z010	E46:Z010	UA	UR	9999	UA9999	UR9999
E46:Z011	E46:Z011	UA	UR	9999	UA9999	UR9999
E46:Z012	E46:Z012	UA	UR	9999	UA9999	UR9999
E46:Z013	E46:Z013	UA	UR	9999	UA9999	UR9999
E46:Z014	E46:Z014	UA	UR	9999	UA9999	UR9999
E46:Z015	E46:Z015	UA	UR	9999	UA9999	UR9999
E46:Z016	E46:Z016	UA	UR	9999	UA9999	UR9999
E46:Z017	E46:Z017	UA	UR	9999	UA9999	UR9999
E46:Z018	E46:Z018	UA	UR	9999	UA9999	UR9999
E46:Z019	E46:Z019	UA	UR	9999	UA9999	UR9999
E46:Z020	E46:Z020	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E46:Z021	E46:Z021	UA	UR	9999	UA9999	UR9999
E46:Z022	E46:Z022	UA	UR	9999	UA9999	UR9999
E46:Z023	E46:Z023	UA	UR	9999	UA9999	UR9999
E46:Z024	E46:Z024	UA	UR	9999	UA9999	UR9999
E46:Z025	E46:Z025	UA	UR	9999	UA9999	UR9999
E46:Z026	E46:Z026	UA	UR	9999	UA9999	UR9999
E46:Z027	E46:Z027	UA	UR	9999	UA9999	UR9999
E46:Z028	E46:Z028	UA	UR	9999	UA9999	UR9999
E46:Z029	E46:Z029	UA	UR	9999	UA9999	UR9999
E46:Z030	E46:Z030	UA	UR	9999	UA9999	UR9999
E46:Z031	E46:Z031	UA	UR	9999	UA9999	UR9999
E46:Z032	E46:Z032	UA	UR	9999	UA9999	UR9999
E46:S001	E46 Cab Tamper	TA	TR	9999	TA9999	TR9999
E46:S002	E46 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E46:S003	E46 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E46:S004	E46 AC fail	AT	AR	9999	AT9999	AR9999
E46:S005	E46 Low Batt	YT	YR	9999	YT9999	YR9999
E46:S006	E46 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E46:S007	E46 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E46:S008	E46 Low Volts	YP	YQ	9999	YP9999	YQ9999
E46:S009	E46 PS Fail	YP	YQ	9999	YP9999	YQ9999
E46:S010	E46 Batt Test	IA	IR	9999	IA9999	IR9999
E46:S011	E46 Spare1	UA	UR	9999	UA9999	UR9999
E46:S012	E46 Spare2	UA	UR	9999	UA9999	UR9999
E46:S013	E46 Spare3	UA	UR	9999	UA9999	UR9999
E46:S014	E46 Spare4	UA	UR	9999	UA9999	UR9999
E46:S015	E46 Spare5	UA	UR	9999	UA9999	UR9999
E46:S016	E46 Spare6	UA	UR	9999	UA9999	UR9999
E46:S017	E46 Spare7	UA	UR	9999	UA9999	UR9999
E46:S018	E46 Unibus	EM	EN	9999	EM9999	EN9999
E46:S019	E46 LAN Comms	EM	EN	9999	EM9999	EN9999
E46:S020	E46 Spare8	UA	UR	9999	UA9999	UR9999
E46:S021	E46 Spare9	UA	UR	9999	UA9999	UR9999
E47:Z001	E47:Z001	UA	UR	9999	UA9999	UR9999
E47:Z002	E47:Z002	UA	UR	9999	UA9999	UR9999
E47:Z003	E47:Z003	UA	UR	9999	UA9999	UR9999
E47:Z004	E47:Z004	UA	UR	9999	UA9999	UR9999
E47:Z005	E47:Z005	UA	UR	9999	UA9999	UR9999
E47:Z006	E47:Z006	UA	UR	9999	UA9999	UR9999
E47:Z007	E47:Z007	UA	UR	9999	UA9999	UR9999
E47:Z008	E47:Z008	UA	UR	9999	UA9999	UR9999
E47:Z009	E47:Z009	UA	UR	9999	UA9999	UR9999
E47:Z010	E47:Z010	UA	UR	9999	UA9999	UR9999
E47:Z011	E47:Z011	UA	UR	9999	UA9999	UR9999
E47:Z012	E47:Z012	UA	UR	9999	UA9999	UR9999
E47:Z013	E47:Z013	UA	UR	9999	UA9999	UR9999
E47:Z014	E47:Z014	UA	UR	9999	UA9999	UR9999
E47:Z015	E47:Z015	UA	UR	9999	UA9999	UR9999
E47:Z016	E47:Z016	UA	UR	9999	UA9999	UR9999
E47:Z017	E47:Z017	UA	UR	9999	UA9999	UR9999
E47:Z018	E47:Z018	UA	UR	9999	UA9999	UR9999
E47:Z019	E47:Z019	UA	UR	9999	UA9999	UR9999
E47:Z020	E47:Z020	UA	UR	9999	UA9999	UR9999
E47:Z021	E47:Z021	UA	UR	9999	UA9999	UR9999
E47:Z022	E47:Z022	UA	UR	9999	UA9999	UR9999
E47:Z023	E47:Z023	UA	UR	9999	UA9999	UR9999
E47:Z024	E47:Z024	UA	UR	9999	UA9999	UR9999
E47:Z025	E47:Z025	UA	UR	9999	UA9999	UR9999
E47:Z026	E47:Z026	UA	UR	9999	UA9999	UR9999
E47:Z027	E47:Z027	UA	UR	9999	UA9999	UR9999
E47:Z028	E47:Z028	UA	UR	9999	UA9999	UR9999
E47:Z029	E47:Z029	UA	UR	9999	UA9999	UR9999
E47:Z030	E47:Z030	UA	UR	9999	UA9999	UR9999
E47:Z031	E47:Z031	UA	UR	9999	UA9999	UR9999
E47:Z032	E47:Z032	UA	UR	9999	UA9999	UR9999
E47:S001	E47 Cab Tamper	TA	TR	9999	TA9999	TR9999
E47:S002	E47 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E47:S003	E47 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E47:S004	E47 AC fail	AT	AR	9999	AT9999	AR9999
E47:S005	E47 Low Batt	YT	YR	9999	YT9999	YR9999

Integriti SIA DECIMAL Map. V21

E47:S006	E47 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E47:S007	E47 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E47:S008	E47 Low Volts	YP	YQ	9999	YP9999	YQ9999
E47:S009	E47 PS Fail	YP	YQ	9999	YP9999	YQ9999
E47:S010	E47 Batt Test	IA	IR	9999	IA9999	IR9999
E47:S011	E47 Spare1	UA	UR	9999	UA9999	UR9999
E47:S012	E47 Spare2	UA	UR	9999	UA9999	UR9999
E47:S013	E47 Spare3	UA	UR	9999	UA9999	UR9999
E47:S014	E47 Spare4	UA	UR	9999	UA9999	UR9999
E47:S015	E47 Spare5	UA	UR	9999	UA9999	UR9999
E47:S016	E47 Spare6	UA	UR	9999	UA9999	UR9999
E47:S017	E47 Spare7	UA	UR	9999	UA9999	UR9999
E47:S018	E47 Unibus	EM	EN	9999	EM9999	EN9999
E47:S019	E47 LAN Comms	EM	EN	9999	EM9999	EN9999
E47:S020	E47 Spare8	UA	UR	9999	UA9999	UR9999
E47:S021	E47 Spare9	UA	UR	9999	UA9999	UR9999
E48:Z001	E48:Z001	UA	UR	9999	UA9999	UR9999
E48:Z002	E48:Z002	UA	UR	9999	UA9999	UR9999
E48:Z003	E48:Z003	UA	UR	9999	UA9999	UR9999
E48:Z004	E48:Z004	UA	UR	9999	UA9999	UR9999
E48:Z005	E48:Z005	UA	UR	9999	UA9999	UR9999
E48:Z006	E48:Z006	UA	UR	9999	UA9999	UR9999
E48:Z007	E48:Z007	UA	UR	9999	UA9999	UR9999
E48:Z008	E48:Z008	UA	UR	9999	UA9999	UR9999
E48:Z009	E48:Z009	UA	UR	9999	UA9999	UR9999
E48:Z010	E48:Z010	UA	UR	9999	UA9999	UR9999
E48:Z011	E48:Z011	UA	UR	9999	UA9999	UR9999
E48:Z012	E48:Z012	UA	UR	9999	UA9999	UR9999
E48:Z013	E48:Z013	UA	UR	9999	UA9999	UR9999
E48:Z014	E48:Z014	UA	UR	9999	UA9999	UR9999
E48:Z015	E48:Z015	UA	UR	9999	UA9999	UR9999
E48:Z016	E48:Z016	UA	UR	9999	UA9999	UR9999
E48:Z017	E48:Z017	UA	UR	9999	UA9999	UR9999
E48:Z018	E48:Z018	UA	UR	9999	UA9999	UR9999
E48:Z019	E48:Z019	UA	UR	9999	UA9999	UR9999
E48:Z020	E48:Z020	UA	UR	9999	UA9999	UR9999
E48:Z021	E48:Z021	UA	UR	9999	UA9999	UR9999
E48:Z022	E48:Z022	UA	UR	9999	UA9999	UR9999
E48:Z023	E48:Z023	UA	UR	9999	UA9999	UR9999
E48:Z024	E48:Z024	UA	UR	9999	UA9999	UR9999
E48:Z025	E48:Z025	UA	UR	9999	UA9999	UR9999
E48:Z026	E48:Z026	UA	UR	9999	UA9999	UR9999
E48:Z027	E48:Z027	UA	UR	9999	UA9999	UR9999
E48:Z028	E48:Z028	UA	UR	9999	UA9999	UR9999
E48:Z029	E48:Z029	UA	UR	9999	UA9999	UR9999
E48:Z030	E48:Z030	UA	UR	9999	UA9999	UR9999
E48:Z031	E48:Z031	UA	UR	9999	UA9999	UR9999
E48:Z032	E48:Z032	UA	UR	9999	UA9999	UR9999
E48:S001	E48 Cab Tamper	TA	TR	9999	TA9999	TR9999
E48:S002	E48 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E48:S003	E48 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E48:S004	E48 AC fail	AT	AR	9999	AT9999	AR9999
E48:S005	E48 Low Batt	YT	YR	9999	YT9999	YR9999
E48:S006	E48 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E48:S007	E48 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E48:S008	E48 Low Volts	YP	YQ	9999	YP9999	YQ9999
E48:S009	E48 PS Fail	YP	YQ	9999	YP9999	YQ9999
E48:S010	E48 Batt Test	IA	IR	9999	IA9999	IR9999
E48:S011	E48 Spare1	UA	UR	9999	UA9999	UR9999
E48:S012	E48 Spare2	UA	UR	9999	UA9999	UR9999
E48:S013	E48 Spare3	UA	UR	9999	UA9999	UR9999
E48:S014	E48 Spare4	UA	UR	9999	UA9999	UR9999
E48:S015	E48 Spare5	UA	UR	9999	UA9999	UR9999
E48:S016	E48 Spare6	UA	UR	9999	UA9999	UR9999
E48:S017	E48 Spare7	UA	UR	9999	UA9999	UR9999
E48:S018	E48 Unibus	EM	EN	9999	EM9999	EN9999
E48:S019	E48 LAN Comms	EM	EN	9999	EM9999	EN9999
E48:S020	E48 Spare8	UA	UR	9999	UA9999	UR9999
E48:S021	E48 Spare9	UA	UR	9999	UA9999	UR9999
E49:Z001	E49:Z001	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E49:Z002	E49:Z002	UA	UR	9999	UA9999	UR9999
E49:Z003	E49:Z003	UA	UR	9999	UA9999	UR9999
E49:Z004	E49:Z004	UA	UR	9999	UA9999	UR9999
E49:Z005	E49:Z005	UA	UR	9999	UA9999	UR9999
E49:Z006	E49:Z006	UA	UR	9999	UA9999	UR9999
E49:Z007	E49:Z007	UA	UR	9999	UA9999	UR9999
E49:Z008	E49:Z008	UA	UR	9999	UA9999	UR9999
E49:Z009	E49:Z009	UA	UR	9999	UA9999	UR9999
E49:Z010	E49:Z010	UA	UR	9999	UA9999	UR9999
E49:Z011	E49:Z011	UA	UR	9999	UA9999	UR9999
E49:Z012	E49:Z012	UA	UR	9999	UA9999	UR9999
E49:Z013	E49:Z013	UA	UR	9999	UA9999	UR9999
E49:Z014	E49:Z014	UA	UR	9999	UA9999	UR9999
E49:Z015	E49:Z015	UA	UR	9999	UA9999	UR9999
E49:Z016	E49:Z016	UA	UR	9999	UA9999	UR9999
E49:Z017	E49:Z017	UA	UR	9999	UA9999	UR9999
E49:Z018	E49:Z018	UA	UR	9999	UA9999	UR9999
E49:Z019	E49:Z019	UA	UR	9999	UA9999	UR9999
E49:Z020	E49:Z020	UA	UR	9999	UA9999	UR9999
E49:Z021	E49:Z021	UA	UR	9999	UA9999	UR9999
E49:Z022	E49:Z022	UA	UR	9999	UA9999	UR9999
E49:Z023	E49:Z023	UA	UR	9999	UA9999	UR9999
E49:Z024	E49:Z024	UA	UR	9999	UA9999	UR9999
E49:Z025	E49:Z025	UA	UR	9999	UA9999	UR9999
E49:Z026	E49:Z026	UA	UR	9999	UA9999	UR9999
E49:Z027	E49:Z027	UA	UR	9999	UA9999	UR9999
E49:Z028	E49:Z028	UA	UR	9999	UA9999	UR9999
E49:Z029	E49:Z029	UA	UR	9999	UA9999	UR9999
E49:Z030	E49:Z030	UA	UR	9999	UA9999	UR9999
E49:Z031	E49:Z031	UA	UR	9999	UA9999	UR9999
E49:Z032	E49:Z032	UA	UR	9999	UA9999	UR9999
E49:S001	E49 Cab Tamper	TA	TR	9999	TA9999	TR9999
E49:S002	E49 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E49:S003	E49 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E49:S004	E49 AC fail	AT	AR	9999	AT9999	AR9999
E49:S005	E49 Low Batt	YT	YR	9999	YT9999	YR9999
E49:S006	E49 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E49:S007	E49 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E49:S008	E49 Low Volts	YP	YQ	9999	YP9999	YQ9999
E49:S009	E49 PS Fail	YP	YQ	9999	YP9999	YQ9999
E49:S010	E49 Batt Test	IA	IR	9999	IA9999	IR9999
E49:S011	E49 Spare1	UA	UR	9999	UA9999	UR9999
E49:S012	E49 Spare2	UA	UR	9999	UA9999	UR9999
E49:S013	E49 Spare3	UA	UR	9999	UA9999	UR9999
E49:S014	E49 Spare4	UA	UR	9999	UA9999	UR9999
E49:S015	E49 Spare5	UA	UR	9999	UA9999	UR9999
E49:S016	E49 Spare6	UA	UR	9999	UA9999	UR9999
E49:S017	E49 Spare7	UA	UR	9999	UA9999	UR9999
E49:S018	E49 Unibus	EM	EN	9999	EM9999	EN9999
E49:S019	E49 LAN Comms	EM	EN	9999	EM9999	EN9999
E49:S020	E49 Spare8	UA	UR	9999	UA9999	UR9999
E49:S021	E49 Spare9	UA	UR	9999	UA9999	UR9999
E50:Z001	E50:Z001	UA	UR	9999	UA9999	UR9999
E50:Z002	E50:Z002	UA	UR	9999	UA9999	UR9999
E50:Z003	E50:Z003	UA	UR	9999	UA9999	UR9999
E50:Z004	E50:Z004	UA	UR	9999	UA9999	UR9999
E50:Z005	E50:Z005	UA	UR	9999	UA9999	UR9999
E50:Z006	E50:Z006	UA	UR	9999	UA9999	UR9999
E50:Z007	E50:Z007	UA	UR	9999	UA9999	UR9999
E50:Z008	E50:Z008	UA	UR	9999	UA9999	UR9999
E50:Z009	E50:Z009	UA	UR	9999	UA9999	UR9999
E50:Z010	E50:Z010	UA	UR	9999	UA9999	UR9999
E50:Z011	E50:Z011	UA	UR	9999	UA9999	UR9999
E50:Z012	E50:Z012	UA	UR	9999	UA9999	UR9999
E50:Z013	E50:Z013	UA	UR	9999	UA9999	UR9999
E50:Z014	E50:Z014	UA	UR	9999	UA9999	UR9999
E50:Z015	E50:Z015	UA	UR	9999	UA9999	UR9999
E50:Z016	E50:Z016	UA	UR	9999	UA9999	UR9999
E50:Z017	E50:Z017	UA	UR	9999	UA9999	UR9999
E50:Z018	E50:Z018	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E50:Z019	E50:Z019	UA	UR	9999	UA9999	UR9999
E50:Z020	E50:Z020	UA	UR	9999	UA9999	UR9999
E50:Z021	E50:Z021	UA	UR	9999	UA9999	UR9999
E50:Z022	E50:Z022	UA	UR	9999	UA9999	UR9999
E50:Z023	E50:Z023	UA	UR	9999	UA9999	UR9999
E50:Z024	E50:Z024	UA	UR	9999	UA9999	UR9999
E50:Z025	E50:Z025	UA	UR	9999	UA9999	UR9999
E50:Z026	E50:Z026	UA	UR	9999	UA9999	UR9999
E50:Z027	E50:Z027	UA	UR	9999	UA9999	UR9999
E50:Z028	E50:Z028	UA	UR	9999	UA9999	UR9999
E50:Z029	E50:Z029	UA	UR	9999	UA9999	UR9999
E50:Z030	E50:Z030	UA	UR	9999	UA9999	UR9999
E50:Z031	E50:Z031	UA	UR	9999	UA9999	UR9999
E50:Z032	E50:Z032	UA	UR	9999	UA9999	UR9999
E50:S001	E50 Cab Tamper	TA	TR	9999	TA9999	TR9999
E50:S002	E50 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E50:S003	E50 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E50:S004	E50 AC fail	AT	AR	9999	AT9999	AR9999
E50:S005	E50 Low Batt	YT	YR	9999	YT9999	YR9999
E50:S006	E50 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E50:S007	E50 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E50:S008	E50 Low Volts	YP	YQ	9999	YP9999	YQ9999
E50:S009	E50 PS Fail	YP	YQ	9999	YP9999	YQ9999
E50:S010	E50 Batt Test	IA	IR	9999	IA9999	IR9999
E50:S011	E50 Spare1	UA	UR	9999	UA9999	UR9999
E50:S012	E50 Spare2	UA	UR	9999	UA9999	UR9999
E50:S013	E50 Spare3	UA	UR	9999	UA9999	UR9999
E50:S014	E50 Spare4	UA	UR	9999	UA9999	UR9999
E50:S015	E50 Spare5	UA	UR	9999	UA9999	UR9999
E50:S016	E50 Spare6	UA	UR	9999	UA9999	UR9999
E50:S017	E50 Spare7	UA	UR	9999	UA9999	UR9999
E50:S018	E50 Unibus	EM	EN	9999	EM9999	EN9999
E50:S019	E50 LAN Comms	EM	EN	9999	EM9999	EN9999
E50:S020	E50 Spare8	UA	UR	9999	UA9999	UR9999
E50:S021	E50 Spare9	UA	UR	9999	UA9999	UR9999
E51:Z001	E51:Z001	UA	UR	9999	UA9999	UR9999
E51:Z002	E51:Z002	UA	UR	9999	UA9999	UR9999
E51:Z003	E51:Z003	UA	UR	9999	UA9999	UR9999
E51:Z004	E51:Z004	UA	UR	9999	UA9999	UR9999
E51:Z005	E51:Z005	UA	UR	9999	UA9999	UR9999
E51:Z006	E51:Z006	UA	UR	9999	UA9999	UR9999
E51:Z007	E51:Z007	UA	UR	9999	UA9999	UR9999
E51:Z008	E51:Z008	UA	UR	9999	UA9999	UR9999
E51:Z009	E51:Z009	UA	UR	9999	UA9999	UR9999
E51:Z010	E51:Z010	UA	UR	9999	UA9999	UR9999
E51:Z011	E51:Z011	UA	UR	9999	UA9999	UR9999
E51:Z012	E51:Z012	UA	UR	9999	UA9999	UR9999
E51:Z013	E51:Z013	UA	UR	9999	UA9999	UR9999
E51:Z014	E51:Z014	UA	UR	9999	UA9999	UR9999
E51:Z015	E51:Z015	UA	UR	9999	UA9999	UR9999
E51:Z016	E51:Z016	UA	UR	9999	UA9999	UR9999
E51:Z017	E51:Z017	UA	UR	9999	UA9999	UR9999
E51:Z018	E51:Z018	UA	UR	9999	UA9999	UR9999
E51:Z019	E51:Z019	UA	UR	9999	UA9999	UR9999
E51:Z020	E51:Z020	UA	UR	9999	UA9999	UR9999
E51:Z021	E51:Z021	UA	UR	9999	UA9999	UR9999
E51:Z022	E51:Z022	UA	UR	9999	UA9999	UR9999
E51:Z023	E51:Z023	UA	UR	9999	UA9999	UR9999
E51:Z024	E51:Z024	UA	UR	9999	UA9999	UR9999
E51:Z025	E51:Z025	UA	UR	9999	UA9999	UR9999
E51:Z026	E51:Z026	UA	UR	9999	UA9999	UR9999
E51:Z027	E51:Z027	UA	UR	9999	UA9999	UR9999
E51:Z028	E51:Z028	UA	UR	9999	UA9999	UR9999
E51:Z029	E51:Z029	UA	UR	9999	UA9999	UR9999
E51:Z030	E51:Z030	UA	UR	9999	UA9999	UR9999
E51:Z031	E51:Z031	UA	UR	9999	UA9999	UR9999
E51:Z032	E51:Z032	UA	UR	9999	UA9999	UR9999
E51:S001	E51 Cab Tamper	TA	TR	9999	TA9999	TR9999
E51:S002	E51 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E51:S003	E51 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999

Integriti SIA DECIMAL Map. V21

E51:S004	E51 AC fail	AT	AR	9999	AT9999	AR9999
E51:S005	E51 Low Batt	YT	YR	9999	YT9999	YR9999
E51:S006	E51 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E51:S007	E51 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E51:S008	E51 Low Volts	YP	YQ	9999	YP9999	YQ9999
E51:S009	E51 PS Fail	YP	YQ	9999	YP9999	YQ9999
E51:S010	E51 Batt Test	IA	IR	9999	IA9999	IR9999
E51:S011	E51 Spare1	UA	UR	9999	UA9999	UR9999
E51:S012	E51 Spare2	UA	UR	9999	UA9999	UR9999
E51:S013	E51 Spare3	UA	UR	9999	UA9999	UR9999
E51:S014	E51 Spare4	UA	UR	9999	UA9999	UR9999
E51:S015	E51 Spare5	UA	UR	9999	UA9999	UR9999
E51:S016	E51 Spare6	UA	UR	9999	UA9999	UR9999
E51:S017	E51 Spare7	UA	UR	9999	UA9999	UR9999
E51:S018	E51 Unibus	EM	EN	9999	EM9999	EN9999
E51:S019	E51 LAN Comms	EM	EN	9999	EM9999	EN9999
E51:S020	E51 Spare8	UA	UR	9999	UA9999	UR9999
E51:S021	E51 Spare9	UA	UR	9999	UA9999	UR9999
E52:Z001	E52:Z001	UA	UR	9999	UA9999	UR9999
E52:Z002	E52:Z002	UA	UR	9999	UA9999	UR9999
E52:Z003	E52:Z003	UA	UR	9999	UA9999	UR9999
E52:Z004	E52:Z004	UA	UR	9999	UA9999	UR9999
E52:Z005	E52:Z005	UA	UR	9999	UA9999	UR9999
E52:Z006	E52:Z006	UA	UR	9999	UA9999	UR9999
E52:Z007	E52:Z007	UA	UR	9999	UA9999	UR9999
E52:Z008	E52:Z008	UA	UR	9999	UA9999	UR9999
E52:Z009	E52:Z009	UA	UR	9999	UA9999	UR9999
E52:Z010	E52:Z010	UA	UR	9999	UA9999	UR9999
E52:Z011	E52:Z011	UA	UR	9999	UA9999	UR9999
E52:Z012	E52:Z012	UA	UR	9999	UA9999	UR9999
E52:Z013	E52:Z013	UA	UR	9999	UA9999	UR9999
E52:Z014	E52:Z014	UA	UR	9999	UA9999	UR9999
E52:Z015	E52:Z015	UA	UR	9999	UA9999	UR9999
E52:Z016	E52:Z016	UA	UR	9999	UA9999	UR9999
E52:Z017	E52:Z017	UA	UR	9999	UA9999	UR9999
E52:Z018	E52:Z018	UA	UR	9999	UA9999	UR9999
E52:Z019	E52:Z019	UA	UR	9999	UA9999	UR9999
E52:Z020	E52:Z020	UA	UR	9999	UA9999	UR9999
E52:Z021	E52:Z021	UA	UR	9999	UA9999	UR9999
E52:Z022	E52:Z022	UA	UR	9999	UA9999	UR9999
E52:Z023	E52:Z023	UA	UR	9999	UA9999	UR9999
E52:Z024	E52:Z024	UA	UR	9999	UA9999	UR9999
E52:Z025	E52:Z025	UA	UR	9999	UA9999	UR9999
E52:Z026	E52:Z026	UA	UR	9999	UA9999	UR9999
E52:Z027	E52:Z027	UA	UR	9999	UA9999	UR9999
E52:Z028	E52:Z028	UA	UR	9999	UA9999	UR9999
E52:Z029	E52:Z029	UA	UR	9999	UA9999	UR9999
E52:Z030	E52:Z030	UA	UR	9999	UA9999	UR9999
E52:Z031	E52:Z031	UA	UR	9999	UA9999	UR9999
E52:Z032	E52:Z032	UA	UR	9999	UA9999	UR9999
E52:S001	E52 Cab Tamper	TA	TR	9999	TA9999	TR9999
E52:S002	E52 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E52:S003	E52 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E52:S004	E52 AC fail	AT	AR	9999	AT9999	AR9999
E52:S005	E52 Low Batt	YT	YR	9999	YT9999	YR9999
E52:S006	E52 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E52:S007	E52 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E52:S008	E52 Low Volts	YP	YQ	9999	YP9999	YQ9999
E52:S009	E52 PS Fail	YP	YQ	9999	YP9999	YQ9999
E52:S010	E52 Batt Test	IA	IR	9999	IA9999	IR9999
E52:S011	E52 Spare1	UA	UR	9999	UA9999	UR9999
E52:S012	E52 Spare2	UA	UR	9999	UA9999	UR9999
E52:S013	E52 Spare3	UA	UR	9999	UA9999	UR9999
E52:S014	E52 Spare4	UA	UR	9999	UA9999	UR9999
E52:S015	E52 Spare5	UA	UR	9999	UA9999	UR9999
E52:S016	E52 Spare6	UA	UR	9999	UA9999	UR9999
E52:S017	E52 Spare7	UA	UR	9999	UA9999	UR9999
E52:S018	E52 Unibus	EM	EN	9999	EM9999	EN9999
E52:S019	E52 LAN Comms	EM	EN	9999	EM9999	EN9999
E52:S020	E52 Spare8	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E52:S021	E52 Spare9	UA	UR	9999	UA9999	UR9999
E53:Z001	E53:Z001	UA	UR	9999	UA9999	UR9999
E53:Z002	E53:Z002	UA	UR	9999	UA9999	UR9999
E53:Z003	E53:Z003	UA	UR	9999	UA9999	UR9999
E53:Z004	E53:Z004	UA	UR	9999	UA9999	UR9999
E53:Z005	E53:Z005	UA	UR	9999	UA9999	UR9999
E53:Z006	E53:Z006	UA	UR	9999	UA9999	UR9999
E53:Z007	E53:Z007	UA	UR	9999	UA9999	UR9999
E53:Z008	E53:Z008	UA	UR	9999	UA9999	UR9999
E53:Z009	E53:Z009	UA	UR	9999	UA9999	UR9999
E53:Z010	E53:Z010	UA	UR	9999	UA9999	UR9999
E53:Z011	E53:Z011	UA	UR	9999	UA9999	UR9999
E53:Z012	E53:Z012	UA	UR	9999	UA9999	UR9999
E53:Z013	E53:Z013	UA	UR	9999	UA9999	UR9999
E53:Z014	E53:Z014	UA	UR	9999	UA9999	UR9999
E53:Z015	E53:Z015	UA	UR	9999	UA9999	UR9999
E53:Z016	E53:Z016	UA	UR	9999	UA9999	UR9999
E53:Z017	E53:Z017	UA	UR	9999	UA9999	UR9999
E53:Z018	E53:Z018	UA	UR	9999	UA9999	UR9999
E53:Z019	E53:Z019	UA	UR	9999	UA9999	UR9999
E53:Z020	E53:Z020	UA	UR	9999	UA9999	UR9999
E53:Z021	E53:Z021	UA	UR	9999	UA9999	UR9999
E53:Z022	E53:Z022	UA	UR	9999	UA9999	UR9999
E53:Z023	E53:Z023	UA	UR	9999	UA9999	UR9999
E53:Z024	E53:Z024	UA	UR	9999	UA9999	UR9999
E53:Z025	E53:Z025	UA	UR	9999	UA9999	UR9999
E53:Z026	E53:Z026	UA	UR	9999	UA9999	UR9999
E53:Z027	E53:Z027	UA	UR	9999	UA9999	UR9999
E53:Z028	E53:Z028	UA	UR	9999	UA9999	UR9999
E53:Z029	E53:Z029	UA	UR	9999	UA9999	UR9999
E53:Z030	E53:Z030	UA	UR	9999	UA9999	UR9999
E53:Z031	E53:Z031	UA	UR	9999	UA9999	UR9999
E53:Z032	E53:Z032	UA	UR	9999	UA9999	UR9999
E53:S001	E53 Cab Tamper	TA	TR	9999	TA9999	TR9999
E53:S002	E53 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E53:S003	E53 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E53:S004	E53 AC fail	AT	AR	9999	AT9999	AR9999
E53:S005	E53 Low Batt	YT	YR	9999	YT9999	YR9999
E53:S006	E53 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E53:S007	E53 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E53:S008	E53 Low Volts	YP	YQ	9999	YP9999	YQ9999
E53:S009	E53 PS Fail	YP	YQ	9999	YP9999	YQ9999
E53:S010	E53 Batt Test	IA	IR	9999	IA9999	IR9999
E53:S011	E53 Spare1	UA	UR	9999	UA9999	UR9999
E53:S012	E53 Spare2	UA	UR	9999	UA9999	UR9999
E53:S013	E53 Spare3	UA	UR	9999	UA9999	UR9999
E53:S014	E53 Spare4	UA	UR	9999	UA9999	UR9999
E53:S015	E53 Spare5	UA	UR	9999	UA9999	UR9999
E53:S016	E53 Spare6	UA	UR	9999	UA9999	UR9999
E53:S017	E53 Spare7	UA	UR	9999	UA9999	UR9999
E53:S018	E53 Unibus	EM	EN	9999	EM9999	EN9999
E53:S019	E53 LAN Comms	EM	EN	9999	EM9999	EN9999
E53:S020	E53 Spare8	UA	UR	9999	UA9999	UR9999
E53:S021	E53 Spare9	UA	UR	9999	UA9999	UR9999
E54:Z001	E54:Z001	UA	UR	9999	UA9999	UR9999
E54:Z002	E54:Z002	UA	UR	9999	UA9999	UR9999
E54:Z003	E54:Z003	UA	UR	9999	UA9999	UR9999
E54:Z004	E54:Z004	UA	UR	9999	UA9999	UR9999
E54:Z005	E54:Z005	UA	UR	9999	UA9999	UR9999
E54:Z006	E54:Z006	UA	UR	9999	UA9999	UR9999
E54:Z007	E54:Z007	UA	UR	9999	UA9999	UR9999
E54:Z008	E54:Z008	UA	UR	9999	UA9999	UR9999
E54:Z009	E54:Z009	UA	UR	9999	UA9999	UR9999
E54:Z010	E54:Z010	UA	UR	9999	UA9999	UR9999
E54:Z011	E54:Z011	UA	UR	9999	UA9999	UR9999
E54:Z012	E54:Z012	UA	UR	9999	UA9999	UR9999
E54:Z013	E54:Z013	UA	UR	9999	UA9999	UR9999
E54:Z014	E54:Z014	UA	UR	9999	UA9999	UR9999
E54:Z015	E54:Z015	UA	UR	9999	UA9999	UR9999
E54:Z016	E54:Z016	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E54:Z017	E54:Z017	UA	UR	9999	UA9999	UR9999
E54:Z018	E54:Z018	UA	UR	9999	UA9999	UR9999
E54:Z019	E54:Z019	UA	UR	9999	UA9999	UR9999
E54:Z020	E54:Z020	UA	UR	9999	UA9999	UR9999
E54:Z021	E54:Z021	UA	UR	9999	UA9999	UR9999
E54:Z022	E54:Z022	UA	UR	9999	UA9999	UR9999
E54:Z023	E54:Z023	UA	UR	9999	UA9999	UR9999
E54:Z024	E54:Z024	UA	UR	9999	UA9999	UR9999
E54:Z025	E54:Z025	UA	UR	9999	UA9999	UR9999
E54:Z026	E54:Z026	UA	UR	9999	UA9999	UR9999
E54:Z027	E54:Z027	UA	UR	9999	UA9999	UR9999
E54:Z028	E54:Z028	UA	UR	9999	UA9999	UR9999
E54:Z029	E54:Z029	UA	UR	9999	UA9999	UR9999
E54:Z030	E54:Z030	UA	UR	9999	UA9999	UR9999
E54:Z031	E54:Z031	UA	UR	9999	UA9999	UR9999
E54:Z032	E54:Z032	UA	UR	9999	UA9999	UR9999
E54:S001	E54 Cab Tamper	TA	TR	9999	TA9999	TR9999
E54:S002	E54 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E54:S003	E54 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E54:S004	E54 AC fail	AT	AR	9999	AT9999	AR9999
E54:S005	E54 Low Batt	YT	YR	9999	YT9999	YR9999
E54:S006	E54 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E54:S007	E54 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E54:S008	E54 Low Volts	YP	YQ	9999	YP9999	YQ9999
E54:S009	E54 PS Fail	YP	YQ	9999	YP9999	YQ9999
E54:S010	E54 Batt Test	IA	IR	9999	IA9999	IR9999
E54:S011	E54 Spare1	UA	UR	9999	UA9999	UR9999
E54:S012	E54 Spare2	UA	UR	9999	UA9999	UR9999
E54:S013	E54 Spare3	UA	UR	9999	UA9999	UR9999
E54:S014	E54 Spare4	UA	UR	9999	UA9999	UR9999
E54:S015	E54 Spare5	UA	UR	9999	UA9999	UR9999
E54:S016	E54 Spare6	UA	UR	9999	UA9999	UR9999
E54:S017	E54 Spare7	UA	UR	9999	UA9999	UR9999
E54:S018	E54 Unibus	EM	EN	9999	EM9999	EN9999
E54:S019	E54 LAN Comms	EM	EN	9999	EM9999	EN9999
E54:S020	E54 Spare8	UA	UR	9999	UA9999	UR9999
E54:S021	E54 Spare9	UA	UR	9999	UA9999	UR9999
E55:Z001	E55:Z001	UA	UR	9999	UA9999	UR9999
E55:Z002	E55:Z002	UA	UR	9999	UA9999	UR9999
E55:Z003	E55:Z003	UA	UR	9999	UA9999	UR9999
E55:Z004	E55:Z004	UA	UR	9999	UA9999	UR9999
E55:Z005	E55:Z005	UA	UR	9999	UA9999	UR9999
E55:Z006	E55:Z006	UA	UR	9999	UA9999	UR9999
E55:Z007	E55:Z007	UA	UR	9999	UA9999	UR9999
E55:Z008	E55:Z008	UA	UR	9999	UA9999	UR9999
E55:Z009	E55:Z009	UA	UR	9999	UA9999	UR9999
E55:Z010	E55:Z010	UA	UR	9999	UA9999	UR9999
E55:Z011	E55:Z011	UA	UR	9999	UA9999	UR9999
E55:Z012	E55:Z012	UA	UR	9999	UA9999	UR9999
E55:Z013	E55:Z013	UA	UR	9999	UA9999	UR9999
E55:Z014	E55:Z014	UA	UR	9999	UA9999	UR9999
E55:Z015	E55:Z015	UA	UR	9999	UA9999	UR9999
E55:Z016	E55:Z016	UA	UR	9999	UA9999	UR9999
E55:Z017	E55:Z017	UA	UR	9999	UA9999	UR9999
E55:Z018	E55:Z018	UA	UR	9999	UA9999	UR9999
E55:Z019	E55:Z019	UA	UR	9999	UA9999	UR9999
E55:Z020	E55:Z020	UA	UR	9999	UA9999	UR9999
E55:Z021	E55:Z021	UA	UR	9999	UA9999	UR9999
E55:Z022	E55:Z022	UA	UR	9999	UA9999	UR9999
E55:Z023	E55:Z023	UA	UR	9999	UA9999	UR9999
E55:Z024	E55:Z024	UA	UR	9999	UA9999	UR9999
E55:Z025	E55:Z025	UA	UR	9999	UA9999	UR9999
E55:Z026	E55:Z026	UA	UR	9999	UA9999	UR9999
E55:Z027	E55:Z027	UA	UR	9999	UA9999	UR9999
E55:Z028	E55:Z028	UA	UR	9999	UA9999	UR9999
E55:Z029	E55:Z029	UA	UR	9999	UA9999	UR9999
E55:Z030	E55:Z030	UA	UR	9999	UA9999	UR9999
E55:Z031	E55:Z031	UA	UR	9999	UA9999	UR9999
E55:Z032	E55:Z032	UA	UR	9999	UA9999	UR9999
E55:S001	E55 Cab Tamper	TA	TR	9999	TA9999	TR9999

Integriti SIA DECIMAL Map. V21

E55:S002	E55 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E55:S003	E55 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E55:S004	E55 AC fail	AT	AR	9999	AT9999	AR9999
E55:S005	E55 Low Batt	YT	YR	9999	YT9999	YR9999
E55:S006	E55 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E55:S007	E55 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E55:S008	E55 Low Volts	YP	YQ	9999	YP9999	YQ9999
E55:S009	E55 PS Fail	YP	YQ	9999	YP9999	YQ9999
E55:S010	E55 Batt Test	IA	IR	9999	IA9999	IR9999
E55:S011	E55 Spare1	UA	UR	9999	UA9999	UR9999
E55:S012	E55 Spare2	UA	UR	9999	UA9999	UR9999
E55:S013	E55 Spare3	UA	UR	9999	UA9999	UR9999
E55:S014	E55 Spare4	UA	UR	9999	UA9999	UR9999
E55:S015	E55 Spare5	UA	UR	9999	UA9999	UR9999
E55:S016	E55 Spare6	UA	UR	9999	UA9999	UR9999
E55:S017	E55 Spare7	UA	UR	9999	UA9999	UR9999
E55:S018	E55 Unibus	EM	EN	9999	EM9999	EN9999
E55:S019	E55 LAN Comms	EM	EN	9999	EM9999	EN9999
E55:S020	E55 Spare8	UA	UR	9999	UA9999	UR9999
E55:S021	E55 Spare9	UA	UR	9999	UA9999	UR9999
E56:Z001	E56:Z001	UA	UR	9999	UA9999	UR9999
E56:Z002	E56:Z002	UA	UR	9999	UA9999	UR9999
E56:Z003	E56:Z003	UA	UR	9999	UA9999	UR9999
E56:Z004	E56:Z004	UA	UR	9999	UA9999	UR9999
E56:Z005	E56:Z005	UA	UR	9999	UA9999	UR9999
E56:Z006	E56:Z006	UA	UR	9999	UA9999	UR9999
E56:Z007	E56:Z007	UA	UR	9999	UA9999	UR9999
E56:Z008	E56:Z008	UA	UR	9999	UA9999	UR9999
E56:Z009	E56:Z009	UA	UR	9999	UA9999	UR9999
E56:Z010	E56:Z010	UA	UR	9999	UA9999	UR9999
E56:Z011	E56:Z011	UA	UR	9999	UA9999	UR9999
E56:Z012	E56:Z012	UA	UR	9999	UA9999	UR9999
E56:Z013	E56:Z013	UA	UR	9999	UA9999	UR9999
E56:Z014	E56:Z014	UA	UR	9999	UA9999	UR9999
E56:Z015	E56:Z015	UA	UR	9999	UA9999	UR9999
E56:Z016	E56:Z016	UA	UR	9999	UA9999	UR9999
E56:Z017	E56:Z017	UA	UR	9999	UA9999	UR9999
E56:Z018	E56:Z018	UA	UR	9999	UA9999	UR9999
E56:Z019	E56:Z019	UA	UR	9999	UA9999	UR9999
E56:Z020	E56:Z020	UA	UR	9999	UA9999	UR9999
E56:Z021	E56:Z021	UA	UR	9999	UA9999	UR9999
E56:Z022	E56:Z022	UA	UR	9999	UA9999	UR9999
E56:Z023	E56:Z023	UA	UR	9999	UA9999	UR9999
E56:Z024	E56:Z024	UA	UR	9999	UA9999	UR9999
E56:Z025	E56:Z025	UA	UR	9999	UA9999	UR9999
E56:Z026	E56:Z026	UA	UR	9999	UA9999	UR9999
E56:Z027	E56:Z027	UA	UR	9999	UA9999	UR9999
E56:Z028	E56:Z028	UA	UR	9999	UA9999	UR9999
E56:Z029	E56:Z029	UA	UR	9999	UA9999	UR9999
E56:Z030	E56:Z030	UA	UR	9999	UA9999	UR9999
E56:Z031	E56:Z031	UA	UR	9999	UA9999	UR9999
E56:Z032	E56:Z032	UA	UR	9999	UA9999	UR9999
E56:S001	E56 Cab Tamper	TA	TR	9999	TA9999	TR9999
E56:S002	E56 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E56:S003	E56 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E56:S004	E56 AC fail	AT	AR	9999	AT9999	AR9999
E56:S005	E56 Low Batt	YT	YR	9999	YT9999	YR9999
E56:S006	E56 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E56:S007	E56 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E56:S008	E56 Low Volts	YP	YQ	9999	YP9999	YQ9999
E56:S009	E56 PS Fail	YP	YQ	9999	YP9999	YQ9999
E56:S010	E56 Batt Test	IA	IR	9999	IA9999	IR9999
E56:S011	E56 Spare1	UA	UR	9999	UA9999	UR9999
E56:S012	E56 Spare2	UA	UR	9999	UA9999	UR9999
E56:S013	E56 Spare3	UA	UR	9999	UA9999	UR9999
E56:S014	E56 Spare4	UA	UR	9999	UA9999	UR9999
E56:S015	E56 Spare5	UA	UR	9999	UA9999	UR9999
E56:S016	E56 Spare6	UA	UR	9999	UA9999	UR9999
E56:S017	E56 Spare7	UA	UR	9999	UA9999	UR9999
E56:S018	E56 Unibus	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

E56:S019	E56 LAN Comms	EM	EN	9999	EM9999	EN9999
E56:S020	E56 Spare8	UA	UR	9999	UA9999	UR9999
E56:S021	E56 Spare9	UA	UR	9999	UA9999	UR9999
E57:Z001	E57:Z001	UA	UR	9999	UA9999	UR9999
E57:Z002	E57:Z002	UA	UR	9999	UA9999	UR9999
E57:Z003	E57:Z003	UA	UR	9999	UA9999	UR9999
E57:Z004	E57:Z004	UA	UR	9999	UA9999	UR9999
E57:Z005	E57:Z005	UA	UR	9999	UA9999	UR9999
E57:Z006	E57:Z006	UA	UR	9999	UA9999	UR9999
E57:Z007	E57:Z007	UA	UR	9999	UA9999	UR9999
E57:Z008	E57:Z008	UA	UR	9999	UA9999	UR9999
E57:Z009	E57:Z009	UA	UR	9999	UA9999	UR9999
E57:Z010	E57:Z010	UA	UR	9999	UA9999	UR9999
E57:Z011	E57:Z011	UA	UR	9999	UA9999	UR9999
E57:Z012	E57:Z012	UA	UR	9999	UA9999	UR9999
E57:Z013	E57:Z013	UA	UR	9999	UA9999	UR9999
E57:Z014	E57:Z014	UA	UR	9999	UA9999	UR9999
E57:Z015	E57:Z015	UA	UR	9999	UA9999	UR9999
E57:Z016	E57:Z016	UA	UR	9999	UA9999	UR9999
E57:Z017	E57:Z017	UA	UR	9999	UA9999	UR9999
E57:Z018	E57:Z018	UA	UR	9999	UA9999	UR9999
E57:Z019	E57:Z019	UA	UR	9999	UA9999	UR9999
E57:Z020	E57:Z020	UA	UR	9999	UA9999	UR9999
E57:Z021	E57:Z021	UA	UR	9999	UA9999	UR9999
E57:Z022	E57:Z022	UA	UR	9999	UA9999	UR9999
E57:Z023	E57:Z023	UA	UR	9999	UA9999	UR9999
E57:Z024	E57:Z024	UA	UR	9999	UA9999	UR9999
E57:Z025	E57:Z025	UA	UR	9999	UA9999	UR9999
E57:Z026	E57:Z026	UA	UR	9999	UA9999	UR9999
E57:Z027	E57:Z027	UA	UR	9999	UA9999	UR9999
E57:Z028	E57:Z028	UA	UR	9999	UA9999	UR9999
E57:Z029	E57:Z029	UA	UR	9999	UA9999	UR9999
E57:Z030	E57:Z030	UA	UR	9999	UA9999	UR9999
E57:Z031	E57:Z031	UA	UR	9999	UA9999	UR9999
E57:Z032	E57:Z032	UA	UR	9999	UA9999	UR9999
E57:S001	E57 Cab Tamper	TA	TR	9999	TA9999	TR9999
E57:S002	E57 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E57:S003	E57 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E57:S004	E57 AC fail	AT	AR	9999	AT9999	AR9999
E57:S005	E57 Low Batt	YT	YR	9999	YT9999	YR9999
E57:S006	E57 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E57:S007	E57 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E57:S008	E57 Low Volts	YP	YQ	9999	YP9999	YQ9999
E57:S009	E57 PS Fail	YP	YQ	9999	YP9999	YQ9999
E57:S010	E57 Batt Test	IA	IR	9999	IA9999	IR9999
E57:S011	E57 Spare1	UA	UR	9999	UA9999	UR9999
E57:S012	E57 Spare2	UA	UR	9999	UA9999	UR9999
E57:S013	E57 Spare3	UA	UR	9999	UA9999	UR9999
E57:S014	E57 Spare4	UA	UR	9999	UA9999	UR9999
E57:S015	E57 Spare5	UA	UR	9999	UA9999	UR9999
E57:S016	E57 Spare6	UA	UR	9999	UA9999	UR9999
E57:S017	E57 Spare7	UA	UR	9999	UA9999	UR9999
E57:S018	E57 Unibus	EM	EN	9999	EM9999	EN9999
E57:S019	E57 LAN Comms	EM	EN	9999	EM9999	EN9999
E57:S020	E57 Spare8	UA	UR	9999	UA9999	UR9999
E57:S021	E57 Spare9	UA	UR	9999	UA9999	UR9999
E58:Z001	E58:Z001	UA	UR	9999	UA9999	UR9999
E58:Z002	E58:Z002	UA	UR	9999	UA9999	UR9999
E58:Z003	E58:Z003	UA	UR	9999	UA9999	UR9999
E58:Z004	E58:Z004	UA	UR	9999	UA9999	UR9999
E58:Z005	E58:Z005	UA	UR	9999	UA9999	UR9999
E58:Z006	E58:Z006	UA	UR	9999	UA9999	UR9999
E58:Z007	E58:Z007	UA	UR	9999	UA9999	UR9999
E58:Z008	E58:Z008	UA	UR	9999	UA9999	UR9999
E58:Z009	E58:Z009	UA	UR	9999	UA9999	UR9999
E58:Z010	E58:Z010	UA	UR	9999	UA9999	UR9999
E58:Z011	E58:Z011	UA	UR	9999	UA9999	UR9999
E58:Z012	E58:Z012	UA	UR	9999	UA9999	UR9999
E58:Z013	E58:Z013	UA	UR	9999	UA9999	UR9999
E58:Z014	E58:Z014	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E58:Z015	E58:Z015	UA	UR	9999	UA9999	UR9999
E58:Z016	E58:Z016	UA	UR	9999	UA9999	UR9999
E58:Z017	E58:Z017	UA	UR	9999	UA9999	UR9999
E58:Z018	E58:Z018	UA	UR	9999	UA9999	UR9999
E58:Z019	E58:Z019	UA	UR	9999	UA9999	UR9999
E58:Z020	E58:Z020	UA	UR	9999	UA9999	UR9999
E58:Z021	E58:Z021	UA	UR	9999	UA9999	UR9999
E58:Z022	E58:Z022	UA	UR	9999	UA9999	UR9999
E58:Z023	E58:Z023	UA	UR	9999	UA9999	UR9999
E58:Z024	E58:Z024	UA	UR	9999	UA9999	UR9999
E58:Z025	E58:Z025	UA	UR	9999	UA9999	UR9999
E58:Z026	E58:Z026	UA	UR	9999	UA9999	UR9999
E58:Z027	E58:Z027	UA	UR	9999	UA9999	UR9999
E58:Z028	E58:Z028	UA	UR	9999	UA9999	UR9999
E58:Z029	E58:Z029	UA	UR	9999	UA9999	UR9999
E58:Z030	E58:Z030	UA	UR	9999	UA9999	UR9999
E58:Z031	E58:Z031	UA	UR	9999	UA9999	UR9999
E58:Z032	E58:Z032	UA	UR	9999	UA9999	UR9999
E58:S001	E58 Cab Tamper	TA	TR	9999	TA9999	TR9999
E58:S002	E58 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E58:S003	E58 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E58:S004	E58 AC fail	AT	AR	9999	AT9999	AR9999
E58:S005	E58 Low Batt	YT	YR	9999	YT9999	YR9999
E58:S006	E58 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E58:S007	E58 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E58:S008	E58 Low Volts	YP	YQ	9999	YP9999	YQ9999
E58:S009	E58 PS Fail	YP	YQ	9999	YP9999	YQ9999
E58:S010	E58 Batt Test	IA	IR	9999	IA9999	IR9999
E58:S011	E58 Spare1	UA	UR	9999	UA9999	UR9999
E58:S012	E58 Spare2	UA	UR	9999	UA9999	UR9999
E58:S013	E58 Spare3	UA	UR	9999	UA9999	UR9999
E58:S014	E58 Spare4	UA	UR	9999	UA9999	UR9999
E58:S015	E58 Spare5	UA	UR	9999	UA9999	UR9999
E58:S016	E58 Spare6	UA	UR	9999	UA9999	UR9999
E58:S017	E58 Spare7	UA	UR	9999	UA9999	UR9999
E58:S018	E58 Unibus	EM	EN	9999	EM9999	EN9999
E58:S019	E58 LAN Comms	EM	EN	9999	EM9999	EN9999
E58:S020	E58 Spare8	UA	UR	9999	UA9999	UR9999
E58:S021	E58 Spare9	UA	UR	9999	UA9999	UR9999
E59:Z001	E59:Z001	UA	UR	9999	UA9999	UR9999
E59:Z002	E59:Z002	UA	UR	9999	UA9999	UR9999
E59:Z003	E59:Z003	UA	UR	9999	UA9999	UR9999
E59:Z004	E59:Z004	UA	UR	9999	UA9999	UR9999
E59:Z005	E59:Z005	UA	UR	9999	UA9999	UR9999
E59:Z006	E59:Z006	UA	UR	9999	UA9999	UR9999
E59:Z007	E59:Z007	UA	UR	9999	UA9999	UR9999
E59:Z008	E59:Z008	UA	UR	9999	UA9999	UR9999
E59:Z009	E59:Z009	UA	UR	9999	UA9999	UR9999
E59:Z010	E59:Z010	UA	UR	9999	UA9999	UR9999
E59:Z011	E59:Z011	UA	UR	9999	UA9999	UR9999
E59:Z012	E59:Z012	UA	UR	9999	UA9999	UR9999
E59:Z013	E59:Z013	UA	UR	9999	UA9999	UR9999
E59:Z014	E59:Z014	UA	UR	9999	UA9999	UR9999
E59:Z015	E59:Z015	UA	UR	9999	UA9999	UR9999
E59:Z016	E59:Z016	UA	UR	9999	UA9999	UR9999
E59:Z017	E59:Z017	UA	UR	9999	UA9999	UR9999
E59:Z018	E59:Z018	UA	UR	9999	UA9999	UR9999
E59:Z019	E59:Z019	UA	UR	9999	UA9999	UR9999
E59:Z020	E59:Z020	UA	UR	9999	UA9999	UR9999
E59:Z021	E59:Z021	UA	UR	9999	UA9999	UR9999
E59:Z022	E59:Z022	UA	UR	9999	UA9999	UR9999
E59:Z023	E59:Z023	UA	UR	9999	UA9999	UR9999
E59:Z024	E59:Z024	UA	UR	9999	UA9999	UR9999
E59:Z025	E59:Z025	UA	UR	9999	UA9999	UR9999
E59:Z026	E59:Z026	UA	UR	9999	UA9999	UR9999
E59:Z027	E59:Z027	UA	UR	9999	UA9999	UR9999
E59:Z028	E59:Z028	UA	UR	9999	UA9999	UR9999
E59:Z029	E59:Z029	UA	UR	9999	UA9999	UR9999
E59:Z030	E59:Z030	UA	UR	9999	UA9999	UR9999
E59:Z031	E59:Z031	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E59:Z032	E59:Z032	UA	UR	9999	UA9999	UR9999
E59:S001	E59 Cab Tamper	TA	TR	9999	TA9999	TR9999
E59:S002	E59 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E59:S003	E59 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E59:S004	E59 AC fail	AT	AR	9999	AT9999	AR9999
E59:S005	E59 Low Batt	YT	YR	9999	YT9999	YR9999
E59:S006	E59 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E59:S007	E59 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E59:S008	E59 Low Volts	YP	YQ	9999	YP9999	YQ9999
E59:S009	E59 PS Fail	YP	YQ	9999	YP9999	YQ9999
E59:S010	E59 Batt Test	IA	IR	9999	IA9999	IR9999
E59:S011	E59 Spare1	UA	UR	9999	UA9999	UR9999
E59:S012	E59 Spare2	UA	UR	9999	UA9999	UR9999
E59:S013	E59 Spare3	UA	UR	9999	UA9999	UR9999
E59:S014	E59 Spare4	UA	UR	9999	UA9999	UR9999
E59:S015	E59 Spare5	UA	UR	9999	UA9999	UR9999
E59:S016	E59 Spare6	UA	UR	9999	UA9999	UR9999
E59:S017	E59 Spare7	UA	UR	9999	UA9999	UR9999
E59:S018	E59 Unibus	EM	EN	9999	EM9999	EN9999
E59:S019	E59 LAN Comms	EM	EN	9999	EM9999	EN9999
E59:S020	E59 Spare8	UA	UR	9999	UA9999	UR9999
E59:S021	E59 Spare9	UA	UR	9999	UA9999	UR9999
E60:Z001	E60:Z001	UA	UR	9999	UA9999	UR9999
E60:Z002	E60:Z002	UA	UR	9999	UA9999	UR9999
E60:Z003	E60:Z003	UA	UR	9999	UA9999	UR9999
E60:Z004	E60:Z004	UA	UR	9999	UA9999	UR9999
E60:Z005	E60:Z005	UA	UR	9999	UA9999	UR9999
E60:Z006	E60:Z006	UA	UR	9999	UA9999	UR9999
E60:Z007	E60:Z007	UA	UR	9999	UA9999	UR9999
E60:Z008	E60:Z008	UA	UR	9999	UA9999	UR9999
E60:Z009	E60:Z009	UA	UR	9999	UA9999	UR9999
E60:Z010	E60:Z010	UA	UR	9999	UA9999	UR9999
E60:Z011	E60:Z011	UA	UR	9999	UA9999	UR9999
E60:Z012	E60:Z012	UA	UR	9999	UA9999	UR9999
E60:Z013	E60:Z013	UA	UR	9999	UA9999	UR9999
E60:Z014	E60:Z014	UA	UR	9999	UA9999	UR9999
E60:Z015	E60:Z015	UA	UR	9999	UA9999	UR9999
E60:Z016	E60:Z016	UA	UR	9999	UA9999	UR9999
E60:Z017	E60:Z017	UA	UR	9999	UA9999	UR9999
E60:Z018	E60:Z018	UA	UR	9999	UA9999	UR9999
E60:Z019	E60:Z019	UA	UR	9999	UA9999	UR9999
E60:Z020	E60:Z020	UA	UR	9999	UA9999	UR9999
E60:Z021	E60:Z021	UA	UR	9999	UA9999	UR9999
E60:Z022	E60:Z022	UA	UR	9999	UA9999	UR9999
E60:Z023	E60:Z023	UA	UR	9999	UA9999	UR9999
E60:Z024	E60:Z024	UA	UR	9999	UA9999	UR9999
E60:Z025	E60:Z025	UA	UR	9999	UA9999	UR9999
E60:Z026	E60:Z026	UA	UR	9999	UA9999	UR9999
E60:Z027	E60:Z027	UA	UR	9999	UA9999	UR9999
E60:Z028	E60:Z028	UA	UR	9999	UA9999	UR9999
E60:Z029	E60:Z029	UA	UR	9999	UA9999	UR9999
E60:Z030	E60:Z030	UA	UR	9999	UA9999	UR9999
E60:Z031	E60:Z031	UA	UR	9999	UA9999	UR9999
E60:Z032	E60:Z032	UA	UR	9999	UA9999	UR9999
E60:S001	E60 Cab Tamper	TA	TR	9999	TA9999	TR9999
E60:S002	E60 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E60:S003	E60 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E60:S004	E60 AC fail	AT	AR	9999	AT9999	AR9999
E60:S005	E60 Low Batt	YT	YR	9999	YT9999	YR9999
E60:S006	E60 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E60:S007	E60 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E60:S008	E60 Low Volts	YP	YQ	9999	YP9999	YQ9999
E60:S009	E60 PS Fail	YP	YQ	9999	YP9999	YQ9999
E60:S010	E60 Batt Test	IA	IR	9999	IA9999	IR9999
E60:S011	E60 Spare1	UA	UR	9999	UA9999	UR9999
E60:S012	E60 Spare2	UA	UR	9999	UA9999	UR9999
E60:S013	E60 Spare3	UA	UR	9999	UA9999	UR9999
E60:S014	E60 Spare4	UA	UR	9999	UA9999	UR9999
E60:S015	E60 Spare5	UA	UR	9999	UA9999	UR9999
E60:S016	E60 Spare6	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E60:S017	E60 Spare7	UA	UR	9999	UA9999	UR9999
E60:S018	E60 Unibus	EM	EN	9999	EM9999	EN9999
E60:S019	E60 LAN Comms	EM	EN	9999	EM9999	EN9999
E60:S020	E60 Spare8	UA	UR	9999	UA9999	UR9999
E60:S021	E60 Spare9	UA	UR	9999	UA9999	UR9999
E61:Z001	E61:Z001	UA	UR	9999	UA9999	UR9999
E61:Z002	E61:Z002	UA	UR	9999	UA9999	UR9999
E61:Z003	E61:Z003	UA	UR	9999	UA9999	UR9999
E61:Z004	E61:Z004	UA	UR	9999	UA9999	UR9999
E61:Z005	E61:Z005	UA	UR	9999	UA9999	UR9999
E61:Z006	E61:Z006	UA	UR	9999	UA9999	UR9999
E61:Z007	E61:Z007	UA	UR	9999	UA9999	UR9999
E61:Z008	E61:Z008	UA	UR	9999	UA9999	UR9999
E61:Z009	E61:Z009	UA	UR	9999	UA9999	UR9999
E61:Z010	E61:Z010	UA	UR	9999	UA9999	UR9999
E61:Z011	E61:Z011	UA	UR	9999	UA9999	UR9999
E61:Z012	E61:Z012	UA	UR	9999	UA9999	UR9999
E61:Z013	E61:Z013	UA	UR	9999	UA9999	UR9999
E61:Z014	E61:Z014	UA	UR	9999	UA9999	UR9999
E61:Z015	E61:Z015	UA	UR	9999	UA9999	UR9999
E61:Z016	E61:Z016	UA	UR	9999	UA9999	UR9999
E61:Z017	E61:Z017	UA	UR	9999	UA9999	UR9999
E61:Z018	E61:Z018	UA	UR	9999	UA9999	UR9999
E61:Z019	E61:Z019	UA	UR	9999	UA9999	UR9999
E61:Z020	E61:Z020	UA	UR	9999	UA9999	UR9999
E61:Z021	E61:Z021	UA	UR	9999	UA9999	UR9999
E61:Z022	E61:Z022	UA	UR	9999	UA9999	UR9999
E61:Z023	E61:Z023	UA	UR	9999	UA9999	UR9999
E61:Z024	E61:Z024	UA	UR	9999	UA9999	UR9999
E61:Z025	E61:Z025	UA	UR	9999	UA9999	UR9999
E61:Z026	E61:Z026	UA	UR	9999	UA9999	UR9999
E61:Z027	E61:Z027	UA	UR	9999	UA9999	UR9999
E61:Z028	E61:Z028	UA	UR	9999	UA9999	UR9999
E61:Z029	E61:Z029	UA	UR	9999	UA9999	UR9999
E61:Z030	E61:Z030	UA	UR	9999	UA9999	UR9999
E61:Z031	E61:Z031	UA	UR	9999	UA9999	UR9999
E61:Z032	E61:Z032	UA	UR	9999	UA9999	UR9999
E61:S001	E61 Cab Tamper	TA	TR	9999	TA9999	TR9999
E61:S002	E61 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E61:S003	E61 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E61:S004	E61 AC fail	AT	AR	9999	AT9999	AR9999
E61:S005	E61 Low Batt	YT	YR	9999	YT9999	YR9999
E61:S006	E61 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E61:S007	E61 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E61:S008	E61 Low Volts	YP	YQ	9999	YP9999	YQ9999
E61:S009	E61 PS Fail	YP	YQ	9999	YP9999	YQ9999
E61:S010	E61 Batt Test	IA	IR	9999	IA9999	IR9999
E61:S011	E61 Spare1	UA	UR	9999	UA9999	UR9999
E61:S012	E61 Spare2	UA	UR	9999	UA9999	UR9999
E61:S013	E61 Spare3	UA	UR	9999	UA9999	UR9999
E61:S014	E61 Spare4	UA	UR	9999	UA9999	UR9999
E61:S015	E61 Spare5	UA	UR	9999	UA9999	UR9999
E61:S016	E61 Spare6	UA	UR	9999	UA9999	UR9999
E61:S017	E61 Spare7	UA	UR	9999	UA9999	UR9999
E61:S018	E61 Unibus	EM	EN	9999	EM9999	EN9999
E61:S019	E61 LAN Comms	EM	EN	9999	EM9999	EN9999
E61:S020	E61 Spare8	UA	UR	9999	UA9999	UR9999
E61:S021	E61 Spare9	UA	UR	9999	UA9999	UR9999
E62:Z001	E62:Z001	UA	UR	9999	UA9999	UR9999
E62:Z002	E62:Z002	UA	UR	9999	UA9999	UR9999
E62:Z003	E62:Z003	UA	UR	9999	UA9999	UR9999
E62:Z004	E62:Z004	UA	UR	9999	UA9999	UR9999
E62:Z005	E62:Z005	UA	UR	9999	UA9999	UR9999
E62:Z006	E62:Z006	UA	UR	9999	UA9999	UR9999
E62:Z007	E62:Z007	UA	UR	9999	UA9999	UR9999
E62:Z008	E62:Z008	UA	UR	9999	UA9999	UR9999
E62:Z009	E62:Z009	UA	UR	9999	UA9999	UR9999
E62:Z010	E62:Z010	UA	UR	9999	UA9999	UR9999
E62:Z011	E62:Z011	UA	UR	9999	UA9999	UR9999
E62:Z012	E62:Z012	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E62:Z013	E62:Z013	UA	UR	9999	UA9999	UR9999
E62:Z014	E62:Z014	UA	UR	9999	UA9999	UR9999
E62:Z015	E62:Z015	UA	UR	9999	UA9999	UR9999
E62:Z016	E62:Z016	UA	UR	9999	UA9999	UR9999
E62:Z017	E62:Z017	UA	UR	9999	UA9999	UR9999
E62:Z018	E62:Z018	UA	UR	9999	UA9999	UR9999
E62:Z019	E62:Z019	UA	UR	9999	UA9999	UR9999
E62:Z020	E62:Z020	UA	UR	9999	UA9999	UR9999
E62:Z021	E62:Z021	UA	UR	9999	UA9999	UR9999
E62:Z022	E62:Z022	UA	UR	9999	UA9999	UR9999
E62:Z023	E62:Z023	UA	UR	9999	UA9999	UR9999
E62:Z024	E62:Z024	UA	UR	9999	UA9999	UR9999
E62:Z025	E62:Z025	UA	UR	9999	UA9999	UR9999
E62:Z026	E62:Z026	UA	UR	9999	UA9999	UR9999
E62:Z027	E62:Z027	UA	UR	9999	UA9999	UR9999
E62:Z028	E62:Z028	UA	UR	9999	UA9999	UR9999
E62:Z029	E62:Z029	UA	UR	9999	UA9999	UR9999
E62:Z030	E62:Z030	UA	UR	9999	UA9999	UR9999
E62:Z031	E62:Z031	UA	UR	9999	UA9999	UR9999
E62:Z032	E62:Z032	UA	UR	9999	UA9999	UR9999
E62:S001	E62 Cab Tamper	TA	TR	9999	TA9999	TR9999
E62:S002	E62 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E62:S003	E62 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E62:S004	E62 AC fail	AT	AR	9999	AT9999	AR9999
E62:S005	E62 Low Batt	YT	YR	9999	YT9999	YR9999
E62:S006	E62 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E62:S007	E62 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E62:S008	E62 Low Volts	YP	YQ	9999	YP9999	YQ9999
E62:S009	E62 PS Fail	YP	YQ	9999	YP9999	YQ9999
E62:S010	E62 Batt Test	IA	IR	9999	IA9999	IR9999
E62:S011	E62 Spare1	UA	UR	9999	UA9999	UR9999
E62:S012	E62 Spare2	UA	UR	9999	UA9999	UR9999
E62:S013	E62 Spare3	UA	UR	9999	UA9999	UR9999
E62:S014	E62 Spare4	UA	UR	9999	UA9999	UR9999
E62:S015	E62 Spare5	UA	UR	9999	UA9999	UR9999
E62:S016	E62 Spare6	UA	UR	9999	UA9999	UR9999
E62:S017	E62 Spare7	UA	UR	9999	UA9999	UR9999
E62:S018	E62 Unibus	EM	EN	9999	EM9999	EN9999
E62:S019	E62 LAN Comms	EM	EN	9999	EM9999	EN9999
E62:S020	E62 Spare8	UA	UR	9999	UA9999	UR9999
E62:S021	E62 Spare9	UA	UR	9999	UA9999	UR9999
E63:Z001	E63:Z001	UA	UR	9999	UA9999	UR9999
E63:Z002	E63:Z002	UA	UR	9999	UA9999	UR9999
E63:Z003	E63:Z003	UA	UR	9999	UA9999	UR9999
E63:Z004	E63:Z004	UA	UR	9999	UA9999	UR9999
E63:Z005	E63:Z005	UA	UR	9999	UA9999	UR9999
E63:Z006	E63:Z006	UA	UR	9999	UA9999	UR9999
E63:Z007	E63:Z007	UA	UR	9999	UA9999	UR9999
E63:Z008	E63:Z008	UA	UR	9999	UA9999	UR9999
E63:Z009	E63:Z009	UA	UR	9999	UA9999	UR9999
E63:Z010	E63:Z010	UA	UR	9999	UA9999	UR9999
E63:Z011	E63:Z011	UA	UR	9999	UA9999	UR9999
E63:Z012	E63:Z012	UA	UR	9999	UA9999	UR9999
E63:Z013	E63:Z013	UA	UR	9999	UA9999	UR9999
E63:Z014	E63:Z014	UA	UR	9999	UA9999	UR9999
E63:Z015	E63:Z015	UA	UR	9999	UA9999	UR9999
E63:Z016	E63:Z016	UA	UR	9999	UA9999	UR9999
E63:Z017	E63:Z017	UA	UR	9999	UA9999	UR9999
E63:Z018	E63:Z018	UA	UR	9999	UA9999	UR9999
E63:Z019	E63:Z019	UA	UR	9999	UA9999	UR9999
E63:Z020	E63:Z020	UA	UR	9999	UA9999	UR9999
E63:Z021	E63:Z021	UA	UR	9999	UA9999	UR9999
E63:Z022	E63:Z022	UA	UR	9999	UA9999	UR9999
E63:Z023	E63:Z023	UA	UR	9999	UA9999	UR9999
E63:Z024	E63:Z024	UA	UR	9999	UA9999	UR9999
E63:Z025	E63:Z025	UA	UR	9999	UA9999	UR9999
E63:Z026	E63:Z026	UA	UR	9999	UA9999	UR9999
E63:Z027	E63:Z027	UA	UR	9999	UA9999	UR9999
E63:Z028	E63:Z028	UA	UR	9999	UA9999	UR9999
E63:Z029	E63:Z029	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E63:Z030	E63:Z030	UA	UR	9999	UA9999	UR9999
E63:Z031	E63:Z031	UA	UR	9999	UA9999	UR9999
E63:Z032	E63:Z032	UA	UR	9999	UA9999	UR9999
E63:S001	E63 Cab Tamper	TA	TR	9999	TA9999	TR9999
E63:S002	E63 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E63:S003	E63 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E63:S004	E63 AC fail	AT	AR	9999	AT9999	AR9999
E63:S005	E63 Low Batt	YT	YR	9999	YT9999	YR9999
E63:S006	E63 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E63:S007	E63 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E63:S008	E63 Low Volts	YP	YQ	9999	YP9999	YQ9999
E63:S009	E63 PS Fail	YP	YQ	9999	YP9999	YQ9999
E63:S010	E63 Batt Test	IA	IR	9999	IA9999	IR9999
E63:S011	E63 Spare1	UA	UR	9999	UA9999	UR9999
E63:S012	E63 Spare2	UA	UR	9999	UA9999	UR9999
E63:S013	E63 Spare3	UA	UR	9999	UA9999	UR9999
E63:S014	E63 Spare4	UA	UR	9999	UA9999	UR9999
E63:S015	E63 Spare5	UA	UR	9999	UA9999	UR9999
E63:S016	E63 Spare6	UA	UR	9999	UA9999	UR9999
E63:S017	E63 Spare7	UA	UR	9999	UA9999	UR9999
E63:S018	E63 Unibus	EM	EN	9999	EM9999	EN9999
E63:S019	E63 LAN Comms	EM	EN	9999	EM9999	EN9999
E63:S020	E63 Spare8	UA	UR	9999	UA9999	UR9999
E63:S021	E63 Spare9	UA	UR	9999	UA9999	UR9999
E64:Z001	E64:Z001	UA	UR	9999	UA9999	UR9999
E64:Z002	E64:Z002	UA	UR	9999	UA9999	UR9999
E64:Z003	E64:Z003	UA	UR	9999	UA9999	UR9999
E64:Z004	E64:Z004	UA	UR	9999	UA9999	UR9999
E64:Z005	E64:Z005	UA	UR	9999	UA9999	UR9999
E64:Z006	E64:Z006	UA	UR	9999	UA9999	UR9999
E64:Z007	E64:Z007	UA	UR	9999	UA9999	UR9999
E64:Z008	E64:Z008	UA	UR	9999	UA9999	UR9999
E64:Z009	E64:Z009	UA	UR	9999	UA9999	UR9999
E64:Z010	E64:Z010	UA	UR	9999	UA9999	UR9999
E64:Z011	E64:Z011	UA	UR	9999	UA9999	UR9999
E64:Z012	E64:Z012	UA	UR	9999	UA9999	UR9999
E64:Z013	E64:Z013	UA	UR	9999	UA9999	UR9999
E64:Z014	E64:Z014	UA	UR	9999	UA9999	UR9999
E64:Z015	E64:Z015	UA	UR	9999	UA9999	UR9999
E64:Z016	E64:Z016	UA	UR	9999	UA9999	UR9999
E64:Z017	E64:Z017	UA	UR	9999	UA9999	UR9999
E64:Z018	E64:Z018	UA	UR	9999	UA9999	UR9999
E64:Z019	E64:Z019	UA	UR	9999	UA9999	UR9999
E64:Z020	E64:Z020	UA	UR	9999	UA9999	UR9999
E64:Z021	E64:Z021	UA	UR	9999	UA9999	UR9999
E64:Z022	E64:Z022	UA	UR	9999	UA9999	UR9999
E64:Z023	E64:Z023	UA	UR	9999	UA9999	UR9999
E64:Z024	E64:Z024	UA	UR	9999	UA9999	UR9999
E64:Z025	E64:Z025	UA	UR	9999	UA9999	UR9999
E64:Z026	E64:Z026	UA	UR	9999	UA9999	UR9999
E64:Z027	E64:Z027	UA	UR	9999	UA9999	UR9999
E64:Z028	E64:Z028	UA	UR	9999	UA9999	UR9999
E64:Z029	E64:Z029	UA	UR	9999	UA9999	UR9999
E64:Z030	E64:Z030	UA	UR	9999	UA9999	UR9999
E64:Z031	E64:Z031	UA	UR	9999	UA9999	UR9999
E64:Z032	E64:Z032	UA	UR	9999	UA9999	UR9999
E64:S001	E64 Cab Tamper	TA	TR	9999	TA9999	TR9999
E64:S002	E64 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E64:S003	E64 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E64:S004	E64 AC fail	AT	AR	9999	AT9999	AR9999
E64:S005	E64 Low Batt	YT	YR	9999	YT9999	YR9999
E64:S006	E64 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E64:S007	E64 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E64:S008	E64 Low Volts	YP	YQ	9999	YP9999	YQ9999
E64:S009	E64 PS Fail	YP	YQ	9999	YP9999	YQ9999
E64:S010	E64 Batt Test	IA	IR	9999	IA9999	IR9999
E64:S011	E64 Spare1	UA	UR	9999	UA9999	UR9999
E64:S012	E64 Spare2	UA	UR	9999	UA9999	UR9999
E64:S013	E64 Spare3	UA	UR	9999	UA9999	UR9999
E64:S014	E64 Spare4	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E64:S015	E64 Spare5	UA	UR	9999	UA9999	UR9999
E64:S016	E64 Spare6	UA	UR	9999	UA9999	UR9999
E64:S017	E64 Spare7	UA	UR	9999	UA9999	UR9999
E64:S018	E64 Unibus	EM	EN	9999	EM9999	EN9999
E64:S019	E64 LAN Comms	EM	EN	9999	EM9999	EN9999
E64:S020	E64 Spare8	UA	UR	9999	UA9999	UR9999
E64:S021	E64 Spare9	UA	UR	9999	UA9999	UR9999
E65:Z001	E65:Z001	UA	UR	9999	UA9999	UR9999
E65:Z002	E65:Z002	UA	UR	9999	UA9999	UR9999
E65:Z003	E65:Z003	UA	UR	9999	UA9999	UR9999
E65:Z004	E65:Z004	UA	UR	9999	UA9999	UR9999
E65:Z005	E65:Z005	UA	UR	9999	UA9999	UR9999
E65:Z006	E65:Z006	UA	UR	9999	UA9999	UR9999
E65:Z007	E65:Z007	UA	UR	9999	UA9999	UR9999
E65:Z008	E65:Z008	UA	UR	9999	UA9999	UR9999
E65:Z009	E65:Z009	UA	UR	9999	UA9999	UR9999
E65:Z010	E65:Z010	UA	UR	9999	UA9999	UR9999
E65:Z011	E65:Z011	UA	UR	9999	UA9999	UR9999
E65:Z012	E65:Z012	UA	UR	9999	UA9999	UR9999
E65:Z013	E65:Z013	UA	UR	9999	UA9999	UR9999
E65:Z014	E65:Z014	UA	UR	9999	UA9999	UR9999
E65:Z015	E65:Z015	UA	UR	9999	UA9999	UR9999
E65:Z016	E65:Z016	UA	UR	9999	UA9999	UR9999
E65:Z017	E65:Z017	UA	UR	9999	UA9999	UR9999
E65:Z018	E65:Z018	UA	UR	9999	UA9999	UR9999
E65:Z019	E65:Z019	UA	UR	9999	UA9999	UR9999
E65:Z020	E65:Z020	UA	UR	9999	UA9999	UR9999
E65:Z021	E65:Z021	UA	UR	9999	UA9999	UR9999
E65:Z022	E65:Z022	UA	UR	9999	UA9999	UR9999
E65:Z023	E65:Z023	UA	UR	9999	UA9999	UR9999
E65:Z024	E65:Z024	UA	UR	9999	UA9999	UR9999
E65:Z025	E65:Z025	UA	UR	9999	UA9999	UR9999
E65:Z026	E65:Z026	UA	UR	9999	UA9999	UR9999
E65:Z027	E65:Z027	UA	UR	9999	UA9999	UR9999
E65:Z028	E65:Z028	UA	UR	9999	UA9999	UR9999
E65:Z029	E65:Z029	UA	UR	9999	UA9999	UR9999
E65:Z030	E65:Z030	UA	UR	9999	UA9999	UR9999
E65:Z031	E65:Z031	UA	UR	9999	UA9999	UR9999
E65:Z032	E65:Z032	UA	UR	9999	UA9999	UR9999
E65:S001	E65 Cab Tamper	TA	TR	9999	TA9999	TR9999
E65:S002	E65 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E65:S003	E65 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E65:S004	E65 AC fail	AT	AR	9999	AT9999	AR9999
E65:S005	E65 Low Batt	YT	YR	9999	YT9999	YR9999
E65:S006	E65 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E65:S007	E65 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E65:S008	E65 Low Volts	YP	YQ	9999	YP9999	YQ9999
E65:S009	E65 PS Fail	YP	YQ	9999	YP9999	YQ9999
E65:S010	E65 Batt Test	IA	IR	9999	IA9999	IR9999
E65:S011	E65 Spare1	UA	UR	9999	UA9999	UR9999
E65:S012	E65 Spare2	UA	UR	9999	UA9999	UR9999
E65:S013	E65 Spare3	UA	UR	9999	UA9999	UR9999
E65:S014	E65 Spare4	UA	UR	9999	UA9999	UR9999
E65:S015	E65 Spare5	UA	UR	9999	UA9999	UR9999
E65:S016	E65 Spare6	UA	UR	9999	UA9999	UR9999
E65:S017	E65 Spare7	UA	UR	9999	UA9999	UR9999
E65:S018	E65 Unibus	EM	EN	9999	EM9999	EN9999
E65:S019	E65 LAN Comms	EM	EN	9999	EM9999	EN9999
E65:S020	E65 Spare8	UA	UR	9999	UA9999	UR9999
E65:S021	E65 Spare9	UA	UR	9999	UA9999	UR9999
E66:Z001	E66:Z001	UA	UR	9999	UA9999	UR9999
E66:Z002	E66:Z002	UA	UR	9999	UA9999	UR9999
E66:Z003	E66:Z003	UA	UR	9999	UA9999	UR9999
E66:Z004	E66:Z004	UA	UR	9999	UA9999	UR9999
E66:Z005	E66:Z005	UA	UR	9999	UA9999	UR9999
E66:Z006	E66:Z006	UA	UR	9999	UA9999	UR9999
E66:Z007	E66:Z007	UA	UR	9999	UA9999	UR9999
E66:Z008	E66:Z008	UA	UR	9999	UA9999	UR9999
E66:Z009	E66:Z009	UA	UR	9999	UA9999	UR9999
E66:Z010	E66:Z010	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E66:Z011	E66:Z011	UA	UR	9999	UA9999	UR9999
E66:Z012	E66:Z012	UA	UR	9999	UA9999	UR9999
E66:Z013	E66:Z013	UA	UR	9999	UA9999	UR9999
E66:Z014	E66:Z014	UA	UR	9999	UA9999	UR9999
E66:Z015	E66:Z015	UA	UR	9999	UA9999	UR9999
E66:Z016	E66:Z016	UA	UR	9999	UA9999	UR9999
E66:Z017	E66:Z017	UA	UR	9999	UA9999	UR9999
E66:Z018	E66:Z018	UA	UR	9999	UA9999	UR9999
E66:Z019	E66:Z019	UA	UR	9999	UA9999	UR9999
E66:Z020	E66:Z020	UA	UR	9999	UA9999	UR9999
E66:Z021	E66:Z021	UA	UR	9999	UA9999	UR9999
E66:Z022	E66:Z022	UA	UR	9999	UA9999	UR9999
E66:Z023	E66:Z023	UA	UR	9999	UA9999	UR9999
E66:Z024	E66:Z024	UA	UR	9999	UA9999	UR9999
E66:Z025	E66:Z025	UA	UR	9999	UA9999	UR9999
E66:Z026	E66:Z026	UA	UR	9999	UA9999	UR9999
E66:Z027	E66:Z027	UA	UR	9999	UA9999	UR9999
E66:Z028	E66:Z028	UA	UR	9999	UA9999	UR9999
E66:Z029	E66:Z029	UA	UR	9999	UA9999	UR9999
E66:Z030	E66:Z030	UA	UR	9999	UA9999	UR9999
E66:Z031	E66:Z031	UA	UR	9999	UA9999	UR9999
E66:Z032	E66:Z032	UA	UR	9999	UA9999	UR9999
E66:S001	E66 Cab Tamper	TA	TR	9999	TA9999	TR9999
E66:S002	E66 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E66:S003	E66 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E66:S004	E66 AC fail	AT	AR	9999	AT9999	AR9999
E66:S005	E66 Low Batt	YT	YR	9999	YT9999	YR9999
E66:S006	E66 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E66:S007	E66 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E66:S008	E66 Low Volts	YP	YQ	9999	YP9999	YQ9999
E66:S009	E66 PS Fail	YP	YQ	9999	YP9999	YQ9999
E66:S010	E66 Batt Test	IA	IR	9999	IA9999	IR9999
E66:S011	E66 Spare1	UA	UR	9999	UA9999	UR9999
E66:S012	E66 Spare2	UA	UR	9999	UA9999	UR9999
E66:S013	E66 Spare3	UA	UR	9999	UA9999	UR9999
E66:S014	E66 Spare4	UA	UR	9999	UA9999	UR9999
E66:S015	E66 Spare5	UA	UR	9999	UA9999	UR9999
E66:S016	E66 Spare6	UA	UR	9999	UA9999	UR9999
E66:S017	E66 Spare7	UA	UR	9999	UA9999	UR9999
E66:S018	E66 Unibus	EM	EN	9999	EM9999	EN9999
E66:S019	E66 LAN Comms	EM	EN	9999	EM9999	EN9999
E66:S020	E66 Spare8	UA	UR	9999	UA9999	UR9999
E66:S021	E66 Spare9	UA	UR	9999	UA9999	UR9999
E67:Z001	E67:Z001	UA	UR	9999	UA9999	UR9999
E67:Z002	E67:Z002	UA	UR	9999	UA9999	UR9999
E67:Z003	E67:Z003	UA	UR	9999	UA9999	UR9999
E67:Z004	E67:Z004	UA	UR	9999	UA9999	UR9999
E67:Z005	E67:Z005	UA	UR	9999	UA9999	UR9999
E67:Z006	E67:Z006	UA	UR	9999	UA9999	UR9999
E67:Z007	E67:Z007	UA	UR	9999	UA9999	UR9999
E67:Z008	E67:Z008	UA	UR	9999	UA9999	UR9999
E67:Z009	E67:Z009	UA	UR	9999	UA9999	UR9999
E67:Z010	E67:Z010	UA	UR	9999	UA9999	UR9999
E67:Z011	E67:Z011	UA	UR	9999	UA9999	UR9999
E67:Z012	E67:Z012	UA	UR	9999	UA9999	UR9999
E67:Z013	E67:Z013	UA	UR	9999	UA9999	UR9999
E67:Z014	E67:Z014	UA	UR	9999	UA9999	UR9999
E67:Z015	E67:Z015	UA	UR	9999	UA9999	UR9999
E67:Z016	E67:Z016	UA	UR	9999	UA9999	UR9999
E67:Z017	E67:Z017	UA	UR	9999	UA9999	UR9999
E67:Z018	E67:Z018	UA	UR	9999	UA9999	UR9999
E67:Z019	E67:Z019	UA	UR	9999	UA9999	UR9999
E67:Z020	E67:Z020	UA	UR	9999	UA9999	UR9999
E67:Z021	E67:Z021	UA	UR	9999	UA9999	UR9999
E67:Z022	E67:Z022	UA	UR	9999	UA9999	UR9999
E67:Z023	E67:Z023	UA	UR	9999	UA9999	UR9999
E67:Z024	E67:Z024	UA	UR	9999	UA9999	UR9999
E67:Z025	E67:Z025	UA	UR	9999	UA9999	UR9999
E67:Z026	E67:Z026	UA	UR	9999	UA9999	UR9999
E67:Z027	E67:Z027	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E67:Z028	E67:Z028	UA	UR	9999	UA9999	UR9999
E67:Z029	E67:Z029	UA	UR	9999	UA9999	UR9999
E67:Z030	E67:Z030	UA	UR	9999	UA9999	UR9999
E67:Z031	E67:Z031	UA	UR	9999	UA9999	UR9999
E67:Z032	E67:Z032	UA	UR	9999	UA9999	UR9999
E67:S001	E67 Cab Tamper	TA	TR	9999	TA9999	TR9999
E67:S002	E67 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E67:S003	E67 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E67:S004	E67 AC fail	AT	AR	9999	AT9999	AR9999
E67:S005	E67 Low Batt	YT	YR	9999	YT9999	YR9999
E67:S006	E67 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E67:S007	E67 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E67:S008	E67 Low Volts	YP	YQ	9999	YP9999	YQ9999
E67:S009	E67 PS Fail	YP	YQ	9999	YP9999	YQ9999
E67:S010	E67 Batt Test	IA	IR	9999	IA9999	IR9999
E67:S011	E67 Spare1	UA	UR	9999	UA9999	UR9999
E67:S012	E67 Spare2	UA	UR	9999	UA9999	UR9999
E67:S013	E67 Spare3	UA	UR	9999	UA9999	UR9999
E67:S014	E67 Spare4	UA	UR	9999	UA9999	UR9999
E67:S015	E67 Spare5	UA	UR	9999	UA9999	UR9999
E67:S016	E67 Spare6	UA	UR	9999	UA9999	UR9999
E67:S017	E67 Spare7	UA	UR	9999	UA9999	UR9999
E67:S018	E67 Unibus	EM	EN	9999	EM9999	EN9999
E67:S019	E67 LAN Comms	EM	EN	9999	EM9999	EN9999
E67:S020	E67 Spare8	UA	UR	9999	UA9999	UR9999
E67:S021	E67 Spare9	UA	UR	9999	UA9999	UR9999
E68:Z001	E68:Z001	UA	UR	9999	UA9999	UR9999
E68:Z002	E68:Z002	UA	UR	9999	UA9999	UR9999
E68:Z003	E68:Z003	UA	UR	9999	UA9999	UR9999
E68:Z004	E68:Z004	UA	UR	9999	UA9999	UR9999
E68:Z005	E68:Z005	UA	UR	9999	UA9999	UR9999
E68:Z006	E68:Z006	UA	UR	9999	UA9999	UR9999
E68:Z007	E68:Z007	UA	UR	9999	UA9999	UR9999
E68:Z008	E68:Z008	UA	UR	9999	UA9999	UR9999
E68:Z009	E68:Z009	UA	UR	9999	UA9999	UR9999
E68:Z010	E68:Z010	UA	UR	9999	UA9999	UR9999
E68:Z011	E68:Z011	UA	UR	9999	UA9999	UR9999
E68:Z012	E68:Z012	UA	UR	9999	UA9999	UR9999
E68:Z013	E68:Z013	UA	UR	9999	UA9999	UR9999
E68:Z014	E68:Z014	UA	UR	9999	UA9999	UR9999
E68:Z015	E68:Z015	UA	UR	9999	UA9999	UR9999
E68:Z016	E68:Z016	UA	UR	9999	UA9999	UR9999
E68:Z017	E68:Z017	UA	UR	9999	UA9999	UR9999
E68:Z018	E68:Z018	UA	UR	9999	UA9999	UR9999
E68:Z019	E68:Z019	UA	UR	9999	UA9999	UR9999
E68:Z020	E68:Z020	UA	UR	9999	UA9999	UR9999
E68:Z021	E68:Z021	UA	UR	9999	UA9999	UR9999
E68:Z022	E68:Z022	UA	UR	9999	UA9999	UR9999
E68:Z023	E68:Z023	UA	UR	9999	UA9999	UR9999
E68:Z024	E68:Z024	UA	UR	9999	UA9999	UR9999
E68:Z025	E68:Z025	UA	UR	9999	UA9999	UR9999
E68:Z026	E68:Z026	UA	UR	9999	UA9999	UR9999
E68:Z027	E68:Z027	UA	UR	9999	UA9999	UR9999
E68:Z028	E68:Z028	UA	UR	9999	UA9999	UR9999
E68:Z029	E68:Z029	UA	UR	9999	UA9999	UR9999
E68:Z030	E68:Z030	UA	UR	9999	UA9999	UR9999
E68:Z031	E68:Z031	UA	UR	9999	UA9999	UR9999
E68:Z032	E68:Z032	UA	UR	9999	UA9999	UR9999
E68:S001	E68 Cab Tamper	TA	TR	9999	TA9999	TR9999
E68:S002	E68 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E68:S003	E68 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E68:S004	E68 AC fail	AT	AR	9999	AT9999	AR9999
E68:S005	E68 Low Batt	YT	YR	9999	YT9999	YR9999
E68:S006	E68 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E68:S007	E68 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E68:S008	E68 Low Volts	YP	YQ	9999	YP9999	YQ9999
E68:S009	E68 PS Fail	YP	YQ	9999	YP9999	YQ9999
E68:S010	E68 Batt Test	IA	IR	9999	IA9999	IR9999
E68:S011	E68 Spare1	UA	UR	9999	UA9999	UR9999
E68:S012	E68 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E68:S013	E68 Spare3	UA	UR	9999	UA9999	UR9999
E68:S014	E68 Spare4	UA	UR	9999	UA9999	UR9999
E68:S015	E68 Spare5	UA	UR	9999	UA9999	UR9999
E68:S016	E68 Spare6	UA	UR	9999	UA9999	UR9999
E68:S017	E68 Spare7	UA	UR	9999	UA9999	UR9999
E68:S018	E68 Unibus	EM	EN	9999	EM9999	EN9999
E68:S019	E68 LAN Comms	EM	EN	9999	EM9999	EN9999
E68:S020	E68 Spare8	UA	UR	9999	UA9999	UR9999
E68:S021	E68 Spare9	UA	UR	9999	UA9999	UR9999
E69:Z001	E69:Z001	UA	UR	9999	UA9999	UR9999
E69:Z002	E69:Z002	UA	UR	9999	UA9999	UR9999
E69:Z003	E69:Z003	UA	UR	9999	UA9999	UR9999
E69:Z004	E69:Z004	UA	UR	9999	UA9999	UR9999
E69:Z005	E69:Z005	UA	UR	9999	UA9999	UR9999
E69:Z006	E69:Z006	UA	UR	9999	UA9999	UR9999
E69:Z007	E69:Z007	UA	UR	9999	UA9999	UR9999
E69:Z008	E69:Z008	UA	UR	9999	UA9999	UR9999
E69:Z009	E69:Z009	UA	UR	9999	UA9999	UR9999
E69:Z010	E69:Z010	UA	UR	9999	UA9999	UR9999
E69:Z011	E69:Z011	UA	UR	9999	UA9999	UR9999
E69:Z012	E69:Z012	UA	UR	9999	UA9999	UR9999
E69:Z013	E69:Z013	UA	UR	9999	UA9999	UR9999
E69:Z014	E69:Z014	UA	UR	9999	UA9999	UR9999
E69:Z015	E69:Z015	UA	UR	9999	UA9999	UR9999
E69:Z016	E69:Z016	UA	UR	9999	UA9999	UR9999
E69:Z017	E69:Z017	UA	UR	9999	UA9999	UR9999
E69:Z018	E69:Z018	UA	UR	9999	UA9999	UR9999
E69:Z019	E69:Z019	UA	UR	9999	UA9999	UR9999
E69:Z020	E69:Z020	UA	UR	9999	UA9999	UR9999
E69:Z021	E69:Z021	UA	UR	9999	UA9999	UR9999
E69:Z022	E69:Z022	UA	UR	9999	UA9999	UR9999
E69:Z023	E69:Z023	UA	UR	9999	UA9999	UR9999
E69:Z024	E69:Z024	UA	UR	9999	UA9999	UR9999
E69:Z025	E69:Z025	UA	UR	9999	UA9999	UR9999
E69:Z026	E69:Z026	UA	UR	9999	UA9999	UR9999
E69:Z027	E69:Z027	UA	UR	9999	UA9999	UR9999
E69:Z028	E69:Z028	UA	UR	9999	UA9999	UR9999
E69:Z029	E69:Z029	UA	UR	9999	UA9999	UR9999
E69:Z030	E69:Z030	UA	UR	9999	UA9999	UR9999
E69:Z031	E69:Z031	UA	UR	9999	UA9999	UR9999
E69:Z032	E69:Z032	UA	UR	9999	UA9999	UR9999
E69:S001	E69 Cab Tamper	TA	TR	9999	TA9999	TR9999
E69:S002	E69 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E69:S003	E69 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E69:S004	E69 AC fail	AT	AR	9999	AT9999	AR9999
E69:S005	E69 Low Batt	YT	YR	9999	YT9999	YR9999
E69:S006	E69 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E69:S007	E69 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E69:S008	E69 Low Volts	YP	YQ	9999	YP9999	YQ9999
E69:S009	E69 PS Fail	YP	YQ	9999	YP9999	YQ9999
E69:S010	E69 Batt Test	IA	IR	9999	IA9999	IR9999
E69:S011	E69 Spare1	UA	UR	9999	UA9999	UR9999
E69:S012	E69 Spare2	UA	UR	9999	UA9999	UR9999
E69:S013	E69 Spare3	UA	UR	9999	UA9999	UR9999
E69:S014	E69 Spare4	UA	UR	9999	UA9999	UR9999
E69:S015	E69 Spare5	UA	UR	9999	UA9999	UR9999
E69:S016	E69 Spare6	UA	UR	9999	UA9999	UR9999
E69:S017	E69 Spare7	UA	UR	9999	UA9999	UR9999
E69:S018	E69 Unibus	EM	EN	9999	EM9999	EN9999
E69:S019	E69 LAN Comms	EM	EN	9999	EM9999	EN9999
E69:S020	E69 Spare8	UA	UR	9999	UA9999	UR9999
E69:S021	E69 Spare9	UA	UR	9999	UA9999	UR9999
E70:Z001	E70:Z001	UA	UR	9999	UA9999	UR9999
E70:Z002	E70:Z002	UA	UR	9999	UA9999	UR9999
E70:Z003	E70:Z003	UA	UR	9999	UA9999	UR9999
E70:Z004	E70:Z004	UA	UR	9999	UA9999	UR9999
E70:Z005	E70:Z005	UA	UR	9999	UA9999	UR9999
E70:Z006	E70:Z006	UA	UR	9999	UA9999	UR9999
E70:Z007	E70:Z007	UA	UR	9999	UA9999	UR9999
E70:Z008	E70:Z008	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E70:Z009	E70:Z009	UA	UR	9999	UA9999	UR9999
E70:Z010	E70:Z010	UA	UR	9999	UA9999	UR9999
E70:Z011	E70:Z011	UA	UR	9999	UA9999	UR9999
E70:Z012	E70:Z012	UA	UR	9999	UA9999	UR9999
E70:Z013	E70:Z013	UA	UR	9999	UA9999	UR9999
E70:Z014	E70:Z014	UA	UR	9999	UA9999	UR9999
E70:Z015	E70:Z015	UA	UR	9999	UA9999	UR9999
E70:Z016	E70:Z016	UA	UR	9999	UA9999	UR9999
E70:Z017	E70:Z017	UA	UR	9999	UA9999	UR9999
E70:Z018	E70:Z018	UA	UR	9999	UA9999	UR9999
E70:Z019	E70:Z019	UA	UR	9999	UA9999	UR9999
E70:Z020	E70:Z020	UA	UR	9999	UA9999	UR9999
E70:Z021	E70:Z021	UA	UR	9999	UA9999	UR9999
E70:Z022	E70:Z022	UA	UR	9999	UA9999	UR9999
E70:Z023	E70:Z023	UA	UR	9999	UA9999	UR9999
E70:Z024	E70:Z024	UA	UR	9999	UA9999	UR9999
E70:Z025	E70:Z025	UA	UR	9999	UA9999	UR9999
E70:Z026	E70:Z026	UA	UR	9999	UA9999	UR9999
E70:Z027	E70:Z027	UA	UR	9999	UA9999	UR9999
E70:Z028	E70:Z028	UA	UR	9999	UA9999	UR9999
E70:Z029	E70:Z029	UA	UR	9999	UA9999	UR9999
E70:Z030	E70:Z030	UA	UR	9999	UA9999	UR9999
E70:Z031	E70:Z031	UA	UR	9999	UA9999	UR9999
E70:Z032	E70:Z032	UA	UR	9999	UA9999	UR9999
E70:S001	E70 Cab Tamper	TA	TR	9999	TA9999	TR9999
E70:S002	E70 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E70:S003	E70 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E70:S004	E70 AC fail	AT	AR	9999	AT9999	AR9999
E70:S005	E70 Low Batt	YT	YR	9999	YT9999	YR9999
E70:S006	E70 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E70:S007	E70 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E70:S008	E70 Low Volts	YP	YQ	9999	YP9999	YQ9999
E70:S009	E70 PS Fail	YP	YQ	9999	YP9999	YQ9999
E70:S010	E70 Batt Test	IA	IR	9999	IA9999	IR9999
E70:S011	E70 Spare1	UA	UR	9999	UA9999	UR9999
E70:S012	E70 Spare2	UA	UR	9999	UA9999	UR9999
E70:S013	E70 Spare3	UA	UR	9999	UA9999	UR9999
E70:S014	E70 Spare4	UA	UR	9999	UA9999	UR9999
E70:S015	E70 Spare5	UA	UR	9999	UA9999	UR9999
E70:S016	E70 Spare6	UA	UR	9999	UA9999	UR9999
E70:S017	E70 Spare7	UA	UR	9999	UA9999	UR9999
E70:S018	E70 Unibus	EM	EN	9999	EM9999	EN9999
E70:S019	E70 LAN Comms	EM	EN	9999	EM9999	EN9999
E70:S020	E70 Spare8	UA	UR	9999	UA9999	UR9999
E70:S021	E70 Spare9	UA	UR	9999	UA9999	UR9999
E71:Z001	E71:Z001	UA	UR	9999	UA9999	UR9999
E71:Z002	E71:Z002	UA	UR	9999	UA9999	UR9999
E71:Z003	E71:Z003	UA	UR	9999	UA9999	UR9999
E71:Z004	E71:Z004	UA	UR	9999	UA9999	UR9999
E71:Z005	E71:Z005	UA	UR	9999	UA9999	UR9999
E71:Z006	E71:Z006	UA	UR	9999	UA9999	UR9999
E71:Z007	E71:Z007	UA	UR	9999	UA9999	UR9999
E71:Z008	E71:Z008	UA	UR	9999	UA9999	UR9999
E71:Z009	E71:Z009	UA	UR	9999	UA9999	UR9999
E71:Z010	E71:Z010	UA	UR	9999	UA9999	UR9999
E71:Z011	E71:Z011	UA	UR	9999	UA9999	UR9999
E71:Z012	E71:Z012	UA	UR	9999	UA9999	UR9999
E71:Z013	E71:Z013	UA	UR	9999	UA9999	UR9999
E71:Z014	E71:Z014	UA	UR	9999	UA9999	UR9999
E71:Z015	E71:Z015	UA	UR	9999	UA9999	UR9999
E71:Z016	E71:Z016	UA	UR	9999	UA9999	UR9999
E71:Z017	E71:Z017	UA	UR	9999	UA9999	UR9999
E71:Z018	E71:Z018	UA	UR	9999	UA9999	UR9999
E71:Z019	E71:Z019	UA	UR	9999	UA9999	UR9999
E71:Z020	E71:Z020	UA	UR	9999	UA9999	UR9999
E71:Z021	E71:Z021	UA	UR	9999	UA9999	UR9999
E71:Z022	E71:Z022	UA	UR	9999	UA9999	UR9999
E71:Z023	E71:Z023	UA	UR	9999	UA9999	UR9999
E71:Z024	E71:Z024	UA	UR	9999	UA9999	UR9999
E71:Z025	E71:Z025	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E71:Z026	E71:Z026	UA	UR	9999	UA9999	UR9999
E71:Z027	E71:Z027	UA	UR	9999	UA9999	UR9999
E71:Z028	E71:Z028	UA	UR	9999	UA9999	UR9999
E71:Z029	E71:Z029	UA	UR	9999	UA9999	UR9999
E71:Z030	E71:Z030	UA	UR	9999	UA9999	UR9999
E71:Z031	E71:Z031	UA	UR	9999	UA9999	UR9999
E71:Z032	E71:Z032	UA	UR	9999	UA9999	UR9999
E71:S001	E71 Cab Tamper	TA	TR	9999	TA9999	TR9999
E71:S002	E71 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E71:S003	E71 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E71:S004	E71 AC fail	AT	AR	9999	AT9999	AR9999
E71:S005	E71 Low Batt	YT	YR	9999	YT9999	YR9999
E71:S006	E71 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E71:S007	E71 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E71:S008	E71 Low Volts	YP	YQ	9999	YP9999	YQ9999
E71:S009	E71 PS Fail	YP	YQ	9999	YP9999	YQ9999
E71:S010	E71 Batt Test	IA	IR	9999	IA9999	IR9999
E71:S011	E71 Spare1	UA	UR	9999	UA9999	UR9999
E71:S012	E71 Spare2	UA	UR	9999	UA9999	UR9999
E71:S013	E71 Spare3	UA	UR	9999	UA9999	UR9999
E71:S014	E71 Spare4	UA	UR	9999	UA9999	UR9999
E71:S015	E71 Spare5	UA	UR	9999	UA9999	UR9999
E71:S016	E71 Spare6	UA	UR	9999	UA9999	UR9999
E71:S017	E71 Spare7	UA	UR	9999	UA9999	UR9999
E71:S018	E71 Unibus	EM	EN	9999	EM9999	EN9999
E71:S019	E71 LAN Comms	EM	EN	9999	EM9999	EN9999
E71:S020	E71 Spare8	UA	UR	9999	UA9999	UR9999
E71:S021	E71 Spare9	UA	UR	9999	UA9999	UR9999
E72:Z001	E72:Z001	UA	UR	9999	UA9999	UR9999
E72:Z002	E72:Z002	UA	UR	9999	UA9999	UR9999
E72:Z003	E72:Z003	UA	UR	9999	UA9999	UR9999
E72:Z004	E72:Z004	UA	UR	9999	UA9999	UR9999
E72:Z005	E72:Z005	UA	UR	9999	UA9999	UR9999
E72:Z006	E72:Z006	UA	UR	9999	UA9999	UR9999
E72:Z007	E72:Z007	UA	UR	9999	UA9999	UR9999
E72:Z008	E72:Z008	UA	UR	9999	UA9999	UR9999
E72:Z009	E72:Z009	UA	UR	9999	UA9999	UR9999
E72:Z010	E72:Z010	UA	UR	9999	UA9999	UR9999
E72:Z011	E72:Z011	UA	UR	9999	UA9999	UR9999
E72:Z012	E72:Z012	UA	UR	9999	UA9999	UR9999
E72:Z013	E72:Z013	UA	UR	9999	UA9999	UR9999
E72:Z014	E72:Z014	UA	UR	9999	UA9999	UR9999
E72:Z015	E72:Z015	UA	UR	9999	UA9999	UR9999
E72:Z016	E72:Z016	UA	UR	9999	UA9999	UR9999
E72:Z017	E72:Z017	UA	UR	9999	UA9999	UR9999
E72:Z018	E72:Z018	UA	UR	9999	UA9999	UR9999
E72:Z019	E72:Z019	UA	UR	9999	UA9999	UR9999
E72:Z020	E72:Z020	UA	UR	9999	UA9999	UR9999
E72:Z021	E72:Z021	UA	UR	9999	UA9999	UR9999
E72:Z022	E72:Z022	UA	UR	9999	UA9999	UR9999
E72:Z023	E72:Z023	UA	UR	9999	UA9999	UR9999
E72:Z024	E72:Z024	UA	UR	9999	UA9999	UR9999
E72:Z025	E72:Z025	UA	UR	9999	UA9999	UR9999
E72:Z026	E72:Z026	UA	UR	9999	UA9999	UR9999
E72:Z027	E72:Z027	UA	UR	9999	UA9999	UR9999
E72:Z028	E72:Z028	UA	UR	9999	UA9999	UR9999
E72:Z029	E72:Z029	UA	UR	9999	UA9999	UR9999
E72:Z030	E72:Z030	UA	UR	9999	UA9999	UR9999
E72:Z031	E72:Z031	UA	UR	9999	UA9999	UR9999
E72:Z032	E72:Z032	UA	UR	9999	UA9999	UR9999
E72:S001	E72 Cab Tamper	TA	TR	9999	TA9999	TR9999
E72:S002	E72 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E72:S003	E72 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E72:S004	E72 AC fail	AT	AR	9999	AT9999	AR9999
E72:S005	E72 Low Batt	YT	YR	9999	YT9999	YR9999
E72:S006	E72 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E72:S007	E72 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E72:S008	E72 Low Volts	YP	YQ	9999	YP9999	YQ9999
E72:S009	E72 PS Fail	YP	YQ	9999	YP9999	YQ9999
E72:S010	E72 Batt Test	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

E72:S011	E72 Spare1	UA	UR	9999	UA9999	UR9999
E72:S012	E72 Spare2	UA	UR	9999	UA9999	UR9999
E72:S013	E72 Spare3	UA	UR	9999	UA9999	UR9999
E72:S014	E72 Spare4	UA	UR	9999	UA9999	UR9999
E72:S015	E72 Spare5	UA	UR	9999	UA9999	UR9999
E72:S016	E72 Spare6	UA	UR	9999	UA9999	UR9999
E72:S017	E72 Spare7	UA	UR	9999	UA9999	UR9999
E72:S018	E72 Unibus	EM	EN	9999	EM9999	EN9999
E72:S019	E72 LAN Comms	EM	EN	9999	EM9999	EN9999
E72:S020	E72 Spare8	UA	UR	9999	UA9999	UR9999
E72:S021	E72 Spare9	UA	UR	9999	UA9999	UR9999
E73:Z001	E73:Z001	UA	UR	9999	UA9999	UR9999
E73:Z002	E73:Z002	UA	UR	9999	UA9999	UR9999
E73:Z003	E73:Z003	UA	UR	9999	UA9999	UR9999
E73:Z004	E73:Z004	UA	UR	9999	UA9999	UR9999
E73:Z005	E73:Z005	UA	UR	9999	UA9999	UR9999
E73:Z006	E73:Z006	UA	UR	9999	UA9999	UR9999
E73:Z007	E73:Z007	UA	UR	9999	UA9999	UR9999
E73:Z008	E73:Z008	UA	UR	9999	UA9999	UR9999
E73:Z009	E73:Z009	UA	UR	9999	UA9999	UR9999
E73:Z010	E73:Z010	UA	UR	9999	UA9999	UR9999
E73:Z011	E73:Z011	UA	UR	9999	UA9999	UR9999
E73:Z012	E73:Z012	UA	UR	9999	UA9999	UR9999
E73:Z013	E73:Z013	UA	UR	9999	UA9999	UR9999
E73:Z014	E73:Z014	UA	UR	9999	UA9999	UR9999
E73:Z015	E73:Z015	UA	UR	9999	UA9999	UR9999
E73:Z016	E73:Z016	UA	UR	9999	UA9999	UR9999
E73:Z017	E73:Z017	UA	UR	9999	UA9999	UR9999
E73:Z018	E73:Z018	UA	UR	9999	UA9999	UR9999
E73:Z019	E73:Z019	UA	UR	9999	UA9999	UR9999
E73:Z020	E73:Z020	UA	UR	9999	UA9999	UR9999
E73:Z021	E73:Z021	UA	UR	9999	UA9999	UR9999
E73:Z022	E73:Z022	UA	UR	9999	UA9999	UR9999
E73:Z023	E73:Z023	UA	UR	9999	UA9999	UR9999
E73:Z024	E73:Z024	UA	UR	9999	UA9999	UR9999
E73:Z025	E73:Z025	UA	UR	9999	UA9999	UR9999
E73:Z026	E73:Z026	UA	UR	9999	UA9999	UR9999
E73:Z027	E73:Z027	UA	UR	9999	UA9999	UR9999
E73:Z028	E73:Z028	UA	UR	9999	UA9999	UR9999
E73:Z029	E73:Z029	UA	UR	9999	UA9999	UR9999
E73:Z030	E73:Z030	UA	UR	9999	UA9999	UR9999
E73:Z031	E73:Z031	UA	UR	9999	UA9999	UR9999
E73:Z032	E73:Z032	UA	UR	9999	UA9999	UR9999
E73:S001	E73 Cab Tamper	TA	TR	9999	TA9999	TR9999
E73:S002	E73 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E73:S003	E73 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E73:S004	E73 AC fail	AT	AR	9999	AT9999	AR9999
E73:S005	E73 Low Batt	YT	YR	9999	YT9999	YR9999
E73:S006	E73 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E73:S007	E73 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E73:S008	E73 Low Volts	YP	YQ	9999	YP9999	YQ9999
E73:S009	E73 PS Fail	YP	YQ	9999	YP9999	YQ9999
E73:S010	E73 Batt Test	IA	IR	9999	IA9999	IR9999
E73:S011	E73 Spare1	UA	UR	9999	UA9999	UR9999
E73:S012	E73 Spare2	UA	UR	9999	UA9999	UR9999
E73:S013	E73 Spare3	UA	UR	9999	UA9999	UR9999
E73:S014	E73 Spare4	UA	UR	9999	UA9999	UR9999
E73:S015	E73 Spare5	UA	UR	9999	UA9999	UR9999
E73:S016	E73 Spare6	UA	UR	9999	UA9999	UR9999
E73:S017	E73 Spare7	UA	UR	9999	UA9999	UR9999
E73:S018	E73 Unibus	EM	EN	9999	EM9999	EN9999
E73:S019	E73 LAN Comms	EM	EN	9999	EM9999	EN9999
E73:S020	E73 Spare8	UA	UR	9999	UA9999	UR9999
E73:S021	E73 Spare9	UA	UR	9999	UA9999	UR9999
E74:Z001	E74:Z001	UA	UR	9999	UA9999	UR9999
E74:Z002	E74:Z002	UA	UR	9999	UA9999	UR9999
E74:Z003	E74:Z003	UA	UR	9999	UA9999	UR9999
E74:Z004	E74:Z004	UA	UR	9999	UA9999	UR9999
E74:Z005	E74:Z005	UA	UR	9999	UA9999	UR9999
E74:Z006	E74:Z006	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E74:Z007	E74:Z007	UA	UR	9999	UA9999	UR9999
E74:Z008	E74:Z008	UA	UR	9999	UA9999	UR9999
E74:Z009	E74:Z009	UA	UR	9999	UA9999	UR9999
E74:Z010	E74:Z010	UA	UR	9999	UA9999	UR9999
E74:Z011	E74:Z011	UA	UR	9999	UA9999	UR9999
E74:Z012	E74:Z012	UA	UR	9999	UA9999	UR9999
E74:Z013	E74:Z013	UA	UR	9999	UA9999	UR9999
E74:Z014	E74:Z014	UA	UR	9999	UA9999	UR9999
E74:Z015	E74:Z015	UA	UR	9999	UA9999	UR9999
E74:Z016	E74:Z016	UA	UR	9999	UA9999	UR9999
E74:Z017	E74:Z017	UA	UR	9999	UA9999	UR9999
E74:Z018	E74:Z018	UA	UR	9999	UA9999	UR9999
E74:Z019	E74:Z019	UA	UR	9999	UA9999	UR9999
E74:Z020	E74:Z020	UA	UR	9999	UA9999	UR9999
E74:Z021	E74:Z021	UA	UR	9999	UA9999	UR9999
E74:Z022	E74:Z022	UA	UR	9999	UA9999	UR9999
E74:Z023	E74:Z023	UA	UR	9999	UA9999	UR9999
E74:Z024	E74:Z024	UA	UR	9999	UA9999	UR9999
E74:Z025	E74:Z025	UA	UR	9999	UA9999	UR9999
E74:Z026	E74:Z026	UA	UR	9999	UA9999	UR9999
E74:Z027	E74:Z027	UA	UR	9999	UA9999	UR9999
E74:Z028	E74:Z028	UA	UR	9999	UA9999	UR9999
E74:Z029	E74:Z029	UA	UR	9999	UA9999	UR9999
E74:Z030	E74:Z030	UA	UR	9999	UA9999	UR9999
E74:Z031	E74:Z031	UA	UR	9999	UA9999	UR9999
E74:Z032	E74:Z032	UA	UR	9999	UA9999	UR9999
E74:S001	E74 Cab Tamper	TA	TR	9999	TA9999	TR9999
E74:S002	E74 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E74:S003	E74 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E74:S004	E74 AC fail	AT	AR	9999	AT9999	AR9999
E74:S005	E74 Low Batt	YT	YR	9999	YT9999	YR9999
E74:S006	E74 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E74:S007	E74 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E74:S008	E74 Low Volts	YP	YQ	9999	YP9999	YQ9999
E74:S009	E74 PS Fail	YP	YQ	9999	YP9999	YQ9999
E74:S010	E74 Batt Test	IA	IR	9999	IA9999	IR9999
E74:S011	E74 Spare1	UA	UR	9999	UA9999	UR9999
E74:S012	E74 Spare2	UA	UR	9999	UA9999	UR9999
E74:S013	E74 Spare3	UA	UR	9999	UA9999	UR9999
E74:S014	E74 Spare4	UA	UR	9999	UA9999	UR9999
E74:S015	E74 Spare5	UA	UR	9999	UA9999	UR9999
E74:S016	E74 Spare6	UA	UR	9999	UA9999	UR9999
E74:S017	E74 Spare7	UA	UR	9999	UA9999	UR9999
E74:S018	E74 Unibus	EM	EN	9999	EM9999	EN9999
E74:S019	E74 LAN Comms	EM	EN	9999	EM9999	EN9999
E74:S020	E74 Spare8	UA	UR	9999	UA9999	UR9999
E74:S021	E74 Spare9	UA	UR	9999	UA9999	UR9999
E75:Z001	E75:Z001	UA	UR	9999	UA9999	UR9999
E75:Z002	E75:Z002	UA	UR	9999	UA9999	UR9999
E75:Z003	E75:Z003	UA	UR	9999	UA9999	UR9999
E75:Z004	E75:Z004	UA	UR	9999	UA9999	UR9999
E75:Z005	E75:Z005	UA	UR	9999	UA9999	UR9999
E75:Z006	E75:Z006	UA	UR	9999	UA9999	UR9999
E75:Z007	E75:Z007	UA	UR	9999	UA9999	UR9999
E75:Z008	E75:Z008	UA	UR	9999	UA9999	UR9999
E75:Z009	E75:Z009	UA	UR	9999	UA9999	UR9999
E75:Z010	E75:Z010	UA	UR	9999	UA9999	UR9999
E75:Z011	E75:Z011	UA	UR	9999	UA9999	UR9999
E75:Z012	E75:Z012	UA	UR	9999	UA9999	UR9999
E75:Z013	E75:Z013	UA	UR	9999	UA9999	UR9999
E75:Z014	E75:Z014	UA	UR	9999	UA9999	UR9999
E75:Z015	E75:Z015	UA	UR	9999	UA9999	UR9999
E75:Z016	E75:Z016	UA	UR	9999	UA9999	UR9999
E75:Z017	E75:Z017	UA	UR	9999	UA9999	UR9999
E75:Z018	E75:Z018	UA	UR	9999	UA9999	UR9999
E75:Z019	E75:Z019	UA	UR	9999	UA9999	UR9999
E75:Z020	E75:Z020	UA	UR	9999	UA9999	UR9999
E75:Z021	E75:Z021	UA	UR	9999	UA9999	UR9999
E75:Z022	E75:Z022	UA	UR	9999	UA9999	UR9999
E75:Z023	E75:Z023	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E75:Z024	E75:Z024	UA	UR	9999	UA9999	UR9999
E75:Z025	E75:Z025	UA	UR	9999	UA9999	UR9999
E75:Z026	E75:Z026	UA	UR	9999	UA9999	UR9999
E75:Z027	E75:Z027	UA	UR	9999	UA9999	UR9999
E75:Z028	E75:Z028	UA	UR	9999	UA9999	UR9999
E75:Z029	E75:Z029	UA	UR	9999	UA9999	UR9999
E75:Z030	E75:Z030	UA	UR	9999	UA9999	UR9999
E75:Z031	E75:Z031	UA	UR	9999	UA9999	UR9999
E75:Z032	E75:Z032	UA	UR	9999	UA9999	UR9999
E75:S001	E75 Cab Tamper	TA	TR	9999	TA9999	TR9999
E75:S002	E75 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E75:S003	E75 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E75:S004	E75 AC fail	AT	AR	9999	AT9999	AR9999
E75:S005	E75 Low Batt	YT	YR	9999	YT9999	YR9999
E75:S006	E75 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E75:S007	E75 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E75:S008	E75 Low Volts	YP	YQ	9999	YP9999	YQ9999
E75:S009	E75 PS Fail	YP	YQ	9999	YP9999	YQ9999
E75:S010	E75 Batt Test	IA	IR	9999	IA9999	IR9999
E75:S011	E75 Spare1	UA	UR	9999	UA9999	UR9999
E75:S012	E75 Spare2	UA	UR	9999	UA9999	UR9999
E75:S013	E75 Spare3	UA	UR	9999	UA9999	UR9999
E75:S014	E75 Spare4	UA	UR	9999	UA9999	UR9999
E75:S015	E75 Spare5	UA	UR	9999	UA9999	UR9999
E75:S016	E75 Spare6	UA	UR	9999	UA9999	UR9999
E75:S017	E75 Spare7	UA	UR	9999	UA9999	UR9999
E75:S018	E75 Unibus	EM	EN	9999	EM9999	EN9999
E75:S019	E75 LAN Comms	EM	EN	9999	EM9999	EN9999
E75:S020	E75 Spare8	UA	UR	9999	UA9999	UR9999
E75:S021	E75 Spare9	UA	UR	9999	UA9999	UR9999
E76:Z001	E76:Z001	UA	UR	9999	UA9999	UR9999
E76:Z002	E76:Z002	UA	UR	9999	UA9999	UR9999
E76:Z003	E76:Z003	UA	UR	9999	UA9999	UR9999
E76:Z004	E76:Z004	UA	UR	9999	UA9999	UR9999
E76:Z005	E76:Z005	UA	UR	9999	UA9999	UR9999
E76:Z006	E76:Z006	UA	UR	9999	UA9999	UR9999
E76:Z007	E76:Z007	UA	UR	9999	UA9999	UR9999
E76:Z008	E76:Z008	UA	UR	9999	UA9999	UR9999
E76:Z009	E76:Z009	UA	UR	9999	UA9999	UR9999
E76:Z010	E76:Z010	UA	UR	9999	UA9999	UR9999
E76:Z011	E76:Z011	UA	UR	9999	UA9999	UR9999
E76:Z012	E76:Z012	UA	UR	9999	UA9999	UR9999
E76:Z013	E76:Z013	UA	UR	9999	UA9999	UR9999
E76:Z014	E76:Z014	UA	UR	9999	UA9999	UR9999
E76:Z015	E76:Z015	UA	UR	9999	UA9999	UR9999
E76:Z016	E76:Z016	UA	UR	9999	UA9999	UR9999
E76:Z017	E76:Z017	UA	UR	9999	UA9999	UR9999
E76:Z018	E76:Z018	UA	UR	9999	UA9999	UR9999
E76:Z019	E76:Z019	UA	UR	9999	UA9999	UR9999
E76:Z020	E76:Z020	UA	UR	9999	UA9999	UR9999
E76:Z021	E76:Z021	UA	UR	9999	UA9999	UR9999
E76:Z022	E76:Z022	UA	UR	9999	UA9999	UR9999
E76:Z023	E76:Z023	UA	UR	9999	UA9999	UR9999
E76:Z024	E76:Z024	UA	UR	9999	UA9999	UR9999
E76:Z025	E76:Z025	UA	UR	9999	UA9999	UR9999
E76:Z026	E76:Z026	UA	UR	9999	UA9999	UR9999
E76:Z027	E76:Z027	UA	UR	9999	UA9999	UR9999
E76:Z028	E76:Z028	UA	UR	9999	UA9999	UR9999
E76:Z029	E76:Z029	UA	UR	9999	UA9999	UR9999
E76:Z030	E76:Z030	UA	UR	9999	UA9999	UR9999
E76:Z031	E76:Z031	UA	UR	9999	UA9999	UR9999
E76:Z032	E76:Z032	UA	UR	9999	UA9999	UR9999
E76:S001	E76 Cab Tamper	TA	TR	9999	TA9999	TR9999
E76:S002	E76 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E76:S003	E76 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E76:S004	E76 AC fail	AT	AR	9999	AT9999	AR9999
E76:S005	E76 Low Batt	YT	YR	9999	YT9999	YR9999
E76:S006	E76 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E76:S007	E76 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E76:S008	E76 Low Volts	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

E76:S009	E76 PS Fail	YP	YQ	9999	YP9999	YQ9999
E76:S010	E76 Batt Test	IA	IR	9999	IA9999	IR9999
E76:S011	E76 Spare1	UA	UR	9999	UA9999	UR9999
E76:S012	E76 Spare2	UA	UR	9999	UA9999	UR9999
E76:S013	E76 Spare3	UA	UR	9999	UA9999	UR9999
E76:S014	E76 Spare4	UA	UR	9999	UA9999	UR9999
E76:S015	E76 Spare5	UA	UR	9999	UA9999	UR9999
E76:S016	E76 Spare6	UA	UR	9999	UA9999	UR9999
E76:S017	E76 Spare7	UA	UR	9999	UA9999	UR9999
E76:S018	E76 Unibus	EM	EN	9999	EM9999	EN9999
E76:S019	E76 LAN Comms	EM	EN	9999	EM9999	EN9999
E76:S020	E76 Spare8	UA	UR	9999	UA9999	UR9999
E76:S021	E76 Spare9	UA	UR	9999	UA9999	UR9999
E77:Z001	E77:Z001	UA	UR	9999	UA9999	UR9999
E77:Z002	E77:Z002	UA	UR	9999	UA9999	UR9999
E77:Z003	E77:Z003	UA	UR	9999	UA9999	UR9999
E77:Z004	E77:Z004	UA	UR	9999	UA9999	UR9999
E77:Z005	E77:Z005	UA	UR	9999	UA9999	UR9999
E77:Z006	E77:Z006	UA	UR	9999	UA9999	UR9999
E77:Z007	E77:Z007	UA	UR	9999	UA9999	UR9999
E77:Z008	E77:Z008	UA	UR	9999	UA9999	UR9999
E77:Z009	E77:Z009	UA	UR	9999	UA9999	UR9999
E77:Z010	E77:Z010	UA	UR	9999	UA9999	UR9999
E77:Z011	E77:Z011	UA	UR	9999	UA9999	UR9999
E77:Z012	E77:Z012	UA	UR	9999	UA9999	UR9999
E77:Z013	E77:Z013	UA	UR	9999	UA9999	UR9999
E77:Z014	E77:Z014	UA	UR	9999	UA9999	UR9999
E77:Z015	E77:Z015	UA	UR	9999	UA9999	UR9999
E77:Z016	E77:Z016	UA	UR	9999	UA9999	UR9999
E77:Z017	E77:Z017	UA	UR	9999	UA9999	UR9999
E77:Z018	E77:Z018	UA	UR	9999	UA9999	UR9999
E77:Z019	E77:Z019	UA	UR	9999	UA9999	UR9999
E77:Z020	E77:Z020	UA	UR	9999	UA9999	UR9999
E77:Z021	E77:Z021	UA	UR	9999	UA9999	UR9999
E77:Z022	E77:Z022	UA	UR	9999	UA9999	UR9999
E77:Z023	E77:Z023	UA	UR	9999	UA9999	UR9999
E77:Z024	E77:Z024	UA	UR	9999	UA9999	UR9999
E77:Z025	E77:Z025	UA	UR	9999	UA9999	UR9999
E77:Z026	E77:Z026	UA	UR	9999	UA9999	UR9999
E77:Z027	E77:Z027	UA	UR	9999	UA9999	UR9999
E77:Z028	E77:Z028	UA	UR	9999	UA9999	UR9999
E77:Z029	E77:Z029	UA	UR	9999	UA9999	UR9999
E77:Z030	E77:Z030	UA	UR	9999	UA9999	UR9999
E77:Z031	E77:Z031	UA	UR	9999	UA9999	UR9999
E77:Z032	E77:Z032	UA	UR	9999	UA9999	UR9999
E77:S001	E77 Cab Tamper	TA	TR	9999	TA9999	TR9999
E77:S002	E77 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E77:S003	E77 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E77:S004	E77 AC fail	AT	AR	9999	AT9999	AR9999
E77:S005	E77 Low Batt	YT	YR	9999	YT9999	YR9999
E77:S006	E77 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E77:S007	E77 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E77:S008	E77 Low Volts	YP	YQ	9999	YP9999	YQ9999
E77:S009	E77 PS Fail	YP	YQ	9999	YP9999	YQ9999
E77:S010	E77 Batt Test	IA	IR	9999	IA9999	IR9999
E77:S011	E77 Spare1	UA	UR	9999	UA9999	UR9999
E77:S012	E77 Spare2	UA	UR	9999	UA9999	UR9999
E77:S013	E77 Spare3	UA	UR	9999	UA9999	UR9999
E77:S014	E77 Spare4	UA	UR	9999	UA9999	UR9999
E77:S015	E77 Spare5	UA	UR	9999	UA9999	UR9999
E77:S016	E77 Spare6	UA	UR	9999	UA9999	UR9999
E77:S017	E77 Spare7	UA	UR	9999	UA9999	UR9999
E77:S018	E77 Unibus	EM	EN	9999	EM9999	EN9999
E77:S019	E77 LAN Comms	EM	EN	9999	EM9999	EN9999
E77:S020	E77 Spare8	UA	UR	9999	UA9999	UR9999
E77:S021	E77 Spare9	UA	UR	9999	UA9999	UR9999
E78:Z001	E78:Z001	UA	UR	9999	UA9999	UR9999
E78:Z002	E78:Z002	UA	UR	9999	UA9999	UR9999
E78:Z003	E78:Z003	UA	UR	9999	UA9999	UR9999
E78:Z004	E78:Z004	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E78:Z005	E78:Z005	UA	UR	9999	UA9999	UR9999
E78:Z006	E78:Z006	UA	UR	9999	UA9999	UR9999
E78:Z007	E78:Z007	UA	UR	9999	UA9999	UR9999
E78:Z008	E78:Z008	UA	UR	9999	UA9999	UR9999
E78:Z009	E78:Z009	UA	UR	9999	UA9999	UR9999
E78:Z010	E78:Z010	UA	UR	9999	UA9999	UR9999
E78:Z011	E78:Z011	UA	UR	9999	UA9999	UR9999
E78:Z012	E78:Z012	UA	UR	9999	UA9999	UR9999
E78:Z013	E78:Z013	UA	UR	9999	UA9999	UR9999
E78:Z014	E78:Z014	UA	UR	9999	UA9999	UR9999
E78:Z015	E78:Z015	UA	UR	9999	UA9999	UR9999
E78:Z016	E78:Z016	UA	UR	9999	UA9999	UR9999
E78:Z017	E78:Z017	UA	UR	9999	UA9999	UR9999
E78:Z018	E78:Z018	UA	UR	9999	UA9999	UR9999
E78:Z019	E78:Z019	UA	UR	9999	UA9999	UR9999
E78:Z020	E78:Z020	UA	UR	9999	UA9999	UR9999
E78:Z021	E78:Z021	UA	UR	9999	UA9999	UR9999
E78:Z022	E78:Z022	UA	UR	9999	UA9999	UR9999
E78:Z023	E78:Z023	UA	UR	9999	UA9999	UR9999
E78:Z024	E78:Z024	UA	UR	9999	UA9999	UR9999
E78:Z025	E78:Z025	UA	UR	9999	UA9999	UR9999
E78:Z026	E78:Z026	UA	UR	9999	UA9999	UR9999
E78:Z027	E78:Z027	UA	UR	9999	UA9999	UR9999
E78:Z028	E78:Z028	UA	UR	9999	UA9999	UR9999
E78:Z029	E78:Z029	UA	UR	9999	UA9999	UR9999
E78:Z030	E78:Z030	UA	UR	9999	UA9999	UR9999
E78:Z031	E78:Z031	UA	UR	9999	UA9999	UR9999
E78:Z032	E78:Z032	UA	UR	9999	UA9999	UR9999
E78:S001	E78 Cab Tamper	TA	TR	9999	TA9999	TR9999
E78:S002	E78 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E78:S003	E78 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E78:S004	E78 AC fail	AT	AR	9999	AT9999	AR9999
E78:S005	E78 Low Batt	YT	YR	9999	YT9999	YR9999
E78:S006	E78 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E78:S007	E78 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E78:S008	E78 Low Volts	YP	YQ	9999	YP9999	YQ9999
E78:S009	E78 PS Fail	YP	YQ	9999	YP9999	YQ9999
E78:S010	E78 Batt Test	IA	IR	9999	IA9999	IR9999
E78:S011	E78 Spare1	UA	UR	9999	UA9999	UR9999
E78:S012	E78 Spare2	UA	UR	9999	UA9999	UR9999
E78:S013	E78 Spare3	UA	UR	9999	UA9999	UR9999
E78:S014	E78 Spare4	UA	UR	9999	UA9999	UR9999
E78:S015	E78 Spare5	UA	UR	9999	UA9999	UR9999
E78:S016	E78 Spare6	UA	UR	9999	UA9999	UR9999
E78:S017	E78 Spare7	UA	UR	9999	UA9999	UR9999
E78:S018	E78 Unibus	EM	EN	9999	EM9999	EN9999
E78:S019	E78 LAN Comms	EM	EN	9999	EM9999	EN9999
E78:S020	E78 Spare8	UA	UR	9999	UA9999	UR9999
E78:S021	E78 Spare9	UA	UR	9999	UA9999	UR9999
E79:Z001	E79:Z001	UA	UR	9999	UA9999	UR9999
E79:Z002	E79:Z002	UA	UR	9999	UA9999	UR9999
E79:Z003	E79:Z003	UA	UR	9999	UA9999	UR9999
E79:Z004	E79:Z004	UA	UR	9999	UA9999	UR9999
E79:Z005	E79:Z005	UA	UR	9999	UA9999	UR9999
E79:Z006	E79:Z006	UA	UR	9999	UA9999	UR9999
E79:Z007	E79:Z007	UA	UR	9999	UA9999	UR9999
E79:Z008	E79:Z008	UA	UR	9999	UA9999	UR9999
E79:Z009	E79:Z009	UA	UR	9999	UA9999	UR9999
E79:Z010	E79:Z010	UA	UR	9999	UA9999	UR9999
E79:Z011	E79:Z011	UA	UR	9999	UA9999	UR9999
E79:Z012	E79:Z012	UA	UR	9999	UA9999	UR9999
E79:Z013	E79:Z013	UA	UR	9999	UA9999	UR9999
E79:Z014	E79:Z014	UA	UR	9999	UA9999	UR9999
E79:Z015	E79:Z015	UA	UR	9999	UA9999	UR9999
E79:Z016	E79:Z016	UA	UR	9999	UA9999	UR9999
E79:Z017	E79:Z017	UA	UR	9999	UA9999	UR9999
E79:Z018	E79:Z018	UA	UR	9999	UA9999	UR9999
E79:Z019	E79:Z019	UA	UR	9999	UA9999	UR9999
E79:Z020	E79:Z020	UA	UR	9999	UA9999	UR9999
E79:Z021	E79:Z021	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E79:Z022	E79:Z022	UA	UR	9999	UA9999	UR9999
E79:Z023	E79:Z023	UA	UR	9999	UA9999	UR9999
E79:Z024	E79:Z024	UA	UR	9999	UA9999	UR9999
E79:Z025	E79:Z025	UA	UR	9999	UA9999	UR9999
E79:Z026	E79:Z026	UA	UR	9999	UA9999	UR9999
E79:Z027	E79:Z027	UA	UR	9999	UA9999	UR9999
E79:Z028	E79:Z028	UA	UR	9999	UA9999	UR9999
E79:Z029	E79:Z029	UA	UR	9999	UA9999	UR9999
E79:Z030	E79:Z030	UA	UR	9999	UA9999	UR9999
E79:Z031	E79:Z031	UA	UR	9999	UA9999	UR9999
E79:Z032	E79:Z032	UA	UR	9999	UA9999	UR9999
E79:S001	E79 Cab Tamper	TA	TR	9999	TA9999	TR9999
E79:S002	E79 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E79:S003	E79 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E79:S004	E79 AC fail	AT	AR	9999	AT9999	AR9999
E79:S005	E79 Low Batt	YT	YR	9999	YT9999	YR9999
E79:S006	E79 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E79:S007	E79 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E79:S008	E79 Low Volts	YP	YQ	9999	YP9999	YQ9999
E79:S009	E79 PS Fail	YP	YQ	9999	YP9999	YQ9999
E79:S010	E79 Batt Test	IA	IR	9999	IA9999	IR9999
E79:S011	E79 Spare1	UA	UR	9999	UA9999	UR9999
E79:S012	E79 Spare2	UA	UR	9999	UA9999	UR9999
E79:S013	E79 Spare3	UA	UR	9999	UA9999	UR9999
E79:S014	E79 Spare4	UA	UR	9999	UA9999	UR9999
E79:S015	E79 Spare5	UA	UR	9999	UA9999	UR9999
E79:S016	E79 Spare6	UA	UR	9999	UA9999	UR9999
E79:S017	E79 Spare7	UA	UR	9999	UA9999	UR9999
E79:S018	E79 Unibus	EM	EN	9999	EM9999	EN9999
E79:S019	E79 LAN Comms	EM	EN	9999	EM9999	EN9999
E79:S020	E79 Spare8	UA	UR	9999	UA9999	UR9999
E79:S021	E79 Spare9	UA	UR	9999	UA9999	UR9999
E80:Z001	E80:Z001	UA	UR	9999	UA9999	UR9999
E80:Z002	E80:Z002	UA	UR	9999	UA9999	UR9999
E80:Z003	E80:Z003	UA	UR	9999	UA9999	UR9999
E80:Z004	E80:Z004	UA	UR	9999	UA9999	UR9999
E80:Z005	E80:Z005	UA	UR	9999	UA9999	UR9999
E80:Z006	E80:Z006	UA	UR	9999	UA9999	UR9999
E80:Z007	E80:Z007	UA	UR	9999	UA9999	UR9999
E80:Z008	E80:Z008	UA	UR	9999	UA9999	UR9999
E80:Z009	E80:Z009	UA	UR	9999	UA9999	UR9999
E80:Z010	E80:Z010	UA	UR	9999	UA9999	UR9999
E80:Z011	E80:Z011	UA	UR	9999	UA9999	UR9999
E80:Z012	E80:Z012	UA	UR	9999	UA9999	UR9999
E80:Z013	E80:Z013	UA	UR	9999	UA9999	UR9999
E80:Z014	E80:Z014	UA	UR	9999	UA9999	UR9999
E80:Z015	E80:Z015	UA	UR	9999	UA9999	UR9999
E80:Z016	E80:Z016	UA	UR	9999	UA9999	UR9999
E80:Z017	E80:Z017	UA	UR	9999	UA9999	UR9999
E80:Z018	E80:Z018	UA	UR	9999	UA9999	UR9999
E80:Z019	E80:Z019	UA	UR	9999	UA9999	UR9999
E80:Z020	E80:Z020	UA	UR	9999	UA9999	UR9999
E80:Z021	E80:Z021	UA	UR	9999	UA9999	UR9999
E80:Z022	E80:Z022	UA	UR	9999	UA9999	UR9999
E80:Z023	E80:Z023	UA	UR	9999	UA9999	UR9999
E80:Z024	E80:Z024	UA	UR	9999	UA9999	UR9999
E80:Z025	E80:Z025	UA	UR	9999	UA9999	UR9999
E80:Z026	E80:Z026	UA	UR	9999	UA9999	UR9999
E80:Z027	E80:Z027	UA	UR	9999	UA9999	UR9999
E80:Z028	E80:Z028	UA	UR	9999	UA9999	UR9999
E80:Z029	E80:Z029	UA	UR	9999	UA9999	UR9999
E80:Z030	E80:Z030	UA	UR	9999	UA9999	UR9999
E80:Z031	E80:Z031	UA	UR	9999	UA9999	UR9999
E80:Z032	E80:Z032	UA	UR	9999	UA9999	UR9999
E80:S001	E80 Cab Tamper	TA	TR	9999	TA9999	TR9999
E80:S002	E80 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E80:S003	E80 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E80:S004	E80 AC fail	AT	AR	9999	AT9999	AR9999
E80:S005	E80 Low Batt	YT	YR	9999	YT9999	YR9999
E80:S006	E80 LAN Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

E80:S007	E80 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E80:S008	E80 Low Volts	YP	YQ	9999	YP9999	YQ9999
E80:S009	E80 PS Fail	YP	YQ	9999	YP9999	YQ9999
E80:S010	E80 Batt Test	IA	IR	9999	IA9999	IR9999
E80:S011	E80 Spare1	UA	UR	9999	UA9999	UR9999
E80:S012	E80 Spare2	UA	UR	9999	UA9999	UR9999
E80:S013	E80 Spare3	UA	UR	9999	UA9999	UR9999
E80:S014	E80 Spare4	UA	UR	9999	UA9999	UR9999
E80:S015	E80 Spare5	UA	UR	9999	UA9999	UR9999
E80:S016	E80 Spare6	UA	UR	9999	UA9999	UR9999
E80:S017	E80 Spare7	UA	UR	9999	UA9999	UR9999
E80:S018	E80 Unibus	EM	EN	9999	EM9999	EN9999
E80:S019	E80 LAN Comms	EM	EN	9999	EM9999	EN9999
E80:S020	E80 Spare8	UA	UR	9999	UA9999	UR9999
E80:S021	E80 Spare9	UA	UR	9999	UA9999	UR9999
E81:Z001	E81:Z001	UA	UR	9999	UA9999	UR9999
E81:Z002	E81:Z002	UA	UR	9999	UA9999	UR9999
E81:Z003	E81:Z003	UA	UR	9999	UA9999	UR9999
E81:Z004	E81:Z004	UA	UR	9999	UA9999	UR9999
E81:Z005	E81:Z005	UA	UR	9999	UA9999	UR9999
E81:Z006	E81:Z006	UA	UR	9999	UA9999	UR9999
E81:Z007	E81:Z007	UA	UR	9999	UA9999	UR9999
E81:Z008	E81:Z008	UA	UR	9999	UA9999	UR9999
E81:Z009	E81:Z009	UA	UR	9999	UA9999	UR9999
E81:Z010	E81:Z010	UA	UR	9999	UA9999	UR9999
E81:Z011	E81:Z011	UA	UR	9999	UA9999	UR9999
E81:Z012	E81:Z012	UA	UR	9999	UA9999	UR9999
E81:Z013	E81:Z013	UA	UR	9999	UA9999	UR9999
E81:Z014	E81:Z014	UA	UR	9999	UA9999	UR9999
E81:Z015	E81:Z015	UA	UR	9999	UA9999	UR9999
E81:Z016	E81:Z016	UA	UR	9999	UA9999	UR9999
E81:Z017	E81:Z017	UA	UR	9999	UA9999	UR9999
E81:Z018	E81:Z018	UA	UR	9999	UA9999	UR9999
E81:Z019	E81:Z019	UA	UR	9999	UA9999	UR9999
E81:Z020	E81:Z020	UA	UR	9999	UA9999	UR9999
E81:Z021	E81:Z021	UA	UR	9999	UA9999	UR9999
E81:Z022	E81:Z022	UA	UR	9999	UA9999	UR9999
E81:Z023	E81:Z023	UA	UR	9999	UA9999	UR9999
E81:Z024	E81:Z024	UA	UR	9999	UA9999	UR9999
E81:Z025	E81:Z025	UA	UR	9999	UA9999	UR9999
E81:Z026	E81:Z026	UA	UR	9999	UA9999	UR9999
E81:Z027	E81:Z027	UA	UR	9999	UA9999	UR9999
E81:Z028	E81:Z028	UA	UR	9999	UA9999	UR9999
E81:Z029	E81:Z029	UA	UR	9999	UA9999	UR9999
E81:Z030	E81:Z030	UA	UR	9999	UA9999	UR9999
E81:Z031	E81:Z031	UA	UR	9999	UA9999	UR9999
E81:Z032	E81:Z032	UA	UR	9999	UA9999	UR9999
E81:S001	E81 Cab Tamper	TA	TR	9999	TA9999	TR9999
E81:S002	E81 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E81:S003	E81 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E81:S004	E81 AC fail	AT	AR	9999	AT9999	AR9999
E81:S005	E81 Low Batt	YT	YR	9999	YT9999	YR9999
E81:S006	E81 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E81:S007	E81 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E81:S008	E81 Low Volts	YP	YQ	9999	YP9999	YQ9999
E81:S009	E81 PS Fail	YP	YQ	9999	YP9999	YQ9999
E81:S010	E81 Batt Test	IA	IR	9999	IA9999	IR9999
E81:S011	E81 Spare1	UA	UR	9999	UA9999	UR9999
E81:S012	E81 Spare2	UA	UR	9999	UA9999	UR9999
E81:S013	E81 Spare3	UA	UR	9999	UA9999	UR9999
E81:S014	E81 Spare4	UA	UR	9999	UA9999	UR9999
E81:S015	E81 Spare5	UA	UR	9999	UA9999	UR9999
E81:S016	E81 Spare6	UA	UR	9999	UA9999	UR9999
E81:S017	E81 Spare7	UA	UR	9999	UA9999	UR9999
E81:S018	E81 Unibus	EM	EN	9999	EM9999	EN9999
E81:S019	E81 LAN Comms	EM	EN	9999	EM9999	EN9999
E81:S020	E81 Spare8	UA	UR	9999	UA9999	UR9999
E81:S021	E81 Spare9	UA	UR	9999	UA9999	UR9999
E82:Z001	E82:Z001	UA	UR	9999	UA9999	UR9999
E82:Z002	E82:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E82:Z003	E82:Z003	UA	UR	9999	UA9999	UR9999
E82:Z004	E82:Z004	UA	UR	9999	UA9999	UR9999
E82:Z005	E82:Z005	UA	UR	9999	UA9999	UR9999
E82:Z006	E82:Z006	UA	UR	9999	UA9999	UR9999
E82:Z007	E82:Z007	UA	UR	9999	UA9999	UR9999
E82:Z008	E82:Z008	UA	UR	9999	UA9999	UR9999
E82:Z009	E82:Z009	UA	UR	9999	UA9999	UR9999
E82:Z010	E82:Z010	UA	UR	9999	UA9999	UR9999
E82:Z011	E82:Z011	UA	UR	9999	UA9999	UR9999
E82:Z012	E82:Z012	UA	UR	9999	UA9999	UR9999
E82:Z013	E82:Z013	UA	UR	9999	UA9999	UR9999
E82:Z014	E82:Z014	UA	UR	9999	UA9999	UR9999
E82:Z015	E82:Z015	UA	UR	9999	UA9999	UR9999
E82:Z016	E82:Z016	UA	UR	9999	UA9999	UR9999
E82:Z017	E82:Z017	UA	UR	9999	UA9999	UR9999
E82:Z018	E82:Z018	UA	UR	9999	UA9999	UR9999
E82:Z019	E82:Z019	UA	UR	9999	UA9999	UR9999
E82:Z020	E82:Z020	UA	UR	9999	UA9999	UR9999
E82:Z021	E82:Z021	UA	UR	9999	UA9999	UR9999
E82:Z022	E82:Z022	UA	UR	9999	UA9999	UR9999
E82:Z023	E82:Z023	UA	UR	9999	UA9999	UR9999
E82:Z024	E82:Z024	UA	UR	9999	UA9999	UR9999
E82:Z025	E82:Z025	UA	UR	9999	UA9999	UR9999
E82:Z026	E82:Z026	UA	UR	9999	UA9999	UR9999
E82:Z027	E82:Z027	UA	UR	9999	UA9999	UR9999
E82:Z028	E82:Z028	UA	UR	9999	UA9999	UR9999
E82:Z029	E82:Z029	UA	UR	9999	UA9999	UR9999
E82:Z030	E82:Z030	UA	UR	9999	UA9999	UR9999
E82:Z031	E82:Z031	UA	UR	9999	UA9999	UR9999
E82:Z032	E82:Z032	UA	UR	9999	UA9999	UR9999
E82:S001	E82 Cab Tamper	TA	TR	9999	TA9999	TR9999
E82:S002	E82 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E82:S003	E82 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E82:S004	E82 AC fail	AT	AR	9999	AT9999	AR9999
E82:S005	E82 Low Batt	YT	YR	9999	YT9999	YR9999
E82:S006	E82 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E82:S007	E82 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E82:S008	E82 Low Volts	YP	YQ	9999	YP9999	YQ9999
E82:S009	E82 PS Fail	YP	YQ	9999	YP9999	YQ9999
E82:S010	E82 Batt Test	IA	IR	9999	IA9999	IR9999
E82:S011	E82 Spare1	UA	UR	9999	UA9999	UR9999
E82:S012	E82 Spare2	UA	UR	9999	UA9999	UR9999
E82:S013	E82 Spare3	UA	UR	9999	UA9999	UR9999
E82:S014	E82 Spare4	UA	UR	9999	UA9999	UR9999
E82:S015	E82 Spare5	UA	UR	9999	UA9999	UR9999
E82:S016	E82 Spare6	UA	UR	9999	UA9999	UR9999
E82:S017	E82 Spare7	UA	UR	9999	UA9999	UR9999
E82:S018	E82 Unibus	EM	EN	9999	EM9999	EN9999
E82:S019	E82 LAN Comms	EM	EN	9999	EM9999	EN9999
E82:S020	E82 Spare8	UA	UR	9999	UA9999	UR9999
E82:S021	E82 Spare9	UA	UR	9999	UA9999	UR9999
E83:Z001	E83:Z001	UA	UR	9999	UA9999	UR9999
E83:Z002	E83:Z002	UA	UR	9999	UA9999	UR9999
E83:Z003	E83:Z003	UA	UR	9999	UA9999	UR9999
E83:Z004	E83:Z004	UA	UR	9999	UA9999	UR9999
E83:Z005	E83:Z005	UA	UR	9999	UA9999	UR9999
E83:Z006	E83:Z006	UA	UR	9999	UA9999	UR9999
E83:Z007	E83:Z007	UA	UR	9999	UA9999	UR9999
E83:Z008	E83:Z008	UA	UR	9999	UA9999	UR9999
E83:Z009	E83:Z009	UA	UR	9999	UA9999	UR9999
E83:Z010	E83:Z010	UA	UR	9999	UA9999	UR9999
E83:Z011	E83:Z011	UA	UR	9999	UA9999	UR9999
E83:Z012	E83:Z012	UA	UR	9999	UA9999	UR9999
E83:Z013	E83:Z013	UA	UR	9999	UA9999	UR9999
E83:Z014	E83:Z014	UA	UR	9999	UA9999	UR9999
E83:Z015	E83:Z015	UA	UR	9999	UA9999	UR9999
E83:Z016	E83:Z016	UA	UR	9999	UA9999	UR9999
E83:Z017	E83:Z017	UA	UR	9999	UA9999	UR9999
E83:Z018	E83:Z018	UA	UR	9999	UA9999	UR9999
E83:Z019	E83:Z019	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E83:Z020	E83:Z020	UA	UR	9999	UA9999	UR9999
E83:Z021	E83:Z021	UA	UR	9999	UA9999	UR9999
E83:Z022	E83:Z022	UA	UR	9999	UA9999	UR9999
E83:Z023	E83:Z023	UA	UR	9999	UA9999	UR9999
E83:Z024	E83:Z024	UA	UR	9999	UA9999	UR9999
E83:Z025	E83:Z025	UA	UR	9999	UA9999	UR9999
E83:Z026	E83:Z026	UA	UR	9999	UA9999	UR9999
E83:Z027	E83:Z027	UA	UR	9999	UA9999	UR9999
E83:Z028	E83:Z028	UA	UR	9999	UA9999	UR9999
E83:Z029	E83:Z029	UA	UR	9999	UA9999	UR9999
E83:Z030	E83:Z030	UA	UR	9999	UA9999	UR9999
E83:Z031	E83:Z031	UA	UR	9999	UA9999	UR9999
E83:Z032	E83:Z032	UA	UR	9999	UA9999	UR9999
E83:S001	E83 Cab Tamper	TA	TR	9999	TA9999	TR9999
E83:S002	E83 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E83:S003	E83 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E83:S004	E83 AC fail	AT	AR	9999	AT9999	AR9999
E83:S005	E83 Low Batt	YT	YR	9999	YT9999	YR9999
E83:S006	E83 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E83:S007	E83 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E83:S008	E83 Low Volts	YP	YQ	9999	YP9999	YQ9999
E83:S009	E83 PS Fail	YP	YQ	9999	YP9999	YQ9999
E83:S010	E83 Batt Test	IA	IR	9999	IA9999	IR9999
E83:S011	E83 Spare1	UA	UR	9999	UA9999	UR9999
E83:S012	E83 Spare2	UA	UR	9999	UA9999	UR9999
E83:S013	E83 Spare3	UA	UR	9999	UA9999	UR9999
E83:S014	E83 Spare4	UA	UR	9999	UA9999	UR9999
E83:S015	E83 Spare5	UA	UR	9999	UA9999	UR9999
E83:S016	E83 Spare6	UA	UR	9999	UA9999	UR9999
E83:S017	E83 Spare7	UA	UR	9999	UA9999	UR9999
E83:S018	E83 Unibus	EM	EN	9999	EM9999	EN9999
E83:S019	E83 LAN Comms	EM	EN	9999	EM9999	EN9999
E83:S020	E83 Spare8	UA	UR	9999	UA9999	UR9999
E83:S021	E83 Spare9	UA	UR	9999	UA9999	UR9999
E84:Z001	E84:Z001	UA	UR	9999	UA9999	UR9999
E84:Z002	E84:Z002	UA	UR	9999	UA9999	UR9999
E84:Z003	E84:Z003	UA	UR	9999	UA9999	UR9999
E84:Z004	E84:Z004	UA	UR	9999	UA9999	UR9999
E84:Z005	E84:Z005	UA	UR	9999	UA9999	UR9999
E84:Z006	E84:Z006	UA	UR	9999	UA9999	UR9999
E84:Z007	E84:Z007	UA	UR	9999	UA9999	UR9999
E84:Z008	E84:Z008	UA	UR	9999	UA9999	UR9999
E84:Z009	E84:Z009	UA	UR	9999	UA9999	UR9999
E84:Z010	E84:Z010	UA	UR	9999	UA9999	UR9999
E84:Z011	E84:Z011	UA	UR	9999	UA9999	UR9999
E84:Z012	E84:Z012	UA	UR	9999	UA9999	UR9999
E84:Z013	E84:Z013	UA	UR	9999	UA9999	UR9999
E84:Z014	E84:Z014	UA	UR	9999	UA9999	UR9999
E84:Z015	E84:Z015	UA	UR	9999	UA9999	UR9999
E84:Z016	E84:Z016	UA	UR	9999	UA9999	UR9999
E84:Z017	E84:Z017	UA	UR	9999	UA9999	UR9999
E84:Z018	E84:Z018	UA	UR	9999	UA9999	UR9999
E84:Z019	E84:Z019	UA	UR	9999	UA9999	UR9999
E84:Z020	E84:Z020	UA	UR	9999	UA9999	UR9999
E84:Z021	E84:Z021	UA	UR	9999	UA9999	UR9999
E84:Z022	E84:Z022	UA	UR	9999	UA9999	UR9999
E84:Z023	E84:Z023	UA	UR	9999	UA9999	UR9999
E84:Z024	E84:Z024	UA	UR	9999	UA9999	UR9999
E84:Z025	E84:Z025	UA	UR	9999	UA9999	UR9999
E84:Z026	E84:Z026	UA	UR	9999	UA9999	UR9999
E84:Z027	E84:Z027	UA	UR	9999	UA9999	UR9999
E84:Z028	E84:Z028	UA	UR	9999	UA9999	UR9999
E84:Z029	E84:Z029	UA	UR	9999	UA9999	UR9999
E84:Z030	E84:Z030	UA	UR	9999	UA9999	UR9999
E84:Z031	E84:Z031	UA	UR	9999	UA9999	UR9999
E84:Z032	E84:Z032	UA	UR	9999	UA9999	UR9999
E84:S001	E84 Cab Tamper	TA	TR	9999	TA9999	TR9999
E84:S002	E84 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E84:S003	E84 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E84:S004	E84 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

E84:S005	E84 Low Batt	YT	YR	9999	YT9999	YR9999
E84:S006	E84 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E84:S007	E84 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E84:S008	E84 Low Volts	YP	YQ	9999	YP9999	YQ9999
E84:S009	E84 PS Fail	YP	YQ	9999	YP9999	YQ9999
E84:S010	E84 Batt Test	IA	IR	9999	IA9999	IR9999
E84:S011	E84 Spare1	UA	UR	9999	UA9999	UR9999
E84:S012	E84 Spare2	UA	UR	9999	UA9999	UR9999
E84:S013	E84 Spare3	UA	UR	9999	UA9999	UR9999
E84:S014	E84 Spare4	UA	UR	9999	UA9999	UR9999
E84:S015	E84 Spare5	UA	UR	9999	UA9999	UR9999
E84:S016	E84 Spare6	UA	UR	9999	UA9999	UR9999
E84:S017	E84 Spare7	UA	UR	9999	UA9999	UR9999
E84:S018	E84 Unibus	EM	EN	9999	EM9999	EN9999
E84:S019	E84 LAN Comms	EM	EN	9999	EM9999	EN9999
E84:S020	E84 Spare8	UA	UR	9999	UA9999	UR9999
E84:S021	E84 Spare9	UA	UR	9999	UA9999	UR9999
E85:Z001	E85:Z001	UA	UR	9999	UA9999	UR9999
E85:Z002	E85:Z002	UA	UR	9999	UA9999	UR9999
E85:Z003	E85:Z003	UA	UR	9999	UA9999	UR9999
E85:Z004	E85:Z004	UA	UR	9999	UA9999	UR9999
E85:Z005	E85:Z005	UA	UR	9999	UA9999	UR9999
E85:Z006	E85:Z006	UA	UR	9999	UA9999	UR9999
E85:Z007	E85:Z007	UA	UR	9999	UA9999	UR9999
E85:Z008	E85:Z008	UA	UR	9999	UA9999	UR9999
E85:Z009	E85:Z009	UA	UR	9999	UA9999	UR9999
E85:Z010	E85:Z010	UA	UR	9999	UA9999	UR9999
E85:Z011	E85:Z011	UA	UR	9999	UA9999	UR9999
E85:Z012	E85:Z012	UA	UR	9999	UA9999	UR9999
E85:Z013	E85:Z013	UA	UR	9999	UA9999	UR9999
E85:Z014	E85:Z014	UA	UR	9999	UA9999	UR9999
E85:Z015	E85:Z015	UA	UR	9999	UA9999	UR9999
E85:Z016	E85:Z016	UA	UR	9999	UA9999	UR9999
E85:Z017	E85:Z017	UA	UR	9999	UA9999	UR9999
E85:Z018	E85:Z018	UA	UR	9999	UA9999	UR9999
E85:Z019	E85:Z019	UA	UR	9999	UA9999	UR9999
E85:Z020	E85:Z020	UA	UR	9999	UA9999	UR9999
E85:Z021	E85:Z021	UA	UR	9999	UA9999	UR9999
E85:Z022	E85:Z022	UA	UR	9999	UA9999	UR9999
E85:Z023	E85:Z023	UA	UR	9999	UA9999	UR9999
E85:Z024	E85:Z024	UA	UR	9999	UA9999	UR9999
E85:Z025	E85:Z025	UA	UR	9999	UA9999	UR9999
E85:Z026	E85:Z026	UA	UR	9999	UA9999	UR9999
E85:Z027	E85:Z027	UA	UR	9999	UA9999	UR9999
E85:Z028	E85:Z028	UA	UR	9999	UA9999	UR9999
E85:Z029	E85:Z029	UA	UR	9999	UA9999	UR9999
E85:Z030	E85:Z030	UA	UR	9999	UA9999	UR9999
E85:Z031	E85:Z031	UA	UR	9999	UA9999	UR9999
E85:Z032	E85:Z032	UA	UR	9999	UA9999	UR9999
E85:S001	E85 Cab Tamper	TA	TR	9999	TA9999	TR9999
E85:S002	E85 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E85:S003	E85 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E85:S004	E85 AC fail	AT	AR	9999	AT9999	AR9999
E85:S005	E85 Low Batt	YT	YR	9999	YT9999	YR9999
E85:S006	E85 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E85:S007	E85 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E85:S008	E85 Low Volts	YP	YQ	9999	YP9999	YQ9999
E85:S009	E85 PS Fail	YP	YQ	9999	YP9999	YQ9999
E85:S010	E85 Batt Test	IA	IR	9999	IA9999	IR9999
E85:S011	E85 Spare1	UA	UR	9999	UA9999	UR9999
E85:S012	E85 Spare2	UA	UR	9999	UA9999	UR9999
E85:S013	E85 Spare3	UA	UR	9999	UA9999	UR9999
E85:S014	E85 Spare4	UA	UR	9999	UA9999	UR9999
E85:S015	E85 Spare5	UA	UR	9999	UA9999	UR9999
E85:S016	E85 Spare6	UA	UR	9999	UA9999	UR9999
E85:S017	E85 Spare7	UA	UR	9999	UA9999	UR9999
E85:S018	E85 Unibus	EM	EN	9999	EM9999	EN9999
E85:S019	E85 LAN Comms	EM	EN	9999	EM9999	EN9999
E85:S020	E85 Spare8	UA	UR	9999	UA9999	UR9999
E85:S021	E85 Spare9	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E86:Z001	E86:Z001	UA	UR	9999	UA9999	UR9999
E86:Z002	E86:Z002	UA	UR	9999	UA9999	UR9999
E86:Z003	E86:Z003	UA	UR	9999	UA9999	UR9999
E86:Z004	E86:Z004	UA	UR	9999	UA9999	UR9999
E86:Z005	E86:Z005	UA	UR	9999	UA9999	UR9999
E86:Z006	E86:Z006	UA	UR	9999	UA9999	UR9999
E86:Z007	E86:Z007	UA	UR	9999	UA9999	UR9999
E86:Z008	E86:Z008	UA	UR	9999	UA9999	UR9999
E86:Z009	E86:Z009	UA	UR	9999	UA9999	UR9999
E86:Z010	E86:Z010	UA	UR	9999	UA9999	UR9999
E86:Z011	E86:Z011	UA	UR	9999	UA9999	UR9999
E86:Z012	E86:Z012	UA	UR	9999	UA9999	UR9999
E86:Z013	E86:Z013	UA	UR	9999	UA9999	UR9999
E86:Z014	E86:Z014	UA	UR	9999	UA9999	UR9999
E86:Z015	E86:Z015	UA	UR	9999	UA9999	UR9999
E86:Z016	E86:Z016	UA	UR	9999	UA9999	UR9999
E86:Z017	E86:Z017	UA	UR	9999	UA9999	UR9999
E86:Z018	E86:Z018	UA	UR	9999	UA9999	UR9999
E86:Z019	E86:Z019	UA	UR	9999	UA9999	UR9999
E86:Z020	E86:Z020	UA	UR	9999	UA9999	UR9999
E86:Z021	E86:Z021	UA	UR	9999	UA9999	UR9999
E86:Z022	E86:Z022	UA	UR	9999	UA9999	UR9999
E86:Z023	E86:Z023	UA	UR	9999	UA9999	UR9999
E86:Z024	E86:Z024	UA	UR	9999	UA9999	UR9999
E86:Z025	E86:Z025	UA	UR	9999	UA9999	UR9999
E86:Z026	E86:Z026	UA	UR	9999	UA9999	UR9999
E86:Z027	E86:Z027	UA	UR	9999	UA9999	UR9999
E86:Z028	E86:Z028	UA	UR	9999	UA9999	UR9999
E86:Z029	E86:Z029	UA	UR	9999	UA9999	UR9999
E86:Z030	E86:Z030	UA	UR	9999	UA9999	UR9999
E86:Z031	E86:Z031	UA	UR	9999	UA9999	UR9999
E86:Z032	E86:Z032	UA	UR	9999	UA9999	UR9999
E86:S001	E86 Cab Tamper	TA	TR	9999	TA9999	TR9999
E86:S002	E86 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E86:S003	E86 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E86:S004	E86 AC fail	AT	AR	9999	AT9999	AR9999
E86:S005	E86 Low Batt	YT	YR	9999	YT9999	YR9999
E86:S006	E86 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E86:S007	E86 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E86:S008	E86 Low Volts	YP	YQ	9999	YP9999	YQ9999
E86:S009	E86 PS Fail	YP	YQ	9999	YP9999	YQ9999
E86:S010	E86 Batt Test	IA	IR	9999	IA9999	IR9999
E86:S011	E86 Spare1	UA	UR	9999	UA9999	UR9999
E86:S012	E86 Spare2	UA	UR	9999	UA9999	UR9999
E86:S013	E86 Spare3	UA	UR	9999	UA9999	UR9999
E86:S014	E86 Spare4	UA	UR	9999	UA9999	UR9999
E86:S015	E86 Spare5	UA	UR	9999	UA9999	UR9999
E86:S016	E86 Spare6	UA	UR	9999	UA9999	UR9999
E86:S017	E86 Spare7	UA	UR	9999	UA9999	UR9999
E86:S018	E86 Unibus	EM	EN	9999	EM9999	EN9999
E86:S019	E86 LAN Comms	EM	EN	9999	EM9999	EN9999
E86:S020	E86 Spare8	UA	UR	9999	UA9999	UR9999
E86:S021	E86 Spare9	UA	UR	9999	UA9999	UR9999
E87:Z001	E87:Z001	UA	UR	9999	UA9999	UR9999
E87:Z002	E87:Z002	UA	UR	9999	UA9999	UR9999
E87:Z003	E87:Z003	UA	UR	9999	UA9999	UR9999
E87:Z004	E87:Z004	UA	UR	9999	UA9999	UR9999
E87:Z005	E87:Z005	UA	UR	9999	UA9999	UR9999
E87:Z006	E87:Z006	UA	UR	9999	UA9999	UR9999
E87:Z007	E87:Z007	UA	UR	9999	UA9999	UR9999
E87:Z008	E87:Z008	UA	UR	9999	UA9999	UR9999
E87:Z009	E87:Z009	UA	UR	9999	UA9999	UR9999
E87:Z010	E87:Z010	UA	UR	9999	UA9999	UR9999
E87:Z011	E87:Z011	UA	UR	9999	UA9999	UR9999
E87:Z012	E87:Z012	UA	UR	9999	UA9999	UR9999
E87:Z013	E87:Z013	UA	UR	9999	UA9999	UR9999
E87:Z014	E87:Z014	UA	UR	9999	UA9999	UR9999
E87:Z015	E87:Z015	UA	UR	9999	UA9999	UR9999
E87:Z016	E87:Z016	UA	UR	9999	UA9999	UR9999
E87:Z017	E87:Z017	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E87:Z018	E87:Z018	UA	UR	9999	UA9999	UR9999
E87:Z019	E87:Z019	UA	UR	9999	UA9999	UR9999
E87:Z020	E87:Z020	UA	UR	9999	UA9999	UR9999
E87:Z021	E87:Z021	UA	UR	9999	UA9999	UR9999
E87:Z022	E87:Z022	UA	UR	9999	UA9999	UR9999
E87:Z023	E87:Z023	UA	UR	9999	UA9999	UR9999
E87:Z024	E87:Z024	UA	UR	9999	UA9999	UR9999
E87:Z025	E87:Z025	UA	UR	9999	UA9999	UR9999
E87:Z026	E87:Z026	UA	UR	9999	UA9999	UR9999
E87:Z027	E87:Z027	UA	UR	9999	UA9999	UR9999
E87:Z028	E87:Z028	UA	UR	9999	UA9999	UR9999
E87:Z029	E87:Z029	UA	UR	9999	UA9999	UR9999
E87:Z030	E87:Z030	UA	UR	9999	UA9999	UR9999
E87:Z031	E87:Z031	UA	UR	9999	UA9999	UR9999
E87:Z032	E87:Z032	UA	UR	9999	UA9999	UR9999
E87:S001	E87 Cab Tamper	TA	TR	9999	TA9999	TR9999
E87:S002	E87 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E87:S003	E87 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E87:S004	E87 AC fail	AT	AR	9999	AT9999	AR9999
E87:S005	E87 Low Batt	YT	YR	9999	YT9999	YR9999
E87:S006	E87 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E87:S007	E87 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E87:S008	E87 Low Volts	YP	YQ	9999	YP9999	YQ9999
E87:S009	E87 PS Fail	YP	YQ	9999	YP9999	YQ9999
E87:S010	E87 Batt Test	IA	IR	9999	IA9999	IR9999
E87:S011	E87 Spare1	UA	UR	9999	UA9999	UR9999
E87:S012	E87 Spare2	UA	UR	9999	UA9999	UR9999
E87:S013	E87 Spare3	UA	UR	9999	UA9999	UR9999
E87:S014	E87 Spare4	UA	UR	9999	UA9999	UR9999
E87:S015	E87 Spare5	UA	UR	9999	UA9999	UR9999
E87:S016	E87 Spare6	UA	UR	9999	UA9999	UR9999
E87:S017	E87 Spare7	UA	UR	9999	UA9999	UR9999
E87:S018	E87 Unibus	EM	EN	9999	EM9999	EN9999
E87:S019	E87 LAN Comms	EM	EN	9999	EM9999	EN9999
E87:S020	E87 Spare8	UA	UR	9999	UA9999	UR9999
E87:S021	E87 Spare9	UA	UR	9999	UA9999	UR9999
E88:Z001	E88:Z001	UA	UR	9999	UA9999	UR9999
E88:Z002	E88:Z002	UA	UR	9999	UA9999	UR9999
E88:Z003	E88:Z003	UA	UR	9999	UA9999	UR9999
E88:Z004	E88:Z004	UA	UR	9999	UA9999	UR9999
E88:Z005	E88:Z005	UA	UR	9999	UA9999	UR9999
E88:Z006	E88:Z006	UA	UR	9999	UA9999	UR9999
E88:Z007	E88:Z007	UA	UR	9999	UA9999	UR9999
E88:Z008	E88:Z008	UA	UR	9999	UA9999	UR9999
E88:Z009	E88:Z009	UA	UR	9999	UA9999	UR9999
E88:Z010	E88:Z010	UA	UR	9999	UA9999	UR9999
E88:Z011	E88:Z011	UA	UR	9999	UA9999	UR9999
E88:Z012	E88:Z012	UA	UR	9999	UA9999	UR9999
E88:Z013	E88:Z013	UA	UR	9999	UA9999	UR9999
E88:Z014	E88:Z014	UA	UR	9999	UA9999	UR9999
E88:Z015	E88:Z015	UA	UR	9999	UA9999	UR9999
E88:Z016	E88:Z016	UA	UR	9999	UA9999	UR9999
E88:Z017	E88:Z017	UA	UR	9999	UA9999	UR9999
E88:Z018	E88:Z018	UA	UR	9999	UA9999	UR9999
E88:Z019	E88:Z019	UA	UR	9999	UA9999	UR9999
E88:Z020	E88:Z020	UA	UR	9999	UA9999	UR9999
E88:Z021	E88:Z021	UA	UR	9999	UA9999	UR9999
E88:Z022	E88:Z022	UA	UR	9999	UA9999	UR9999
E88:Z023	E88:Z023	UA	UR	9999	UA9999	UR9999
E88:Z024	E88:Z024	UA	UR	9999	UA9999	UR9999
E88:Z025	E88:Z025	UA	UR	9999	UA9999	UR9999
E88:Z026	E88:Z026	UA	UR	9999	UA9999	UR9999
E88:Z027	E88:Z027	UA	UR	9999	UA9999	UR9999
E88:Z028	E88:Z028	UA	UR	9999	UA9999	UR9999
E88:Z029	E88:Z029	UA	UR	9999	UA9999	UR9999
E88:Z030	E88:Z030	UA	UR	9999	UA9999	UR9999
E88:Z031	E88:Z031	UA	UR	9999	UA9999	UR9999
E88:Z032	E88:Z032	UA	UR	9999	UA9999	UR9999
E88:S001	E88 Cab Tamper	TA	TR	9999	TA9999	TR9999
E88:S002	E88 Int Sir Tamp	YA	YH	9999	YA9999	YH9999

Integriti SIA DECIMAL Map. V21

E88:S003	E88 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E88:S004	E88 AC fail	AT	AR	9999	AT9999	AR9999
E88:S005	E88 Low Batt	YT	YR	9999	YT9999	YR9999
E88:S006	E88 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E88:S007	E88 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E88:S008	E88 Low Volts	YP	YQ	9999	YP9999	YQ9999
E88:S009	E88 PS Fail	YP	YQ	9999	YP9999	YQ9999
E88:S010	E88 Batt Test	IA	IR	9999	IA9999	IR9999
E88:S011	E88 Spare1	UA	UR	9999	UA9999	UR9999
E88:S012	E88 Spare2	UA	UR	9999	UA9999	UR9999
E88:S013	E88 Spare3	UA	UR	9999	UA9999	UR9999
E88:S014	E88 Spare4	UA	UR	9999	UA9999	UR9999
E88:S015	E88 Spare5	UA	UR	9999	UA9999	UR9999
E88:S016	E88 Spare6	UA	UR	9999	UA9999	UR9999
E88:S017	E88 Spare7	UA	UR	9999	UA9999	UR9999
E88:S018	E88 Unibus	EM	EN	9999	EM9999	EN9999
E88:S019	E88 LAN Comms	EM	EN	9999	EM9999	EN9999
E88:S020	E88 Spare8	UA	UR	9999	UA9999	UR9999
E88:S021	E88 Spare9	UA	UR	9999	UA9999	UR9999
E89:Z001	E89:Z001	UA	UR	9999	UA9999	UR9999
E89:Z002	E89:Z002	UA	UR	9999	UA9999	UR9999
E89:Z003	E89:Z003	UA	UR	9999	UA9999	UR9999
E89:Z004	E89:Z004	UA	UR	9999	UA9999	UR9999
E89:Z005	E89:Z005	UA	UR	9999	UA9999	UR9999
E89:Z006	E89:Z006	UA	UR	9999	UA9999	UR9999
E89:Z007	E89:Z007	UA	UR	9999	UA9999	UR9999
E89:Z008	E89:Z008	UA	UR	9999	UA9999	UR9999
E89:Z009	E89:Z009	UA	UR	9999	UA9999	UR9999
E89:Z010	E89:Z010	UA	UR	9999	UA9999	UR9999
E89:Z011	E89:Z011	UA	UR	9999	UA9999	UR9999
E89:Z012	E89:Z012	UA	UR	9999	UA9999	UR9999
E89:Z013	E89:Z013	UA	UR	9999	UA9999	UR9999
E89:Z014	E89:Z014	UA	UR	9999	UA9999	UR9999
E89:Z015	E89:Z015	UA	UR	9999	UA9999	UR9999
E89:Z016	E89:Z016	UA	UR	9999	UA9999	UR9999
E89:Z017	E89:Z017	UA	UR	9999	UA9999	UR9999
E89:Z018	E89:Z018	UA	UR	9999	UA9999	UR9999
E89:Z019	E89:Z019	UA	UR	9999	UA9999	UR9999
E89:Z020	E89:Z020	UA	UR	9999	UA9999	UR9999
E89:Z021	E89:Z021	UA	UR	9999	UA9999	UR9999
E89:Z022	E89:Z022	UA	UR	9999	UA9999	UR9999
E89:Z023	E89:Z023	UA	UR	9999	UA9999	UR9999
E89:Z024	E89:Z024	UA	UR	9999	UA9999	UR9999
E89:Z025	E89:Z025	UA	UR	9999	UA9999	UR9999
E89:Z026	E89:Z026	UA	UR	9999	UA9999	UR9999
E89:Z027	E89:Z027	UA	UR	9999	UA9999	UR9999
E89:Z028	E89:Z028	UA	UR	9999	UA9999	UR9999
E89:Z029	E89:Z029	UA	UR	9999	UA9999	UR9999
E89:Z030	E89:Z030	UA	UR	9999	UA9999	UR9999
E89:Z031	E89:Z031	UA	UR	9999	UA9999	UR9999
E89:Z032	E89:Z032	UA	UR	9999	UA9999	UR9999
E89:S001	E89 Cab Tamper	TA	TR	9999	TA9999	TR9999
E89:S002	E89 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E89:S003	E89 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E89:S004	E89 AC fail	AT	AR	9999	AT9999	AR9999
E89:S005	E89 Low Batt	YT	YR	9999	YT9999	YR9999
E89:S006	E89 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E89:S007	E89 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E89:S008	E89 Low Volts	YP	YQ	9999	YP9999	YQ9999
E89:S009	E89 PS Fail	YP	YQ	9999	YP9999	YQ9999
E89:S010	E89 Batt Test	IA	IR	9999	IA9999	IR9999
E89:S011	E89 Spare1	UA	UR	9999	UA9999	UR9999
E89:S012	E89 Spare2	UA	UR	9999	UA9999	UR9999
E89:S013	E89 Spare3	UA	UR	9999	UA9999	UR9999
E89:S014	E89 Spare4	UA	UR	9999	UA9999	UR9999
E89:S015	E89 Spare5	UA	UR	9999	UA9999	UR9999
E89:S016	E89 Spare6	UA	UR	9999	UA9999	UR9999
E89:S017	E89 Spare7	UA	UR	9999	UA9999	UR9999
E89:S018	E89 Unibus	EM	EN	9999	EM9999	EN9999
E89:S019	E89 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

E89:S020	E89 Spare8	UA	UR	9999	UA9999	UR9999
E89:S021	E89 Spare9	UA	UR	9999	UA9999	UR9999
E90:Z001	E90:Z001	UA	UR	9999	UA9999	UR9999
E90:Z002	E90:Z002	UA	UR	9999	UA9999	UR9999
E90:Z003	E90:Z003	UA	UR	9999	UA9999	UR9999
E90:Z004	E90:Z004	UA	UR	9999	UA9999	UR9999
E90:Z005	E90:Z005	UA	UR	9999	UA9999	UR9999
E90:Z006	E90:Z006	UA	UR	9999	UA9999	UR9999
E90:Z007	E90:Z007	UA	UR	9999	UA9999	UR9999
E90:Z008	E90:Z008	UA	UR	9999	UA9999	UR9999
E90:Z009	E90:Z009	UA	UR	9999	UA9999	UR9999
E90:Z010	E90:Z010	UA	UR	9999	UA9999	UR9999
E90:Z011	E90:Z011	UA	UR	9999	UA9999	UR9999
E90:Z012	E90:Z012	UA	UR	9999	UA9999	UR9999
E90:Z013	E90:Z013	UA	UR	9999	UA9999	UR9999
E90:Z014	E90:Z014	UA	UR	9999	UA9999	UR9999
E90:Z015	E90:Z015	UA	UR	9999	UA9999	UR9999
E90:Z016	E90:Z016	UA	UR	9999	UA9999	UR9999
E90:Z017	E90:Z017	UA	UR	9999	UA9999	UR9999
E90:Z018	E90:Z018	UA	UR	9999	UA9999	UR9999
E90:Z019	E90:Z019	UA	UR	9999	UA9999	UR9999
E90:Z020	E90:Z020	UA	UR	9999	UA9999	UR9999
E90:Z021	E90:Z021	UA	UR	9999	UA9999	UR9999
E90:Z022	E90:Z022	UA	UR	9999	UA9999	UR9999
E90:Z023	E90:Z023	UA	UR	9999	UA9999	UR9999
E90:Z024	E90:Z024	UA	UR	9999	UA9999	UR9999
E90:Z025	E90:Z025	UA	UR	9999	UA9999	UR9999
E90:Z026	E90:Z026	UA	UR	9999	UA9999	UR9999
E90:Z027	E90:Z027	UA	UR	9999	UA9999	UR9999
E90:Z028	E90:Z028	UA	UR	9999	UA9999	UR9999
E90:Z029	E90:Z029	UA	UR	9999	UA9999	UR9999
E90:Z030	E90:Z030	UA	UR	9999	UA9999	UR9999
E90:Z031	E90:Z031	UA	UR	9999	UA9999	UR9999
E90:Z032	E90:Z032	UA	UR	9999	UA9999	UR9999
E90:S001	E90 Cab Tamper	TA	TR	9999	TA9999	TR9999
E90:S002	E90 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E90:S003	E90 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E90:S004	E90 AC fail	AT	AR	9999	AT9999	AR9999
E90:S005	E90 Low Batt	YT	YR	9999	YT9999	YR9999
E90:S006	E90 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E90:S007	E90 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E90:S008	E90 Low Volts	YP	YQ	9999	YP9999	YQ9999
E90:S009	E90 PS Fail	YP	YQ	9999	YP9999	YQ9999
E90:S010	E90 Batt Test	IA	IR	9999	IA9999	IR9999
E90:S011	E90 Spare1	UA	UR	9999	UA9999	UR9999
E90:S012	E90 Spare2	UA	UR	9999	UA9999	UR9999
E90:S013	E90 Spare3	UA	UR	9999	UA9999	UR9999
E90:S014	E90 Spare4	UA	UR	9999	UA9999	UR9999
E90:S015	E90 Spare5	UA	UR	9999	UA9999	UR9999
E90:S016	E90 Spare6	UA	UR	9999	UA9999	UR9999
E90:S017	E90 Spare7	UA	UR	9999	UA9999	UR9999
E90:S018	E90 Unibus	EM	EN	9999	EM9999	EN9999
E90:S019	E90 LAN Comms	EM	EN	9999	EM9999	EN9999
E90:S020	E90 Spare8	UA	UR	9999	UA9999	UR9999
E90:S021	E90 Spare9	UA	UR	9999	UA9999	UR9999
E91:Z001	E91:Z001	UA	UR	9999	UA9999	UR9999
E91:Z002	E91:Z002	UA	UR	9999	UA9999	UR9999
E91:Z003	E91:Z003	UA	UR	9999	UA9999	UR9999
E91:Z004	E91:Z004	UA	UR	9999	UA9999	UR9999
E91:Z005	E91:Z005	UA	UR	9999	UA9999	UR9999
E91:Z006	E91:Z006	UA	UR	9999	UA9999	UR9999
E91:Z007	E91:Z007	UA	UR	9999	UA9999	UR9999
E91:Z008	E91:Z008	UA	UR	9999	UA9999	UR9999
E91:Z009	E91:Z009	UA	UR	9999	UA9999	UR9999
E91:Z010	E91:Z010	UA	UR	9999	UA9999	UR9999
E91:Z011	E91:Z011	UA	UR	9999	UA9999	UR9999
E91:Z012	E91:Z012	UA	UR	9999	UA9999	UR9999
E91:Z013	E91:Z013	UA	UR	9999	UA9999	UR9999
E91:Z014	E91:Z014	UA	UR	9999	UA9999	UR9999
E91:Z015	E91:Z015	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E91:Z016	E91:Z016	UA	UR	9999	UA9999	UR9999
E91:Z017	E91:Z017	UA	UR	9999	UA9999	UR9999
E91:Z018	E91:Z018	UA	UR	9999	UA9999	UR9999
E91:Z019	E91:Z019	UA	UR	9999	UA9999	UR9999
E91:Z020	E91:Z020	UA	UR	9999	UA9999	UR9999
E91:Z021	E91:Z021	UA	UR	9999	UA9999	UR9999
E91:Z022	E91:Z022	UA	UR	9999	UA9999	UR9999
E91:Z023	E91:Z023	UA	UR	9999	UA9999	UR9999
E91:Z024	E91:Z024	UA	UR	9999	UA9999	UR9999
E91:Z025	E91:Z025	UA	UR	9999	UA9999	UR9999
E91:Z026	E91:Z026	UA	UR	9999	UA9999	UR9999
E91:Z027	E91:Z027	UA	UR	9999	UA9999	UR9999
E91:Z028	E91:Z028	UA	UR	9999	UA9999	UR9999
E91:Z029	E91:Z029	UA	UR	9999	UA9999	UR9999
E91:Z030	E91:Z030	UA	UR	9999	UA9999	UR9999
E91:Z031	E91:Z031	UA	UR	9999	UA9999	UR9999
E91:Z032	E91:Z032	UA	UR	9999	UA9999	UR9999
E91:S001	E91 Cab Tamper	TA	TR	9999	TA9999	TR9999
E91:S002	E91 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E91:S003	E91 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E91:S004	E91 AC fail	AT	AR	9999	AT9999	AR9999
E91:S005	E91 Low Batt	YT	YR	9999	YT9999	YR9999
E91:S006	E91 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E91:S007	E91 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E91:S008	E91 Low Volts	YP	YQ	9999	YP9999	YQ9999
E91:S009	E91 PS Fail	YP	YQ	9999	YP9999	YQ9999
E91:S010	E91 Batt Test	IA	IR	9999	IA9999	IR9999
E91:S011	E91 Spare1	UA	UR	9999	UA9999	UR9999
E91:S012	E91 Spare2	UA	UR	9999	UA9999	UR9999
E91:S013	E91 Spare3	UA	UR	9999	UA9999	UR9999
E91:S014	E91 Spare4	UA	UR	9999	UA9999	UR9999
E91:S015	E91 Spare5	UA	UR	9999	UA9999	UR9999
E91:S016	E91 Spare6	UA	UR	9999	UA9999	UR9999
E91:S017	E91 Spare7	UA	UR	9999	UA9999	UR9999
E91:S018	E91 Unibus	EM	EN	9999	EM9999	EN9999
E91:S019	E91 LAN Comms	EM	EN	9999	EM9999	EN9999
E91:S020	E91 Spare8	UA	UR	9999	UA9999	UR9999
E91:S021	E91 Spare9	UA	UR	9999	UA9999	UR9999
E92:Z001	E92:Z001	UA	UR	9999	UA9999	UR9999
E92:Z002	E92:Z002	UA	UR	9999	UA9999	UR9999
E92:Z003	E92:Z003	UA	UR	9999	UA9999	UR9999
E92:Z004	E92:Z004	UA	UR	9999	UA9999	UR9999
E92:Z005	E92:Z005	UA	UR	9999	UA9999	UR9999
E92:Z006	E92:Z006	UA	UR	9999	UA9999	UR9999
E92:Z007	E92:Z007	UA	UR	9999	UA9999	UR9999
E92:Z008	E92:Z008	UA	UR	9999	UA9999	UR9999
E92:Z009	E92:Z009	UA	UR	9999	UA9999	UR9999
E92:Z010	E92:Z010	UA	UR	9999	UA9999	UR9999
E92:Z011	E92:Z011	UA	UR	9999	UA9999	UR9999
E92:Z012	E92:Z012	UA	UR	9999	UA9999	UR9999
E92:Z013	E92:Z013	UA	UR	9999	UA9999	UR9999
E92:Z014	E92:Z014	UA	UR	9999	UA9999	UR9999
E92:Z015	E92:Z015	UA	UR	9999	UA9999	UR9999
E92:Z016	E92:Z016	UA	UR	9999	UA9999	UR9999
E92:Z017	E92:Z017	UA	UR	9999	UA9999	UR9999
E92:Z018	E92:Z018	UA	UR	9999	UA9999	UR9999
E92:Z019	E92:Z019	UA	UR	9999	UA9999	UR9999
E92:Z020	E92:Z020	UA	UR	9999	UA9999	UR9999
E92:Z021	E92:Z021	UA	UR	9999	UA9999	UR9999
E92:Z022	E92:Z022	UA	UR	9999	UA9999	UR9999
E92:Z023	E92:Z023	UA	UR	9999	UA9999	UR9999
E92:Z024	E92:Z024	UA	UR	9999	UA9999	UR9999
E92:Z025	E92:Z025	UA	UR	9999	UA9999	UR9999
E92:Z026	E92:Z026	UA	UR	9999	UA9999	UR9999
E92:Z027	E92:Z027	UA	UR	9999	UA9999	UR9999
E92:Z028	E92:Z028	UA	UR	9999	UA9999	UR9999
E92:Z029	E92:Z029	UA	UR	9999	UA9999	UR9999
E92:Z030	E92:Z030	UA	UR	9999	UA9999	UR9999
E92:Z031	E92:Z031	UA	UR	9999	UA9999	UR9999
E92:Z032	E92:Z032	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E92:S001	E92 Cab Tamper	TA	TR	9999	TA9999	TR9999
E92:S002	E92 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E92:S003	E92 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E92:S004	E92 AC fail	AT	AR	9999	AT9999	AR9999
E92:S005	E92 Low Batt	YT	YR	9999	YT9999	YR9999
E92:S006	E92 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E92:S007	E92 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E92:S008	E92 Low Volts	YP	YQ	9999	YP9999	YQ9999
E92:S009	E92 PS Fail	YP	YQ	9999	YP9999	YQ9999
E92:S010	E92 Batt Test	IA	IR	9999	IA9999	IR9999
E92:S011	E92 Spare1	UA	UR	9999	UA9999	UR9999
E92:S012	E92 Spare2	UA	UR	9999	UA9999	UR9999
E92:S013	E92 Spare3	UA	UR	9999	UA9999	UR9999
E92:S014	E92 Spare4	UA	UR	9999	UA9999	UR9999
E92:S015	E92 Spare5	UA	UR	9999	UA9999	UR9999
E92:S016	E92 Spare6	UA	UR	9999	UA9999	UR9999
E92:S017	E92 Spare7	UA	UR	9999	UA9999	UR9999
E92:S018	E92 Unibus	EM	EN	9999	EM9999	EN9999
E92:S019	E92 LAN Comms	EM	EN	9999	EM9999	EN9999
E92:S020	E92 Spare8	UA	UR	9999	UA9999	UR9999
E92:S021	E92 Spare9	UA	UR	9999	UA9999	UR9999
E93:Z001	E93:Z001	UA	UR	9999	UA9999	UR9999
E93:Z002	E93:Z002	UA	UR	9999	UA9999	UR9999
E93:Z003	E93:Z003	UA	UR	9999	UA9999	UR9999
E93:Z004	E93:Z004	UA	UR	9999	UA9999	UR9999
E93:Z005	E93:Z005	UA	UR	9999	UA9999	UR9999
E93:Z006	E93:Z006	UA	UR	9999	UA9999	UR9999
E93:Z007	E93:Z007	UA	UR	9999	UA9999	UR9999
E93:Z008	E93:Z008	UA	UR	9999	UA9999	UR9999
E93:Z009	E93:Z009	UA	UR	9999	UA9999	UR9999
E93:Z010	E93:Z010	UA	UR	9999	UA9999	UR9999
E93:Z011	E93:Z011	UA	UR	9999	UA9999	UR9999
E93:Z012	E93:Z012	UA	UR	9999	UA9999	UR9999
E93:Z013	E93:Z013	UA	UR	9999	UA9999	UR9999
E93:Z014	E93:Z014	UA	UR	9999	UA9999	UR9999
E93:Z015	E93:Z015	UA	UR	9999	UA9999	UR9999
E93:Z016	E93:Z016	UA	UR	9999	UA9999	UR9999
E93:Z017	E93:Z017	UA	UR	9999	UA9999	UR9999
E93:Z018	E93:Z018	UA	UR	9999	UA9999	UR9999
E93:Z019	E93:Z019	UA	UR	9999	UA9999	UR9999
E93:Z020	E93:Z020	UA	UR	9999	UA9999	UR9999
E93:Z021	E93:Z021	UA	UR	9999	UA9999	UR9999
E93:Z022	E93:Z022	UA	UR	9999	UA9999	UR9999
E93:Z023	E93:Z023	UA	UR	9999	UA9999	UR9999
E93:Z024	E93:Z024	UA	UR	9999	UA9999	UR9999
E93:Z025	E93:Z025	UA	UR	9999	UA9999	UR9999
E93:Z026	E93:Z026	UA	UR	9999	UA9999	UR9999
E93:Z027	E93:Z027	UA	UR	9999	UA9999	UR9999
E93:Z028	E93:Z028	UA	UR	9999	UA9999	UR9999
E93:Z029	E93:Z029	UA	UR	9999	UA9999	UR9999
E93:Z030	E93:Z030	UA	UR	9999	UA9999	UR9999
E93:Z031	E93:Z031	UA	UR	9999	UA9999	UR9999
E93:Z032	E93:Z032	UA	UR	9999	UA9999	UR9999
E93:S001	E93 Cab Tamper	TA	TR	9999	TA9999	TR9999
E93:S002	E93 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E93:S003	E93 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E93:S004	E93 AC fail	AT	AR	9999	AT9999	AR9999
E93:S005	E93 Low Batt	YT	YR	9999	YT9999	YR9999
E93:S006	E93 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E93:S007	E93 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E93:S008	E93 Low Volts	YP	YQ	9999	YP9999	YQ9999
E93:S009	E93 PS Fail	YP	YQ	9999	YP9999	YQ9999
E93:S010	E93 Batt Test	IA	IR	9999	IA9999	IR9999
E93:S011	E93 Spare1	UA	UR	9999	UA9999	UR9999
E93:S012	E93 Spare2	UA	UR	9999	UA9999	UR9999
E93:S013	E93 Spare3	UA	UR	9999	UA9999	UR9999
E93:S014	E93 Spare4	UA	UR	9999	UA9999	UR9999
E93:S015	E93 Spare5	UA	UR	9999	UA9999	UR9999
E93:S016	E93 Spare6	UA	UR	9999	UA9999	UR9999
E93:S017	E93 Spare7	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E93:S018	E93 Unibus	EM	EN	9999	EM9999	EN9999
E93:S019	E93 LAN Comms	EM	EN	9999	EM9999	EN9999
E93:S020	E93 Spare8	UA	UR	9999	UA9999	UR9999
E93:S021	E93 Spare9	UA	UR	9999	UA9999	UR9999
E94:Z001	E94:Z001	UA	UR	9999	UA9999	UR9999
E94:Z002	E94:Z002	UA	UR	9999	UA9999	UR9999
E94:Z003	E94:Z003	UA	UR	9999	UA9999	UR9999
E94:Z004	E94:Z004	UA	UR	9999	UA9999	UR9999
E94:Z005	E94:Z005	UA	UR	9999	UA9999	UR9999
E94:Z006	E94:Z006	UA	UR	9999	UA9999	UR9999
E94:Z007	E94:Z007	UA	UR	9999	UA9999	UR9999
E94:Z008	E94:Z008	UA	UR	9999	UA9999	UR9999
E94:Z009	E94:Z009	UA	UR	9999	UA9999	UR9999
E94:Z010	E94:Z010	UA	UR	9999	UA9999	UR9999
E94:Z011	E94:Z011	UA	UR	9999	UA9999	UR9999
E94:Z012	E94:Z012	UA	UR	9999	UA9999	UR9999
E94:Z013	E94:Z013	UA	UR	9999	UA9999	UR9999
E94:Z014	E94:Z014	UA	UR	9999	UA9999	UR9999
E94:Z015	E94:Z015	UA	UR	9999	UA9999	UR9999
E94:Z016	E94:Z016	UA	UR	9999	UA9999	UR9999
E94:Z017	E94:Z017	UA	UR	9999	UA9999	UR9999
E94:Z018	E94:Z018	UA	UR	9999	UA9999	UR9999
E94:Z019	E94:Z019	UA	UR	9999	UA9999	UR9999
E94:Z020	E94:Z020	UA	UR	9999	UA9999	UR9999
E94:Z021	E94:Z021	UA	UR	9999	UA9999	UR9999
E94:Z022	E94:Z022	UA	UR	9999	UA9999	UR9999
E94:Z023	E94:Z023	UA	UR	9999	UA9999	UR9999
E94:Z024	E94:Z024	UA	UR	9999	UA9999	UR9999
E94:Z025	E94:Z025	UA	UR	9999	UA9999	UR9999
E94:Z026	E94:Z026	UA	UR	9999	UA9999	UR9999
E94:Z027	E94:Z027	UA	UR	9999	UA9999	UR9999
E94:Z028	E94:Z028	UA	UR	9999	UA9999	UR9999
E94:Z029	E94:Z029	UA	UR	9999	UA9999	UR9999
E94:Z030	E94:Z030	UA	UR	9999	UA9999	UR9999
E94:Z031	E94:Z031	UA	UR	9999	UA9999	UR9999
E94:Z032	E94:Z032	UA	UR	9999	UA9999	UR9999
E94:S001	E94 Cab Tamper	TA	TR	9999	TA9999	TR9999
E94:S002	E94 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E94:S003	E94 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E94:S004	E94 AC fail	AT	AR	9999	AT9999	AR9999
E94:S005	E94 Low Batt	YT	YR	9999	YT9999	YR9999
E94:S006	E94 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E94:S007	E94 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E94:S008	E94 Low Volts	YP	YQ	9999	YP9999	YQ9999
E94:S009	E94 PS Fail	YP	YQ	9999	YP9999	YQ9999
E94:S010	E94 Batt Test	IA	IR	9999	IA9999	IR9999
E94:S011	E94 Spare1	UA	UR	9999	UA9999	UR9999
E94:S012	E94 Spare2	UA	UR	9999	UA9999	UR9999
E94:S013	E94 Spare3	UA	UR	9999	UA9999	UR9999
E94:S014	E94 Spare4	UA	UR	9999	UA9999	UR9999
E94:S015	E94 Spare5	UA	UR	9999	UA9999	UR9999
E94:S016	E94 Spare6	UA	UR	9999	UA9999	UR9999
E94:S017	E94 Spare7	UA	UR	9999	UA9999	UR9999
E94:S018	E94 Unibus	EM	EN	9999	EM9999	EN9999
E94:S019	E94 LAN Comms	EM	EN	9999	EM9999	EN9999
E94:S020	E94 Spare8	UA	UR	9999	UA9999	UR9999
E94:S021	E94 Spare9	UA	UR	9999	UA9999	UR9999
E95:Z001	E95:Z001	UA	UR	9999	UA9999	UR9999
E95:Z002	E95:Z002	UA	UR	9999	UA9999	UR9999
E95:Z003	E95:Z003	UA	UR	9999	UA9999	UR9999
E95:Z004	E95:Z004	UA	UR	9999	UA9999	UR9999
E95:Z005	E95:Z005	UA	UR	9999	UA9999	UR9999
E95:Z006	E95:Z006	UA	UR	9999	UA9999	UR9999
E95:Z007	E95:Z007	UA	UR	9999	UA9999	UR9999
E95:Z008	E95:Z008	UA	UR	9999	UA9999	UR9999
E95:Z009	E95:Z009	UA	UR	9999	UA9999	UR9999
E95:Z010	E95:Z010	UA	UR	9999	UA9999	UR9999
E95:Z011	E95:Z011	UA	UR	9999	UA9999	UR9999
E95:Z012	E95:Z012	UA	UR	9999	UA9999	UR9999
E95:Z013	E95:Z013	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E95:Z014	E95:Z014	UA	UR	9999	UA9999	UR9999
E95:Z015	E95:Z015	UA	UR	9999	UA9999	UR9999
E95:Z016	E95:Z016	UA	UR	9999	UA9999	UR9999
E95:Z017	E95:Z017	UA	UR	9999	UA9999	UR9999
E95:Z018	E95:Z018	UA	UR	9999	UA9999	UR9999
E95:Z019	E95:Z019	UA	UR	9999	UA9999	UR9999
E95:Z020	E95:Z020	UA	UR	9999	UA9999	UR9999
E95:Z021	E95:Z021	UA	UR	9999	UA9999	UR9999
E95:Z022	E95:Z022	UA	UR	9999	UA9999	UR9999
E95:Z023	E95:Z023	UA	UR	9999	UA9999	UR9999
E95:Z024	E95:Z024	UA	UR	9999	UA9999	UR9999
E95:Z025	E95:Z025	UA	UR	9999	UA9999	UR9999
E95:Z026	E95:Z026	UA	UR	9999	UA9999	UR9999
E95:Z027	E95:Z027	UA	UR	9999	UA9999	UR9999
E95:Z028	E95:Z028	UA	UR	9999	UA9999	UR9999
E95:Z029	E95:Z029	UA	UR	9999	UA9999	UR9999
E95:Z030	E95:Z030	UA	UR	9999	UA9999	UR9999
E95:Z031	E95:Z031	UA	UR	9999	UA9999	UR9999
E95:Z032	E95:Z032	UA	UR	9999	UA9999	UR9999
E95:S001	E95 Cab Tamper	TA	TR	9999	TA9999	TR9999
E95:S002	E95 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E95:S003	E95 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E95:S004	E95 AC fail	AT	AR	9999	AT9999	AR9999
E95:S005	E95 Low Batt	YT	YR	9999	YT9999	YR9999
E95:S006	E95 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E95:S007	E95 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E95:S008	E95 Low Volts	YP	YQ	9999	YP9999	YQ9999
E95:S009	E95 PS Fail	YP	YQ	9999	YP9999	YQ9999
E95:S010	E95 Batt Test	IA	IR	9999	IA9999	IR9999
E95:S011	E95 Spare1	UA	UR	9999	UA9999	UR9999
E95:S012	E95 Spare2	UA	UR	9999	UA9999	UR9999
E95:S013	E95 Spare3	UA	UR	9999	UA9999	UR9999
E95:S014	E95 Spare4	UA	UR	9999	UA9999	UR9999
E95:S015	E95 Spare5	UA	UR	9999	UA9999	UR9999
E95:S016	E95 Spare6	UA	UR	9999	UA9999	UR9999
E95:S017	E95 Spare7	UA	UR	9999	UA9999	UR9999
E95:S018	E95 Unibus	EM	EN	9999	EM9999	EN9999
E95:S019	E95 LAN Comms	EM	EN	9999	EM9999	EN9999
E95:S020	E95 Spare8	UA	UR	9999	UA9999	UR9999
E95:S021	E95 Spare9	UA	UR	9999	UA9999	UR9999
E96:Z001	E96:Z001	UA	UR	9999	UA9999	UR9999
E96:Z002	E96:Z002	UA	UR	9999	UA9999	UR9999
E96:Z003	E96:Z003	UA	UR	9999	UA9999	UR9999
E96:Z004	E96:Z004	UA	UR	9999	UA9999	UR9999
E96:Z005	E96:Z005	UA	UR	9999	UA9999	UR9999
E96:Z006	E96:Z006	UA	UR	9999	UA9999	UR9999
E96:Z007	E96:Z007	UA	UR	9999	UA9999	UR9999
E96:Z008	E96:Z008	UA	UR	9999	UA9999	UR9999
E96:Z009	E96:Z009	UA	UR	9999	UA9999	UR9999
E96:Z010	E96:Z010	UA	UR	9999	UA9999	UR9999
E96:Z011	E96:Z011	UA	UR	9999	UA9999	UR9999
E96:Z012	E96:Z012	UA	UR	9999	UA9999	UR9999
E96:Z013	E96:Z013	UA	UR	9999	UA9999	UR9999
E96:Z014	E96:Z014	UA	UR	9999	UA9999	UR9999
E96:Z015	E96:Z015	UA	UR	9999	UA9999	UR9999
E96:Z016	E96:Z016	UA	UR	9999	UA9999	UR9999
E96:Z017	E96:Z017	UA	UR	9999	UA9999	UR9999
E96:Z018	E96:Z018	UA	UR	9999	UA9999	UR9999
E96:Z019	E96:Z019	UA	UR	9999	UA9999	UR9999
E96:Z020	E96:Z020	UA	UR	9999	UA9999	UR9999
E96:Z021	E96:Z021	UA	UR	9999	UA9999	UR9999
E96:Z022	E96:Z022	UA	UR	9999	UA9999	UR9999
E96:Z023	E96:Z023	UA	UR	9999	UA9999	UR9999
E96:Z024	E96:Z024	UA	UR	9999	UA9999	UR9999
E96:Z025	E96:Z025	UA	UR	9999	UA9999	UR9999
E96:Z026	E96:Z026	UA	UR	9999	UA9999	UR9999
E96:Z027	E96:Z027	UA	UR	9999	UA9999	UR9999
E96:Z028	E96:Z028	UA	UR	9999	UA9999	UR9999
E96:Z029	E96:Z029	UA	UR	9999	UA9999	UR9999
E96:Z030	E96:Z030	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E96:Z031	E96:Z031	UA	UR	9999	UA9999	UR9999
E96:Z032	E96:Z032	UA	UR	9999	UA9999	UR9999
E96:S001	E96 Cab Tamper	TA	TR	9999	TA9999	TR9999
E96:S002	E96 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E96:S003	E96 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E96:S004	E96 AC fail	AT	AR	9999	AT9999	AR9999
E96:S005	E96 Low Batt	YT	YR	9999	YT9999	YR9999
E96:S006	E96 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E96:S007	E96 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E96:S008	E96 Low Volts	YP	YQ	9999	YP9999	YQ9999
E96:S009	E96 PS Fail	YP	YQ	9999	YP9999	YQ9999
E96:S010	E96 Batt Test	IA	IR	9999	IA9999	IR9999
E96:S011	E96 Spare1	UA	UR	9999	UA9999	UR9999
E96:S012	E96 Spare2	UA	UR	9999	UA9999	UR9999
E96:S013	E96 Spare3	UA	UR	9999	UA9999	UR9999
E96:S014	E96 Spare4	UA	UR	9999	UA9999	UR9999
E96:S015	E96 Spare5	UA	UR	9999	UA9999	UR9999
E96:S016	E96 Spare6	UA	UR	9999	UA9999	UR9999
E96:S017	E96 Spare7	UA	UR	9999	UA9999	UR9999
E96:S018	E96 Unibus	EM	EN	9999	EM9999	EN9999
E96:S019	E96 LAN Comms	EM	EN	9999	EM9999	EN9999
E96:S020	E96 Spare8	UA	UR	9999	UA9999	UR9999
E96:S021	E96 Spare9	UA	UR	9999	UA9999	UR9999
E97:Z001	E97:Z001	UA	UR	9999	UA9999	UR9999
E97:Z002	E97:Z002	UA	UR	9999	UA9999	UR9999
E97:Z003	E97:Z003	UA	UR	9999	UA9999	UR9999
E97:Z004	E97:Z004	UA	UR	9999	UA9999	UR9999
E97:Z005	E97:Z005	UA	UR	9999	UA9999	UR9999
E97:Z006	E97:Z006	UA	UR	9999	UA9999	UR9999
E97:Z007	E97:Z007	UA	UR	9999	UA9999	UR9999
E97:Z008	E97:Z008	UA	UR	9999	UA9999	UR9999
E97:Z009	E97:Z009	UA	UR	9999	UA9999	UR9999
E97:Z010	E97:Z010	UA	UR	9999	UA9999	UR9999
E97:Z011	E97:Z011	UA	UR	9999	UA9999	UR9999
E97:Z012	E97:Z012	UA	UR	9999	UA9999	UR9999
E97:Z013	E97:Z013	UA	UR	9999	UA9999	UR9999
E97:Z014	E97:Z014	UA	UR	9999	UA9999	UR9999
E97:Z015	E97:Z015	UA	UR	9999	UA9999	UR9999
E97:Z016	E97:Z016	UA	UR	9999	UA9999	UR9999
E97:Z017	E97:Z017	UA	UR	9999	UA9999	UR9999
E97:Z018	E97:Z018	UA	UR	9999	UA9999	UR9999
E97:Z019	E97:Z019	UA	UR	9999	UA9999	UR9999
E97:Z020	E97:Z020	UA	UR	9999	UA9999	UR9999
E97:Z021	E97:Z021	UA	UR	9999	UA9999	UR9999
E97:Z022	E97:Z022	UA	UR	9999	UA9999	UR9999
E97:Z023	E97:Z023	UA	UR	9999	UA9999	UR9999
E97:Z024	E97:Z024	UA	UR	9999	UA9999	UR9999
E97:Z025	E97:Z025	UA	UR	9999	UA9999	UR9999
E97:Z026	E97:Z026	UA	UR	9999	UA9999	UR9999
E97:Z027	E97:Z027	UA	UR	9999	UA9999	UR9999
E97:Z028	E97:Z028	UA	UR	9999	UA9999	UR9999
E97:Z029	E97:Z029	UA	UR	9999	UA9999	UR9999
E97:Z030	E97:Z030	UA	UR	9999	UA9999	UR9999
E97:Z031	E97:Z031	UA	UR	9999	UA9999	UR9999
E97:Z032	E97:Z032	UA	UR	9999	UA9999	UR9999
E97:S001	E97 Cab Tamper	TA	TR	9999	TA9999	TR9999
E97:S002	E97 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E97:S003	E97 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E97:S004	E97 AC fail	AT	AR	9999	AT9999	AR9999
E97:S005	E97 Low Batt	YT	YR	9999	YT9999	YR9999
E97:S006	E97 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E97:S007	E97 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E97:S008	E97 Low Volts	YP	YQ	9999	YP9999	YQ9999
E97:S009	E97 PS Fail	YP	YQ	9999	YP9999	YQ9999
E97:S010	E97 Batt Test	IA	IR	9999	IA9999	IR9999
E97:S011	E97 Spare1	UA	UR	9999	UA9999	UR9999
E97:S012	E97 Spare2	UA	UR	9999	UA9999	UR9999
E97:S013	E97 Spare3	UA	UR	9999	UA9999	UR9999
E97:S014	E97 Spare4	UA	UR	9999	UA9999	UR9999
E97:S015	E97 Spare5	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E97:S016	E97 Spare6	UA	UR	9999	UA9999	UR9999
E97:S017	E97 Spare7	UA	UR	9999	UA9999	UR9999
E97:S018	E97 Unibus	EM	EN	9999	EM9999	EN9999
E97:S019	E97 LAN Comms	EM	EN	9999	EM9999	EN9999
E97:S020	E97 Spare8	UA	UR	9999	UA9999	UR9999
E97:S021	E97 Spare9	UA	UR	9999	UA9999	UR9999
E98:Z001	E98:Z001	UA	UR	9999	UA9999	UR9999
E98:Z002	E98:Z002	UA	UR	9999	UA9999	UR9999
E98:Z003	E98:Z003	UA	UR	9999	UA9999	UR9999
E98:Z004	E98:Z004	UA	UR	9999	UA9999	UR9999
E98:Z005	E98:Z005	UA	UR	9999	UA9999	UR9999
E98:Z006	E98:Z006	UA	UR	9999	UA9999	UR9999
E98:Z007	E98:Z007	UA	UR	9999	UA9999	UR9999
E98:Z008	E98:Z008	UA	UR	9999	UA9999	UR9999
E98:Z009	E98:Z009	UA	UR	9999	UA9999	UR9999
E98:Z010	E98:Z010	UA	UR	9999	UA9999	UR9999
E98:Z011	E98:Z011	UA	UR	9999	UA9999	UR9999
E98:Z012	E98:Z012	UA	UR	9999	UA9999	UR9999
E98:Z013	E98:Z013	UA	UR	9999	UA9999	UR9999
E98:Z014	E98:Z014	UA	UR	9999	UA9999	UR9999
E98:Z015	E98:Z015	UA	UR	9999	UA9999	UR9999
E98:Z016	E98:Z016	UA	UR	9999	UA9999	UR9999
E98:Z017	E98:Z017	UA	UR	9999	UA9999	UR9999
E98:Z018	E98:Z018	UA	UR	9999	UA9999	UR9999
E98:Z019	E98:Z019	UA	UR	9999	UA9999	UR9999
E98:Z020	E98:Z020	UA	UR	9999	UA9999	UR9999
E98:Z021	E98:Z021	UA	UR	9999	UA9999	UR9999
E98:Z022	E98:Z022	UA	UR	9999	UA9999	UR9999
E98:Z023	E98:Z023	UA	UR	9999	UA9999	UR9999
E98:Z024	E98:Z024	UA	UR	9999	UA9999	UR9999
E98:Z025	E98:Z025	UA	UR	9999	UA9999	UR9999
E98:Z026	E98:Z026	UA	UR	9999	UA9999	UR9999
E98:Z027	E98:Z027	UA	UR	9999	UA9999	UR9999
E98:Z028	E98:Z028	UA	UR	9999	UA9999	UR9999
E98:Z029	E98:Z029	UA	UR	9999	UA9999	UR9999
E98:Z030	E98:Z030	UA	UR	9999	UA9999	UR9999
E98:Z031	E98:Z031	UA	UR	9999	UA9999	UR9999
E98:Z032	E98:Z032	UA	UR	9999	UA9999	UR9999
E98:S001	E98 Cab Tamper	TA	TR	9999	TA9999	TR9999
E98:S002	E98 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E98:S003	E98 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E98:S004	E98 AC fail	AT	AR	9999	AT9999	AR9999
E98:S005	E98 Low Batt	YT	YR	9999	YT9999	YR9999
E98:S006	E98 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E98:S007	E98 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E98:S008	E98 Low Volts	YP	YQ	9999	YP9999	YQ9999
E98:S009	E98 PS Fail	YP	YQ	9999	YP9999	YQ9999
E98:S010	E98 Batt Test	IA	IR	9999	IA9999	IR9999
E98:S011	E98 Spare1	UA	UR	9999	UA9999	UR9999
E98:S012	E98 Spare2	UA	UR	9999	UA9999	UR9999
E98:S013	E98 Spare3	UA	UR	9999	UA9999	UR9999
E98:S014	E98 Spare4	UA	UR	9999	UA9999	UR9999
E98:S015	E98 Spare5	UA	UR	9999	UA9999	UR9999
E98:S016	E98 Spare6	UA	UR	9999	UA9999	UR9999
E98:S017	E98 Spare7	UA	UR	9999	UA9999	UR9999
E98:S018	E98 Unibus	EM	EN	9999	EM9999	EN9999
E98:S019	E98 LAN Comms	EM	EN	9999	EM9999	EN9999
E98:S020	E98 Spare8	UA	UR	9999	UA9999	UR9999
E98:S021	E98 Spare9	UA	UR	9999	UA9999	UR9999
E99:Z001	E99:Z001	UA	UR	9999	UA9999	UR9999
E99:Z002	E99:Z002	UA	UR	9999	UA9999	UR9999
E99:Z003	E99:Z003	UA	UR	9999	UA9999	UR9999
E99:Z004	E99:Z004	UA	UR	9999	UA9999	UR9999
E99:Z005	E99:Z005	UA	UR	9999	UA9999	UR9999
E99:Z006	E99:Z006	UA	UR	9999	UA9999	UR9999
E99:Z007	E99:Z007	UA	UR	9999	UA9999	UR9999
E99:Z008	E99:Z008	UA	UR	9999	UA9999	UR9999
E99:Z009	E99:Z009	UA	UR	9999	UA9999	UR9999
E99:Z010	E99:Z010	UA	UR	9999	UA9999	UR9999
E99:Z011	E99:Z011	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

E99:Z012	E99:Z012	UA	UR	9999	UA9999	UR9999
E99:Z013	E99:Z013	UA	UR	9999	UA9999	UR9999
E99:Z014	E99:Z014	UA	UR	9999	UA9999	UR9999
E99:Z015	E99:Z015	UA	UR	9999	UA9999	UR9999
E99:Z016	E99:Z016	UA	UR	9999	UA9999	UR9999
E99:Z017	E99:Z017	UA	UR	9999	UA9999	UR9999
E99:Z018	E99:Z018	UA	UR	9999	UA9999	UR9999
E99:Z019	E99:Z019	UA	UR	9999	UA9999	UR9999
E99:Z020	E99:Z020	UA	UR	9999	UA9999	UR9999
E99:Z021	E99:Z021	UA	UR	9999	UA9999	UR9999
E99:Z022	E99:Z022	UA	UR	9999	UA9999	UR9999
E99:Z023	E99:Z023	UA	UR	9999	UA9999	UR9999
E99:Z024	E99:Z024	UA	UR	9999	UA9999	UR9999
E99:Z025	E99:Z025	UA	UR	9999	UA9999	UR9999
E99:Z026	E99:Z026	UA	UR	9999	UA9999	UR9999
E99:Z027	E99:Z027	UA	UR	9999	UA9999	UR9999
E99:Z028	E99:Z028	UA	UR	9999	UA9999	UR9999
E99:Z029	E99:Z029	UA	UR	9999	UA9999	UR9999
E99:Z030	E99:Z030	UA	UR	9999	UA9999	UR9999
E99:Z031	E99:Z031	UA	UR	9999	UA9999	UR9999
E99:Z032	E99:Z032	UA	UR	9999	UA9999	UR9999
E99:S001	E99 Cab Tamper	TA	TR	9999	TA9999	TR9999
E99:S002	E99 Int Sir Tamp	YA	YH	9999	YA9999	YH9999
E99:S003	E99 Ext Sir Tamp	YA	YH	9999	YA9999	YH9999
E99:S004	E99 AC fail	AT	AR	9999	AT9999	AR9999
E99:S005	E99 Low Batt	YT	YR	9999	YT9999	YR9999
E99:S006	E99 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
E99:S007	E99 DET Fuse	YP	YQ	9999	YP9999	YQ9999
E99:S008	E99 Low Volts	YP	YQ	9999	YP9999	YQ9999
E99:S009	E99 PS Fail	YP	YQ	9999	YP9999	YQ9999
E99:S010	E99 Batt Test	IA	IR	9999	IA9999	IR9999
E99:S011	E99 Spare1	UA	UR	9999	UA9999	UR9999
E99:S012	E99 Spare2	UA	UR	9999	UA9999	UR9999
E99:S013	E99 Spare3	UA	UR	9999	UA9999	UR9999
E99:S014	E99 Spare4	UA	UR	9999	UA9999	UR9999
E99:S015	E99 Spare5	UA	UR	9999	UA9999	UR9999
E99:S016	E99 Spare6	UA	UR	9999	UA9999	UR9999
E99:S017	E99 Spare7	UA	UR	9999	UA9999	UR9999
E99:S018	E99 Unibus	EM	EN	9999	EM9999	EN9999
E99:S019	E99 LAN Comms	EM	EN	9999	EM9999	EN9999
E99:S020	E99 Spare8	UA	UR	9999	UA9999	UR9999
E99:S021	E99 Spare9	UA	UR	9999	UA9999	UR9999
R01:Z001	Door1 Reed	UA	UR	4425	UA4425	UR4425
R01:Z002	Door2 Reed	UA	UR	4426	UA4426	UR4426
R01:Z003	Door1 Tongue	UA	UR	4427	UA4427	UR4427
R01:Z004	Door2 Tongue	UA	UR	4428	UA4428	UR4428
R01:Z005	Door1 Rex	UA	UR	4429	UA4429	UR4429
R01:Z006	Door2 Rex	UA	UR	4430	UA4430	UR4430
R01:Z007	Door1 Ren	UA	UR	4431	UA4431	UR4431
R01:Z008	Door2 Ren	UA	UR	4432	UA4432	UR4432
R01:S001	R01 Door1 Fault	IA	IR	4433	IA4433	IR4433
R01:S002	R01 Door2 Fault	IA	IR	4434	IA4434	IR4434
R01:S003	R01 Door1 Forced	DF	DR	4435	DF4435	DR4435
R01:S004	R01 Door2 Forced	DF	DR	4436	DF4436	DR4436
R01:S005	R01 Door1 DOTL	DL	DH	4437	DL4437	DH4437
R01:S006	R01 Door2 DOTL	DL	DH	4438	DL4438	DH4438
R01:S007	R01 Cab Tamper	TA	TR	4439	TA4439	TR4439
R01:S008	R01 AC fail	AT	AR	4440	AT4440	AR4440
R01:S009	R01 Low Batt	YT	YR	4441	YT4441	YR4441
R01:S010	R01 LAN Fuse	YP	YQ	4442	YP4442	YQ4442
R01:S011	R01 DET Fuse	YP	YQ	4443	YP4443	YQ4443
R01:S012	R01 Low Volts	YP	YQ	4444	YP4444	YQ4444
R01:S013	R01 PS Fail	YP	YQ	4445	YP4445	YQ4445
R01:S014	R01 Batt Test	IA	IR	4446	IA4446	IR4446
R01:S015	R01 Rdr1 Invalid	DD	DR	4447	DD4447	DR4447
R01:S016	R01 Rdr2 Invalid	DD	DR	4448	DD4448	DR4448
R01:S017	R01 Rdr1 Duress	HA	HR	4449	HA4449	HR4449
R01:S018	R01 Rdr2 Duress	HA	HR	4450	HA4450	HR4450
R01:S019	R01 Rdr1 Fault	IA	IR	4451	IA4451	IR4451
R01:S020	R01 Rdr2 Fault	IA	IR	4452	IA4452	IR4452

Integriti SIA DECIMAL Map. V21

R01:S021	R01 LAN Comms	EM	EN	4453	EM4453	EN4453
R01:S022	R01 Unibus	EM	EN	4454	EM4454	EN4454
R01:S023	R01 Spare2	UA	UR	4455	UA4455	UR4455
R02:Z001	Door1 Reed	UA	UR	4456	UA4456	UR4456
R02:Z002	Door2 Reed	UA	UR	4457	UA4457	UR4457
R02:Z003	Door1 Tongue	UA	UR	4458	UA4458	UR4458
R02:Z004	Door2 Tongue	UA	UR	4459	UA4459	UR4459
R02:Z005	Door1 Rex	UA	UR	4460	UA4460	UR4460
R02:Z006	Door2 Rex	UA	UR	4461	UA4461	UR4461
R02:Z007	Door1 Ren	UA	UR	4462	UA4462	UR4462
R02:Z008	Door2 Ren	UA	UR	4463	UA4463	UR4463
R02:S001	R02 Door1 Fault	IA	IR	4464	IA4464	IR4464
R02:S002	R02 Door2 Fault	IA	IR	4465	IA4465	IR4465
R02:S003	R02 Door1 Forced	DF	DR	4466	DF4466	DR4466
R02:S004	R02 Door2 Forced	DF	DR	4467	DF4467	DR4467
R02:S005	R02 Door1 DOTL	DL	DH	4468	DL4468	DH4468
R02:S006	R02 Door2 DOTL	DL	DH	4469	DL4469	DH4469
R02:S007	R02 Cab Tamper	TA	TR	4470	TA4470	TR4470
R02:S008	R02 AC fail	AT	AR	4471	AT4471	AR4471
R02:S009	R02 Low Batt	YT	YR	4472	YT4472	YR4472
R02:S010	R02 LAN Fuse	YP	YQ	4473	YP4473	YQ4473
R02:S011	R02 DET Fuse	YP	YQ	4474	YP4474	YQ4474
R02:S012	R02 Low Volts	YP	YQ	4475	YP4475	YQ4475
R02:S013	R02 PS Fail	YP	YQ	4476	YP4476	YQ4476
R02:S014	R02 Batt Test	IA	IR	4477	IA4477	IR4477
R02:S015	R02 Rdr1 Invalid	DD	DR	4478	DD4478	DR4478
R02:S016	R02 Rdr2 Invalid	DD	DR	4479	DD4479	DR4479
R02:S017	R02 Rdr1 Duress	HA	HR	4480	HA4480	HR4480
R02:S018	R02 Rdr2 Duress	HA	HR	4481	HA4481	HR4481
R02:S019	R02 Rdr1 Fault	IA	IR	4482	IA4482	IR4482
R02:S020	R02 Rdr2 Fault	IA	IR	4483	IA4483	IR4483
R02:S021	R02 LAN Comms	EM	EN	4484	EM4484	EN4484
R02:S022	R02 Unibus	EM	EN	4485	EM4485	EN4485
R02:S023	R02 Spare2	UA	UR	4486	UA4486	UR4486
R03:Z001	Door1 Reed	UA	UR	4487	UA4487	UR4487
R03:Z002	Door2 Reed	UA	UR	4488	UA4488	UR4488
R03:Z003	Door1 Tongue	UA	UR	4489	UA4489	UR4489
R03:Z004	Door2 Tongue	UA	UR	4490	UA4490	UR4490
R03:Z005	Door1 Rex	UA	UR	4491	UA4491	UR4491
R03:Z006	Door2 Rex	UA	UR	4492	UA4492	UR4492
R03:Z007	Door1 Ren	UA	UR	4493	UA4493	UR4493
R03:Z008	Door2 Ren	UA	UR	4494	UA4494	UR4494
R03:S001	R03 Door1 Fault	IA	IR	4495	IA4495	IR4495
R03:S002	R03 Door2 Fault	IA	IR	4496	IA4496	IR4496
R03:S003	R03 Door1 Forced	DF	DR	4497	DF4497	DR4497
R03:S004	R03 Door2 Forced	DF	DR	4498	DF4498	DR4498
R03:S005	R03 Door1 DOTL	DL	DH	4499	DL4499	DH4499
R03:S006	R03 Door2 DOTL	DL	DH	4500	DL4500	DH4500
R03:S007	R03 Cab Tamper	TA	TR	4501	TA4501	TR4501
R03:S008	R03 AC fail	AT	AR	4502	AT4502	AR4502
R03:S009	R03 Low Batt	YT	YR	4503	YT4503	YR4503
R03:S010	R03 LAN Fuse	YP	YQ	4504	YP4504	YQ4504
R03:S011	R03 DET Fuse	YP	YQ	4505	YP4505	YQ4505
R03:S012	R03 Low Volts	YP	YQ	4506	YP4506	YQ4506
R03:S013	R03 PS Fail	YP	YQ	4507	YP4507	YQ4507
R03:S014	R03 Batt Test	IA	IR	4508	IA4508	IR4508
R03:S015	R03 Rdr1 Invalid	DD	DR	4509	DD4509	DR4509
R03:S016	R03 Rdr2 Invalid	DD	DR	4510	DD4510	DR4510
R03:S017	R03 Rdr1 Duress	HA	HR	4511	HA4511	HR4511
R03:S018	R03 Rdr2 Duress	HA	HR	4512	HA4512	HR4512
R03:S019	R03 Rdr1 Fault	IA	IR	4513	IA4513	IR4513
R03:S020	R03 Rdr2 Fault	IA	IR	4514	IA4514	IR4514
R03:S021	R03 LAN Comms	EM	EN	4515	EM4515	EN4515
R03:S022	R03 Unibus	EM	EN	4516	EM4516	EN4516
R03:S023	R03 Spare2	UA	UR	4517	UA4517	UR4517
R04:Z001	Door1 Reed	UA	UR	4518	UA4518	UR4518
R04:Z002	Door2 Reed	UA	UR	4519	UA4519	UR4519
R04:Z003	Door1 Tongue	UA	UR	4520	UA4520	UR4520
R04:Z004	Door2 Tongue	UA	UR	4521	UA4521	UR4521
R04:Z005	Door1 Rex	UA	UR	4522	UA4522	UR4522

Integriti SIA DECIMAL Map. V21

R04:Z006	Door2 Rex	UA	UR	4523	UA4523	UR4523
R04:Z007	Door1 Ren	UA	UR	4524	UA4524	UR4524
R04:Z008	Door2 Ren	UA	UR	4525	UA4525	UR4525
R04:S001	R04 Door1 Fault	IA	IR	4526	IA4526	IR4526
R04:S002	R04 Door2 Fault	IA	IR	4527	IA4527	IR4527
R04:S003	R04 Door1 Forced	DF	DR	4528	DF4528	DR4528
R04:S004	R04 Door2 Forced	DF	DR	4529	DF4529	DR4529
R04:S005	R04 Door1 DOTL	DL	DH	4530	DL4530	DH4530
R04:S006	R04 Door2 DOTL	DL	DH	4531	DL4531	DH4531
R04:S007	R04 Cab Tamper	TA	TR	4532	TA4532	TR4532
R04:S008	R04 AC fail	AT	AR	4533	AT4533	AR4533
R04:S009	R04 Low Batt	YT	YR	4534	YT4534	YR4534
R04:S010	R04 LAN Fuse	YP	YQ	4535	YP4535	YQ4535
R04:S011	R04 DET Fuse	YP	YQ	4536	YP4536	YQ4536
R04:S012	R04 Low Volts	YP	YQ	4537	YP4537	YQ4537
R04:S013	R04 PS Fail	YP	YQ	4538	YP4538	YQ4538
R04:S014	R04 Batt Test	IA	IR	4539	IA4539	IR4539
R04:S015	R04 Rdr1 Invalid	DD	DR	4540	DD4540	DR4540
R04:S016	R04 Rdr2 Invalid	DD	DR	4541	DD4541	DR4541
R04:S017	R04 Rdr1 Duress	HA	HR	4542	HA4542	HR4542
R04:S018	R04 Rdr2 Duress	HA	HR	4543	HA4543	HR4543
R04:S019	R04 Rdr1 Fault	IA	IR	4544	IA4544	IR4544
R04:S020	R04 Rdr2 Fault	IA	IR	4545	IA4545	IR4545
R04:S021	R04 LAN Comms	EM	EN	4546	EM4546	EN4546
R04:S022	R04 Unibus	EM	EN	4547	EM4547	EN4547
R04:S023	R04 Spare2	UA	UR	4548	UA4548	UR4548
R05:Z001	Door1 Reed	UA	UR	4549	UA4549	UR4549
R05:Z002	Door2 Reed	UA	UR	4550	UA4550	UR4550
R05:Z003	Door1 Tongue	UA	UR	4551	UA4551	UR4551
R05:Z004	Door2 Tongue	UA	UR	4552	UA4552	UR4552
R05:Z005	Door1 Rex	UA	UR	4553	UA4553	UR4553
R05:Z006	Door2 Rex	UA	UR	4554	UA4554	UR4554
R05:Z007	Door1 Ren	UA	UR	4555	UA4555	UR4555
R05:Z008	Door2 Ren	UA	UR	4556	UA4556	UR4556
R05:S001	R05 Door1 Fault	IA	IR	4557	IA4557	IR4557
R05:S002	R05 Door2 Fault	IA	IR	4558	IA4558	IR4558
R05:S003	R05 Door1 Forced	DF	DR	4559	DF4559	DR4559
R05:S004	R05 Door2 Forced	DF	DR	4560	DF4560	DR4560
R05:S005	R05 Door1 DOTL	DL	DH	4561	DL4561	DH4561
R05:S006	R05 Door2 DOTL	DL	DH	4562	DL4562	DH4562
R05:S007	R05 Cab Tamper	TA	TR	4563	TA4563	TR4563
R05:S008	R05 AC fail	AT	AR	4564	AT4564	AR4564
R05:S009	R05 Low Batt	YT	YR	4565	YT4565	YR4565
R05:S010	R05 LAN Fuse	YP	YQ	4566	YP4566	YQ4566
R05:S011	R05 DET Fuse	YP	YQ	4567	YP4567	YQ4567
R05:S012	R05 Low Volts	YP	YQ	4568	YP4568	YQ4568
R05:S013	R05 PS Fail	YP	YQ	4569	YP4569	YQ4569
R05:S014	R05 Batt Test	IA	IR	4570	IA4570	IR4570
R05:S015	R05 Rdr1 Invalid	DD	DR	4571	DD4571	DR4571
R05:S016	R05 Rdr2 Invalid	DD	DR	4572	DD4572	DR4572
R05:S017	R05 Rdr1 Duress	HA	HR	4573	HA4573	HR4573
R05:S018	R05 Rdr2 Duress	HA	HR	4574	HA4574	HR4574
R05:S019	R05 Rdr1 Fault	IA	IR	4575	IA4575	IR4575
R05:S020	R05 Rdr2 Fault	IA	IR	4576	IA4576	IR4576
R05:S021	R05 LAN Comms	EM	EN	4577	EM4577	EN4577
R05:S022	R05 Unibus	EM	EN	4578	EM4578	EN4578
R05:S023	R05 Spare2	UA	UR	4579	UA4579	UR4579
R06:Z001	Door1 Reed	UA	UR	4580	UA4580	UR4580
R06:Z002	Door2 Reed	UA	UR	4581	UA4581	UR4581
R06:Z003	Door1 Tongue	UA	UR	4582	UA4582	UR4582
R06:Z004	Door2 Tongue	UA	UR	4583	UA4583	UR4583
R06:Z005	Door1 Rex	UA	UR	4584	UA4584	UR4584
R06:Z006	Door2 Rex	UA	UR	4585	UA4585	UR4585
R06:Z007	Door1 Ren	UA	UR	4586	UA4586	UR4586
R06:Z008	Door2 Ren	UA	UR	4587	UA4587	UR4587
R06:S001	R06 Door1 Fault	IA	IR	4588	IA4588	IR4588
R06:S002	R06 Door2 Fault	IA	IR	4589	IA4589	IR4589
R06:S003	R06 Door1 Forced	DF	DR	4590	DF4590	DR4590
R06:S004	R06 Door2 Forced	DF	DR	4591	DF4591	DR4591
R06:S005	R06 Door1 DOTL	DL	DH	4592	DL4592	DH4592

Integriti SIA DECIMAL Map. V21

R06:S006	R06 Door2 DOTL	DL	DH	4593	DL4593	DH4593
R06:S007	R06 Cab Tamper	TA	TR	4594	TA4594	TR4594
R06:S008	R06 AC fail	AT	AR	4595	AT4595	AR4595
R06:S009	R06 Low Batt	YT	YR	4596	YT4596	YR4596
R06:S010	R06 LAN Fuse	YP	YQ	4597	YP4597	YQ4597
R06:S011	R06 DET Fuse	YP	YQ	4598	YP4598	YQ4598
R06:S012	R06 Low Volts	YP	YQ	4599	YP4599	YQ4599
R06:S013	R06 PS Fail	YP	YQ	4600	YP4600	YQ4600
R06:S014	R06 Batt Test	IA	IR	4601	IA4601	IR4601
R06:S015	R06 Rdr1 Invalid	DD	DR	4602	DD4602	DR4602
R06:S016	R06 Rdr2 Invalid	DD	DR	4603	DD4603	DR4603
R06:S017	R06 Rdr1 Duress	HA	HR	4604	HA4604	HR4604
R06:S018	R06 Rdr2 Duress	HA	HR	4605	HA4605	HR4605
R06:S019	R06 Rdr1 Fault	IA	IR	4606	IA4606	IR4606
R06:S020	R06 Rdr2 Fault	IA	IR	4607	IA4607	IR4607
R06:S021	R06 LAN Comms	EM	EN	4608	EM4608	EN4608
R06:S022	R06 Unibus	EM	EN	4609	EM4609	EN4609
R06:S023	R06 Spare2	UA	UR	4610	UA4610	UR4610
R07:Z001	Door1 Reed	UA	UR	4611	UA4611	UR4611
R07:Z002	Door2 Reed	UA	UR	4612	UA4612	UR4612
R07:Z003	Door1 Tongue	UA	UR	4613	UA4613	UR4613
R07:Z004	Door2 Tongue	UA	UR	4614	UA4614	UR4614
R07:Z005	Door1 Rex	UA	UR	4615	UA4615	UR4615
R07:Z006	Door2 Rex	UA	UR	4616	UA4616	UR4616
R07:Z007	Door1 Ren	UA	UR	4617	UA4617	UR4617
R07:Z008	Door2 Ren	UA	UR	4618	UA4618	UR4618
R07:S001	R07 Door1 Fault	IA	IR	4619	IA4619	IR4619
R07:S002	R07 Door2 Fault	IA	IR	4620	IA4620	IR4620
R07:S003	R07 Door1 Forced	DF	DR	4621	DF4621	DR4621
R07:S004	R07 Door2 Forced	DF	DR	4622	DF4622	DR4622
R07:S005	R07 Door1 DOTL	DL	DH	4623	DL4623	DH4623
R07:S006	R07 Door2 DOTL	DL	DH	4624	DL4624	DH4624
R07:S007	R07 Cab Tamper	TA	TR	4625	TA4625	TR4625
R07:S008	R07 AC fail	AT	AR	4626	AT4626	AR4626
R07:S009	R07 Low Batt	YT	YR	4627	YT4627	YR4627
R07:S010	R07 LAN Fuse	YP	YQ	4628	YP4628	YQ4628
R07:S011	R07 DET Fuse	YP	YQ	4629	YP4629	YQ4629
R07:S012	R07 Low Volts	YP	YQ	4630	YP4630	YQ4630
R07:S013	R07 PS Fail	YP	YQ	4631	YP4631	YQ4631
R07:S014	R07 Batt Test	IA	IR	4632	IA4632	IR4632
R07:S015	R07 Rdr1 Invalid	DD	DR	4633	DD4633	DR4633
R07:S016	R07 Rdr2 Invalid	DD	DR	4634	DD4634	DR4634
R07:S017	R07 Rdr1 Duress	HA	HR	4635	HA4635	HR4635
R07:S018	R07 Rdr2 Duress	HA	HR	4636	HA4636	HR4636
R07:S019	R07 Rdr1 Fault	IA	IR	4637	IA4637	IR4637
R07:S020	R07 Rdr2 Fault	IA	IR	4638	IA4638	IR4638
R07:S021	R07 LAN Comms	EM	EN	4639	EM4639	EN4639
R07:S022	R07 Unibus	EM	EN	4640	EM4640	EN4640
R07:S023	R07 Spare2	UA	UR	4641	UA4641	UR4641
R08:Z001	Door1 Reed	UA	UR	4642	UA4642	UR4642
R08:Z002	Door2 Reed	UA	UR	4643	UA4643	UR4643
R08:Z003	Door1 Tongue	UA	UR	4644	UA4644	UR4644
R08:Z004	Door2 Tongue	UA	UR	4645	UA4645	UR4645
R08:Z005	Door1 Rex	UA	UR	4646	UA4646	UR4646
R08:Z006	Door2 Rex	UA	UR	4647	UA4647	UR4647
R08:Z007	Door1 Ren	UA	UR	4648	UA4648	UR4648
R08:Z008	Door2 Ren	UA	UR	4649	UA4649	UR4649
R08:S001	R08 Door1 Fault	IA	IR	4650	IA4650	IR4650
R08:S002	R08 Door2 Fault	IA	IR	4651	IA4651	IR4651
R08:S003	R08 Door1 Forced	DF	DR	4652	DF4652	DR4652
R08:S004	R08 Door2 Forced	DF	DR	4653	DF4653	DR4653
R08:S005	R08 Door1 DOTL	DL	DH	4654	DL4654	DH4654
R08:S006	R08 Door2 DOTL	DL	DH	4655	DL4655	DH4655
R08:S007	R08 Cab Tamper	TA	TR	4656	TA4656	TR4656
R08:S008	R08 AC fail	AT	AR	4657	AT4657	AR4657
R08:S009	R08 Low Batt	YT	YR	4658	YT4658	YR4658
R08:S010	R08 LAN Fuse	YP	YQ	4659	YP4659	YQ4659
R08:S011	R08 DET Fuse	YP	YQ	4660	YP4660	YQ4660
R08:S012	R08 Low Volts	YP	YQ	4661	YP4661	YQ4661
R08:S013	R08 PS Fail	YP	YQ	4662	YP4662	YQ4662

Integriti SIA DECIMAL Map. V21

R08:S014	R08 Batt Test	IA	IR	4663	IA4663	IR4663
R08:S015	R08 Rdr1 Invalid	DD	DR	4664	DD4664	DR4664
R08:S016	R08 Rdr2 Invalid	DD	DR	4665	DD4665	DR4665
R08:S017	R08 Rdr1 Duress	HA	HR	4666	HA4666	HR4666
R08:S018	R08 Rdr2 Duress	HA	HR	4667	HA4667	HR4667
R08:S019	R08 Rdr1 Fault	IA	IR	4668	IA4668	IR4668
R08:S020	R08 Rdr2 Fault	IA	IR	4669	IA4669	IR4669
R08:S021	R08 LAN Comms	EM	EN	4670	EM4670	EN4670
R08:S022	R08 Unibus	EM	EN	4671	EM4671	EN4671
R08:S023	R08 Spare2	UA	UR	4672	UA4672	UR4672
R09:Z001	Door1 Reed	UA	UR	4673	UA4673	UR4673
R09:Z002	Door2 Reed	UA	UR	4674	UA4674	UR4674
R09:Z003	Door1 Tongue	UA	UR	4675	UA4675	UR4675
R09:Z004	Door2 Tongue	UA	UR	4676	UA4676	UR4676
R09:Z005	Door1 Rex	UA	UR	4677	UA4677	UR4677
R09:Z006	Door2 Rex	UA	UR	4678	UA4678	UR4678
R09:Z007	Door1 Ren	UA	UR	4679	UA4679	UR4679
R09:Z008	Door2 Ren	UA	UR	4680	UA4680	UR4680
R09:S001	R09 Door1 Fault	IA	IR	4681	IA4681	IR4681
R09:S002	R09 Door2 Fault	IA	IR	4682	IA4682	IR4682
R09:S003	R09 Door1 Forced	DF	DR	4683	DF4683	DR4683
R09:S004	R09 Door2 Forced	DF	DR	4684	DF4684	DR4684
R09:S005	R09 Door1 DOTL	DL	DH	4685	DL4685	DH4685
R09:S006	R09 Door2 DOTL	DL	DH	4686	DL4686	DH4686
R09:S007	R09 Cab Tamper	TA	TR	4687	TA4687	TR4687
R09:S008	R09 AC fail	AT	AR	4688	AT4688	AR4688
R09:S009	R09 Low Batt	YT	YR	4689	YT4689	YR4689
R09:S010	R09 LAN Fuse	YP	YQ	4690	YP4690	YQ4690
R09:S011	R09 DET Fuse	YP	YQ	4691	YP4691	YQ4691
R09:S012	R09 Low Volts	YP	YQ	4692	YP4692	YQ4692
R09:S013	R09 PS Fail	YP	YQ	4693	YP4693	YQ4693
R09:S014	R09 Batt Test	IA	IR	4694	IA4694	IR4694
R09:S015	R09 Rdr1 Invalid	DD	DR	4695	DD4695	DR4695
R09:S016	R09 Rdr2 Invalid	DD	DR	4696	DD4696	DR4696
R09:S017	R09 Rdr1 Duress	HA	HR	4697	HA4697	HR4697
R09:S018	R09 Rdr2 Duress	HA	HR	4698	HA4698	HR4698
R09:S019	R09 Rdr1 Fault	IA	IR	4699	IA4699	IR4699
R09:S020	R09 Rdr2 Fault	IA	IR	4700	IA4700	IR4700
R09:S021	R09 LAN Comms	EM	EN	4701	EM4701	EN4701
R09:S022	R09 Unibus	EM	EN	4702	EM4702	EN4702
R09:S023	R09 Spare2	UA	UR	4703	UA4703	UR4703
R10:Z001	Door1 Reed	UA	UR	4704	UA4704	UR4704
R10:Z002	Door2 Reed	UA	UR	4705	UA4705	UR4705
R10:Z003	Door1 Tongue	UA	UR	4706	UA4706	UR4706
R10:Z004	Door2 Tongue	UA	UR	4707	UA4707	UR4707
R10:Z005	Door1 Rex	UA	UR	4708	UA4708	UR4708
R10:Z006	Door2 Rex	UA	UR	4709	UA4709	UR4709
R10:Z007	Door1 Ren	UA	UR	4710	UA4710	UR4710
R10:Z008	Door2 Ren	UA	UR	4711	UA4711	UR4711
R10:S001	R10 Door1 Fault	IA	IR	4712	IA4712	IR4712
R10:S002	R10 Door2 Fault	IA	IR	4713	IA4713	IR4713
R10:S003	R10 Door1 Forced	DF	DR	4714	DF4714	DR4714
R10:S004	R10 Door2 Forced	DF	DR	4715	DF4715	DR4715
R10:S005	R10 Door1 DOTL	DL	DH	4716	DL4716	DH4716
R10:S006	R10 Door2 DOTL	DL	DH	4717	DL4717	DH4717
R10:S007	R10 Cab Tamper	TA	TR	4718	TA4718	TR4718
R10:S008	R10 AC fail	AT	AR	4719	AT4719	AR4719
R10:S009	R10 Low Batt	YT	YR	4720	YT4720	YR4720
R10:S010	R10 LAN Fuse	YP	YQ	4721	YP4721	YQ4721
R10:S011	R10 DET Fuse	YP	YQ	4722	YP4722	YQ4722
R10:S012	R10 Low Volts	YP	YQ	4723	YP4723	YQ4723
R10:S013	R10 PS Fail	YP	YQ	4724	YP4724	YQ4724
R10:S014	R10 Batt Test	IA	IR	4725	IA4725	IR4725
R10:S015	R10 Rdr1 Invalid	DD	DR	4726	DD4726	DR4726
R10:S016	R10 Rdr2 Invalid	DD	DR	4727	DD4727	DR4727
R10:S017	R10 Rdr1 Duress	HA	HR	4728	HA4728	HR4728
R10:S018	R10 Rdr2 Duress	HA	HR	4729	HA4729	HR4729
R10:S019	R10 Rdr1 Fault	IA	IR	4730	IA4730	IR4730
R10:S020	R10 Rdr2 Fault	IA	IR	4731	IA4731	IR4731
R10:S021	R10 LAN Comms	EM	EN	4732	EM4732	EN4732

Integriti SIA DECIMAL Map. V21

R10:S022	R10 Unibus	EM	EN	4733	EM4733	EN4733
R10:S023	R10 Spare2	UA	UR	4734	UA4734	UR4734
R11:Z001	Door1 Reed	UA	UR	4735	UA4735	UR4735
R11:Z002	Door2 Reed	UA	UR	4736	UA4736	UR4736
R11:Z003	Door1 Tongue	UA	UR	4737	UA4737	UR4737
R11:Z004	Door2 Tongue	UA	UR	4738	UA4738	UR4738
R11:Z005	Door1 Rex	UA	UR	4739	UA4739	UR4739
R11:Z006	Door2 Rex	UA	UR	4740	UA4740	UR4740
R11:Z007	Door1 Ren	UA	UR	4741	UA4741	UR4741
R11:Z008	Door2 Ren	UA	UR	4742	UA4742	UR4742
R11:S001	R11 Door1 Fault	IA	IR	4743	IA4743	IR4743
R11:S002	R11 Door2 Fault	IA	IR	4744	IA4744	IR4744
R11:S003	R11 Door1 Forced	DF	DR	4745	DF4745	DR4745
R11:S004	R11 Door2 Forced	DF	DR	4746	DF4746	DR4746
R11:S005	R11 Door1 DOTL	DL	DH	4747	DL4747	DH4747
R11:S006	R11 Door2 DOTL	DL	DH	4748	DL4748	DH4748
R11:S007	R11 Cab Tamper	TA	TR	4749	TA4749	TR4749
R11:S008	R11 AC fail	AT	AR	4750	AT4750	AR4750
R11:S009	R11 Low Batt	YT	YR	4751	YT4751	YR4751
R11:S010	R11 LAN Fuse	YP	YQ	4752	YP4752	YQ4752
R11:S011	R11 DET Fuse	YP	YQ	4753	YP4753	YQ4753
R11:S012	R11 Low Volts	YP	YQ	4754	YP4754	YQ4754
R11:S013	R11 PS Fail	YP	YQ	4755	YP4755	YQ4755
R11:S014	R11 Batt Test	IA	IR	4756	IA4756	IR4756
R11:S015	R11 Rdr1 Invalid	DD	DR	4757	DD4757	DR4757
R11:S016	R11 Rdr2 Invalid	DD	DR	4758	DD4758	DR4758
R11:S017	R11 Rdr1 Duress	HA	HR	4759	HA4759	HR4759
R11:S018	R11 Rdr2 Duress	HA	HR	4760	HA4760	HR4760
R11:S019	R11 Rdr1 Fault	IA	IR	4761	IA4761	IR4761
R11:S020	R11 Rdr2 Fault	IA	IR	4762	IA4762	IR4762
R11:S021	R11 LAN Comms	EM	EN	4763	EM4763	EN4763
R11:S022	R11 Unibus	EM	EN	4764	EM4764	EN4764
R11:S023	R11 Spare2	UA	UR	4765	UA4765	UR4765
R12:Z001	Door1 Reed	UA	UR	4766	UA4766	UR4766
R12:Z002	Door2 Reed	UA	UR	4767	UA4767	UR4767
R12:Z003	Door1 Tongue	UA	UR	4768	UA4768	UR4768
R12:Z004	Door2 Tongue	UA	UR	4769	UA4769	UR4769
R12:Z005	Door1 Rex	UA	UR	4770	UA4770	UR4770
R12:Z006	Door2 Rex	UA	UR	4771	UA4771	UR4771
R12:Z007	Door1 Ren	UA	UR	4772	UA4772	UR4772
R12:Z008	Door2 Ren	UA	UR	4773	UA4773	UR4773
R12:S001	R12 Door1 Fault	IA	IR	4774	IA4774	IR4774
R12:S002	R12 Door2 Fault	IA	IR	4775	IA4775	IR4775
R12:S003	R12 Door1 Forced	DF	DR	4776	DF4776	DR4776
R12:S004	R12 Door2 Forced	DF	DR	4777	DF4777	DR4777
R12:S005	R12 Door1 DOTL	DL	DH	4778	DL4778	DH4778
R12:S006	R12 Door2 DOTL	DL	DH	4779	DL4779	DH4779
R12:S007	R12 Cab Tamper	TA	TR	4780	TA4780	TR4780
R12:S008	R12 AC fail	AT	AR	4781	AT4781	AR4781
R12:S009	R12 Low Batt	YT	YR	4782	YT4782	YR4782
R12:S010	R12 LAN Fuse	YP	YQ	4783	YP4783	YQ4783
R12:S011	R12 DET Fuse	YP	YQ	4784	YP4784	YQ4784
R12:S012	R12 Low Volts	YP	YQ	4785	YP4785	YQ4785
R12:S013	R12 PS Fail	YP	YQ	4786	YP4786	YQ4786
R12:S014	R12 Batt Test	IA	IR	4787	IA4787	IR4787
R12:S015	R12 Rdr1 Invalid	DD	DR	4788	DD4788	DR4788
R12:S016	R12 Rdr2 Invalid	DD	DR	4789	DD4789	DR4789
R12:S017	R12 Rdr1 Duress	HA	HR	4790	HA4790	HR4790
R12:S018	R12 Rdr2 Duress	HA	HR	4791	HA4791	HR4791
R12:S019	R12 Rdr1 Fault	IA	IR	4792	IA4792	IR4792
R12:S020	R12 Rdr2 Fault	IA	IR	4793	IA4793	IR4793
R12:S021	R12 LAN Comms	EM	EN	4794	EM4794	EN4794
R12:S022	R12 Unibus	EM	EN	4795	EM4795	EN4795
R12:S023	R12 Spare2	UA	UR	4796	UA4796	UR4796
R13:Z001	Door1 Reed	UA	UR	4797	UA4797	UR4797
R13:Z002	Door2 Reed	UA	UR	4798	UA4798	UR4798
R13:Z003	Door1 Tongue	UA	UR	4799	UA4799	UR4799
R13:Z004	Door2 Tongue	UA	UR	4800	UA4800	UR4800
R13:Z005	Door1 Rex	UA	UR	4801	UA4801	UR4801
R13:Z006	Door2 Rex	UA	UR	4802	UA4802	UR4802

Integriti SIA DECIMAL Map. V21

R13:Z007	Door1 Ren	UA	UR	4803	UA4803	UR4803
R13:Z008	Door2 Ren	UA	UR	4804	UA4804	UR4804
R13:S001	R13 Door1 Fault	IA	IR	4805	IA4805	IR4805
R13:S002	R13 Door2 Fault	IA	IR	4806	IA4806	IR4806
R13:S003	R13 Door1 Forced	DF	DR	4807	DF4807	DR4807
R13:S004	R13 Door2 Forced	DF	DR	4808	DF4808	DR4808
R13:S005	R13 Door1 DOTL	DL	DH	4809	DL4809	DH4809
R13:S006	R13 Door2 DOTL	DL	DH	4810	DL4810	DH4810
R13:S007	R13 Cab Tamper	TA	TR	4811	TA4811	TR4811
R13:S008	R13 AC fail	AT	AR	4812	AT4812	AR4812
R13:S009	R13 Low Batt	YT	YR	4813	YT4813	YR4813
R13:S010	R13 LAN Fuse	YP	YQ	4814	YP4814	YQ4814
R13:S011	R13 DET Fuse	YP	YQ	4815	YP4815	YQ4815
R13:S012	R13 Low Volts	YP	YQ	4816	YP4816	YQ4816
R13:S013	R13 PS Fail	YP	YQ	4817	YP4817	YQ4817
R13:S014	R13 Batt Test	IA	IR	4818	IA4818	IR4818
R13:S015	R13 Rdr1 Invalid	DD	DR	4819	DD4819	DR4819
R13:S016	R13 Rdr2 Invalid	DD	DR	4820	DD4820	DR4820
R13:S017	R13 Rdr1 Duress	HA	HR	4821	HA4821	HR4821
R13:S018	R13 Rdr2 Duress	HA	HR	4822	HA4822	HR4822
R13:S019	R13 Rdr1 Fault	IA	IR	4823	IA4823	IR4823
R13:S020	R13 Rdr2 Fault	IA	IR	4824	IA4824	IR4824
R13:S021	R13 LAN Comms	EM	EN	4825	EM4825	EN4825
R13:S022	R13 Unibus	EM	EN	4826	EM4826	EN4826
R13:S023	R13 Spare2	UA	UR	4827	UA4827	UR4827
R14:Z001	Door1 Reed	UA	UR	4828	UA4828	UR4828
R14:Z002	Door2 Reed	UA	UR	4829	UA4829	UR4829
R14:Z003	Door1 Tongue	UA	UR	4830	UA4830	UR4830
R14:Z004	Door2 Tongue	UA	UR	4831	UA4831	UR4831
R14:Z005	Door1 Rex	UA	UR	4832	UA4832	UR4832
R14:Z006	Door2 Rex	UA	UR	4833	UA4833	UR4833
R14:Z007	Door1 Ren	UA	UR	4834	UA4834	UR4834
R14:Z008	Door2 Ren	UA	UR	4835	UA4835	UR4835
R14:S001	R14 Door1 Fault	IA	IR	4836	IA4836	IR4836
R14:S002	R14 Door2 Fault	IA	IR	4837	IA4837	IR4837
R14:S003	R14 Door1 Forced	DF	DR	4838	DF4838	DR4838
R14:S004	R14 Door2 Forced	DF	DR	4839	DF4839	DR4839
R14:S005	R14 Door1 DOTL	DL	DH	4840	DL4840	DH4840
R14:S006	R14 Door2 DOTL	DL	DH	4841	DL4841	DH4841
R14:S007	R14 Cab Tamper	TA	TR	4842	TA4842	TR4842
R14:S008	R14 AC fail	AT	AR	4843	AT4843	AR4843
R14:S009	R14 Low Batt	YT	YR	4844	YT4844	YR4844
R14:S010	R14 LAN Fuse	YP	YQ	4845	YP4845	YQ4845
R14:S011	R14 DET Fuse	YP	YQ	4846	YP4846	YQ4846
R14:S012	R14 Low Volts	YP	YQ	4847	YP4847	YQ4847
R14:S013	R14 PS Fail	YP	YQ	4848	YP4848	YQ4848
R14:S014	R14 Batt Test	IA	IR	4849	IA4849	IR4849
R14:S015	R14 Rdr1 Invalid	DD	DR	4850	DD4850	DR4850
R14:S016	R14 Rdr2 Invalid	DD	DR	4851	DD4851	DR4851
R14:S017	R14 Rdr1 Duress	HA	HR	4852	HA4852	HR4852
R14:S018	R14 Rdr2 Duress	HA	HR	4853	HA4853	HR4853
R14:S019	R14 Rdr1 Fault	IA	IR	4854	IA4854	IR4854
R14:S020	R14 Rdr2 Fault	IA	IR	4855	IA4855	IR4855
R14:S021	R14 LAN Comms	EM	EN	4856	EM4856	EN4856
R14:S022	R14 Unibus	EM	EN	4857	EM4857	EN4857
R14:S023	R14 Spare2	UA	UR	4858	UA4858	UR4858
R15:Z001	Door1 Reed	UA	UR	4859	UA4859	UR4859
R15:Z002	Door2 Reed	UA	UR	4860	UA4860	UR4860
R15:Z003	Door1 Tongue	UA	UR	4861	UA4861	UR4861
R15:Z004	Door2 Tongue	UA	UR	4862	UA4862	UR4862
R15:Z005	Door1 Rex	UA	UR	4863	UA4863	UR4863
R15:Z006	Door2 Rex	UA	UR	4864	UA4864	UR4864
R15:Z007	Door1 Ren	UA	UR	4865	UA4865	UR4865
R15:Z008	Door2 Ren	UA	UR	4866	UA4866	UR4866
R15:S001	R15 Door1 Fault	IA	IR	4867	IA4867	IR4867
R15:S002	R15 Door2 Fault	IA	IR	4868	IA4868	IR4868
R15:S003	R15 Door1 Forced	DF	DR	4869	DF4869	DR4869
R15:S004	R15 Door2 Forced	DF	DR	4870	DF4870	DR4870
R15:S005	R15 Door1 DOTL	DL	DH	4871	DL4871	DH4871
R15:S006	R15 Door2 DOTL	DL	DH	4872	DL4872	DH4872

Integriti SIA DECIMAL Map. V21

R15:S007	R15 Cab Tamper	TA	TR	4873	TA4873	TR4873
R15:S008	R15 AC fail	AT	AR	4874	AT4874	AR4874
R15:S009	R15 Low Batt	YT	YR	4875	YT4875	YR4875
R15:S010	R15 LAN Fuse	YP	YQ	4876	YP4876	YQ4876
R15:S011	R15 DET Fuse	YP	YQ	4877	YP4877	YQ4877
R15:S012	R15 Low Volts	YP	YQ	4878	YP4878	YQ4878
R15:S013	R15 PS Fail	YP	YQ	4879	YP4879	YQ4879
R15:S014	R15 Batt Test	IA	IR	4880	IA4880	IR4880
R15:S015	R15 Rdr1 Invalid	DD	DR	4881	DD4881	DR4881
R15:S016	R15 Rdr2 Invalid	DD	DR	4882	DD4882	DR4882
R15:S017	R15 Rdr1 Duress	HA	HR	4883	HA4883	HR4883
R15:S018	R15 Rdr2 Duress	HA	HR	4884	HA4884	HR4884
R15:S019	R15 Rdr1 Fault	IA	IR	4885	IA4885	IR4885
R15:S020	R15 Rdr2 Fault	IA	IR	4886	IA4886	IR4886
R15:S021	R15 LAN Comms	EM	EN	4887	EM4887	EN4887
R15:S022	R15 Unibus	EM	EN	4888	EM4888	EN4888
R15:S023	R15 Spare2	UA	UR	4889	UA4889	UR4889
R16:Z001	Door1 Reed	UA	UR	4890	UA4890	UR4890
R16:Z002	Door2 Reed	UA	UR	4891	UA4891	UR4891
R16:Z003	Door1 Tongue	UA	UR	4892	UA4892	UR4892
R16:Z004	Door2 Tongue	UA	UR	4893	UA4893	UR4893
R16:Z005	Door1 Rex	UA	UR	4894	UA4894	UR4894
R16:Z006	Door2 Rex	UA	UR	4895	UA4895	UR4895
R16:Z007	Door1 Ren	UA	UR	4896	UA4896	UR4896
R16:Z008	Door2 Ren	UA	UR	4897	UA4897	UR4897
R16:S001	R16 Door1 Fault	IA	IR	4898	IA4898	IR4898
R16:S002	R16 Door2 Fault	IA	IR	4899	IA4899	IR4899
R16:S003	R16 Door1 Forced	DF	DR	4900	DF4900	DR4900
R16:S004	R16 Door2 Forced	DF	DR	4901	DF4901	DR4901
R16:S005	R16 Door1 DOTL	DL	DH	4902	DL4902	DH4902
R16:S006	R16 Door2 DOTL	DL	DH	4903	DL4903	DH4903
R16:S007	R16 Cab Tamper	TA	TR	4904	TA4904	TR4904
R16:S008	R16 AC fail	AT	AR	4905	AT4905	AR4905
R16:S009	R16 Low Batt	YT	YR	4906	YT4906	YR4906
R16:S010	R16 LAN Fuse	YP	YQ	4907	YP4907	YQ4907
R16:S011	R16 DET Fuse	YP	YQ	4908	YP4908	YQ4908
R16:S012	R16 Low Volts	YP	YQ	4909	YP4909	YQ4909
R16:S013	R16 PS Fail	YP	YQ	4910	YP4910	YQ4910
R16:S014	R16 Batt Test	IA	IR	4911	IA4911	IR4911
R16:S015	R16 Rdr1 Invalid	DD	DR	4912	DD4912	DR4912
R16:S016	R16 Rdr2 Invalid	DD	DR	4913	DD4913	DR4913
R16:S017	R16 Rdr1 Duress	HA	HR	4914	HA4914	HR4914
R16:S018	R16 Rdr2 Duress	HA	HR	4915	HA4915	HR4915
R16:S019	R16 Rdr1 Fault	IA	IR	4916	IA4916	IR4916
R16:S020	R16 Rdr2 Fault	IA	IR	4917	IA4917	IR4917
R16:S021	R16 LAN Comms	EM	EN	4918	EM4918	EN4918
R16:S022	R16 Unibus	EM	EN	4919	EM4919	EN4919
R16:S023	R16 Spare2	UA	UR	4920	UA4920	UR4920
R17:Z001	Door1 Reed	UA	UR	4921	UA4921	UR4921
R17:Z002	Door2 Reed	UA	UR	4922	UA4922	UR4922
R17:Z003	Door1 Tongue	UA	UR	4923	UA4923	UR4923
R17:Z004	Door2 Tongue	UA	UR	4924	UA4924	UR4924
R17:Z005	Door1 Rex	UA	UR	4925	UA4925	UR4925
R17:Z006	Door2 Rex	UA	UR	4926	UA4926	UR4926
R17:Z007	Door1 Ren	UA	UR	4927	UA4927	UR4927
R17:Z008	Door2 Ren	UA	UR	4928	UA4928	UR4928
R17:S001	R17 Door1 Fault	IA	IR	4929	IA4929	IR4929
R17:S002	R17 Door2 Fault	IA	IR	4930	IA4930	IR4930
R17:S003	R17 Door1 Forced	DF	DR	4931	DF4931	DR4931
R17:S004	R17 Door2 Forced	DF	DR	4932	DF4932	DR4932
R17:S005	R17 Door1 DOTL	DL	DH	4933	DL4933	DH4933
R17:S006	R17 Door2 DOTL	DL	DH	4934	DL4934	DH4934
R17:S007	R17 Cab Tamper	TA	TR	4935	TA4935	TR4935
R17:S008	R17 AC fail	AT	AR	4936	AT4936	AR4936
R17:S009	R17 Low Batt	YT	YR	4937	YT4937	YR4937
R17:S010	R17 LAN Fuse	YP	YQ	4938	YP4938	YQ4938
R17:S011	R17 DET Fuse	YP	YQ	4939	YP4939	YQ4939
R17:S012	R17 Low Volts	YP	YQ	4940	YP4940	YQ4940
R17:S013	R17 PS Fail	YP	YQ	4941	YP4941	YQ4941
R17:S014	R17 Batt Test	IA	IR	4942	IA4942	IR4942

Integriti SIA DECIMAL Map. V21

R17:S015	R17 Rdr1 Invalid	DD	DR	4943	DD4943	DR4943
R17:S016	R17 Rdr2 Invalid	DD	DR	4944	DD4944	DR4944
R17:S017	R17 Rdr1 Duress	HA	HR	4945	HA4945	HR4945
R17:S018	R17 Rdr2 Duress	HA	HR	4946	HA4946	HR4946
R17:S019	R17 Rdr1 Fault	IA	IR	4947	IA4947	IR4947
R17:S020	R17 Rdr2 Fault	IA	IR	4948	IA4948	IR4948
R17:S021	R17 LAN Comms	EM	EN	4949	EM4949	EN4949
R17:S022	R17 Unibus	EM	EN	4950	EM4950	EN4950
R17:S023	R17 Spare2	UA	UR	4951	UA4951	UR4951
R18:Z001	Door1 Reed	UA	UR	4952	UA4952	UR4952
R18:Z002	Door2 Reed	UA	UR	4953	UA4953	UR4953
R18:Z003	Door1 Tongue	UA	UR	4954	UA4954	UR4954
R18:Z004	Door2 Tongue	UA	UR	4955	UA4955	UR4955
R18:Z005	Door1 Rex	UA	UR	4956	UA4956	UR4956
R18:Z006	Door2 Rex	UA	UR	4957	UA4957	UR4957
R18:Z007	Door1 Ren	UA	UR	4958	UA4958	UR4958
R18:Z008	Door2 Ren	UA	UR	4959	UA4959	UR4959
R18:S001	R18 Door1 Fault	IA	IR	4960	IA4960	IR4960
R18:S002	R18 Door2 Fault	IA	IR	4961	IA4961	IR4961
R18:S003	R18 Door1 Forced	DF	DR	4962	DF4962	DR4962
R18:S004	R18 Door2 Forced	DF	DR	4963	DF4963	DR4963
R18:S005	R18 Door1 DOTL	DL	DH	4964	DL4964	DH4964
R18:S006	R18 Door2 DOTL	DL	DH	4965	DL4965	DH4965
R18:S007	R18 Cab Tamper	TA	TR	4966	TA4966	TR4966
R18:S008	R18 AC fail	AT	AR	4967	AT4967	AR4967
R18:S009	R18 Low Batt	YT	YR	4968	YT4968	YR4968
R18:S010	R18 LAN Fuse	YP	YQ	4969	YP4969	YQ4969
R18:S011	R18 DET Fuse	YP	YQ	4970	YP4970	YQ4970
R18:S012	R18 Low Volts	YP	YQ	4971	YP4971	YQ4971
R18:S013	R18 PS Fail	YP	YQ	4972	YP4972	YQ4972
R18:S014	R18 Batt Test	IA	IR	4973	IA4973	IR4973
R18:S015	R18 Rdr1 Invalid	DD	DR	4974	DD4974	DR4974
R18:S016	R18 Rdr2 Invalid	DD	DR	4975	DD4975	DR4975
R18:S017	R18 Rdr1 Duress	HA	HR	4976	HA4976	HR4976
R18:S018	R18 Rdr2 Duress	HA	HR	4977	HA4977	HR4977
R18:S019	R18 Rdr1 Fault	IA	IR	4978	IA4978	IR4978
R18:S020	R18 Rdr2 Fault	IA	IR	4979	IA4979	IR4979
R18:S021	R18 LAN Comms	EM	EN	4980	EM4980	EN4980
R18:S022	R18 Unibus	EM	EN	4981	EM4981	EN4981
R18:S023	R18 Spare2	UA	UR	4982	UA4982	UR4982
R19:Z001	Door1 Reed	UA	UR	4983	UA4983	UR4983
R19:Z002	Door2 Reed	UA	UR	4984	UA4984	UR4984
R19:Z003	Door1 Tongue	UA	UR	4985	UA4985	UR4985
R19:Z004	Door2 Tongue	UA	UR	4986	UA4986	UR4986
R19:Z005	Door1 Rex	UA	UR	4987	UA4987	UR4987
R19:Z006	Door2 Rex	UA	UR	4988	UA4988	UR4988
R19:Z007	Door1 Ren	UA	UR	4989	UA4989	UR4989
R19:Z008	Door2 Ren	UA	UR	4990	UA4990	UR4990
R19:S001	R19 Door1 Fault	IA	IR	4991	IA4991	IR4991
R19:S002	R19 Door2 Fault	IA	IR	4992	IA4992	IR4992
R19:S003	R19 Door1 Forced	DF	DR	4993	DF4993	DR4993
R19:S004	R19 Door2 Forced	DF	DR	4994	DF4994	DR4994
R19:S005	R19 Door1 DOTL	DL	DH	4995	DL4995	DH4995
R19:S006	R19 Door2 DOTL	DL	DH	4996	DL4996	DH4996
R19:S007	R19 Cab Tamper	TA	TR	4997	TA4997	TR4997
R19:S008	R19 AC fail	AT	AR	4998	AT4998	AR4998
R19:S009	R19 Low Batt	YT	YR	4999	YT4999	YR4999
R19:S010	R19 LAN Fuse	YP	YQ	5000	YP5000	YQ5000
R19:S011	R19 DET Fuse	YP	YQ	5001	YP5001	YQ5001
R19:S012	R19 Low Volts	YP	YQ	5002	YP5002	YQ5002
R19:S013	R19 PS Fail	YP	YQ	5003	YP5003	YQ5003
R19:S014	R19 Batt Test	IA	IR	5004	IA5004	IR5004
R19:S015	R19 Rdr1 Invalid	DD	DR	5005	DD5005	DR5005
R19:S016	R19 Rdr2 Invalid	DD	DR	5006	DD5006	DR5006
R19:S017	R19 Rdr1 Duress	HA	HR	5007	HA5007	HR5007
R19:S018	R19 Rdr2 Duress	HA	HR	5008	HA5008	HR5008
R19:S019	R19 Rdr1 Fault	IA	IR	5009	IA5009	IR5009
R19:S020	R19 Rdr2 Fault	IA	IR	5010	IA5010	IR5010
R19:S021	R19 LAN Comms	EM	EN	5011	EM5011	EN5011
R19:S022	R19 Unibus	EM	EN	5012	EM5012	EN5012

Integriti SIA DECIMAL Map. V21

R19:S023	R19 Spare2	UA	UR	5013	UA5013	UR5013
R20:Z001	Door1 Reed	UA	UR	5014	UA5014	UR5014
R20:Z002	Door2 Reed	UA	UR	5015	UA5015	UR5015
R20:Z003	Door1 Tongue	UA	UR	5016	UA5016	UR5016
R20:Z004	Door2 Tongue	UA	UR	5017	UA5017	UR5017
R20:Z005	Door1 Rex	UA	UR	5018	UA5018	UR5018
R20:Z006	Door2 Rex	UA	UR	5019	UA5019	UR5019
R20:Z007	Door1 Ren	UA	UR	5020	UA5020	UR5020
R20:Z008	Door2 Ren	UA	UR	5021	UA5021	UR5021
R20:S001	R20 Door1 Fault	IA	IR	5022	IA5022	IR5022
R20:S002	R20 Door2 Fault	IA	IR	5023	IA5023	IR5023
R20:S003	R20 Door1 Forced	DF	DR	5024	DF5024	DR5024
R20:S004	R20 Door2 Forced	DF	DR	5025	DF5025	DR5025
R20:S005	R20 Door1 DOTL	DL	DH	5026	DL5026	DH5026
R20:S006	R20 Door2 DOTL	DL	DH	5027	DL5027	DH5027
R20:S007	R20 Cab Tamper	TA	TR	5028	TA5028	TR5028
R20:S008	R20 AC fail	AT	AR	5029	AT5029	AR5029
R20:S009	R20 Low Batt	YT	YR	5030	YT5030	YR5030
R20:S010	R20 LAN Fuse	YP	YQ	5031	YP5031	YQ5031
R20:S011	R20 DET Fuse	YP	YQ	5032	YP5032	YQ5032
R20:S012	R20 Low Volts	YP	YQ	5033	YP5033	YQ5033
R20:S013	R20 PS Fail	YP	YQ	5034	YP5034	YQ5034
R20:S014	R20 Batt Test	IA	IR	5035	IA5035	IR5035
R20:S015	R20 Rdr1 Invalid	DD	DR	5036	DD5036	DR5036
R20:S016	R20 Rdr2 Invalid	DD	DR	5037	DD5037	DR5037
R20:S017	R20 Rdr1 Duress	HA	HR	5038	HA5038	HR5038
R20:S018	R20 Rdr2 Duress	HA	HR	5039	HA5039	HR5039
R20:S019	R20 Rdr1 Fault	IA	IR	5040	IA5040	IR5040
R20:S020	R20 Rdr2 Fault	IA	IR	5041	IA5041	IR5041
R20:S021	R20 LAN Comms	EM	EN	5042	EM5042	EN5042
R20:S022	R20 Unibus	EM	EN	5043	EM5043	EN5043
R20:S023	R20 Spare2	UA	UR	5044	UA5044	UR5044
R21:Z001	Door1 Reed	UA	UR	5045	UA5045	UR5045
R21:Z002	Door2 Reed	UA	UR	5046	UA5046	UR5046
R21:Z003	Door1 Tongue	UA	UR	5047	UA5047	UR5047
R21:Z004	Door2 Tongue	UA	UR	5048	UA5048	UR5048
R21:Z005	Door1 Rex	UA	UR	5049	UA5049	UR5049
R21:Z006	Door2 Rex	UA	UR	5050	UA5050	UR5050
R21:Z007	Door1 Ren	UA	UR	5051	UA5051	UR5051
R21:Z008	Door2 Ren	UA	UR	5052	UA5052	UR5052
R21:S001	R21 Door1 Fault	IA	IR	5053	IA5053	IR5053
R21:S002	R21 Door2 Fault	IA	IR	5054	IA5054	IR5054
R21:S003	R21 Door1 Forced	DF	DR	5055	DF5055	DR5055
R21:S004	R21 Door2 Forced	DF	DR	5056	DF5056	DR5056
R21:S005	R21 Door1 DOTL	DL	DH	5057	DL5057	DH5057
R21:S006	R21 Door2 DOTL	DL	DH	5058	DL5058	DH5058
R21:S007	R21 Cab Tamper	TA	TR	5059	TA5059	TR5059
R21:S008	R21 AC fail	AT	AR	5060	AT5060	AR5060
R21:S009	R21 Low Batt	YT	YR	5061	YT5061	YR5061
R21:S010	R21 LAN Fuse	YP	YQ	5062	YP5062	YQ5062
R21:S011	R21 DET Fuse	YP	YQ	5063	YP5063	YQ5063
R21:S012	R21 Low Volts	YP	YQ	5064	YP5064	YQ5064
R21:S013	R21 PS Fail	YP	YQ	5065	YP5065	YQ5065
R21:S014	R21 Batt Test	IA	IR	5066	IA5066	IR5066
R21:S015	R21 Rdr1 Invalid	DD	DR	5067	DD5067	DR5067
R21:S016	R21 Rdr2 Invalid	DD	DR	5068	DD5068	DR5068
R21:S017	R21 Rdr1 Duress	HA	HR	5069	HA5069	HR5069
R21:S018	R21 Rdr2 Duress	HA	HR	5070	HA5070	HR5070
R21:S019	R21 Rdr1 Fault	IA	IR	5071	IA5071	IR5071
R21:S020	R21 Rdr2 Fault	IA	IR	5072	IA5072	IR5072
R21:S021	R21 LAN Comms	EM	EN	5073	EM5073	EN5073
R21:S022	R21 Unibus	EM	EN	5074	EM5074	EN5074
R21:S023	R21 Spare2	UA	UR	5075	UA5075	UR5075
R22:Z001	Door1 Reed	UA	UR	5076	UA5076	UR5076
R22:Z002	Door2 Reed	UA	UR	5077	UA5077	UR5077
R22:Z003	Door1 Tongue	UA	UR	5078	UA5078	UR5078
R22:Z004	Door2 Tongue	UA	UR	5079	UA5079	UR5079
R22:Z005	Door1 Rex	UA	UR	5080	UA5080	UR5080
R22:Z006	Door2 Rex	UA	UR	5081	UA5081	UR5081
R22:Z007	Door1 Ren	UA	UR	5082	UA5082	UR5082

Integriti SIA DECIMAL Map. V21

R22:Z008	Door2 Ren	UA	UR	5083	UA5083	UR5083
R22:S001	R22 Door1 Fault	IA	IR	5084	IA5084	IR5084
R22:S002	R22 Door2 Fault	IA	IR	5085	IA5085	IR5085
R22:S003	R22 Door1 Forced	DF	DR	5086	DF5086	DR5086
R22:S004	R22 Door2 Forced	DF	DR	5087	DF5087	DR5087
R22:S005	R22 Door1 DOTL	DL	DH	5088	DL5088	DH5088
R22:S006	R22 Door2 DOTL	DL	DH	5089	DL5089	DH5089
R22:S007	R22 Cab Tamper	TA	TR	5090	TA5090	TR5090
R22:S008	R22 AC fail	AT	AR	5091	AT5091	AR5091
R22:S009	R22 Low Batt	YT	YR	5092	YT5092	YR5092
R22:S010	R22 LAN Fuse	YP	YQ	5093	YP5093	YQ5093
R22:S011	R22 DET Fuse	YP	YQ	5094	YP5094	YQ5094
R22:S012	R22 Low Volts	YP	YQ	5095	YP5095	YQ5095
R22:S013	R22 PS Fail	YP	YQ	5096	YP5096	YQ5096
R22:S014	R22 Batt Test	IA	IR	5097	IA5097	IR5097
R22:S015	R22 Rdr1 Invalid	DD	DR	5098	DD5098	DR5098
R22:S016	R22 Rdr2 Invalid	DD	DR	5099	DD5099	DR5099
R22:S017	R22 Rdr1 Duress	HA	HR	5100	HA5100	HR5100
R22:S018	R22 Rdr2 Duress	HA	HR	5101	HA5101	HR5101
R22:S019	R22 Rdr1 Fault	IA	IR	5102	IA5102	IR5102
R22:S020	R22 Rdr2 Fault	IA	IR	5103	IA5103	IR5103
R22:S021	R22 LAN Comms	EM	EN	5104	EM5104	EN5104
R22:S022	R22 Unibus	EM	EN	5105	EM5105	EN5105
R22:S023	R22 Spare2	UA	UR	5106	UA5106	UR5106
R23:Z001	Door1 Reed	UA	UR	5107	UA5107	UR5107
R23:Z002	Door2 Reed	UA	UR	5108	UA5108	UR5108
R23:Z003	Door1 Tongue	UA	UR	5109	UA5109	UR5109
R23:Z004	Door2 Tongue	UA	UR	5110	UA5110	UR5110
R23:Z005	Door1 Rex	UA	UR	5111	UA5111	UR5111
R23:Z006	Door2 Rex	UA	UR	5112	UA5112	UR5112
R23:Z007	Door1 Ren	UA	UR	5113	UA5113	UR5113
R23:Z008	Door2 Ren	UA	UR	5114	UA5114	UR5114
R23:S001	R23 Door1 Fault	IA	IR	5115	IA5115	IR5115
R23:S002	R23 Door2 Fault	IA	IR	5116	IA5116	IR5116
R23:S003	R23 Door1 Forced	DF	DR	5117	DF5117	DR5117
R23:S004	R23 Door2 Forced	DF	DR	5118	DF5118	DR5118
R23:S005	R23 Door1 DOTL	DL	DH	5119	DL5119	DH5119
R23:S006	R23 Door2 DOTL	DL	DH	5120	DL5120	DH5120
R23:S007	R23 Cab Tamper	TA	TR	5121	TA5121	TR5121
R23:S008	R23 AC fail	AT	AR	5122	AT5122	AR5122
R23:S009	R23 Low Batt	YT	YR	5123	YT5123	YR5123
R23:S010	R23 LAN Fuse	YP	YQ	5124	YP5124	YQ5124
R23:S011	R23 DET Fuse	YP	YQ	5125	YP5125	YQ5125
R23:S012	R23 Low Volts	YP	YQ	5126	YP5126	YQ5126
R23:S013	R23 PS Fail	YP	YQ	5127	YP5127	YQ5127
R23:S014	R23 Batt Test	IA	IR	5128	IA5128	IR5128
R23:S015	R23 Rdr1 Invalid	DD	DR	5129	DD5129	DR5129
R23:S016	R23 Rdr2 Invalid	DD	DR	5130	DD5130	DR5130
R23:S017	R23 Rdr1 Duress	HA	HR	5131	HA5131	HR5131
R23:S018	R23 Rdr2 Duress	HA	HR	5132	HA5132	HR5132
R23:S019	R23 Rdr1 Fault	IA	IR	5133	IA5133	IR5133
R23:S020	R23 Rdr2 Fault	IA	IR	5134	IA5134	IR5134
R23:S021	R23 LAN Comms	EM	EN	5135	EM5135	EN5135
R23:S022	R23 Unibus	EM	EN	5136	EM5136	EN5136
R23:S023	R23 Spare2	UA	UR	5137	UA5137	UR5137
R24:Z001	Door1 Reed	UA	UR	5138	UA5138	UR5138
R24:Z002	Door2 Reed	UA	UR	5139	UA5139	UR5139
R24:Z003	Door1 Tongue	UA	UR	5140	UA5140	UR5140
R24:Z004	Door2 Tongue	UA	UR	5141	UA5141	UR5141
R24:Z005	Door1 Rex	UA	UR	5142	UA5142	UR5142
R24:Z006	Door2 Rex	UA	UR	5143	UA5143	UR5143
R24:Z007	Door1 Ren	UA	UR	5144	UA5144	UR5144
R24:Z008	Door2 Ren	UA	UR	5145	UA5145	UR5145
R24:S001	R24 Door1 Fault	IA	IR	5146	IA5146	IR5146
R24:S002	R24 Door2 Fault	IA	IR	5147	IA5147	IR5147
R24:S003	R24 Door1 Forced	DF	DR	5148	DF5148	DR5148
R24:S004	R24 Door2 Forced	DF	DR	5149	DF5149	DR5149
R24:S005	R24 Door1 DOTL	DL	DH	5150	DL5150	DH5150
R24:S006	R24 Door2 DOTL	DL	DH	5151	DL5151	DH5151
R24:S007	R24 Cab Tamper	TA	TR	5152	TA5152	TR5152

Integriti SIA DECIMAL Map. V21

R24:S008	R24 AC fail	AT	AR	5153	AT5153	AR5153
R24:S009	R24 Low Batt	YT	YR	5154	YT5154	YR5154
R24:S010	R24 LAN Fuse	YP	YQ	5155	YP5155	YQ5155
R24:S011	R24 DET Fuse	YP	YQ	5156	YP5156	YQ5156
R24:S012	R24 Low Volts	YP	YQ	5157	YP5157	YQ5157
R24:S013	R24 PS Fail	YP	YQ	5158	YP5158	YQ5158
R24:S014	R24 Batt Test	IA	IR	5159	IA5159	IR5159
R24:S015	R24 Rdr1 Invalid	DD	DR	5160	DD5160	DR5160
R24:S016	R24 Rdr2 Invalid	DD	DR	5161	DD5161	DR5161
R24:S017	R24 Rdr1 Duress	HA	HR	5162	HA5162	HR5162
R24:S018	R24 Rdr2 Duress	HA	HR	5163	HA5163	HR5163
R24:S019	R24 Rdr1 Fault	IA	IR	5164	IA5164	IR5164
R24:S020	R24 Rdr2 Fault	IA	IR	5165	IA5165	IR5165
R24:S021	R24 LAN Comms	EM	EN	5166	EM5166	EN5166
R24:S022	R24 Unibus	EM	EN	5167	EM5167	EN5167
R24:S023	R24 Spare2	UA	UR	5168	UA5168	UR5168
R25:Z001	Door1 Reed	UA	UR	5169	UA5169	UR5169
R25:Z002	Door2 Reed	UA	UR	5170	UA5170	UR5170
R25:Z003	Door1 Tongue	UA	UR	5171	UA5171	UR5171
R25:Z004	Door2 Tongue	UA	UR	5172	UA5172	UR5172
R25:Z005	Door1 Rex	UA	UR	5173	UA5173	UR5173
R25:Z006	Door2 Rex	UA	UR	5174	UA5174	UR5174
R25:Z007	Door1 Ren	UA	UR	5175	UA5175	UR5175
R25:Z008	Door2 Ren	UA	UR	5176	UA5176	UR5176
R25:S001	R25 Door1 Fault	IA	IR	5177	IA5177	IR5177
R25:S002	R25 Door2 Fault	IA	IR	5178	IA5178	IR5178
R25:S003	R25 Door1 Forced	DF	DR	5179	DF5179	DR5179
R25:S004	R25 Door2 Forced	DF	DR	5180	DF5180	DR5180
R25:S005	R25 Door1 DOTL	DL	DH	5181	DL5181	DH5181
R25:S006	R25 Door2 DOTL	DL	DH	5182	DL5182	DH5182
R25:S007	R25 Cab Tamper	TA	TR	5183	TA5183	TR5183
R25:S008	R25 AC fail	AT	AR	5184	AT5184	AR5184
R25:S009	R25 Low Batt	YT	YR	5185	YT5185	YR5185
R25:S010	R25 LAN Fuse	YP	YQ	5186	YP5186	YQ5186
R25:S011	R25 DET Fuse	YP	YQ	5187	YP5187	YQ5187
R25:S012	R25 Low Volts	YP	YQ	5188	YP5188	YQ5188
R25:S013	R25 PS Fail	YP	YQ	5189	YP5189	YQ5189
R25:S014	R25 Batt Test	IA	IR	5190	IA5190	IR5190
R25:S015	R25 Rdr1 Invalid	DD	DR	5191	DD5191	DR5191
R25:S016	R25 Rdr2 Invalid	DD	DR	5192	DD5192	DR5192
R25:S017	R25 Rdr1 Duress	HA	HR	5193	HA5193	HR5193
R25:S018	R25 Rdr2 Duress	HA	HR	5194	HA5194	HR5194
R25:S019	R25 Rdr1 Fault	IA	IR	5195	IA5195	IR5195
R25:S020	R25 Rdr2 Fault	IA	IR	5196	IA5196	IR5196
R25:S021	R25 LAN Comms	EM	EN	5197	EM5197	EN5197
R25:S022	R25 Unibus	EM	EN	5198	EM5198	EN5198
R25:S023	R25 Spare2	UA	UR	5199	UA5199	UR5199
R26:Z001	Door1 Reed	UA	UR	5200	UA5200	UR5200
R26:Z002	Door2 Reed	UA	UR	5201	UA5201	UR5201
R26:Z003	Door1 Tongue	UA	UR	5202	UA5202	UR5202
R26:Z004	Door2 Tongue	UA	UR	5203	UA5203	UR5203
R26:Z005	Door1 Rex	UA	UR	5204	UA5204	UR5204
R26:Z006	Door2 Rex	UA	UR	5205	UA5205	UR5205
R26:Z007	Door1 Ren	UA	UR	5206	UA5206	UR5206
R26:Z008	Door2 Ren	UA	UR	5207	UA5207	UR5207
R26:S001	R26 Door1 Fault	IA	IR	5208	IA5208	IR5208
R26:S002	R26 Door2 Fault	IA	IR	5209	IA5209	IR5209
R26:S003	R26 Door1 Forced	DF	DR	5210	DF5210	DR5210
R26:S004	R26 Door2 Forced	DF	DR	5211	DF5211	DR5211
R26:S005	R26 Door1 DOTL	DL	DH	5212	DL5212	DH5212
R26:S006	R26 Door2 DOTL	DL	DH	5213	DL5213	DH5213
R26:S007	R26 Cab Tamper	TA	TR	5214	TA5214	TR5214
R26:S008	R26 AC fail	AT	AR	5215	AT5215	AR5215
R26:S009	R26 Low Batt	YT	YR	5216	YT5216	YR5216
R26:S010	R26 LAN Fuse	YP	YQ	5217	YP5217	YQ5217
R26:S011	R26 DET Fuse	YP	YQ	5218	YP5218	YQ5218
R26:S012	R26 Low Volts	YP	YQ	5219	YP5219	YQ5219
R26:S013	R26 PS Fail	YP	YQ	5220	YP5220	YQ5220
R26:S014	R26 Batt Test	IA	IR	5221	IA5221	IR5221
R26:S015	R26 Rdr1 Invalid	DD	DR	5222	DD5222	DR5222

Integriti SIA DECIMAL Map. V21

R26:S016	R26 Rdr2 Invalid	DD	DR	5223	DD5223	DR5223
R26:S017	R26 Rdr1 Duress	HA	HR	5224	HA5224	HR5224
R26:S018	R26 Rdr2 Duress	HA	HR	5225	HA5225	HR5225
R26:S019	R26 Rdr1 Fault	IA	IR	5226	IA5226	IR5226
R26:S020	R26 Rdr2 Fault	IA	IR	5227	IA5227	IR5227
R26:S021	R26 LAN Comms	EM	EN	5228	EM5228	EN5228
R26:S022	R26 Unibus	EM	EN	5229	EM5229	EN5229
R26:S023	R26 Spare2	UA	UR	5230	UA5230	UR5230
R27:Z001	Door1 Reed	UA	UR	5231	UA5231	UR5231
R27:Z002	Door2 Reed	UA	UR	5232	UA5232	UR5232
R27:Z003	Door1 Tongue	UA	UR	5233	UA5233	UR5233
R27:Z004	Door2 Tongue	UA	UR	5234	UA5234	UR5234
R27:Z005	Door1 Rex	UA	UR	5235	UA5235	UR5235
R27:Z006	Door2 Rex	UA	UR	5236	UA5236	UR5236
R27:Z007	Door1 Ren	UA	UR	5237	UA5237	UR5237
R27:Z008	Door2 Ren	UA	UR	5238	UA5238	UR5238
R27:S001	R27 Door1 Fault	IA	IR	5239	IA5239	IR5239
R27:S002	R27 Door2 Fault	IA	IR	5240	IA5240	IR5240
R27:S003	R27 Door1 Forced	DF	DR	5241	DF5241	DR5241
R27:S004	R27 Door2 Forced	DF	DR	5242	DF5242	DR5242
R27:S005	R27 Door1 DOTL	DL	DH	5243	DL5243	DH5243
R27:S006	R27 Door2 DOTL	DL	DH	5244	DL5244	DH5244
R27:S007	R27 Cab Tamper	TA	TR	5245	TA5245	TR5245
R27:S008	R27 AC fail	AT	AR	5246	AT5246	AR5246
R27:S009	R27 Low Batt	YT	YR	5247	YT5247	YR5247
R27:S010	R27 LAN Fuse	YP	YQ	5248	YP5248	YQ5248
R27:S011	R27 DET Fuse	YP	YQ	5249	YP5249	YQ5249
R27:S012	R27 Low Volts	YP	YQ	5250	YP5250	YQ5250
R27:S013	R27 PS Fail	YP	YQ	5251	YP5251	YQ5251
R27:S014	R27 Batt Test	IA	IR	5252	IA5252	IR5252
R27:S015	R27 Rdr1 Invalid	DD	DR	5253	DD5253	DR5253
R27:S016	R27 Rdr2 Invalid	DD	DR	5254	DD5254	DR5254
R27:S017	R27 Rdr1 Duress	HA	HR	5255	HA5255	HR5255
R27:S018	R27 Rdr2 Duress	HA	HR	5256	HA5256	HR5256
R27:S019	R27 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R27:S020	R27 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R27:S021	R27 LAN Comms	EM	EN	9999	EM9999	EN9999
R27:S022	R27 Unibus	EM	EN	9999	EM9999	EN9999
R27:S023	R27 Spare2	UA	UR	9999	UA9999	UR9999
R28:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R28:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R28:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R28:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R28:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R28:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R28:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R28:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R28:S001	R28 Door1 Fault	IA	IR	9999	IA9999	IR9999
R28:S002	R28 Door2 Fault	IA	IR	9999	IA9999	IR9999
R28:S003	R28 Door1 Forced	DF	DR	9999	DF9999	DR9999
R28:S004	R28 Door2 Forced	DF	DR	9999	DF9999	DR9999
R28:S005	R28 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R28:S006	R28 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R28:S007	R28 Cab Tamper	TA	TR	9999	TA9999	TR9999
R28:S008	R28 AC fail	AT	AR	9999	AT9999	AR9999
R28:S009	R28 Low Batt	YT	YR	9999	YT9999	YR9999
R28:S010	R28 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R28:S011	R28 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R28:S012	R28 Low Volts	YP	YQ	9999	YP9999	YQ9999
R28:S013	R28 PS Fail	YP	YQ	9999	YP9999	YQ9999
R28:S014	R28 Batt Test	IA	IR	9999	IA9999	IR9999
R28:S015	R28 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R28:S016	R28 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R28:S017	R28 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R28:S018	R28 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R28:S019	R28 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R28:S020	R28 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R28:S021	R28 LAN Comms	EM	EN	9999	EM9999	EN9999
R28:S022	R28 Unibus	EM	EN	9999	EM9999	EN9999
R28:S023	R28 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R29:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R29:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R29:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R29:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R29:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R29:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R29:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R29:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R29:S001	R29 Door1 Fault	IA	IR	9999	IA9999	IR9999
R29:S002	R29 Door2 Fault	IA	IR	9999	IA9999	IR9999
R29:S003	R29 Door1 Forced	DF	DR	9999	DF9999	DR9999
R29:S004	R29 Door2 Forced	DF	DR	9999	DF9999	DR9999
R29:S005	R29 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R29:S006	R29 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R29:S007	R29 Cab Tamper	TA	TR	9999	TA9999	TR9999
R29:S008	R29 AC fail	AT	AR	9999	AT9999	AR9999
R29:S009	R29 Low Batt	YT	YR	9999	YT9999	YR9999
R29:S010	R29 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R29:S011	R29 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R29:S012	R29 Low Volts	YP	YQ	9999	YP9999	YQ9999
R29:S013	R29 PS Fail	YP	YQ	9999	YP9999	YQ9999
R29:S014	R29 Batt Test	IA	IR	9999	IA9999	IR9999
R29:S015	R29 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R29:S016	R29 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R29:S017	R29 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R29:S018	R29 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R29:S019	R29 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R29:S020	R29 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R29:S021	R29 LAN Comms	EM	EN	9999	EM9999	EN9999
R29:S022	R29 Unibus	EM	EN	9999	EM9999	EN9999
R29:S023	R29 Spare2	UA	UR	9999	UA9999	UR9999
R30:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R30:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R30:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R30:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R30:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R30:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R30:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R30:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R30:S001	R30 Door1 Fault	IA	IR	9999	IA9999	IR9999
R30:S002	R30 Door2 Fault	IA	IR	9999	IA9999	IR9999
R30:S003	R30 Door1 Forced	DF	DR	9999	DF9999	DR9999
R30:S004	R30 Door2 Forced	DF	DR	9999	DF9999	DR9999
R30:S005	R30 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R30:S006	R30 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R30:S007	R30 Cab Tamper	TA	TR	9999	TA9999	TR9999
R30:S008	R30 AC fail	AT	AR	9999	AT9999	AR9999
R30:S009	R30 Low Batt	YT	YR	9999	YT9999	YR9999
R30:S010	R30 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R30:S011	R30 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R30:S012	R30 Low Volts	YP	YQ	9999	YP9999	YQ9999
R30:S013	R30 PS Fail	YP	YQ	9999	YP9999	YQ9999
R30:S014	R30 Batt Test	IA	IR	9999	IA9999	IR9999
R30:S015	R30 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R30:S016	R30 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R30:S017	R30 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R30:S018	R30 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R30:S019	R30 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R30:S020	R30 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R30:S021	R30 LAN Comms	EM	EN	9999	EM9999	EN9999
R30:S022	R30 Unibus	EM	EN	9999	EM9999	EN9999
R30:S023	R30 Spare2	UA	UR	9999	UA9999	UR9999
R31:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R31:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R31:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R31:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R31:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R31:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R31:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R31:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R31:S001	R31 Door1 Fault	IA	IR	9999	IA9999	IR9999
R31:S002	R31 Door2 Fault	IA	IR	9999	IA9999	IR9999
R31:S003	R31 Door1 Forced	DF	DR	9999	DF9999	DR9999
R31:S004	R31 Door2 Forced	DF	DR	9999	DF9999	DR9999
R31:S005	R31 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R31:S006	R31 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R31:S007	R31 Cab Tamper	TA	TR	9999	TA9999	TR9999
R31:S008	R31 AC fail	AT	AR	9999	AT9999	AR9999
R31:S009	R31 Low Batt	YT	YR	9999	YT9999	YR9999
R31:S010	R31 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R31:S011	R31 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R31:S012	R31 Low Volts	YP	YQ	9999	YP9999	YQ9999
R31:S013	R31 PS Fail	YP	YQ	9999	YP9999	YQ9999
R31:S014	R31 Batt Test	IA	IR	9999	IA9999	IR9999
R31:S015	R31 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R31:S016	R31 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R31:S017	R31 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R31:S018	R31 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R31:S019	R31 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R31:S020	R31 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R31:S021	R31 LAN Comms	EM	EN	9999	EM9999	EN9999
R31:S022	R31 Unibus	EM	EN	9999	EM9999	EN9999
R31:S023	R31 Spare2	UA	UR	9999	UA9999	UR9999
R32:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R32:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R32:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R32:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R32:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R32:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R32:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R32:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R32:S001	R32 Door1 Fault	IA	IR	9999	IA9999	IR9999
R32:S002	R32 Door2 Fault	IA	IR	9999	IA9999	IR9999
R32:S003	R32 Door1 Forced	DF	DR	9999	DF9999	DR9999
R32:S004	R32 Door2 Forced	DF	DR	9999	DF9999	DR9999
R32:S005	R32 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R32:S006	R32 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R32:S007	R32 Cab Tamper	TA	TR	9999	TA9999	TR9999
R32:S008	R32 AC fail	AT	AR	9999	AT9999	AR9999
R32:S009	R32 Low Batt	YT	YR	9999	YT9999	YR9999
R32:S010	R32 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R32:S011	R32 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R32:S012	R32 Low Volts	YP	YQ	9999	YP9999	YQ9999
R32:S013	R32 PS Fail	YP	YQ	9999	YP9999	YQ9999
R32:S014	R32 Batt Test	IA	IR	9999	IA9999	IR9999
R32:S015	R32 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R32:S016	R32 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R32:S017	R32 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R32:S018	R32 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R32:S019	R32 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R32:S020	R32 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R32:S021	R32 LAN Comms	EM	EN	9999	EM9999	EN9999
R32:S022	R32 Unibus	EM	EN	9999	EM9999	EN9999
R32:S023	R32 Spare2	UA	UR	9999	UA9999	UR9999
R33:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R33:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R33:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R33:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R33:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R33:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R33:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R33:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R33:S001	R33 Door1 Fault	IA	IR	9999	IA9999	IR9999
R33:S002	R33 Door2 Fault	IA	IR	9999	IA9999	IR9999
R33:S003	R33 Door1 Forced	DF	DR	9999	DF9999	DR9999
R33:S004	R33 Door2 Forced	DF	DR	9999	DF9999	DR9999
R33:S005	R33 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R33:S006	R33 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R33:S007	R33 Cab Tamper	TA	TR	9999	TA9999	TR9999
R33:S008	R33 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

R33:S009	R33 Low Batt	YT	YR	9999	YT9999	YR9999
R33:S010	R33 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R33:S011	R33 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R33:S012	R33 Low Volts	YP	YQ	9999	YP9999	YQ9999
R33:S013	R33 PS Fail	YP	YQ	9999	YP9999	YQ9999
R33:S014	R33 Batt Test	IA	IR	9999	IA9999	IR9999
R33:S015	R33 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R33:S016	R33 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R33:S017	R33 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R33:S018	R33 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R33:S019	R33 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R33:S020	R33 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R33:S021	R33 LAN Comms	EM	EN	9999	EM9999	EN9999
R33:S022	R33 Unibus	EM	EN	9999	EM9999	EN9999
R33:S023	R33 Spare2	UA	UR	9999	UA9999	UR9999
R34:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R34:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R34:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R34:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R34:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R34:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R34:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R34:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R34:S001	R34 Door1 Fault	IA	IR	9999	IA9999	IR9999
R34:S002	R34 Door2 Fault	IA	IR	9999	IA9999	IR9999
R34:S003	R34 Door1 Forced	DF	DR	9999	DF9999	DR9999
R34:S004	R34 Door2 Forced	DF	DR	9999	DF9999	DR9999
R34:S005	R34 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R34:S006	R34 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R34:S007	R34 Cab Tamper	TA	TR	9999	TA9999	TR9999
R34:S008	R34 AC fail	AT	AR	9999	AT9999	AR9999
R34:S009	R34 Low Batt	YT	YR	9999	YT9999	YR9999
R34:S010	R34 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R34:S011	R34 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R34:S012	R34 Low Volts	YP	YQ	9999	YP9999	YQ9999
R34:S013	R34 PS Fail	YP	YQ	9999	YP9999	YQ9999
R34:S014	R34 Batt Test	IA	IR	9999	IA9999	IR9999
R34:S015	R34 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R34:S016	R34 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R34:S017	R34 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R34:S018	R34 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R34:S019	R34 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R34:S020	R34 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R34:S021	R34 LAN Comms	EM	EN	9999	EM9999	EN9999
R34:S022	R34 Unibus	EM	EN	9999	EM9999	EN9999
R34:S023	R34 Spare2	UA	UR	9999	UA9999	UR9999
R35:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R35:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R35:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R35:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R35:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R35:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R35:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R35:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R35:S001	R35 Door1 Fault	IA	IR	9999	IA9999	IR9999
R35:S002	R35 Door2 Fault	IA	IR	9999	IA9999	IR9999
R35:S003	R35 Door1 Forced	DF	DR	9999	DF9999	DR9999
R35:S004	R35 Door2 Forced	DF	DR	9999	DF9999	DR9999
R35:S005	R35 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R35:S006	R35 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R35:S007	R35 Cab Tamper	TA	TR	9999	TA9999	TR9999
R35:S008	R35 AC fail	AT	AR	9999	AT9999	AR9999
R35:S009	R35 Low Batt	YT	YR	9999	YT9999	YR9999
R35:S010	R35 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R35:S011	R35 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R35:S012	R35 Low Volts	YP	YQ	9999	YP9999	YQ9999
R35:S013	R35 PS Fail	YP	YQ	9999	YP9999	YQ9999
R35:S014	R35 Batt Test	IA	IR	9999	IA9999	IR9999
R35:S015	R35 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R35:S016	R35 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

R35:S017	R35 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R35:S018	R35 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R35:S019	R35 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R35:S020	R35 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R35:S021	R35 LAN Comms	EM	EN	9999	EM9999	EN9999
R35:S022	R35 Unibus	EM	EN	9999	EM9999	EN9999
R35:S023	R35 Spare2	UA	UR	9999	UA9999	UR9999
R36:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R36:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R36:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R36:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R36:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R36:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R36:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R36:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R36:S001	R36 Door1 Fault	IA	IR	9999	IA9999	IR9999
R36:S002	R36 Door2 Fault	IA	IR	9999	IA9999	IR9999
R36:S003	R36 Door1 Forced	DF	DR	9999	DF9999	DR9999
R36:S004	R36 Door2 Forced	DF	DR	9999	DF9999	DR9999
R36:S005	R36 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R36:S006	R36 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R36:S007	R36 Cab Tamper	TA	TR	9999	TA9999	TR9999
R36:S008	R36 AC fail	AT	AR	9999	AT9999	AR9999
R36:S009	R36 Low Batt	YT	YR	9999	YT9999	YR9999
R36:S010	R36 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R36:S011	R36 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R36:S012	R36 Low Volts	YP	YQ	9999	YP9999	YQ9999
R36:S013	R36 PS Fail	YP	YQ	9999	YP9999	YQ9999
R36:S014	R36 Batt Test	IA	IR	9999	IA9999	IR9999
R36:S015	R36 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R36:S016	R36 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R36:S017	R36 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R36:S018	R36 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R36:S019	R36 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R36:S020	R36 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R36:S021	R36 LAN Comms	EM	EN	9999	EM9999	EN9999
R36:S022	R36 Unibus	EM	EN	9999	EM9999	EN9999
R36:S023	R36 Spare2	UA	UR	9999	UA9999	UR9999
R37:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R37:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R37:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R37:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R37:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R37:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R37:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R37:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R37:S001	R37 Door1 Fault	IA	IR	9999	IA9999	IR9999
R37:S002	R37 Door2 Fault	IA	IR	9999	IA9999	IR9999
R37:S003	R37 Door1 Forced	DF	DR	9999	DF9999	DR9999
R37:S004	R37 Door2 Forced	DF	DR	9999	DF9999	DR9999
R37:S005	R37 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R37:S006	R37 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R37:S007	R37 Cab Tamper	TA	TR	9999	TA9999	TR9999
R37:S008	R37 AC fail	AT	AR	9999	AT9999	AR9999
R37:S009	R37 Low Batt	YT	YR	9999	YT9999	YR9999
R37:S010	R37 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R37:S011	R37 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R37:S012	R37 Low Volts	YP	YQ	9999	YP9999	YQ9999
R37:S013	R37 PS Fail	YP	YQ	9999	YP9999	YQ9999
R37:S014	R37 Batt Test	IA	IR	9999	IA9999	IR9999
R37:S015	R37 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R37:S016	R37 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R37:S017	R37 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R37:S018	R37 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R37:S019	R37 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R37:S020	R37 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R37:S021	R37 LAN Comms	EM	EN	9999	EM9999	EN9999
R37:S022	R37 Unibus	EM	EN	9999	EM9999	EN9999
R37:S023	R37 Spare2	UA	UR	9999	UA9999	UR9999
R38:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R38:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R38:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R38:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R38:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R38:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R38:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R38:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R38:S001	R38 Door1 Fault	IA	IR	9999	IA9999	IR9999
R38:S002	R38 Door2 Fault	IA	IR	9999	IA9999	IR9999
R38:S003	R38 Door1 Forced	DF	DR	9999	DF9999	DR9999
R38:S004	R38 Door2 Forced	DF	DR	9999	DF9999	DR9999
R38:S005	R38 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R38:S006	R38 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R38:S007	R38 Cab Tamper	TA	TR	9999	TA9999	TR9999
R38:S008	R38 AC fail	AT	AR	9999	AT9999	AR9999
R38:S009	R38 Low Batt	YT	YR	9999	YT9999	YR9999
R38:S010	R38 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R38:S011	R38 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R38:S012	R38 Low Volts	YP	YQ	9999	YP9999	YQ9999
R38:S013	R38 PS Fail	YP	YQ	9999	YP9999	YQ9999
R38:S014	R38 Batt Test	IA	IR	9999	IA9999	IR9999
R38:S015	R38 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R38:S016	R38 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R38:S017	R38 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R38:S018	R38 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R38:S019	R38 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R38:S020	R38 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R38:S021	R38 LAN Comms	EM	EN	9999	EM9999	EN9999
R38:S022	R38 Unibus	EM	EN	9999	EM9999	EN9999
R38:S023	R38 Spare2	UA	UR	9999	UA9999	UR9999
R39:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R39:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R39:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R39:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R39:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R39:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R39:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R39:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R39:S001	R39 Door1 Fault	IA	IR	9999	IA9999	IR9999
R39:S002	R39 Door2 Fault	IA	IR	9999	IA9999	IR9999
R39:S003	R39 Door1 Forced	DF	DR	9999	DF9999	DR9999
R39:S004	R39 Door2 Forced	DF	DR	9999	DF9999	DR9999
R39:S005	R39 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R39:S006	R39 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R39:S007	R39 Cab Tamper	TA	TR	9999	TA9999	TR9999
R39:S008	R39 AC fail	AT	AR	9999	AT9999	AR9999
R39:S009	R39 Low Batt	YT	YR	9999	YT9999	YR9999
R39:S010	R39 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R39:S011	R39 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R39:S012	R39 Low Volts	YP	YQ	9999	YP9999	YQ9999
R39:S013	R39 PS Fail	YP	YQ	9999	YP9999	YQ9999
R39:S014	R39 Batt Test	IA	IR	9999	IA9999	IR9999
R39:S015	R39 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R39:S016	R39 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R39:S017	R39 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R39:S018	R39 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R39:S019	R39 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R39:S020	R39 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R39:S021	R39 LAN Comms	EM	EN	9999	EM9999	EN9999
R39:S022	R39 Unibus	EM	EN	9999	EM9999	EN9999
R39:S023	R39 Spare2	UA	UR	9999	UA9999	UR9999
R40:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R40:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R40:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R40:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R40:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R40:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R40:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R40:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R40:S001	R40 Door1 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

R40:S002	R40 Door2 Fault	IA	IR	9999	IA9999	IR9999
R40:S003	R40 Door1 Forced	DF	DR	9999	DF9999	DR9999
R40:S004	R40 Door2 Forced	DF	DR	9999	DF9999	DR9999
R40:S005	R40 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R40:S006	R40 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R40:S007	R40 Cab Tamper	TA	TR	9999	TA9999	TR9999
R40:S008	R40 AC fail	AT	AR	9999	AT9999	AR9999
R40:S009	R40 Low Batt	YT	YR	9999	YT9999	YR9999
R40:S010	R40 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R40:S011	R40 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R40:S012	R40 Low Volts	YP	YQ	9999	YP9999	YQ9999
R40:S013	R40 PS Fail	YP	YQ	9999	YP9999	YQ9999
R40:S014	R40 Batt Test	IA	IR	9999	IA9999	IR9999
R40:S015	R40 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R40:S016	R40 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R40:S017	R40 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R40:S018	R40 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R40:S019	R40 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R40:S020	R40 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R40:S021	R40 LAN Comms	EM	EN	9999	EM9999	EN9999
R40:S022	R40 Unibus	EM	EN	9999	EM9999	EN9999
R40:S023	R40 Spare2	UA	UR	9999	UA9999	UR9999
R41:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R41:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R41:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R41:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R41:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R41:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R41:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R41:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R41:S001	R41 Door1 Fault	IA	IR	9999	IA9999	IR9999
R41:S002	R41 Door2 Fault	IA	IR	9999	IA9999	IR9999
R41:S003	R41 Door1 Forced	DF	DR	9999	DF9999	DR9999
R41:S004	R41 Door2 Forced	DF	DR	9999	DF9999	DR9999
R41:S005	R41 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R41:S006	R41 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R41:S007	R41 Cab Tamper	TA	TR	9999	TA9999	TR9999
R41:S008	R41 AC fail	AT	AR	9999	AT9999	AR9999
R41:S009	R41 Low Batt	YT	YR	9999	YT9999	YR9999
R41:S010	R41 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R41:S011	R41 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R41:S012	R41 Low Volts	YP	YQ	9999	YP9999	YQ9999
R41:S013	R41 PS Fail	YP	YQ	9999	YP9999	YQ9999
R41:S014	R41 Batt Test	IA	IR	9999	IA9999	IR9999
R41:S015	R41 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R41:S016	R41 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R41:S017	R41 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R41:S018	R41 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R41:S019	R41 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R41:S020	R41 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R41:S021	R41 LAN Comms	EM	EN	9999	EM9999	EN9999
R41:S022	R41 Unibus	EM	EN	9999	EM9999	EN9999
R41:S023	R41 Spare2	UA	UR	9999	UA9999	UR9999
R42:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R42:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R42:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R42:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R42:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R42:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R42:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R42:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R42:S001	R42 Door1 Fault	IA	IR	9999	IA9999	IR9999
R42:S002	R42 Door2 Fault	IA	IR	9999	IA9999	IR9999
R42:S003	R42 Door1 Forced	DF	DR	9999	DF9999	DR9999
R42:S004	R42 Door2 Forced	DF	DR	9999	DF9999	DR9999
R42:S005	R42 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R42:S006	R42 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R42:S007	R42 Cab Tamper	TA	TR	9999	TA9999	TR9999
R42:S008	R42 AC fail	AT	AR	9999	AT9999	AR9999
R42:S009	R42 Low Batt	YT	YR	9999	YT9999	YR9999

Integriti SIA DECIMAL Map. V21

R42:S010	R42 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R42:S011	R42 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R42:S012	R42 Low Volts	YP	YQ	9999	YP9999	YQ9999
R42:S013	R42 PS Fail	YP	YQ	9999	YP9999	YQ9999
R42:S014	R42 Batt Test	IA	IR	9999	IA9999	IR9999
R42:S015	R42 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R42:S016	R42 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R42:S017	R42 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R42:S018	R42 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R42:S019	R42 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R42:S020	R42 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R42:S021	R42 LAN Comms	EM	EN	9999	EM9999	EN9999
R42:S022	R42 Unibus	EM	EN	9999	EM9999	EN9999
R42:S023	R42 Spare2	UA	UR	9999	UA9999	UR9999
R43:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R43:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R43:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R43:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R43:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R43:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R43:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R43:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R43:S001	R43 Door1 Fault	IA	IR	9999	IA9999	IR9999
R43:S002	R43 Door2 Fault	IA	IR	9999	IA9999	IR9999
R43:S003	R43 Door1 Forced	DF	DR	9999	DF9999	DR9999
R43:S004	R43 Door2 Forced	DF	DR	9999	DF9999	DR9999
R43:S005	R43 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R43:S006	R43 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R43:S007	R43 Cab Tamper	TA	TR	9999	TA9999	TR9999
R43:S008	R43 AC fail	AT	AR	9999	AT9999	AR9999
R43:S009	R43 Low Batt	YT	YR	9999	YT9999	YR9999
R43:S010	R43 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R43:S011	R43 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R43:S012	R43 Low Volts	YP	YQ	9999	YP9999	YQ9999
R43:S013	R43 PS Fail	YP	YQ	9999	YP9999	YQ9999
R43:S014	R43 Batt Test	IA	IR	9999	IA9999	IR9999
R43:S015	R43 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R43:S016	R43 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R43:S017	R43 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R43:S018	R43 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R43:S019	R43 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R43:S020	R43 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R43:S021	R43 LAN Comms	EM	EN	9999	EM9999	EN9999
R43:S022	R43 Unibus	EM	EN	9999	EM9999	EN9999
R43:S023	R43 Spare2	UA	UR	9999	UA9999	UR9999
R44:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R44:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R44:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R44:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R44:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R44:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R44:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R44:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R44:S001	R44 Door1 Fault	IA	IR	9999	IA9999	IR9999
R44:S002	R44 Door2 Fault	IA	IR	9999	IA9999	IR9999
R44:S003	R44 Door1 Forced	DF	DR	9999	DF9999	DR9999
R44:S004	R44 Door2 Forced	DF	DR	9999	DF9999	DR9999
R44:S005	R44 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R44:S006	R44 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R44:S007	R44 Cab Tamper	TA	TR	9999	TA9999	TR9999
R44:S008	R44 AC fail	AT	AR	9999	AT9999	AR9999
R44:S009	R44 Low Batt	YT	YR	9999	YT9999	YR9999
R44:S010	R44 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R44:S011	R44 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R44:S012	R44 Low Volts	YP	YQ	9999	YP9999	YQ9999
R44:S013	R44 PS Fail	YP	YQ	9999	YP9999	YQ9999
R44:S014	R44 Batt Test	IA	IR	9999	IA9999	IR9999
R44:S015	R44 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R44:S016	R44 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R44:S017	R44 Rdr1 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

R44:S018	R44 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R44:S019	R44 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R44:S020	R44 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R44:S021	R44 LAN Comms	EM	EN	9999	EM9999	EN9999
R44:S022	R44 Unibus	EM	EN	9999	EM9999	EN9999
R44:S023	R44 Spare2	UA	UR	9999	UA9999	UR9999
R45:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R45:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R45:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R45:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R45:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R45:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R45:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R45:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R45:S001	R45 Door1 Fault	IA	IR	9999	IA9999	IR9999
R45:S002	R45 Door2 Fault	IA	IR	9999	IA9999	IR9999
R45:S003	R45 Door1 Forced	DF	DR	9999	DF9999	DR9999
R45:S004	R45 Door2 Forced	DF	DR	9999	DF9999	DR9999
R45:S005	R45 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R45:S006	R45 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R45:S007	R45 Cab Tamper	TA	TR	9999	TA9999	TR9999
R45:S008	R45 AC fail	AT	AR	9999	AT9999	AR9999
R45:S009	R45 Low Batt	YT	YR	9999	YT9999	YR9999
R45:S010	R45 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R45:S011	R45 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R45:S012	R45 Low Volts	YP	YQ	9999	YP9999	YQ9999
R45:S013	R45 PS Fail	YP	YQ	9999	YP9999	YQ9999
R45:S014	R45 Batt Test	IA	IR	9999	IA9999	IR9999
R45:S015	R45 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R45:S016	R45 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R45:S017	R45 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R45:S018	R45 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R45:S019	R45 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R45:S020	R45 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R45:S021	R45 LAN Comms	EM	EN	9999	EM9999	EN9999
R45:S022	R45 Unibus	EM	EN	9999	EM9999	EN9999
R45:S023	R45 Spare2	UA	UR	9999	UA9999	UR9999
R46:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R46:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R46:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R46:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R46:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R46:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R46:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R46:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R46:S001	R46 Door1 Fault	IA	IR	9999	IA9999	IR9999
R46:S002	R46 Door2 Fault	IA	IR	9999	IA9999	IR9999
R46:S003	R46 Door1 Forced	DF	DR	9999	DF9999	DR9999
R46:S004	R46 Door2 Forced	DF	DR	9999	DF9999	DR9999
R46:S005	R46 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R46:S006	R46 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R46:S007	R46 Cab Tamper	TA	TR	9999	TA9999	TR9999
R46:S008	R46 AC fail	AT	AR	9999	AT9999	AR9999
R46:S009	R46 Low Batt	YT	YR	9999	YT9999	YR9999
R46:S010	R46 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R46:S011	R46 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R46:S012	R46 Low Volts	YP	YQ	9999	YP9999	YQ9999
R46:S013	R46 PS Fail	YP	YQ	9999	YP9999	YQ9999
R46:S014	R46 Batt Test	IA	IR	9999	IA9999	IR9999
R46:S015	R46 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R46:S016	R46 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R46:S017	R46 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R46:S018	R46 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R46:S019	R46 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R46:S020	R46 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R46:S021	R46 LAN Comms	EM	EN	9999	EM9999	EN9999
R46:S022	R46 Unibus	EM	EN	9999	EM9999	EN9999
R46:S023	R46 Spare2	UA	UR	9999	UA9999	UR9999
R47:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R47:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R47:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R47:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R47:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R47:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R47:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R47:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R47:S001	R47 Door1 Fault	IA	IR	9999	IA9999	IR9999
R47:S002	R47 Door2 Fault	IA	IR	9999	IA9999	IR9999
R47:S003	R47 Door1 Forced	DF	DR	9999	DF9999	DR9999
R47:S004	R47 Door2 Forced	DF	DR	9999	DF9999	DR9999
R47:S005	R47 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R47:S006	R47 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R47:S007	R47 Cab Tamper	TA	TR	9999	TA9999	TR9999
R47:S008	R47 AC fail	AT	AR	9999	AT9999	AR9999
R47:S009	R47 Low Batt	YT	YR	9999	YT9999	YR9999
R47:S010	R47 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R47:S011	R47 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R47:S012	R47 Low Volts	YP	YQ	9999	YP9999	YQ9999
R47:S013	R47 PS Fail	YP	YQ	9999	YP9999	YQ9999
R47:S014	R47 Batt Test	IA	IR	9999	IA9999	IR9999
R47:S015	R47 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R47:S016	R47 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R47:S017	R47 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R47:S018	R47 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R47:S019	R47 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R47:S020	R47 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R47:S021	R47 LAN Comms	EM	EN	9999	EM9999	EN9999
R47:S022	R47 Unibus	EM	EN	9999	EM9999	EN9999
R47:S023	R47 Spare2	UA	UR	9999	UA9999	UR9999
R48:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R48:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R48:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R48:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R48:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R48:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R48:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R48:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R48:S001	R48 Door1 Fault	IA	IR	9999	IA9999	IR9999
R48:S002	R48 Door2 Fault	IA	IR	9999	IA9999	IR9999
R48:S003	R48 Door1 Forced	DF	DR	9999	DF9999	DR9999
R48:S004	R48 Door2 Forced	DF	DR	9999	DF9999	DR9999
R48:S005	R48 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R48:S006	R48 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R48:S007	R48 Cab Tamper	TA	TR	9999	TA9999	TR9999
R48:S008	R48 AC fail	AT	AR	9999	AT9999	AR9999
R48:S009	R48 Low Batt	YT	YR	9999	YT9999	YR9999
R48:S010	R48 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R48:S011	R48 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R48:S012	R48 Low Volts	YP	YQ	9999	YP9999	YQ9999
R48:S013	R48 PS Fail	YP	YQ	9999	YP9999	YQ9999
R48:S014	R48 Batt Test	IA	IR	9999	IA9999	IR9999
R48:S015	R48 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R48:S016	R48 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R48:S017	R48 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R48:S018	R48 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R48:S019	R48 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R48:S020	R48 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R48:S021	R48 LAN Comms	EM	EN	9999	EM9999	EN9999
R48:S022	R48 Unibus	EM	EN	9999	EM9999	EN9999
R48:S023	R48 Spare2	UA	UR	9999	UA9999	UR9999
R49:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R49:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R49:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R49:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R49:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R49:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R49:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R49:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R49:S001	R49 Door1 Fault	IA	IR	9999	IA9999	IR9999
R49:S002	R49 Door2 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

R49:S003	R49 Door1 Forced	DF	DR	9999	DF9999	DR9999
R49:S004	R49 Door2 Forced	DF	DR	9999	DF9999	DR9999
R49:S005	R49 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R49:S006	R49 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R49:S007	R49 Cab Tamper	TA	TR	9999	TA9999	TR9999
R49:S008	R49 AC fail	AT	AR	9999	AT9999	AR9999
R49:S009	R49 Low Batt	YT	YR	9999	YT9999	YR9999
R49:S010	R49 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R49:S011	R49 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R49:S012	R49 Low Volts	YP	YQ	9999	YP9999	YQ9999
R49:S013	R49 PS Fail	YP	YQ	9999	YP9999	YQ9999
R49:S014	R49 Batt Test	IA	IR	9999	IA9999	IR9999
R49:S015	R49 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R49:S016	R49 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R49:S017	R49 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R49:S018	R49 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R49:S019	R49 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R49:S020	R49 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R49:S021	R49 LAN Comms	EM	EN	9999	EM9999	EN9999
R49:S022	R49 Unibus	EM	EN	9999	EM9999	EN9999
R49:S023	R49 Spare2	UA	UR	9999	UA9999	UR9999
R50:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R50:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R50:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R50:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R50:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R50:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R50:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R50:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R50:S001	R50 Door1 Fault	IA	IR	9999	IA9999	IR9999
R50:S002	R50 Door2 Fault	IA	IR	9999	IA9999	IR9999
R50:S003	R50 Door1 Forced	DF	DR	9999	DF9999	DR9999
R50:S004	R50 Door2 Forced	DF	DR	9999	DF9999	DR9999
R50:S005	R50 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R50:S006	R50 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R50:S007	R50 Cab Tamper	TA	TR	9999	TA9999	TR9999
R50:S008	R50 AC fail	AT	AR	9999	AT9999	AR9999
R50:S009	R50 Low Batt	YT	YR	9999	YT9999	YR9999
R50:S010	R50 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R50:S011	R50 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R50:S012	R50 Low Volts	YP	YQ	9999	YP9999	YQ9999
R50:S013	R50 PS Fail	YP	YQ	9999	YP9999	YQ9999
R50:S014	R50 Batt Test	IA	IR	9999	IA9999	IR9999
R50:S015	R50 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R50:S016	R50 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R50:S017	R50 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R50:S018	R50 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R50:S019	R50 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R50:S020	R50 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R50:S021	R50 LAN Comms	EM	EN	9999	EM9999	EN9999
R50:S022	R50 Unibus	EM	EN	9999	EM9999	EN9999
R50:S023	R50 Spare2	UA	UR	9999	UA9999	UR9999
R51:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R51:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R51:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R51:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R51:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R51:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R51:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R51:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R51:S001	R51 Door1 Fault	IA	IR	9999	IA9999	IR9999
R51:S002	R51 Door2 Fault	IA	IR	9999	IA9999	IR9999
R51:S003	R51 Door1 Forced	DF	DR	9999	DF9999	DR9999
R51:S004	R51 Door2 Forced	DF	DR	9999	DF9999	DR9999
R51:S005	R51 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R51:S006	R51 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R51:S007	R51 Cab Tamper	TA	TR	9999	TA9999	TR9999
R51:S008	R51 AC fail	AT	AR	9999	AT9999	AR9999
R51:S009	R51 Low Batt	YT	YR	9999	YT9999	YR9999
R51:S010	R51 LAN Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

R51:S011	R51 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R51:S012	R51 Low Volts	YP	YQ	9999	YP9999	YQ9999
R51:S013	R51 PS Fail	YP	YQ	9999	YP9999	YQ9999
R51:S014	R51 Batt Test	IA	IR	9999	IA9999	IR9999
R51:S015	R51 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R51:S016	R51 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R51:S017	R51 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R51:S018	R51 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R51:S019	R51 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R51:S020	R51 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R51:S021	R51 LAN Comms	EM	EN	9999	EM9999	EN9999
R51:S022	R51 Unibus	EM	EN	9999	EM9999	EN9999
R51:S023	R51 Spare2	UA	UR	9999	UA9999	UR9999
R52:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R52:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R52:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R52:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R52:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R52:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R52:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R52:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R52:S001	R52 Door1 Fault	IA	IR	9999	IA9999	IR9999
R52:S002	R52 Door2 Fault	IA	IR	9999	IA9999	IR9999
R52:S003	R52 Door1 Forced	DF	DR	9999	DF9999	DR9999
R52:S004	R52 Door2 Forced	DF	DR	9999	DF9999	DR9999
R52:S005	R52 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R52:S006	R52 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R52:S007	R52 Cab Tamper	TA	TR	9999	TA9999	TR9999
R52:S008	R52 AC fail	AT	AR	9999	AT9999	AR9999
R52:S009	R52 Low Batt	YT	YR	9999	YT9999	YR9999
R52:S010	R52 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R52:S011	R52 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R52:S012	R52 Low Volts	YP	YQ	9999	YP9999	YQ9999
R52:S013	R52 PS Fail	YP	YQ	9999	YP9999	YQ9999
R52:S014	R52 Batt Test	IA	IR	9999	IA9999	IR9999
R52:S015	R52 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R52:S016	R52 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R52:S017	R52 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R52:S018	R52 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R52:S019	R52 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R52:S020	R52 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R52:S021	R52 LAN Comms	EM	EN	9999	EM9999	EN9999
R52:S022	R52 Unibus	EM	EN	9999	EM9999	EN9999
R52:S023	R52 Spare2	UA	UR	9999	UA9999	UR9999
R53:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R53:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R53:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R53:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R53:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R53:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R53:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R53:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R53:S001	R53 Door1 Fault	IA	IR	9999	IA9999	IR9999
R53:S002	R53 Door2 Fault	IA	IR	9999	IA9999	IR9999
R53:S003	R53 Door1 Forced	DF	DR	9999	DF9999	DR9999
R53:S004	R53 Door2 Forced	DF	DR	9999	DF9999	DR9999
R53:S005	R53 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R53:S006	R53 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R53:S007	R53 Cab Tamper	TA	TR	9999	TA9999	TR9999
R53:S008	R53 AC fail	AT	AR	9999	AT9999	AR9999
R53:S009	R53 Low Batt	YT	YR	9999	YT9999	YR9999
R53:S010	R53 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R53:S011	R53 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R53:S012	R53 Low Volts	YP	YQ	9999	YP9999	YQ9999
R53:S013	R53 PS Fail	YP	YQ	9999	YP9999	YQ9999
R53:S014	R53 Batt Test	IA	IR	9999	IA9999	IR9999
R53:S015	R53 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R53:S016	R53 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R53:S017	R53 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R53:S018	R53 Rdr2 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

R53:S019	R53 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R53:S020	R53 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R53:S021	R53 LAN Comms	EM	EN	9999	EM9999	EN9999
R53:S022	R53 Unibus	EM	EN	9999	EM9999	EN9999
R53:S023	R53 Spare2	UA	UR	9999	UA9999	UR9999
R54:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R54:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R54:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R54:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R54:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R54:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R54:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R54:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R54:S001	R54 Door1 Fault	IA	IR	9999	IA9999	IR9999
R54:S002	R54 Door2 Fault	IA	IR	9999	IA9999	IR9999
R54:S003	R54 Door1 Forced	DF	DR	9999	DF9999	DR9999
R54:S004	R54 Door2 Forced	DF	DR	9999	DF9999	DR9999
R54:S005	R54 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R54:S006	R54 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R54:S007	R54 Cab Tamper	TA	TR	9999	TA9999	TR9999
R54:S008	R54 AC fail	AT	AR	9999	AT9999	AR9999
R54:S009	R54 Low Batt	YT	YR	9999	YT9999	YR9999
R54:S010	R54 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R54:S011	R54 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R54:S012	R54 Low Volts	YP	YQ	9999	YP9999	YQ9999
R54:S013	R54 PS Fail	YP	YQ	9999	YP9999	YQ9999
R54:S014	R54 Batt Test	IA	IR	9999	IA9999	IR9999
R54:S015	R54 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R54:S016	R54 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R54:S017	R54 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R54:S018	R54 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R54:S019	R54 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R54:S020	R54 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R54:S021	R54 LAN Comms	EM	EN	9999	EM9999	EN9999
R54:S022	R54 Unibus	EM	EN	9999	EM9999	EN9999
R54:S023	R54 Spare2	UA	UR	9999	UA9999	UR9999
R55:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R55:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R55:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R55:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R55:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R55:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R55:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R55:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R55:S001	R55 Door1 Fault	IA	IR	9999	IA9999	IR9999
R55:S002	R55 Door2 Fault	IA	IR	9999	IA9999	IR9999
R55:S003	R55 Door1 Forced	DF	DR	9999	DF9999	DR9999
R55:S004	R55 Door2 Forced	DF	DR	9999	DF9999	DR9999
R55:S005	R55 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R55:S006	R55 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R55:S007	R55 Cab Tamper	TA	TR	9999	TA9999	TR9999
R55:S008	R55 AC fail	AT	AR	9999	AT9999	AR9999
R55:S009	R55 Low Batt	YT	YR	9999	YT9999	YR9999
R55:S010	R55 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R55:S011	R55 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R55:S012	R55 Low Volts	YP	YQ	9999	YP9999	YQ9999
R55:S013	R55 PS Fail	YP	YQ	9999	YP9999	YQ9999
R55:S014	R55 Batt Test	IA	IR	9999	IA9999	IR9999
R55:S015	R55 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R55:S016	R55 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R55:S017	R55 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R55:S018	R55 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R55:S019	R55 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R55:S020	R55 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R55:S021	R55 LAN Comms	EM	EN	9999	EM9999	EN9999
R55:S022	R55 Unibus	EM	EN	9999	EM9999	EN9999
R55:S023	R55 Spare2	UA	UR	9999	UA9999	UR9999
R56:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R56:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R56:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R56:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R56:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R56:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R56:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R56:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R56:S001	R56 Door1 Fault	IA	IR	9999	IA9999	IR9999
R56:S002	R56 Door2 Fault	IA	IR	9999	IA9999	IR9999
R56:S003	R56 Door1 Forced	DF	DR	9999	DF9999	DR9999
R56:S004	R56 Door2 Forced	DF	DR	9999	DF9999	DR9999
R56:S005	R56 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R56:S006	R56 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R56:S007	R56 Cab Tamper	TA	TR	9999	TA9999	TR9999
R56:S008	R56 AC fail	AT	AR	9999	AT9999	AR9999
R56:S009	R56 Low Batt	YT	YR	9999	YT9999	YR9999
R56:S010	R56 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R56:S011	R56 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R56:S012	R56 Low Volts	YP	YQ	9999	YP9999	YQ9999
R56:S013	R56 PS Fail	YP	YQ	9999	YP9999	YQ9999
R56:S014	R56 Batt Test	IA	IR	9999	IA9999	IR9999
R56:S015	R56 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R56:S016	R56 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R56:S017	R56 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R56:S018	R56 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R56:S019	R56 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R56:S020	R56 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R56:S021	R56 LAN Comms	EM	EN	9999	EM9999	EN9999
R56:S022	R56 Unibus	EM	EN	9999	EM9999	EN9999
R56:S023	R56 Spare2	UA	UR	9999	UA9999	UR9999
R57:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R57:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R57:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R57:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R57:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R57:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R57:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R57:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R57:S001	R57 Door1 Fault	IA	IR	9999	IA9999	IR9999
R57:S002	R57 Door2 Fault	IA	IR	9999	IA9999	IR9999
R57:S003	R57 Door1 Forced	DF	DR	9999	DF9999	DR9999
R57:S004	R57 Door2 Forced	DF	DR	9999	DF9999	DR9999
R57:S005	R57 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R57:S006	R57 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R57:S007	R57 Cab Tamper	TA	TR	9999	TA9999	TR9999
R57:S008	R57 AC fail	AT	AR	9999	AT9999	AR9999
R57:S009	R57 Low Batt	YT	YR	9999	YT9999	YR9999
R57:S010	R57 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R57:S011	R57 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R57:S012	R57 Low Volts	YP	YQ	9999	YP9999	YQ9999
R57:S013	R57 PS Fail	YP	YQ	9999	YP9999	YQ9999
R57:S014	R57 Batt Test	IA	IR	9999	IA9999	IR9999
R57:S015	R57 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R57:S016	R57 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R57:S017	R57 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R57:S018	R57 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R57:S019	R57 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R57:S020	R57 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R57:S021	R57 LAN Comms	EM	EN	9999	EM9999	EN9999
R57:S022	R57 Unibus	EM	EN	9999	EM9999	EN9999
R57:S023	R57 Spare2	UA	UR	9999	UA9999	UR9999
R58:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R58:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R58:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R58:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R58:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R58:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R58:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R58:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R58:S001	R58 Door1 Fault	IA	IR	9999	IA9999	IR9999
R58:S002	R58 Door2 Fault	IA	IR	9999	IA9999	IR9999
R58:S003	R58 Door1 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

R58:S004	R58 Door2 Forced	DF	DR	9999	DF9999	DR9999
R58:S005	R58 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R58:S006	R58 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R58:S007	R58 Cab Tamper	TA	TR	9999	TA9999	TR9999
R58:S008	R58 AC fail	AT	AR	9999	AT9999	AR9999
R58:S009	R58 Low Batt	YT	YR	9999	YT9999	YR9999
R58:S010	R58 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R58:S011	R58 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R58:S012	R58 Low Volts	YP	YQ	9999	YP9999	YQ9999
R58:S013	R58 PS Fail	YP	YQ	9999	YP9999	YQ9999
R58:S014	R58 Batt Test	IA	IR	9999	IA9999	IR9999
R58:S015	R58 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R58:S016	R58 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R58:S017	R58 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R58:S018	R58 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R58:S019	R58 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R58:S020	R58 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R58:S021	R58 LAN Comms	EM	EN	9999	EM9999	EN9999
R58:S022	R58 Unibus	EM	EN	9999	EM9999	EN9999
R58:S023	R58 Spare2	UA	UR	9999	UA9999	UR9999
R59:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R59:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R59:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R59:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R59:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R59:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R59:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R59:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R59:S001	R59 Door1 Fault	IA	IR	9999	IA9999	IR9999
R59:S002	R59 Door2 Fault	IA	IR	9999	IA9999	IR9999
R59:S003	R59 Door1 Forced	DF	DR	9999	DF9999	DR9999
R59:S004	R59 Door2 Forced	DF	DR	9999	DF9999	DR9999
R59:S005	R59 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R59:S006	R59 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R59:S007	R59 Cab Tamper	TA	TR	9999	TA9999	TR9999
R59:S008	R59 AC fail	AT	AR	9999	AT9999	AR9999
R59:S009	R59 Low Batt	YT	YR	9999	YT9999	YR9999
R59:S010	R59 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R59:S011	R59 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R59:S012	R59 Low Volts	YP	YQ	9999	YP9999	YQ9999
R59:S013	R59 PS Fail	YP	YQ	9999	YP9999	YQ9999
R59:S014	R59 Batt Test	IA	IR	9999	IA9999	IR9999
R59:S015	R59 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R59:S016	R59 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R59:S017	R59 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R59:S018	R59 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R59:S019	R59 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R59:S020	R59 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R59:S021	R59 LAN Comms	EM	EN	9999	EM9999	EN9999
R59:S022	R59 Unibus	EM	EN	9999	EM9999	EN9999
R59:S023	R59 Spare2	UA	UR	9999	UA9999	UR9999
R60:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R60:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R60:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R60:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R60:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R60:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R60:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R60:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R60:S001	R60 Door1 Fault	IA	IR	9999	IA9999	IR9999
R60:S002	R60 Door2 Fault	IA	IR	9999	IA9999	IR9999
R60:S003	R60 Door1 Forced	DF	DR	9999	DF9999	DR9999
R60:S004	R60 Door2 Forced	DF	DR	9999	DF9999	DR9999
R60:S005	R60 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R60:S006	R60 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R60:S007	R60 Cab Tamper	TA	TR	9999	TA9999	TR9999
R60:S008	R60 AC fail	AT	AR	9999	AT9999	AR9999
R60:S009	R60 Low Batt	YT	YR	9999	YT9999	YR9999
R60:S010	R60 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R60:S011	R60 DET Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

R60:S012	R60 Low Volts	YP	YQ	9999	YP9999	YQ9999
R60:S013	R60 PS Fail	YP	YQ	9999	YP9999	YQ9999
R60:S014	R60 Batt Test	IA	IR	9999	IA9999	IR9999
R60:S015	R60 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R60:S016	R60 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R60:S017	R60 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R60:S018	R60 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R60:S019	R60 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R60:S020	R60 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R60:S021	R60 LAN Comms	EM	EN	9999	EM9999	EN9999
R60:S022	R60 Unibus	EM	EN	9999	EM9999	EN9999
R60:S023	R60 Spare2	UA	UR	9999	UA9999	UR9999
R61:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R61:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R61:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R61:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R61:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R61:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R61:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R61:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R61:S001	R61 Door1 Fault	IA	IR	9999	IA9999	IR9999
R61:S002	R61 Door2 Fault	IA	IR	9999	IA9999	IR9999
R61:S003	R61 Door1 Forced	DF	DR	9999	DF9999	DR9999
R61:S004	R61 Door2 Forced	DF	DR	9999	DF9999	DR9999
R61:S005	R61 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R61:S006	R61 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R61:S007	R61 Cab Tamper	TA	TR	9999	TA9999	TR9999
R61:S008	R61 AC fail	AT	AR	9999	AT9999	AR9999
R61:S009	R61 Low Batt	YT	YR	9999	YT9999	YR9999
R61:S010	R61 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R61:S011	R61 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R61:S012	R61 Low Volts	YP	YQ	9999	YP9999	YQ9999
R61:S013	R61 PS Fail	YP	YQ	9999	YP9999	YQ9999
R61:S014	R61 Batt Test	IA	IR	9999	IA9999	IR9999
R61:S015	R61 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R61:S016	R61 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R61:S017	R61 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R61:S018	R61 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R61:S019	R61 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R61:S020	R61 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R61:S021	R61 LAN Comms	EM	EN	9999	EM9999	EN9999
R61:S022	R61 Unibus	EM	EN	9999	EM9999	EN9999
R61:S023	R61 Spare2	UA	UR	9999	UA9999	UR9999
R62:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R62:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R62:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R62:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R62:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R62:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R62:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R62:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R62:S001	R62 Door1 Fault	IA	IR	9999	IA9999	IR9999
R62:S002	R62 Door2 Fault	IA	IR	9999	IA9999	IR9999
R62:S003	R62 Door1 Forced	DF	DR	9999	DF9999	DR9999
R62:S004	R62 Door2 Forced	DF	DR	9999	DF9999	DR9999
R62:S005	R62 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R62:S006	R62 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R62:S007	R62 Cab Tamper	TA	TR	9999	TA9999	TR9999
R62:S008	R62 AC fail	AT	AR	9999	AT9999	AR9999
R62:S009	R62 Low Batt	YT	YR	9999	YT9999	YR9999
R62:S010	R62 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R62:S011	R62 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R62:S012	R62 Low Volts	YP	YQ	9999	YP9999	YQ9999
R62:S013	R62 PS Fail	YP	YQ	9999	YP9999	YQ9999
R62:S014	R62 Batt Test	IA	IR	9999	IA9999	IR9999
R62:S015	R62 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R62:S016	R62 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R62:S017	R62 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R62:S018	R62 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R62:S019	R62 Rdr1 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

R62:S020	R62 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R62:S021	R62 LAN Comms	EM	EN	9999	EM9999	EN9999
R62:S022	R62 Unibus	EM	EN	9999	EM9999	EN9999
R62:S023	R62 Spare2	UA	UR	9999	UA9999	UR9999
R63:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R63:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R63:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R63:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R63:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R63:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R63:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R63:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R63:S001	R63 Door1 Fault	IA	IR	9999	IA9999	IR9999
R63:S002	R63 Door2 Fault	IA	IR	9999	IA9999	IR9999
R63:S003	R63 Door1 Forced	DF	DR	9999	DF9999	DR9999
R63:S004	R63 Door2 Forced	DF	DR	9999	DF9999	DR9999
R63:S005	R63 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R63:S006	R63 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R63:S007	R63 Cab Tamper	TA	TR	9999	TA9999	TR9999
R63:S008	R63 AC fail	AT	AR	9999	AT9999	AR9999
R63:S009	R63 Low Batt	YT	YR	9999	YT9999	YR9999
R63:S010	R63 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R63:S011	R63 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R63:S012	R63 Low Volts	YP	YQ	9999	YP9999	YQ9999
R63:S013	R63 PS Fail	YP	YQ	9999	YP9999	YQ9999
R63:S014	R63 Batt Test	IA	IR	9999	IA9999	IR9999
R63:S015	R63 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R63:S016	R63 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R63:S017	R63 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R63:S018	R63 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R63:S019	R63 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R63:S020	R63 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R63:S021	R63 LAN Comms	EM	EN	9999	EM9999	EN9999
R63:S022	R63 Unibus	EM	EN	9999	EM9999	EN9999
R63:S023	R63 Spare2	UA	UR	9999	UA9999	UR9999
R64:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R64:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R64:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R64:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R64:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R64:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R64:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R64:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R64:S001	R64 Door1 Fault	IA	IR	9999	IA9999	IR9999
R64:S002	R64 Door2 Fault	IA	IR	9999	IA9999	IR9999
R64:S003	R64 Door1 Forced	DF	DR	9999	DF9999	DR9999
R64:S004	R64 Door2 Forced	DF	DR	9999	DF9999	DR9999
R64:S005	R64 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R64:S006	R64 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R64:S007	R64 Cab Tamper	TA	TR	9999	TA9999	TR9999
R64:S008	R64 AC fail	AT	AR	9999	AT9999	AR9999
R64:S009	R64 Low Batt	YT	YR	9999	YT9999	YR9999
R64:S010	R64 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R64:S011	R64 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R64:S012	R64 Low Volts	YP	YQ	9999	YP9999	YQ9999
R64:S013	R64 PS Fail	YP	YQ	9999	YP9999	YQ9999
R64:S014	R64 Batt Test	IA	IR	9999	IA9999	IR9999
R64:S015	R64 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R64:S016	R64 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R64:S017	R64 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R64:S018	R64 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R64:S019	R64 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R64:S020	R64 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R64:S021	R64 LAN Comms	EM	EN	9999	EM9999	EN9999
R64:S022	R64 Unibus	EM	EN	9999	EM9999	EN9999
R64:S023	R64 Spare2	UA	UR	9999	UA9999	UR9999
R65:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R65:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R65:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R65:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R65:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R65:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R65:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R65:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R65:S001	R65 Door1 Fault	IA	IR	9999	IA9999	IR9999
R65:S002	R65 Door2 Fault	IA	IR	9999	IA9999	IR9999
R65:S003	R65 Door1 Forced	DF	DR	9999	DF9999	DR9999
R65:S004	R65 Door2 Forced	DF	DR	9999	DF9999	DR9999
R65:S005	R65 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R65:S006	R65 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R65:S007	R65 Cab Tamper	TA	TR	9999	TA9999	TR9999
R65:S008	R65 AC fail	AT	AR	9999	AT9999	AR9999
R65:S009	R65 Low Batt	YT	YR	9999	YT9999	YR9999
R65:S010	R65 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R65:S011	R65 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R65:S012	R65 Low Volts	YP	YQ	9999	YP9999	YQ9999
R65:S013	R65 PS Fail	YP	YQ	9999	YP9999	YQ9999
R65:S014	R65 Batt Test	IA	IR	9999	IA9999	IR9999
R65:S015	R65 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R65:S016	R65 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R65:S017	R65 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R65:S018	R65 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R65:S019	R65 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R65:S020	R65 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R65:S021	R65 LAN Comms	EM	EN	9999	EM9999	EN9999
R65:S022	R65 Unibus	EM	EN	9999	EM9999	EN9999
R65:S023	R65 Spare2	UA	UR	9999	UA9999	UR9999
R66:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R66:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R66:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R66:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R66:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R66:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R66:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R66:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R66:S001	R66 Door1 Fault	IA	IR	9999	IA9999	IR9999
R66:S002	R66 Door2 Fault	IA	IR	9999	IA9999	IR9999
R66:S003	R66 Door1 Forced	DF	DR	9999	DF9999	DR9999
R66:S004	R66 Door2 Forced	DF	DR	9999	DF9999	DR9999
R66:S005	R66 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R66:S006	R66 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R66:S007	R66 Cab Tamper	TA	TR	9999	TA9999	TR9999
R66:S008	R66 AC fail	AT	AR	9999	AT9999	AR9999
R66:S009	R66 Low Batt	YT	YR	9999	YT9999	YR9999
R66:S010	R66 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R66:S011	R66 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R66:S012	R66 Low Volts	YP	YQ	9999	YP9999	YQ9999
R66:S013	R66 PS Fail	YP	YQ	9999	YP9999	YQ9999
R66:S014	R66 Batt Test	IA	IR	9999	IA9999	IR9999
R66:S015	R66 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R66:S016	R66 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R66:S017	R66 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R66:S018	R66 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R66:S019	R66 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R66:S020	R66 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R66:S021	R66 LAN Comms	EM	EN	9999	EM9999	EN9999
R66:S022	R66 Unibus	EM	EN	9999	EM9999	EN9999
R66:S023	R66 Spare2	UA	UR	9999	UA9999	UR9999
R67:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R67:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R67:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R67:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R67:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R67:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R67:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R67:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R67:S001	R67 Door1 Fault	IA	IR	9999	IA9999	IR9999
R67:S002	R67 Door2 Fault	IA	IR	9999	IA9999	IR9999
R67:S003	R67 Door1 Forced	DF	DR	9999	DF9999	DR9999
R67:S004	R67 Door2 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

R67:S005	R67 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R67:S006	R67 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R67:S007	R67 Cab Tamper	TA	TR	9999	TA9999	TR9999
R67:S008	R67 AC fail	AT	AR	9999	AT9999	AR9999
R67:S009	R67 Low Batt	YT	YR	9999	YT9999	YR9999
R67:S010	R67 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R67:S011	R67 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R67:S012	R67 Low Volts	YP	YQ	9999	YP9999	YQ9999
R67:S013	R67 PS Fail	YP	YQ	9999	YP9999	YQ9999
R67:S014	R67 Batt Test	IA	IR	9999	IA9999	IR9999
R67:S015	R67 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R67:S016	R67 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R67:S017	R67 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R67:S018	R67 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R67:S019	R67 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R67:S020	R67 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R67:S021	R67 LAN Comms	EM	EN	9999	EM9999	EN9999
R67:S022	R67 Unibus	EM	EN	9999	EM9999	EN9999
R67:S023	R67 Spare2	UA	UR	9999	UA9999	UR9999
R68:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R68:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R68:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R68:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R68:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R68:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R68:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R68:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R68:S001	R68 Door1 Fault	IA	IR	9999	IA9999	IR9999
R68:S002	R68 Door2 Fault	IA	IR	9999	IA9999	IR9999
R68:S003	R68 Door1 Forced	DF	DR	9999	DF9999	DR9999
R68:S004	R68 Door2 Forced	DF	DR	9999	DF9999	DR9999
R68:S005	R68 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R68:S006	R68 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R68:S007	R68 Cab Tamper	TA	TR	9999	TA9999	TR9999
R68:S008	R68 AC fail	AT	AR	9999	AT9999	AR9999
R68:S009	R68 Low Batt	YT	YR	9999	YT9999	YR9999
R68:S010	R68 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R68:S011	R68 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R68:S012	R68 Low Volts	YP	YQ	9999	YP9999	YQ9999
R68:S013	R68 PS Fail	YP	YQ	9999	YP9999	YQ9999
R68:S014	R68 Batt Test	IA	IR	9999	IA9999	IR9999
R68:S015	R68 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R68:S016	R68 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R68:S017	R68 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R68:S018	R68 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R68:S019	R68 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R68:S020	R68 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R68:S021	R68 LAN Comms	EM	EN	9999	EM9999	EN9999
R68:S022	R68 Unibus	EM	EN	9999	EM9999	EN9999
R68:S023	R68 Spare2	UA	UR	9999	UA9999	UR9999
R69:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R69:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R69:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R69:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R69:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R69:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R69:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R69:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R69:S001	R69 Door1 Fault	IA	IR	9999	IA9999	IR9999
R69:S002	R69 Door2 Fault	IA	IR	9999	IA9999	IR9999
R69:S003	R69 Door1 Forced	DF	DR	9999	DF9999	DR9999
R69:S004	R69 Door2 Forced	DF	DR	9999	DF9999	DR9999
R69:S005	R69 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R69:S006	R69 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R69:S007	R69 Cab Tamper	TA	TR	9999	TA9999	TR9999
R69:S008	R69 AC fail	AT	AR	9999	AT9999	AR9999
R69:S009	R69 Low Batt	YT	YR	9999	YT9999	YR9999
R69:S010	R69 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R69:S011	R69 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R69:S012	R69 Low Volts	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

R69:S013	R69 PS Fail	YP	YQ	9999	YP9999	YQ9999
R69:S014	R69 Batt Test	IA	IR	9999	IA9999	IR9999
R69:S015	R69 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R69:S016	R69 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R69:S017	R69 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R69:S018	R69 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R69:S019	R69 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R69:S020	R69 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R69:S021	R69 LAN Comms	EM	EN	9999	EM9999	EN9999
R69:S022	R69 Unibus	EM	EN	9999	EM9999	EN9999
R69:S023	R69 Spare2	UA	UR	9999	UA9999	UR9999
R70:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R70:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R70:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R70:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R70:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R70:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R70:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R70:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R70:S001	R70 Door1 Fault	IA	IR	9999	IA9999	IR9999
R70:S002	R70 Door2 Fault	IA	IR	9999	IA9999	IR9999
R70:S003	R70 Door1 Forced	DF	DR	9999	DF9999	DR9999
R70:S004	R70 Door2 Forced	DF	DR	9999	DF9999	DR9999
R70:S005	R70 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R70:S006	R70 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R70:S007	R70 Cab Tamper	TA	TR	9999	TA9999	TR9999
R70:S008	R70 AC fail	AT	AR	9999	AT9999	AR9999
R70:S009	R70 Low Batt	YT	YR	9999	YT9999	YR9999
R70:S010	R70 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R70:S011	R70 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R70:S012	R70 Low Volts	YP	YQ	9999	YP9999	YQ9999
R70:S013	R70 PS Fail	YP	YQ	9999	YP9999	YQ9999
R70:S014	R70 Batt Test	IA	IR	9999	IA9999	IR9999
R70:S015	R70 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R70:S016	R70 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R70:S017	R70 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R70:S018	R70 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R70:S019	R70 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R70:S020	R70 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R70:S021	R70 LAN Comms	EM	EN	9999	EM9999	EN9999
R70:S022	R70 Unibus	EM	EN	9999	EM9999	EN9999
R70:S023	R70 Spare2	UA	UR	9999	UA9999	UR9999
R71:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R71:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R71:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R71:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R71:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R71:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R71:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R71:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R71:S001	R71 Door1 Fault	IA	IR	9999	IA9999	IR9999
R71:S002	R71 Door2 Fault	IA	IR	9999	IA9999	IR9999
R71:S003	R71 Door1 Forced	DF	DR	9999	DF9999	DR9999
R71:S004	R71 Door2 Forced	DF	DR	9999	DF9999	DR9999
R71:S005	R71 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R71:S006	R71 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R71:S007	R71 Cab Tamper	TA	TR	9999	TA9999	TR9999
R71:S008	R71 AC fail	AT	AR	9999	AT9999	AR9999
R71:S009	R71 Low Batt	YT	YR	9999	YT9999	YR9999
R71:S010	R71 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R71:S011	R71 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R71:S012	R71 Low Volts	YP	YQ	9999	YP9999	YQ9999
R71:S013	R71 PS Fail	YP	YQ	9999	YP9999	YQ9999
R71:S014	R71 Batt Test	IA	IR	9999	IA9999	IR9999
R71:S015	R71 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R71:S016	R71 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R71:S017	R71 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R71:S018	R71 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R71:S019	R71 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R71:S020	R71 Rdr2 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

R71:S021	R71 LAN Comms	EM	EN	9999	EM9999	EN9999
R71:S022	R71 Unibus	EM	EN	9999	EM9999	EN9999
R71:S023	R71 Spare2	UA	UR	9999	UA9999	UR9999
R72:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R72:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R72:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R72:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R72:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R72:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R72:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R72:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R72:S001	R72 Door1 Fault	IA	IR	9999	IA9999	IR9999
R72:S002	R72 Door2 Fault	IA	IR	9999	IA9999	IR9999
R72:S003	R72 Door1 Forced	DF	DR	9999	DF9999	DR9999
R72:S004	R72 Door2 Forced	DF	DR	9999	DF9999	DR9999
R72:S005	R72 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R72:S006	R72 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R72:S007	R72 Cab Tamper	TA	TR	9999	TA9999	TR9999
R72:S008	R72 AC fail	AT	AR	9999	AT9999	AR9999
R72:S009	R72 Low Batt	YT	YR	9999	YT9999	YR9999
R72:S010	R72 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R72:S011	R72 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R72:S012	R72 Low Volts	YP	YQ	9999	YP9999	YQ9999
R72:S013	R72 PS Fail	YP	YQ	9999	YP9999	YQ9999
R72:S014	R72 Batt Test	IA	IR	9999	IA9999	IR9999
R72:S015	R72 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R72:S016	R72 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R72:S017	R72 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R72:S018	R72 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R72:S019	R72 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R72:S020	R72 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R72:S021	R72 LAN Comms	EM	EN	9999	EM9999	EN9999
R72:S022	R72 Unibus	EM	EN	9999	EM9999	EN9999
R72:S023	R72 Spare2	UA	UR	9999	UA9999	UR9999
R73:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R73:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R73:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R73:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R73:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R73:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R73:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R73:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R73:S001	R73 Door1 Fault	IA	IR	9999	IA9999	IR9999
R73:S002	R73 Door2 Fault	IA	IR	9999	IA9999	IR9999
R73:S003	R73 Door1 Forced	DF	DR	9999	DF9999	DR9999
R73:S004	R73 Door2 Forced	DF	DR	9999	DF9999	DR9999
R73:S005	R73 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R73:S006	R73 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R73:S007	R73 Cab Tamper	TA	TR	9999	TA9999	TR9999
R73:S008	R73 AC fail	AT	AR	9999	AT9999	AR9999
R73:S009	R73 Low Batt	YT	YR	9999	YT9999	YR9999
R73:S010	R73 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R73:S011	R73 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R73:S012	R73 Low Volts	YP	YQ	9999	YP9999	YQ9999
R73:S013	R73 PS Fail	YP	YQ	9999	YP9999	YQ9999
R73:S014	R73 Batt Test	IA	IR	9999	IA9999	IR9999
R73:S015	R73 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R73:S016	R73 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R73:S017	R73 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R73:S018	R73 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R73:S019	R73 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R73:S020	R73 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R73:S021	R73 LAN Comms	EM	EN	9999	EM9999	EN9999
R73:S022	R73 Unibus	EM	EN	9999	EM9999	EN9999
R73:S023	R73 Spare2	UA	UR	9999	UA9999	UR9999
R74:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R74:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R74:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R74:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R74:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R74:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R74:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R74:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R74:S001	R74 Door1 Fault	IA	IR	9999	IA9999	IR9999
R74:S002	R74 Door2 Fault	IA	IR	9999	IA9999	IR9999
R74:S003	R74 Door1 Forced	DF	DR	9999	DF9999	DR9999
R74:S004	R74 Door2 Forced	DF	DR	9999	DF9999	DR9999
R74:S005	R74 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R74:S006	R74 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R74:S007	R74 Cab Tamper	TA	TR	9999	TA9999	TR9999
R74:S008	R74 AC fail	AT	AR	9999	AT9999	AR9999
R74:S009	R74 Low Batt	YT	YR	9999	YT9999	YR9999
R74:S010	R74 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R74:S011	R74 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R74:S012	R74 Low Volts	YP	YQ	9999	YP9999	YQ9999
R74:S013	R74 PS Fail	YP	YQ	9999	YP9999	YQ9999
R74:S014	R74 Batt Test	IA	IR	9999	IA9999	IR9999
R74:S015	R74 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R74:S016	R74 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R74:S017	R74 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R74:S018	R74 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R74:S019	R74 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R74:S020	R74 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R74:S021	R74 LAN Comms	EM	EN	9999	EM9999	EN9999
R74:S022	R74 Unibus	EM	EN	9999	EM9999	EN9999
R74:S023	R74 Spare2	UA	UR	9999	UA9999	UR9999
R75:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R75:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R75:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R75:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R75:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R75:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R75:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R75:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R75:S001	R75 Door1 Fault	IA	IR	9999	IA9999	IR9999
R75:S002	R75 Door2 Fault	IA	IR	9999	IA9999	IR9999
R75:S003	R75 Door1 Forced	DF	DR	9999	DF9999	DR9999
R75:S004	R75 Door2 Forced	DF	DR	9999	DF9999	DR9999
R75:S005	R75 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R75:S006	R75 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R75:S007	R75 Cab Tamper	TA	TR	9999	TA9999	TR9999
R75:S008	R75 AC fail	AT	AR	9999	AT9999	AR9999
R75:S009	R75 Low Batt	YT	YR	9999	YT9999	YR9999
R75:S010	R75 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R75:S011	R75 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R75:S012	R75 Low Volts	YP	YQ	9999	YP9999	YQ9999
R75:S013	R75 PS Fail	YP	YQ	9999	YP9999	YQ9999
R75:S014	R75 Batt Test	IA	IR	9999	IA9999	IR9999
R75:S015	R75 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R75:S016	R75 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R75:S017	R75 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R75:S018	R75 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R75:S019	R75 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R75:S020	R75 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R75:S021	R75 LAN Comms	EM	EN	9999	EM9999	EN9999
R75:S022	R75 Unibus	EM	EN	9999	EM9999	EN9999
R75:S023	R75 Spare2	UA	UR	9999	UA9999	UR9999
R76:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R76:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R76:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R76:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R76:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R76:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R76:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R76:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R76:S001	R76 Door1 Fault	IA	IR	9999	IA9999	IR9999
R76:S002	R76 Door2 Fault	IA	IR	9999	IA9999	IR9999
R76:S003	R76 Door1 Forced	DF	DR	9999	DF9999	DR9999
R76:S004	R76 Door2 Forced	DF	DR	9999	DF9999	DR9999
R76:S005	R76 Door1 DOTL	DL	DH	9999	DL9999	DH9999

Integriti SIA DECIMAL Map. V21

R76:S006	R76 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R76:S007	R76 Cab Tamper	TA	TR	9999	TA9999	TR9999
R76:S008	R76 AC fail	AT	AR	9999	AT9999	AR9999
R76:S009	R76 Low Batt	YT	YR	9999	YT9999	YR9999
R76:S010	R76 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R76:S011	R76 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R76:S012	R76 Low Volts	YP	YQ	9999	YP9999	YQ9999
R76:S013	R76 PS Fail	YP	YQ	9999	YP9999	YQ9999
R76:S014	R76 Batt Test	IA	IR	9999	IA9999	IR9999
R76:S015	R76 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R76:S016	R76 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R76:S017	R76 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R76:S018	R76 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R76:S019	R76 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R76:S020	R76 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R76:S021	R76 LAN Comms	EM	EN	9999	EM9999	EN9999
R76:S022	R76 Unibus	EM	EN	9999	EM9999	EN9999
R76:S023	R76 Spare2	UA	UR	9999	UA9999	UR9999
R77:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R77:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R77:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R77:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R77:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R77:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R77:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R77:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R77:S001	R77 Door1 Fault	IA	IR	9999	IA9999	IR9999
R77:S002	R77 Door2 Fault	IA	IR	9999	IA9999	IR9999
R77:S003	R77 Door1 Forced	DF	DR	9999	DF9999	DR9999
R77:S004	R77 Door2 Forced	DF	DR	9999	DF9999	DR9999
R77:S005	R77 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R77:S006	R77 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R77:S007	R77 Cab Tamper	TA	TR	9999	TA9999	TR9999
R77:S008	R77 AC fail	AT	AR	9999	AT9999	AR9999
R77:S009	R77 Low Batt	YT	YR	9999	YT9999	YR9999
R77:S010	R77 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R77:S011	R77 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R77:S012	R77 Low Volts	YP	YQ	9999	YP9999	YQ9999
R77:S013	R77 PS Fail	YP	YQ	9999	YP9999	YQ9999
R77:S014	R77 Batt Test	IA	IR	9999	IA9999	IR9999
R77:S015	R77 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R77:S016	R77 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R77:S017	R77 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R77:S018	R77 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R77:S019	R77 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R77:S020	R77 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R77:S021	R77 LAN Comms	EM	EN	9999	EM9999	EN9999
R77:S022	R77 Unibus	EM	EN	9999	EM9999	EN9999
R77:S023	R77 Spare2	UA	UR	9999	UA9999	UR9999
R78:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R78:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R78:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R78:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R78:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R78:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R78:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R78:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R78:S001	R78 Door1 Fault	IA	IR	9999	IA9999	IR9999
R78:S002	R78 Door2 Fault	IA	IR	9999	IA9999	IR9999
R78:S003	R78 Door1 Forced	DF	DR	9999	DF9999	DR9999
R78:S004	R78 Door2 Forced	DF	DR	9999	DF9999	DR9999
R78:S005	R78 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R78:S006	R78 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R78:S007	R78 Cab Tamper	TA	TR	9999	TA9999	TR9999
R78:S008	R78 AC fail	AT	AR	9999	AT9999	AR9999
R78:S009	R78 Low Batt	YT	YR	9999	YT9999	YR9999
R78:S010	R78 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R78:S011	R78 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R78:S012	R78 Low Volts	YP	YQ	9999	YP9999	YQ9999
R78:S013	R78 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

R78:S014	R78 Batt Test	IA	IR	9999	IA9999	IR9999
R78:S015	R78 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R78:S016	R78 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R78:S017	R78 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R78:S018	R78 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R78:S019	R78 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R78:S020	R78 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R78:S021	R78 LAN Comms	EM	EN	9999	EM9999	EN9999
R78:S022	R78 Unibus	EM	EN	9999	EM9999	EN9999
R78:S023	R78 Spare2	UA	UR	9999	UA9999	UR9999
R79:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R79:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R79:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R79:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R79:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R79:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R79:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R79:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R79:S001	R79 Door1 Fault	IA	IR	9999	IA9999	IR9999
R79:S002	R79 Door2 Fault	IA	IR	9999	IA9999	IR9999
R79:S003	R79 Door1 Forced	DF	DR	9999	DF9999	DR9999
R79:S004	R79 Door2 Forced	DF	DR	9999	DF9999	DR9999
R79:S005	R79 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R79:S006	R79 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R79:S007	R79 Cab Tamper	TA	TR	9999	TA9999	TR9999
R79:S008	R79 AC fail	AT	AR	9999	AT9999	AR9999
R79:S009	R79 Low Batt	YT	YR	9999	YT9999	YR9999
R79:S010	R79 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R79:S011	R79 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R79:S012	R79 Low Volts	YP	YQ	9999	YP9999	YQ9999
R79:S013	R79 PS Fail	YP	YQ	9999	YP9999	YQ9999
R79:S014	R79 Batt Test	IA	IR	9999	IA9999	IR9999
R79:S015	R79 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R79:S016	R79 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R79:S017	R79 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R79:S018	R79 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R79:S019	R79 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R79:S020	R79 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R79:S021	R79 LAN Comms	EM	EN	9999	EM9999	EN9999
R79:S022	R79 Unibus	EM	EN	9999	EM9999	EN9999
R79:S023	R79 Spare2	UA	UR	9999	UA9999	UR9999
R80:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R80:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R80:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R80:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R80:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R80:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R80:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R80:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R80:S001	R80 Door1 Fault	IA	IR	9999	IA9999	IR9999
R80:S002	R80 Door2 Fault	IA	IR	9999	IA9999	IR9999
R80:S003	R80 Door1 Forced	DF	DR	9999	DF9999	DR9999
R80:S004	R80 Door2 Forced	DF	DR	9999	DF9999	DR9999
R80:S005	R80 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R80:S006	R80 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R80:S007	R80 Cab Tamper	TA	TR	9999	TA9999	TR9999
R80:S008	R80 AC fail	AT	AR	9999	AT9999	AR9999
R80:S009	R80 Low Batt	YT	YR	9999	YT9999	YR9999
R80:S010	R80 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R80:S011	R80 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R80:S012	R80 Low Volts	YP	YQ	9999	YP9999	YQ9999
R80:S013	R80 PS Fail	YP	YQ	9999	YP9999	YQ9999
R80:S014	R80 Batt Test	IA	IR	9999	IA9999	IR9999
R80:S015	R80 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R80:S016	R80 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R80:S017	R80 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R80:S018	R80 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R80:S019	R80 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R80:S020	R80 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R80:S021	R80 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

R80:S022	R80 Unibus	EM	EN	9999	EM9999	EN9999
R80:S023	R80 Spare2	UA	UR	9999	UA9999	UR9999
R81:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R81:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R81:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R81:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R81:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R81:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R81:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R81:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R81:S001	R81 Door1 Fault	IA	IR	9999	IA9999	IR9999
R81:S002	R81 Door2 Fault	IA	IR	9999	IA9999	IR9999
R81:S003	R81 Door1 Forced	DF	DR	9999	DF9999	DR9999
R81:S004	R81 Door2 Forced	DF	DR	9999	DF9999	DR9999
R81:S005	R81 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R81:S006	R81 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R81:S007	R81 Cab Tamper	TA	TR	9999	TA9999	TR9999
R81:S008	R81 AC fail	AT	AR	9999	AT9999	AR9999
R81:S009	R81 Low Batt	YT	YR	9999	YT9999	YR9999
R81:S010	R81 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R81:S011	R81 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R81:S012	R81 Low Volts	YP	YQ	9999	YP9999	YQ9999
R81:S013	R81 PS Fail	YP	YQ	9999	YP9999	YQ9999
R81:S014	R81 Batt Test	IA	IR	9999	IA9999	IR9999
R81:S015	R81 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R81:S016	R81 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R81:S017	R81 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R81:S018	R81 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R81:S019	R81 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R81:S020	R81 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R81:S021	R81 LAN Comms	EM	EN	9999	EM9999	EN9999
R81:S022	R81 Unibus	EM	EN	9999	EM9999	EN9999
R81:S023	R81 Spare2	UA	UR	9999	UA9999	UR9999
R82:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R82:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R82:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R82:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R82:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R82:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R82:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R82:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R82:S001	R82 Door1 Fault	IA	IR	9999	IA9999	IR9999
R82:S002	R82 Door2 Fault	IA	IR	9999	IA9999	IR9999
R82:S003	R82 Door1 Forced	DF	DR	9999	DF9999	DR9999
R82:S004	R82 Door2 Forced	DF	DR	9999	DF9999	DR9999
R82:S005	R82 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R82:S006	R82 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R82:S007	R82 Cab Tamper	TA	TR	9999	TA9999	TR9999
R82:S008	R82 AC fail	AT	AR	9999	AT9999	AR9999
R82:S009	R82 Low Batt	YT	YR	9999	YT9999	YR9999
R82:S010	R82 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R82:S011	R82 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R82:S012	R82 Low Volts	YP	YQ	9999	YP9999	YQ9999
R82:S013	R82 PS Fail	YP	YQ	9999	YP9999	YQ9999
R82:S014	R82 Batt Test	IA	IR	9999	IA9999	IR9999
R82:S015	R82 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R82:S016	R82 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R82:S017	R82 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R82:S018	R82 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R82:S019	R82 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R82:S020	R82 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R82:S021	R82 LAN Comms	EM	EN	9999	EM9999	EN9999
R82:S022	R82 Unibus	EM	EN	9999	EM9999	EN9999
R82:S023	R82 Spare2	UA	UR	9999	UA9999	UR9999
R83:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R83:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R83:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R83:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R83:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R83:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R83:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R83:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R83:S001	R83 Door1 Fault	IA	IR	9999	IA9999	IR9999
R83:S002	R83 Door2 Fault	IA	IR	9999	IA9999	IR9999
R83:S003	R83 Door1 Forced	DF	DR	9999	DF9999	DR9999
R83:S004	R83 Door2 Forced	DF	DR	9999	DF9999	DR9999
R83:S005	R83 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R83:S006	R83 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R83:S007	R83 Cab Tamper	TA	TR	9999	TA9999	TR9999
R83:S008	R83 AC fail	AT	AR	9999	AT9999	AR9999
R83:S009	R83 Low Batt	YT	YR	9999	YT9999	YR9999
R83:S010	R83 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R83:S011	R83 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R83:S012	R83 Low Volts	YP	YQ	9999	YP9999	YQ9999
R83:S013	R83 PS Fail	YP	YQ	9999	YP9999	YQ9999
R83:S014	R83 Batt Test	IA	IR	9999	IA9999	IR9999
R83:S015	R83 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R83:S016	R83 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R83:S017	R83 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R83:S018	R83 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R83:S019	R83 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R83:S020	R83 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R83:S021	R83 LAN Comms	EM	EN	9999	EM9999	EN9999
R83:S022	R83 Unibus	EM	EN	9999	EM9999	EN9999
R83:S023	R83 Spare2	UA	UR	9999	UA9999	UR9999
R84:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R84:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R84:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R84:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R84:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R84:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R84:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R84:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R84:S001	R84 Door1 Fault	IA	IR	9999	IA9999	IR9999
R84:S002	R84 Door2 Fault	IA	IR	9999	IA9999	IR9999
R84:S003	R84 Door1 Forced	DF	DR	9999	DF9999	DR9999
R84:S004	R84 Door2 Forced	DF	DR	9999	DF9999	DR9999
R84:S005	R84 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R84:S006	R84 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R84:S007	R84 Cab Tamper	TA	TR	9999	TA9999	TR9999
R84:S008	R84 AC fail	AT	AR	9999	AT9999	AR9999
R84:S009	R84 Low Batt	YT	YR	9999	YT9999	YR9999
R84:S010	R84 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R84:S011	R84 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R84:S012	R84 Low Volts	YP	YQ	9999	YP9999	YQ9999
R84:S013	R84 PS Fail	YP	YQ	9999	YP9999	YQ9999
R84:S014	R84 Batt Test	IA	IR	9999	IA9999	IR9999
R84:S015	R84 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R84:S016	R84 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R84:S017	R84 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R84:S018	R84 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R84:S019	R84 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R84:S020	R84 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R84:S021	R84 LAN Comms	EM	EN	9999	EM9999	EN9999
R84:S022	R84 Unibus	EM	EN	9999	EM9999	EN9999
R84:S023	R84 Spare2	UA	UR	9999	UA9999	UR9999
R85:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R85:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R85:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R85:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R85:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R85:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R85:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R85:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R85:S001	R85 Door1 Fault	IA	IR	9999	IA9999	IR9999
R85:S002	R85 Door2 Fault	IA	IR	9999	IA9999	IR9999
R85:S003	R85 Door1 Forced	DF	DR	9999	DF9999	DR9999
R85:S004	R85 Door2 Forced	DF	DR	9999	DF9999	DR9999
R85:S005	R85 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R85:S006	R85 Door2 DOTL	DL	DH	9999	DL9999	DH9999

Integriti SIA DECIMAL Map. V21

R85:S007	R85 Cab Tamper	TA	TR	9999	TA9999	TR9999
R85:S008	R85 AC fail	AT	AR	9999	AT9999	AR9999
R85:S009	R85 Low Batt	YT	YR	9999	YT9999	YR9999
R85:S010	R85 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R85:S011	R85 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R85:S012	R85 Low Volts	YP	YQ	9999	YP9999	YQ9999
R85:S013	R85 PS Fail	YP	YQ	9999	YP9999	YQ9999
R85:S014	R85 Batt Test	IA	IR	9999	IA9999	IR9999
R85:S015	R85 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R85:S016	R85 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R85:S017	R85 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R85:S018	R85 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R85:S019	R85 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R85:S020	R85 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R85:S021	R85 LAN Comms	EM	EN	9999	EM9999	EN9999
R85:S022	R85 Unibus	EM	EN	9999	EM9999	EN9999
R85:S023	R85 Spare2	UA	UR	9999	UA9999	UR9999
R86:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R86:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R86:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R86:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R86:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R86:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R86:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R86:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R86:S001	R86 Door1 Fault	IA	IR	9999	IA9999	IR9999
R86:S002	R86 Door2 Fault	IA	IR	9999	IA9999	IR9999
R86:S003	R86 Door1 Forced	DF	DR	9999	DF9999	DR9999
R86:S004	R86 Door2 Forced	DF	DR	9999	DF9999	DR9999
R86:S005	R86 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R86:S006	R86 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R86:S007	R86 Cab Tamper	TA	TR	9999	TA9999	TR9999
R86:S008	R86 AC fail	AT	AR	9999	AT9999	AR9999
R86:S009	R86 Low Batt	YT	YR	9999	YT9999	YR9999
R86:S010	R86 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R86:S011	R86 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R86:S012	R86 Low Volts	YP	YQ	9999	YP9999	YQ9999
R86:S013	R86 PS Fail	YP	YQ	9999	YP9999	YQ9999
R86:S014	R86 Batt Test	IA	IR	9999	IA9999	IR9999
R86:S015	R86 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R86:S016	R86 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R86:S017	R86 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R86:S018	R86 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R86:S019	R86 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R86:S020	R86 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R86:S021	R86 LAN Comms	EM	EN	9999	EM9999	EN9999
R86:S022	R86 Unibus	EM	EN	9999	EM9999	EN9999
R86:S023	R86 Spare2	UA	UR	9999	UA9999	UR9999
R87:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R87:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R87:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R87:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R87:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R87:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R87:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R87:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R87:S001	R87 Door1 Fault	IA	IR	9999	IA9999	IR9999
R87:S002	R87 Door2 Fault	IA	IR	9999	IA9999	IR9999
R87:S003	R87 Door1 Forced	DF	DR	9999	DF9999	DR9999
R87:S004	R87 Door2 Forced	DF	DR	9999	DF9999	DR9999
R87:S005	R87 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R87:S006	R87 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R87:S007	R87 Cab Tamper	TA	TR	9999	TA9999	TR9999
R87:S008	R87 AC fail	AT	AR	9999	AT9999	AR9999
R87:S009	R87 Low Batt	YT	YR	9999	YT9999	YR9999
R87:S010	R87 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R87:S011	R87 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R87:S012	R87 Low Volts	YP	YQ	9999	YP9999	YQ9999
R87:S013	R87 PS Fail	YP	YQ	9999	YP9999	YQ9999
R87:S014	R87 Batt Test	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

R87:S015	R87 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R87:S016	R87 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R87:S017	R87 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R87:S018	R87 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R87:S019	R87 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R87:S020	R87 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R87:S021	R87 LAN Comms	EM	EN	9999	EM9999	EN9999
R87:S022	R87 Unibus	EM	EN	9999	EM9999	EN9999
R87:S023	R87 Spare2	UA	UR	9999	UA9999	UR9999
R88:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R88:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R88:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R88:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R88:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R88:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R88:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R88:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R88:S001	R88 Door1 Fault	IA	IR	9999	IA9999	IR9999
R88:S002	R88 Door2 Fault	IA	IR	9999	IA9999	IR9999
R88:S003	R88 Door1 Forced	DF	DR	9999	DF9999	DR9999
R88:S004	R88 Door2 Forced	DF	DR	9999	DF9999	DR9999
R88:S005	R88 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R88:S006	R88 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R88:S007	R88 Cab Tamper	TA	TR	9999	TA9999	TR9999
R88:S008	R88 AC fail	AT	AR	9999	AT9999	AR9999
R88:S009	R88 Low Batt	YT	YR	9999	YT9999	YR9999
R88:S010	R88 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R88:S011	R88 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R88:S012	R88 Low Volts	YP	YQ	9999	YP9999	YQ9999
R88:S013	R88 PS Fail	YP	YQ	9999	YP9999	YQ9999
R88:S014	R88 Batt Test	IA	IR	9999	IA9999	IR9999
R88:S015	R88 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R88:S016	R88 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R88:S017	R88 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R88:S018	R88 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R88:S019	R88 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R88:S020	R88 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R88:S021	R88 LAN Comms	EM	EN	9999	EM9999	EN9999
R88:S022	R88 Unibus	EM	EN	9999	EM9999	EN9999
R88:S023	R88 Spare2	UA	UR	9999	UA9999	UR9999
R89:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R89:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R89:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R89:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R89:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R89:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R89:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R89:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R89:S001	R89 Door1 Fault	IA	IR	9999	IA9999	IR9999
R89:S002	R89 Door2 Fault	IA	IR	9999	IA9999	IR9999
R89:S003	R89 Door1 Forced	DF	DR	9999	DF9999	DR9999
R89:S004	R89 Door2 Forced	DF	DR	9999	DF9999	DR9999
R89:S005	R89 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R89:S006	R89 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R89:S007	R89 Cab Tamper	TA	TR	9999	TA9999	TR9999
R89:S008	R89 AC fail	AT	AR	9999	AT9999	AR9999
R89:S009	R89 Low Batt	YT	YR	9999	YT9999	YR9999
R89:S010	R89 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R89:S011	R89 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R89:S012	R89 Low Volts	YP	YQ	9999	YP9999	YQ9999
R89:S013	R89 PS Fail	YP	YQ	9999	YP9999	YQ9999
R89:S014	R89 Batt Test	IA	IR	9999	IA9999	IR9999
R89:S015	R89 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R89:S016	R89 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R89:S017	R89 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R89:S018	R89 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R89:S019	R89 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R89:S020	R89 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R89:S021	R89 LAN Comms	EM	EN	9999	EM9999	EN9999
R89:S022	R89 Unibus	EM	EN	9999	EM9999	EN9999

R89:S023	R89 Spare2	UA	UR	9999	UA9999	UR9999
R90:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R90:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R90:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R90:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R90:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R90:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R90:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R90:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R90:S001	R90 Door1 Fault	IA	IR	9999	IA9999	IR9999
R90:S002	R90 Door2 Fault	IA	IR	9999	IA9999	IR9999
R90:S003	R90 Door1 Forced	DF	DR	9999	DF9999	DR9999
R90:S004	R90 Door2 Forced	DF	DR	9999	DF9999	DR9999
R90:S005	R90 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R90:S006	R90 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R90:S007	R90 Cab Tamper	TA	TR	9999	TA9999	TR9999
R90:S008	R90 AC fail	AT	AR	9999	AT9999	AR9999
R90:S009	R90 Low Batt	YT	YR	9999	YT9999	YR9999
R90:S010	R90 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R90:S011	R90 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R90:S012	R90 Low Volts	YP	YQ	9999	YP9999	YQ9999
R90:S013	R90 PS Fail	YP	YQ	9999	YP9999	YQ9999
R90:S014	R90 Batt Test	IA	IR	9999	IA9999	IR9999
R90:S015	R90 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R90:S016	R90 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R90:S017	R90 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R90:S018	R90 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R90:S019	R90 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R90:S020	R90 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R90:S021	R90 LAN Comms	EM	EN	9999	EM9999	EN9999
R90:S022	R90 Unibus	EM	EN	9999	EM9999	EN9999
R90:S023	R90 Spare2	UA	UR	9999	UA9999	UR9999
R91:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R91:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R91:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R91:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R91:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R91:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R91:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R91:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R91:S001	R91 Door1 Fault	IA	IR	9999	IA9999	IR9999
R91:S002	R91 Door2 Fault	IA	IR	9999	IA9999	IR9999
R91:S003	R91 Door1 Forced	DF	DR	9999	DF9999	DR9999
R91:S004	R91 Door2 Forced	DF	DR	9999	DF9999	DR9999
R91:S005	R91 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R91:S006	R91 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R91:S007	R91 Cab Tamper	TA	TR	9999	TA9999	TR9999
R91:S008	R91 AC fail	AT	AR	9999	AT9999	AR9999
R91:S009	R91 Low Batt	YT	YR	9999	YT9999	YR9999
R91:S010	R91 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R91:S011	R91 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R91:S012	R91 Low Volts	YP	YQ	9999	YP9999	YQ9999
R91:S013	R91 PS Fail	YP	YQ	9999	YP9999	YQ9999
R91:S014	R91 Batt Test	IA	IR	9999	IA9999	IR9999
R91:S015	R91 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R91:S016	R91 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R91:S017	R91 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R91:S018	R91 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R91:S019	R91 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R91:S020	R91 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R91:S021	R91 LAN Comms	EM	EN	9999	EM9999	EN9999
R91:S022	R91 Unibus	EM	EN	9999	EM9999	EN9999
R91:S023	R91 Spare2	UA	UR	9999	UA9999	UR9999
R92:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R92:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R92:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R92:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R92:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R92:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R92:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R92:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R92:S001	R92 Door1 Fault	IA	IR	9999	IA9999	IR9999
R92:S002	R92 Door2 Fault	IA	IR	9999	IA9999	IR9999
R92:S003	R92 Door1 Forced	DF	DR	9999	DF9999	DR9999
R92:S004	R92 Door2 Forced	DF	DR	9999	DF9999	DR9999
R92:S005	R92 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R92:S006	R92 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R92:S007	R92 Cab Tamper	TA	TR	9999	TA9999	TR9999
R92:S008	R92 AC fail	AT	AR	9999	AT9999	AR9999
R92:S009	R92 Low Batt	YT	YR	9999	YT9999	YR9999
R92:S010	R92 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R92:S011	R92 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R92:S012	R92 Low Volts	YP	YQ	9999	YP9999	YQ9999
R92:S013	R92 PS Fail	YP	YQ	9999	YP9999	YQ9999
R92:S014	R92 Batt Test	IA	IR	9999	IA9999	IR9999
R92:S015	R92 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R92:S016	R92 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R92:S017	R92 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R92:S018	R92 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R92:S019	R92 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R92:S020	R92 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R92:S021	R92 LAN Comms	EM	EN	9999	EM9999	EN9999
R92:S022	R92 Unibus	EM	EN	9999	EM9999	EN9999
R92:S023	R92 Spare2	UA	UR	9999	UA9999	UR9999
R93:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R93:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R93:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R93:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R93:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R93:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R93:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R93:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R93:S001	R93 Door1 Fault	IA	IR	9999	IA9999	IR9999
R93:S002	R93 Door2 Fault	IA	IR	9999	IA9999	IR9999
R93:S003	R93 Door1 Forced	DF	DR	9999	DF9999	DR9999
R93:S004	R93 Door2 Forced	DF	DR	9999	DF9999	DR9999
R93:S005	R93 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R93:S006	R93 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R93:S007	R93 Cab Tamper	TA	TR	9999	TA9999	TR9999
R93:S008	R93 AC fail	AT	AR	9999	AT9999	AR9999
R93:S009	R93 Low Batt	YT	YR	9999	YT9999	YR9999
R93:S010	R93 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R93:S011	R93 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R93:S012	R93 Low Volts	YP	YQ	9999	YP9999	YQ9999
R93:S013	R93 PS Fail	YP	YQ	9999	YP9999	YQ9999
R93:S014	R93 Batt Test	IA	IR	9999	IA9999	IR9999
R93:S015	R93 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R93:S016	R93 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R93:S017	R93 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R93:S018	R93 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R93:S019	R93 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R93:S020	R93 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R93:S021	R93 LAN Comms	EM	EN	9999	EM9999	EN9999
R93:S022	R93 Unibus	EM	EN	9999	EM9999	EN9999
R93:S023	R93 Spare2	UA	UR	9999	UA9999	UR9999
R94:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R94:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R94:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R94:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R94:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R94:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R94:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R94:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R94:S001	R94 Door1 Fault	IA	IR	9999	IA9999	IR9999
R94:S002	R94 Door2 Fault	IA	IR	9999	IA9999	IR9999
R94:S003	R94 Door1 Forced	DF	DR	9999	DF9999	DR9999
R94:S004	R94 Door2 Forced	DF	DR	9999	DF9999	DR9999
R94:S005	R94 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R94:S006	R94 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R94:S007	R94 Cab Tamper	TA	TR	9999	TA9999	TR9999

Integriti SIA DECIMAL Map. V21

R94:S008	R94 AC fail	AT	AR	9999	AT9999	AR9999
R94:S009	R94 Low Batt	YT	YR	9999	YT9999	YR9999
R94:S010	R94 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R94:S011	R94 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R94:S012	R94 Low Volts	YP	YQ	9999	YP9999	YQ9999
R94:S013	R94 PS Fail	YP	YQ	9999	YP9999	YQ9999
R94:S014	R94 Batt Test	IA	IR	9999	IA9999	IR9999
R94:S015	R94 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R94:S016	R94 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R94:S017	R94 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R94:S018	R94 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R94:S019	R94 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R94:S020	R94 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R94:S021	R94 LAN Comms	EM	EN	9999	EM9999	EN9999
R94:S022	R94 Unibus	EM	EN	9999	EM9999	EN9999
R94:S023	R94 Spare2	UA	UR	9999	UA9999	UR9999
R95:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R95:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R95:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R95:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R95:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R95:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R95:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R95:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R95:S001	R95 Door1 Fault	IA	IR	9999	IA9999	IR9999
R95:S002	R95 Door2 Fault	IA	IR	9999	IA9999	IR9999
R95:S003	R95 Door1 Forced	DF	DR	9999	DF9999	DR9999
R95:S004	R95 Door2 Forced	DF	DR	9999	DF9999	DR9999
R95:S005	R95 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R95:S006	R95 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R95:S007	R95 Cab Tamper	TA	TR	9999	TA9999	TR9999
R95:S008	R95 AC fail	AT	AR	9999	AT9999	AR9999
R95:S009	R95 Low Batt	YT	YR	9999	YT9999	YR9999
R95:S010	R95 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R95:S011	R95 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R95:S012	R95 Low Volts	YP	YQ	9999	YP9999	YQ9999
R95:S013	R95 PS Fail	YP	YQ	9999	YP9999	YQ9999
R95:S014	R95 Batt Test	IA	IR	9999	IA9999	IR9999
R95:S015	R95 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R95:S016	R95 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R95:S017	R95 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R95:S018	R95 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R95:S019	R95 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R95:S020	R95 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R95:S021	R95 LAN Comms	EM	EN	9999	EM9999	EN9999
R95:S022	R95 Unibus	EM	EN	9999	EM9999	EN9999
R95:S023	R95 Spare2	UA	UR	9999	UA9999	UR9999
R96:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R96:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R96:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R96:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R96:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R96:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R96:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R96:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R96:S001	R96 Door1 Fault	IA	IR	9999	IA9999	IR9999
R96:S002	R96 Door2 Fault	IA	IR	9999	IA9999	IR9999
R96:S003	R96 Door1 Forced	DF	DR	9999	DF9999	DR9999
R96:S004	R96 Door2 Forced	DF	DR	9999	DF9999	DR9999
R96:S005	R96 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R96:S006	R96 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R96:S007	R96 Cab Tamper	TA	TR	9999	TA9999	TR9999
R96:S008	R96 AC fail	AT	AR	9999	AT9999	AR9999
R96:S009	R96 Low Batt	YT	YR	9999	YT9999	YR9999
R96:S010	R96 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R96:S011	R96 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R96:S012	R96 Low Volts	YP	YQ	9999	YP9999	YQ9999
R96:S013	R96 PS Fail	YP	YQ	9999	YP9999	YQ9999
R96:S014	R96 Batt Test	IA	IR	9999	IA9999	IR9999
R96:S015	R96 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

R96:S016	R96 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R96:S017	R96 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R96:S018	R96 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R96:S019	R96 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R96:S020	R96 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R96:S021	R96 LAN Comms	EM	EN	9999	EM9999	EN9999
R96:S022	R96 Unibus	EM	EN	9999	EM9999	EN9999
R96:S023	R96 Spare2	UA	UR	9999	UA9999	UR9999
R97:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R97:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R97:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R97:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R97:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R97:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R97:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R97:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R97:S001	R97 Door1 Fault	IA	IR	9999	IA9999	IR9999
R97:S002	R97 Door2 Fault	IA	IR	9999	IA9999	IR9999
R97:S003	R97 Door1 Forced	DF	DR	9999	DF9999	DR9999
R97:S004	R97 Door2 Forced	DF	DR	9999	DF9999	DR9999
R97:S005	R97 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R97:S006	R97 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R97:S007	R97 Cab Tamper	TA	TR	9999	TA9999	TR9999
R97:S008	R97 AC fail	AT	AR	9999	AT9999	AR9999
R97:S009	R97 Low Batt	YT	YR	9999	YT9999	YR9999
R97:S010	R97 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R97:S011	R97 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R97:S012	R97 Low Volts	YP	YQ	9999	YP9999	YQ9999
R97:S013	R97 PS Fail	YP	YQ	9999	YP9999	YQ9999
R97:S014	R97 Batt Test	IA	IR	9999	IA9999	IR9999
R97:S015	R97 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R97:S016	R97 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R97:S017	R97 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R97:S018	R97 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R97:S019	R97 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R97:S020	R97 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R97:S021	R97 LAN Comms	EM	EN	9999	EM9999	EN9999
R97:S022	R97 Unibus	EM	EN	9999	EM9999	EN9999
R97:S023	R97 Spare2	UA	UR	9999	UA9999	UR9999
R98:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R98:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R98:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R98:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R98:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R98:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R98:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R98:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R98:S001	R98 Door1 Fault	IA	IR	9999	IA9999	IR9999
R98:S002	R98 Door2 Fault	IA	IR	9999	IA9999	IR9999
R98:S003	R98 Door1 Forced	DF	DR	9999	DF9999	DR9999
R98:S004	R98 Door2 Forced	DF	DR	9999	DF9999	DR9999
R98:S005	R98 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R98:S006	R98 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R98:S007	R98 Cab Tamper	TA	TR	9999	TA9999	TR9999
R98:S008	R98 AC fail	AT	AR	9999	AT9999	AR9999
R98:S009	R98 Low Batt	YT	YR	9999	YT9999	YR9999
R98:S010	R98 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R98:S011	R98 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R98:S012	R98 Low Volts	YP	YQ	9999	YP9999	YQ9999
R98:S013	R98 PS Fail	YP	YQ	9999	YP9999	YQ9999
R98:S014	R98 Batt Test	IA	IR	9999	IA9999	IR9999
R98:S015	R98 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R98:S016	R98 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R98:S017	R98 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R98:S018	R98 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R98:S019	R98 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R98:S020	R98 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R98:S021	R98 LAN Comms	EM	EN	9999	EM9999	EN9999
R98:S022	R98 Unibus	EM	EN	9999	EM9999	EN9999
R98:S023	R98 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

R99:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
R99:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
R99:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
R99:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
R99:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
R99:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
R99:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
R99:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
R99:S001	R99 Door1 Fault	IA	IR	9999	IA9999	IR9999
R99:S002	R99 Door2 Fault	IA	IR	9999	IA9999	IR9999
R99:S003	R99 Door1 Forced	DF	DR	9999	DF9999	DR9999
R99:S004	R99 Door2 Forced	DF	DR	9999	DF9999	DR9999
R99:S005	R99 Door1 DOTL	DL	DH	9999	DL9999	DH9999
R99:S006	R99 Door2 DOTL	DL	DH	9999	DL9999	DH9999
R99:S007	R99 Cab Tamper	TA	TR	9999	TA9999	TR9999
R99:S008	R99 AC fail	AT	AR	9999	AT9999	AR9999
R99:S009	R99 Low Batt	YT	YR	9999	YT9999	YR9999
R99:S010	R99 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
R99:S011	R99 DET Fuse	YP	YQ	9999	YP9999	YQ9999
R99:S012	R99 Low Volts	YP	YQ	9999	YP9999	YQ9999
R99:S013	R99 PS Fail	YP	YQ	9999	YP9999	YQ9999
R99:S014	R99 Batt Test	IA	IR	9999	IA9999	IR9999
R99:S015	R99 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
R99:S016	R99 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
R99:S017	R99 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
R99:S018	R99 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
R99:S019	R99 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
R99:S020	R99 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
R99:S021	R99 LAN Comms	EM	EN	9999	EM9999	EN9999
R99:S022	R99 Unibus	EM	EN	9999	EM9999	EN9999
R99:S023	R99 Spare2	UA	UR	9999	UA9999	UR9999
I01:Z001	Door1 Reed	UA	UR	5257	UA5257	UR5257
I01:Z002	Door2 Reed	UA	UR	5258	UA5258	UR5258
I01:Z003	Door1 Tongue	UA	UR	5259	UA5259	UR5259
I01:Z004	Door2 Tongue	UA	UR	5260	UA5260	UR5260
I01:Z005	Door1 Rex	UA	UR	5261	UA5261	UR5261
I01:Z006	Door2 Rex	UA	UR	5262	UA5262	UR5262
I01:Z007	Door1 Ren	UA	UR	5263	UA5263	UR5263
I01:Z008	Door2 Ren	UA	UR	5264	UA5264	UR5264
I01:Z009	Door3 Reed	UA	UR	5265	UA5265	UR5265
I01:Z010	Door4 Reed	UA	UR	5266	UA5266	UR5266
I01:Z011	Door3 Tongue	UA	UR	5267	UA5267	UR5267
I01:Z012	Door4 Tongue	UA	UR	5268	UA5268	UR5268
I01:Z013	Door3 Rex	UA	UR	5269	UA5269	UR5269
I01:Z014	Door4 Rex	UA	UR	5270	UA5270	UR5270
I01:Z015	Door3 Ren	UA	UR	5271	UA5271	UR5271
I01:Z016	Door4 Ren	UA	UR	5272	UA5272	UR5272
I01:Z017	Door5 Reed	UA	UR	5273	UA5273	UR5273
I01:Z018	Door6 Reed	UA	UR	5274	UA5274	UR5274
I01:Z019	Door5 Tongue	UA	UR	5275	UA5275	UR5275
I01:Z020	Door6 Tongue	UA	UR	5276	UA5276	UR5276
I01:Z021	Door5 Rex	UA	UR	5277	UA5277	UR5277
I01:Z022	Door6 Rex	UA	UR	5278	UA5278	UR5278
I01:Z023	Door5 Ren	UA	UR	5279	UA5279	UR5279
I01:Z024	Door6 Ren	UA	UR	5280	UA5280	UR5280
I01:Z025	Door7 Reed	UA	UR	5281	UA5281	UR5281
I01:Z026	Door8 Reed	UA	UR	5282	UA5282	UR5282
I01:Z027	Door7 Tongue	UA	UR	5283	UA5283	UR5283
I01:Z028	Door8 Tongue	UA	UR	5284	UA5284	UR5284
I01:Z029	Door7 Rex	UA	UR	5285	UA5285	UR5285
I01:Z030	Door8 Rex	UA	UR	5286	UA5286	UR5286
I01:Z031	Door7 Ren	UA	UR	5287	UA5287	UR5287
I01:Z032	Door8 Ren	UA	UR	5288	UA5288	UR5288
I01:S001	I01 Cab Tamper	TA	TR	5289	TA5289	TR5289
I01:S002	I01 AC fail	AT	AR	5290	AT5290	AR5290
I01:S003	I01 Low Batt	YT	YR	5291	YT5291	YR5291
I01:S004	I01 LAN Fuse	YP	YQ	5292	YP5292	YQ5292
I01:S005	I01 DET Fuse	YP	YQ	5293	YP5293	YQ5293
I01:S006	I01 Low Volts	YP	YQ	5294	YP5294	YQ5294
I01:S007	I01 PS Fail	YP	YQ	5295	YP5295	YQ5295

Integriti SIA DECIMAL Map. V21

I01:S008	I01 Batt Test	IA	IR	5296	IA5296	IR5296
I01:S009	I01 Unibus	EM	EN	5297	EM5297	EN5297
I01:S010	I01 Download Fail	YF	UX	5298	YF5298	UX5298
I01:S011	I01 Spare1	UA	UR	5299	UA5299	UR5299
I01:S012	I01 LAN Comms	EM	EN	5300	EM5300	EN5300
I01:S013	I01 Door1 Fault	IA	IR	5301	IA5301	IR5301
I01:S014	I01 Door2 Fault	IA	IR	5302	IA5302	IR5302
I01:S015	I01 Door3 Fault	IA	IR	5303	IA5303	IR5303
I01:S016	I01 Door4 Fault	IA	IR	5304	IA5304	IR5304
I01:S017	I01 Door5 Fault	IA	IR	5305	IA5305	IR5305
I01:S018	I01 Door6 Fault	IA	IR	5306	IA5306	IR5306
I01:S019	I01 Door7 Fault	IA	IR	5307	IA5307	IR5307
I01:S020	I01 Door8 Fault	IA	IR	5308	IA5308	IR5308
I01:S021	I01 Door1 Forced	DF	DR	5309	DF5309	DR5309
I01:S022	I01 Door2 Forced	DF	DR	5310	DF5310	DR5310
I01:S023	I01 Door3 Forced	DF	DR	5311	DF5311	DR5311
I01:S024	I01 Door4 Forced	DF	DR	5312	DF5312	DR5312
I01:S025	I01 Door5 Forced	DF	DR	5313	DF5313	DR5313
I01:S026	I01 Door6 Forced	DF	DR	5314	DF5314	DR5314
I01:S027	I01 Door7 Forced	DF	DR	5315	DF5315	DR5315
I01:S028	I01 Door8 Forced	DF	DR	5316	DF5316	DR5316
I01:S029	I01 Door1 DOTL	DL	DH	5317	DL5317	DH5317
I01:S030	I01 Door2 DOTL	DL	DH	5318	DL5318	DH5318
I01:S031	I01 Door3 DOTL	DL	DH	5319	DL5319	DH5319
I01:S032	I01 Door4 DOTL	DL	DH	5320	DL5320	DH5320
I01:S033	I01 Door5 DOTL	DL	DH	5321	DL5321	DH5321
I01:S034	I01 Door6 DOTL	DL	DH	5322	DL5322	DH5322
I01:S035	I01 Door7 DOTL	DL	DH	5323	DL5323	DH5323
I01:S036	I01 Door8 DOTL	DL	DH	5324	DL5324	DH5324
I01:S037	I01 Rdr1 Invalid	DD	DR	5325	DD5325	DR5325
I01:S038	I01 Rdr2 Invalid	DD	DR	5326	DD5326	DR5326
I01:S039	I01 Rdr3 Invalid	DD	DR	5327	DD5327	DR5327
I01:S040	I01 Rdr4 Invalid	DD	DR	5328	DD5328	DR5328
I01:S041	I01 Rdr5 Invalid	DD	DR	5329	DD5329	DR5329
I01:S042	I01 Rdr6 Invalid	DD	DR	5330	DD5330	DR5330
I01:S043	I01 Rdr7 Invalid	DD	DR	5331	DD5331	DR5331
I01:S044	I01 Rdr8 Invalid	DD	DR	5332	DD5332	DR5332
I01:S045	I01 Rdr9 Invalid	DD	DR	5333	DD5333	DR5333
I01:S046	I01 Rdr10 Invalid	DD	DR	5334	DD5334	DR5334
I01:S047	I01 Rdr11 Invalid	DD	DR	5335	DD5335	DR5335
I01:S048	I01 Rdr12 Invalid	DD	DR	5336	DD5336	DR5336
I01:S049	I01 Rdr13 Invalid	DD	DR	5337	DD5337	DR5337
I01:S050	I01 Rdr14 Invalid	DD	DR	5338	DD5338	DR5338
I01:S051	I01 Rdr15 Invalid	DD	DR	5339	DD5339	DR5339
I01:S052	I01 Rdr16 Invalid	DD	DR	5340	DD5340	DR5340
I01:S053	I01 Rdr1 Duress	HA	HR	5341	HA5341	HR5341
I01:S054	I01 Rdr2 Duress	HA	HR	5342	HA5342	HR5342
I01:S055	I01 Rdr3 Duress	HA	HR	5343	HA5343	HR5343
I01:S056	I01 Rdr4 Duress	HA	HR	5344	HA5344	HR5344
I01:S057	I01 Rdr5 Duress	HA	HR	5345	HA5345	HR5345
I01:S058	I01 Rdr6 Duress	HA	HR	5346	HA5346	HR5346
I01:S059	I01 Rdr7 Duress	HA	HR	5347	HA5347	HR5347
I01:S060	I01 Rdr8 Duress	HA	HR	5348	HA5348	HR5348
I01:S061	I01 Rdr9 Duress	HA	HR	5349	HA5349	HR5349
I01:S062	I01 Rdr10 Duress	HA	HR	5350	HA5350	HR5350
I01:S063	I01 Rdr11 Duress	HA	HR	5351	HA5351	HR5351
I01:S064	I01 Rdr12 Duress	HA	HR	5352	HA5352	HR5352
I01:S065	I01 Rdr13 Duress	HA	HR	5353	HA5353	HR5353
I01:S066	I01 Rdr14 Duress	HA	HR	5354	HA5354	HR5354
I01:S067	I01 Rdr15 Duress	HA	HR	5355	HA5355	HR5355
I01:S068	I01 Rdr16 Duress	HA	HR	5356	HA5356	HR5356
I01:S069	I01 Rdr1 Fault	IA	IR	5357	IA5357	IR5357
I01:S070	I01 Rdr2 Fault	IA	IR	5358	IA5358	IR5358
I01:S071	I01 Rdr3 Fault	IA	IR	5359	IA5359	IR5359
I01:S072	I01 Rdr4 Fault	IA	IR	5360	IA5360	IR5360
I01:S073	I01 Rdr5 Fault	IA	IR	5361	IA5361	IR5361
I01:S074	I01 Rdr6 Fault	IA	IR	5362	IA5362	IR5362
I01:S075	I01 Rdr7 Fault	IA	IR	5363	IA5363	IR5363
I01:S076	I01 Rdr8 Fault	IA	IR	5364	IA5364	IR5364
I01:S077	I01 Rdr9 Fault	IA	IR	5365	IA5365	IR5365

Integriti SIA DECIMAL Map. V21

I01:S078	I01 Rdr10 Fault	IA	IR	5366	IA5366	IR5366
I01:S079	I01 Rdr11 Fault	IA	IR	5367	IA5367	IR5367
I01:S080	I01 Rdr12 Fault	IA	IR	5368	IA5368	IR5368
I01:S081	I01 Rdr13 Fault	IA	IR	5369	IA5369	IR5369
I01:S082	I01 Rdr14 Fault	IA	IR	5370	IA5370	IR5370
I01:S083	I01 Rdr15 Fault	IA	IR	5371	IA5371	IR5371
I01:S084	I01 Rdr16 Fault	IA	IR	5372	IA5372	IR5372
I01:S085	I01 Spare2	UA	UR	5373	UA5373	UR5373
I01:S086	I01 Spare3	UA	UR	5374	UA5374	UR5374
I01:S087	I01 Spare4	UA	UR	5375	UA5375	UR5375
I01:S088	I01 Spare5	UA	UR	5376	UA5376	UR5376
I01:S089	I01 Spare6	UA	UR	5377	UA5377	UR5377
I01:S090	I01 Spare7	UA	UR	5378	UA5378	UR5378
I01:S091	I01 Spare8	UA	UR	5379	UA5379	UR5379
I01:S092	I01 Spare9	UA	UR	5380	UA5380	UR5380
I01:S093	I01 Spare10	UA	UR	5381	UA5381	UR5381
I02:Z001	Door1 Reed	UA	UR	5382	UA5382	UR5382
I02:Z002	Door2 Reed	UA	UR	5383	UA5383	UR5383
I02:Z003	Door1 Tongue	UA	UR	5384	UA5384	UR5384
I02:Z004	Door2 Tongue	UA	UR	5385	UA5385	UR5385
I02:Z005	Door1 Rex	UA	UR	5386	UA5386	UR5386
I02:Z006	Door2 Rex	UA	UR	5387	UA5387	UR5387
I02:Z007	Door1 Ren	UA	UR	5388	UA5388	UR5388
I02:Z008	Door2 Ren	UA	UR	5389	UA5389	UR5389
I02:Z009	Door3 Reed	UA	UR	5390	UA5390	UR5390
I02:Z010	Door4 Reed	UA	UR	5391	UA5391	UR5391
I02:Z011	Door3 Tongue	UA	UR	5392	UA5392	UR5392
I02:Z012	Door4 Tongue	UA	UR	5393	UA5393	UR5393
I02:Z013	Door3 Rex	UA	UR	5394	UA5394	UR5394
I02:Z014	Door4 Rex	UA	UR	5395	UA5395	UR5395
I02:Z015	Door3 Ren	UA	UR	5396	UA5396	UR5396
I02:Z016	Door4 Ren	UA	UR	5397	UA5397	UR5397
I02:Z017	Door5 Reed	UA	UR	5398	UA5398	UR5398
I02:Z018	Door6 Reed	UA	UR	5399	UA5399	UR5399
I02:Z019	Door5 Tongue	UA	UR	5400	UA5400	UR5400
I02:Z020	Door6 Tongue	UA	UR	5401	UA5401	UR5401
I02:Z021	Door5 Rex	UA	UR	5402	UA5402	UR5402
I02:Z022	Door6 Rex	UA	UR	5403	UA5403	UR5403
I02:Z023	Door5 Ren	UA	UR	5404	UA5404	UR5404
I02:Z024	Door6 Ren	UA	UR	5405	UA5405	UR5405
I02:Z025	Door7 Reed	UA	UR	5406	UA5406	UR5406
I02:Z026	Door8 Reed	UA	UR	5407	UA5407	UR5407
I02:Z027	Door7 Tongue	UA	UR	5408	UA5408	UR5408
I02:Z028	Door8 Tongue	UA	UR	5409	UA5409	UR5409
I02:Z029	Door7 Rex	UA	UR	5410	UA5410	UR5410
I02:Z030	Door8 Rex	UA	UR	5411	UA5411	UR5411
I02:Z031	Door7 Ren	UA	UR	5412	UA5412	UR5412
I02:Z032	Door8 Ren	UA	UR	5413	UA5413	UR5413
I02:S001	I02 Cab Tamper	TA	TR	5414	TA5414	TR5414
I02:S002	I02 AC fail	AT	AR	5415	AT5415	AR5415
I02:S003	I02 Low Batt	YT	YR	5416	YT5416	YR5416
I02:S004	I02 LAN Fuse	YP	YQ	5417	YP5417	YQ5417
I02:S005	I02 DET Fuse	YP	YQ	5418	YP5418	YQ5418
I02:S006	I02 Low Volts	YP	YQ	5419	YP5419	YQ5419
I02:S007	I02 PS Fail	YP	YQ	5420	YP5420	YQ5420
I02:S008	I02 Batt Test	IA	IR	5421	IA5421	IR5421
I02:S009	I02 Unibus	EM	EN	5422	EM5422	EN5422
I02:S010	I02 Download Fail	YF	UX	5423	YF5423	UX5423
I02:S011	I02 Spare1	UA	UR	5424	UA5424	UR5424
I02:S012	I02 LAN Comms	EM	EN	5425	EM5425	EN5425
I02:S013	I02 Door1 Fault	IA	IR	5426	IA5426	IR5426
I02:S014	I02 Door2 Fault	IA	IR	5427	IA5427	IR5427
I02:S015	I02 Door3 Fault	IA	IR	5428	IA5428	IR5428
I02:S016	I02 Door4 Fault	IA	IR	5429	IA5429	IR5429
I02:S017	I02 Door5 Fault	IA	IR	5430	IA5430	IR5430
I02:S018	I02 Door6 Fault	IA	IR	5431	IA5431	IR5431
I02:S019	I02 Door7 Fault	IA	IR	5432	IA5432	IR5432
I02:S020	I02 Door8 Fault	IA	IR	5433	IA5433	IR5433
I02:S021	I02 Door1 Forced	DF	DR	5434	DF5434	DR5434
I02:S022	I02 Door2 Forced	DF	DR	5435	DF5435	DR5435

Integriti SIA DECIMAL Map. V21

I02:S023	I02 Door3 Forced	DF	DR	5436	DF5436	DR5436
I02:S024	I02 Door4 Forced	DF	DR	5437	DF5437	DR5437
I02:S025	I02 Door5 Forced	DF	DR	5438	DF5438	DR5438
I02:S026	I02 Door6 Forced	DF	DR	5439	DF5439	DR5439
I02:S027	I02 Door7 Forced	DF	DR	5440	DF5440	DR5440
I02:S028	I02 Door8 Forced	DF	DR	5441	DF5441	DR5441
I02:S029	I02 Door1 DOTL	DL	DH	5442	DL5442	DH5442
I02:S030	I02 Door2 DOTL	DL	DH	5443	DL5443	DH5443
I02:S031	I02 Door3 DOTL	DL	DH	5444	DL5444	DH5444
I02:S032	I02 Door4 DOTL	DL	DH	5445	DL5445	DH5445
I02:S033	I02 Door5 DOTL	DL	DH	5446	DL5446	DH5446
I02:S034	I02 Door6 DOTL	DL	DH	5447	DL5447	DH5447
I02:S035	I02 Door7 DOTL	DL	DH	5448	DL5448	DH5448
I02:S036	I02 Door8 DOTL	DL	DH	5449	DL5449	DH5449
I02:S037	I02 Rdr1 Invalid	DD	DR	5450	DD5450	DR5450
I02:S038	I02 Rdr2 Invalid	DD	DR	5451	DD5451	DR5451
I02:S039	I02 Rdr3 Invalid	DD	DR	5452	DD5452	DR5452
I02:S040	I02 Rdr4 Invalid	DD	DR	5453	DD5453	DR5453
I02:S041	I02 Rdr5 Invalid	DD	DR	5454	DD5454	DR5454
I02:S042	I02 Rdr6 Invalid	DD	DR	5455	DD5455	DR5455
I02:S043	I02 Rdr7 Invalid	DD	DR	5456	DD5456	DR5456
I02:S044	I02 Rdr8 Invalid	DD	DR	5457	DD5457	DR5457
I02:S045	I02 Rdr9 Invalid	DD	DR	5458	DD5458	DR5458
I02:S046	I02 Rdr10 Invalid	DD	DR	5459	DD5459	DR5459
I02:S047	I02 Rdr11 Invalid	DD	DR	5460	DD5460	DR5460
I02:S048	I02 Rdr12 Invalid	DD	DR	5461	DD5461	DR5461
I02:S049	I02 Rdr13 Invalid	DD	DR	5462	DD5462	DR5462
I02:S050	I02 Rdr14 Invalid	DD	DR	5463	DD5463	DR5463
I02:S051	I02 Rdr15 Invalid	DD	DR	5464	DD5464	DR5464
I02:S052	I02 Rdr16 Invalid	DD	DR	5465	DD5465	DR5465
I02:S053	I02 Rdr1 Duress	HA	HR	5466	HA5466	HR5466
I02:S054	I02 Rdr2 Duress	HA	HR	5467	HA5467	HR5467
I02:S055	I02 Rdr3 Duress	HA	HR	5468	HA5468	HR5468
I02:S056	I02 Rdr4 Duress	HA	HR	5469	HA5469	HR5469
I02:S057	I02 Rdr5 Duress	HA	HR	5470	HA5470	HR5470
I02:S058	I02 Rdr6 Duress	HA	HR	5471	HA5471	HR5471
I02:S059	I02 Rdr7 Duress	HA	HR	5472	HA5472	HR5472
I02:S060	I02 Rdr8 Duress	HA	HR	5473	HA5473	HR5473
I02:S061	I02 Rdr9 Duress	HA	HR	5474	HA5474	HR5474
I02:S062	I02 Rdr10 Duress	HA	HR	5475	HA5475	HR5475
I02:S063	I02 Rdr11 Duress	HA	HR	5476	HA5476	HR5476
I02:S064	I02 Rdr12 Duress	HA	HR	5477	HA5477	HR5477
I02:S065	I02 Rdr13 Duress	HA	HR	5478	HA5478	HR5478
I02:S066	I02 Rdr14 Duress	HA	HR	5479	HA5479	HR5479
I02:S067	I02 Rdr15 Duress	HA	HR	5480	HA5480	HR5480
I02:S068	I02 Rdr16 Duress	HA	HR	5481	HA5481	HR5481
I02:S069	I02 Rdr1 Fault	IA	IR	5482	IA5482	IR5482
I02:S070	I02 Rdr2 Fault	IA	IR	5483	IA5483	IR5483
I02:S071	I02 Rdr3 Fault	IA	IR	5484	IA5484	IR5484
I02:S072	I02 Rdr4 Fault	IA	IR	5485	IA5485	IR5485
I02:S073	I02 Rdr5 Fault	IA	IR	5486	IA5486	IR5486
I02:S074	I02 Rdr6 Fault	IA	IR	5487	IA5487	IR5487
I02:S075	I02 Rdr7 Fault	IA	IR	5488	IA5488	IR5488
I02:S076	I02 Rdr8 Fault	IA	IR	5489	IA5489	IR5489
I02:S077	I02 Rdr9 Fault	IA	IR	5490	IA5490	IR5490
I02:S078	I02 Rdr10 Fault	IA	IR	5491	IA5491	IR5491
I02:S079	I02 Rdr11 Fault	IA	IR	5492	IA5492	IR5492
I02:S080	I02 Rdr12 Fault	IA	IR	5493	IA5493	IR5493
I02:S081	I02 Rdr13 Fault	IA	IR	5494	IA5494	IR5494
I02:S082	I02 Rdr14 Fault	IA	IR	5495	IA5495	IR5495
I02:S083	I02 Rdr15 Fault	IA	IR	5496	IA5496	IR5496
I02:S084	I02 Rdr16 Fault	IA	IR	5497	IA5497	IR5497
I02:S085	I02 Spare2	UA	UR	5498	UA5498	UR5498
I02:S086	I02 Spare3	UA	UR	5499	UA5499	UR5499
I02:S087	I02 Spare4	UA	UR	5500	UA5500	UR5500
I02:S088	I02 Spare5	UA	UR	5501	UA5501	UR5501
I02:S089	I02 Spare6	UA	UR	5502	UA5502	UR5502
I02:S090	I02 Spare7	UA	UR	5503	UA5503	UR5503
I02:S091	I02 Spare8	UA	UR	5504	UA5504	UR5504
I02:S092	I02 Spare9	UA	UR	5505	UA5505	UR5505

Integriti SIA DECIMAL Map. V21

I02:S093	I02 Spare10	UA	UR	5506	UA5506	UR5506
I03:Z001	Door1 Reed	UA	UR	5507	UA5507	UR5507
I03:Z002	Door2 Reed	UA	UR	5508	UA5508	UR5508
I03:Z003	Door1 Tongue	UA	UR	5509	UA5509	UR5509
I03:Z004	Door2 Tongue	UA	UR	5510	UA5510	UR5510
I03:Z005	Door1 Rex	UA	UR	5511	UA5511	UR5511
I03:Z006	Door2 Rex	UA	UR	5512	UA5512	UR5512
I03:Z007	Door1 Ren	UA	UR	5513	UA5513	UR5513
I03:Z008	Door2 Ren	UA	UR	5514	UA5514	UR5514
I03:Z009	Door3 Reed	UA	UR	5515	UA5515	UR5515
I03:Z010	Door4 Reed	UA	UR	5516	UA5516	UR5516
I03:Z011	Door3 Tongue	UA	UR	5517	UA5517	UR5517
I03:Z012	Door4 Tongue	UA	UR	5518	UA5518	UR5518
I03:Z013	Door3 Rex	UA	UR	5519	UA5519	UR5519
I03:Z014	Door4 Rex	UA	UR	5520	UA5520	UR5520
I03:Z015	Door3 Ren	UA	UR	5521	UA5521	UR5521
I03:Z016	Door4 Ren	UA	UR	5522	UA5522	UR5522
I03:Z017	Door5 Reed	UA	UR	5523	UA5523	UR5523
I03:Z018	Door6 Reed	UA	UR	5524	UA5524	UR5524
I03:Z019	Door5 Tongue	UA	UR	5525	UA5525	UR5525
I03:Z020	Door6 Tongue	UA	UR	5526	UA5526	UR5526
I03:Z021	Door5 Rex	UA	UR	5527	UA5527	UR5527
I03:Z022	Door6 Rex	UA	UR	5528	UA5528	UR5528
I03:Z023	Door5 Ren	UA	UR	5529	UA5529	UR5529
I03:Z024	Door6 Ren	UA	UR	5530	UA5530	UR5530
I03:Z025	Door7 Reed	UA	UR	5531	UA5531	UR5531
I03:Z026	Door8 Reed	UA	UR	5532	UA5532	UR5532
I03:Z027	Door7 Tongue	UA	UR	5533	UA5533	UR5533
I03:Z028	Door8 Tongue	UA	UR	5534	UA5534	UR5534
I03:Z029	Door7 Rex	UA	UR	5535	UA5535	UR5535
I03:Z030	Door8 Rex	UA	UR	5536	UA5536	UR5536
I03:Z031	Door7 Ren	UA	UR	5537	UA5537	UR5537
I03:Z032	Door8 Ren	UA	UR	5538	UA5538	UR5538
I03:S001	I03 Cab Tamper	TA	TR	5539	TA5539	TR5539
I03:S002	I03 AC fail	AT	AR	5540	AT5540	AR5540
I03:S003	I03 Low Batt	YT	YR	5541	YT5541	YR5541
I03:S004	I03 LAN Fuse	YP	YQ	5542	YP5542	YQ5542
I03:S005	I03 DET Fuse	YP	YQ	5543	YP5543	YQ5543
I03:S006	I03 Low Volts	YP	YQ	5544	YP5544	YQ5544
I03:S007	I03 PS Fail	YP	YQ	5545	YP5545	YQ5545
I03:S008	I03 Batt Test	IA	IR	5546	IA5546	IR5546
I03:S009	I03 Unibus	EM	EN	5547	EM5547	EN5547
I03:S010	I03 Download Fail	YF	UX	5548	YF5548	UX5548
I03:S011	I03 Spare1	UA	UR	5549	UA5549	UR5549
I03:S012	I03 LAN Comms	EM	EN	5550	EM5550	EN5550
I03:S013	I03 Door1 Fault	IA	IR	5551	IA5551	IR5551
I03:S014	I03 Door2 Fault	IA	IR	5552	IA5552	IR5552
I03:S015	I03 Door3 Fault	IA	IR	5553	IA5553	IR5553
I03:S016	I03 Door4 Fault	IA	IR	5554	IA5554	IR5554
I03:S017	I03 Door5 Fault	IA	IR	5555	IA5555	IR5555
I03:S018	I03 Door6 Fault	IA	IR	5556	IA5556	IR5556
I03:S019	I03 Door7 Fault	IA	IR	5557	IA5557	IR5557
I03:S020	I03 Door8 Fault	IA	IR	5558	IA5558	IR5558
I03:S021	I03 Door1 Forced	DF	DR	5559	DF5559	DR5559
I03:S022	I03 Door2 Forced	DF	DR	5560	DF5560	DR5560
I03:S023	I03 Door3 Forced	DF	DR	5561	DF5561	DR5561
I03:S024	I03 Door4 Forced	DF	DR	5562	DF5562	DR5562
I03:S025	I03 Door5 Forced	DF	DR	5563	DF5563	DR5563
I03:S026	I03 Door6 Forced	DF	DR	5564	DF5564	DR5564
I03:S027	I03 Door7 Forced	DF	DR	5565	DF5565	DR5565
I03:S028	I03 Door8 Forced	DF	DR	5566	DF5566	DR5566
I03:S029	I03 Door1 DOTL	DL	DH	5567	DL5567	DH5567
I03:S030	I03 Door2 DOTL	DL	DH	5568	DL5568	DH5568
I03:S031	I03 Door3 DOTL	DL	DH	5569	DL5569	DH5569
I03:S032	I03 Door4 DOTL	DL	DH	5570	DL5570	DH5570
I03:S033	I03 Door5 DOTL	DL	DH	5571	DL5571	DH5571
I03:S034	I03 Door6 DOTL	DL	DH	5572	DL5572	DH5572
I03:S035	I03 Door7 DOTL	DL	DH	5573	DL5573	DH5573
I03:S036	I03 Door8 DOTL	DL	DH	5574	DL5574	DH5574
I03:S037	I03 Rdr1 Invalid	DD	DR	5575	DD5575	DR5575

Integriti SIA DECIMAL Map. V21

I03:S038	I03 Rdr2 Invalid	DD	DR	5576	DD5576	DR5576
I03:S039	I03 Rdr3 Invalid	DD	DR	5577	DD5577	DR5577
I03:S040	I03 Rdr4 Invalid	DD	DR	5578	DD5578	DR5578
I03:S041	I03 Rdr5 Invalid	DD	DR	5579	DD5579	DR5579
I03:S042	I03 Rdr6 Invalid	DD	DR	5580	DD5580	DR5580
I03:S043	I03 Rdr7 Invalid	DD	DR	5581	DD5581	DR5581
I03:S044	I03 Rdr8 Invalid	DD	DR	5582	DD5582	DR5582
I03:S045	I03 Rdr9 Invalid	DD	DR	5583	DD5583	DR5583
I03:S046	I03 Rdr10 Invalid	DD	DR	5584	DD5584	DR5584
I03:S047	I03 Rdr11 Invalid	DD	DR	5585	DD5585	DR5585
I03:S048	I03 Rdr12 Invalid	DD	DR	5586	DD5586	DR5586
I03:S049	I03 Rdr13 Invalid	DD	DR	5587	DD5587	DR5587
I03:S050	I03 Rdr14 Invalid	DD	DR	5588	DD5588	DR5588
I03:S051	I03 Rdr15 Invalid	DD	DR	5589	DD5589	DR5589
I03:S052	I03 Rdr16 Invalid	DD	DR	5590	DD5590	DR5590
I03:S053	I03 Rdr1 Duress	HA	HR	5591	HA5591	HR5591
I03:S054	I03 Rdr2 Duress	HA	HR	5592	HA5592	HR5592
I03:S055	I03 Rdr3 Duress	HA	HR	5593	HA5593	HR5593
I03:S056	I03 Rdr4 Duress	HA	HR	5594	HA5594	HR5594
I03:S057	I03 Rdr5 Duress	HA	HR	5595	HA5595	HR5595
I03:S058	I03 Rdr6 Duress	HA	HR	5596	HA5596	HR5596
I03:S059	I03 Rdr7 Duress	HA	HR	5597	HA5597	HR5597
I03:S060	I03 Rdr8 Duress	HA	HR	5598	HA5598	HR5598
I03:S061	I03 Rdr9 Duress	HA	HR	5599	HA5599	HR5599
I03:S062	I03 Rdr10 Duress	HA	HR	5600	HA5600	HR5600
I03:S063	I03 Rdr11 Duress	HA	HR	5601	HA5601	HR5601
I03:S064	I03 Rdr12 Duress	HA	HR	5602	HA5602	HR5602
I03:S065	I03 Rdr13 Duress	HA	HR	5603	HA5603	HR5603
I03:S066	I03 Rdr14 Duress	HA	HR	5604	HA5604	HR5604
I03:S067	I03 Rdr15 Duress	HA	HR	5605	HA5605	HR5605
I03:S068	I03 Rdr16 Duress	HA	HR	5606	HA5606	HR5606
I03:S069	I03 Rdr1 Fault	IA	IR	5607	IA5607	IR5607
I03:S070	I03 Rdr2 Fault	IA	IR	5608	IA5608	IR5608
I03:S071	I03 Rdr3 Fault	IA	IR	5609	IA5609	IR5609
I03:S072	I03 Rdr4 Fault	IA	IR	5610	IA5610	IR5610
I03:S073	I03 Rdr5 Fault	IA	IR	5611	IA5611	IR5611
I03:S074	I03 Rdr6 Fault	IA	IR	5612	IA5612	IR5612
I03:S075	I03 Rdr7 Fault	IA	IR	5613	IA5613	IR5613
I03:S076	I03 Rdr8 Fault	IA	IR	5614	IA5614	IR5614
I03:S077	I03 Rdr9 Fault	IA	IR	5615	IA5615	IR5615
I03:S078	I03 Rdr10 Fault	IA	IR	5616	IA5616	IR5616
I03:S079	I03 Rdr11 Fault	IA	IR	5617	IA5617	IR5617
I03:S080	I03 Rdr12 Fault	IA	IR	5618	IA5618	IR5618
I03:S081	I03 Rdr13 Fault	IA	IR	5619	IA5619	IR5619
I03:S082	I03 Rdr14 Fault	IA	IR	5620	IA5620	IR5620
I03:S083	I03 Rdr15 Fault	IA	IR	5621	IA5621	IR5621
I03:S084	I03 Rdr16 Fault	IA	IR	5622	IA5622	IR5622
I03:S085	I03 Spare2	UA	UR	5623	UA5623	UR5623
I03:S086	I03 Spare3	UA	UR	5624	UA5624	UR5624
I03:S087	I03 Spare4	UA	UR	5625	UA5625	UR5625
I03:S088	I03 Spare5	UA	UR	5626	UA5626	UR5626
I03:S089	I03 Spare6	UA	UR	5627	UA5627	UR5627
I03:S090	I03 Spare7	UA	UR	5628	UA5628	UR5628
I03:S091	I03 Spare8	UA	UR	5629	UA5629	UR5629
I03:S092	I03 Spare9	UA	UR	5630	UA5630	UR5630
I03:S093	I03 Spare10	UA	UR	5631	UA5631	UR5631
I04:Z001	Door1 Reed	UA	UR	5632	UA5632	UR5632
I04:Z002	Door2 Reed	UA	UR	5633	UA5633	UR5633
I04:Z003	Door1 Tongue	UA	UR	5634	UA5634	UR5634
I04:Z004	Door2 Tongue	UA	UR	5635	UA5635	UR5635
I04:Z005	Door1 Rex	UA	UR	5636	UA5636	UR5636
I04:Z006	Door2 Rex	UA	UR	5637	UA5637	UR5637
I04:Z007	Door1 Ren	UA	UR	5638	UA5638	UR5638
I04:Z008	Door2 Ren	UA	UR	5639	UA5639	UR5639
I04:Z009	Door3 Reed	UA	UR	5640	UA5640	UR5640
I04:Z010	Door4 Reed	UA	UR	5641	UA5641	UR5641
I04:Z011	Door3 Tongue	UA	UR	5642	UA5642	UR5642
I04:Z012	Door4 Tongue	UA	UR	5643	UA5643	UR5643
I04:Z013	Door3 Rex	UA	UR	5644	UA5644	UR5644
I04:Z014	Door4 Rex	UA	UR	5645	UA5645	UR5645

Integriti SIA DECIMAL Map. V21

I04:Z015	Door3 Ren	UA	UR	5646	UA5646	UR5646
I04:Z016	Door4 Ren	UA	UR	5647	UA5647	UR5647
I04:Z017	Door5 Reed	UA	UR	5648	UA5648	UR5648
I04:Z018	Door6 Reed	UA	UR	5649	UA5649	UR5649
I04:Z019	Door5 Tongue	UA	UR	5650	UA5650	UR5650
I04:Z020	Door6 Tongue	UA	UR	5651	UA5651	UR5651
I04:Z021	Door5 Rex	UA	UR	5652	UA5652	UR5652
I04:Z022	Door6 Rex	UA	UR	5653	UA5653	UR5653
I04:Z023	Door5 Ren	UA	UR	5654	UA5654	UR5654
I04:Z024	Door6 Ren	UA	UR	5655	UA5655	UR5655
I04:Z025	Door7 Reed	UA	UR	5656	UA5656	UR5656
I04:Z026	Door8 Reed	UA	UR	5657	UA5657	UR5657
I04:Z027	Door7 Tongue	UA	UR	5658	UA5658	UR5658
I04:Z028	Door8 Tongue	UA	UR	5659	UA5659	UR5659
I04:Z029	Door7 Rex	UA	UR	5660	UA5660	UR5660
I04:Z030	Door8 Rex	UA	UR	5661	UA5661	UR5661
I04:Z031	Door7 Ren	UA	UR	5662	UA5662	UR5662
I04:Z032	Door8 Ren	UA	UR	5663	UA5663	UR5663
I04:S001	I04 Cab Tamper	TA	TR	5664	TA5664	TR5664
I04:S002	I04 AC fail	AT	AR	5665	AT5665	AR5665
I04:S003	I04 Low Batt	YT	YR	5666	YT5666	YR5666
I04:S004	I04 LAN Fuse	YP	YQ	5667	YP5667	YQ5667
I04:S005	I04 DET Fuse	YP	YQ	5668	YP5668	YQ5668
I04:S006	I04 Low Volts	YP	YQ	5669	YP5669	YQ5669
I04:S007	I04 PS Fail	YP	YQ	5670	YP5670	YQ5670
I04:S008	I04 Batt Test	IA	IR	5671	IA5671	IR5671
I04:S009	I04 Unibus	EM	EN	5672	EM5672	EN5672
I04:S010	I04 Download Fail	YF	UX	5673	YF5673	UX5673
I04:S011	I04 Spare1	UA	UR	5674	UA5674	UR5674
I04:S012	I04 LAN Comms	EM	EN	5675	EM5675	EN5675
I04:S013	I04 Door1 Fault	IA	IR	5676	IA5676	IR5676
I04:S014	I04 Door2 Fault	IA	IR	5677	IA5677	IR5677
I04:S015	I04 Door3 Fault	IA	IR	5678	IA5678	IR5678
I04:S016	I04 Door4 Fault	IA	IR	5679	IA5679	IR5679
I04:S017	I04 Door5 Fault	IA	IR	5680	IA5680	IR5680
I04:S018	I04 Door6 Fault	IA	IR	5681	IA5681	IR5681
I04:S019	I04 Door7 Fault	IA	IR	5682	IA5682	IR5682
I04:S020	I04 Door8 Fault	IA	IR	5683	IA5683	IR5683
I04:S021	I04 Door1 Forced	DF	DR	5684	DF5684	DR5684
I04:S022	I04 Door2 Forced	DF	DR	5685	DF5685	DR5685
I04:S023	I04 Door3 Forced	DF	DR	5686	DF5686	DR5686
I04:S024	I04 Door4 Forced	DF	DR	5687	DF5687	DR5687
I04:S025	I04 Door5 Forced	DF	DR	5688	DF5688	DR5688
I04:S026	I04 Door6 Forced	DF	DR	5689	DF5689	DR5689
I04:S027	I04 Door7 Forced	DF	DR	5690	DF5690	DR5690
I04:S028	I04 Door8 Forced	DF	DR	5691	DF5691	DR5691
I04:S029	I04 Door1 DOTL	DL	DH	5692	DL5692	DH5692
I04:S030	I04 Door2 DOTL	DL	DH	5693	DL5693	DH5693
I04:S031	I04 Door3 DOTL	DL	DH	5694	DL5694	DH5694
I04:S032	I04 Door4 DOTL	DL	DH	5695	DL5695	DH5695
I04:S033	I04 Door5 DOTL	DL	DH	5696	DL5696	DH5696
I04:S034	I04 Door6 DOTL	DL	DH	5697	DL5697	DH5697
I04:S035	I04 Door7 DOTL	DL	DH	5698	DL5698	DH5698
I04:S036	I04 Door8 DOTL	DL	DH	5699	DL5699	DH5699
I04:S037	I04 Rdr1 Invalid	DD	DR	5700	DD5700	DR5700
I04:S038	I04 Rdr2 Invalid	DD	DR	5701	DD5701	DR5701
I04:S039	I04 Rdr3 Invalid	DD	DR	5702	DD5702	DR5702
I04:S040	I04 Rdr4 Invalid	DD	DR	5703	DD5703	DR5703
I04:S041	I04 Rdr5 Invalid	DD	DR	5704	DD5704	DR5704
I04:S042	I04 Rdr6 Invalid	DD	DR	5705	DD5705	DR5705
I04:S043	I04 Rdr7 Invalid	DD	DR	5706	DD5706	DR5706
I04:S044	I04 Rdr8 Invalid	DD	DR	5707	DD5707	DR5707
I04:S045	I04 Rdr9 Invalid	DD	DR	5708	DD5708	DR5708
I04:S046	I04 Rdr10 Invalid	DD	DR	5709	DD5709	DR5709
I04:S047	I04 Rdr11 Invalid	DD	DR	5710	DD5710	DR5710
I04:S048	I04 Rdr12 Invalid	DD	DR	5711	DD5711	DR5711
I04:S049	I04 Rdr13 Invalid	DD	DR	5712	DD5712	DR5712
I04:S050	I04 Rdr14 Invalid	DD	DR	5713	DD5713	DR5713
I04:S051	I04 Rdr15 Invalid	DD	DR	5714	DD5714	DR5714
I04:S052	I04 Rdr16 Invalid	DD	DR	5715	DD5715	DR5715

Integriti SIA DECIMAL Map. V21

I04:S053	I04 Rdr1 Duress	HA	HR	5716	HA5716	HR5716
I04:S054	I04 Rdr2 Duress	HA	HR	5717	HA5717	HR5717
I04:S055	I04 Rdr3 Duress	HA	HR	5718	HA5718	HR5718
I04:S056	I04 Rdr4 Duress	HA	HR	5719	HA5719	HR5719
I04:S057	I04 Rdr5 Duress	HA	HR	5720	HA5720	HR5720
I04:S058	I04 Rdr6 Duress	HA	HR	5721	HA5721	HR5721
I04:S059	I04 Rdr7 Duress	HA	HR	5722	HA5722	HR5722
I04:S060	I04 Rdr8 Duress	HA	HR	5723	HA5723	HR5723
I04:S061	I04 Rdr9 Duress	HA	HR	5724	HA5724	HR5724
I04:S062	I04 Rdr10 Duress	HA	HR	5725	HA5725	HR5725
I04:S063	I04 Rdr11 Duress	HA	HR	5726	HA5726	HR5726
I04:S064	I04 Rdr12 Duress	HA	HR	5727	HA5727	HR5727
I04:S065	I04 Rdr13 Duress	HA	HR	5728	HA5728	HR5728
I04:S066	I04 Rdr14 Duress	HA	HR	5729	HA5729	HR5729
I04:S067	I04 Rdr15 Duress	HA	HR	5730	HA5730	HR5730
I04:S068	I04 Rdr16 Duress	HA	HR	5731	HA5731	HR5731
I04:S069	I04 Rdr1 Fault	IA	IR	5732	IA5732	IR5732
I04:S070	I04 Rdr2 Fault	IA	IR	5733	IA5733	IR5733
I04:S071	I04 Rdr3 Fault	IA	IR	5734	IA5734	IR5734
I04:S072	I04 Rdr4 Fault	IA	IR	5735	IA5735	IR5735
I04:S073	I04 Rdr5 Fault	IA	IR	5736	IA5736	IR5736
I04:S074	I04 Rdr6 Fault	IA	IR	5737	IA5737	IR5737
I04:S075	I04 Rdr7 Fault	IA	IR	5738	IA5738	IR5738
I04:S076	I04 Rdr8 Fault	IA	IR	5739	IA5739	IR5739
I04:S077	I04 Rdr9 Fault	IA	IR	5740	IA5740	IR5740
I04:S078	I04 Rdr10 Fault	IA	IR	5741	IA5741	IR5741
I04:S079	I04 Rdr11 Fault	IA	IR	5742	IA5742	IR5742
I04:S080	I04 Rdr12 Fault	IA	IR	5743	IA5743	IR5743
I04:S081	I04 Rdr13 Fault	IA	IR	5744	IA5744	IR5744
I04:S082	I04 Rdr14 Fault	IA	IR	5745	IA5745	IR5745
I04:S083	I04 Rdr15 Fault	IA	IR	5746	IA5746	IR5746
I04:S084	I04 Rdr16 Fault	IA	IR	5747	IA5747	IR5747
I04:S085	I04 Spare2	UA	UR	5748	UA5748	UR5748
I04:S086	I04 Spare3	UA	UR	5749	UA5749	UR5749
I04:S087	I04 Spare4	UA	UR	5750	UA5750	UR5750
I04:S088	I04 Spare5	UA	UR	5751	UA5751	UR5751
I04:S089	I04 Spare6	UA	UR	5752	UA5752	UR5752
I04:S090	I04 Spare7	UA	UR	5753	UA5753	UR5753
I04:S091	I04 Spare8	UA	UR	5754	UA5754	UR5754
I04:S092	I04 Spare9	UA	UR	5755	UA5755	UR5755
I04:S093	I04 Spare10	UA	UR	5756	UA5756	UR5756
I05:Z001	Door1 Reed	UA	UR	5757	UA5757	UR5757
I05:Z002	Door2 Reed	UA	UR	5758	UA5758	UR5758
I05:Z003	Door1 Tongue	UA	UR	5759	UA5759	UR5759
I05:Z004	Door2 Tongue	UA	UR	5760	UA5760	UR5760
I05:Z005	Door1 Rex	UA	UR	5761	UA5761	UR5761
I05:Z006	Door2 Rex	UA	UR	5762	UA5762	UR5762
I05:Z007	Door1 Ren	UA	UR	5763	UA5763	UR5763
I05:Z008	Door2 Ren	UA	UR	5764	UA5764	UR5764
I05:Z009	Door3 Reed	UA	UR	5765	UA5765	UR5765
I05:Z010	Door4 Reed	UA	UR	5766	UA5766	UR5766
I05:Z011	Door3 Tongue	UA	UR	5767	UA5767	UR5767
I05:Z012	Door4 Tongue	UA	UR	5768	UA5768	UR5768
I05:Z013	Door3 Rex	UA	UR	5769	UA5769	UR5769
I05:Z014	Door4 Rex	UA	UR	5770	UA5770	UR5770
I05:Z015	Door3 Ren	UA	UR	5771	UA5771	UR5771
I05:Z016	Door4 Ren	UA	UR	5772	UA5772	UR5772
I05:Z017	Door5 Reed	UA	UR	5773	UA5773	UR5773
I05:Z018	Door6 Reed	UA	UR	5774	UA5774	UR5774
I05:Z019	Door5 Tongue	UA	UR	5775	UA5775	UR5775
I05:Z020	Door6 Tongue	UA	UR	5776	UA5776	UR5776
I05:Z021	Door5 Rex	UA	UR	5777	UA5777	UR5777
I05:Z022	Door6 Rex	UA	UR	5778	UA5778	UR5778
I05:Z023	Door5 Ren	UA	UR	5779	UA5779	UR5779
I05:Z024	Door6 Ren	UA	UR	5780	UA5780	UR5780
I05:Z025	Door7 Reed	UA	UR	5781	UA5781	UR5781
I05:Z026	Door8 Reed	UA	UR	5782	UA5782	UR5782
I05:Z027	Door7 Tongue	UA	UR	5783	UA5783	UR5783
I05:Z028	Door8 Tongue	UA	UR	5784	UA5784	UR5784
I05:Z029	Door7 Rex	UA	UR	5785	UA5785	UR5785

Integriti SIA DECIMAL Map. V21

I05:Z030	Door8 Ren	UA	UR	5786	UA5786	UR5786
I05:Z031	Door7 Ren	UA	UR	5787	UA5787	UR5787
I05:Z032	Door8 Ren	UA	UR	5788	UA5788	UR5788
I05:S001	I05 Cab Tamper	TA	TR	5789	TA5789	TR5789
I05:S002	I05 AC fail	AT	AR	5790	AT5790	AR5790
I05:S003	I05 Low Batt	YT	YR	5791	YT5791	YR5791
I05:S004	I05 LAN Fuse	YP	YQ	5792	YP5792	YQ5792
I05:S005	I05 DET Fuse	YP	YQ	5793	YP5793	YQ5793
I05:S006	I05 Low Volts	YP	YQ	5794	YP5794	YQ5794
I05:S007	I05 PS Fail	YP	YQ	5795	YP5795	YQ5795
I05:S008	I05 Batt Test	IA	IR	5796	IA5796	IR5796
I05:S009	I05 Unibus	EM	EN	5797	EM5797	EN5797
I05:S010	I05 Download Fail	YF	UX	5798	YF5798	UX5798
I05:S011	I05 Spare1	UA	UR	5799	UA5799	UR5799
I05:S012	I05 LAN Comms	EM	EN	5800	EM5800	EN5800
I05:S013	I05 Door1 Fault	IA	IR	5801	IA5801	IR5801
I05:S014	I05 Door2 Fault	IA	IR	5802	IA5802	IR5802
I05:S015	I05 Door3 Fault	IA	IR	5803	IA5803	IR5803
I05:S016	I05 Door4 Fault	IA	IR	5804	IA5804	IR5804
I05:S017	I05 Door5 Fault	IA	IR	5805	IA5805	IR5805
I05:S018	I05 Door6 Fault	IA	IR	5806	IA5806	IR5806
I05:S019	I05 Door7 Fault	IA	IR	5807	IA5807	IR5807
I05:S020	I05 Door8 Fault	IA	IR	5808	IA5808	IR5808
I05:S021	I05 Door1 Forced	DF	DR	5809	DF5809	DR5809
I05:S022	I05 Door2 Forced	DF	DR	5810	DF5810	DR5810
I05:S023	I05 Door3 Forced	DF	DR	5811	DF5811	DR5811
I05:S024	I05 Door4 Forced	DF	DR	5812	DF5812	DR5812
I05:S025	I05 Door5 Forced	DF	DR	5813	DF5813	DR5813
I05:S026	I05 Door6 Forced	DF	DR	5814	DF5814	DR5814
I05:S027	I05 Door7 Forced	DF	DR	5815	DF5815	DR5815
I05:S028	I05 Door8 Forced	DF	DR	5816	DF5816	DR5816
I05:S029	I05 Door1 DOTL	DL	DH	5817	DL5817	DH5817
I05:S030	I05 Door2 DOTL	DL	DH	5818	DL5818	DH5818
I05:S031	I05 Door3 DOTL	DL	DH	5819	DL5819	DH5819
I05:S032	I05 Door4 DOTL	DL	DH	5820	DL5820	DH5820
I05:S033	I05 Door5 DOTL	DL	DH	5821	DL5821	DH5821
I05:S034	I05 Door6 DOTL	DL	DH	5822	DL5822	DH5822
I05:S035	I05 Door7 DOTL	DL	DH	5823	DL5823	DH5823
I05:S036	I05 Door8 DOTL	DL	DH	5824	DL5824	DH5824
I05:S037	I05 Rdr1 Invalid	DD	DR	5825	DD5825	DR5825
I05:S038	I05 Rdr2 Invalid	DD	DR	5826	DD5826	DR5826
I05:S039	I05 Rdr3 Invalid	DD	DR	5827	DD5827	DR5827
I05:S040	I05 Rdr4 Invalid	DD	DR	5828	DD5828	DR5828
I05:S041	I05 Rdr5 Invalid	DD	DR	5829	DD5829	DR5829
I05:S042	I05 Rdr6 Invalid	DD	DR	5830	DD5830	DR5830
I05:S043	I05 Rdr7 Invalid	DD	DR	5831	DD5831	DR5831
I05:S044	I05 Rdr8 Invalid	DD	DR	5832	DD5832	DR5832
I05:S045	I05 Rdr9 Invalid	DD	DR	5833	DD5833	DR5833
I05:S046	I05 Rdr10 Invalid	DD	DR	5834	DD5834	DR5834
I05:S047	I05 Rdr11 Invalid	DD	DR	5835	DD5835	DR5835
I05:S048	I05 Rdr12 Invalid	DD	DR	5836	DD5836	DR5836
I05:S049	I05 Rdr13 Invalid	DD	DR	5837	DD5837	DR5837
I05:S050	I05 Rdr14 Invalid	DD	DR	5838	DD5838	DR5838
I05:S051	I05 Rdr15 Invalid	DD	DR	5839	DD5839	DR5839
I05:S052	I05 Rdr16 Invalid	DD	DR	5840	DD5840	DR5840
I05:S053	I05 Rdr1 Duress	HA	HR	5841	HA5841	HR5841
I05:S054	I05 Rdr2 Duress	HA	HR	5842	HA5842	HR5842
I05:S055	I05 Rdr3 Duress	HA	HR	5843	HA5843	HR5843
I05:S056	I05 Rdr4 Duress	HA	HR	5844	HA5844	HR5844
I05:S057	I05 Rdr5 Duress	HA	HR	5845	HA5845	HR5845
I05:S058	I05 Rdr6 Duress	HA	HR	5846	HA5846	HR5846
I05:S059	I05 Rdr7 Duress	HA	HR	5847	HA5847	HR5847
I05:S060	I05 Rdr8 Duress	HA	HR	5848	HA5848	HR5848
I05:S061	I05 Rdr9 Duress	HA	HR	5849	HA5849	HR5849
I05:S062	I05 Rdr10 Duress	HA	HR	5850	HA5850	HR5850
I05:S063	I05 Rdr11 Duress	HA	HR	5851	HA5851	HR5851
I05:S064	I05 Rdr12 Duress	HA	HR	5852	HA5852	HR5852
I05:S065	I05 Rdr13 Duress	HA	HR	5853	HA5853	HR5853
I05:S066	I05 Rdr14 Duress	HA	HR	5854	HA5854	HR5854
I05:S067	I05 Rdr15 Duress	HA	HR	5855	HA5855	HR5855

Integriti SIA DECIMAL Map. V21

I05:S068	I05 Rdr16 Duress	HA	HR	5856	HA5856	HR5856
I05:S069	I05 Rdr1 Fault	IA	IR	5857	IA5857	IR5857
I05:S070	I05 Rdr2 Fault	IA	IR	5858	IA5858	IR5858
I05:S071	I05 Rdr3 Fault	IA	IR	5859	IA5859	IR5859
I05:S072	I05 Rdr4 Fault	IA	IR	5860	IA5860	IR5860
I05:S073	I05 Rdr5 Fault	IA	IR	5861	IA5861	IR5861
I05:S074	I05 Rdr6 Fault	IA	IR	5862	IA5862	IR5862
I05:S075	I05 Rdr7 Fault	IA	IR	5863	IA5863	IR5863
I05:S076	I05 Rdr8 Fault	IA	IR	5864	IA5864	IR5864
I05:S077	I05 Rdr9 Fault	IA	IR	5865	IA5865	IR5865
I05:S078	I05 Rdr10 Fault	IA	IR	5866	IA5866	IR5866
I05:S079	I05 Rdr11 Fault	IA	IR	5867	IA5867	IR5867
I05:S080	I05 Rdr12 Fault	IA	IR	5868	IA5868	IR5868
I05:S081	I05 Rdr13 Fault	IA	IR	5869	IA5869	IR5869
I05:S082	I05 Rdr14 Fault	IA	IR	5870	IA5870	IR5870
I05:S083	I05 Rdr15 Fault	IA	IR	5871	IA5871	IR5871
I05:S084	I05 Rdr16 Fault	IA	IR	5872	IA5872	IR5872
I05:S085	I05 Spare2	UA	UR	5873	UA5873	UR5873
I05:S086	I05 Spare3	UA	UR	5874	UA5874	UR5874
I05:S087	I05 Spare4	UA	UR	5875	UA5875	UR5875
I05:S088	I05 Spare5	UA	UR	5876	UA5876	UR5876
I05:S089	I05 Spare6	UA	UR	5877	UA5877	UR5877
I05:S090	I05 Spare7	UA	UR	5878	UA5878	UR5878
I05:S091	I05 Spare8	UA	UR	5879	UA5879	UR5879
I05:S092	I05 Spare9	UA	UR	5880	UA5880	UR5880
I05:S093	I05 Spare10	UA	UR	5881	UA5881	UR5881
I06:Z001	Door1 Reed	UA	UR	5882	UA5882	UR5882
I06:Z002	Door2 Reed	UA	UR	5883	UA5883	UR5883
I06:Z003	Door1 Tongue	UA	UR	5884	UA5884	UR5884
I06:Z004	Door2 Tongue	UA	UR	5885	UA5885	UR5885
I06:Z005	Door1 Rex	UA	UR	5886	UA5886	UR5886
I06:Z006	Door2 Rex	UA	UR	5887	UA5887	UR5887
I06:Z007	Door1 Ren	UA	UR	5888	UA5888	UR5888
I06:Z008	Door2 Ren	UA	UR	5889	UA5889	UR5889
I06:Z009	Door3 Reed	UA	UR	5890	UA5890	UR5890
I06:Z010	Door4 Reed	UA	UR	5891	UA5891	UR5891
I06:Z011	Door3 Tongue	UA	UR	5892	UA5892	UR5892
I06:Z012	Door4 Tongue	UA	UR	5893	UA5893	UR5893
I06:Z013	Door3 Rex	UA	UR	5894	UA5894	UR5894
I06:Z014	Door4 Rex	UA	UR	5895	UA5895	UR5895
I06:Z015	Door3 Ren	UA	UR	5896	UA5896	UR5896
I06:Z016	Door4 Ren	UA	UR	5897	UA5897	UR5897
I06:Z017	Door5 Reed	UA	UR	5898	UA5898	UR5898
I06:Z018	Door6 Reed	UA	UR	5899	UA5899	UR5899
I06:Z019	Door5 Tongue	UA	UR	5900	UA5900	UR5900
I06:Z020	Door6 Tongue	UA	UR	5901	UA5901	UR5901
I06:Z021	Door5 Rex	UA	UR	5902	UA5902	UR5902
I06:Z022	Door6 Rex	UA	UR	5903	UA5903	UR5903
I06:Z023	Door5 Ren	UA	UR	5904	UA5904	UR5904
I06:Z024	Door6 Ren	UA	UR	5905	UA5905	UR5905
I06:Z025	Door7 Reed	UA	UR	5906	UA5906	UR5906
I06:Z026	Door8 Reed	UA	UR	5907	UA5907	UR5907
I06:Z027	Door7 Tongue	UA	UR	5908	UA5908	UR5908
I06:Z028	Door8 Tongue	UA	UR	5909	UA5909	UR5909
I06:Z029	Door7 Rex	UA	UR	5910	UA5910	UR5910
I06:Z030	Door8 Rex	UA	UR	5911	UA5911	UR5911
I06:Z031	Door7 Ren	UA	UR	5912	UA5912	UR5912
I06:Z032	Door8 Ren	UA	UR	5913	UA5913	UR5913
I06:S001	I06 Cab Tamper	TA	TR	5914	TA5914	TR5914
I06:S002	I06 AC fail	AT	AR	5915	AT5915	AR5915
I06:S003	I06 Low Batt	YT	YR	5916	YT5916	YR5916
I06:S004	I06 LAN Fuse	YP	YQ	5917	YP5917	YQ5917
I06:S005	I06 DET Fuse	YP	YQ	5918	YP5918	YQ5918
I06:S006	I06 Low Volts	YP	YQ	5919	YP5919	YQ5919
I06:S007	I06 PS Fail	YP	YQ	5920	YP5920	YQ5920
I06:S008	I06 Batt Test	IA	IR	5921	IA5921	IR5921
I06:S009	I06 Unibus	EM	EN	5922	EM5922	EN5922
I06:S010	I06 Download Fail	YF	UX	5923	YF5923	UX5923
I06:S011	I06 Spare1	UA	UR	5924	UA5924	UR5924
I06:S012	I06 LAN Comms	EM	EN	5925	EM5925	EN5925

Integriti SIA DECIMAL Map. V21

I06:S013	I06 Door1 Fault	IA	IR	5926	IA5926	IR5926
I06:S014	I06 Door2 Fault	IA	IR	5927	IA5927	IR5927
I06:S015	I06 Door3 Fault	IA	IR	5928	IA5928	IR5928
I06:S016	I06 Door4 Fault	IA	IR	5929	IA5929	IR5929
I06:S017	I06 Door5 Fault	IA	IR	5930	IA5930	IR5930
I06:S018	I06 Door6 Fault	IA	IR	5931	IA5931	IR5931
I06:S019	I06 Door7 Fault	IA	IR	5932	IA5932	IR5932
I06:S020	I06 Door8 Fault	IA	IR	5933	IA5933	IR5933
I06:S021	I06 Door1 Forced	DF	DR	5934	DF5934	DR5934
I06:S022	I06 Door2 Forced	DF	DR	5935	DF5935	DR5935
I06:S023	I06 Door3 Forced	DF	DR	5936	DF5936	DR5936
I06:S024	I06 Door4 Forced	DF	DR	5937	DF5937	DR5937
I06:S025	I06 Door5 Forced	DF	DR	5938	DF5938	DR5938
I06:S026	I06 Door6 Forced	DF	DR	5939	DF5939	DR5939
I06:S027	I06 Door7 Forced	DF	DR	5940	DF5940	DR5940
I06:S028	I06 Door8 Forced	DF	DR	5941	DF5941	DR5941
I06:S029	I06 Door1 DOTL	DL	DH	5942	DL5942	DH5942
I06:S030	I06 Door2 DOTL	DL	DH	5943	DL5943	DH5943
I06:S031	I06 Door3 DOTL	DL	DH	5944	DL5944	DH5944
I06:S032	I06 Door4 DOTL	DL	DH	5945	DL5945	DH5945
I06:S033	I06 Door5 DOTL	DL	DH	5946	DL5946	DH5946
I06:S034	I06 Door6 DOTL	DL	DH	5947	DL5947	DH5947
I06:S035	I06 Door7 DOTL	DL	DH	5948	DL5948	DH5948
I06:S036	I06 Door8 DOTL	DL	DH	5949	DL5949	DH5949
I06:S037	I06 Rdr1 Invalid	DD	DR	5950	DD5950	DR5950
I06:S038	I06 Rdr2 Invalid	DD	DR	5951	DD5951	DR5951
I06:S039	I06 Rdr3 Invalid	DD	DR	5952	DD5952	DR5952
I06:S040	I06 Rdr4 Invalid	DD	DR	5953	DD5953	DR5953
I06:S041	I06 Rdr5 Invalid	DD	DR	5954	DD5954	DR5954
I06:S042	I06 Rdr6 Invalid	DD	DR	5955	DD5955	DR5955
I06:S043	I06 Rdr7 Invalid	DD	DR	5956	DD5956	DR5956
I06:S044	I06 Rdr8 Invalid	DD	DR	5957	DD5957	DR5957
I06:S045	I06 Rdr9 Invalid	DD	DR	5958	DD5958	DR5958
I06:S046	I06 Rdr10 Invalid	DD	DR	5959	DD5959	DR5959
I06:S047	I06 Rdr11 Invalid	DD	DR	5960	DD5960	DR5960
I06:S048	I06 Rdr12 Invalid	DD	DR	5961	DD5961	DR5961
I06:S049	I06 Rdr13 Invalid	DD	DR	5962	DD5962	DR5962
I06:S050	I06 Rdr14 Invalid	DD	DR	5963	DD5963	DR5963
I06:S051	I06 Rdr15 Invalid	DD	DR	5964	DD5964	DR5964
I06:S052	I06 Rdr16 Invalid	DD	DR	5965	DD5965	DR5965
I06:S053	I06 Rdr1 Duress	HA	HR	5966	HA5966	HR5966
I06:S054	I06 Rdr2 Duress	HA	HR	5967	HA5967	HR5967
I06:S055	I06 Rdr3 Duress	HA	HR	5968	HA5968	HR5968
I06:S056	I06 Rdr4 Duress	HA	HR	5969	HA5969	HR5969
I06:S057	I06 Rdr5 Duress	HA	HR	5970	HA5970	HR5970
I06:S058	I06 Rdr6 Duress	HA	HR	5971	HA5971	HR5971
I06:S059	I06 Rdr7 Duress	HA	HR	5972	HA5972	HR5972
I06:S060	I06 Rdr8 Duress	HA	HR	5973	HA5973	HR5973
I06:S061	I06 Rdr9 Duress	HA	HR	5974	HA5974	HR5974
I06:S062	I06 Rdr10 Duress	HA	HR	5975	HA5975	HR5975
I06:S063	I06 Rdr11 Duress	HA	HR	5976	HA5976	HR5976
I06:S064	I06 Rdr12 Duress	HA	HR	5977	HA5977	HR5977
I06:S065	I06 Rdr13 Duress	HA	HR	5978	HA5978	HR5978
I06:S066	I06 Rdr14 Duress	HA	HR	5979	HA5979	HR5979
I06:S067	I06 Rdr15 Duress	HA	HR	5980	HA5980	HR5980
I06:S068	I06 Rdr16 Duress	HA	HR	5981	HA5981	HR5981
I06:S069	I06 Rdr1 Fault	IA	IR	5982	IA5982	IR5982
I06:S070	I06 Rdr2 Fault	IA	IR	5983	IA5983	IR5983
I06:S071	I06 Rdr3 Fault	IA	IR	5984	IA5984	IR5984
I06:S072	I06 Rdr4 Fault	IA	IR	5985	IA5985	IR5985
I06:S073	I06 Rdr5 Fault	IA	IR	5986	IA5986	IR5986
I06:S074	I06 Rdr6 Fault	IA	IR	5987	IA5987	IR5987
I06:S075	I06 Rdr7 Fault	IA	IR	5988	IA5988	IR5988
I06:S076	I06 Rdr8 Fault	IA	IR	5989	IA5989	IR5989
I06:S077	I06 Rdr9 Fault	IA	IR	5990	IA5990	IR5990
I06:S078	I06 Rdr10 Fault	IA	IR	5991	IA5991	IR5991
I06:S079	I06 Rdr11 Fault	IA	IR	5992	IA5992	IR5992
I06:S080	I06 Rdr12 Fault	IA	IR	5993	IA5993	IR5993
I06:S081	I06 Rdr13 Fault	IA	IR	5994	IA5994	IR5994
I06:S082	I06 Rdr14 Fault	IA	IR	5995	IA5995	IR5995

Integriti SIA DECIMAL Map. V21

I06:S083	I06 Rdr15 Fault	IA	IR	5996	IA5996	IR5996
I06:S084	I06 Rdr16 Fault	IA	IR	5997	IA5997	IR5997
I06:S085	I06 Spare2	UA	UR	5998	UA5998	UR5998
I06:S086	I06 Spare3	UA	UR	5999	UA5999	UR5999
I06:S087	I06 Spare4	UA	UR	6000	UA6000	UR6000
I06:S088	I06 Spare5	UA	UR	6001	UA6001	UR6001
I06:S089	I06 Spare6	UA	UR	6002	UA6002	UR6002
I06:S090	I06 Spare7	UA	UR	6003	UA6003	UR6003
I06:S091	I06 Spare8	UA	UR	6004	UA6004	UR6004
I06:S092	I06 Spare9	UA	UR	6005	UA6005	UR6005
I06:S093	I06 Spare10	UA	UR	6006	UA6006	UR6006
I07:Z001	Door1 Reed	UA	UR	6007	UA6007	UR6007
I07:Z002	Door2 Reed	UA	UR	6008	UA6008	UR6008
I07:Z003	Door1 Tongue	UA	UR	6009	UA6009	UR6009
I07:Z004	Door2 Tongue	UA	UR	6010	UA6010	UR6010
I07:Z005	Door1 Rex	UA	UR	6011	UA6011	UR6011
I07:Z006	Door2 Rex	UA	UR	6012	UA6012	UR6012
I07:Z007	Door1 Ren	UA	UR	6013	UA6013	UR6013
I07:Z008	Door2 Ren	UA	UR	6014	UA6014	UR6014
I07:Z009	Door3 Reed	UA	UR	6015	UA6015	UR6015
I07:Z010	Door4 Reed	UA	UR	6016	UA6016	UR6016
I07:Z011	Door3 Tongue	UA	UR	6017	UA6017	UR6017
I07:Z012	Door4 Tongue	UA	UR	6018	UA6018	UR6018
I07:Z013	Door3 Rex	UA	UR	6019	UA6019	UR6019
I07:Z014	Door4 Rex	UA	UR	6020	UA6020	UR6020
I07:Z015	Door3 Ren	UA	UR	6021	UA6021	UR6021
I07:Z016	Door4 Ren	UA	UR	6022	UA6022	UR6022
I07:Z017	Door5 Reed	UA	UR	6023	UA6023	UR6023
I07:Z018	Door6 Reed	UA	UR	6024	UA6024	UR6024
I07:Z019	Door5 Tongue	UA	UR	6025	UA6025	UR6025
I07:Z020	Door6 Tongue	UA	UR	6026	UA6026	UR6026
I07:Z021	Door5 Rex	UA	UR	6027	UA6027	UR6027
I07:Z022	Door6 Rex	UA	UR	6028	UA6028	UR6028
I07:Z023	Door5 Ren	UA	UR	6029	UA6029	UR6029
I07:Z024	Door6 Ren	UA	UR	6030	UA6030	UR6030
I07:Z025	Door7 Reed	UA	UR	6031	UA6031	UR6031
I07:Z026	Door8 Reed	UA	UR	6032	UA6032	UR6032
I07:Z027	Door7 Tongue	UA	UR	6033	UA6033	UR6033
I07:Z028	Door8 Tongue	UA	UR	6034	UA6034	UR6034
I07:Z029	Door7 Rex	UA	UR	6035	UA6035	UR6035
I07:Z030	Door8 Rex	UA	UR	6036	UA6036	UR6036
I07:Z031	Door7 Ren	UA	UR	6037	UA6037	UR6037
I07:Z032	Door8 Ren	UA	UR	6038	UA6038	UR6038
I07:S001	I07 Cab Tamper	TA	TR	6039	TA6039	TR6039
I07:S002	I07 AC fail	AT	AR	6040	AT6040	AR6040
I07:S003	I07 Low Batt	YT	YR	6041	YT6041	YR6041
I07:S004	I07 LAN Fuse	YP	YQ	6042	YP6042	YQ6042
I07:S005	I07 DET Fuse	YP	YQ	6043	YP6043	YQ6043
I07:S006	I07 Low Volts	YP	YQ	6044	YP6044	YQ6044
I07:S007	I07 PS Fail	YP	YQ	6045	YP6045	YQ6045
I07:S008	I07 Batt Test	IA	IR	6046	IA6046	IR6046
I07:S009	I07 Unibus	EM	EN	6047	EM6047	EN6047
I07:S010	I07 Download Fail	YF	UX	6048	YF6048	UX6048
I07:S011	I07 Spare1	UA	UR	6049	UA6049	UR6049
I07:S012	I07 LAN Comms	EM	EN	6050	EM6050	EN6050
I07:S013	I07 Door1 Fault	IA	IR	6051	IA6051	IR6051
I07:S014	I07 Door2 Fault	IA	IR	6052	IA6052	IR6052
I07:S015	I07 Door3 Fault	IA	IR	6053	IA6053	IR6053
I07:S016	I07 Door4 Fault	IA	IR	6054	IA6054	IR6054
I07:S017	I07 Door5 Fault	IA	IR	6055	IA6055	IR6055
I07:S018	I07 Door6 Fault	IA	IR	6056	IA6056	IR6056
I07:S019	I07 Door7 Fault	IA	IR	6057	IA6057	IR6057
I07:S020	I07 Door8 Fault	IA	IR	6058	IA6058	IR6058
I07:S021	I07 Door1 Forced	DF	DR	6059	DF6059	DR6059
I07:S022	I07 Door2 Forced	DF	DR	6060	DF6060	DR6060
I07:S023	I07 Door3 Forced	DF	DR	6061	DF6061	DR6061
I07:S024	I07 Door4 Forced	DF	DR	6062	DF6062	DR6062
I07:S025	I07 Door5 Forced	DF	DR	6063	DF6063	DR6063
I07:S026	I07 Door6 Forced	DF	DR	6064	DF6064	DR6064
I07:S027	I07 Door7 Forced	DF	DR	6065	DF6065	DR6065

Integriti SIA DECIMAL Map. V21

I07:S028	I07 Door8 Forced	DF	DR	6066	DF6066	DR6066
I07:S029	I07 Door1 DOTL	DL	DH	6067	DL6067	DH6067
I07:S030	I07 Door2 DOTL	DL	DH	6068	DL6068	DH6068
I07:S031	I07 Door3 DOTL	DL	DH	6069	DL6069	DH6069
I07:S032	I07 Door4 DOTL	DL	DH	6070	DL6070	DH6070
I07:S033	I07 Door5 DOTL	DL	DH	6071	DL6071	DH6071
I07:S034	I07 Door6 DOTL	DL	DH	6072	DL6072	DH6072
I07:S035	I07 Door7 DOTL	DL	DH	6073	DL6073	DH6073
I07:S036	I07 Door8 DOTL	DL	DH	6074	DL6074	DH6074
I07:S037	I07 Rdr1 Invalid	DD	DR	6075	DD6075	DR6075
I07:S038	I07 Rdr2 Invalid	DD	DR	6076	DD6076	DR6076
I07:S039	I07 Rdr3 Invalid	DD	DR	6077	DD6077	DR6077
I07:S040	I07 Rdr4 Invalid	DD	DR	6078	DD6078	DR6078
I07:S041	I07 Rdr5 Invalid	DD	DR	6079	DD6079	DR6079
I07:S042	I07 Rdr6 Invalid	DD	DR	6080	DD6080	DR6080
I07:S043	I07 Rdr7 Invalid	DD	DR	6081	DD6081	DR6081
I07:S044	I07 Rdr8 Invalid	DD	DR	6082	DD6082	DR6082
I07:S045	I07 Rdr9 Invalid	DD	DR	6083	DD6083	DR6083
I07:S046	I07 Rdr10 Invalid	DD	DR	6084	DD6084	DR6084
I07:S047	I07 Rdr11 Invalid	DD	DR	6085	DD6085	DR6085
I07:S048	I07 Rdr12 Invalid	DD	DR	6086	DD6086	DR6086
I07:S049	I07 Rdr13 Invalid	DD	DR	6087	DD6087	DR6087
I07:S050	I07 Rdr14 Invalid	DD	DR	6088	DD6088	DR6088
I07:S051	I07 Rdr15 Invalid	DD	DR	6089	DD6089	DR6089
I07:S052	I07 Rdr16 Invalid	DD	DR	6090	DD6090	DR6090
I07:S053	I07 Rdr1 Duress	HA	HR	6091	HA6091	HR6091
I07:S054	I07 Rdr2 Duress	HA	HR	6092	HA6092	HR6092
I07:S055	I07 Rdr3 Duress	HA	HR	6093	HA6093	HR6093
I07:S056	I07 Rdr4 Duress	HA	HR	6094	HA6094	HR6094
I07:S057	I07 Rdr5 Duress	HA	HR	6095	HA6095	HR6095
I07:S058	I07 Rdr6 Duress	HA	HR	6096	HA6096	HR6096
I07:S059	I07 Rdr7 Duress	HA	HR	6097	HA6097	HR6097
I07:S060	I07 Rdr8 Duress	HA	HR	6098	HA6098	HR6098
I07:S061	I07 Rdr9 Duress	HA	HR	6099	HA6099	HR6099
I07:S062	I07 Rdr10 Duress	HA	HR	6100	HA6100	HR6100
I07:S063	I07 Rdr11 Duress	HA	HR	6101	HA6101	HR6101
I07:S064	I07 Rdr12 Duress	HA	HR	6102	HA6102	HR6102
I07:S065	I07 Rdr13 Duress	HA	HR	6103	HA6103	HR6103
I07:S066	I07 Rdr14 Duress	HA	HR	6104	HA6104	HR6104
I07:S067	I07 Rdr15 Duress	HA	HR	6105	HA6105	HR6105
I07:S068	I07 Rdr16 Duress	HA	HR	6106	HA6106	HR6106
I07:S069	I07 Rdr1 Fault	IA	IR	6107	IA6107	IR6107
I07:S070	I07 Rdr2 Fault	IA	IR	6108	IA6108	IR6108
I07:S071	I07 Rdr3 Fault	IA	IR	6109	IA6109	IR6109
I07:S072	I07 Rdr4 Fault	IA	IR	6110	IA6110	IR6110
I07:S073	I07 Rdr5 Fault	IA	IR	6111	IA6111	IR6111
I07:S074	I07 Rdr6 Fault	IA	IR	6112	IA6112	IR6112
I07:S075	I07 Rdr7 Fault	IA	IR	6113	IA6113	IR6113
I07:S076	I07 Rdr8 Fault	IA	IR	6114	IA6114	IR6114
I07:S077	I07 Rdr9 Fault	IA	IR	6115	IA6115	IR6115
I07:S078	I07 Rdr10 Fault	IA	IR	6116	IA6116	IR6116
I07:S079	I07 Rdr11 Fault	IA	IR	6117	IA6117	IR6117
I07:S080	I07 Rdr12 Fault	IA	IR	6118	IA6118	IR6118
I07:S081	I07 Rdr13 Fault	IA	IR	6119	IA6119	IR6119
I07:S082	I07 Rdr14 Fault	IA	IR	6120	IA6120	IR6120
I07:S083	I07 Rdr15 Fault	IA	IR	6121	IA6121	IR6121
I07:S084	I07 Rdr16 Fault	IA	IR	6122	IA6122	IR6122
I07:S085	I07 Spare2	UA	UR	6123	UA6123	UR6123
I07:S086	I07 Spare3	UA	UR	6124	UA6124	UR6124
I07:S087	I07 Spare4	UA	UR	6125	UA6125	UR6125
I07:S088	I07 Spare5	UA	UR	6126	UA6126	UR6126
I07:S089	I07 Spare6	UA	UR	6127	UA6127	UR6127
I07:S090	I07 Spare7	UA	UR	6128	UA6128	UR6128
I07:S091	I07 Spare8	UA	UR	6129	UA6129	UR6129
I07:S092	I07 Spare9	UA	UR	6130	UA6130	UR6130
I07:S093	I07 Spare10	UA	UR	6131	UA6131	UR6131
I08:Z001	Door1 Reed	UA	UR	6132	UA6132	UR6132
I08:Z002	Door2 Reed	UA	UR	6133	UA6133	UR6133
I08:Z003	Door1 Tongue	UA	UR	6134	UA6134	UR6134
I08:Z004	Door2 Tongue	UA	UR	6135	UA6135	UR6135

Integriti SIA DECIMAL Map. V21

I08:Z005	Door1 Rex	UA	UR	6136	UA6136	UR6136
I08:Z006	Door2 Rex	UA	UR	6137	UA6137	UR6137
I08:Z007	Door1 Ren	UA	UR	6138	UA6138	UR6138
I08:Z008	Door2 Ren	UA	UR	6139	UA6139	UR6139
I08:Z009	Door3 Reed	UA	UR	6140	UA6140	UR6140
I08:Z010	Door4 Reed	UA	UR	6141	UA6141	UR6141
I08:Z011	Door3 Tongue	UA	UR	6142	UA6142	UR6142
I08:Z012	Door4 Tongue	UA	UR	6143	UA6143	UR6143
I08:Z013	Door3 Rex	UA	UR	6144	UA6144	UR6144
I08:Z014	Door4 Rex	UA	UR	6145	UA6145	UR6145
I08:Z015	Door3 Ren	UA	UR	6146	UA6146	UR6146
I08:Z016	Door4 Ren	UA	UR	6147	UA6147	UR6147
I08:Z017	Door5 Reed	UA	UR	6148	UA6148	UR6148
I08:Z018	Door6 Reed	UA	UR	6149	UA6149	UR6149
I08:Z019	Door5 Tongue	UA	UR	6150	UA6150	UR6150
I08:Z020	Door6 Tongue	UA	UR	6151	UA6151	UR6151
I08:Z021	Door5 Rex	UA	UR	6152	UA6152	UR6152
I08:Z022	Door6 Rex	UA	UR	6153	UA6153	UR6153
I08:Z023	Door5 Ren	UA	UR	6154	UA6154	UR6154
I08:Z024	Door6 Ren	UA	UR	6155	UA6155	UR6155
I08:Z025	Door7 Reed	UA	UR	6156	UA6156	UR6156
I08:Z026	Door8 Reed	UA	UR	6157	UA6157	UR6157
I08:Z027	Door7 Tongue	UA	UR	6158	UA6158	UR6158
I08:Z028	Door8 Tongue	UA	UR	6159	UA6159	UR6159
I08:Z029	Door7 Rex	UA	UR	6160	UA6160	UR6160
I08:Z030	Door8 Rex	UA	UR	6161	UA6161	UR6161
I08:Z031	Door7 Ren	UA	UR	6162	UA6162	UR6162
I08:Z032	Door8 Ren	UA	UR	6163	UA6163	UR6163
I08:S001	I08 Cab Tamper	TA	TR	6164	TA6164	TR6164
I08:S002	I08 AC fail	AT	AR	6165	AT6165	AR6165
I08:S003	I08 Low Batt	YT	YR	6166	YT6166	YR6166
I08:S004	I08 LAN Fuse	YP	YQ	6167	YP6167	YQ6167
I08:S005	I08 DET Fuse	YP	YQ	6168	YP6168	YQ6168
I08:S006	I08 Low Volts	YP	YQ	6169	YP6169	YQ6169
I08:S007	I08 PS Fail	YP	YQ	6170	YP6170	YQ6170
I08:S008	I08 Batt Test	IA	IR	6171	IA6171	IR6171
I08:S009	I08 Unibus	EM	EN	6172	EM6172	EN6172
I08:S010	I08 Download Fail	YF	UX	6173	YF6173	UX6173
I08:S011	I08 Spare1	UA	UR	6174	UA6174	UR6174
I08:S012	I08 LAN Comms	EM	EN	6175	EM6175	EN6175
I08:S013	I08 Door1 Fault	IA	IR	6176	IA6176	IR6176
I08:S014	I08 Door2 Fault	IA	IR	6177	IA6177	IR6177
I08:S015	I08 Door3 Fault	IA	IR	6178	IA6178	IR6178
I08:S016	I08 Door4 Fault	IA	IR	6179	IA6179	IR6179
I08:S017	I08 Door5 Fault	IA	IR	6180	IA6180	IR6180
I08:S018	I08 Door6 Fault	IA	IR	6181	IA6181	IR6181
I08:S019	I08 Door7 Fault	IA	IR	6182	IA6182	IR6182
I08:S020	I08 Door8 Fault	IA	IR	6183	IA6183	IR6183
I08:S021	I08 Door1 Forced	DF	DR	6184	DF6184	DR6184
I08:S022	I08 Door2 Forced	DF	DR	6185	DF6185	DR6185
I08:S023	I08 Door3 Forced	DF	DR	6186	DF6186	DR6186
I08:S024	I08 Door4 Forced	DF	DR	6187	DF6187	DR6187
I08:S025	I08 Door5 Forced	DF	DR	6188	DF6188	DR6188
I08:S026	I08 Door6 Forced	DF	DR	6189	DF6189	DR6189
I08:S027	I08 Door7 Forced	DF	DR	6190	DF6190	DR6190
I08:S028	I08 Door8 Forced	DF	DR	6191	DF6191	DR6191
I08:S029	I08 Door1 DOTL	DL	DH	6192	DL6192	DH6192
I08:S030	I08 Door2 DOTL	DL	DH	6193	DL6193	DH6193
I08:S031	I08 Door3 DOTL	DL	DH	6194	DL6194	DH6194
I08:S032	I08 Door4 DOTL	DL	DH	6195	DL6195	DH6195
I08:S033	I08 Door5 DOTL	DL	DH	6196	DL6196	DH6196
I08:S034	I08 Door6 DOTL	DL	DH	6197	DL6197	DH6197
I08:S035	I08 Door7 DOTL	DL	DH	6198	DL6198	DH6198
I08:S036	I08 Door8 DOTL	DL	DH	6199	DL6199	DH6199
I08:S037	I08 Rdr1 Invalid	DD	DR	6200	DD6200	DR6200
I08:S038	I08 Rdr2 Invalid	DD	DR	6201	DD6201	DR6201
I08:S039	I08 Rdr3 Invalid	DD	DR	6202	DD6202	DR6202
I08:S040	I08 Rdr4 Invalid	DD	DR	6203	DD6203	DR6203
I08:S041	I08 Rdr5 Invalid	DD	DR	6204	DD6204	DR6204
I08:S042	I08 Rdr6 Invalid	DD	DR	6205	DD6205	DR6205

Integriti SIA DECIMAL Map. V21

I08:S043	I08 Rdr7 Invalid	DD	DR	6206	DD6206	DR6206
I08:S044	I08 Rdr8 Invalid	DD	DR	6207	DD6207	DR6207
I08:S045	I08 Rdr9 Invalid	DD	DR	6208	DD6208	DR6208
I08:S046	I08 Rdr10 Invalid	DD	DR	6209	DD6209	DR6209
I08:S047	I08 Rdr11 Invalid	DD	DR	6210	DD6210	DR6210
I08:S048	I08 Rdr12 Invalid	DD	DR	6211	DD6211	DR6211
I08:S049	I08 Rdr13 Invalid	DD	DR	6212	DD6212	DR6212
I08:S050	I08 Rdr14 Invalid	DD	DR	6213	DD6213	DR6213
I08:S051	I08 Rdr15 Invalid	DD	DR	6214	DD6214	DR6214
I08:S052	I08 Rdr16 Invalid	DD	DR	6215	DD6215	DR6215
I08:S053	I08 Rdr1 Duress	HA	HR	6216	HA6216	HR6216
I08:S054	I08 Rdr2 Duress	HA	HR	6217	HA6217	HR6217
I08:S055	I08 Rdr3 Duress	HA	HR	6218	HA6218	HR6218
I08:S056	I08 Rdr4 Duress	HA	HR	6219	HA6219	HR6219
I08:S057	I08 Rdr5 Duress	HA	HR	6220	HA6220	HR6220
I08:S058	I08 Rdr6 Duress	HA	HR	6221	HA6221	HR6221
I08:S059	I08 Rdr7 Duress	HA	HR	6222	HA6222	HR6222
I08:S060	I08 Rdr8 Duress	HA	HR	6223	HA6223	HR6223
I08:S061	I08 Rdr9 Duress	HA	HR	6224	HA6224	HR6224
I08:S062	I08 Rdr10 Duress	HA	HR	6225	HA6225	HR6225
I08:S063	I08 Rdr11 Duress	HA	HR	6226	HA6226	HR6226
I08:S064	I08 Rdr12 Duress	HA	HR	6227	HA6227	HR6227
I08:S065	I08 Rdr13 Duress	HA	HR	6228	HA6228	HR6228
I08:S066	I08 Rdr14 Duress	HA	HR	6229	HA6229	HR6229
I08:S067	I08 Rdr15 Duress	HA	HR	6230	HA6230	HR6230
I08:S068	I08 Rdr16 Duress	HA	HR	6231	HA6231	HR6231
I08:S069	I08 Rdr1 Fault	IA	IR	6232	IA6232	IR6232
I08:S070	I08 Rdr2 Fault	IA	IR	6233	IA6233	IR6233
I08:S071	I08 Rdr3 Fault	IA	IR	6234	IA6234	IR6234
I08:S072	I08 Rdr4 Fault	IA	IR	6235	IA6235	IR6235
I08:S073	I08 Rdr5 Fault	IA	IR	6236	IA6236	IR6236
I08:S074	I08 Rdr6 Fault	IA	IR	6237	IA6237	IR6237
I08:S075	I08 Rdr7 Fault	IA	IR	6238	IA6238	IR6238
I08:S076	I08 Rdr8 Fault	IA	IR	6239	IA6239	IR6239
I08:S077	I08 Rdr9 Fault	IA	IR	6240	IA6240	IR6240
I08:S078	I08 Rdr10 Fault	IA	IR	6241	IA6241	IR6241
I08:S079	I08 Rdr11 Fault	IA	IR	6242	IA6242	IR6242
I08:S080	I08 Rdr12 Fault	IA	IR	6243	IA6243	IR6243
I08:S081	I08 Rdr13 Fault	IA	IR	6244	IA6244	IR6244
I08:S082	I08 Rdr14 Fault	IA	IR	6245	IA6245	IR6245
I08:S083	I08 Rdr15 Fault	IA	IR	6246	IA6246	IR6246
I08:S084	I08 Rdr16 Fault	IA	IR	6247	IA6247	IR6247
I08:S085	I08 Spare2	UA	UR	6248	UA6248	UR6248
I08:S086	I08 Spare3	UA	UR	6249	UA6249	UR6249
I08:S087	I08 Spare4	UA	UR	6250	UA6250	UR6250
I08:S088	I08 Spare5	UA	UR	6251	UA6251	UR6251
I08:S089	I08 Spare6	UA	UR	6252	UA6252	UR6252
I08:S090	I08 Spare7	UA	UR	6253	UA6253	UR6253
I08:S091	I08 Spare8	UA	UR	6254	UA6254	UR6254
I08:S092	I08 Spare9	UA	UR	6255	UA6255	UR6255
I08:S093	I08 Spare10	UA	UR	6256	UA6256	UR6256
I09:Z001	Door1 Reed	UA	UR	6257	UA6257	UR6257
I09:Z002	Door2 Reed	UA	UR	6258	UA6258	UR6258
I09:Z003	Door1 Tongue	UA	UR	6259	UA6259	UR6259
I09:Z004	Door2 Tongue	UA	UR	6260	UA6260	UR6260
I09:Z005	Door1 Rex	UA	UR	6261	UA6261	UR6261
I09:Z006	Door2 Rex	UA	UR	6262	UA6262	UR6262
I09:Z007	Door1 Ren	UA	UR	6263	UA6263	UR6263
I09:Z008	Door2 Ren	UA	UR	6264	UA6264	UR6264
I09:Z009	Door3 Reed	UA	UR	6265	UA6265	UR6265
I09:Z010	Door4 Reed	UA	UR	6266	UA6266	UR6266
I09:Z011	Door3 Tongue	UA	UR	6267	UA6267	UR6267
I09:Z012	Door4 Tongue	UA	UR	6268	UA6268	UR6268
I09:Z013	Door3 Rex	UA	UR	6269	UA6269	UR6269
I09:Z014	Door4 Rex	UA	UR	6270	UA6270	UR6270
I09:Z015	Door3 Ren	UA	UR	6271	UA6271	UR6271
I09:Z016	Door4 Ren	UA	UR	6272	UA6272	UR6272
I09:Z017	Door5 Reed	UA	UR	6273	UA6273	UR6273
I09:Z018	Door6 Reed	UA	UR	6274	UA6274	UR6274
I09:Z019	Door5 Tongue	UA	UR	6275	UA6275	UR6275

Integriti SIA DECIMAL Map. V21

I09:Z020	Door6 Tongue	UA	UR	6276	UA6276	UR6276
I09:Z021	Door5 Rex	UA	UR	6277	UA6277	UR6277
I09:Z022	Door6 Rex	UA	UR	6278	UA6278	UR6278
I09:Z023	Door5 Ren	UA	UR	6279	UA6279	UR6279
I09:Z024	Door6 Ren	UA	UR	6280	UA6280	UR6280
I09:Z025	Door7 Reed	UA	UR	6281	UA6281	UR6281
I09:Z026	Door8 Reed	UA	UR	6282	UA6282	UR6282
I09:Z027	Door7 Tongue	UA	UR	6283	UA6283	UR6283
I09:Z028	Door8 Tongue	UA	UR	6284	UA6284	UR6284
I09:Z029	Door7 Rex	UA	UR	6285	UA6285	UR6285
I09:Z030	Door8 Rex	UA	UR	6286	UA6286	UR6286
I09:Z031	Door7 Ren	UA	UR	6287	UA6287	UR6287
I09:Z032	Door8 Ren	UA	UR	6288	UA6288	UR6288
I09:S001	I09 Cab Tamper	TA	TR	6289	TA6289	TR6289
I09:S002	I09 AC fail	AT	AR	6290	AT6290	AR6290
I09:S003	I09 Low Batt	YT	YR	6291	YT6291	YR6291
I09:S004	I09 LAN Fuse	YP	YQ	6292	YP6292	YQ6292
I09:S005	I09 DET Fuse	YP	YQ	6293	YP6293	YQ6293
I09:S006	I09 Low Volts	YP	YQ	6294	YP6294	YQ6294
I09:S007	I09 PS Fail	YP	YQ	6295	YP6295	YQ6295
I09:S008	I09 Batt Test	IA	IR	6296	IA6296	IR6296
I09:S009	I09 Unibus	EM	EN	6297	EM6297	EN6297
I09:S010	I09 Download Fail	YF	UX	6298	YF6298	UX6298
I09:S011	I09 Spare1	UA	UR	6299	UA6299	UR6299
I09:S012	I09 LAN Comms	EM	EN	6300	EM6300	EN6300
I09:S013	I09 Door1 Fault	IA	IR	6301	IA6301	IR6301
I09:S014	I09 Door2 Fault	IA	IR	6302	IA6302	IR6302
I09:S015	I09 Door3 Fault	IA	IR	6303	IA6303	IR6303
I09:S016	I09 Door4 Fault	IA	IR	6304	IA6304	IR6304
I09:S017	I09 Door5 Fault	IA	IR	6305	IA6305	IR6305
I09:S018	I09 Door6 Fault	IA	IR	6306	IA6306	IR6306
I09:S019	I09 Door7 Fault	IA	IR	6307	IA6307	IR6307
I09:S020	I09 Door8 Fault	IA	IR	6308	IA6308	IR6308
I09:S021	I09 Door1 Forced	DF	DR	6309	DF6309	DR6309
I09:S022	I09 Door2 Forced	DF	DR	6310	DF6310	DR6310
I09:S023	I09 Door3 Forced	DF	DR	6311	DF6311	DR6311
I09:S024	I09 Door4 Forced	DF	DR	6312	DF6312	DR6312
I09:S025	I09 Door5 Forced	DF	DR	6313	DF6313	DR6313
I09:S026	I09 Door6 Forced	DF	DR	6314	DF6314	DR6314
I09:S027	I09 Door7 Forced	DF	DR	6315	DF6315	DR6315
I09:S028	I09 Door8 Forced	DF	DR	6316	DF6316	DR6316
I09:S029	I09 Door1 DOTL	DL	DH	6317	DL6317	DH6317
I09:S030	I09 Door2 DOTL	DL	DH	6318	DL6318	DH6318
I09:S031	I09 Door3 DOTL	DL	DH	6319	DL6319	DH6319
I09:S032	I09 Door4 DOTL	DL	DH	6320	DL6320	DH6320
I09:S033	I09 Door5 DOTL	DL	DH	6321	DL6321	DH6321
I09:S034	I09 Door6 DOTL	DL	DH	6322	DL6322	DH6322
I09:S035	I09 Door7 DOTL	DL	DH	6323	DL6323	DH6323
I09:S036	I09 Door8 DOTL	DL	DH	6324	DL6324	DH6324
I09:S037	I09 Rdr1 Invalid	DD	DR	6325	DD6325	DR6325
I09:S038	I09 Rdr2 Invalid	DD	DR	6326	DD6326	DR6326
I09:S039	I09 Rdr3 Invalid	DD	DR	6327	DD6327	DR6327
I09:S040	I09 Rdr4 Invalid	DD	DR	6328	DD6328	DR6328
I09:S041	I09 Rdr5 Invalid	DD	DR	6329	DD6329	DR6329
I09:S042	I09 Rdr6 Invalid	DD	DR	6330	DD6330	DR6330
I09:S043	I09 Rdr7 Invalid	DD	DR	6331	DD6331	DR6331
I09:S044	I09 Rdr8 Invalid	DD	DR	6332	DD6332	DR6332
I09:S045	I09 Rdr9 Invalid	DD	DR	6333	DD6333	DR6333
I09:S046	I09 Rdr10 Invalid	DD	DR	6334	DD6334	DR6334
I09:S047	I09 Rdr11 Invalid	DD	DR	6335	DD6335	DR6335
I09:S048	I09 Rdr12 Invalid	DD	DR	6336	DD6336	DR6336
I09:S049	I09 Rdr13 Invalid	DD	DR	6337	DD6337	DR6337
I09:S050	I09 Rdr14 Invalid	DD	DR	6338	DD6338	DR6338
I09:S051	I09 Rdr15 Invalid	DD	DR	6339	DD6339	DR6339
I09:S052	I09 Rdr16 Invalid	DD	DR	6340	DD6340	DR6340
I09:S053	I09 Rdr1 Duress	HA	HR	6341	HA6341	HR6341
I09:S054	I09 Rdr2 Duress	HA	HR	6342	HA6342	HR6342
I09:S055	I09 Rdr3 Duress	HA	HR	6343	HA6343	HR6343
I09:S056	I09 Rdr4 Duress	HA	HR	6344	HA6344	HR6344
I09:S057	I09 Rdr5 Duress	HA	HR	6345	HA6345	HR6345

Integriti SIA DECIMAL Map. V21

I09:S058	I09 Rdr6 Duress	HA	HR	6346	HA6346	HR6346
I09:S059	I09 Rdr7 Duress	HA	HR	6347	HA6347	HR6347
I09:S060	I09 Rdr8 Duress	HA	HR	6348	HA6348	HR6348
I09:S061	I09 Rdr9 Duress	HA	HR	6349	HA6349	HR6349
I09:S062	I09 Rdr10 Duress	HA	HR	6350	HA6350	HR6350
I09:S063	I09 Rdr11 Duress	HA	HR	6351	HA6351	HR6351
I09:S064	I09 Rdr12 Duress	HA	HR	6352	HA6352	HR6352
I09:S065	I09 Rdr13 Duress	HA	HR	6353	HA6353	HR6353
I09:S066	I09 Rdr14 Duress	HA	HR	6354	HA6354	HR6354
I09:S067	I09 Rdr15 Duress	HA	HR	6355	HA6355	HR6355
I09:S068	I09 Rdr16 Duress	HA	HR	6356	HA6356	HR6356
I09:S069	I09 Rdr1 Fault	IA	IR	6357	IA6357	IR6357
I09:S070	I09 Rdr2 Fault	IA	IR	6358	IA6358	IR6358
I09:S071	I09 Rdr3 Fault	IA	IR	6359	IA6359	IR6359
I09:S072	I09 Rdr4 Fault	IA	IR	6360	IA6360	IR6360
I09:S073	I09 Rdr5 Fault	IA	IR	6361	IA6361	IR6361
I09:S074	I09 Rdr6 Fault	IA	IR	6362	IA6362	IR6362
I09:S075	I09 Rdr7 Fault	IA	IR	6363	IA6363	IR6363
I09:S076	I09 Rdr8 Fault	IA	IR	6364	IA6364	IR6364
I09:S077	I09 Rdr9 Fault	IA	IR	6365	IA6365	IR6365
I09:S078	I09 Rdr10 Fault	IA	IR	6366	IA6366	IR6366
I09:S079	I09 Rdr11 Fault	IA	IR	6367	IA6367	IR6367
I09:S080	I09 Rdr12 Fault	IA	IR	6368	IA6368	IR6368
I09:S081	I09 Rdr13 Fault	IA	IR	6369	IA6369	IR6369
I09:S082	I09 Rdr14 Fault	IA	IR	6370	IA6370	IR6370
I09:S083	I09 Rdr15 Fault	IA	IR	6371	IA6371	IR6371
I09:S084	I09 Rdr16 Fault	IA	IR	6372	IA6372	IR6372
I09:S085	I09 Spare2	UA	UR	6373	UA6373	UR6373
I09:S086	I09 Spare3	UA	UR	6374	UA6374	UR6374
I09:S087	I09 Spare4	UA	UR	6375	UA6375	UR6375
I09:S088	I09 Spare5	UA	UR	6376	UA6376	UR6376
I09:S089	I09 Spare6	UA	UR	6377	UA6377	UR6377
I09:S090	I09 Spare7	UA	UR	6378	UA6378	UR6378
I09:S091	I09 Spare8	UA	UR	6379	UA6379	UR6379
I09:S092	I09 Spare9	UA	UR	6380	UA6380	UR6380
I09:S093	I09 Spare10	UA	UR	6381	UA6381	UR6381
I10:Z001	Door1 Reed	UA	UR	6382	UA6382	UR6382
I10:Z002	Door2 Reed	UA	UR	6383	UA6383	UR6383
I10:Z003	Door1 Tongue	UA	UR	6384	UA6384	UR6384
I10:Z004	Door2 Tongue	UA	UR	6385	UA6385	UR6385
I10:Z005	Door1 Rex	UA	UR	6386	UA6386	UR6386
I10:Z006	Door2 Rex	UA	UR	6387	UA6387	UR6387
I10:Z007	Door1 Ren	UA	UR	6388	UA6388	UR6388
I10:Z008	Door2 Ren	UA	UR	6389	UA6389	UR6389
I10:Z009	Door3 Reed	UA	UR	6390	UA6390	UR6390
I10:Z010	Door4 Reed	UA	UR	6391	UA6391	UR6391
I10:Z011	Door3 Tongue	UA	UR	6392	UA6392	UR6392
I10:Z012	Door4 Tongue	UA	UR	6393	UA6393	UR6393
I10:Z013	Door3 Rex	UA	UR	6394	UA6394	UR6394
I10:Z014	Door4 Rex	UA	UR	6395	UA6395	UR6395
I10:Z015	Door3 Ren	UA	UR	6396	UA6396	UR6396
I10:Z016	Door4 Ren	UA	UR	6397	UA6397	UR6397
I10:Z017	Door5 Reed	UA	UR	6398	UA6398	UR6398
I10:Z018	Door6 Reed	UA	UR	6399	UA6399	UR6399
I10:Z019	Door5 Tongue	UA	UR	6400	UA6400	UR6400
I10:Z020	Door6 Tongue	UA	UR	6401	UA6401	UR6401
I10:Z021	Door5 Rex	UA	UR	6402	UA6402	UR6402
I10:Z022	Door6 Rex	UA	UR	6403	UA6403	UR6403
I10:Z023	Door5 Ren	UA	UR	6404	UA6404	UR6404
I10:Z024	Door6 Ren	UA	UR	6405	UA6405	UR6405
I10:Z025	Door7 Reed	UA	UR	6406	UA6406	UR6406
I10:Z026	Door8 Reed	UA	UR	6407	UA6407	UR6407
I10:Z027	Door7 Tongue	UA	UR	6408	UA6408	UR6408
I10:Z028	Door8 Tongue	UA	UR	6409	UA6409	UR6409
I10:Z029	Door7 Rex	UA	UR	6410	UA6410	UR6410
I10:Z030	Door8 Rex	UA	UR	6411	UA6411	UR6411
I10:Z031	Door7 Ren	UA	UR	6412	UA6412	UR6412
I10:Z032	Door8 Ren	UA	UR	6413	UA6413	UR6413
I10:S001	I10 Cab Tamper	TA	TR	6414	TA6414	TR6414
I10:S002	I10 AC fail	AT	AR	6415	AT6415	AR6415

Integriti SIA DECIMAL Map. V21

I10:S003	I10 Low Batt	YT	YR	6416	YT6416	YR6416
I10:S004	I10 LAN Fuse	YP	YQ	6417	YP6417	YQ6417
I10:S005	I10 DET Fuse	YP	YQ	6418	YP6418	YQ6418
I10:S006	I10 Low Volts	YP	YQ	6419	YP6419	YQ6419
I10:S007	I10 PS Fail	YP	YQ	6420	YP6420	YQ6420
I10:S008	I10 Batt Test	IA	IR	6421	IA6421	IR6421
I10:S009	I10 Unibus	EM	EN	6422	EM6422	EN6422
I10:S010	I10 Download Fail	YF	UX	6423	YF6423	UX6423
I10:S011	I10 Spare1	UA	UR	6424	UA6424	UR6424
I10:S012	I10 LAN Comms	EM	EN	6425	EM6425	EN6425
I10:S013	I10 Door1 Fault	IA	IR	6426	IA6426	IR6426
I10:S014	I10 Door2 Fault	IA	IR	6427	IA6427	IR6427
I10:S015	I10 Door3 Fault	IA	IR	6428	IA6428	IR6428
I10:S016	I10 Door4 Fault	IA	IR	6429	IA6429	IR6429
I10:S017	I10 Door5 Fault	IA	IR	6430	IA6430	IR6430
I10:S018	I10 Door6 Fault	IA	IR	6431	IA6431	IR6431
I10:S019	I10 Door7 Fault	IA	IR	6432	IA6432	IR6432
I10:S020	I10 Door8 Fault	IA	IR	6433	IA6433	IR6433
I10:S021	I10 Door1 Forced	DF	DR	6434	DF6434	DR6434
I10:S022	I10 Door2 Forced	DF	DR	6435	DF6435	DR6435
I10:S023	I10 Door3 Forced	DF	DR	6436	DF6436	DR6436
I10:S024	I10 Door4 Forced	DF	DR	6437	DF6437	DR6437
I10:S025	I10 Door5 Forced	DF	DR	6438	DF6438	DR6438
I10:S026	I10 Door6 Forced	DF	DR	6439	DF6439	DR6439
I10:S027	I10 Door7 Forced	DF	DR	6440	DF6440	DR6440
I10:S028	I10 Door8 Forced	DF	DR	6441	DF6441	DR6441
I10:S029	I10 Door1 DOTL	DL	DH	6442	DL6442	DH6442
I10:S030	I10 Door2 DOTL	DL	DH	6443	DL6443	DH6443
I10:S031	I10 Door3 DOTL	DL	DH	6444	DL6444	DH6444
I10:S032	I10 Door4 DOTL	DL	DH	6445	DL6445	DH6445
I10:S033	I10 Door5 DOTL	DL	DH	6446	DL6446	DH6446
I10:S034	I10 Door6 DOTL	DL	DH	6447	DL6447	DH6447
I10:S035	I10 Door7 DOTL	DL	DH	6448	DL6448	DH6448
I10:S036	I10 Door8 DOTL	DL	DH	6449	DL6449	DH6449
I10:S037	I10 Rdr1 Invalid	DD	DR	6450	DD6450	DR6450
I10:S038	I10 Rdr2 Invalid	DD	DR	6451	DD6451	DR6451
I10:S039	I10 Rdr3 Invalid	DD	DR	6452	DD6452	DR6452
I10:S040	I10 Rdr4 Invalid	DD	DR	6453	DD6453	DR6453
I10:S041	I10 Rdr5 Invalid	DD	DR	6454	DD6454	DR6454
I10:S042	I10 Rdr6 Invalid	DD	DR	6455	DD6455	DR6455
I10:S043	I10 Rdr7 Invalid	DD	DR	6456	DD6456	DR6456
I10:S044	I10 Rdr8 Invalid	DD	DR	6457	DD6457	DR6457
I10:S045	I10 Rdr9 Invalid	DD	DR	6458	DD6458	DR6458
I10:S046	I10 Rdr10 Invalid	DD	DR	6459	DD6459	DR6459
I10:S047	I10 Rdr11 Invalid	DD	DR	6460	DD6460	DR6460
I10:S048	I10 Rdr12 Invalid	DD	DR	6461	DD6461	DR6461
I10:S049	I10 Rdr13 Invalid	DD	DR	6462	DD6462	DR6462
I10:S050	I10 Rdr14 Invalid	DD	DR	6463	DD6463	DR6463
I10:S051	I10 Rdr15 Invalid	DD	DR	6464	DD6464	DR6464
I10:S052	I10 Rdr16 Invalid	DD	DR	6465	DD6465	DR6465
I10:S053	I10 Rdr1 Duress	HA	HR	6466	HA6466	HR6466
I10:S054	I10 Rdr2 Duress	HA	HR	6467	HA6467	HR6467
I10:S055	I10 Rdr3 Duress	HA	HR	6468	HA6468	HR6468
I10:S056	I10 Rdr4 Duress	HA	HR	6469	HA6469	HR6469
I10:S057	I10 Rdr5 Duress	HA	HR	6470	HA6470	HR6470
I10:S058	I10 Rdr6 Duress	HA	HR	6471	HA6471	HR6471
I10:S059	I10 Rdr7 Duress	HA	HR	6472	HA6472	HR6472
I10:S060	I10 Rdr8 Duress	HA	HR	6473	HA6473	HR6473
I10:S061	I10 Rdr9 Duress	HA	HR	6474	HA6474	HR6474
I10:S062	I10 Rdr10 Duress	HA	HR	6475	HA6475	HR6475
I10:S063	I10 Rdr11 Duress	HA	HR	6476	HA6476	HR6476
I10:S064	I10 Rdr12 Duress	HA	HR	6477	HA6477	HR6477
I10:S065	I10 Rdr13 Duress	HA	HR	6478	HA6478	HR6478
I10:S066	I10 Rdr14 Duress	HA	HR	6479	HA6479	HR6479
I10:S067	I10 Rdr15 Duress	HA	HR	6480	HA6480	HR6480
I10:S068	I10 Rdr16 Duress	HA	HR	6481	HA6481	HR6481
I10:S069	I10 Rdr1 Fault	IA	IR	6482	IA6482	IR6482
I10:S070	I10 Rdr2 Fault	IA	IR	6483	IA6483	IR6483
I10:S071	I10 Rdr3 Fault	IA	IR	6484	IA6484	IR6484
I10:S072	I10 Rdr4 Fault	IA	IR	6485	IA6485	IR6485

Integriti SIA DECIMAL Map. V21

I10:S073	I10 Rdr5 Fault	IA	IR	6486	IA6486	IR6486
I10:S074	I10 Rdr6 Fault	IA	IR	6487	IA6487	IR6487
I10:S075	I10 Rdr7 Fault	IA	IR	6488	IA6488	IR6488
I10:S076	I10 Rdr8 Fault	IA	IR	6489	IA6489	IR6489
I10:S077	I10 Rdr9 Fault	IA	IR	6490	IA6490	IR6490
I10:S078	I10 Rdr10 Fault	IA	IR	6491	IA6491	IR6491
I10:S079	I10 Rdr11 Fault	IA	IR	6492	IA6492	IR6492
I10:S080	I10 Rdr12 Fault	IA	IR	6493	IA6493	IR6493
I10:S081	I10 Rdr13 Fault	IA	IR	6494	IA6494	IR6494
I10:S082	I10 Rdr14 Fault	IA	IR	6495	IA6495	IR6495
I10:S083	I10 Rdr15 Fault	IA	IR	6496	IA6496	IR6496
I10:S084	I10 Rdr16 Fault	IA	IR	6497	IA6497	IR6497
I10:S085	I10 Spare2	UA	UR	6498	UA6498	UR6498
I10:S086	I10 Spare3	UA	UR	6499	UA6499	UR6499
I10:S087	I10 Spare4	UA	UR	6500	UA6500	UR6500
I10:S088	I10 Spare5	UA	UR	6501	UA6501	UR6501
I10:S089	I10 Spare6	UA	UR	6502	UA6502	UR6502
I10:S090	I10 Spare7	UA	UR	6503	UA6503	UR6503
I10:S091	I10 Spare8	UA	UR	6504	UA6504	UR6504
I10:S092	I10 Spare9	UA	UR	6505	UA6505	UR6505
I10:S093	I10 Spare10	UA	UR	6506	UA6506	UR6506
I11:Z001	Door1 Reed	UA	UR	6507	UA6507	UR6507
I11:Z002	Door2 Reed	UA	UR	6508	UA6508	UR6508
I11:Z003	Door1 Tongue	UA	UR	6509	UA6509	UR6509
I11:Z004	Door2 Tongue	UA	UR	6510	UA6510	UR6510
I11:Z005	Door1 Rex	UA	UR	6511	UA6511	UR6511
I11:Z006	Door2 Rex	UA	UR	6512	UA6512	UR6512
I11:Z007	Door1 Ren	UA	UR	6513	UA6513	UR6513
I11:Z008	Door2 Ren	UA	UR	6514	UA6514	UR6514
I11:Z009	Door3 Reed	UA	UR	6515	UA6515	UR6515
I11:Z010	Door4 Reed	UA	UR	6516	UA6516	UR6516
I11:Z011	Door3 Tongue	UA	UR	6517	UA6517	UR6517
I11:Z012	Door4 Tongue	UA	UR	6518	UA6518	UR6518
I11:Z013	Door3 Rex	UA	UR	6519	UA6519	UR6519
I11:Z014	Door4 Rex	UA	UR	6520	UA6520	UR6520
I11:Z015	Door3 Ren	UA	UR	6521	UA6521	UR6521
I11:Z016	Door4 Ren	UA	UR	6522	UA6522	UR6522
I11:Z017	Door5 Reed	UA	UR	6523	UA6523	UR6523
I11:Z018	Door6 Reed	UA	UR	6524	UA6524	UR6524
I11:Z019	Door5 Tongue	UA	UR	6525	UA6525	UR6525
I11:Z020	Door6 Tongue	UA	UR	6526	UA6526	UR6526
I11:Z021	Door5 Rex	UA	UR	6527	UA6527	UR6527
I11:Z022	Door6 Rex	UA	UR	6528	UA6528	UR6528
I11:Z023	Door5 Ren	UA	UR	6529	UA6529	UR6529
I11:Z024	Door6 Ren	UA	UR	6530	UA6530	UR6530
I11:Z025	Door7 Reed	UA	UR	6531	UA6531	UR6531
I11:Z026	Door8 Reed	UA	UR	6532	UA6532	UR6532
I11:Z027	Door7 Tongue	UA	UR	6533	UA6533	UR6533
I11:Z028	Door8 Tongue	UA	UR	6534	UA6534	UR6534
I11:Z029	Door7 Rex	UA	UR	6535	UA6535	UR6535
I11:Z030	Door8 Rex	UA	UR	6536	UA6536	UR6536
I11:Z031	Door7 Ren	UA	UR	6537	UA6537	UR6537
I11:Z032	Door8 Ren	UA	UR	6538	UA6538	UR6538
I11:S001	I11 Cab Tamper	TA	TR	6539	TA6539	TR6539
I11:S002	I11 AC fail	AT	AR	6540	AT6540	AR6540
I11:S003	I11 Low Batt	YT	YR	6541	YT6541	YR6541
I11:S004	I11 LAN Fuse	YP	YQ	6542	YP6542	YQ6542
I11:S005	I11 DET Fuse	YP	YQ	6543	YP6543	YQ6543
I11:S006	I11 Low Volts	YP	YQ	6544	YP6544	YQ6544
I11:S007	I11 PS Fail	YP	YQ	6545	YP6545	YQ6545
I11:S008	I11 Batt Test	IA	IR	6546	IA6546	IR6546
I11:S009	I11 Unibus	EM	EN	6547	EM6547	EN6547
I11:S010	I11 Download Fail	YF	UX	6548	YF6548	UX6548
I11:S011	I11 Spare1	UA	UR	6549	UA6549	UR6549
I11:S012	I11 LAN Comms	EM	EN	6550	EM6550	EN6550
I11:S013	I11 Door1 Fault	IA	IR	6551	IA6551	IR6551
I11:S014	I11 Door2 Fault	IA	IR	6552	IA6552	IR6552
I11:S015	I11 Door3 Fault	IA	IR	6553	IA6553	IR6553
I11:S016	I11 Door4 Fault	IA	IR	6554	IA6554	IR6554
I11:S017	I11 Door5 Fault	IA	IR	6555	IA6555	IR6555

Integriti SIA DECIMAL Map. V21

I11:S018	I11 Door6 Fault	IA	IR	6556	IA6556	IR6556
I11:S019	I11 Door7 Fault	IA	IR	6557	IA6557	IR6557
I11:S020	I11 Door8 Fault	IA	IR	6558	IA6558	IR6558
I11:S021	I11 Door1 Forced	DF	DR	6559	DF6559	DR6559
I11:S022	I11 Door2 Forced	DF	DR	6560	DF6560	DR6560
I11:S023	I11 Door3 Forced	DF	DR	6561	DF6561	DR6561
I11:S024	I11 Door4 Forced	DF	DR	6562	DF6562	DR6562
I11:S025	I11 Door5 Forced	DF	DR	6563	DF6563	DR6563
I11:S026	I11 Door6 Forced	DF	DR	6564	DF6564	DR6564
I11:S027	I11 Door7 Forced	DF	DR	6565	DF6565	DR6565
I11:S028	I11 Door8 Forced	DF	DR	6566	DF6566	DR6566
I11:S029	I11 Door1 DOTL	DL	DH	6567	DL6567	DH6567
I11:S030	I11 Door2 DOTL	DL	DH	6568	DL6568	DH6568
I11:S031	I11 Door3 DOTL	DL	DH	6569	DL6569	DH6569
I11:S032	I11 Door4 DOTL	DL	DH	6570	DL6570	DH6570
I11:S033	I11 Door5 DOTL	DL	DH	6571	DL6571	DH6571
I11:S034	I11 Door6 DOTL	DL	DH	6572	DL6572	DH6572
I11:S035	I11 Door7 DOTL	DL	DH	6573	DL6573	DH6573
I11:S036	I11 Door8 DOTL	DL	DH	6574	DL6574	DH6574
I11:S037	I11 Rdr1 Invalid	DD	DR	6575	DD6575	DR6575
I11:S038	I11 Rdr2 Invalid	DD	DR	6576	DD6576	DR6576
I11:S039	I11 Rdr3 Invalid	DD	DR	6577	DD6577	DR6577
I11:S040	I11 Rdr4 Invalid	DD	DR	6578	DD6578	DR6578
I11:S041	I11 Rdr5 Invalid	DD	DR	6579	DD6579	DR6579
I11:S042	I11 Rdr6 Invalid	DD	DR	6580	DD6580	DR6580
I11:S043	I11 Rdr7 Invalid	DD	DR	6581	DD6581	DR6581
I11:S044	I11 Rdr8 Invalid	DD	DR	6582	DD6582	DR6582
I11:S045	I11 Rdr9 Invalid	DD	DR	6583	DD6583	DR6583
I11:S046	I11 Rdr10 Invalid	DD	DR	6584	DD6584	DR6584
I11:S047	I11 Rdr11 Invalid	DD	DR	6585	DD6585	DR6585
I11:S048	I11 Rdr12 Invalid	DD	DR	6586	DD6586	DR6586
I11:S049	I11 Rdr13 Invalid	DD	DR	6587	DD6587	DR6587
I11:S050	I11 Rdr14 Invalid	DD	DR	6588	DD6588	DR6588
I11:S051	I11 Rdr15 Invalid	DD	DR	6589	DD6589	DR6589
I11:S052	I11 Rdr16 Invalid	DD	DR	6590	DD6590	DR6590
I11:S053	I11 Rdr1 Duress	HA	HR	6591	HA6591	HR6591
I11:S054	I11 Rdr2 Duress	HA	HR	6592	HA6592	HR6592
I11:S055	I11 Rdr3 Duress	HA	HR	6593	HA6593	HR6593
I11:S056	I11 Rdr4 Duress	HA	HR	6594	HA6594	HR6594
I11:S057	I11 Rdr5 Duress	HA	HR	6595	HA6595	HR6595
I11:S058	I11 Rdr6 Duress	HA	HR	6596	HA6596	HR6596
I11:S059	I11 Rdr7 Duress	HA	HR	6597	HA6597	HR6597
I11:S060	I11 Rdr8 Duress	HA	HR	6598	HA6598	HR6598
I11:S061	I11 Rdr9 Duress	HA	HR	6599	HA6599	HR6599
I11:S062	I11 Rdr10 Duress	HA	HR	6600	HA6600	HR6600
I11:S063	I11 Rdr11 Duress	HA	HR	6601	HA6601	HR6601
I11:S064	I11 Rdr12 Duress	HA	HR	6602	HA6602	HR6602
I11:S065	I11 Rdr13 Duress	HA	HR	6603	HA6603	HR6603
I11:S066	I11 Rdr14 Duress	HA	HR	6604	HA6604	HR6604
I11:S067	I11 Rdr15 Duress	HA	HR	6605	HA6605	HR6605
I11:S068	I11 Rdr16 Duress	HA	HR	6606	HA6606	HR6606
I11:S069	I11 Rdr1 Fault	IA	IR	6607	IA6607	IR6607
I11:S070	I11 Rdr2 Fault	IA	IR	6608	IA6608	IR6608
I11:S071	I11 Rdr3 Fault	IA	IR	6609	IA6609	IR6609
I11:S072	I11 Rdr4 Fault	IA	IR	6610	IA6610	IR6610
I11:S073	I11 Rdr5 Fault	IA	IR	6611	IA6611	IR6611
I11:S074	I11 Rdr6 Fault	IA	IR	6612	IA6612	IR6612
I11:S075	I11 Rdr7 Fault	IA	IR	6613	IA6613	IR6613
I11:S076	I11 Rdr8 Fault	IA	IR	6614	IA6614	IR6614
I11:S077	I11 Rdr9 Fault	IA	IR	6615	IA6615	IR6615
I11:S078	I11 Rdr10 Fault	IA	IR	6616	IA6616	IR6616
I11:S079	I11 Rdr11 Fault	IA	IR	6617	IA6617	IR6617
I11:S080	I11 Rdr12 Fault	IA	IR	6618	IA6618	IR6618
I11:S081	I11 Rdr13 Fault	IA	IR	6619	IA6619	IR6619
I11:S082	I11 Rdr14 Fault	IA	IR	6620	IA6620	IR6620
I11:S083	I11 Rdr15 Fault	IA	IR	6621	IA6621	IR6621
I11:S084	I11 Rdr16 Fault	IA	IR	6622	IA6622	IR6622
I11:S085	I11 Spare2	UA	UR	6623	UA6623	UR6623
I11:S086	I11 Spare3	UA	UR	6624	UA6624	UR6624
I11:S087	I11 Spare4	UA	UR	6625	UA6625	UR6625

Integriti SIA DECIMAL Map. V21

I11:S088	I11 Spare5	UA	UR	6626	UA6626	UR6626
I11:S089	I11 Spare6	UA	UR	6627	UA6627	UR6627
I11:S090	I11 Spare7	UA	UR	6628	UA6628	UR6628
I11:S091	I11 Spare8	UA	UR	6629	UA6629	UR6629
I11:S092	I11 Spare9	UA	UR	6630	UA6630	UR6630
I11:S093	I11 Spare10	UA	UR	6631	UA6631	UR6631
I12:Z001	Door1 Reed	UA	UR	6632	UA6632	UR6632
I12:Z002	Door2 Reed	UA	UR	6633	UA6633	UR6633
I12:Z003	Door1 Tongue	UA	UR	6634	UA6634	UR6634
I12:Z004	Door2 Tongue	UA	UR	6635	UA6635	UR6635
I12:Z005	Door1 Rex	UA	UR	6636	UA6636	UR6636
I12:Z006	Door2 Rex	UA	UR	6637	UA6637	UR6637
I12:Z007	Door1 Ren	UA	UR	6638	UA6638	UR6638
I12:Z008	Door2 Ren	UA	UR	6639	UA6639	UR6639
I12:Z009	Door3 Reed	UA	UR	6640	UA6640	UR6640
I12:Z010	Door4 Reed	UA	UR	6641	UA6641	UR6641
I12:Z011	Door3 Tongue	UA	UR	6642	UA6642	UR6642
I12:Z012	Door4 Tongue	UA	UR	6643	UA6643	UR6643
I12:Z013	Door3 Rex	UA	UR	6644	UA6644	UR6644
I12:Z014	Door4 Rex	UA	UR	6645	UA6645	UR6645
I12:Z015	Door3 Ren	UA	UR	6646	UA6646	UR6646
I12:Z016	Door4 Ren	UA	UR	6647	UA6647	UR6647
I12:Z017	Door5 Reed	UA	UR	6648	UA6648	UR6648
I12:Z018	Door6 Reed	UA	UR	6649	UA6649	UR6649
I12:Z019	Door5 Tongue	UA	UR	6650	UA6650	UR6650
I12:Z020	Door6 Tongue	UA	UR	6651	UA6651	UR6651
I12:Z021	Door5 Rex	UA	UR	6652	UA6652	UR6652
I12:Z022	Door6 Rex	UA	UR	6653	UA6653	UR6653
I12:Z023	Door5 Ren	UA	UR	6654	UA6654	UR6654
I12:Z024	Door6 Ren	UA	UR	6655	UA6655	UR6655
I12:Z025	Door7 Reed	UA	UR	6656	UA6656	UR6656
I12:Z026	Door8 Reed	UA	UR	6657	UA6657	UR6657
I12:Z027	Door7 Tongue	UA	UR	6658	UA6658	UR6658
I12:Z028	Door8 Tongue	UA	UR	6659	UA6659	UR6659
I12:Z029	Door7 Rex	UA	UR	6660	UA6660	UR6660
I12:Z030	Door8 Rex	UA	UR	6661	UA6661	UR6661
I12:Z031	Door7 Ren	UA	UR	6662	UA6662	UR6662
I12:Z032	Door8 Ren	UA	UR	6663	UA6663	UR6663
I12:S001	I12 Cab Tamper	TA	TR	6664	TA6664	TR6664
I12:S002	I12 AC fail	AT	AR	6665	AT6665	AR6665
I12:S003	I12 Low Batt	YT	YR	6666	YT6666	YR6666
I12:S004	I12 LAN Fuse	YP	YQ	6667	YP6667	YQ6667
I12:S005	I12 DET Fuse	YP	YQ	6668	YP6668	YQ6668
I12:S006	I12 Low Volts	YP	YQ	6669	YP6669	YQ6669
I12:S007	I12 PS Fail	YP	YQ	6670	YP6670	YQ6670
I12:S008	I12 Batt Test	IA	IR	6671	IA6671	IR6671
I12:S009	I12 Unibus	EM	EN	6672	EM6672	EN6672
I12:S010	I12 Download Fail	YF	UX	6673	YF6673	UX6673
I12:S011	I12 Spare1	UA	UR	6674	UA6674	UR6674
I12:S012	I12 LAN Comms	EM	EN	6675	EM6675	EN6675
I12:S013	I12 Door1 Fault	IA	IR	6676	IA6676	IR6676
I12:S014	I12 Door2 Fault	IA	IR	6677	IA6677	IR6677
I12:S015	I12 Door3 Fault	IA	IR	6678	IA6678	IR6678
I12:S016	I12 Door4 Fault	IA	IR	6679	IA6679	IR6679
I12:S017	I12 Door5 Fault	IA	IR	6680	IA6680	IR6680
I12:S018	I12 Door6 Fault	IA	IR	6681	IA6681	IR6681
I12:S019	I12 Door7 Fault	IA	IR	6682	IA6682	IR6682
I12:S020	I12 Door8 Fault	IA	IR	6683	IA6683	IR6683
I12:S021	I12 Door1 Forced	DF	DR	6684	DF6684	DR6684
I12:S022	I12 Door2 Forced	DF	DR	6685	DF6685	DR6685
I12:S023	I12 Door3 Forced	DF	DR	6686	DF6686	DR6686
I12:S024	I12 Door4 Forced	DF	DR	6687	DF6687	DR6687
I12:S025	I12 Door5 Forced	DF	DR	6688	DF6688	DR6688
I12:S026	I12 Door6 Forced	DF	DR	6689	DF6689	DR6689
I12:S027	I12 Door7 Forced	DF	DR	6690	DF6690	DR6690
I12:S028	I12 Door8 Forced	DF	DR	6691	DF6691	DR6691
I12:S029	I12 Door1 DOTL	DL	DH	6692	DL6692	DH6692
I12:S030	I12 Door2 DOTL	DL	DH	6693	DL6693	DH6693
I12:S031	I12 Door3 DOTL	DL	DH	6694	DL6694	DH6694
I12:S032	I12 Door4 DOTL	DL	DH	6695	DL6695	DH6695

Integriti SIA DECIMAL Map. V21

I12:S033	I12 Door5 DOTL	DL	DH	6696	DL6696	DH6696
I12:S034	I12 Door6 DOTL	DL	DH	6697	DL6697	DH6697
I12:S035	I12 Door7 DOTL	DL	DH	6698	DL6698	DH6698
I12:S036	I12 Door8 DOTL	DL	DH	6699	DL6699	DH6699
I12:S037	I12 Rdr1 Invalid	DD	DR	6700	DD6700	DR6700
I12:S038	I12 Rdr2 Invalid	DD	DR	6701	DD6701	DR6701
I12:S039	I12 Rdr3 Invalid	DD	DR	6702	DD6702	DR6702
I12:S040	I12 Rdr4 Invalid	DD	DR	6703	DD6703	DR6703
I12:S041	I12 Rdr5 Invalid	DD	DR	6704	DD6704	DR6704
I12:S042	I12 Rdr6 Invalid	DD	DR	6705	DD6705	DR6705
I12:S043	I12 Rdr7 Invalid	DD	DR	6706	DD6706	DR6706
I12:S044	I12 Rdr8 Invalid	DD	DR	6707	DD6707	DR6707
I12:S045	I12 Rdr9 Invalid	DD	DR	6708	DD6708	DR6708
I12:S046	I12 Rdr10 Invalid	DD	DR	6709	DD6709	DR6709
I12:S047	I12 Rdr11 Invalid	DD	DR	6710	DD6710	DR6710
I12:S048	I12 Rdr12 Invalid	DD	DR	6711	DD6711	DR6711
I12:S049	I12 Rdr13 Invalid	DD	DR	6712	DD6712	DR6712
I12:S050	I12 Rdr14 Invalid	DD	DR	6713	DD6713	DR6713
I12:S051	I12 Rdr15 Invalid	DD	DR	6714	DD6714	DR6714
I12:S052	I12 Rdr16 Invalid	DD	DR	6715	DD6715	DR6715
I12:S053	I12 Rdr1 Duress	HA	HR	6716	HA6716	HR6716
I12:S054	I12 Rdr2 Duress	HA	HR	6717	HA6717	HR6717
I12:S055	I12 Rdr3 Duress	HA	HR	6718	HA6718	HR6718
I12:S056	I12 Rdr4 Duress	HA	HR	6719	HA6719	HR6719
I12:S057	I12 Rdr5 Duress	HA	HR	6720	HA6720	HR6720
I12:S058	I12 Rdr6 Duress	HA	HR	6721	HA6721	HR6721
I12:S059	I12 Rdr7 Duress	HA	HR	6722	HA6722	HR6722
I12:S060	I12 Rdr8 Duress	HA	HR	6723	HA6723	HR6723
I12:S061	I12 Rdr9 Duress	HA	HR	6724	HA6724	HR6724
I12:S062	I12 Rdr10 Duress	HA	HR	6725	HA6725	HR6725
I12:S063	I12 Rdr11 Duress	HA	HR	6726	HA6726	HR6726
I12:S064	I12 Rdr12 Duress	HA	HR	6727	HA6727	HR6727
I12:S065	I12 Rdr13 Duress	HA	HR	6728	HA6728	HR6728
I12:S066	I12 Rdr14 Duress	HA	HR	6729	HA6729	HR6729
I12:S067	I12 Rdr15 Duress	HA	HR	6730	HA6730	HR6730
I12:S068	I12 Rdr16 Duress	HA	HR	6731	HA6731	HR6731
I12:S069	I12 Rdr1 Fault	IA	IR	6732	IA6732	IR6732
I12:S070	I12 Rdr2 Fault	IA	IR	6733	IA6733	IR6733
I12:S071	I12 Rdr3 Fault	IA	IR	6734	IA6734	IR6734
I12:S072	I12 Rdr4 Fault	IA	IR	6735	IA6735	IR6735
I12:S073	I12 Rdr5 Fault	IA	IR	6736	IA6736	IR6736
I12:S074	I12 Rdr6 Fault	IA	IR	6737	IA6737	IR6737
I12:S075	I12 Rdr7 Fault	IA	IR	6738	IA6738	IR6738
I12:S076	I12 Rdr8 Fault	IA	IR	6739	IA6739	IR6739
I12:S077	I12 Rdr9 Fault	IA	IR	6740	IA6740	IR6740
I12:S078	I12 Rdr10 Fault	IA	IR	6741	IA6741	IR6741
I12:S079	I12 Rdr11 Fault	IA	IR	6742	IA6742	IR6742
I12:S080	I12 Rdr12 Fault	IA	IR	6743	IA6743	IR6743
I12:S081	I12 Rdr13 Fault	IA	IR	6744	IA6744	IR6744
I12:S082	I12 Rdr14 Fault	IA	IR	6745	IA6745	IR6745
I12:S083	I12 Rdr15 Fault	IA	IR	6746	IA6746	IR6746
I12:S084	I12 Rdr16 Fault	IA	IR	6747	IA6747	IR6747
I12:S085	I12 Spare2	UA	UR	6748	UA6748	UR6748
I12:S086	I12 Spare3	UA	UR	6749	UA6749	UR6749
I12:S087	I12 Spare4	UA	UR	6750	UA6750	UR6750
I12:S088	I12 Spare5	UA	UR	6751	UA6751	UR6751
I12:S089	I12 Spare6	UA	UR	6752	UA6752	UR6752
I12:S090	I12 Spare7	UA	UR	6753	UA6753	UR6753
I12:S091	I12 Spare8	UA	UR	6754	UA6754	UR6754
I12:S092	I12 Spare9	UA	UR	6755	UA6755	UR6755
I12:S093	I12 Spare10	UA	UR	6756	UA6756	UR6756
I13:Z001	Door1 Reed	UA	UR	6757	UA6757	UR6757
I13:Z002	Door2 Reed	UA	UR	6758	UA6758	UR6758
I13:Z003	Door1 Tongue	UA	UR	6759	UA6759	UR6759
I13:Z004	Door2 Tongue	UA	UR	6760	UA6760	UR6760
I13:Z005	Door1 Rex	UA	UR	6761	UA6761	UR6761
I13:Z006	Door2 Rex	UA	UR	6762	UA6762	UR6762
I13:Z007	Door1 Ren	UA	UR	6763	UA6763	UR6763
I13:Z008	Door2 Ren	UA	UR	6764	UA6764	UR6764
I13:Z009	Door3 Reed	UA	UR	6765	UA6765	UR6765

I13:Z010	Door4 Reed	UA	UR	6766	UA6766	UR6766
I13:Z011	Door3 Tongue	UA	UR	6767	UA6767	UR6767
I13:Z012	Door4 Tongue	UA	UR	6768	UA6768	UR6768
I13:Z013	Door3 Rex	UA	UR	6769	UA6769	UR6769
I13:Z014	Door4 Rex	UA	UR	6770	UA6770	UR6770
I13:Z015	Door3 Ren	UA	UR	6771	UA6771	UR6771
I13:Z016	Door4 Ren	UA	UR	6772	UA6772	UR6772
I13:Z017	Door5 Reed	UA	UR	6773	UA6773	UR6773
I13:Z018	Door6 Reed	UA	UR	6774	UA6774	UR6774
I13:Z019	Door5 Tongue	UA	UR	6775	UA6775	UR6775
I13:Z020	Door6 Tongue	UA	UR	6776	UA6776	UR6776
I13:Z021	Door5 Rex	UA	UR	6777	UA6777	UR6777
I13:Z022	Door6 Rex	UA	UR	6778	UA6778	UR6778
I13:Z023	Door5 Ren	UA	UR	6779	UA6779	UR6779
I13:Z024	Door6 Ren	UA	UR	6780	UA6780	UR6780
I13:Z025	Door7 Reed	UA	UR	6781	UA6781	UR6781
I13:Z026	Door8 Reed	UA	UR	6782	UA6782	UR6782
I13:Z027	Door7 Tongue	UA	UR	6783	UA6783	UR6783
I13:Z028	Door8 Tongue	UA	UR	6784	UA6784	UR6784
I13:Z029	Door7 Rex	UA	UR	6785	UA6785	UR6785
I13:Z030	Door8 Rex	UA	UR	6786	UA6786	UR6786
I13:Z031	Door7 Ren	UA	UR	6787	UA6787	UR6787
I13:Z032	Door8 Ren	UA	UR	6788	UA6788	UR6788
I13:S001	I13 Cab Tamper	TA	TR	6789	TA6789	TR6789
I13:S002	I13 AC fail	AT	AR	6790	AT6790	AR6790
I13:S003	I13 Low Batt	YT	YR	6791	YT6791	YR6791
I13:S004	I13 LAN Fuse	YP	YQ	6792	YP6792	YQ6792
I13:S005	I13 DET Fuse	YP	YQ	6793	YP6793	YQ6793
I13:S006	I13 Low Volts	YP	YQ	6794	YP6794	YQ6794
I13:S007	I13 PS Fail	YP	YQ	6795	YP6795	YQ6795
I13:S008	I13 Batt Test	IA	IR	6796	IA6796	IR6796
I13:S009	I13 Unibus	EM	EN	6797	EM6797	EN6797
I13:S010	I13 Download Fail	YF	UX	6798	YF6798	UX6798
I13:S011	I13 Spare1	UA	UR	6799	UA6799	UR6799
I13:S012	I13 LAN Comms	EM	EN	6800	EM6800	EN6800
I13:S013	I13 Door1 Fault	IA	IR	6801	IA6801	IR6801
I13:S014	I13 Door2 Fault	IA	IR	6802	IA6802	IR6802
I13:S015	I13 Door3 Fault	IA	IR	6803	IA6803	IR6803
I13:S016	I13 Door4 Fault	IA	IR	6804	IA6804	IR6804
I13:S017	I13 Door5 Fault	IA	IR	6805	IA6805	IR6805
I13:S018	I13 Door6 Fault	IA	IR	6806	IA6806	IR6806
I13:S019	I13 Door7 Fault	IA	IR	6807	IA6807	IR6807
I13:S020	I13 Door8 Fault	IA	IR	6808	IA6808	IR6808
I13:S021	I13 Door1 Forced	DF	DR	6809	DF6809	DR6809
I13:S022	I13 Door2 Forced	DF	DR	6810	DF6810	DR6810
I13:S023	I13 Door3 Forced	DF	DR	6811	DF6811	DR6811
I13:S024	I13 Door4 Forced	DF	DR	6812	DF6812	DR6812
I13:S025	I13 Door5 Forced	DF	DR	6813	DF6813	DR6813
I13:S026	I13 Door6 Forced	DF	DR	6814	DF6814	DR6814
I13:S027	I13 Door7 Forced	DF	DR	6815	DF6815	DR6815
I13:S028	I13 Door8 Forced	DF	DR	6816	DF6816	DR6816
I13:S029	I13 Door1 DOTL	DL	DH	6817	DL6817	DH6817
I13:S030	I13 Door2 DOTL	DL	DH	6818	DL6818	DH6818
I13:S031	I13 Door3 DOTL	DL	DH	6819	DL6819	DH6819
I13:S032	I13 Door4 DOTL	DL	DH	6820	DL6820	DH6820
I13:S033	I13 Door5 DOTL	DL	DH	6821	DL6821	DH6821
I13:S034	I13 Door6 DOTL	DL	DH	6822	DL6822	DH6822
I13:S035	I13 Door7 DOTL	DL	DH	6823	DL6823	DH6823
I13:S036	I13 Door8 DOTL	DL	DH	6824	DL6824	DH6824
I13:S037	I13 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I13:S038	I13 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I13:S039	I13 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I13:S040	I13 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I13:S041	I13 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I13:S042	I13 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I13:S043	I13 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I13:S044	I13 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I13:S045	I13 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I13:S046	I13 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I13:S047	I13 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I13:S048	I13 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I13:S049	I13 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I13:S050	I13 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I13:S051	I13 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I13:S052	I13 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I13:S053	I13 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I13:S054	I13 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I13:S055	I13 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I13:S056	I13 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I13:S057	I13 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I13:S058	I13 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I13:S059	I13 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I13:S060	I13 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I13:S061	I13 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I13:S062	I13 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I13:S063	I13 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I13:S064	I13 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I13:S065	I13 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I13:S066	I13 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I13:S067	I13 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I13:S068	I13 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I13:S069	I13 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I13:S070	I13 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I13:S071	I13 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I13:S072	I13 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I13:S073	I13 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I13:S074	I13 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I13:S075	I13 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I13:S076	I13 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I13:S077	I13 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I13:S078	I13 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I13:S079	I13 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I13:S080	I13 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I13:S081	I13 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I13:S082	I13 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I13:S083	I13 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I13:S084	I13 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I13:S085	I13 Spare2	UA	UR	9999	UA9999	UR9999
I13:S086	I13 Spare3	UA	UR	9999	UA9999	UR9999
I13:S087	I13 Spare4	UA	UR	9999	UA9999	UR9999
I13:S088	I13 Spare5	UA	UR	9999	UA9999	UR9999
I13:S089	I13 Spare6	UA	UR	9999	UA9999	UR9999
I13:S090	I13 Spare7	UA	UR	9999	UA9999	UR9999
I13:S091	I13 Spare8	UA	UR	9999	UA9999	UR9999
I13:S092	I13 Spare9	UA	UR	9999	UA9999	UR9999
I13:S093	I13 Spare10	UA	UR	9999	UA9999	UR9999
I14:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I14:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I14:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I14:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I14:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I14:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I14:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I14:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I14:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I14:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I14:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I14:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I14:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I14:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I14:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I14:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I14:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I14:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I14:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I14:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I14:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I14:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I14:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I14:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999

I14:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I14:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I14:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I14:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I14:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I14:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I14:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I14:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I14:S001	I14 Cab Tamper	TA	TR	9999	TA9999	TR9999
I14:S002	I14 AC fail	AT	AR	9999	AT9999	AR9999
I14:S003	I14 Low Batt	YT	YR	9999	YT9999	YR9999
I14:S004	I14 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I14:S005	I14 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I14:S006	I14 Low Volts	YP	YQ	9999	YP9999	YQ9999
I14:S007	I14 PS Fail	YP	YQ	9999	YP9999	YQ9999
I14:S008	I14 Batt Test	IA	IR	9999	IA9999	IR9999
I14:S009	I14 Unibus	EM	EN	9999	EM9999	EN9999
I14:S010	I14 Download Fail	YF	UX	9999	YF9999	UX9999
I14:S011	I14 Spare1	UA	UR	9999	UA9999	UR9999
I14:S012	I14 LAN Comms	EM	EN	9999	EM9999	EN9999
I14:S013	I14 Door1 Fault	IA	IR	9999	IA9999	IR9999
I14:S014	I14 Door2 Fault	IA	IR	9999	IA9999	IR9999
I14:S015	I14 Door3 Fault	IA	IR	9999	IA9999	IR9999
I14:S016	I14 Door4 Fault	IA	IR	9999	IA9999	IR9999
I14:S017	I14 Door5 Fault	IA	IR	9999	IA9999	IR9999
I14:S018	I14 Door6 Fault	IA	IR	9999	IA9999	IR9999
I14:S019	I14 Door7 Fault	IA	IR	9999	IA9999	IR9999
I14:S020	I14 Door8 Fault	IA	IR	9999	IA9999	IR9999
I14:S021	I14 Door1 Forced	DF	DR	9999	DF9999	DR9999
I14:S022	I14 Door2 Forced	DF	DR	9999	DF9999	DR9999
I14:S023	I14 Door3 Forced	DF	DR	9999	DF9999	DR9999
I14:S024	I14 Door4 Forced	DF	DR	9999	DF9999	DR9999
I14:S025	I14 Door5 Forced	DF	DR	9999	DF9999	DR9999
I14:S026	I14 Door6 Forced	DF	DR	9999	DF9999	DR9999
I14:S027	I14 Door7 Forced	DF	DR	9999	DF9999	DR9999
I14:S028	I14 Door8 Forced	DF	DR	9999	DF9999	DR9999
I14:S029	I14 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I14:S030	I14 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I14:S031	I14 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I14:S032	I14 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I14:S033	I14 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I14:S034	I14 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I14:S035	I14 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I14:S036	I14 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I14:S037	I14 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I14:S038	I14 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I14:S039	I14 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I14:S040	I14 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I14:S041	I14 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I14:S042	I14 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I14:S043	I14 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I14:S044	I14 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I14:S045	I14 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I14:S046	I14 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I14:S047	I14 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I14:S048	I14 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I14:S049	I14 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I14:S050	I14 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I14:S051	I14 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I14:S052	I14 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I14:S053	I14 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I14:S054	I14 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I14:S055	I14 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I14:S056	I14 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I14:S057	I14 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I14:S058	I14 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I14:S059	I14 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I14:S060	I14 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I14:S061	I14 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I14:S062	I14 Rdr10 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I14:S063	I14 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I14:S064	I14 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I14:S065	I14 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I14:S066	I14 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I14:S067	I14 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I14:S068	I14 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I14:S069	I14 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I14:S070	I14 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I14:S071	I14 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I14:S072	I14 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I14:S073	I14 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I14:S074	I14 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I14:S075	I14 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I14:S076	I14 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I14:S077	I14 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I14:S078	I14 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I14:S079	I14 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I14:S080	I14 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I14:S081	I14 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I14:S082	I14 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I14:S083	I14 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I14:S084	I14 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I14:S085	I14 Spare2	UA	UR	9999	UA9999	UR9999
I14:S086	I14 Spare3	UA	UR	9999	UA9999	UR9999
I14:S087	I14 Spare4	UA	UR	9999	UA9999	UR9999
I14:S088	I14 Spare5	UA	UR	9999	UA9999	UR9999
I14:S089	I14 Spare6	UA	UR	9999	UA9999	UR9999
I14:S090	I14 Spare7	UA	UR	9999	UA9999	UR9999
I14:S091	I14 Spare8	UA	UR	9999	UA9999	UR9999
I14:S092	I14 Spare9	UA	UR	9999	UA9999	UR9999
I14:S093	I14 Spare10	UA	UR	9999	UA9999	UR9999
I15:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I15:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I15:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I15:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I15:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I15:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I15:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I15:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I15:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I15:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I15:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I15:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I15:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I15:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I15:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I15:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I15:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I15:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I15:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I15:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I15:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I15:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I15:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I15:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I15:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I15:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I15:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I15:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I15:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I15:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I15:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I15:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I15:S001	I15 Cab Tamper	TA	TR	9999	TA9999	TR9999
I15:S002	I15 AC fail	AT	AR	9999	AT9999	AR9999
I15:S003	I15 Low Batt	YT	YR	9999	YT9999	YR9999
I15:S004	I15 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I15:S005	I15 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I15:S006	I15 Low Volts	YP	YQ	9999	YP9999	YQ9999
I15:S007	I15 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

I15:S008	I15 Batt Test	IA	IR	9999	IA9999	IR9999
I15:S009	I15 Unibus	EM	EN	9999	EM9999	EN9999
I15:S010	I15 Download Fail	YF	UX	9999	YF9999	UX9999
I15:S011	I15 Spare1	UA	UR	9999	UA9999	UR9999
I15:S012	I15 LAN Comms	EM	EN	9999	EM9999	EN9999
I15:S013	I15 Door1 Fault	IA	IR	9999	IA9999	IR9999
I15:S014	I15 Door2 Fault	IA	IR	9999	IA9999	IR9999
I15:S015	I15 Door3 Fault	IA	IR	9999	IA9999	IR9999
I15:S016	I15 Door4 Fault	IA	IR	9999	IA9999	IR9999
I15:S017	I15 Door5 Fault	IA	IR	9999	IA9999	IR9999
I15:S018	I15 Door6 Fault	IA	IR	9999	IA9999	IR9999
I15:S019	I15 Door7 Fault	IA	IR	9999	IA9999	IR9999
I15:S020	I15 Door8 Fault	IA	IR	9999	IA9999	IR9999
I15:S021	I15 Door1 Forced	DF	DR	9999	DF9999	DR9999
I15:S022	I15 Door2 Forced	DF	DR	9999	DF9999	DR9999
I15:S023	I15 Door3 Forced	DF	DR	9999	DF9999	DR9999
I15:S024	I15 Door4 Forced	DF	DR	9999	DF9999	DR9999
I15:S025	I15 Door5 Forced	DF	DR	9999	DF9999	DR9999
I15:S026	I15 Door6 Forced	DF	DR	9999	DF9999	DR9999
I15:S027	I15 Door7 Forced	DF	DR	9999	DF9999	DR9999
I15:S028	I15 Door8 Forced	DF	DR	9999	DF9999	DR9999
I15:S029	I15 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I15:S030	I15 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I15:S031	I15 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I15:S032	I15 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I15:S033	I15 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I15:S034	I15 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I15:S035	I15 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I15:S036	I15 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I15:S037	I15 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I15:S038	I15 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I15:S039	I15 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I15:S040	I15 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I15:S041	I15 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I15:S042	I15 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I15:S043	I15 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I15:S044	I15 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I15:S045	I15 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I15:S046	I15 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I15:S047	I15 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I15:S048	I15 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I15:S049	I15 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I15:S050	I15 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I15:S051	I15 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I15:S052	I15 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I15:S053	I15 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I15:S054	I15 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I15:S055	I15 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I15:S056	I15 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I15:S057	I15 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I15:S058	I15 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I15:S059	I15 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I15:S060	I15 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I15:S061	I15 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I15:S062	I15 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I15:S063	I15 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I15:S064	I15 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I15:S065	I15 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I15:S066	I15 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I15:S067	I15 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I15:S068	I15 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I15:S069	I15 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I15:S070	I15 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I15:S071	I15 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I15:S072	I15 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I15:S073	I15 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I15:S074	I15 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I15:S075	I15 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I15:S076	I15 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I15:S077	I15 Rdr9 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I15:S078	I15 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I15:S079	I15 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I15:S080	I15 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I15:S081	I15 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I15:S082	I15 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I15:S083	I15 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I15:S084	I15 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I15:S085	I15 Spare2	UA	UR	9999	UA9999	UR9999
I15:S086	I15 Spare3	UA	UR	9999	UA9999	UR9999
I15:S087	I15 Spare4	UA	UR	9999	UA9999	UR9999
I15:S088	I15 Spare5	UA	UR	9999	UA9999	UR9999
I15:S089	I15 Spare6	UA	UR	9999	UA9999	UR9999
I15:S090	I15 Spare7	UA	UR	9999	UA9999	UR9999
I15:S091	I15 Spare8	UA	UR	9999	UA9999	UR9999
I15:S092	I15 Spare9	UA	UR	9999	UA9999	UR9999
I15:S093	I15 Spare10	UA	UR	9999	UA9999	UR9999
I16:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I16:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I16:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I16:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I16:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I16:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I16:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I16:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I16:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I16:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I16:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I16:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I16:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I16:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I16:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I16:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I16:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I16:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I16:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I16:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I16:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I16:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I16:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I16:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I16:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I16:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I16:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I16:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I16:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I16:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I16:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I16:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I16:S001	I16 Cab Tamper	TA	TR	9999	TA9999	TR9999
I16:S002	I16 AC fail	AT	AR	9999	AT9999	AR9999
I16:S003	I16 Low Batt	YT	YR	9999	YT9999	YR9999
I16:S004	I16 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I16:S005	I16 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I16:S006	I16 Low Volts	YP	YQ	9999	YP9999	YQ9999
I16:S007	I16 PS Fail	YP	YQ	9999	YP9999	YQ9999
I16:S008	I16 Batt Test	IA	IR	9999	IA9999	IR9999
I16:S009	I16 Unibus	EM	EN	9999	EM9999	EN9999
I16:S010	I16 Download Fail	YF	UX	9999	YF9999	UX9999
I16:S011	I16 Spare1	UA	UR	9999	UA9999	UR9999
I16:S012	I16 LAN Comms	EM	EN	9999	EM9999	EN9999
I16:S013	I16 Door1 Fault	IA	IR	9999	IA9999	IR9999
I16:S014	I16 Door2 Fault	IA	IR	9999	IA9999	IR9999
I16:S015	I16 Door3 Fault	IA	IR	9999	IA9999	IR9999
I16:S016	I16 Door4 Fault	IA	IR	9999	IA9999	IR9999
I16:S017	I16 Door5 Fault	IA	IR	9999	IA9999	IR9999
I16:S018	I16 Door6 Fault	IA	IR	9999	IA9999	IR9999
I16:S019	I16 Door7 Fault	IA	IR	9999	IA9999	IR9999
I16:S020	I16 Door8 Fault	IA	IR	9999	IA9999	IR9999
I16:S021	I16 Door1 Forced	DF	DR	9999	DF9999	DR9999
I16:S022	I16 Door2 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I16:S023	I16 Door3 Forced	DF	DR	9999	DF9999	DR9999
I16:S024	I16 Door4 Forced	DF	DR	9999	DF9999	DR9999
I16:S025	I16 Door5 Forced	DF	DR	9999	DF9999	DR9999
I16:S026	I16 Door6 Forced	DF	DR	9999	DF9999	DR9999
I16:S027	I16 Door7 Forced	DF	DR	9999	DF9999	DR9999
I16:S028	I16 Door8 Forced	DF	DR	9999	DF9999	DR9999
I16:S029	I16 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I16:S030	I16 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I16:S031	I16 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I16:S032	I16 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I16:S033	I16 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I16:S034	I16 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I16:S035	I16 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I16:S036	I16 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I16:S037	I16 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I16:S038	I16 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I16:S039	I16 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I16:S040	I16 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I16:S041	I16 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I16:S042	I16 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I16:S043	I16 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I16:S044	I16 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I16:S045	I16 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I16:S046	I16 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I16:S047	I16 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I16:S048	I16 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I16:S049	I16 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I16:S050	I16 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I16:S051	I16 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I16:S052	I16 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I16:S053	I16 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I16:S054	I16 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I16:S055	I16 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I16:S056	I16 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I16:S057	I16 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I16:S058	I16 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I16:S059	I16 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I16:S060	I16 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I16:S061	I16 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I16:S062	I16 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I16:S063	I16 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I16:S064	I16 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I16:S065	I16 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I16:S066	I16 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I16:S067	I16 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I16:S068	I16 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I16:S069	I16 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I16:S070	I16 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I16:S071	I16 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I16:S072	I16 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I16:S073	I16 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I16:S074	I16 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I16:S075	I16 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I16:S076	I16 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I16:S077	I16 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I16:S078	I16 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I16:S079	I16 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I16:S080	I16 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I16:S081	I16 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I16:S082	I16 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I16:S083	I16 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I16:S084	I16 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I16:S085	I16 Spare2	UA	UR	9999	UA9999	UR9999
I16:S086	I16 Spare3	UA	UR	9999	UA9999	UR9999
I16:S087	I16 Spare4	UA	UR	9999	UA9999	UR9999
I16:S088	I16 Spare5	UA	UR	9999	UA9999	UR9999
I16:S089	I16 Spare6	UA	UR	9999	UA9999	UR9999
I16:S090	I16 Spare7	UA	UR	9999	UA9999	UR9999
I16:S091	I16 Spare8	UA	UR	9999	UA9999	UR9999
I16:S092	I16 Spare9	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I16:S093	I16 Spare10	UA	UR	9999	UA9999	UR9999
I17:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I17:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I17:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I17:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I17:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I17:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I17:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I17:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I17:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I17:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I17:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I17:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I17:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I17:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I17:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I17:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I17:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I17:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I17:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I17:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I17:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I17:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I17:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I17:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I17:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I17:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I17:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I17:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I17:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I17:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I17:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I17:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I17:S001	I17 Cab Tamper	TA	TR	9999	TA9999	TR9999
I17:S002	I17 AC fail	AT	AR	9999	AT9999	AR9999
I17:S003	I17 Low Batt	YT	YR	9999	YT9999	YR9999
I17:S004	I17 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I17:S005	I17 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I17:S006	I17 Low Volts	YP	YQ	9999	YP9999	YQ9999
I17:S007	I17 PS Fail	YP	YQ	9999	YP9999	YQ9999
I17:S008	I17 Batt Test	IA	IR	9999	IA9999	IR9999
I17:S009	I17 Unibus	EM	EN	9999	EM9999	EN9999
I17:S010	I17 Download Fail	YF	UX	9999	YF9999	UX9999
I17:S011	I17 Spare1	UA	UR	9999	UA9999	UR9999
I17:S012	I17 LAN Comms	EM	EN	9999	EM9999	EN9999
I17:S013	I17 Door1 Fault	IA	IR	9999	IA9999	IR9999
I17:S014	I17 Door2 Fault	IA	IR	9999	IA9999	IR9999
I17:S015	I17 Door3 Fault	IA	IR	9999	IA9999	IR9999
I17:S016	I17 Door4 Fault	IA	IR	9999	IA9999	IR9999
I17:S017	I17 Door5 Fault	IA	IR	9999	IA9999	IR9999
I17:S018	I17 Door6 Fault	IA	IR	9999	IA9999	IR9999
I17:S019	I17 Door7 Fault	IA	IR	9999	IA9999	IR9999
I17:S020	I17 Door8 Fault	IA	IR	9999	IA9999	IR9999
I17:S021	I17 Door1 Forced	DF	DR	9999	DF9999	DR9999
I17:S022	I17 Door2 Forced	DF	DR	9999	DF9999	DR9999
I17:S023	I17 Door3 Forced	DF	DR	9999	DF9999	DR9999
I17:S024	I17 Door4 Forced	DF	DR	9999	DF9999	DR9999
I17:S025	I17 Door5 Forced	DF	DR	9999	DF9999	DR9999
I17:S026	I17 Door6 Forced	DF	DR	9999	DF9999	DR9999
I17:S027	I17 Door7 Forced	DF	DR	9999	DF9999	DR9999
I17:S028	I17 Door8 Forced	DF	DR	9999	DF9999	DR9999
I17:S029	I17 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I17:S030	I17 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I17:S031	I17 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I17:S032	I17 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I17:S033	I17 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I17:S034	I17 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I17:S035	I17 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I17:S036	I17 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I17:S037	I17 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I17:S038	I17 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I17:S039	I17 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I17:S040	I17 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I17:S041	I17 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I17:S042	I17 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I17:S043	I17 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I17:S044	I17 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I17:S045	I17 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I17:S046	I17 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I17:S047	I17 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I17:S048	I17 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I17:S049	I17 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I17:S050	I17 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I17:S051	I17 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I17:S052	I17 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I17:S053	I17 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I17:S054	I17 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I17:S055	I17 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I17:S056	I17 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I17:S057	I17 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I17:S058	I17 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I17:S059	I17 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I17:S060	I17 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I17:S061	I17 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I17:S062	I17 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I17:S063	I17 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I17:S064	I17 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I17:S065	I17 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I17:S066	I17 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I17:S067	I17 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I17:S068	I17 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I17:S069	I17 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I17:S070	I17 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I17:S071	I17 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I17:S072	I17 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I17:S073	I17 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I17:S074	I17 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I17:S075	I17 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I17:S076	I17 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I17:S077	I17 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I17:S078	I17 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I17:S079	I17 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I17:S080	I17 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I17:S081	I17 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I17:S082	I17 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I17:S083	I17 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I17:S084	I17 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I17:S085	I17 Spare2	UA	UR	9999	UA9999	UR9999
I17:S086	I17 Spare3	UA	UR	9999	UA9999	UR9999
I17:S087	I17 Spare4	UA	UR	9999	UA9999	UR9999
I17:S088	I17 Spare5	UA	UR	9999	UA9999	UR9999
I17:S089	I17 Spare6	UA	UR	9999	UA9999	UR9999
I17:S090	I17 Spare7	UA	UR	9999	UA9999	UR9999
I17:S091	I17 Spare8	UA	UR	9999	UA9999	UR9999
I17:S092	I17 Spare9	UA	UR	9999	UA9999	UR9999
I17:S093	I17 Spare10	UA	UR	9999	UA9999	UR9999
I18:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I18:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I18:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I18:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I18:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I18:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I18:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I18:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I18:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I18:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I18:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I18:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I18:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I18:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999

I18:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I18:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I18:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I18:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I18:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I18:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I18:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I18:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I18:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I18:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I18:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I18:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I18:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I18:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I18:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I18:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I18:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I18:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I18:S001	I18 Cab Tamper	TA	TR	9999	TA9999	TR9999
I18:S002	I18 AC fail	AT	AR	9999	AT9999	AR9999
I18:S003	I18 Low Batt	YT	YR	9999	YT9999	YR9999
I18:S004	I18 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I18:S005	I18 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I18:S006	I18 Low Volts	YP	YQ	9999	YP9999	YQ9999
I18:S007	I18 PS Fail	YP	YQ	9999	YP9999	YQ9999
I18:S008	I18 Batt Test	IA	IR	9999	IA9999	IR9999
I18:S009	I18 Unibus	EM	EN	9999	EM9999	EN9999
I18:S010	I18 Download Fail	YF	UX	9999	YF9999	UX9999
I18:S011	I18 Spare1	UA	UR	9999	UA9999	UR9999
I18:S012	I18 LAN Comms	EM	EN	9999	EM9999	EN9999
I18:S013	I18 Door1 Fault	IA	IR	9999	IA9999	IR9999
I18:S014	I18 Door2 Fault	IA	IR	9999	IA9999	IR9999
I18:S015	I18 Door3 Fault	IA	IR	9999	IA9999	IR9999
I18:S016	I18 Door4 Fault	IA	IR	9999	IA9999	IR9999
I18:S017	I18 Door5 Fault	IA	IR	9999	IA9999	IR9999
I18:S018	I18 Door6 Fault	IA	IR	9999	IA9999	IR9999
I18:S019	I18 Door7 Fault	IA	IR	9999	IA9999	IR9999
I18:S020	I18 Door8 Fault	IA	IR	9999	IA9999	IR9999
I18:S021	I18 Door1 Forced	DF	DR	9999	DF9999	DR9999
I18:S022	I18 Door2 Forced	DF	DR	9999	DF9999	DR9999
I18:S023	I18 Door3 Forced	DF	DR	9999	DF9999	DR9999
I18:S024	I18 Door4 Forced	DF	DR	9999	DF9999	DR9999
I18:S025	I18 Door5 Forced	DF	DR	9999	DF9999	DR9999
I18:S026	I18 Door6 Forced	DF	DR	9999	DF9999	DR9999
I18:S027	I18 Door7 Forced	DF	DR	9999	DF9999	DR9999
I18:S028	I18 Door8 Forced	DF	DR	9999	DF9999	DR9999
I18:S029	I18 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I18:S030	I18 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I18:S031	I18 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I18:S032	I18 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I18:S033	I18 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I18:S034	I18 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I18:S035	I18 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I18:S036	I18 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I18:S037	I18 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I18:S038	I18 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I18:S039	I18 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I18:S040	I18 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I18:S041	I18 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I18:S042	I18 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I18:S043	I18 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I18:S044	I18 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I18:S045	I18 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I18:S046	I18 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I18:S047	I18 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I18:S048	I18 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I18:S049	I18 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I18:S050	I18 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I18:S051	I18 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I18:S052	I18 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I18:S053	I18 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I18:S054	I18 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I18:S055	I18 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I18:S056	I18 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I18:S057	I18 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I18:S058	I18 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I18:S059	I18 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I18:S060	I18 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I18:S061	I18 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I18:S062	I18 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I18:S063	I18 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I18:S064	I18 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I18:S065	I18 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I18:S066	I18 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I18:S067	I18 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I18:S068	I18 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I18:S069	I18 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I18:S070	I18 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I18:S071	I18 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I18:S072	I18 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I18:S073	I18 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I18:S074	I18 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I18:S075	I18 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I18:S076	I18 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I18:S077	I18 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I18:S078	I18 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I18:S079	I18 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I18:S080	I18 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I18:S081	I18 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I18:S082	I18 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I18:S083	I18 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I18:S084	I18 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I18:S085	I18 Spare2	UA	UR	9999	UA9999	UR9999
I18:S086	I18 Spare3	UA	UR	9999	UA9999	UR9999
I18:S087	I18 Spare4	UA	UR	9999	UA9999	UR9999
I18:S088	I18 Spare5	UA	UR	9999	UA9999	UR9999
I18:S089	I18 Spare6	UA	UR	9999	UA9999	UR9999
I18:S090	I18 Spare7	UA	UR	9999	UA9999	UR9999
I18:S091	I18 Spare8	UA	UR	9999	UA9999	UR9999
I18:S092	I18 Spare9	UA	UR	9999	UA9999	UR9999
I18:S093	I18 Spare10	UA	UR	9999	UA9999	UR9999
I19:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I19:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I19:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I19:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I19:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I19:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I19:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I19:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I19:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I19:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I19:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I19:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I19:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I19:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I19:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I19:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I19:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I19:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I19:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I19:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I19:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I19:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I19:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I19:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I19:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I19:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I19:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I19:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I19:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I19:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I19:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I19:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I19:S001	I19 Cab Tamper	TA	TR	9999	TA9999	TR9999
I19:S002	I19 AC fail	AT	AR	9999	AT9999	AR9999
I19:S003	I19 Low Batt	YT	YR	9999	YT9999	YR9999
I19:S004	I19 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I19:S005	I19 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I19:S006	I19 Low Volts	YP	YQ	9999	YP9999	YQ9999
I19:S007	I19 PS Fail	YP	YQ	9999	YP9999	YQ9999
I19:S008	I19 Batt Test	IA	IR	9999	IA9999	IR9999
I19:S009	I19 Unibus	EM	EN	9999	EM9999	EN9999
I19:S010	I19 Download Fail	YF	UX	9999	YF9999	UX9999
I19:S011	I19 Spare1	UA	UR	9999	UA9999	UR9999
I19:S012	I19 LAN Comms	EM	EN	9999	EM9999	EN9999
I19:S013	I19 Door1 Fault	IA	IR	9999	IA9999	IR9999
I19:S014	I19 Door2 Fault	IA	IR	9999	IA9999	IR9999
I19:S015	I19 Door3 Fault	IA	IR	9999	IA9999	IR9999
I19:S016	I19 Door4 Fault	IA	IR	9999	IA9999	IR9999
I19:S017	I19 Door5 Fault	IA	IR	9999	IA9999	IR9999
I19:S018	I19 Door6 Fault	IA	IR	9999	IA9999	IR9999
I19:S019	I19 Door7 Fault	IA	IR	9999	IA9999	IR9999
I19:S020	I19 Door8 Fault	IA	IR	9999	IA9999	IR9999
I19:S021	I19 Door1 Forced	DF	DR	9999	DF9999	DR9999
I19:S022	I19 Door2 Forced	DF	DR	9999	DF9999	DR9999
I19:S023	I19 Door3 Forced	DF	DR	9999	DF9999	DR9999
I19:S024	I19 Door4 Forced	DF	DR	9999	DF9999	DR9999
I19:S025	I19 Door5 Forced	DF	DR	9999	DF9999	DR9999
I19:S026	I19 Door6 Forced	DF	DR	9999	DF9999	DR9999
I19:S027	I19 Door7 Forced	DF	DR	9999	DF9999	DR9999
I19:S028	I19 Door8 Forced	DF	DR	9999	DF9999	DR9999
I19:S029	I19 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I19:S030	I19 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I19:S031	I19 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I19:S032	I19 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I19:S033	I19 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I19:S034	I19 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I19:S035	I19 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I19:S036	I19 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I19:S037	I19 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I19:S038	I19 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I19:S039	I19 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I19:S040	I19 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I19:S041	I19 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I19:S042	I19 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I19:S043	I19 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I19:S044	I19 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I19:S045	I19 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I19:S046	I19 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I19:S047	I19 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I19:S048	I19 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I19:S049	I19 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I19:S050	I19 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I19:S051	I19 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I19:S052	I19 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I19:S053	I19 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I19:S054	I19 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I19:S055	I19 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I19:S056	I19 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I19:S057	I19 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I19:S058	I19 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I19:S059	I19 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I19:S060	I19 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I19:S061	I19 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I19:S062	I19 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I19:S063	I19 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I19:S064	I19 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I19:S065	I19 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I19:S066	I19 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I19:S067	I19 Rdr15 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I19:S068	I19 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I19:S069	I19 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I19:S070	I19 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I19:S071	I19 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I19:S072	I19 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I19:S073	I19 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I19:S074	I19 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I19:S075	I19 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I19:S076	I19 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I19:S077	I19 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I19:S078	I19 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I19:S079	I19 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I19:S080	I19 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I19:S081	I19 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I19:S082	I19 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I19:S083	I19 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I19:S084	I19 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I19:S085	I19 Spare2	UA	UR	9999	UA9999	UR9999
I19:S086	I19 Spare3	UA	UR	9999	UA9999	UR9999
I19:S087	I19 Spare4	UA	UR	9999	UA9999	UR9999
I19:S088	I19 Spare5	UA	UR	9999	UA9999	UR9999
I19:S089	I19 Spare6	UA	UR	9999	UA9999	UR9999
I19:S090	I19 Spare7	UA	UR	9999	UA9999	UR9999
I19:S091	I19 Spare8	UA	UR	9999	UA9999	UR9999
I19:S092	I19 Spare9	UA	UR	9999	UA9999	UR9999
I19:S093	I19 Spare10	UA	UR	9999	UA9999	UR9999
I20:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I20:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I20:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I20:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I20:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I20:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I20:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I20:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I20:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I20:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I20:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I20:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I20:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I20:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I20:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I20:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I20:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I20:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I20:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I20:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I20:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I20:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I20:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I20:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I20:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I20:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I20:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I20:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I20:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I20:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I20:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I20:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I20:S001	I20 Cab Tamper	TA	TR	9999	TA9999	TR9999
I20:S002	I20 AC fail	AT	AR	9999	AT9999	AR9999
I20:S003	I20 Low Batt	YT	YR	9999	YT9999	YR9999
I20:S004	I20 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I20:S005	I20 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I20:S006	I20 Low Volts	YP	YQ	9999	YP9999	YQ9999
I20:S007	I20 PS Fail	YP	YQ	9999	YP9999	YQ9999
I20:S008	I20 Batt Test	IA	IR	9999	IA9999	IR9999
I20:S009	I20 Unibus	EM	EN	9999	EM9999	EN9999
I20:S010	I20 Download Fail	YF	UX	9999	YF9999	UX9999
I20:S011	I20 Spare1	UA	UR	9999	UA9999	UR9999
I20:S012	I20 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

I20:S013	I20 Door1 Fault	IA	IR	9999	IA9999	IR9999
I20:S014	I20 Door2 Fault	IA	IR	9999	IA9999	IR9999
I20:S015	I20 Door3 Fault	IA	IR	9999	IA9999	IR9999
I20:S016	I20 Door4 Fault	IA	IR	9999	IA9999	IR9999
I20:S017	I20 Door5 Fault	IA	IR	9999	IA9999	IR9999
I20:S018	I20 Door6 Fault	IA	IR	9999	IA9999	IR9999
I20:S019	I20 Door7 Fault	IA	IR	9999	IA9999	IR9999
I20:S020	I20 Door8 Fault	IA	IR	9999	IA9999	IR9999
I20:S021	I20 Door1 Forced	DF	DR	9999	DF9999	DR9999
I20:S022	I20 Door2 Forced	DF	DR	9999	DF9999	DR9999
I20:S023	I20 Door3 Forced	DF	DR	9999	DF9999	DR9999
I20:S024	I20 Door4 Forced	DF	DR	9999	DF9999	DR9999
I20:S025	I20 Door5 Forced	DF	DR	9999	DF9999	DR9999
I20:S026	I20 Door6 Forced	DF	DR	9999	DF9999	DR9999
I20:S027	I20 Door7 Forced	DF	DR	9999	DF9999	DR9999
I20:S028	I20 Door8 Forced	DF	DR	9999	DF9999	DR9999
I20:S029	I20 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I20:S030	I20 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I20:S031	I20 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I20:S032	I20 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I20:S033	I20 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I20:S034	I20 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I20:S035	I20 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I20:S036	I20 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I20:S037	I20 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I20:S038	I20 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I20:S039	I20 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I20:S040	I20 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I20:S041	I20 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I20:S042	I20 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I20:S043	I20 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I20:S044	I20 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I20:S045	I20 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I20:S046	I20 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I20:S047	I20 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I20:S048	I20 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I20:S049	I20 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I20:S050	I20 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I20:S051	I20 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I20:S052	I20 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I20:S053	I20 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I20:S054	I20 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I20:S055	I20 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I20:S056	I20 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I20:S057	I20 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I20:S058	I20 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I20:S059	I20 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I20:S060	I20 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I20:S061	I20 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I20:S062	I20 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I20:S063	I20 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I20:S064	I20 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I20:S065	I20 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I20:S066	I20 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I20:S067	I20 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I20:S068	I20 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I20:S069	I20 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I20:S070	I20 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I20:S071	I20 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I20:S072	I20 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I20:S073	I20 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I20:S074	I20 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I20:S075	I20 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I20:S076	I20 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I20:S077	I20 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I20:S078	I20 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I20:S079	I20 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I20:S080	I20 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I20:S081	I20 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I20:S082	I20 Rdr14 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I20:S083	I20 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I20:S084	I20 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I20:S085	I20 Spare2	UA	UR	9999	UA9999	UR9999
I20:S086	I20 Spare3	UA	UR	9999	UA9999	UR9999
I20:S087	I20 Spare4	UA	UR	9999	UA9999	UR9999
I20:S088	I20 Spare5	UA	UR	9999	UA9999	UR9999
I20:S089	I20 Spare6	UA	UR	9999	UA9999	UR9999
I20:S090	I20 Spare7	UA	UR	9999	UA9999	UR9999
I20:S091	I20 Spare8	UA	UR	9999	UA9999	UR9999
I20:S092	I20 Spare9	UA	UR	9999	UA9999	UR9999
I20:S093	I20 Spare10	UA	UR	9999	UA9999	UR9999
I21:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I21:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I21:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I21:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I21:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I21:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I21:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I21:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I21:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I21:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I21:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I21:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I21:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I21:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I21:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I21:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I21:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I21:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I21:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I21:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I21:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I21:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I21:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I21:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I21:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I21:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I21:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I21:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I21:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I21:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I21:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I21:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I21:S001	I21 Cab Tamper	TA	TR	9999	TA9999	TR9999
I21:S002	I21 AC fail	AT	AR	9999	AT9999	AR9999
I21:S003	I21 Low Batt	YT	YR	9999	YT9999	YR9999
I21:S004	I21 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I21:S005	I21 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I21:S006	I21 Low Volts	YP	YQ	9999	YP9999	YQ9999
I21:S007	I21 PS Fail	YP	YQ	9999	YP9999	YQ9999
I21:S008	I21 Batt Test	IA	IR	9999	IA9999	IR9999
I21:S009	I21 Unibus	EM	EN	9999	EM9999	EN9999
I21:S010	I21 Download Fail	YF	UX	9999	YF9999	UX9999
I21:S011	I21 Spare1	UA	UR	9999	UA9999	UR9999
I21:S012	I21 LAN Comms	EM	EN	9999	EM9999	EN9999
I21:S013	I21 Door1 Fault	IA	IR	9999	IA9999	IR9999
I21:S014	I21 Door2 Fault	IA	IR	9999	IA9999	IR9999
I21:S015	I21 Door3 Fault	IA	IR	9999	IA9999	IR9999
I21:S016	I21 Door4 Fault	IA	IR	9999	IA9999	IR9999
I21:S017	I21 Door5 Fault	IA	IR	9999	IA9999	IR9999
I21:S018	I21 Door6 Fault	IA	IR	9999	IA9999	IR9999
I21:S019	I21 Door7 Fault	IA	IR	9999	IA9999	IR9999
I21:S020	I21 Door8 Fault	IA	IR	9999	IA9999	IR9999
I21:S021	I21 Door1 Forced	DF	DR	9999	DF9999	DR9999
I21:S022	I21 Door2 Forced	DF	DR	9999	DF9999	DR9999
I21:S023	I21 Door3 Forced	DF	DR	9999	DF9999	DR9999
I21:S024	I21 Door4 Forced	DF	DR	9999	DF9999	DR9999
I21:S025	I21 Door5 Forced	DF	DR	9999	DF9999	DR9999
I21:S026	I21 Door6 Forced	DF	DR	9999	DF9999	DR9999
I21:S027	I21 Door7 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I21:S028	I21 Door8 Forced	DF	DR	9999	DF9999	DR9999
I21:S029	I21 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I21:S030	I21 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I21:S031	I21 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I21:S032	I21 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I21:S033	I21 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I21:S034	I21 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I21:S035	I21 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I21:S036	I21 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I21:S037	I21 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I21:S038	I21 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I21:S039	I21 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I21:S040	I21 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I21:S041	I21 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I21:S042	I21 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I21:S043	I21 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I21:S044	I21 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I21:S045	I21 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I21:S046	I21 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I21:S047	I21 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I21:S048	I21 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I21:S049	I21 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I21:S050	I21 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I21:S051	I21 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I21:S052	I21 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I21:S053	I21 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I21:S054	I21 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I21:S055	I21 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I21:S056	I21 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I21:S057	I21 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I21:S058	I21 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I21:S059	I21 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I21:S060	I21 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I21:S061	I21 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I21:S062	I21 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I21:S063	I21 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I21:S064	I21 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I21:S065	I21 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I21:S066	I21 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I21:S067	I21 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I21:S068	I21 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I21:S069	I21 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I21:S070	I21 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I21:S071	I21 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I21:S072	I21 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I21:S073	I21 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I21:S074	I21 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I21:S075	I21 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I21:S076	I21 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I21:S077	I21 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I21:S078	I21 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I21:S079	I21 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I21:S080	I21 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I21:S081	I21 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I21:S082	I21 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I21:S083	I21 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I21:S084	I21 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I21:S085	I21 Spare2	UA	UR	9999	UA9999	UR9999
I21:S086	I21 Spare3	UA	UR	9999	UA9999	UR9999
I21:S087	I21 Spare4	UA	UR	9999	UA9999	UR9999
I21:S088	I21 Spare5	UA	UR	9999	UA9999	UR9999
I21:S089	I21 Spare6	UA	UR	9999	UA9999	UR9999
I21:S090	I21 Spare7	UA	UR	9999	UA9999	UR9999
I21:S091	I21 Spare8	UA	UR	9999	UA9999	UR9999
I21:S092	I21 Spare9	UA	UR	9999	UA9999	UR9999
I21:S093	I21 Spare10	UA	UR	9999	UA9999	UR9999
I22:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I22:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I22:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I22:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I22:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I22:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I22:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I22:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I22:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I22:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I22:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I22:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I22:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I22:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I22:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I22:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I22:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I22:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I22:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I22:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I22:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I22:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I22:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I22:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I22:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I22:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I22:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I22:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I22:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I22:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I22:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I22:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I22:S001	I22 Cab Tamper	TA	TR	9999	TA9999	TR9999
I22:S002	I22 AC fail	AT	AR	9999	AT9999	AR9999
I22:S003	I22 Low Batt	YT	YR	9999	YT9999	YR9999
I22:S004	I22 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I22:S005	I22 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I22:S006	I22 Low Volts	YP	YQ	9999	YP9999	YQ9999
I22:S007	I22 PS Fail	YP	YQ	9999	YP9999	YQ9999
I22:S008	I22 Batt Test	IA	IR	9999	IA9999	IR9999
I22:S009	I22 Unibus	EM	EN	9999	EM9999	EN9999
I22:S010	I22 Download Fail	YF	UX	9999	YF9999	UX9999
I22:S011	I22 Spare1	UA	UR	9999	UA9999	UR9999
I22:S012	I22 LAN Comms	EM	EN	9999	EM9999	EN9999
I22:S013	I22 Door1 Fault	IA	IR	9999	IA9999	IR9999
I22:S014	I22 Door2 Fault	IA	IR	9999	IA9999	IR9999
I22:S015	I22 Door3 Fault	IA	IR	9999	IA9999	IR9999
I22:S016	I22 Door4 Fault	IA	IR	9999	IA9999	IR9999
I22:S017	I22 Door5 Fault	IA	IR	9999	IA9999	IR9999
I22:S018	I22 Door6 Fault	IA	IR	9999	IA9999	IR9999
I22:S019	I22 Door7 Fault	IA	IR	9999	IA9999	IR9999
I22:S020	I22 Door8 Fault	IA	IR	9999	IA9999	IR9999
I22:S021	I22 Door1 Forced	DF	DR	9999	DF9999	DR9999
I22:S022	I22 Door2 Forced	DF	DR	9999	DF9999	DR9999
I22:S023	I22 Door3 Forced	DF	DR	9999	DF9999	DR9999
I22:S024	I22 Door4 Forced	DF	DR	9999	DF9999	DR9999
I22:S025	I22 Door5 Forced	DF	DR	9999	DF9999	DR9999
I22:S026	I22 Door6 Forced	DF	DR	9999	DF9999	DR9999
I22:S027	I22 Door7 Forced	DF	DR	9999	DF9999	DR9999
I22:S028	I22 Door8 Forced	DF	DR	9999	DF9999	DR9999
I22:S029	I22 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I22:S030	I22 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I22:S031	I22 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I22:S032	I22 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I22:S033	I22 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I22:S034	I22 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I22:S035	I22 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I22:S036	I22 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I22:S037	I22 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I22:S038	I22 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I22:S039	I22 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I22:S040	I22 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I22:S041	I22 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I22:S042	I22 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I22:S043	I22 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I22:S044	I22 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I22:S045	I22 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I22:S046	I22 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I22:S047	I22 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I22:S048	I22 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I22:S049	I22 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I22:S050	I22 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I22:S051	I22 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I22:S052	I22 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I22:S053	I22 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I22:S054	I22 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I22:S055	I22 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I22:S056	I22 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I22:S057	I22 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I22:S058	I22 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I22:S059	I22 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I22:S060	I22 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I22:S061	I22 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I22:S062	I22 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I22:S063	I22 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I22:S064	I22 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I22:S065	I22 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I22:S066	I22 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I22:S067	I22 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I22:S068	I22 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I22:S069	I22 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I22:S070	I22 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I22:S071	I22 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I22:S072	I22 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I22:S073	I22 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I22:S074	I22 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I22:S075	I22 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I22:S076	I22 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I22:S077	I22 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I22:S078	I22 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I22:S079	I22 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I22:S080	I22 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I22:S081	I22 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I22:S082	I22 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I22:S083	I22 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I22:S084	I22 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I22:S085	I22 Spare2	UA	UR	9999	UA9999	UR9999
I22:S086	I22 Spare3	UA	UR	9999	UA9999	UR9999
I22:S087	I22 Spare4	UA	UR	9999	UA9999	UR9999
I22:S088	I22 Spare5	UA	UR	9999	UA9999	UR9999
I22:S089	I22 Spare6	UA	UR	9999	UA9999	UR9999
I22:S090	I22 Spare7	UA	UR	9999	UA9999	UR9999
I22:S091	I22 Spare8	UA	UR	9999	UA9999	UR9999
I22:S092	I22 Spare9	UA	UR	9999	UA9999	UR9999
I22:S093	I22 Spare10	UA	UR	9999	UA9999	UR9999
I23:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I23:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I23:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I23:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I23:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I23:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I23:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I23:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I23:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I23:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I23:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I23:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I23:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I23:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I23:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I23:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I23:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I23:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I23:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I23:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I23:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I23:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I23:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I23:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I23:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I23:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I23:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I23:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I23:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I23:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I23:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I23:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I23:S001	I23 Cab Tamper	TA	TR	9999	TA9999	TR9999
I23:S002	I23 AC fail	AT	AR	9999	AT9999	AR9999
I23:S003	I23 Low Batt	YT	YR	9999	YT9999	YR9999
I23:S004	I23 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I23:S005	I23 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I23:S006	I23 Low Volts	YP	YQ	9999	YP9999	YQ9999
I23:S007	I23 PS Fail	YP	YQ	9999	YP9999	YQ9999
I23:S008	I23 Batt Test	IA	IR	9999	IA9999	IR9999
I23:S009	I23 Unibus	EM	EN	9999	EM9999	EN9999
I23:S010	I23 Download Fail	YF	UX	9999	YF9999	UX9999
I23:S011	I23 Spare1	UA	UR	9999	UA9999	UR9999
I23:S012	I23 LAN Comms	EM	EN	9999	EM9999	EN9999
I23:S013	I23 Door1 Fault	IA	IR	9999	IA9999	IR9999
I23:S014	I23 Door2 Fault	IA	IR	9999	IA9999	IR9999
I23:S015	I23 Door3 Fault	IA	IR	9999	IA9999	IR9999
I23:S016	I23 Door4 Fault	IA	IR	9999	IA9999	IR9999
I23:S017	I23 Door5 Fault	IA	IR	9999	IA9999	IR9999
I23:S018	I23 Door6 Fault	IA	IR	9999	IA9999	IR9999
I23:S019	I23 Door7 Fault	IA	IR	9999	IA9999	IR9999
I23:S020	I23 Door8 Fault	IA	IR	9999	IA9999	IR9999
I23:S021	I23 Door1 Forced	DF	DR	9999	DF9999	DR9999
I23:S022	I23 Door2 Forced	DF	DR	9999	DF9999	DR9999
I23:S023	I23 Door3 Forced	DF	DR	9999	DF9999	DR9999
I23:S024	I23 Door4 Forced	DF	DR	9999	DF9999	DR9999
I23:S025	I23 Door5 Forced	DF	DR	9999	DF9999	DR9999
I23:S026	I23 Door6 Forced	DF	DR	9999	DF9999	DR9999
I23:S027	I23 Door7 Forced	DF	DR	9999	DF9999	DR9999
I23:S028	I23 Door8 Forced	DF	DR	9999	DF9999	DR9999
I23:S029	I23 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I23:S030	I23 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I23:S031	I23 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I23:S032	I23 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I23:S033	I23 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I23:S034	I23 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I23:S035	I23 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I23:S036	I23 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I23:S037	I23 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I23:S038	I23 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I23:S039	I23 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I23:S040	I23 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I23:S041	I23 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I23:S042	I23 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I23:S043	I23 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I23:S044	I23 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I23:S045	I23 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I23:S046	I23 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I23:S047	I23 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I23:S048	I23 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I23:S049	I23 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I23:S050	I23 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I23:S051	I23 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I23:S052	I23 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I23:S053	I23 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I23:S054	I23 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I23:S055	I23 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I23:S056	I23 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I23:S057	I23 Rdr5 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I23:S058	I23 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I23:S059	I23 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I23:S060	I23 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I23:S061	I23 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I23:S062	I23 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I23:S063	I23 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I23:S064	I23 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I23:S065	I23 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I23:S066	I23 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I23:S067	I23 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I23:S068	I23 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I23:S069	I23 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I23:S070	I23 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I23:S071	I23 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I23:S072	I23 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I23:S073	I23 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I23:S074	I23 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I23:S075	I23 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I23:S076	I23 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I23:S077	I23 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I23:S078	I23 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I23:S079	I23 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I23:S080	I23 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I23:S081	I23 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I23:S082	I23 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I23:S083	I23 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I23:S084	I23 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I23:S085	I23 Spare2	UA	UR	9999	UA9999	UR9999
I23:S086	I23 Spare3	UA	UR	9999	UA9999	UR9999
I23:S087	I23 Spare4	UA	UR	9999	UA9999	UR9999
I23:S088	I23 Spare5	UA	UR	9999	UA9999	UR9999
I23:S089	I23 Spare6	UA	UR	9999	UA9999	UR9999
I23:S090	I23 Spare7	UA	UR	9999	UA9999	UR9999
I23:S091	I23 Spare8	UA	UR	9999	UA9999	UR9999
I23:S092	I23 Spare9	UA	UR	9999	UA9999	UR9999
I23:S093	I23 Spare10	UA	UR	9999	UA9999	UR9999
I24:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I24:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I24:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I24:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I24:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I24:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I24:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I24:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I24:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I24:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I24:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I24:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I24:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I24:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I24:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I24:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I24:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I24:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I24:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I24:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I24:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I24:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I24:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I24:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I24:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I24:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I24:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I24:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I24:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I24:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I24:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I24:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I24:S001	I24 Cab Tamper	TA	TR	9999	TA9999	TR9999
I24:S002	I24 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

I24:S003	I24 Low Batt	YT	YR	9999	YT9999	YR9999
I24:S004	I24 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I24:S005	I24 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I24:S006	I24 Low Volts	YP	YQ	9999	YP9999	YQ9999
I24:S007	I24 PS Fail	YP	YQ	9999	YP9999	YQ9999
I24:S008	I24 Batt Test	IA	IR	9999	IA9999	IR9999
I24:S009	I24 Unibus	EM	EN	9999	EM9999	EN9999
I24:S010	I24 Download Fail	YF	UX	9999	YF9999	UX9999
I24:S011	I24 Spare1	UA	UR	9999	UA9999	UR9999
I24:S012	I24 LAN Comms	EM	EN	9999	EM9999	EN9999
I24:S013	I24 Door1 Fault	IA	IR	9999	IA9999	IR9999
I24:S014	I24 Door2 Fault	IA	IR	9999	IA9999	IR9999
I24:S015	I24 Door3 Fault	IA	IR	9999	IA9999	IR9999
I24:S016	I24 Door4 Fault	IA	IR	9999	IA9999	IR9999
I24:S017	I24 Door5 Fault	IA	IR	9999	IA9999	IR9999
I24:S018	I24 Door6 Fault	IA	IR	9999	IA9999	IR9999
I24:S019	I24 Door7 Fault	IA	IR	9999	IA9999	IR9999
I24:S020	I24 Door8 Fault	IA	IR	9999	IA9999	IR9999
I24:S021	I24 Door1 Forced	DF	DR	9999	DF9999	DR9999
I24:S022	I24 Door2 Forced	DF	DR	9999	DF9999	DR9999
I24:S023	I24 Door3 Forced	DF	DR	9999	DF9999	DR9999
I24:S024	I24 Door4 Forced	DF	DR	9999	DF9999	DR9999
I24:S025	I24 Door5 Forced	DF	DR	9999	DF9999	DR9999
I24:S026	I24 Door6 Forced	DF	DR	9999	DF9999	DR9999
I24:S027	I24 Door7 Forced	DF	DR	9999	DF9999	DR9999
I24:S028	I24 Door8 Forced	DF	DR	9999	DF9999	DR9999
I24:S029	I24 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I24:S030	I24 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I24:S031	I24 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I24:S032	I24 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I24:S033	I24 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I24:S034	I24 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I24:S035	I24 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I24:S036	I24 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I24:S037	I24 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I24:S038	I24 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I24:S039	I24 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I24:S040	I24 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I24:S041	I24 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I24:S042	I24 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I24:S043	I24 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I24:S044	I24 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I24:S045	I24 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I24:S046	I24 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I24:S047	I24 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I24:S048	I24 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I24:S049	I24 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I24:S050	I24 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I24:S051	I24 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I24:S052	I24 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I24:S053	I24 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I24:S054	I24 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I24:S055	I24 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I24:S056	I24 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I24:S057	I24 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I24:S058	I24 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I24:S059	I24 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I24:S060	I24 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I24:S061	I24 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I24:S062	I24 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I24:S063	I24 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I24:S064	I24 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I24:S065	I24 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I24:S066	I24 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I24:S067	I24 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I24:S068	I24 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I24:S069	I24 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I24:S070	I24 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I24:S071	I24 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I24:S072	I24 Rdr4 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I24:S073	I24 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I24:S074	I24 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I24:S075	I24 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I24:S076	I24 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I24:S077	I24 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I24:S078	I24 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I24:S079	I24 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I24:S080	I24 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I24:S081	I24 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I24:S082	I24 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I24:S083	I24 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I24:S084	I24 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I24:S085	I24 Spare2	UA	UR	9999	UA9999	UR9999
I24:S086	I24 Spare3	UA	UR	9999	UA9999	UR9999
I24:S087	I24 Spare4	UA	UR	9999	UA9999	UR9999
I24:S088	I24 Spare5	UA	UR	9999	UA9999	UR9999
I24:S089	I24 Spare6	UA	UR	9999	UA9999	UR9999
I24:S090	I24 Spare7	UA	UR	9999	UA9999	UR9999
I24:S091	I24 Spare8	UA	UR	9999	UA9999	UR9999
I24:S092	I24 Spare9	UA	UR	9999	UA9999	UR9999
I24:S093	I24 Spare10	UA	UR	9999	UA9999	UR9999
I25:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I25:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I25:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I25:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I25:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I25:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I25:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I25:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I25:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I25:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I25:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I25:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I25:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I25:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I25:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I25:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I25:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I25:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I25:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I25:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I25:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I25:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I25:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I25:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I25:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I25:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I25:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I25:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I25:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I25:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I25:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I25:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I25:S001	I25 Cab Tamper	TA	TR	9999	TA9999	TR9999
I25:S002	I25 AC fail	AT	AR	9999	AT9999	AR9999
I25:S003	I25 Low Batt	YT	YR	9999	YT9999	YR9999
I25:S004	I25 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I25:S005	I25 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I25:S006	I25 Low Volts	YP	YQ	9999	YP9999	YQ9999
I25:S007	I25 PS Fail	YP	YQ	9999	YP9999	YQ9999
I25:S008	I25 Batt Test	IA	IR	9999	IA9999	IR9999
I25:S009	I25 Unibus	EM	EN	9999	EM9999	EN9999
I25:S010	I25 Download Fail	YF	UX	9999	YF9999	UX9999
I25:S011	I25 Spare1	UA	UR	9999	UA9999	UR9999
I25:S012	I25 LAN Comms	EM	EN	9999	EM9999	EN9999
I25:S013	I25 Door1 Fault	IA	IR	9999	IA9999	IR9999
I25:S014	I25 Door2 Fault	IA	IR	9999	IA9999	IR9999
I25:S015	I25 Door3 Fault	IA	IR	9999	IA9999	IR9999
I25:S016	I25 Door4 Fault	IA	IR	9999	IA9999	IR9999
I25:S017	I25 Door5 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I25:S018	I25 Door6 Fault	IA	IR	9999	IA9999	IR9999
I25:S019	I25 Door7 Fault	IA	IR	9999	IA9999	IR9999
I25:S020	I25 Door8 Fault	IA	IR	9999	IA9999	IR9999
I25:S021	I25 Door1 Forced	DF	DR	9999	DF9999	DR9999
I25:S022	I25 Door2 Forced	DF	DR	9999	DF9999	DR9999
I25:S023	I25 Door3 Forced	DF	DR	9999	DF9999	DR9999
I25:S024	I25 Door4 Forced	DF	DR	9999	DF9999	DR9999
I25:S025	I25 Door5 Forced	DF	DR	9999	DF9999	DR9999
I25:S026	I25 Door6 Forced	DF	DR	9999	DF9999	DR9999
I25:S027	I25 Door7 Forced	DF	DR	9999	DF9999	DR9999
I25:S028	I25 Door8 Forced	DF	DR	9999	DF9999	DR9999
I25:S029	I25 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I25:S030	I25 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I25:S031	I25 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I25:S032	I25 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I25:S033	I25 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I25:S034	I25 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I25:S035	I25 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I25:S036	I25 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I25:S037	I25 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I25:S038	I25 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I25:S039	I25 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I25:S040	I25 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I25:S041	I25 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I25:S042	I25 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I25:S043	I25 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I25:S044	I25 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I25:S045	I25 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I25:S046	I25 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I25:S047	I25 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I25:S048	I25 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I25:S049	I25 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I25:S050	I25 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I25:S051	I25 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I25:S052	I25 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I25:S053	I25 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I25:S054	I25 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I25:S055	I25 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I25:S056	I25 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I25:S057	I25 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I25:S058	I25 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I25:S059	I25 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I25:S060	I25 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I25:S061	I25 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I25:S062	I25 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I25:S063	I25 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I25:S064	I25 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I25:S065	I25 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I25:S066	I25 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I25:S067	I25 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I25:S068	I25 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I25:S069	I25 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I25:S070	I25 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I25:S071	I25 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I25:S072	I25 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I25:S073	I25 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I25:S074	I25 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I25:S075	I25 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I25:S076	I25 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I25:S077	I25 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I25:S078	I25 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I25:S079	I25 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I25:S080	I25 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I25:S081	I25 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I25:S082	I25 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I25:S083	I25 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I25:S084	I25 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I25:S085	I25 Spare2	UA	UR	9999	UA9999	UR9999
I25:S086	I25 Spare3	UA	UR	9999	UA9999	UR9999
I25:S087	I25 Spare4	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I25:S088	I25 Spare5	UA	UR	9999	UA9999	UR9999
I25:S089	I25 Spare6	UA	UR	9999	UA9999	UR9999
I25:S090	I25 Spare7	UA	UR	9999	UA9999	UR9999
I25:S091	I25 Spare8	UA	UR	9999	UA9999	UR9999
I25:S092	I25 Spare9	UA	UR	9999	UA9999	UR9999
I25:S093	I25 Spare10	UA	UR	9999	UA9999	UR9999
I26:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I26:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I26:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I26:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I26:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I26:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I26:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I26:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I26:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I26:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I26:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I26:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I26:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I26:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I26:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I26:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I26:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I26:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I26:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I26:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I26:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I26:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I26:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I26:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I26:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I26:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I26:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I26:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I26:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I26:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I26:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I26:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I26:S001	I26 Cab Tamper	TA	TR	9999	TA9999	TR9999
I26:S002	I26 AC fail	AT	AR	9999	AT9999	AR9999
I26:S003	I26 Low Batt	YT	YR	9999	YT9999	YR9999
I26:S004	I26 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I26:S005	I26 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I26:S006	I26 Low Volts	YP	YQ	9999	YP9999	YQ9999
I26:S007	I26 PS Fail	YP	YQ	9999	YP9999	YQ9999
I26:S008	I26 Batt Test	IA	IR	9999	IA9999	IR9999
I26:S009	I26 Unibus	EM	EN	9999	EM9999	EN9999
I26:S010	I26 Download Fail	YF	UX	9999	YF9999	UX9999
I26:S011	I26 Spare1	UA	UR	9999	UA9999	UR9999
I26:S012	I26 LAN Comms	EM	EN	9999	EM9999	EN9999
I26:S013	I26 Door1 Fault	IA	IR	9999	IA9999	IR9999
I26:S014	I26 Door2 Fault	IA	IR	9999	IA9999	IR9999
I26:S015	I26 Door3 Fault	IA	IR	9999	IA9999	IR9999
I26:S016	I26 Door4 Fault	IA	IR	9999	IA9999	IR9999
I26:S017	I26 Door5 Fault	IA	IR	9999	IA9999	IR9999
I26:S018	I26 Door6 Fault	IA	IR	9999	IA9999	IR9999
I26:S019	I26 Door7 Fault	IA	IR	9999	IA9999	IR9999
I26:S020	I26 Door8 Fault	IA	IR	9999	IA9999	IR9999
I26:S021	I26 Door1 Forced	DF	DR	9999	DF9999	DR9999
I26:S022	I26 Door2 Forced	DF	DR	9999	DF9999	DR9999
I26:S023	I26 Door3 Forced	DF	DR	9999	DF9999	DR9999
I26:S024	I26 Door4 Forced	DF	DR	9999	DF9999	DR9999
I26:S025	I26 Door5 Forced	DF	DR	9999	DF9999	DR9999
I26:S026	I26 Door6 Forced	DF	DR	9999	DF9999	DR9999
I26:S027	I26 Door7 Forced	DF	DR	9999	DF9999	DR9999
I26:S028	I26 Door8 Forced	DF	DR	9999	DF9999	DR9999
I26:S029	I26 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I26:S030	I26 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I26:S031	I26 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I26:S032	I26 Door4 DOTL	DL	DH	9999	DL9999	DH9999

Integriti SIA DECIMAL Map. V21

I26:S033	I26 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I26:S034	I26 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I26:S035	I26 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I26:S036	I26 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I26:S037	I26 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I26:S038	I26 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I26:S039	I26 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I26:S040	I26 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I26:S041	I26 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I26:S042	I26 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I26:S043	I26 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I26:S044	I26 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I26:S045	I26 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I26:S046	I26 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I26:S047	I26 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I26:S048	I26 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I26:S049	I26 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I26:S050	I26 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I26:S051	I26 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I26:S052	I26 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I26:S053	I26 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I26:S054	I26 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I26:S055	I26 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I26:S056	I26 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I26:S057	I26 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I26:S058	I26 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I26:S059	I26 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I26:S060	I26 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I26:S061	I26 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I26:S062	I26 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I26:S063	I26 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I26:S064	I26 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I26:S065	I26 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I26:S066	I26 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I26:S067	I26 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I26:S068	I26 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I26:S069	I26 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I26:S070	I26 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I26:S071	I26 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I26:S072	I26 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I26:S073	I26 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I26:S074	I26 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I26:S075	I26 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I26:S076	I26 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I26:S077	I26 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I26:S078	I26 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I26:S079	I26 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I26:S080	I26 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I26:S081	I26 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I26:S082	I26 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I26:S083	I26 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I26:S084	I26 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I26:S085	I26 Spare2	UA	UR	9999	UA9999	UR9999
I26:S086	I26 Spare3	UA	UR	9999	UA9999	UR9999
I26:S087	I26 Spare4	UA	UR	9999	UA9999	UR9999
I26:S088	I26 Spare5	UA	UR	9999	UA9999	UR9999
I26:S089	I26 Spare6	UA	UR	9999	UA9999	UR9999
I26:S090	I26 Spare7	UA	UR	9999	UA9999	UR9999
I26:S091	I26 Spare8	UA	UR	9999	UA9999	UR9999
I26:S092	I26 Spare9	UA	UR	9999	UA9999	UR9999
I26:S093	I26 Spare10	UA	UR	9999	UA9999	UR9999
I27:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I27:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I27:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I27:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I27:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I27:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I27:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I27:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I27:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I27:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I27:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I27:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I27:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I27:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I27:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I27:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I27:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I27:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I27:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I27:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I27:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I27:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I27:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I27:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I27:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I27:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I27:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I27:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I27:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I27:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I27:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I27:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I27:S001	I27 Cab Tamper	TA	TR	9999	TA9999	TR9999
I27:S002	I27 AC fail	AT	AR	9999	AT9999	AR9999
I27:S003	I27 Low Batt	YT	YR	9999	YT9999	YR9999
I27:S004	I27 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I27:S005	I27 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I27:S006	I27 Low Volts	YP	YQ	9999	YP9999	YQ9999
I27:S007	I27 PS Fail	YP	YQ	9999	YP9999	YQ9999
I27:S008	I27 Batt Test	IA	IR	9999	IA9999	IR9999
I27:S009	I27 Unibus	EM	EN	9999	EM9999	EN9999
I27:S010	I27 Download Fail	YF	UX	9999	YF9999	UX9999
I27:S011	I27 Spare1	UA	UR	9999	UA9999	UR9999
I27:S012	I27 LAN Comms	EM	EN	9999	EM9999	EN9999
I27:S013	I27 Door1 Fault	IA	IR	9999	IA9999	IR9999
I27:S014	I27 Door2 Fault	IA	IR	9999	IA9999	IR9999
I27:S015	I27 Door3 Fault	IA	IR	9999	IA9999	IR9999
I27:S016	I27 Door4 Fault	IA	IR	9999	IA9999	IR9999
I27:S017	I27 Door5 Fault	IA	IR	9999	IA9999	IR9999
I27:S018	I27 Door6 Fault	IA	IR	9999	IA9999	IR9999
I27:S019	I27 Door7 Fault	IA	IR	9999	IA9999	IR9999
I27:S020	I27 Door8 Fault	IA	IR	9999	IA9999	IR9999
I27:S021	I27 Door1 Forced	DF	DR	9999	DF9999	DR9999
I27:S022	I27 Door2 Forced	DF	DR	9999	DF9999	DR9999
I27:S023	I27 Door3 Forced	DF	DR	9999	DF9999	DR9999
I27:S024	I27 Door4 Forced	DF	DR	9999	DF9999	DR9999
I27:S025	I27 Door5 Forced	DF	DR	9999	DF9999	DR9999
I27:S026	I27 Door6 Forced	DF	DR	9999	DF9999	DR9999
I27:S027	I27 Door7 Forced	DF	DR	9999	DF9999	DR9999
I27:S028	I27 Door8 Forced	DF	DR	9999	DF9999	DR9999
I27:S029	I27 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I27:S030	I27 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I27:S031	I27 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I27:S032	I27 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I27:S033	I27 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I27:S034	I27 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I27:S035	I27 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I27:S036	I27 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I27:S037	I27 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I27:S038	I27 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I27:S039	I27 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I27:S040	I27 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I27:S041	I27 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I27:S042	I27 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I27:S043	I27 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I27:S044	I27 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I27:S045	I27 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I27:S046	I27 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I27:S047	I27 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I27:S048	I27 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I27:S049	I27 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I27:S050	I27 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I27:S051	I27 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I27:S052	I27 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I27:S053	I27 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I27:S054	I27 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I27:S055	I27 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I27:S056	I27 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I27:S057	I27 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I27:S058	I27 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I27:S059	I27 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I27:S060	I27 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I27:S061	I27 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I27:S062	I27 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I27:S063	I27 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I27:S064	I27 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I27:S065	I27 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I27:S066	I27 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I27:S067	I27 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I27:S068	I27 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I27:S069	I27 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I27:S070	I27 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I27:S071	I27 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I27:S072	I27 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I27:S073	I27 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I27:S074	I27 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I27:S075	I27 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I27:S076	I27 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I27:S077	I27 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I27:S078	I27 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I27:S079	I27 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I27:S080	I27 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I27:S081	I27 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I27:S082	I27 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I27:S083	I27 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I27:S084	I27 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I27:S085	I27 Spare2	UA	UR	9999	UA9999	UR9999
I27:S086	I27 Spare3	UA	UR	9999	UA9999	UR9999
I27:S087	I27 Spare4	UA	UR	9999	UA9999	UR9999
I27:S088	I27 Spare5	UA	UR	9999	UA9999	UR9999
I27:S089	I27 Spare6	UA	UR	9999	UA9999	UR9999
I27:S090	I27 Spare7	UA	UR	9999	UA9999	UR9999
I27:S091	I27 Spare8	UA	UR	9999	UA9999	UR9999
I27:S092	I27 Spare9	UA	UR	9999	UA9999	UR9999
I27:S093	I27 Spare10	UA	UR	9999	UA9999	UR9999
I28:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I28:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I28:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I28:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I28:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I28:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I28:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I28:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I28:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I28:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I28:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I28:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I28:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I28:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I28:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I28:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I28:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I28:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I28:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I28:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I28:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I28:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I28:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I28:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I28:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I28:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I28:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I28:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I28:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I28:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I28:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I28:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I28:S001	I28 Cab Tamper	TA	TR	9999	TA9999	TR9999
I28:S002	I28 AC fail	AT	AR	9999	AT9999	AR9999
I28:S003	I28 Low Batt	YT	YR	9999	YT9999	YR9999
I28:S004	I28 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I28:S005	I28 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I28:S006	I28 Low Volts	YP	YQ	9999	YP9999	YQ9999
I28:S007	I28 PS Fail	YP	YQ	9999	YP9999	YQ9999
I28:S008	I28 Batt Test	IA	IR	9999	IA9999	IR9999
I28:S009	I28 Unibus	EM	EN	9999	EM9999	EN9999
I28:S010	I28 Download Fail	YF	UX	9999	YF9999	UX9999
I28:S011	I28 Spare1	UA	UR	9999	UA9999	UR9999
I28:S012	I28 LAN Comms	EM	EN	9999	EM9999	EN9999
I28:S013	I28 Door1 Fault	IA	IR	9999	IA9999	IR9999
I28:S014	I28 Door2 Fault	IA	IR	9999	IA9999	IR9999
I28:S015	I28 Door3 Fault	IA	IR	9999	IA9999	IR9999
I28:S016	I28 Door4 Fault	IA	IR	9999	IA9999	IR9999
I28:S017	I28 Door5 Fault	IA	IR	9999	IA9999	IR9999
I28:S018	I28 Door6 Fault	IA	IR	9999	IA9999	IR9999
I28:S019	I28 Door7 Fault	IA	IR	9999	IA9999	IR9999
I28:S020	I28 Door8 Fault	IA	IR	9999	IA9999	IR9999
I28:S021	I28 Door1 Forced	DF	DR	9999	DF9999	DR9999
I28:S022	I28 Door2 Forced	DF	DR	9999	DF9999	DR9999
I28:S023	I28 Door3 Forced	DF	DR	9999	DF9999	DR9999
I28:S024	I28 Door4 Forced	DF	DR	9999	DF9999	DR9999
I28:S025	I28 Door5 Forced	DF	DR	9999	DF9999	DR9999
I28:S026	I28 Door6 Forced	DF	DR	9999	DF9999	DR9999
I28:S027	I28 Door7 Forced	DF	DR	9999	DF9999	DR9999
I28:S028	I28 Door8 Forced	DF	DR	9999	DF9999	DR9999
I28:S029	I28 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I28:S030	I28 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I28:S031	I28 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I28:S032	I28 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I28:S033	I28 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I28:S034	I28 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I28:S035	I28 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I28:S036	I28 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I28:S037	I28 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I28:S038	I28 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I28:S039	I28 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I28:S040	I28 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I28:S041	I28 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I28:S042	I28 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I28:S043	I28 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I28:S044	I28 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I28:S045	I28 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I28:S046	I28 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I28:S047	I28 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I28:S048	I28 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I28:S049	I28 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I28:S050	I28 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I28:S051	I28 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I28:S052	I28 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I28:S053	I28 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I28:S054	I28 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I28:S055	I28 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I28:S056	I28 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I28:S057	I28 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I28:S058	I28 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I28:S059	I28 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I28:S060	I28 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I28:S061	I28 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I28:S062	I28 Rdr10 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I28:S063	I28 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I28:S064	I28 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I28:S065	I28 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I28:S066	I28 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I28:S067	I28 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I28:S068	I28 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I28:S069	I28 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I28:S070	I28 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I28:S071	I28 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I28:S072	I28 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I28:S073	I28 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I28:S074	I28 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I28:S075	I28 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I28:S076	I28 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I28:S077	I28 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I28:S078	I28 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I28:S079	I28 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I28:S080	I28 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I28:S081	I28 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I28:S082	I28 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I28:S083	I28 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I28:S084	I28 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I28:S085	I28 Spare2	UA	UR	9999	UA9999	UR9999
I28:S086	I28 Spare3	UA	UR	9999	UA9999	UR9999
I28:S087	I28 Spare4	UA	UR	9999	UA9999	UR9999
I28:S088	I28 Spare5	UA	UR	9999	UA9999	UR9999
I28:S089	I28 Spare6	UA	UR	9999	UA9999	UR9999
I28:S090	I28 Spare7	UA	UR	9999	UA9999	UR9999
I28:S091	I28 Spare8	UA	UR	9999	UA9999	UR9999
I28:S092	I28 Spare9	UA	UR	9999	UA9999	UR9999
I28:S093	I28 Spare10	UA	UR	9999	UA9999	UR9999
I29:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I29:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I29:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I29:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I29:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I29:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I29:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I29:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I29:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I29:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I29:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I29:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I29:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I29:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I29:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I29:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I29:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I29:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I29:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I29:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I29:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I29:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I29:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I29:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I29:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I29:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I29:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I29:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I29:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I29:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I29:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I29:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I29:S001	I29 Cab Tamper	TA	TR	9999	TA9999	TR9999
I29:S002	I29 AC fail	AT	AR	9999	AT9999	AR9999
I29:S003	I29 Low Batt	YT	YR	9999	YT9999	YR9999
I29:S004	I29 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I29:S005	I29 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I29:S006	I29 Low Volts	YP	YQ	9999	YP9999	YQ9999
I29:S007	I29 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

I29:S008	I29 Batt Test	IA	IR	9999	IA9999	IR9999
I29:S009	I29 Unibus	EM	EN	9999	EM9999	EN9999
I29:S010	I29 Download Fail	YF	UX	9999	YF9999	UX9999
I29:S011	I29 Spare1	UA	UR	9999	UA9999	UR9999
I29:S012	I29 LAN Comms	EM	EN	9999	EM9999	EN9999
I29:S013	I29 Door1 Fault	IA	IR	9999	IA9999	IR9999
I29:S014	I29 Door2 Fault	IA	IR	9999	IA9999	IR9999
I29:S015	I29 Door3 Fault	IA	IR	9999	IA9999	IR9999
I29:S016	I29 Door4 Fault	IA	IR	9999	IA9999	IR9999
I29:S017	I29 Door5 Fault	IA	IR	9999	IA9999	IR9999
I29:S018	I29 Door6 Fault	IA	IR	9999	IA9999	IR9999
I29:S019	I29 Door7 Fault	IA	IR	9999	IA9999	IR9999
I29:S020	I29 Door8 Fault	IA	IR	9999	IA9999	IR9999
I29:S021	I29 Door1 Forced	DF	DR	9999	DF9999	DR9999
I29:S022	I29 Door2 Forced	DF	DR	9999	DF9999	DR9999
I29:S023	I29 Door3 Forced	DF	DR	9999	DF9999	DR9999
I29:S024	I29 Door4 Forced	DF	DR	9999	DF9999	DR9999
I29:S025	I29 Door5 Forced	DF	DR	9999	DF9999	DR9999
I29:S026	I29 Door6 Forced	DF	DR	9999	DF9999	DR9999
I29:S027	I29 Door7 Forced	DF	DR	9999	DF9999	DR9999
I29:S028	I29 Door8 Forced	DF	DR	9999	DF9999	DR9999
I29:S029	I29 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I29:S030	I29 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I29:S031	I29 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I29:S032	I29 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I29:S033	I29 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I29:S034	I29 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I29:S035	I29 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I29:S036	I29 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I29:S037	I29 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I29:S038	I29 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I29:S039	I29 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I29:S040	I29 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I29:S041	I29 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I29:S042	I29 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I29:S043	I29 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I29:S044	I29 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I29:S045	I29 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I29:S046	I29 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I29:S047	I29 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I29:S048	I29 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I29:S049	I29 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I29:S050	I29 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I29:S051	I29 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I29:S052	I29 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I29:S053	I29 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I29:S054	I29 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I29:S055	I29 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I29:S056	I29 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I29:S057	I29 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I29:S058	I29 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I29:S059	I29 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I29:S060	I29 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I29:S061	I29 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I29:S062	I29 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I29:S063	I29 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I29:S064	I29 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I29:S065	I29 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I29:S066	I29 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I29:S067	I29 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I29:S068	I29 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I29:S069	I29 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I29:S070	I29 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I29:S071	I29 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I29:S072	I29 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I29:S073	I29 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I29:S074	I29 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I29:S075	I29 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I29:S076	I29 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I29:S077	I29 Rdr9 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I29:S078	I29 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I29:S079	I29 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I29:S080	I29 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I29:S081	I29 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I29:S082	I29 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I29:S083	I29 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I29:S084	I29 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I29:S085	I29 Spare2	UA	UR	9999	UA9999	UR9999
I29:S086	I29 Spare3	UA	UR	9999	UA9999	UR9999
I29:S087	I29 Spare4	UA	UR	9999	UA9999	UR9999
I29:S088	I29 Spare5	UA	UR	9999	UA9999	UR9999
I29:S089	I29 Spare6	UA	UR	9999	UA9999	UR9999
I29:S090	I29 Spare7	UA	UR	9999	UA9999	UR9999
I29:S091	I29 Spare8	UA	UR	9999	UA9999	UR9999
I29:S092	I29 Spare9	UA	UR	9999	UA9999	UR9999
I29:S093	I29 Spare10	UA	UR	9999	UA9999	UR9999
I30:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I30:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I30:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I30:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I30:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I30:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I30:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I30:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I30:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I30:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I30:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I30:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I30:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I30:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I30:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I30:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I30:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I30:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I30:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I30:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I30:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I30:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I30:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I30:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I30:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I30:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I30:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I30:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I30:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I30:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I30:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I30:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I30:S001	I30 Cab Tamper	TA	TR	9999	TA9999	TR9999
I30:S002	I30 AC fail	AT	AR	9999	AT9999	AR9999
I30:S003	I30 Low Batt	YT	YR	9999	YT9999	YR9999
I30:S004	I30 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I30:S005	I30 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I30:S006	I30 Low Volts	YP	YQ	9999	YP9999	YQ9999
I30:S007	I30 PS Fail	YP	YQ	9999	YP9999	YQ9999
I30:S008	I30 Batt Test	IA	IR	9999	IA9999	IR9999
I30:S009	I30 Unibus	EM	EN	9999	EM9999	EN9999
I30:S010	I30 Download Fail	YF	UX	9999	YF9999	UX9999
I30:S011	I30 Spare1	UA	UR	9999	UA9999	UR9999
I30:S012	I30 LAN Comms	EM	EN	9999	EM9999	EN9999
I30:S013	I30 Door1 Fault	IA	IR	9999	IA9999	IR9999
I30:S014	I30 Door2 Fault	IA	IR	9999	IA9999	IR9999
I30:S015	I30 Door3 Fault	IA	IR	9999	IA9999	IR9999
I30:S016	I30 Door4 Fault	IA	IR	9999	IA9999	IR9999
I30:S017	I30 Door5 Fault	IA	IR	9999	IA9999	IR9999
I30:S018	I30 Door6 Fault	IA	IR	9999	IA9999	IR9999
I30:S019	I30 Door7 Fault	IA	IR	9999	IA9999	IR9999
I30:S020	I30 Door8 Fault	IA	IR	9999	IA9999	IR9999
I30:S021	I30 Door1 Forced	DF	DR	9999	DF9999	DR9999
I30:S022	I30 Door2 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I30:S023	I30 Door3 Forced	DF	DR	9999	DF9999	DR9999
I30:S024	I30 Door4 Forced	DF	DR	9999	DF9999	DR9999
I30:S025	I30 Door5 Forced	DF	DR	9999	DF9999	DR9999
I30:S026	I30 Door6 Forced	DF	DR	9999	DF9999	DR9999
I30:S027	I30 Door7 Forced	DF	DR	9999	DF9999	DR9999
I30:S028	I30 Door8 Forced	DF	DR	9999	DF9999	DR9999
I30:S029	I30 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I30:S030	I30 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I30:S031	I30 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I30:S032	I30 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I30:S033	I30 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I30:S034	I30 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I30:S035	I30 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I30:S036	I30 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I30:S037	I30 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I30:S038	I30 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I30:S039	I30 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I30:S040	I30 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I30:S041	I30 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I30:S042	I30 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I30:S043	I30 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I30:S044	I30 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I30:S045	I30 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I30:S046	I30 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I30:S047	I30 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I30:S048	I30 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I30:S049	I30 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I30:S050	I30 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I30:S051	I30 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I30:S052	I30 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I30:S053	I30 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I30:S054	I30 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I30:S055	I30 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I30:S056	I30 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I30:S057	I30 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I30:S058	I30 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I30:S059	I30 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I30:S060	I30 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I30:S061	I30 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I30:S062	I30 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I30:S063	I30 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I30:S064	I30 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I30:S065	I30 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I30:S066	I30 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I30:S067	I30 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I30:S068	I30 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I30:S069	I30 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I30:S070	I30 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I30:S071	I30 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I30:S072	I30 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I30:S073	I30 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I30:S074	I30 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I30:S075	I30 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I30:S076	I30 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I30:S077	I30 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I30:S078	I30 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I30:S079	I30 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I30:S080	I30 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I30:S081	I30 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I30:S082	I30 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I30:S083	I30 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I30:S084	I30 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I30:S085	I30 Spare2	UA	UR	9999	UA9999	UR9999
I30:S086	I30 Spare3	UA	UR	9999	UA9999	UR9999
I30:S087	I30 Spare4	UA	UR	9999	UA9999	UR9999
I30:S088	I30 Spare5	UA	UR	9999	UA9999	UR9999
I30:S089	I30 Spare6	UA	UR	9999	UA9999	UR9999
I30:S090	I30 Spare7	UA	UR	9999	UA9999	UR9999
I30:S091	I30 Spare8	UA	UR	9999	UA9999	UR9999
I30:S092	I30 Spare9	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I30:S093	I30 Spare10	UA	UR	9999	UA9999	UR9999
I31:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I31:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I31:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I31:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I31:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I31:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I31:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I31:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I31:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I31:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I31:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I31:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I31:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I31:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I31:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I31:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I31:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I31:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I31:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I31:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I31:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I31:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I31:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I31:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I31:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I31:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I31:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I31:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I31:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I31:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I31:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I31:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I31:S001	I31 Cab Tamper	TA	TR	9999	TA9999	TR9999
I31:S002	I31 AC fail	AT	AR	9999	AT9999	AR9999
I31:S003	I31 Low Batt	YT	YR	9999	YT9999	YR9999
I31:S004	I31 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I31:S005	I31 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I31:S006	I31 Low Volts	YP	YQ	9999	YP9999	YQ9999
I31:S007	I31 PS Fail	YP	YQ	9999	YP9999	YQ9999
I31:S008	I31 Batt Test	IA	IR	9999	IA9999	IR9999
I31:S009	I31 Unibus	EM	EN	9999	EM9999	EN9999
I31:S010	I31 Download Fail	YF	UX	9999	YF9999	UX9999
I31:S011	I31 Spare1	UA	UR	9999	UA9999	UR9999
I31:S012	I31 LAN Comms	EM	EN	9999	EM9999	EN9999
I31:S013	I31 Door1 Fault	IA	IR	9999	IA9999	IR9999
I31:S014	I31 Door2 Fault	IA	IR	9999	IA9999	IR9999
I31:S015	I31 Door3 Fault	IA	IR	9999	IA9999	IR9999
I31:S016	I31 Door4 Fault	IA	IR	9999	IA9999	IR9999
I31:S017	I31 Door5 Fault	IA	IR	9999	IA9999	IR9999
I31:S018	I31 Door6 Fault	IA	IR	9999	IA9999	IR9999
I31:S019	I31 Door7 Fault	IA	IR	9999	IA9999	IR9999
I31:S020	I31 Door8 Fault	IA	IR	9999	IA9999	IR9999
I31:S021	I31 Door1 Forced	DF	DR	9999	DF9999	DR9999
I31:S022	I31 Door2 Forced	DF	DR	9999	DF9999	DR9999
I31:S023	I31 Door3 Forced	DF	DR	9999	DF9999	DR9999
I31:S024	I31 Door4 Forced	DF	DR	9999	DF9999	DR9999
I31:S025	I31 Door5 Forced	DF	DR	9999	DF9999	DR9999
I31:S026	I31 Door6 Forced	DF	DR	9999	DF9999	DR9999
I31:S027	I31 Door7 Forced	DF	DR	9999	DF9999	DR9999
I31:S028	I31 Door8 Forced	DF	DR	9999	DF9999	DR9999
I31:S029	I31 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I31:S030	I31 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I31:S031	I31 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I31:S032	I31 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I31:S033	I31 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I31:S034	I31 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I31:S035	I31 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I31:S036	I31 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I31:S037	I31 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I31:S038	I31 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I31:S039	I31 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I31:S040	I31 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I31:S041	I31 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I31:S042	I31 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I31:S043	I31 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I31:S044	I31 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I31:S045	I31 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I31:S046	I31 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I31:S047	I31 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I31:S048	I31 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I31:S049	I31 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I31:S050	I31 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I31:S051	I31 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I31:S052	I31 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I31:S053	I31 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I31:S054	I31 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I31:S055	I31 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I31:S056	I31 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I31:S057	I31 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I31:S058	I31 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I31:S059	I31 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I31:S060	I31 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I31:S061	I31 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I31:S062	I31 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I31:S063	I31 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I31:S064	I31 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I31:S065	I31 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I31:S066	I31 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I31:S067	I31 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I31:S068	I31 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I31:S069	I31 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I31:S070	I31 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I31:S071	I31 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I31:S072	I31 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I31:S073	I31 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I31:S074	I31 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I31:S075	I31 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I31:S076	I31 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I31:S077	I31 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I31:S078	I31 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I31:S079	I31 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I31:S080	I31 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I31:S081	I31 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I31:S082	I31 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I31:S083	I31 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I31:S084	I31 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I31:S085	I31 Spare2	UA	UR	9999	UA9999	UR9999
I31:S086	I31 Spare3	UA	UR	9999	UA9999	UR9999
I31:S087	I31 Spare4	UA	UR	9999	UA9999	UR9999
I31:S088	I31 Spare5	UA	UR	9999	UA9999	UR9999
I31:S089	I31 Spare6	UA	UR	9999	UA9999	UR9999
I31:S090	I31 Spare7	UA	UR	9999	UA9999	UR9999
I31:S091	I31 Spare8	UA	UR	9999	UA9999	UR9999
I31:S092	I31 Spare9	UA	UR	9999	UA9999	UR9999
I31:S093	I31 Spare10	UA	UR	9999	UA9999	UR9999
I32:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I32:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I32:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I32:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I32:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I32:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I32:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I32:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I32:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I32:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I32:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I32:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I32:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I32:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I32:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I32:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I32:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I32:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I32:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I32:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I32:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I32:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I32:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I32:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I32:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I32:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I32:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I32:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I32:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I32:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I32:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I32:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I32:S001	I32 Cab Tamper	TA	TR	9999	TA9999	TR9999
I32:S002	I32 AC fail	AT	AR	9999	AT9999	AR9999
I32:S003	I32 Low Batt	YT	YR	9999	YT9999	YR9999
I32:S004	I32 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I32:S005	I32 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I32:S006	I32 Low Volts	YP	YQ	9999	YP9999	YQ9999
I32:S007	I32 PS Fail	YP	YQ	9999	YP9999	YQ9999
I32:S008	I32 Batt Test	IA	IR	9999	IA9999	IR9999
I32:S009	I32 Unibus	EM	EN	9999	EM9999	EN9999
I32:S010	I32 Download Fail	YF	UX	9999	YF9999	UX9999
I32:S011	I32 Spare1	UA	UR	9999	UA9999	UR9999
I32:S012	I32 LAN Comms	EM	EN	9999	EM9999	EN9999
I32:S013	I32 Door1 Fault	IA	IR	9999	IA9999	IR9999
I32:S014	I32 Door2 Fault	IA	IR	9999	IA9999	IR9999
I32:S015	I32 Door3 Fault	IA	IR	9999	IA9999	IR9999
I32:S016	I32 Door4 Fault	IA	IR	9999	IA9999	IR9999
I32:S017	I32 Door5 Fault	IA	IR	9999	IA9999	IR9999
I32:S018	I32 Door6 Fault	IA	IR	9999	IA9999	IR9999
I32:S019	I32 Door7 Fault	IA	IR	9999	IA9999	IR9999
I32:S020	I32 Door8 Fault	IA	IR	9999	IA9999	IR9999
I32:S021	I32 Door1 Forced	DF	DR	9999	DF9999	DR9999
I32:S022	I32 Door2 Forced	DF	DR	9999	DF9999	DR9999
I32:S023	I32 Door3 Forced	DF	DR	9999	DF9999	DR9999
I32:S024	I32 Door4 Forced	DF	DR	9999	DF9999	DR9999
I32:S025	I32 Door5 Forced	DF	DR	9999	DF9999	DR9999
I32:S026	I32 Door6 Forced	DF	DR	9999	DF9999	DR9999
I32:S027	I32 Door7 Forced	DF	DR	9999	DF9999	DR9999
I32:S028	I32 Door8 Forced	DF	DR	9999	DF9999	DR9999
I32:S029	I32 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I32:S030	I32 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I32:S031	I32 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I32:S032	I32 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I32:S033	I32 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I32:S034	I32 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I32:S035	I32 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I32:S036	I32 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I32:S037	I32 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I32:S038	I32 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I32:S039	I32 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I32:S040	I32 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I32:S041	I32 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I32:S042	I32 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I32:S043	I32 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I32:S044	I32 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I32:S045	I32 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I32:S046	I32 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I32:S047	I32 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I32:S048	I32 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I32:S049	I32 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I32:S050	I32 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I32:S051	I32 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I32:S052	I32 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I32:S053	I32 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I32:S054	I32 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I32:S055	I32 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I32:S056	I32 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I32:S057	I32 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I32:S058	I32 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I32:S059	I32 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I32:S060	I32 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I32:S061	I32 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I32:S062	I32 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I32:S063	I32 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I32:S064	I32 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I32:S065	I32 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I32:S066	I32 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I32:S067	I32 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I32:S068	I32 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I32:S069	I32 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I32:S070	I32 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I32:S071	I32 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I32:S072	I32 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I32:S073	I32 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I32:S074	I32 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I32:S075	I32 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I32:S076	I32 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I32:S077	I32 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I32:S078	I32 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I32:S079	I32 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I32:S080	I32 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I32:S081	I32 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I32:S082	I32 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I32:S083	I32 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I32:S084	I32 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I32:S085	I32 Spare2	UA	UR	9999	UA9999	UR9999
I32:S086	I32 Spare3	UA	UR	9999	UA9999	UR9999
I32:S087	I32 Spare4	UA	UR	9999	UA9999	UR9999
I32:S088	I32 Spare5	UA	UR	9999	UA9999	UR9999
I32:S089	I32 Spare6	UA	UR	9999	UA9999	UR9999
I32:S090	I32 Spare7	UA	UR	9999	UA9999	UR9999
I32:S091	I32 Spare8	UA	UR	9999	UA9999	UR9999
I32:S092	I32 Spare9	UA	UR	9999	UA9999	UR9999
I32:S093	I32 Spare10	UA	UR	9999	UA9999	UR9999
I33:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I33:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I33:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I33:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I33:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I33:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I33:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I33:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I33:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I33:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I33:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I33:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I33:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I33:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I33:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I33:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I33:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I33:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I33:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I33:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I33:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I33:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I33:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I33:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I33:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I33:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I33:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I33:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I33:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I33:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I33:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I33:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I33:S001	I33 Cab Tamper	TA	TR	9999	TA9999	TR9999
I33:S002	I33 AC fail	AT	AR	9999	AT9999	AR9999
I33:S003	I33 Low Batt	YT	YR	9999	YT9999	YR9999
I33:S004	I33 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I33:S005	I33 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I33:S006	I33 Low Volts	YP	YQ	9999	YP9999	YQ9999
I33:S007	I33 PS Fail	YP	YQ	9999	YP9999	YQ9999
I33:S008	I33 Batt Test	IA	IR	9999	IA9999	IR9999
I33:S009	I33 Unibus	EM	EN	9999	EM9999	EN9999
I33:S010	I33 Download Fail	YF	UX	9999	YF9999	UX9999
I33:S011	I33 Spare1	UA	UR	9999	UA9999	UR9999
I33:S012	I33 LAN Comms	EM	EN	9999	EM9999	EN9999
I33:S013	I33 Door1 Fault	IA	IR	9999	IA9999	IR9999
I33:S014	I33 Door2 Fault	IA	IR	9999	IA9999	IR9999
I33:S015	I33 Door3 Fault	IA	IR	9999	IA9999	IR9999
I33:S016	I33 Door4 Fault	IA	IR	9999	IA9999	IR9999
I33:S017	I33 Door5 Fault	IA	IR	9999	IA9999	IR9999
I33:S018	I33 Door6 Fault	IA	IR	9999	IA9999	IR9999
I33:S019	I33 Door7 Fault	IA	IR	9999	IA9999	IR9999
I33:S020	I33 Door8 Fault	IA	IR	9999	IA9999	IR9999
I33:S021	I33 Door1 Forced	DF	DR	9999	DF9999	DR9999
I33:S022	I33 Door2 Forced	DF	DR	9999	DF9999	DR9999
I33:S023	I33 Door3 Forced	DF	DR	9999	DF9999	DR9999
I33:S024	I33 Door4 Forced	DF	DR	9999	DF9999	DR9999
I33:S025	I33 Door5 Forced	DF	DR	9999	DF9999	DR9999
I33:S026	I33 Door6 Forced	DF	DR	9999	DF9999	DR9999
I33:S027	I33 Door7 Forced	DF	DR	9999	DF9999	DR9999
I33:S028	I33 Door8 Forced	DF	DR	9999	DF9999	DR9999
I33:S029	I33 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I33:S030	I33 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I33:S031	I33 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I33:S032	I33 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I33:S033	I33 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I33:S034	I33 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I33:S035	I33 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I33:S036	I33 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I33:S037	I33 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I33:S038	I33 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I33:S039	I33 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I33:S040	I33 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I33:S041	I33 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I33:S042	I33 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I33:S043	I33 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I33:S044	I33 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I33:S045	I33 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I33:S046	I33 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I33:S047	I33 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I33:S048	I33 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I33:S049	I33 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I33:S050	I33 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I33:S051	I33 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I33:S052	I33 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I33:S053	I33 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I33:S054	I33 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I33:S055	I33 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I33:S056	I33 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I33:S057	I33 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I33:S058	I33 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I33:S059	I33 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I33:S060	I33 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I33:S061	I33 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I33:S062	I33 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I33:S063	I33 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I33:S064	I33 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I33:S065	I33 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I33:S066	I33 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I33:S067	I33 Rdr15 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I33:S068	I33 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I33:S069	I33 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I33:S070	I33 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I33:S071	I33 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I33:S072	I33 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I33:S073	I33 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I33:S074	I33 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I33:S075	I33 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I33:S076	I33 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I33:S077	I33 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I33:S078	I33 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I33:S079	I33 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I33:S080	I33 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I33:S081	I33 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I33:S082	I33 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I33:S083	I33 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I33:S084	I33 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I33:S085	I33 Spare2	UA	UR	9999	UA9999	UR9999
I33:S086	I33 Spare3	UA	UR	9999	UA9999	UR9999
I33:S087	I33 Spare4	UA	UR	9999	UA9999	UR9999
I33:S088	I33 Spare5	UA	UR	9999	UA9999	UR9999
I33:S089	I33 Spare6	UA	UR	9999	UA9999	UR9999
I33:S090	I33 Spare7	UA	UR	9999	UA9999	UR9999
I33:S091	I33 Spare8	UA	UR	9999	UA9999	UR9999
I33:S092	I33 Spare9	UA	UR	9999	UA9999	UR9999
I33:S093	I33 Spare10	UA	UR	9999	UA9999	UR9999
I34:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I34:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I34:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I34:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I34:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I34:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I34:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I34:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I34:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I34:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I34:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I34:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I34:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I34:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I34:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I34:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I34:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I34:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I34:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I34:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I34:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I34:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I34:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I34:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I34:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I34:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I34:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I34:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I34:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I34:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I34:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I34:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I34:S001	I34 Cab Tamper	TA	TR	9999	TA9999	TR9999
I34:S002	I34 AC fail	AT	AR	9999	AT9999	AR9999
I34:S003	I34 Low Batt	YT	YR	9999	YT9999	YR9999
I34:S004	I34 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I34:S005	I34 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I34:S006	I34 Low Volts	YP	YQ	9999	YP9999	YQ9999
I34:S007	I34 PS Fail	YP	YQ	9999	YP9999	YQ9999
I34:S008	I34 Batt Test	IA	IR	9999	IA9999	IR9999
I34:S009	I34 Unibus	EM	EN	9999	EM9999	EN9999
I34:S010	I34 Download Fail	YF	UX	9999	YF9999	UX9999
I34:S011	I34 Spare1	UA	UR	9999	UA9999	UR9999
I34:S012	I34 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

I34:S013	I34 Door1 Fault	IA	IR	9999	IA9999	IR9999
I34:S014	I34 Door2 Fault	IA	IR	9999	IA9999	IR9999
I34:S015	I34 Door3 Fault	IA	IR	9999	IA9999	IR9999
I34:S016	I34 Door4 Fault	IA	IR	9999	IA9999	IR9999
I34:S017	I34 Door5 Fault	IA	IR	9999	IA9999	IR9999
I34:S018	I34 Door6 Fault	IA	IR	9999	IA9999	IR9999
I34:S019	I34 Door7 Fault	IA	IR	9999	IA9999	IR9999
I34:S020	I34 Door8 Fault	IA	IR	9999	IA9999	IR9999
I34:S021	I34 Door1 Forced	DF	DR	9999	DF9999	DR9999
I34:S022	I34 Door2 Forced	DF	DR	9999	DF9999	DR9999
I34:S023	I34 Door3 Forced	DF	DR	9999	DF9999	DR9999
I34:S024	I34 Door4 Forced	DF	DR	9999	DF9999	DR9999
I34:S025	I34 Door5 Forced	DF	DR	9999	DF9999	DR9999
I34:S026	I34 Door6 Forced	DF	DR	9999	DF9999	DR9999
I34:S027	I34 Door7 Forced	DF	DR	9999	DF9999	DR9999
I34:S028	I34 Door8 Forced	DF	DR	9999	DF9999	DR9999
I34:S029	I34 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I34:S030	I34 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I34:S031	I34 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I34:S032	I34 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I34:S033	I34 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I34:S034	I34 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I34:S035	I34 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I34:S036	I34 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I34:S037	I34 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I34:S038	I34 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I34:S039	I34 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I34:S040	I34 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I34:S041	I34 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I34:S042	I34 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I34:S043	I34 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I34:S044	I34 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I34:S045	I34 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I34:S046	I34 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I34:S047	I34 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I34:S048	I34 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I34:S049	I34 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I34:S050	I34 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I34:S051	I34 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I34:S052	I34 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I34:S053	I34 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I34:S054	I34 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I34:S055	I34 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I34:S056	I34 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I34:S057	I34 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I34:S058	I34 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I34:S059	I34 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I34:S060	I34 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I34:S061	I34 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I34:S062	I34 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I34:S063	I34 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I34:S064	I34 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I34:S065	I34 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I34:S066	I34 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I34:S067	I34 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I34:S068	I34 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I34:S069	I34 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I34:S070	I34 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I34:S071	I34 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I34:S072	I34 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I34:S073	I34 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I34:S074	I34 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I34:S075	I34 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I34:S076	I34 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I34:S077	I34 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I34:S078	I34 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I34:S079	I34 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I34:S080	I34 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I34:S081	I34 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I34:S082	I34 Rdr14 Fault	IA	IR	9999	IA9999	IR9999

I34:S083	I34 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I34:S084	I34 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I34:S085	I34 Spare2	UA	UR	9999	UA9999	UR9999
I34:S086	I34 Spare3	UA	UR	9999	UA9999	UR9999
I34:S087	I34 Spare4	UA	UR	9999	UA9999	UR9999
I34:S088	I34 Spare5	UA	UR	9999	UA9999	UR9999
I34:S089	I34 Spare6	UA	UR	9999	UA9999	UR9999
I34:S090	I34 Spare7	UA	UR	9999	UA9999	UR9999
I34:S091	I34 Spare8	UA	UR	9999	UA9999	UR9999
I34:S092	I34 Spare9	UA	UR	9999	UA9999	UR9999
I34:S093	I34 Spare10	UA	UR	9999	UA9999	UR9999
I35:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I35:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I35:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I35:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I35:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I35:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I35:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I35:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I35:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I35:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I35:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I35:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I35:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I35:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I35:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I35:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I35:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I35:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I35:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I35:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I35:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I35:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I35:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I35:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I35:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I35:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I35:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I35:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I35:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I35:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I35:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I35:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I35:S001	I35 Cab Tamper	TA	TR	9999	TA9999	TR9999
I35:S002	I35 AC fail	AT	AR	9999	AT9999	AR9999
I35:S003	I35 Low Batt	YT	YR	9999	YT9999	YR9999
I35:S004	I35 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I35:S005	I35 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I35:S006	I35 Low Volts	YP	YQ	9999	YP9999	YQ9999
I35:S007	I35 PS Fail	YP	YQ	9999	YP9999	YQ9999
I35:S008	I35 Batt Test	IA	IR	9999	IA9999	IR9999
I35:S009	I35 Unibus	EM	EN	9999	EM9999	EN9999
I35:S010	I35 Download Fail	YF	UX	9999	YF9999	UX9999
I35:S011	I35 Spare1	UA	UR	9999	UA9999	UR9999
I35:S012	I35 LAN Comms	EM	EN	9999	EM9999	EN9999
I35:S013	I35 Door1 Fault	IA	IR	9999	IA9999	IR9999
I35:S014	I35 Door2 Fault	IA	IR	9999	IA9999	IR9999
I35:S015	I35 Door3 Fault	IA	IR	9999	IA9999	IR9999
I35:S016	I35 Door4 Fault	IA	IR	9999	IA9999	IR9999
I35:S017	I35 Door5 Fault	IA	IR	9999	IA9999	IR9999
I35:S018	I35 Door6 Fault	IA	IR	9999	IA9999	IR9999
I35:S019	I35 Door7 Fault	IA	IR	9999	IA9999	IR9999
I35:S020	I35 Door8 Fault	IA	IR	9999	IA9999	IR9999
I35:S021	I35 Door1 Forced	DF	DR	9999	DF9999	DR9999
I35:S022	I35 Door2 Forced	DF	DR	9999	DF9999	DR9999
I35:S023	I35 Door3 Forced	DF	DR	9999	DF9999	DR9999
I35:S024	I35 Door4 Forced	DF	DR	9999	DF9999	DR9999
I35:S025	I35 Door5 Forced	DF	DR	9999	DF9999	DR9999
I35:S026	I35 Door6 Forced	DF	DR	9999	DF9999	DR9999
I35:S027	I35 Door7 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I35:S028	I35 Door8 Forced	DF	DR	9999	DF9999	DR9999
I35:S029	I35 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I35:S030	I35 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I35:S031	I35 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I35:S032	I35 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I35:S033	I35 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I35:S034	I35 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I35:S035	I35 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I35:S036	I35 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I35:S037	I35 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I35:S038	I35 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I35:S039	I35 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I35:S040	I35 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I35:S041	I35 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I35:S042	I35 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I35:S043	I35 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I35:S044	I35 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I35:S045	I35 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I35:S046	I35 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I35:S047	I35 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I35:S048	I35 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I35:S049	I35 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I35:S050	I35 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I35:S051	I35 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I35:S052	I35 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I35:S053	I35 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I35:S054	I35 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I35:S055	I35 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I35:S056	I35 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I35:S057	I35 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I35:S058	I35 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I35:S059	I35 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I35:S060	I35 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I35:S061	I35 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I35:S062	I35 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I35:S063	I35 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I35:S064	I35 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I35:S065	I35 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I35:S066	I35 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I35:S067	I35 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I35:S068	I35 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I35:S069	I35 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I35:S070	I35 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I35:S071	I35 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I35:S072	I35 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I35:S073	I35 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I35:S074	I35 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I35:S075	I35 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I35:S076	I35 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I35:S077	I35 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I35:S078	I35 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I35:S079	I35 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I35:S080	I35 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I35:S081	I35 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I35:S082	I35 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I35:S083	I35 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I35:S084	I35 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I35:S085	I35 Spare2	UA	UR	9999	UA9999	UR9999
I35:S086	I35 Spare3	UA	UR	9999	UA9999	UR9999
I35:S087	I35 Spare4	UA	UR	9999	UA9999	UR9999
I35:S088	I35 Spare5	UA	UR	9999	UA9999	UR9999
I35:S089	I35 Spare6	UA	UR	9999	UA9999	UR9999
I35:S090	I35 Spare7	UA	UR	9999	UA9999	UR9999
I35:S091	I35 Spare8	UA	UR	9999	UA9999	UR9999
I35:S092	I35 Spare9	UA	UR	9999	UA9999	UR9999
I35:S093	I35 Spare10	UA	UR	9999	UA9999	UR9999
I36:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I36:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I36:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I36:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I36:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I36:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I36:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I36:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I36:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I36:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I36:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I36:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I36:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I36:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I36:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I36:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I36:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I36:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I36:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I36:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I36:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I36:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I36:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I36:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I36:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I36:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I36:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I36:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I36:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I36:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I36:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I36:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I36:S001	I36 Cab Tamper	TA	TR	9999	TA9999	TR9999
I36:S002	I36 AC fail	AT	AR	9999	AT9999	AR9999
I36:S003	I36 Low Batt	YT	YR	9999	YT9999	YR9999
I36:S004	I36 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I36:S005	I36 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I36:S006	I36 Low Volts	YP	YQ	9999	YP9999	YQ9999
I36:S007	I36 PS Fail	YP	YQ	9999	YP9999	YQ9999
I36:S008	I36 Batt Test	IA	IR	9999	IA9999	IR9999
I36:S009	I36 Unibus	EM	EN	9999	EM9999	EN9999
I36:S010	I36 Download Fail	YF	UX	9999	YF9999	UX9999
I36:S011	I36 Spare1	UA	UR	9999	UA9999	UR9999
I36:S012	I36 LAN Comms	EM	EN	9999	EM9999	EN9999
I36:S013	I36 Door1 Fault	IA	IR	9999	IA9999	IR9999
I36:S014	I36 Door2 Fault	IA	IR	9999	IA9999	IR9999
I36:S015	I36 Door3 Fault	IA	IR	9999	IA9999	IR9999
I36:S016	I36 Door4 Fault	IA	IR	9999	IA9999	IR9999
I36:S017	I36 Door5 Fault	IA	IR	9999	IA9999	IR9999
I36:S018	I36 Door6 Fault	IA	IR	9999	IA9999	IR9999
I36:S019	I36 Door7 Fault	IA	IR	9999	IA9999	IR9999
I36:S020	I36 Door8 Fault	IA	IR	9999	IA9999	IR9999
I36:S021	I36 Door1 Forced	DF	DR	9999	DF9999	DR9999
I36:S022	I36 Door2 Forced	DF	DR	9999	DF9999	DR9999
I36:S023	I36 Door3 Forced	DF	DR	9999	DF9999	DR9999
I36:S024	I36 Door4 Forced	DF	DR	9999	DF9999	DR9999
I36:S025	I36 Door5 Forced	DF	DR	9999	DF9999	DR9999
I36:S026	I36 Door6 Forced	DF	DR	9999	DF9999	DR9999
I36:S027	I36 Door7 Forced	DF	DR	9999	DF9999	DR9999
I36:S028	I36 Door8 Forced	DF	DR	9999	DF9999	DR9999
I36:S029	I36 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I36:S030	I36 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I36:S031	I36 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I36:S032	I36 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I36:S033	I36 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I36:S034	I36 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I36:S035	I36 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I36:S036	I36 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I36:S037	I36 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I36:S038	I36 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I36:S039	I36 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I36:S040	I36 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I36:S041	I36 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I36:S042	I36 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I36:S043	I36 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I36:S044	I36 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I36:S045	I36 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I36:S046	I36 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I36:S047	I36 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I36:S048	I36 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I36:S049	I36 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I36:S050	I36 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I36:S051	I36 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I36:S052	I36 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I36:S053	I36 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I36:S054	I36 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I36:S055	I36 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I36:S056	I36 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I36:S057	I36 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I36:S058	I36 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I36:S059	I36 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I36:S060	I36 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I36:S061	I36 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I36:S062	I36 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I36:S063	I36 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I36:S064	I36 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I36:S065	I36 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I36:S066	I36 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I36:S067	I36 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I36:S068	I36 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I36:S069	I36 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I36:S070	I36 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I36:S071	I36 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I36:S072	I36 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I36:S073	I36 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I36:S074	I36 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I36:S075	I36 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I36:S076	I36 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I36:S077	I36 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I36:S078	I36 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I36:S079	I36 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I36:S080	I36 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I36:S081	I36 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I36:S082	I36 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I36:S083	I36 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I36:S084	I36 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I36:S085	I36 Spare2	UA	UR	9999	UA9999	UR9999
I36:S086	I36 Spare3	UA	UR	9999	UA9999	UR9999
I36:S087	I36 Spare4	UA	UR	9999	UA9999	UR9999
I36:S088	I36 Spare5	UA	UR	9999	UA9999	UR9999
I36:S089	I36 Spare6	UA	UR	9999	UA9999	UR9999
I36:S090	I36 Spare7	UA	UR	9999	UA9999	UR9999
I36:S091	I36 Spare8	UA	UR	9999	UA9999	UR9999
I36:S092	I36 Spare9	UA	UR	9999	UA9999	UR9999
I36:S093	I36 Spare10	UA	UR	9999	UA9999	UR9999
I37:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I37:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I37:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I37:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I37:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I37:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I37:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I37:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I37:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I37:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I37:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I37:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I37:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I37:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I37:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I37:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I37:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I37:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I37:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I37:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I37:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I37:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I37:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I37:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I37:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I37:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I37:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I37:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I37:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I37:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I37:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I37:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I37:S001	I37 Cab Tamper	TA	TR	9999	TA9999	TR9999
I37:S002	I37 AC fail	AT	AR	9999	AT9999	AR9999
I37:S003	I37 Low Batt	YT	YR	9999	YT9999	YR9999
I37:S004	I37 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I37:S005	I37 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I37:S006	I37 Low Volts	YP	YQ	9999	YP9999	YQ9999
I37:S007	I37 PS Fail	YP	YQ	9999	YP9999	YQ9999
I37:S008	I37 Batt Test	IA	IR	9999	IA9999	IR9999
I37:S009	I37 Unibus	EM	EN	9999	EM9999	EN9999
I37:S010	I37 Download Fail	YF	UX	9999	YF9999	UX9999
I37:S011	I37 Spare1	UA	UR	9999	UA9999	UR9999
I37:S012	I37 LAN Comms	EM	EN	9999	EM9999	EN9999
I37:S013	I37 Door1 Fault	IA	IR	9999	IA9999	IR9999
I37:S014	I37 Door2 Fault	IA	IR	9999	IA9999	IR9999
I37:S015	I37 Door3 Fault	IA	IR	9999	IA9999	IR9999
I37:S016	I37 Door4 Fault	IA	IR	9999	IA9999	IR9999
I37:S017	I37 Door5 Fault	IA	IR	9999	IA9999	IR9999
I37:S018	I37 Door6 Fault	IA	IR	9999	IA9999	IR9999
I37:S019	I37 Door7 Fault	IA	IR	9999	IA9999	IR9999
I37:S020	I37 Door8 Fault	IA	IR	9999	IA9999	IR9999
I37:S021	I37 Door1 Forced	DF	DR	9999	DF9999	DR9999
I37:S022	I37 Door2 Forced	DF	DR	9999	DF9999	DR9999
I37:S023	I37 Door3 Forced	DF	DR	9999	DF9999	DR9999
I37:S024	I37 Door4 Forced	DF	DR	9999	DF9999	DR9999
I37:S025	I37 Door5 Forced	DF	DR	9999	DF9999	DR9999
I37:S026	I37 Door6 Forced	DF	DR	9999	DF9999	DR9999
I37:S027	I37 Door7 Forced	DF	DR	9999	DF9999	DR9999
I37:S028	I37 Door8 Forced	DF	DR	9999	DF9999	DR9999
I37:S029	I37 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I37:S030	I37 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I37:S031	I37 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I37:S032	I37 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I37:S033	I37 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I37:S034	I37 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I37:S035	I37 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I37:S036	I37 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I37:S037	I37 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I37:S038	I37 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I37:S039	I37 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I37:S040	I37 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I37:S041	I37 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I37:S042	I37 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I37:S043	I37 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I37:S044	I37 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I37:S045	I37 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I37:S046	I37 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I37:S047	I37 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I37:S048	I37 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I37:S049	I37 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I37:S050	I37 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I37:S051	I37 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I37:S052	I37 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I37:S053	I37 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I37:S054	I37 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I37:S055	I37 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I37:S056	I37 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I37:S057	I37 Rdr5 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I37:S058	I37 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I37:S059	I37 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I37:S060	I37 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I37:S061	I37 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I37:S062	I37 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I37:S063	I37 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I37:S064	I37 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I37:S065	I37 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I37:S066	I37 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I37:S067	I37 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I37:S068	I37 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I37:S069	I37 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I37:S070	I37 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I37:S071	I37 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I37:S072	I37 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I37:S073	I37 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I37:S074	I37 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I37:S075	I37 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I37:S076	I37 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I37:S077	I37 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I37:S078	I37 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I37:S079	I37 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I37:S080	I37 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I37:S081	I37 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I37:S082	I37 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I37:S083	I37 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I37:S084	I37 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I37:S085	I37 Spare2	UA	UR	9999	UA9999	UR9999
I37:S086	I37 Spare3	UA	UR	9999	UA9999	UR9999
I37:S087	I37 Spare4	UA	UR	9999	UA9999	UR9999
I37:S088	I37 Spare5	UA	UR	9999	UA9999	UR9999
I37:S089	I37 Spare6	UA	UR	9999	UA9999	UR9999
I37:S090	I37 Spare7	UA	UR	9999	UA9999	UR9999
I37:S091	I37 Spare8	UA	UR	9999	UA9999	UR9999
I37:S092	I37 Spare9	UA	UR	9999	UA9999	UR9999
I37:S093	I37 Spare10	UA	UR	9999	UA9999	UR9999
I38:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I38:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I38:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I38:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I38:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I38:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I38:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I38:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I38:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I38:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I38:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I38:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I38:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I38:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I38:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I38:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I38:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I38:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I38:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I38:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I38:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I38:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I38:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I38:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I38:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I38:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I38:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I38:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I38:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I38:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I38:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I38:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I38:S001	I38 Cab Tamper	TA	TR	9999	TA9999	TR9999
I38:S002	I38 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

I38:S003	I38 Low Batt	YT	YR	9999	YT9999	YR9999
I38:S004	I38 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I38:S005	I38 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I38:S006	I38 Low Volts	YP	YQ	9999	YP9999	YQ9999
I38:S007	I38 PS Fail	YP	YQ	9999	YP9999	YQ9999
I38:S008	I38 Batt Test	IA	IR	9999	IA9999	IR9999
I38:S009	I38 Unibus	EM	EN	9999	EM9999	EN9999
I38:S010	I38 Download Fail	YF	UX	9999	YF9999	UX9999
I38:S011	I38 Spare1	UA	UR	9999	UA9999	UR9999
I38:S012	I38 LAN Comms	EM	EN	9999	EM9999	EN9999
I38:S013	I38 Door1 Fault	IA	IR	9999	IA9999	IR9999
I38:S014	I38 Door2 Fault	IA	IR	9999	IA9999	IR9999
I38:S015	I38 Door3 Fault	IA	IR	9999	IA9999	IR9999
I38:S016	I38 Door4 Fault	IA	IR	9999	IA9999	IR9999
I38:S017	I38 Door5 Fault	IA	IR	9999	IA9999	IR9999
I38:S018	I38 Door6 Fault	IA	IR	9999	IA9999	IR9999
I38:S019	I38 Door7 Fault	IA	IR	9999	IA9999	IR9999
I38:S020	I38 Door8 Fault	IA	IR	9999	IA9999	IR9999
I38:S021	I38 Door1 Forced	DF	DR	9999	DF9999	DR9999
I38:S022	I38 Door2 Forced	DF	DR	9999	DF9999	DR9999
I38:S023	I38 Door3 Forced	DF	DR	9999	DF9999	DR9999
I38:S024	I38 Door4 Forced	DF	DR	9999	DF9999	DR9999
I38:S025	I38 Door5 Forced	DF	DR	9999	DF9999	DR9999
I38:S026	I38 Door6 Forced	DF	DR	9999	DF9999	DR9999
I38:S027	I38 Door7 Forced	DF	DR	9999	DF9999	DR9999
I38:S028	I38 Door8 Forced	DF	DR	9999	DF9999	DR9999
I38:S029	I38 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I38:S030	I38 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I38:S031	I38 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I38:S032	I38 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I38:S033	I38 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I38:S034	I38 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I38:S035	I38 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I38:S036	I38 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I38:S037	I38 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I38:S038	I38 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I38:S039	I38 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I38:S040	I38 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I38:S041	I38 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I38:S042	I38 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I38:S043	I38 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I38:S044	I38 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I38:S045	I38 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I38:S046	I38 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I38:S047	I38 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I38:S048	I38 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I38:S049	I38 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I38:S050	I38 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I38:S051	I38 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I38:S052	I38 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I38:S053	I38 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I38:S054	I38 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I38:S055	I38 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I38:S056	I38 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I38:S057	I38 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I38:S058	I38 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I38:S059	I38 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I38:S060	I38 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I38:S061	I38 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I38:S062	I38 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I38:S063	I38 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I38:S064	I38 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I38:S065	I38 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I38:S066	I38 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I38:S067	I38 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I38:S068	I38 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I38:S069	I38 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I38:S070	I38 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I38:S071	I38 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I38:S072	I38 Rdr4 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I38:S073	I38 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I38:S074	I38 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I38:S075	I38 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I38:S076	I38 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I38:S077	I38 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I38:S078	I38 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I38:S079	I38 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I38:S080	I38 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I38:S081	I38 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I38:S082	I38 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I38:S083	I38 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I38:S084	I38 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I38:S085	I38 Spare2	UA	UR	9999	UA9999	UR9999
I38:S086	I38 Spare3	UA	UR	9999	UA9999	UR9999
I38:S087	I38 Spare4	UA	UR	9999	UA9999	UR9999
I38:S088	I38 Spare5	UA	UR	9999	UA9999	UR9999
I38:S089	I38 Spare6	UA	UR	9999	UA9999	UR9999
I38:S090	I38 Spare7	UA	UR	9999	UA9999	UR9999
I38:S091	I38 Spare8	UA	UR	9999	UA9999	UR9999
I38:S092	I38 Spare9	UA	UR	9999	UA9999	UR9999
I38:S093	I38 Spare10	UA	UR	9999	UA9999	UR9999
I39:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I39:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I39:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I39:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I39:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I39:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I39:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I39:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I39:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I39:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I39:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I39:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I39:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I39:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I39:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I39:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I39:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I39:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I39:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I39:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I39:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I39:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I39:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I39:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I39:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I39:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I39:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I39:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I39:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I39:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I39:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I39:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I39:S001	I39 Cab Tamper	TA	TR	9999	TA9999	TR9999
I39:S002	I39 AC fail	AT	AR	9999	AT9999	AR9999
I39:S003	I39 Low Batt	YT	YR	9999	YT9999	YR9999
I39:S004	I39 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I39:S005	I39 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I39:S006	I39 Low Volts	YP	YQ	9999	YP9999	YQ9999
I39:S007	I39 PS Fail	YP	YQ	9999	YP9999	YQ9999
I39:S008	I39 Batt Test	IA	IR	9999	IA9999	IR9999
I39:S009	I39 Unibus	EM	EN	9999	EM9999	EN9999
I39:S010	I39 Download Fail	YF	UX	9999	YF9999	UX9999
I39:S011	I39 Spare1	UA	UR	9999	UA9999	UR9999
I39:S012	I39 LAN Comms	EM	EN	9999	EM9999	EN9999
I39:S013	I39 Door1 Fault	IA	IR	9999	IA9999	IR9999
I39:S014	I39 Door2 Fault	IA	IR	9999	IA9999	IR9999
I39:S015	I39 Door3 Fault	IA	IR	9999	IA9999	IR9999
I39:S016	I39 Door4 Fault	IA	IR	9999	IA9999	IR9999
I39:S017	I39 Door5 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I39:S018	I39 Door6 Fault	IA	IR	9999	IA9999	IR9999
I39:S019	I39 Door7 Fault	IA	IR	9999	IA9999	IR9999
I39:S020	I39 Door8 Fault	IA	IR	9999	IA9999	IR9999
I39:S021	I39 Door1 Forced	DF	DR	9999	DF9999	DR9999
I39:S022	I39 Door2 Forced	DF	DR	9999	DF9999	DR9999
I39:S023	I39 Door3 Forced	DF	DR	9999	DF9999	DR9999
I39:S024	I39 Door4 Forced	DF	DR	9999	DF9999	DR9999
I39:S025	I39 Door5 Forced	DF	DR	9999	DF9999	DR9999
I39:S026	I39 Door6 Forced	DF	DR	9999	DF9999	DR9999
I39:S027	I39 Door7 Forced	DF	DR	9999	DF9999	DR9999
I39:S028	I39 Door8 Forced	DF	DR	9999	DF9999	DR9999
I39:S029	I39 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I39:S030	I39 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I39:S031	I39 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I39:S032	I39 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I39:S033	I39 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I39:S034	I39 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I39:S035	I39 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I39:S036	I39 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I39:S037	I39 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I39:S038	I39 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I39:S039	I39 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I39:S040	I39 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I39:S041	I39 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I39:S042	I39 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I39:S043	I39 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I39:S044	I39 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I39:S045	I39 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I39:S046	I39 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I39:S047	I39 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I39:S048	I39 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I39:S049	I39 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I39:S050	I39 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I39:S051	I39 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I39:S052	I39 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I39:S053	I39 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I39:S054	I39 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I39:S055	I39 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I39:S056	I39 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I39:S057	I39 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I39:S058	I39 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I39:S059	I39 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I39:S060	I39 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I39:S061	I39 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I39:S062	I39 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I39:S063	I39 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I39:S064	I39 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I39:S065	I39 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I39:S066	I39 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I39:S067	I39 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I39:S068	I39 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I39:S069	I39 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I39:S070	I39 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I39:S071	I39 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I39:S072	I39 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I39:S073	I39 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I39:S074	I39 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I39:S075	I39 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I39:S076	I39 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I39:S077	I39 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I39:S078	I39 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I39:S079	I39 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I39:S080	I39 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I39:S081	I39 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I39:S082	I39 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I39:S083	I39 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I39:S084	I39 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I39:S085	I39 Spare2	UA	UR	9999	UA9999	UR9999
I39:S086	I39 Spare3	UA	UR	9999	UA9999	UR9999
I39:S087	I39 Spare4	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I39:S088	I39 Spare5	UA	UR	9999	UA9999	UR9999
I39:S089	I39 Spare6	UA	UR	9999	UA9999	UR9999
I39:S090	I39 Spare7	UA	UR	9999	UA9999	UR9999
I39:S091	I39 Spare8	UA	UR	9999	UA9999	UR9999
I39:S092	I39 Spare9	UA	UR	9999	UA9999	UR9999
I39:S093	I39 Spare10	UA	UR	9999	UA9999	UR9999
I40:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I40:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I40:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I40:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I40:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I40:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I40:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I40:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I40:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I40:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I40:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I40:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I40:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I40:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I40:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I40:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I40:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I40:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I40:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I40:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I40:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I40:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I40:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I40:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I40:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I40:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I40:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I40:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I40:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I40:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I40:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I40:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I40:S001	I40 Cab Tamper	TA	TR	9999	TA9999	TR9999
I40:S002	I40 AC fail	AT	AR	9999	AT9999	AR9999
I40:S003	I40 Low Batt	YT	YR	9999	YT9999	YR9999
I40:S004	I40 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I40:S005	I40 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I40:S006	I40 Low Volts	YP	YQ	9999	YP9999	YQ9999
I40:S007	I40 PS Fail	YP	YQ	9999	YP9999	YQ9999
I40:S008	I40 Batt Test	IA	IR	9999	IA9999	IR9999
I40:S009	I40 Unibus	EM	EN	9999	EM9999	EN9999
I40:S010	I40 Download Fail	YF	UX	9999	YF9999	UX9999
I40:S011	I40 Spare1	UA	UR	9999	UA9999	UR9999
I40:S012	I40 LAN Comms	EM	EN	9999	EM9999	EN9999
I40:S013	I40 Door1 Fault	IA	IR	9999	IA9999	IR9999
I40:S014	I40 Door2 Fault	IA	IR	9999	IA9999	IR9999
I40:S015	I40 Door3 Fault	IA	IR	9999	IA9999	IR9999
I40:S016	I40 Door4 Fault	IA	IR	9999	IA9999	IR9999
I40:S017	I40 Door5 Fault	IA	IR	9999	IA9999	IR9999
I40:S018	I40 Door6 Fault	IA	IR	9999	IA9999	IR9999
I40:S019	I40 Door7 Fault	IA	IR	9999	IA9999	IR9999
I40:S020	I40 Door8 Fault	IA	IR	9999	IA9999	IR9999
I40:S021	I40 Door1 Forced	DF	DR	9999	DF9999	DR9999
I40:S022	I40 Door2 Forced	DF	DR	9999	DF9999	DR9999
I40:S023	I40 Door3 Forced	DF	DR	9999	DF9999	DR9999
I40:S024	I40 Door4 Forced	DF	DR	9999	DF9999	DR9999
I40:S025	I40 Door5 Forced	DF	DR	9999	DF9999	DR9999
I40:S026	I40 Door6 Forced	DF	DR	9999	DF9999	DR9999
I40:S027	I40 Door7 Forced	DF	DR	9999	DF9999	DR9999
I40:S028	I40 Door8 Forced	DF	DR	9999	DF9999	DR9999
I40:S029	I40 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I40:S030	I40 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I40:S031	I40 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I40:S032	I40 Door4 DOTL	DL	DH	9999	DL9999	DH9999

Integriti SIA DECIMAL Map. V21

I40:S033	I40 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I40:S034	I40 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I40:S035	I40 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I40:S036	I40 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I40:S037	I40 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I40:S038	I40 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I40:S039	I40 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I40:S040	I40 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I40:S041	I40 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I40:S042	I40 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I40:S043	I40 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I40:S044	I40 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I40:S045	I40 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I40:S046	I40 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I40:S047	I40 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I40:S048	I40 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I40:S049	I40 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I40:S050	I40 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I40:S051	I40 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I40:S052	I40 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I40:S053	I40 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I40:S054	I40 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I40:S055	I40 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I40:S056	I40 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I40:S057	I40 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I40:S058	I40 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I40:S059	I40 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I40:S060	I40 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I40:S061	I40 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I40:S062	I40 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I40:S063	I40 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I40:S064	I40 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I40:S065	I40 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I40:S066	I40 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I40:S067	I40 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I40:S068	I40 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I40:S069	I40 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I40:S070	I40 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I40:S071	I40 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I40:S072	I40 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I40:S073	I40 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I40:S074	I40 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I40:S075	I40 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I40:S076	I40 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I40:S077	I40 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I40:S078	I40 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I40:S079	I40 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I40:S080	I40 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I40:S081	I40 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I40:S082	I40 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I40:S083	I40 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I40:S084	I40 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I40:S085	I40 Spare2	UA	UR	9999	UA9999	UR9999
I40:S086	I40 Spare3	UA	UR	9999	UA9999	UR9999
I40:S087	I40 Spare4	UA	UR	9999	UA9999	UR9999
I40:S088	I40 Spare5	UA	UR	9999	UA9999	UR9999
I40:S089	I40 Spare6	UA	UR	9999	UA9999	UR9999
I40:S090	I40 Spare7	UA	UR	9999	UA9999	UR9999
I40:S091	I40 Spare8	UA	UR	9999	UA9999	UR9999
I40:S092	I40 Spare9	UA	UR	9999	UA9999	UR9999
I40:S093	I40 Spare10	UA	UR	9999	UA9999	UR9999
I41:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I41:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I41:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I41:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I41:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I41:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I41:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I41:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I41:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999

I41:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I41:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I41:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I41:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I41:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I41:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I41:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I41:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I41:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I41:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I41:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I41:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I41:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I41:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I41:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I41:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I41:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I41:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I41:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I41:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I41:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I41:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I41:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I41:S001	I41 Cab Tamper	TA	TR	9999	TA9999	TR9999
I41:S002	I41 AC fail	AT	AR	9999	AT9999	AR9999
I41:S003	I41 Low Batt	YT	YR	9999	YT9999	YR9999
I41:S004	I41 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I41:S005	I41 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I41:S006	I41 Low Volts	YP	YQ	9999	YP9999	YQ9999
I41:S007	I41 PS Fail	YP	YQ	9999	YP9999	YQ9999
I41:S008	I41 Batt Test	IA	IR	9999	IA9999	IR9999
I41:S009	I41 Unibus	EM	EN	9999	EM9999	EN9999
I41:S010	I41 Download Fail	YF	UX	9999	YF9999	UX9999
I41:S011	I41 Spare1	UA	UR	9999	UA9999	UR9999
I41:S012	I41 LAN Comms	EM	EN	9999	EM9999	EN9999
I41:S013	I41 Door1 Fault	IA	IR	9999	IA9999	IR9999
I41:S014	I41 Door2 Fault	IA	IR	9999	IA9999	IR9999
I41:S015	I41 Door3 Fault	IA	IR	9999	IA9999	IR9999
I41:S016	I41 Door4 Fault	IA	IR	9999	IA9999	IR9999
I41:S017	I41 Door5 Fault	IA	IR	9999	IA9999	IR9999
I41:S018	I41 Door6 Fault	IA	IR	9999	IA9999	IR9999
I41:S019	I41 Door7 Fault	IA	IR	9999	IA9999	IR9999
I41:S020	I41 Door8 Fault	IA	IR	9999	IA9999	IR9999
I41:S021	I41 Door1 Forced	DF	DR	9999	DF9999	DR9999
I41:S022	I41 Door2 Forced	DF	DR	9999	DF9999	DR9999
I41:S023	I41 Door3 Forced	DF	DR	9999	DF9999	DR9999
I41:S024	I41 Door4 Forced	DF	DR	9999	DF9999	DR9999
I41:S025	I41 Door5 Forced	DF	DR	9999	DF9999	DR9999
I41:S026	I41 Door6 Forced	DF	DR	9999	DF9999	DR9999
I41:S027	I41 Door7 Forced	DF	DR	9999	DF9999	DR9999
I41:S028	I41 Door8 Forced	DF	DR	9999	DF9999	DR9999
I41:S029	I41 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I41:S030	I41 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I41:S031	I41 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I41:S032	I41 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I41:S033	I41 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I41:S034	I41 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I41:S035	I41 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I41:S036	I41 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I41:S037	I41 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I41:S038	I41 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I41:S039	I41 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I41:S040	I41 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I41:S041	I41 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I41:S042	I41 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I41:S043	I41 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I41:S044	I41 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I41:S045	I41 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I41:S046	I41 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I41:S047	I41 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I41:S048	I41 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I41:S049	I41 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I41:S050	I41 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I41:S051	I41 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I41:S052	I41 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I41:S053	I41 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I41:S054	I41 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I41:S055	I41 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I41:S056	I41 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I41:S057	I41 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I41:S058	I41 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I41:S059	I41 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I41:S060	I41 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I41:S061	I41 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I41:S062	I41 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I41:S063	I41 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I41:S064	I41 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I41:S065	I41 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I41:S066	I41 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I41:S067	I41 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I41:S068	I41 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I41:S069	I41 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I41:S070	I41 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I41:S071	I41 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I41:S072	I41 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I41:S073	I41 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I41:S074	I41 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I41:S075	I41 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I41:S076	I41 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I41:S077	I41 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I41:S078	I41 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I41:S079	I41 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I41:S080	I41 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I41:S081	I41 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I41:S082	I41 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I41:S083	I41 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I41:S084	I41 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I41:S085	I41 Spare2	UA	UR	9999	UA9999	UR9999
I41:S086	I41 Spare3	UA	UR	9999	UA9999	UR9999
I41:S087	I41 Spare4	UA	UR	9999	UA9999	UR9999
I41:S088	I41 Spare5	UA	UR	9999	UA9999	UR9999
I41:S089	I41 Spare6	UA	UR	9999	UA9999	UR9999
I41:S090	I41 Spare7	UA	UR	9999	UA9999	UR9999
I41:S091	I41 Spare8	UA	UR	9999	UA9999	UR9999
I41:S092	I41 Spare9	UA	UR	9999	UA9999	UR9999
I41:S093	I41 Spare10	UA	UR	9999	UA9999	UR9999
I42:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I42:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I42:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I42:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I42:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I42:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I42:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I42:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I42:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I42:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I42:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I42:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I42:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I42:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I42:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I42:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I42:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I42:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I42:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I42:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I42:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I42:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I42:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I42:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I42:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I42:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I42:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I42:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I42:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I42:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I42:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I42:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I42:S001	I42 Cab Tamper	TA	TR	9999	TA9999	TR9999
I42:S002	I42 AC fail	AT	AR	9999	AT9999	AR9999
I42:S003	I42 Low Batt	YT	YR	9999	YT9999	YR9999
I42:S004	I42 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I42:S005	I42 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I42:S006	I42 Low Volts	YP	YQ	9999	YP9999	YQ9999
I42:S007	I42 PS Fail	YP	YQ	9999	YP9999	YQ9999
I42:S008	I42 Batt Test	IA	IR	9999	IA9999	IR9999
I42:S009	I42 Unibus	EM	EN	9999	EM9999	EN9999
I42:S010	I42 Download Fail	YF	UX	9999	YF9999	UX9999
I42:S011	I42 Spare1	UA	UR	9999	UA9999	UR9999
I42:S012	I42 LAN Comms	EM	EN	9999	EM9999	EN9999
I42:S013	I42 Door1 Fault	IA	IR	9999	IA9999	IR9999
I42:S014	I42 Door2 Fault	IA	IR	9999	IA9999	IR9999
I42:S015	I42 Door3 Fault	IA	IR	9999	IA9999	IR9999
I42:S016	I42 Door4 Fault	IA	IR	9999	IA9999	IR9999
I42:S017	I42 Door5 Fault	IA	IR	9999	IA9999	IR9999
I42:S018	I42 Door6 Fault	IA	IR	9999	IA9999	IR9999
I42:S019	I42 Door7 Fault	IA	IR	9999	IA9999	IR9999
I42:S020	I42 Door8 Fault	IA	IR	9999	IA9999	IR9999
I42:S021	I42 Door1 Forced	DF	DR	9999	DF9999	DR9999
I42:S022	I42 Door2 Forced	DF	DR	9999	DF9999	DR9999
I42:S023	I42 Door3 Forced	DF	DR	9999	DF9999	DR9999
I42:S024	I42 Door4 Forced	DF	DR	9999	DF9999	DR9999
I42:S025	I42 Door5 Forced	DF	DR	9999	DF9999	DR9999
I42:S026	I42 Door6 Forced	DF	DR	9999	DF9999	DR9999
I42:S027	I42 Door7 Forced	DF	DR	9999	DF9999	DR9999
I42:S028	I42 Door8 Forced	DF	DR	9999	DF9999	DR9999
I42:S029	I42 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I42:S030	I42 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I42:S031	I42 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I42:S032	I42 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I42:S033	I42 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I42:S034	I42 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I42:S035	I42 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I42:S036	I42 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I42:S037	I42 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I42:S038	I42 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I42:S039	I42 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I42:S040	I42 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I42:S041	I42 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I42:S042	I42 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I42:S043	I42 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I42:S044	I42 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I42:S045	I42 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I42:S046	I42 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I42:S047	I42 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I42:S048	I42 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I42:S049	I42 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I42:S050	I42 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I42:S051	I42 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I42:S052	I42 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I42:S053	I42 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I42:S054	I42 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I42:S055	I42 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I42:S056	I42 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I42:S057	I42 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I42:S058	I42 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I42:S059	I42 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I42:S060	I42 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I42:S061	I42 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I42:S062	I42 Rdr10 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I42:S063	I42 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I42:S064	I42 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I42:S065	I42 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I42:S066	I42 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I42:S067	I42 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I42:S068	I42 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I42:S069	I42 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I42:S070	I42 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I42:S071	I42 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I42:S072	I42 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I42:S073	I42 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I42:S074	I42 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I42:S075	I42 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I42:S076	I42 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I42:S077	I42 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I42:S078	I42 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I42:S079	I42 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I42:S080	I42 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I42:S081	I42 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I42:S082	I42 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I42:S083	I42 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I42:S084	I42 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I42:S085	I42 Spare2	UA	UR	9999	UA9999	UR9999
I42:S086	I42 Spare3	UA	UR	9999	UA9999	UR9999
I42:S087	I42 Spare4	UA	UR	9999	UA9999	UR9999
I42:S088	I42 Spare5	UA	UR	9999	UA9999	UR9999
I42:S089	I42 Spare6	UA	UR	9999	UA9999	UR9999
I42:S090	I42 Spare7	UA	UR	9999	UA9999	UR9999
I42:S091	I42 Spare8	UA	UR	9999	UA9999	UR9999
I42:S092	I42 Spare9	UA	UR	9999	UA9999	UR9999
I42:S093	I42 Spare10	UA	UR	9999	UA9999	UR9999
I43:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I43:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I43:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I43:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I43:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I43:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I43:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I43:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I43:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I43:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I43:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I43:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I43:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I43:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I43:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I43:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I43:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I43:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I43:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I43:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I43:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I43:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I43:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I43:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I43:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I43:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I43:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I43:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I43:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I43:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I43:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I43:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I43:S001	I43 Cab Tamper	TA	TR	9999	TA9999	TR9999
I43:S002	I43 AC fail	AT	AR	9999	AT9999	AR9999
I43:S003	I43 Low Batt	YT	YR	9999	YT9999	YR9999
I43:S004	I43 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I43:S005	I43 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I43:S006	I43 Low Volts	YP	YQ	9999	YP9999	YQ9999
I43:S007	I43 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

I43:S008	I43 Batt Test	IA	IR	9999	IA9999	IR9999
I43:S009	I43 Unibus	EM	EN	9999	EM9999	EN9999
I43:S010	I43 Download Fail	YF	UX	9999	YF9999	UX9999
I43:S011	I43 Spare1	UA	UR	9999	UA9999	UR9999
I43:S012	I43 LAN Comms	EM	EN	9999	EM9999	EN9999
I43:S013	I43 Door1 Fault	IA	IR	9999	IA9999	IR9999
I43:S014	I43 Door2 Fault	IA	IR	9999	IA9999	IR9999
I43:S015	I43 Door3 Fault	IA	IR	9999	IA9999	IR9999
I43:S016	I43 Door4 Fault	IA	IR	9999	IA9999	IR9999
I43:S017	I43 Door5 Fault	IA	IR	9999	IA9999	IR9999
I43:S018	I43 Door6 Fault	IA	IR	9999	IA9999	IR9999
I43:S019	I43 Door7 Fault	IA	IR	9999	IA9999	IR9999
I43:S020	I43 Door8 Fault	IA	IR	9999	IA9999	IR9999
I43:S021	I43 Door1 Forced	DF	DR	9999	DF9999	DR9999
I43:S022	I43 Door2 Forced	DF	DR	9999	DF9999	DR9999
I43:S023	I43 Door3 Forced	DF	DR	9999	DF9999	DR9999
I43:S024	I43 Door4 Forced	DF	DR	9999	DF9999	DR9999
I43:S025	I43 Door5 Forced	DF	DR	9999	DF9999	DR9999
I43:S026	I43 Door6 Forced	DF	DR	9999	DF9999	DR9999
I43:S027	I43 Door7 Forced	DF	DR	9999	DF9999	DR9999
I43:S028	I43 Door8 Forced	DF	DR	9999	DF9999	DR9999
I43:S029	I43 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I43:S030	I43 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I43:S031	I43 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I43:S032	I43 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I43:S033	I43 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I43:S034	I43 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I43:S035	I43 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I43:S036	I43 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I43:S037	I43 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I43:S038	I43 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I43:S039	I43 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I43:S040	I43 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I43:S041	I43 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I43:S042	I43 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I43:S043	I43 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I43:S044	I43 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I43:S045	I43 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I43:S046	I43 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I43:S047	I43 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I43:S048	I43 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I43:S049	I43 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I43:S050	I43 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I43:S051	I43 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I43:S052	I43 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I43:S053	I43 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I43:S054	I43 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I43:S055	I43 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I43:S056	I43 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I43:S057	I43 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I43:S058	I43 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I43:S059	I43 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I43:S060	I43 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I43:S061	I43 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I43:S062	I43 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I43:S063	I43 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I43:S064	I43 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I43:S065	I43 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I43:S066	I43 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I43:S067	I43 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I43:S068	I43 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I43:S069	I43 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I43:S070	I43 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I43:S071	I43 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I43:S072	I43 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I43:S073	I43 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I43:S074	I43 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I43:S075	I43 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I43:S076	I43 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I43:S077	I43 Rdr9 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I43:S078	I43 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I43:S079	I43 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I43:S080	I43 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I43:S081	I43 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I43:S082	I43 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I43:S083	I43 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I43:S084	I43 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I43:S085	I43 Spare2	UA	UR	9999	UA9999	UR9999
I43:S086	I43 Spare3	UA	UR	9999	UA9999	UR9999
I43:S087	I43 Spare4	UA	UR	9999	UA9999	UR9999
I43:S088	I43 Spare5	UA	UR	9999	UA9999	UR9999
I43:S089	I43 Spare6	UA	UR	9999	UA9999	UR9999
I43:S090	I43 Spare7	UA	UR	9999	UA9999	UR9999
I43:S091	I43 Spare8	UA	UR	9999	UA9999	UR9999
I43:S092	I43 Spare9	UA	UR	9999	UA9999	UR9999
I43:S093	I43 Spare10	UA	UR	9999	UA9999	UR9999
I44:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I44:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I44:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I44:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I44:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I44:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I44:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I44:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I44:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I44:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I44:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I44:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I44:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I44:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I44:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I44:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I44:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I44:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I44:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I44:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I44:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I44:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I44:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I44:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I44:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I44:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I44:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I44:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I44:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I44:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I44:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I44:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I44:S001	I44 Cab Tamper	TA	TR	9999	TA9999	TR9999
I44:S002	I44 AC fail	AT	AR	9999	AT9999	AR9999
I44:S003	I44 Low Batt	YT	YR	9999	YT9999	YR9999
I44:S004	I44 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I44:S005	I44 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I44:S006	I44 Low Volts	YP	YQ	9999	YP9999	YQ9999
I44:S007	I44 PS Fail	YP	YQ	9999	YP9999	YQ9999
I44:S008	I44 Batt Test	IA	IR	9999	IA9999	IR9999
I44:S009	I44 Unibus	EM	EN	9999	EM9999	EN9999
I44:S010	I44 Download Fail	YF	UX	9999	YF9999	UX9999
I44:S011	I44 Spare1	UA	UR	9999	UA9999	UR9999
I44:S012	I44 LAN Comms	EM	EN	9999	EM9999	EN9999
I44:S013	I44 Door1 Fault	IA	IR	9999	IA9999	IR9999
I44:S014	I44 Door2 Fault	IA	IR	9999	IA9999	IR9999
I44:S015	I44 Door3 Fault	IA	IR	9999	IA9999	IR9999
I44:S016	I44 Door4 Fault	IA	IR	9999	IA9999	IR9999
I44:S017	I44 Door5 Fault	IA	IR	9999	IA9999	IR9999
I44:S018	I44 Door6 Fault	IA	IR	9999	IA9999	IR9999
I44:S019	I44 Door7 Fault	IA	IR	9999	IA9999	IR9999
I44:S020	I44 Door8 Fault	IA	IR	9999	IA9999	IR9999
I44:S021	I44 Door1 Forced	DF	DR	9999	DF9999	DR9999
I44:S022	I44 Door2 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I44:S023	I44 Door3 Forced	DF	DR	9999	DF9999	DR9999
I44:S024	I44 Door4 Forced	DF	DR	9999	DF9999	DR9999
I44:S025	I44 Door5 Forced	DF	DR	9999	DF9999	DR9999
I44:S026	I44 Door6 Forced	DF	DR	9999	DF9999	DR9999
I44:S027	I44 Door7 Forced	DF	DR	9999	DF9999	DR9999
I44:S028	I44 Door8 Forced	DF	DR	9999	DF9999	DR9999
I44:S029	I44 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I44:S030	I44 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I44:S031	I44 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I44:S032	I44 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I44:S033	I44 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I44:S034	I44 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I44:S035	I44 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I44:S036	I44 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I44:S037	I44 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I44:S038	I44 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I44:S039	I44 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I44:S040	I44 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I44:S041	I44 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I44:S042	I44 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I44:S043	I44 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I44:S044	I44 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I44:S045	I44 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I44:S046	I44 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I44:S047	I44 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I44:S048	I44 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I44:S049	I44 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I44:S050	I44 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I44:S051	I44 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I44:S052	I44 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I44:S053	I44 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I44:S054	I44 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I44:S055	I44 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I44:S056	I44 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I44:S057	I44 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I44:S058	I44 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I44:S059	I44 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I44:S060	I44 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I44:S061	I44 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I44:S062	I44 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I44:S063	I44 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I44:S064	I44 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I44:S065	I44 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I44:S066	I44 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I44:S067	I44 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I44:S068	I44 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I44:S069	I44 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I44:S070	I44 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I44:S071	I44 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I44:S072	I44 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I44:S073	I44 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I44:S074	I44 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I44:S075	I44 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I44:S076	I44 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I44:S077	I44 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I44:S078	I44 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I44:S079	I44 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I44:S080	I44 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I44:S081	I44 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I44:S082	I44 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I44:S083	I44 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I44:S084	I44 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I44:S085	I44 Spare2	UA	UR	9999	UA9999	UR9999
I44:S086	I44 Spare3	UA	UR	9999	UA9999	UR9999
I44:S087	I44 Spare4	UA	UR	9999	UA9999	UR9999
I44:S088	I44 Spare5	UA	UR	9999	UA9999	UR9999
I44:S089	I44 Spare6	UA	UR	9999	UA9999	UR9999
I44:S090	I44 Spare7	UA	UR	9999	UA9999	UR9999
I44:S091	I44 Spare8	UA	UR	9999	UA9999	UR9999
I44:S092	I44 Spare9	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I44:S093	I44 Spare10	UA	UR	9999	UA9999	UR9999
I45:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I45:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I45:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I45:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I45:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I45:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I45:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I45:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I45:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I45:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I45:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I45:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I45:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I45:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I45:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I45:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I45:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I45:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I45:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I45:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I45:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I45:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I45:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I45:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I45:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I45:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I45:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I45:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I45:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I45:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I45:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I45:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I45:S001	I45 Cab Tamper	TA	TR	9999	TA9999	TR9999
I45:S002	I45 AC fail	AT	AR	9999	AT9999	AR9999
I45:S003	I45 Low Batt	YT	YR	9999	YT9999	YR9999
I45:S004	I45 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I45:S005	I45 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I45:S006	I45 Low Volts	YP	YQ	9999	YP9999	YQ9999
I45:S007	I45 PS Fail	YP	YQ	9999	YP9999	YQ9999
I45:S008	I45 Batt Test	IA	IR	9999	IA9999	IR9999
I45:S009	I45 Unibus	EM	EN	9999	EM9999	EN9999
I45:S010	I45 Download Fail	YF	UX	9999	YF9999	UX9999
I45:S011	I45 Spare1	UA	UR	9999	UA9999	UR9999
I45:S012	I45 LAN Comms	EM	EN	9999	EM9999	EN9999
I45:S013	I45 Door1 Fault	IA	IR	9999	IA9999	IR9999
I45:S014	I45 Door2 Fault	IA	IR	9999	IA9999	IR9999
I45:S015	I45 Door3 Fault	IA	IR	9999	IA9999	IR9999
I45:S016	I45 Door4 Fault	IA	IR	9999	IA9999	IR9999
I45:S017	I45 Door5 Fault	IA	IR	9999	IA9999	IR9999
I45:S018	I45 Door6 Fault	IA	IR	9999	IA9999	IR9999
I45:S019	I45 Door7 Fault	IA	IR	9999	IA9999	IR9999
I45:S020	I45 Door8 Fault	IA	IR	9999	IA9999	IR9999
I45:S021	I45 Door1 Forced	DF	DR	9999	DF9999	DR9999
I45:S022	I45 Door2 Forced	DF	DR	9999	DF9999	DR9999
I45:S023	I45 Door3 Forced	DF	DR	9999	DF9999	DR9999
I45:S024	I45 Door4 Forced	DF	DR	9999	DF9999	DR9999
I45:S025	I45 Door5 Forced	DF	DR	9999	DF9999	DR9999
I45:S026	I45 Door6 Forced	DF	DR	9999	DF9999	DR9999
I45:S027	I45 Door7 Forced	DF	DR	9999	DF9999	DR9999
I45:S028	I45 Door8 Forced	DF	DR	9999	DF9999	DR9999
I45:S029	I45 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I45:S030	I45 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I45:S031	I45 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I45:S032	I45 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I45:S033	I45 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I45:S034	I45 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I45:S035	I45 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I45:S036	I45 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I45:S037	I45 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I45:S038	I45 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I45:S039	I45 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I45:S040	I45 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I45:S041	I45 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I45:S042	I45 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I45:S043	I45 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I45:S044	I45 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I45:S045	I45 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I45:S046	I45 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I45:S047	I45 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I45:S048	I45 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I45:S049	I45 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I45:S050	I45 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I45:S051	I45 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I45:S052	I45 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I45:S053	I45 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I45:S054	I45 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I45:S055	I45 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I45:S056	I45 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I45:S057	I45 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I45:S058	I45 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I45:S059	I45 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I45:S060	I45 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I45:S061	I45 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I45:S062	I45 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I45:S063	I45 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I45:S064	I45 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I45:S065	I45 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I45:S066	I45 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I45:S067	I45 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I45:S068	I45 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I45:S069	I45 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I45:S070	I45 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I45:S071	I45 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I45:S072	I45 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I45:S073	I45 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I45:S074	I45 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I45:S075	I45 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I45:S076	I45 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I45:S077	I45 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I45:S078	I45 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I45:S079	I45 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I45:S080	I45 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I45:S081	I45 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I45:S082	I45 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I45:S083	I45 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I45:S084	I45 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I45:S085	I45 Spare2	UA	UR	9999	UA9999	UR9999
I45:S086	I45 Spare3	UA	UR	9999	UA9999	UR9999
I45:S087	I45 Spare4	UA	UR	9999	UA9999	UR9999
I45:S088	I45 Spare5	UA	UR	9999	UA9999	UR9999
I45:S089	I45 Spare6	UA	UR	9999	UA9999	UR9999
I45:S090	I45 Spare7	UA	UR	9999	UA9999	UR9999
I45:S091	I45 Spare8	UA	UR	9999	UA9999	UR9999
I45:S092	I45 Spare9	UA	UR	9999	UA9999	UR9999
I45:S093	I45 Spare10	UA	UR	9999	UA9999	UR9999
I46:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I46:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I46:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I46:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I46:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I46:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I46:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I46:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I46:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I46:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I46:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I46:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I46:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I46:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I46:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I46:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I46:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I46:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I46:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I46:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I46:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I46:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I46:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I46:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I46:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I46:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I46:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I46:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I46:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I46:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I46:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I46:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I46:S001	I46 Cab Tamper	TA	TR	9999	TA9999	TR9999
I46:S002	I46 AC fail	AT	AR	9999	AT9999	AR9999
I46:S003	I46 Low Batt	YT	YR	9999	YT9999	YR9999
I46:S004	I46 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I46:S005	I46 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I46:S006	I46 Low Volts	YP	YQ	9999	YP9999	YQ9999
I46:S007	I46 PS Fail	YP	YQ	9999	YP9999	YQ9999
I46:S008	I46 Batt Test	IA	IR	9999	IA9999	IR9999
I46:S009	I46 Unibus	EM	EN	9999	EM9999	EN9999
I46:S010	I46 Download Fail	YF	UX	9999	YF9999	UX9999
I46:S011	I46 Spare1	UA	UR	9999	UA9999	UR9999
I46:S012	I46 LAN Comms	EM	EN	9999	EM9999	EN9999
I46:S013	I46 Door1 Fault	IA	IR	9999	IA9999	IR9999
I46:S014	I46 Door2 Fault	IA	IR	9999	IA9999	IR9999
I46:S015	I46 Door3 Fault	IA	IR	9999	IA9999	IR9999
I46:S016	I46 Door4 Fault	IA	IR	9999	IA9999	IR9999
I46:S017	I46 Door5 Fault	IA	IR	9999	IA9999	IR9999
I46:S018	I46 Door6 Fault	IA	IR	9999	IA9999	IR9999
I46:S019	I46 Door7 Fault	IA	IR	9999	IA9999	IR9999
I46:S020	I46 Door8 Fault	IA	IR	9999	IA9999	IR9999
I46:S021	I46 Door1 Forced	DF	DR	9999	DF9999	DR9999
I46:S022	I46 Door2 Forced	DF	DR	9999	DF9999	DR9999
I46:S023	I46 Door3 Forced	DF	DR	9999	DF9999	DR9999
I46:S024	I46 Door4 Forced	DF	DR	9999	DF9999	DR9999
I46:S025	I46 Door5 Forced	DF	DR	9999	DF9999	DR9999
I46:S026	I46 Door6 Forced	DF	DR	9999	DF9999	DR9999
I46:S027	I46 Door7 Forced	DF	DR	9999	DF9999	DR9999
I46:S028	I46 Door8 Forced	DF	DR	9999	DF9999	DR9999
I46:S029	I46 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I46:S030	I46 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I46:S031	I46 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I46:S032	I46 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I46:S033	I46 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I46:S034	I46 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I46:S035	I46 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I46:S036	I46 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I46:S037	I46 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I46:S038	I46 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I46:S039	I46 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I46:S040	I46 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I46:S041	I46 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I46:S042	I46 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I46:S043	I46 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I46:S044	I46 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I46:S045	I46 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I46:S046	I46 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I46:S047	I46 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I46:S048	I46 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I46:S049	I46 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I46:S050	I46 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I46:S051	I46 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I46:S052	I46 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I46:S053	I46 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I46:S054	I46 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I46:S055	I46 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I46:S056	I46 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I46:S057	I46 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I46:S058	I46 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I46:S059	I46 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I46:S060	I46 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I46:S061	I46 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I46:S062	I46 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I46:S063	I46 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I46:S064	I46 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I46:S065	I46 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I46:S066	I46 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I46:S067	I46 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I46:S068	I46 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I46:S069	I46 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I46:S070	I46 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I46:S071	I46 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I46:S072	I46 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I46:S073	I46 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I46:S074	I46 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I46:S075	I46 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I46:S076	I46 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I46:S077	I46 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I46:S078	I46 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I46:S079	I46 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I46:S080	I46 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I46:S081	I46 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I46:S082	I46 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I46:S083	I46 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I46:S084	I46 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I46:S085	I46 Spare2	UA	UR	9999	UA9999	UR9999
I46:S086	I46 Spare3	UA	UR	9999	UA9999	UR9999
I46:S087	I46 Spare4	UA	UR	9999	UA9999	UR9999
I46:S088	I46 Spare5	UA	UR	9999	UA9999	UR9999
I46:S089	I46 Spare6	UA	UR	9999	UA9999	UR9999
I46:S090	I46 Spare7	UA	UR	9999	UA9999	UR9999
I46:S091	I46 Spare8	UA	UR	9999	UA9999	UR9999
I46:S092	I46 Spare9	UA	UR	9999	UA9999	UR9999
I46:S093	I46 Spare10	UA	UR	9999	UA9999	UR9999
I47:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I47:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I47:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I47:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I47:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I47:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I47:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I47:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I47:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I47:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I47:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I47:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I47:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I47:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I47:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I47:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I47:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I47:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I47:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I47:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I47:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I47:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I47:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I47:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I47:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I47:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I47:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I47:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I47:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I47:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I47:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I47:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I47:S001	I47 Cab Tamper	TA	TR	9999	TA9999	TR9999
I47:S002	I47 AC fail	AT	AR	9999	AT9999	AR9999
I47:S003	I47 Low Batt	YT	YR	9999	YT9999	YR9999
I47:S004	I47 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I47:S005	I47 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I47:S006	I47 Low Volts	YP	YQ	9999	YP9999	YQ9999
I47:S007	I47 PS Fail	YP	YQ	9999	YP9999	YQ9999
I47:S008	I47 Batt Test	IA	IR	9999	IA9999	IR9999
I47:S009	I47 Unibus	EM	EN	9999	EM9999	EN9999
I47:S010	I47 Download Fail	YF	UX	9999	YF9999	UX9999
I47:S011	I47 Spare1	UA	UR	9999	UA9999	UR9999
I47:S012	I47 LAN Comms	EM	EN	9999	EM9999	EN9999
I47:S013	I47 Door1 Fault	IA	IR	9999	IA9999	IR9999
I47:S014	I47 Door2 Fault	IA	IR	9999	IA9999	IR9999
I47:S015	I47 Door3 Fault	IA	IR	9999	IA9999	IR9999
I47:S016	I47 Door4 Fault	IA	IR	9999	IA9999	IR9999
I47:S017	I47 Door5 Fault	IA	IR	9999	IA9999	IR9999
I47:S018	I47 Door6 Fault	IA	IR	9999	IA9999	IR9999
I47:S019	I47 Door7 Fault	IA	IR	9999	IA9999	IR9999
I47:S020	I47 Door8 Fault	IA	IR	9999	IA9999	IR9999
I47:S021	I47 Door1 Forced	DF	DR	9999	DF9999	DR9999
I47:S022	I47 Door2 Forced	DF	DR	9999	DF9999	DR9999
I47:S023	I47 Door3 Forced	DF	DR	9999	DF9999	DR9999
I47:S024	I47 Door4 Forced	DF	DR	9999	DF9999	DR9999
I47:S025	I47 Door5 Forced	DF	DR	9999	DF9999	DR9999
I47:S026	I47 Door6 Forced	DF	DR	9999	DF9999	DR9999
I47:S027	I47 Door7 Forced	DF	DR	9999	DF9999	DR9999
I47:S028	I47 Door8 Forced	DF	DR	9999	DF9999	DR9999
I47:S029	I47 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I47:S030	I47 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I47:S031	I47 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I47:S032	I47 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I47:S033	I47 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I47:S034	I47 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I47:S035	I47 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I47:S036	I47 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I47:S037	I47 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I47:S038	I47 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I47:S039	I47 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I47:S040	I47 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I47:S041	I47 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I47:S042	I47 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I47:S043	I47 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I47:S044	I47 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I47:S045	I47 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I47:S046	I47 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I47:S047	I47 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I47:S048	I47 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I47:S049	I47 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I47:S050	I47 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I47:S051	I47 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I47:S052	I47 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I47:S053	I47 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I47:S054	I47 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I47:S055	I47 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I47:S056	I47 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I47:S057	I47 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I47:S058	I47 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I47:S059	I47 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I47:S060	I47 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I47:S061	I47 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I47:S062	I47 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I47:S063	I47 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I47:S064	I47 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I47:S065	I47 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I47:S066	I47 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I47:S067	I47 Rdr15 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I47:S068	I47 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I47:S069	I47 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I47:S070	I47 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I47:S071	I47 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I47:S072	I47 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I47:S073	I47 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I47:S074	I47 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I47:S075	I47 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I47:S076	I47 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I47:S077	I47 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I47:S078	I47 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I47:S079	I47 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I47:S080	I47 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I47:S081	I47 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I47:S082	I47 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I47:S083	I47 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I47:S084	I47 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I47:S085	I47 Spare2	UA	UR	9999	UA9999	UR9999
I47:S086	I47 Spare3	UA	UR	9999	UA9999	UR9999
I47:S087	I47 Spare4	UA	UR	9999	UA9999	UR9999
I47:S088	I47 Spare5	UA	UR	9999	UA9999	UR9999
I47:S089	I47 Spare6	UA	UR	9999	UA9999	UR9999
I47:S090	I47 Spare7	UA	UR	9999	UA9999	UR9999
I47:S091	I47 Spare8	UA	UR	9999	UA9999	UR9999
I47:S092	I47 Spare9	UA	UR	9999	UA9999	UR9999
I47:S093	I47 Spare10	UA	UR	9999	UA9999	UR9999
I48:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I48:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I48:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I48:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I48:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I48:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I48:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I48:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I48:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I48:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I48:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I48:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I48:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I48:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I48:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I48:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I48:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I48:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I48:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I48:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I48:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I48:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I48:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I48:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I48:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I48:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I48:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I48:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I48:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I48:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I48:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I48:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I48:S001	I48 Cab Tamper	TA	TR	9999	TA9999	TR9999
I48:S002	I48 AC fail	AT	AR	9999	AT9999	AR9999
I48:S003	I48 Low Batt	YT	YR	9999	YT9999	YR9999
I48:S004	I48 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I48:S005	I48 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I48:S006	I48 Low Volts	YP	YQ	9999	YP9999	YQ9999
I48:S007	I48 PS Fail	YP	YQ	9999	YP9999	YQ9999
I48:S008	I48 Batt Test	IA	IR	9999	IA9999	IR9999
I48:S009	I48 Unibus	EM	EN	9999	EM9999	EN9999
I48:S010	I48 Download Fail	YF	UX	9999	YF9999	UX9999
I48:S011	I48 Spare1	UA	UR	9999	UA9999	UR9999
I48:S012	I48 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

I48:S013	I48 Door1 Fault	IA	IR	9999	IA9999	IR9999
I48:S014	I48 Door2 Fault	IA	IR	9999	IA9999	IR9999
I48:S015	I48 Door3 Fault	IA	IR	9999	IA9999	IR9999
I48:S016	I48 Door4 Fault	IA	IR	9999	IA9999	IR9999
I48:S017	I48 Door5 Fault	IA	IR	9999	IA9999	IR9999
I48:S018	I48 Door6 Fault	IA	IR	9999	IA9999	IR9999
I48:S019	I48 Door7 Fault	IA	IR	9999	IA9999	IR9999
I48:S020	I48 Door8 Fault	IA	IR	9999	IA9999	IR9999
I48:S021	I48 Door1 Forced	DF	DR	9999	DF9999	DR9999
I48:S022	I48 Door2 Forced	DF	DR	9999	DF9999	DR9999
I48:S023	I48 Door3 Forced	DF	DR	9999	DF9999	DR9999
I48:S024	I48 Door4 Forced	DF	DR	9999	DF9999	DR9999
I48:S025	I48 Door5 Forced	DF	DR	9999	DF9999	DR9999
I48:S026	I48 Door6 Forced	DF	DR	9999	DF9999	DR9999
I48:S027	I48 Door7 Forced	DF	DR	9999	DF9999	DR9999
I48:S028	I48 Door8 Forced	DF	DR	9999	DF9999	DR9999
I48:S029	I48 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I48:S030	I48 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I48:S031	I48 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I48:S032	I48 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I48:S033	I48 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I48:S034	I48 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I48:S035	I48 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I48:S036	I48 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I48:S037	I48 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I48:S038	I48 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I48:S039	I48 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I48:S040	I48 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I48:S041	I48 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I48:S042	I48 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I48:S043	I48 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I48:S044	I48 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I48:S045	I48 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I48:S046	I48 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I48:S047	I48 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I48:S048	I48 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I48:S049	I48 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I48:S050	I48 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I48:S051	I48 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I48:S052	I48 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I48:S053	I48 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I48:S054	I48 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I48:S055	I48 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I48:S056	I48 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I48:S057	I48 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I48:S058	I48 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I48:S059	I48 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I48:S060	I48 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I48:S061	I48 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I48:S062	I48 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I48:S063	I48 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I48:S064	I48 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I48:S065	I48 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I48:S066	I48 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I48:S067	I48 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I48:S068	I48 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I48:S069	I48 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I48:S070	I48 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I48:S071	I48 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I48:S072	I48 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I48:S073	I48 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I48:S074	I48 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I48:S075	I48 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I48:S076	I48 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I48:S077	I48 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I48:S078	I48 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I48:S079	I48 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I48:S080	I48 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I48:S081	I48 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I48:S082	I48 Rdr14 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I48:S083	I48 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I48:S084	I48 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I48:S085	I48 Spare2	UA	UR	9999	UA9999	UR9999
I48:S086	I48 Spare3	UA	UR	9999	UA9999	UR9999
I48:S087	I48 Spare4	UA	UR	9999	UA9999	UR9999
I48:S088	I48 Spare5	UA	UR	9999	UA9999	UR9999
I48:S089	I48 Spare6	UA	UR	9999	UA9999	UR9999
I48:S090	I48 Spare7	UA	UR	9999	UA9999	UR9999
I48:S091	I48 Spare8	UA	UR	9999	UA9999	UR9999
I48:S092	I48 Spare9	UA	UR	9999	UA9999	UR9999
I48:S093	I48 Spare10	UA	UR	9999	UA9999	UR9999
I49:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I49:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I49:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I49:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I49:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I49:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I49:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I49:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I49:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I49:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I49:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I49:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I49:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I49:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I49:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I49:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I49:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I49:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I49:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I49:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I49:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I49:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I49:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I49:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I49:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I49:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I49:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I49:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I49:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I49:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I49:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I49:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I49:S001	I49 Cab Tamper	TA	TR	9999	TA9999	TR9999
I49:S002	I49 AC fail	AT	AR	9999	AT9999	AR9999
I49:S003	I49 Low Batt	YT	YR	9999	YT9999	YR9999
I49:S004	I49 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I49:S005	I49 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I49:S006	I49 Low Volts	YP	YQ	9999	YP9999	YQ9999
I49:S007	I49 PS Fail	YP	YQ	9999	YP9999	YQ9999
I49:S008	I49 Batt Test	IA	IR	9999	IA9999	IR9999
I49:S009	I49 Unibus	EM	EN	9999	EM9999	EN9999
I49:S010	I49 Download Fail	YF	UX	9999	YF9999	UX9999
I49:S011	I49 Spare1	UA	UR	9999	UA9999	UR9999
I49:S012	I49 LAN Comms	EM	EN	9999	EM9999	EN9999
I49:S013	I49 Door1 Fault	IA	IR	9999	IA9999	IR9999
I49:S014	I49 Door2 Fault	IA	IR	9999	IA9999	IR9999
I49:S015	I49 Door3 Fault	IA	IR	9999	IA9999	IR9999
I49:S016	I49 Door4 Fault	IA	IR	9999	IA9999	IR9999
I49:S017	I49 Door5 Fault	IA	IR	9999	IA9999	IR9999
I49:S018	I49 Door6 Fault	IA	IR	9999	IA9999	IR9999
I49:S019	I49 Door7 Fault	IA	IR	9999	IA9999	IR9999
I49:S020	I49 Door8 Fault	IA	IR	9999	IA9999	IR9999
I49:S021	I49 Door1 Forced	DF	DR	9999	DF9999	DR9999
I49:S022	I49 Door2 Forced	DF	DR	9999	DF9999	DR9999
I49:S023	I49 Door3 Forced	DF	DR	9999	DF9999	DR9999
I49:S024	I49 Door4 Forced	DF	DR	9999	DF9999	DR9999
I49:S025	I49 Door5 Forced	DF	DR	9999	DF9999	DR9999
I49:S026	I49 Door6 Forced	DF	DR	9999	DF9999	DR9999
I49:S027	I49 Door7 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I49:S028	I49 Door8 Forced	DF	DR	9999	DF9999	DR9999
I49:S029	I49 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I49:S030	I49 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I49:S031	I49 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I49:S032	I49 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I49:S033	I49 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I49:S034	I49 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I49:S035	I49 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I49:S036	I49 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I49:S037	I49 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I49:S038	I49 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I49:S039	I49 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I49:S040	I49 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I49:S041	I49 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I49:S042	I49 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I49:S043	I49 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I49:S044	I49 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I49:S045	I49 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I49:S046	I49 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I49:S047	I49 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I49:S048	I49 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I49:S049	I49 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I49:S050	I49 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I49:S051	I49 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I49:S052	I49 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I49:S053	I49 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I49:S054	I49 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I49:S055	I49 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I49:S056	I49 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I49:S057	I49 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I49:S058	I49 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I49:S059	I49 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I49:S060	I49 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I49:S061	I49 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I49:S062	I49 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I49:S063	I49 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I49:S064	I49 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I49:S065	I49 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I49:S066	I49 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I49:S067	I49 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I49:S068	I49 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I49:S069	I49 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I49:S070	I49 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I49:S071	I49 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I49:S072	I49 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I49:S073	I49 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I49:S074	I49 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I49:S075	I49 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I49:S076	I49 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I49:S077	I49 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I49:S078	I49 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I49:S079	I49 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I49:S080	I49 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I49:S081	I49 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I49:S082	I49 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I49:S083	I49 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I49:S084	I49 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I49:S085	I49 Spare2	UA	UR	9999	UA9999	UR9999
I49:S086	I49 Spare3	UA	UR	9999	UA9999	UR9999
I49:S087	I49 Spare4	UA	UR	9999	UA9999	UR9999
I49:S088	I49 Spare5	UA	UR	9999	UA9999	UR9999
I49:S089	I49 Spare6	UA	UR	9999	UA9999	UR9999
I49:S090	I49 Spare7	UA	UR	9999	UA9999	UR9999
I49:S091	I49 Spare8	UA	UR	9999	UA9999	UR9999
I49:S092	I49 Spare9	UA	UR	9999	UA9999	UR9999
I49:S093	I49 Spare10	UA	UR	9999	UA9999	UR9999
I50:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I50:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I50:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I50:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I50:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I50:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I50:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I50:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I50:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I50:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I50:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I50:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I50:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I50:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I50:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I50:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I50:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I50:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I50:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I50:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I50:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I50:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I50:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I50:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I50:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I50:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I50:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I50:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I50:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I50:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I50:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I50:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I50:S001	I50 Cab Tamper	TA	TR	9999	TA9999	TR9999
I50:S002	I50 AC fail	AT	AR	9999	AT9999	AR9999
I50:S003	I50 Low Batt	YT	YR	9999	YT9999	YR9999
I50:S004	I50 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I50:S005	I50 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I50:S006	I50 Low Volts	YP	YQ	9999	YP9999	YQ9999
I50:S007	I50 PS Fail	YP	YQ	9999	YP9999	YQ9999
I50:S008	I50 Batt Test	IA	IR	9999	IA9999	IR9999
I50:S009	I50 Unibus	EM	EN	9999	EM9999	EN9999
I50:S010	I50 Download Fail	YF	UX	9999	YF9999	UX9999
I50:S011	I50 Spare1	UA	UR	9999	UA9999	UR9999
I50:S012	I50 LAN Comms	EM	EN	9999	EM9999	EN9999
I50:S013	I50 Door1 Fault	IA	IR	9999	IA9999	IR9999
I50:S014	I50 Door2 Fault	IA	IR	9999	IA9999	IR9999
I50:S015	I50 Door3 Fault	IA	IR	9999	IA9999	IR9999
I50:S016	I50 Door4 Fault	IA	IR	9999	IA9999	IR9999
I50:S017	I50 Door5 Fault	IA	IR	9999	IA9999	IR9999
I50:S018	I50 Door6 Fault	IA	IR	9999	IA9999	IR9999
I50:S019	I50 Door7 Fault	IA	IR	9999	IA9999	IR9999
I50:S020	I50 Door8 Fault	IA	IR	9999	IA9999	IR9999
I50:S021	I50 Door1 Forced	DF	DR	9999	DF9999	DR9999
I50:S022	I50 Door2 Forced	DF	DR	9999	DF9999	DR9999
I50:S023	I50 Door3 Forced	DF	DR	9999	DF9999	DR9999
I50:S024	I50 Door4 Forced	DF	DR	9999	DF9999	DR9999
I50:S025	I50 Door5 Forced	DF	DR	9999	DF9999	DR9999
I50:S026	I50 Door6 Forced	DF	DR	9999	DF9999	DR9999
I50:S027	I50 Door7 Forced	DF	DR	9999	DF9999	DR9999
I50:S028	I50 Door8 Forced	DF	DR	9999	DF9999	DR9999
I50:S029	I50 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I50:S030	I50 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I50:S031	I50 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I50:S032	I50 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I50:S033	I50 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I50:S034	I50 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I50:S035	I50 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I50:S036	I50 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I50:S037	I50 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I50:S038	I50 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I50:S039	I50 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I50:S040	I50 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I50:S041	I50 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I50:S042	I50 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I50:S043	I50 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I50:S044	I50 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I50:S045	I50 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I50:S046	I50 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I50:S047	I50 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I50:S048	I50 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I50:S049	I50 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I50:S050	I50 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I50:S051	I50 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I50:S052	I50 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I50:S053	I50 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I50:S054	I50 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I50:S055	I50 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I50:S056	I50 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I50:S057	I50 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I50:S058	I50 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I50:S059	I50 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I50:S060	I50 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I50:S061	I50 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I50:S062	I50 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I50:S063	I50 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I50:S064	I50 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I50:S065	I50 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I50:S066	I50 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I50:S067	I50 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I50:S068	I50 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I50:S069	I50 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I50:S070	I50 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I50:S071	I50 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I50:S072	I50 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I50:S073	I50 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I50:S074	I50 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I50:S075	I50 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I50:S076	I50 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I50:S077	I50 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I50:S078	I50 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I50:S079	I50 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I50:S080	I50 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I50:S081	I50 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I50:S082	I50 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I50:S083	I50 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I50:S084	I50 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I50:S085	I50 Spare2	UA	UR	9999	UA9999	UR9999
I50:S086	I50 Spare3	UA	UR	9999	UA9999	UR9999
I50:S087	I50 Spare4	UA	UR	9999	UA9999	UR9999
I50:S088	I50 Spare5	UA	UR	9999	UA9999	UR9999
I50:S089	I50 Spare6	UA	UR	9999	UA9999	UR9999
I50:S090	I50 Spare7	UA	UR	9999	UA9999	UR9999
I50:S091	I50 Spare8	UA	UR	9999	UA9999	UR9999
I50:S092	I50 Spare9	UA	UR	9999	UA9999	UR9999
I50:S093	I50 Spare10	UA	UR	9999	UA9999	UR9999
I51:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I51:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I51:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I51:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I51:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I51:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I51:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I51:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I51:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I51:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I51:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I51:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I51:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I51:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I51:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I51:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I51:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I51:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I51:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I51:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I51:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I51:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I51:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I51:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I51:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I51:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I51:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I51:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I51:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I51:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I51:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I51:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I51:S001	I51 Cab Tamper	TA	TR	9999	TA9999	TR9999
I51:S002	I51 AC fail	AT	AR	9999	AT9999	AR9999
I51:S003	I51 Low Batt	YT	YR	9999	YT9999	YR9999
I51:S004	I51 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I51:S005	I51 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I51:S006	I51 Low Volts	YP	YQ	9999	YP9999	YQ9999
I51:S007	I51 PS Fail	YP	YQ	9999	YP9999	YQ9999
I51:S008	I51 Batt Test	IA	IR	9999	IA9999	IR9999
I51:S009	I51 Unibus	EM	EN	9999	EM9999	EN9999
I51:S010	I51 Download Fail	YF	UX	9999	YF9999	UX9999
I51:S011	I51 Spare1	UA	UR	9999	UA9999	UR9999
I51:S012	I51 LAN Comms	EM	EN	9999	EM9999	EN9999
I51:S013	I51 Door1 Fault	IA	IR	9999	IA9999	IR9999
I51:S014	I51 Door2 Fault	IA	IR	9999	IA9999	IR9999
I51:S015	I51 Door3 Fault	IA	IR	9999	IA9999	IR9999
I51:S016	I51 Door4 Fault	IA	IR	9999	IA9999	IR9999
I51:S017	I51 Door5 Fault	IA	IR	9999	IA9999	IR9999
I51:S018	I51 Door6 Fault	IA	IR	9999	IA9999	IR9999
I51:S019	I51 Door7 Fault	IA	IR	9999	IA9999	IR9999
I51:S020	I51 Door8 Fault	IA	IR	9999	IA9999	IR9999
I51:S021	I51 Door1 Forced	DF	DR	9999	DF9999	DR9999
I51:S022	I51 Door2 Forced	DF	DR	9999	DF9999	DR9999
I51:S023	I51 Door3 Forced	DF	DR	9999	DF9999	DR9999
I51:S024	I51 Door4 Forced	DF	DR	9999	DF9999	DR9999
I51:S025	I51 Door5 Forced	DF	DR	9999	DF9999	DR9999
I51:S026	I51 Door6 Forced	DF	DR	9999	DF9999	DR9999
I51:S027	I51 Door7 Forced	DF	DR	9999	DF9999	DR9999
I51:S028	I51 Door8 Forced	DF	DR	9999	DF9999	DR9999
I51:S029	I51 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I51:S030	I51 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I51:S031	I51 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I51:S032	I51 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I51:S033	I51 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I51:S034	I51 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I51:S035	I51 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I51:S036	I51 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I51:S037	I51 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I51:S038	I51 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I51:S039	I51 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I51:S040	I51 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I51:S041	I51 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I51:S042	I51 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I51:S043	I51 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I51:S044	I51 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I51:S045	I51 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I51:S046	I51 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I51:S047	I51 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I51:S048	I51 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I51:S049	I51 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I51:S050	I51 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I51:S051	I51 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I51:S052	I51 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I51:S053	I51 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I51:S054	I51 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I51:S055	I51 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I51:S056	I51 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I51:S057	I51 Rdr5 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I51:S058	I51 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I51:S059	I51 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I51:S060	I51 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I51:S061	I51 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I51:S062	I51 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I51:S063	I51 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I51:S064	I51 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I51:S065	I51 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I51:S066	I51 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I51:S067	I51 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I51:S068	I51 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I51:S069	I51 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I51:S070	I51 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I51:S071	I51 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I51:S072	I51 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I51:S073	I51 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I51:S074	I51 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I51:S075	I51 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I51:S076	I51 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I51:S077	I51 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I51:S078	I51 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I51:S079	I51 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I51:S080	I51 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I51:S081	I51 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I51:S082	I51 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I51:S083	I51 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I51:S084	I51 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I51:S085	I51 Spare2	UA	UR	9999	UA9999	UR9999
I51:S086	I51 Spare3	UA	UR	9999	UA9999	UR9999
I51:S087	I51 Spare4	UA	UR	9999	UA9999	UR9999
I51:S088	I51 Spare5	UA	UR	9999	UA9999	UR9999
I51:S089	I51 Spare6	UA	UR	9999	UA9999	UR9999
I51:S090	I51 Spare7	UA	UR	9999	UA9999	UR9999
I51:S091	I51 Spare8	UA	UR	9999	UA9999	UR9999
I51:S092	I51 Spare9	UA	UR	9999	UA9999	UR9999
I51:S093	I51 Spare10	UA	UR	9999	UA9999	UR9999
I52:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I52:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I52:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I52:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I52:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I52:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I52:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I52:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I52:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I52:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I52:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I52:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I52:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I52:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I52:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I52:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I52:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I52:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I52:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I52:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I52:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I52:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I52:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I52:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I52:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I52:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I52:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I52:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I52:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I52:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I52:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I52:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I52:S001	I52 Cab Tamper	TA	TR	9999	TA9999	TR9999
I52:S002	I52 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

I52:S003	I52 Low Batt	YT	YR	9999	YT9999	YR9999
I52:S004	I52 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I52:S005	I52 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I52:S006	I52 Low Volts	YP	YQ	9999	YP9999	YQ9999
I52:S007	I52 PS Fail	YP	YQ	9999	YP9999	YQ9999
I52:S008	I52 Batt Test	IA	IR	9999	IA9999	IR9999
I52:S009	I52 Unibus	EM	EN	9999	EM9999	EN9999
I52:S010	I52 Download Fail	YF	UX	9999	YF9999	UX9999
I52:S011	I52 Spare1	UA	UR	9999	UA9999	UR9999
I52:S012	I52 LAN Comms	EM	EN	9999	EM9999	EN9999
I52:S013	I52 Door1 Fault	IA	IR	9999	IA9999	IR9999
I52:S014	I52 Door2 Fault	IA	IR	9999	IA9999	IR9999
I52:S015	I52 Door3 Fault	IA	IR	9999	IA9999	IR9999
I52:S016	I52 Door4 Fault	IA	IR	9999	IA9999	IR9999
I52:S017	I52 Door5 Fault	IA	IR	9999	IA9999	IR9999
I52:S018	I52 Door6 Fault	IA	IR	9999	IA9999	IR9999
I52:S019	I52 Door7 Fault	IA	IR	9999	IA9999	IR9999
I52:S020	I52 Door8 Fault	IA	IR	9999	IA9999	IR9999
I52:S021	I52 Door1 Forced	DF	DR	9999	DF9999	DR9999
I52:S022	I52 Door2 Forced	DF	DR	9999	DF9999	DR9999
I52:S023	I52 Door3 Forced	DF	DR	9999	DF9999	DR9999
I52:S024	I52 Door4 Forced	DF	DR	9999	DF9999	DR9999
I52:S025	I52 Door5 Forced	DF	DR	9999	DF9999	DR9999
I52:S026	I52 Door6 Forced	DF	DR	9999	DF9999	DR9999
I52:S027	I52 Door7 Forced	DF	DR	9999	DF9999	DR9999
I52:S028	I52 Door8 Forced	DF	DR	9999	DF9999	DR9999
I52:S029	I52 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I52:S030	I52 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I52:S031	I52 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I52:S032	I52 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I52:S033	I52 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I52:S034	I52 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I52:S035	I52 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I52:S036	I52 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I52:S037	I52 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I52:S038	I52 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I52:S039	I52 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I52:S040	I52 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I52:S041	I52 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I52:S042	I52 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I52:S043	I52 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I52:S044	I52 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I52:S045	I52 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I52:S046	I52 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I52:S047	I52 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I52:S048	I52 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I52:S049	I52 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I52:S050	I52 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I52:S051	I52 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I52:S052	I52 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I52:S053	I52 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I52:S054	I52 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I52:S055	I52 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I52:S056	I52 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I52:S057	I52 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I52:S058	I52 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I52:S059	I52 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I52:S060	I52 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I52:S061	I52 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I52:S062	I52 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I52:S063	I52 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I52:S064	I52 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I52:S065	I52 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I52:S066	I52 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I52:S067	I52 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I52:S068	I52 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I52:S069	I52 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I52:S070	I52 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I52:S071	I52 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I52:S072	I52 Rdr4 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I52:S073	I52 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I52:S074	I52 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I52:S075	I52 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I52:S076	I52 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I52:S077	I52 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I52:S078	I52 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I52:S079	I52 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I52:S080	I52 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I52:S081	I52 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I52:S082	I52 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I52:S083	I52 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I52:S084	I52 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I52:S085	I52 Spare2	UA	UR	9999	UA9999	UR9999
I52:S086	I52 Spare3	UA	UR	9999	UA9999	UR9999
I52:S087	I52 Spare4	UA	UR	9999	UA9999	UR9999
I52:S088	I52 Spare5	UA	UR	9999	UA9999	UR9999
I52:S089	I52 Spare6	UA	UR	9999	UA9999	UR9999
I52:S090	I52 Spare7	UA	UR	9999	UA9999	UR9999
I52:S091	I52 Spare8	UA	UR	9999	UA9999	UR9999
I52:S092	I52 Spare9	UA	UR	9999	UA9999	UR9999
I52:S093	I52 Spare10	UA	UR	9999	UA9999	UR9999
I53:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I53:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I53:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I53:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I53:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I53:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I53:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I53:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I53:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I53:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I53:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I53:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I53:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I53:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I53:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I53:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I53:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I53:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I53:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I53:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I53:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I53:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I53:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I53:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I53:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I53:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I53:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I53:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I53:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I53:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I53:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I53:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I53:S001	I53 Cab Tamper	TA	TR	9999	TA9999	TR9999
I53:S002	I53 AC fail	AT	AR	9999	AT9999	AR9999
I53:S003	I53 Low Batt	YT	YR	9999	YT9999	YR9999
I53:S004	I53 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I53:S005	I53 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I53:S006	I53 Low Volts	YP	YQ	9999	YP9999	YQ9999
I53:S007	I53 PS Fail	YP	YQ	9999	YP9999	YQ9999
I53:S008	I53 Batt Test	IA	IR	9999	IA9999	IR9999
I53:S009	I53 Unibus	EM	EN	9999	EM9999	EN9999
I53:S010	I53 Download Fail	YF	UX	9999	YF9999	UX9999
I53:S011	I53 Spare1	UA	UR	9999	UA9999	UR9999
I53:S012	I53 LAN Comms	EM	EN	9999	EM9999	EN9999
I53:S013	I53 Door1 Fault	IA	IR	9999	IA9999	IR9999
I53:S014	I53 Door2 Fault	IA	IR	9999	IA9999	IR9999
I53:S015	I53 Door3 Fault	IA	IR	9999	IA9999	IR9999
I53:S016	I53 Door4 Fault	IA	IR	9999	IA9999	IR9999
I53:S017	I53 Door5 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I53:S018	I53 Door6 Fault	IA	IR	9999	IA9999	IR9999
I53:S019	I53 Door7 Fault	IA	IR	9999	IA9999	IR9999
I53:S020	I53 Door8 Fault	IA	IR	9999	IA9999	IR9999
I53:S021	I53 Door1 Forced	DF	DR	9999	DF9999	DR9999
I53:S022	I53 Door2 Forced	DF	DR	9999	DF9999	DR9999
I53:S023	I53 Door3 Forced	DF	DR	9999	DF9999	DR9999
I53:S024	I53 Door4 Forced	DF	DR	9999	DF9999	DR9999
I53:S025	I53 Door5 Forced	DF	DR	9999	DF9999	DR9999
I53:S026	I53 Door6 Forced	DF	DR	9999	DF9999	DR9999
I53:S027	I53 Door7 Forced	DF	DR	9999	DF9999	DR9999
I53:S028	I53 Door8 Forced	DF	DR	9999	DF9999	DR9999
I53:S029	I53 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I53:S030	I53 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I53:S031	I53 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I53:S032	I53 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I53:S033	I53 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I53:S034	I53 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I53:S035	I53 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I53:S036	I53 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I53:S037	I53 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I53:S038	I53 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I53:S039	I53 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I53:S040	I53 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I53:S041	I53 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I53:S042	I53 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I53:S043	I53 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I53:S044	I53 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I53:S045	I53 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I53:S046	I53 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I53:S047	I53 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I53:S048	I53 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I53:S049	I53 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I53:S050	I53 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I53:S051	I53 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I53:S052	I53 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I53:S053	I53 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I53:S054	I53 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I53:S055	I53 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I53:S056	I53 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I53:S057	I53 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I53:S058	I53 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I53:S059	I53 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I53:S060	I53 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I53:S061	I53 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I53:S062	I53 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I53:S063	I53 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I53:S064	I53 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I53:S065	I53 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I53:S066	I53 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I53:S067	I53 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I53:S068	I53 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I53:S069	I53 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I53:S070	I53 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I53:S071	I53 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I53:S072	I53 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I53:S073	I53 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I53:S074	I53 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I53:S075	I53 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I53:S076	I53 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I53:S077	I53 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I53:S078	I53 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I53:S079	I53 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I53:S080	I53 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I53:S081	I53 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I53:S082	I53 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I53:S083	I53 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I53:S084	I53 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I53:S085	I53 Spare2	UA	UR	9999	UA9999	UR9999
I53:S086	I53 Spare3	UA	UR	9999	UA9999	UR9999
I53:S087	I53 Spare4	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I53:S088	I53 Spare5	UA	UR	9999	UA9999	UR9999
I53:S089	I53 Spare6	UA	UR	9999	UA9999	UR9999
I53:S090	I53 Spare7	UA	UR	9999	UA9999	UR9999
I53:S091	I53 Spare8	UA	UR	9999	UA9999	UR9999
I53:S092	I53 Spare9	UA	UR	9999	UA9999	UR9999
I53:S093	I53 Spare10	UA	UR	9999	UA9999	UR9999
I54:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I54:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I54:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I54:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I54:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I54:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I54:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I54:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I54:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I54:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I54:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I54:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I54:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I54:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I54:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I54:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I54:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I54:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I54:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I54:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I54:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I54:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I54:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I54:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I54:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I54:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I54:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I54:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I54:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I54:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I54:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I54:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I54:S001	I54 Cab Tamper	TA	TR	9999	TA9999	TR9999
I54:S002	I54 AC fail	AT	AR	9999	AT9999	AR9999
I54:S003	I54 Low Batt	YT	YR	9999	YT9999	YR9999
I54:S004	I54 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I54:S005	I54 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I54:S006	I54 Low Volts	YP	YQ	9999	YP9999	YQ9999
I54:S007	I54 PS Fail	YP	YQ	9999	YP9999	YQ9999
I54:S008	I54 Batt Test	IA	IR	9999	IA9999	IR9999
I54:S009	I54 Unibus	EM	EN	9999	EM9999	EN9999
I54:S010	I54 Download Fail	YF	UX	9999	YF9999	UX9999
I54:S011	I54 Spare1	UA	UR	9999	UA9999	UR9999
I54:S012	I54 LAN Comms	EM	EN	9999	EM9999	EN9999
I54:S013	I54 Door1 Fault	IA	IR	9999	IA9999	IR9999
I54:S014	I54 Door2 Fault	IA	IR	9999	IA9999	IR9999
I54:S015	I54 Door3 Fault	IA	IR	9999	IA9999	IR9999
I54:S016	I54 Door4 Fault	IA	IR	9999	IA9999	IR9999
I54:S017	I54 Door5 Fault	IA	IR	9999	IA9999	IR9999
I54:S018	I54 Door6 Fault	IA	IR	9999	IA9999	IR9999
I54:S019	I54 Door7 Fault	IA	IR	9999	IA9999	IR9999
I54:S020	I54 Door8 Fault	IA	IR	9999	IA9999	IR9999
I54:S021	I54 Door1 Forced	DF	DR	9999	DF9999	DR9999
I54:S022	I54 Door2 Forced	DF	DR	9999	DF9999	DR9999
I54:S023	I54 Door3 Forced	DF	DR	9999	DF9999	DR9999
I54:S024	I54 Door4 Forced	DF	DR	9999	DF9999	DR9999
I54:S025	I54 Door5 Forced	DF	DR	9999	DF9999	DR9999
I54:S026	I54 Door6 Forced	DF	DR	9999	DF9999	DR9999
I54:S027	I54 Door7 Forced	DF	DR	9999	DF9999	DR9999
I54:S028	I54 Door8 Forced	DF	DR	9999	DF9999	DR9999
I54:S029	I54 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I54:S030	I54 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I54:S031	I54 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I54:S032	I54 Door4 DOTL	DL	DH	9999	DL9999	DH9999

Integriti SIA DECIMAL Map. V21

I54:S033	I54 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I54:S034	I54 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I54:S035	I54 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I54:S036	I54 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I54:S037	I54 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I54:S038	I54 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I54:S039	I54 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I54:S040	I54 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I54:S041	I54 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I54:S042	I54 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I54:S043	I54 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I54:S044	I54 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I54:S045	I54 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I54:S046	I54 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I54:S047	I54 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I54:S048	I54 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I54:S049	I54 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I54:S050	I54 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I54:S051	I54 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I54:S052	I54 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I54:S053	I54 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I54:S054	I54 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I54:S055	I54 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I54:S056	I54 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I54:S057	I54 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I54:S058	I54 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I54:S059	I54 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I54:S060	I54 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I54:S061	I54 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I54:S062	I54 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I54:S063	I54 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I54:S064	I54 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I54:S065	I54 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I54:S066	I54 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I54:S067	I54 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I54:S068	I54 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I54:S069	I54 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I54:S070	I54 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I54:S071	I54 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I54:S072	I54 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I54:S073	I54 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I54:S074	I54 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I54:S075	I54 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I54:S076	I54 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I54:S077	I54 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I54:S078	I54 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I54:S079	I54 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I54:S080	I54 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I54:S081	I54 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I54:S082	I54 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I54:S083	I54 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I54:S084	I54 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I54:S085	I54 Spare2	UA	UR	9999	UA9999	UR9999
I54:S086	I54 Spare3	UA	UR	9999	UA9999	UR9999
I54:S087	I54 Spare4	UA	UR	9999	UA9999	UR9999
I54:S088	I54 Spare5	UA	UR	9999	UA9999	UR9999
I54:S089	I54 Spare6	UA	UR	9999	UA9999	UR9999
I54:S090	I54 Spare7	UA	UR	9999	UA9999	UR9999
I54:S091	I54 Spare8	UA	UR	9999	UA9999	UR9999
I54:S092	I54 Spare9	UA	UR	9999	UA9999	UR9999
I54:S093	I54 Spare10	UA	UR	9999	UA9999	UR9999
I55:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I55:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I55:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I55:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I55:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I55:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I55:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I55:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I55:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999

I55:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I55:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I55:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I55:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I55:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I55:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I55:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I55:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I55:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I55:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I55:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I55:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I55:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I55:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I55:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I55:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I55:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I55:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I55:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I55:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I55:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I55:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I55:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I55:S001	I55 Cab Tamper	TA	TR	9999	TA9999	TR9999
I55:S002	I55 AC fail	AT	AR	9999	AT9999	AR9999
I55:S003	I55 Low Batt	YT	YR	9999	YT9999	YR9999
I55:S004	I55 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I55:S005	I55 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I55:S006	I55 Low Volts	YP	YQ	9999	YP9999	YQ9999
I55:S007	I55 PS Fail	YP	YQ	9999	YP9999	YQ9999
I55:S008	I55 Batt Test	IA	IR	9999	IA9999	IR9999
I55:S009	I55 Unibus	EM	EN	9999	EM9999	EN9999
I55:S010	I55 Download Fail	YF	UX	9999	YF9999	UX9999
I55:S011	I55 Spare1	UA	UR	9999	UA9999	UR9999
I55:S012	I55 LAN Comms	EM	EN	9999	EM9999	EN9999
I55:S013	I55 Door1 Fault	IA	IR	9999	IA9999	IR9999
I55:S014	I55 Door2 Fault	IA	IR	9999	IA9999	IR9999
I55:S015	I55 Door3 Fault	IA	IR	9999	IA9999	IR9999
I55:S016	I55 Door4 Fault	IA	IR	9999	IA9999	IR9999
I55:S017	I55 Door5 Fault	IA	IR	9999	IA9999	IR9999
I55:S018	I55 Door6 Fault	IA	IR	9999	IA9999	IR9999
I55:S019	I55 Door7 Fault	IA	IR	9999	IA9999	IR9999
I55:S020	I55 Door8 Fault	IA	IR	9999	IA9999	IR9999
I55:S021	I55 Door1 Forced	DF	DR	9999	DF9999	DR9999
I55:S022	I55 Door2 Forced	DF	DR	9999	DF9999	DR9999
I55:S023	I55 Door3 Forced	DF	DR	9999	DF9999	DR9999
I55:S024	I55 Door4 Forced	DF	DR	9999	DF9999	DR9999
I55:S025	I55 Door5 Forced	DF	DR	9999	DF9999	DR9999
I55:S026	I55 Door6 Forced	DF	DR	9999	DF9999	DR9999
I55:S027	I55 Door7 Forced	DF	DR	9999	DF9999	DR9999
I55:S028	I55 Door8 Forced	DF	DR	9999	DF9999	DR9999
I55:S029	I55 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I55:S030	I55 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I55:S031	I55 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I55:S032	I55 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I55:S033	I55 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I55:S034	I55 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I55:S035	I55 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I55:S036	I55 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I55:S037	I55 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I55:S038	I55 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I55:S039	I55 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I55:S040	I55 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I55:S041	I55 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I55:S042	I55 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I55:S043	I55 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I55:S044	I55 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I55:S045	I55 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I55:S046	I55 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I55:S047	I55 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I55:S048	I55 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I55:S049	I55 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I55:S050	I55 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I55:S051	I55 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I55:S052	I55 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I55:S053	I55 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I55:S054	I55 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I55:S055	I55 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I55:S056	I55 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I55:S057	I55 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I55:S058	I55 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I55:S059	I55 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I55:S060	I55 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I55:S061	I55 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I55:S062	I55 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I55:S063	I55 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I55:S064	I55 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I55:S065	I55 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I55:S066	I55 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I55:S067	I55 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I55:S068	I55 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I55:S069	I55 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I55:S070	I55 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I55:S071	I55 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I55:S072	I55 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I55:S073	I55 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I55:S074	I55 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I55:S075	I55 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I55:S076	I55 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I55:S077	I55 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I55:S078	I55 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I55:S079	I55 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I55:S080	I55 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I55:S081	I55 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I55:S082	I55 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I55:S083	I55 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I55:S084	I55 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I55:S085	I55 Spare2	UA	UR	9999	UA9999	UR9999
I55:S086	I55 Spare3	UA	UR	9999	UA9999	UR9999
I55:S087	I55 Spare4	UA	UR	9999	UA9999	UR9999
I55:S088	I55 Spare5	UA	UR	9999	UA9999	UR9999
I55:S089	I55 Spare6	UA	UR	9999	UA9999	UR9999
I55:S090	I55 Spare7	UA	UR	9999	UA9999	UR9999
I55:S091	I55 Spare8	UA	UR	9999	UA9999	UR9999
I55:S092	I55 Spare9	UA	UR	9999	UA9999	UR9999
I55:S093	I55 Spare10	UA	UR	9999	UA9999	UR9999
I56:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I56:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I56:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I56:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I56:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I56:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I56:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I56:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I56:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I56:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I56:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I56:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I56:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I56:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I56:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I56:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I56:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I56:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I56:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I56:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I56:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I56:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I56:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I56:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I56:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I56:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I56:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I56:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I56:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I56:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I56:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I56:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I56:S001	I56 Cab Tamper	TA	TR	9999	TA9999	TR9999
I56:S002	I56 AC fail	AT	AR	9999	AT9999	AR9999
I56:S003	I56 Low Batt	YT	YR	9999	YT9999	YR9999
I56:S004	I56 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I56:S005	I56 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I56:S006	I56 Low Volts	YP	YQ	9999	YP9999	YQ9999
I56:S007	I56 PS Fail	YP	YQ	9999	YP9999	YQ9999
I56:S008	I56 Batt Test	IA	IR	9999	IA9999	IR9999
I56:S009	I56 Unibus	EM	EN	9999	EM9999	EN9999
I56:S010	I56 Download Fail	YF	UX	9999	YF9999	UX9999
I56:S011	I56 Spare1	UA	UR	9999	UA9999	UR9999
I56:S012	I56 LAN Comms	EM	EN	9999	EM9999	EN9999
I56:S013	I56 Door1 Fault	IA	IR	9999	IA9999	IR9999
I56:S014	I56 Door2 Fault	IA	IR	9999	IA9999	IR9999
I56:S015	I56 Door3 Fault	IA	IR	9999	IA9999	IR9999
I56:S016	I56 Door4 Fault	IA	IR	9999	IA9999	IR9999
I56:S017	I56 Door5 Fault	IA	IR	9999	IA9999	IR9999
I56:S018	I56 Door6 Fault	IA	IR	9999	IA9999	IR9999
I56:S019	I56 Door7 Fault	IA	IR	9999	IA9999	IR9999
I56:S020	I56 Door8 Fault	IA	IR	9999	IA9999	IR9999
I56:S021	I56 Door1 Forced	DF	DR	9999	DF9999	DR9999
I56:S022	I56 Door2 Forced	DF	DR	9999	DF9999	DR9999
I56:S023	I56 Door3 Forced	DF	DR	9999	DF9999	DR9999
I56:S024	I56 Door4 Forced	DF	DR	9999	DF9999	DR9999
I56:S025	I56 Door5 Forced	DF	DR	9999	DF9999	DR9999
I56:S026	I56 Door6 Forced	DF	DR	9999	DF9999	DR9999
I56:S027	I56 Door7 Forced	DF	DR	9999	DF9999	DR9999
I56:S028	I56 Door8 Forced	DF	DR	9999	DF9999	DR9999
I56:S029	I56 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I56:S030	I56 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I56:S031	I56 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I56:S032	I56 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I56:S033	I56 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I56:S034	I56 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I56:S035	I56 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I56:S036	I56 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I56:S037	I56 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I56:S038	I56 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I56:S039	I56 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I56:S040	I56 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I56:S041	I56 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I56:S042	I56 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I56:S043	I56 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I56:S044	I56 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I56:S045	I56 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I56:S046	I56 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I56:S047	I56 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I56:S048	I56 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I56:S049	I56 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I56:S050	I56 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I56:S051	I56 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I56:S052	I56 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I56:S053	I56 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I56:S054	I56 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I56:S055	I56 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I56:S056	I56 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I56:S057	I56 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I56:S058	I56 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I56:S059	I56 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I56:S060	I56 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I56:S061	I56 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I56:S062	I56 Rdr10 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I56:S063	I56 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I56:S064	I56 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I56:S065	I56 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I56:S066	I56 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I56:S067	I56 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I56:S068	I56 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I56:S069	I56 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I56:S070	I56 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I56:S071	I56 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I56:S072	I56 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I56:S073	I56 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I56:S074	I56 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I56:S075	I56 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I56:S076	I56 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I56:S077	I56 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I56:S078	I56 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I56:S079	I56 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I56:S080	I56 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I56:S081	I56 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I56:S082	I56 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I56:S083	I56 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I56:S084	I56 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I56:S085	I56 Spare2	UA	UR	9999	UA9999	UR9999
I56:S086	I56 Spare3	UA	UR	9999	UA9999	UR9999
I56:S087	I56 Spare4	UA	UR	9999	UA9999	UR9999
I56:S088	I56 Spare5	UA	UR	9999	UA9999	UR9999
I56:S089	I56 Spare6	UA	UR	9999	UA9999	UR9999
I56:S090	I56 Spare7	UA	UR	9999	UA9999	UR9999
I56:S091	I56 Spare8	UA	UR	9999	UA9999	UR9999
I56:S092	I56 Spare9	UA	UR	9999	UA9999	UR9999
I56:S093	I56 Spare10	UA	UR	9999	UA9999	UR9999
I57:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I57:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I57:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I57:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I57:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I57:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I57:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I57:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I57:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I57:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I57:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I57:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I57:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I57:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I57:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I57:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I57:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I57:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I57:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I57:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I57:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I57:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I57:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I57:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I57:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I57:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I57:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I57:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I57:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I57:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I57:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I57:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I57:S001	I57 Cab Tamper	TA	TR	9999	TA9999	TR9999
I57:S002	I57 AC fail	AT	AR	9999	AT9999	AR9999
I57:S003	I57 Low Batt	YT	YR	9999	YT9999	YR9999
I57:S004	I57 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I57:S005	I57 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I57:S006	I57 Low Volts	YP	YQ	9999	YP9999	YQ9999
I57:S007	I57 PS Fail	YP	YQ	9999	YP9999	YQ9999

I57:S008	I57 Batt Test	IA	IR	9999	IA9999	IR9999
I57:S009	I57 Unibus	EM	EN	9999	EM9999	EN9999
I57:S010	I57 Download Fail	YF	UX	9999	YF9999	UX9999
I57:S011	I57 Spare1	UA	UR	9999	UA9999	UR9999
I57:S012	I57 LAN Comms	EM	EN	9999	EM9999	EN9999
I57:S013	I57 Door1 Fault	IA	IR	9999	IA9999	IR9999
I57:S014	I57 Door2 Fault	IA	IR	9999	IA9999	IR9999
I57:S015	I57 Door3 Fault	IA	IR	9999	IA9999	IR9999
I57:S016	I57 Door4 Fault	IA	IR	9999	IA9999	IR9999
I57:S017	I57 Door5 Fault	IA	IR	9999	IA9999	IR9999
I57:S018	I57 Door6 Fault	IA	IR	9999	IA9999	IR9999
I57:S019	I57 Door7 Fault	IA	IR	9999	IA9999	IR9999
I57:S020	I57 Door8 Fault	IA	IR	9999	IA9999	IR9999
I57:S021	I57 Door1 Forced	DF	DR	9999	DF9999	DR9999
I57:S022	I57 Door2 Forced	DF	DR	9999	DF9999	DR9999
I57:S023	I57 Door3 Forced	DF	DR	9999	DF9999	DR9999
I57:S024	I57 Door4 Forced	DF	DR	9999	DF9999	DR9999
I57:S025	I57 Door5 Forced	DF	DR	9999	DF9999	DR9999
I57:S026	I57 Door6 Forced	DF	DR	9999	DF9999	DR9999
I57:S027	I57 Door7 Forced	DF	DR	9999	DF9999	DR9999
I57:S028	I57 Door8 Forced	DF	DR	9999	DF9999	DR9999
I57:S029	I57 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I57:S030	I57 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I57:S031	I57 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I57:S032	I57 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I57:S033	I57 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I57:S034	I57 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I57:S035	I57 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I57:S036	I57 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I57:S037	I57 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I57:S038	I57 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I57:S039	I57 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I57:S040	I57 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I57:S041	I57 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I57:S042	I57 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I57:S043	I57 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I57:S044	I57 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I57:S045	I57 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I57:S046	I57 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I57:S047	I57 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I57:S048	I57 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I57:S049	I57 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I57:S050	I57 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I57:S051	I57 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I57:S052	I57 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I57:S053	I57 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I57:S054	I57 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I57:S055	I57 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I57:S056	I57 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I57:S057	I57 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I57:S058	I57 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I57:S059	I57 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I57:S060	I57 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I57:S061	I57 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I57:S062	I57 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I57:S063	I57 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I57:S064	I57 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I57:S065	I57 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I57:S066	I57 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I57:S067	I57 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I57:S068	I57 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I57:S069	I57 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I57:S070	I57 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I57:S071	I57 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I57:S072	I57 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I57:S073	I57 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I57:S074	I57 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I57:S075	I57 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I57:S076	I57 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I57:S077	I57 Rdr9 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I57:S078	I57 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I57:S079	I57 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I57:S080	I57 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I57:S081	I57 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I57:S082	I57 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I57:S083	I57 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I57:S084	I57 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I57:S085	I57 Spare2	UA	UR	9999	UA9999	UR9999
I57:S086	I57 Spare3	UA	UR	9999	UA9999	UR9999
I57:S087	I57 Spare4	UA	UR	9999	UA9999	UR9999
I57:S088	I57 Spare5	UA	UR	9999	UA9999	UR9999
I57:S089	I57 Spare6	UA	UR	9999	UA9999	UR9999
I57:S090	I57 Spare7	UA	UR	9999	UA9999	UR9999
I57:S091	I57 Spare8	UA	UR	9999	UA9999	UR9999
I57:S092	I57 Spare9	UA	UR	9999	UA9999	UR9999
I57:S093	I57 Spare10	UA	UR	9999	UA9999	UR9999
I58:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I58:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I58:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I58:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I58:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I58:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I58:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I58:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I58:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I58:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I58:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I58:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I58:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I58:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I58:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I58:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I58:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I58:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I58:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I58:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I58:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I58:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I58:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I58:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I58:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I58:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I58:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I58:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I58:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I58:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I58:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I58:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I58:S001	I58 Cab Tamper	TA	TR	9999	TA9999	TR9999
I58:S002	I58 AC fail	AT	AR	9999	AT9999	AR9999
I58:S003	I58 Low Batt	YT	YR	9999	YT9999	YR9999
I58:S004	I58 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I58:S005	I58 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I58:S006	I58 Low Volts	YP	YQ	9999	YP9999	YQ9999
I58:S007	I58 PS Fail	YP	YQ	9999	YP9999	YQ9999
I58:S008	I58 Batt Test	IA	IR	9999	IA9999	IR9999
I58:S009	I58 Unibus	EM	EN	9999	EM9999	EN9999
I58:S010	I58 Download Fail	YF	UX	9999	YF9999	UX9999
I58:S011	I58 Spare1	UA	UR	9999	UA9999	UR9999
I58:S012	I58 LAN Comms	EM	EN	9999	EM9999	EN9999
I58:S013	I58 Door1 Fault	IA	IR	9999	IA9999	IR9999
I58:S014	I58 Door2 Fault	IA	IR	9999	IA9999	IR9999
I58:S015	I58 Door3 Fault	IA	IR	9999	IA9999	IR9999
I58:S016	I58 Door4 Fault	IA	IR	9999	IA9999	IR9999
I58:S017	I58 Door5 Fault	IA	IR	9999	IA9999	IR9999
I58:S018	I58 Door6 Fault	IA	IR	9999	IA9999	IR9999
I58:S019	I58 Door7 Fault	IA	IR	9999	IA9999	IR9999
I58:S020	I58 Door8 Fault	IA	IR	9999	IA9999	IR9999
I58:S021	I58 Door1 Forced	DF	DR	9999	DF9999	DR9999
I58:S022	I58 Door2 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I58:S023	I58 Door3 Forced	DF	DR	9999	DF9999	DR9999
I58:S024	I58 Door4 Forced	DF	DR	9999	DF9999	DR9999
I58:S025	I58 Door5 Forced	DF	DR	9999	DF9999	DR9999
I58:S026	I58 Door6 Forced	DF	DR	9999	DF9999	DR9999
I58:S027	I58 Door7 Forced	DF	DR	9999	DF9999	DR9999
I58:S028	I58 Door8 Forced	DF	DR	9999	DF9999	DR9999
I58:S029	I58 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I58:S030	I58 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I58:S031	I58 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I58:S032	I58 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I58:S033	I58 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I58:S034	I58 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I58:S035	I58 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I58:S036	I58 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I58:S037	I58 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I58:S038	I58 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I58:S039	I58 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I58:S040	I58 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I58:S041	I58 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I58:S042	I58 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I58:S043	I58 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I58:S044	I58 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I58:S045	I58 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I58:S046	I58 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I58:S047	I58 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I58:S048	I58 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I58:S049	I58 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I58:S050	I58 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I58:S051	I58 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I58:S052	I58 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I58:S053	I58 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I58:S054	I58 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I58:S055	I58 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I58:S056	I58 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I58:S057	I58 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I58:S058	I58 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I58:S059	I58 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I58:S060	I58 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I58:S061	I58 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I58:S062	I58 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I58:S063	I58 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I58:S064	I58 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I58:S065	I58 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I58:S066	I58 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I58:S067	I58 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I58:S068	I58 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I58:S069	I58 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I58:S070	I58 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I58:S071	I58 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I58:S072	I58 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I58:S073	I58 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I58:S074	I58 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I58:S075	I58 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I58:S076	I58 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I58:S077	I58 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I58:S078	I58 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I58:S079	I58 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I58:S080	I58 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I58:S081	I58 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I58:S082	I58 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I58:S083	I58 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I58:S084	I58 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I58:S085	I58 Spare2	UA	UR	9999	UA9999	UR9999
I58:S086	I58 Spare3	UA	UR	9999	UA9999	UR9999
I58:S087	I58 Spare4	UA	UR	9999	UA9999	UR9999
I58:S088	I58 Spare5	UA	UR	9999	UA9999	UR9999
I58:S089	I58 Spare6	UA	UR	9999	UA9999	UR9999
I58:S090	I58 Spare7	UA	UR	9999	UA9999	UR9999
I58:S091	I58 Spare8	UA	UR	9999	UA9999	UR9999
I58:S092	I58 Spare9	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I58:S093	I58 Spare10	UA	UR	9999	UA9999	UR9999
I59:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I59:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I59:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I59:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I59:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I59:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I59:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I59:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I59:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I59:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I59:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I59:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I59:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I59:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I59:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I59:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I59:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I59:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I59:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I59:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I59:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I59:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I59:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I59:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I59:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I59:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I59:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I59:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I59:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I59:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I59:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I59:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I59:S001	I59 Cab Tamper	TA	TR	9999	TA9999	TR9999
I59:S002	I59 AC fail	AT	AR	9999	AT9999	AR9999
I59:S003	I59 Low Batt	YT	YR	9999	YT9999	YR9999
I59:S004	I59 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I59:S005	I59 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I59:S006	I59 Low Volts	YP	YQ	9999	YP9999	YQ9999
I59:S007	I59 PS Fail	YP	YQ	9999	YP9999	YQ9999
I59:S008	I59 Batt Test	IA	IR	9999	IA9999	IR9999
I59:S009	I59 Unibus	EM	EN	9999	EM9999	EN9999
I59:S010	I59 Download Fail	YF	UX	9999	YF9999	UX9999
I59:S011	I59 Spare1	UA	UR	9999	UA9999	UR9999
I59:S012	I59 LAN Comms	EM	EN	9999	EM9999	EN9999
I59:S013	I59 Door1 Fault	IA	IR	9999	IA9999	IR9999
I59:S014	I59 Door2 Fault	IA	IR	9999	IA9999	IR9999
I59:S015	I59 Door3 Fault	IA	IR	9999	IA9999	IR9999
I59:S016	I59 Door4 Fault	IA	IR	9999	IA9999	IR9999
I59:S017	I59 Door5 Fault	IA	IR	9999	IA9999	IR9999
I59:S018	I59 Door6 Fault	IA	IR	9999	IA9999	IR9999
I59:S019	I59 Door7 Fault	IA	IR	9999	IA9999	IR9999
I59:S020	I59 Door8 Fault	IA	IR	9999	IA9999	IR9999
I59:S021	I59 Door1 Forced	DF	DR	9999	DF9999	DR9999
I59:S022	I59 Door2 Forced	DF	DR	9999	DF9999	DR9999
I59:S023	I59 Door3 Forced	DF	DR	9999	DF9999	DR9999
I59:S024	I59 Door4 Forced	DF	DR	9999	DF9999	DR9999
I59:S025	I59 Door5 Forced	DF	DR	9999	DF9999	DR9999
I59:S026	I59 Door6 Forced	DF	DR	9999	DF9999	DR9999
I59:S027	I59 Door7 Forced	DF	DR	9999	DF9999	DR9999
I59:S028	I59 Door8 Forced	DF	DR	9999	DF9999	DR9999
I59:S029	I59 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I59:S030	I59 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I59:S031	I59 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I59:S032	I59 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I59:S033	I59 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I59:S034	I59 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I59:S035	I59 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I59:S036	I59 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I59:S037	I59 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I59:S038	I59 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I59:S039	I59 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I59:S040	I59 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I59:S041	I59 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I59:S042	I59 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I59:S043	I59 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I59:S044	I59 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I59:S045	I59 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I59:S046	I59 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I59:S047	I59 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I59:S048	I59 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I59:S049	I59 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I59:S050	I59 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I59:S051	I59 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I59:S052	I59 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I59:S053	I59 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I59:S054	I59 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I59:S055	I59 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I59:S056	I59 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I59:S057	I59 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I59:S058	I59 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I59:S059	I59 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I59:S060	I59 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I59:S061	I59 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I59:S062	I59 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I59:S063	I59 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I59:S064	I59 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I59:S065	I59 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I59:S066	I59 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I59:S067	I59 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I59:S068	I59 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I59:S069	I59 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I59:S070	I59 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I59:S071	I59 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I59:S072	I59 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I59:S073	I59 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I59:S074	I59 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I59:S075	I59 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I59:S076	I59 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I59:S077	I59 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I59:S078	I59 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I59:S079	I59 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I59:S080	I59 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I59:S081	I59 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I59:S082	I59 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I59:S083	I59 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I59:S084	I59 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I59:S085	I59 Spare2	UA	UR	9999	UA9999	UR9999
I59:S086	I59 Spare3	UA	UR	9999	UA9999	UR9999
I59:S087	I59 Spare4	UA	UR	9999	UA9999	UR9999
I59:S088	I59 Spare5	UA	UR	9999	UA9999	UR9999
I59:S089	I59 Spare6	UA	UR	9999	UA9999	UR9999
I59:S090	I59 Spare7	UA	UR	9999	UA9999	UR9999
I59:S091	I59 Spare8	UA	UR	9999	UA9999	UR9999
I59:S092	I59 Spare9	UA	UR	9999	UA9999	UR9999
I59:S093	I59 Spare10	UA	UR	9999	UA9999	UR9999
I60:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I60:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I60:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I60:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I60:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I60:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I60:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I60:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I60:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I60:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I60:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I60:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I60:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I60:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999

I60:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I60:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I60:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I60:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I60:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I60:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I60:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I60:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I60:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I60:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I60:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I60:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I60:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I60:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I60:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I60:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I60:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I60:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I60:S001	I60 Cab Tamper	TA	TR	9999	TA9999	TR9999
I60:S002	I60 AC fail	AT	AR	9999	AT9999	AR9999
I60:S003	I60 Low Batt	YT	YR	9999	YT9999	YR9999
I60:S004	I60 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I60:S005	I60 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I60:S006	I60 Low Volts	YP	YQ	9999	YP9999	YQ9999
I60:S007	I60 PS Fail	YP	YQ	9999	YP9999	YQ9999
I60:S008	I60 Batt Test	IA	IR	9999	IA9999	IR9999
I60:S009	I60 Unibus	EM	EN	9999	EM9999	EN9999
I60:S010	I60 Download Fail	YF	UX	9999	YF9999	UX9999
I60:S011	I60 Spare1	UA	UR	9999	UA9999	UR9999
I60:S012	I60 LAN Comms	EM	EN	9999	EM9999	EN9999
I60:S013	I60 Door1 Fault	IA	IR	9999	IA9999	IR9999
I60:S014	I60 Door2 Fault	IA	IR	9999	IA9999	IR9999
I60:S015	I60 Door3 Fault	IA	IR	9999	IA9999	IR9999
I60:S016	I60 Door4 Fault	IA	IR	9999	IA9999	IR9999
I60:S017	I60 Door5 Fault	IA	IR	9999	IA9999	IR9999
I60:S018	I60 Door6 Fault	IA	IR	9999	IA9999	IR9999
I60:S019	I60 Door7 Fault	IA	IR	9999	IA9999	IR9999
I60:S020	I60 Door8 Fault	IA	IR	9999	IA9999	IR9999
I60:S021	I60 Door1 Forced	DF	DR	9999	DF9999	DR9999
I60:S022	I60 Door2 Forced	DF	DR	9999	DF9999	DR9999
I60:S023	I60 Door3 Forced	DF	DR	9999	DF9999	DR9999
I60:S024	I60 Door4 Forced	DF	DR	9999	DF9999	DR9999
I60:S025	I60 Door5 Forced	DF	DR	9999	DF9999	DR9999
I60:S026	I60 Door6 Forced	DF	DR	9999	DF9999	DR9999
I60:S027	I60 Door7 Forced	DF	DR	9999	DF9999	DR9999
I60:S028	I60 Door8 Forced	DF	DR	9999	DF9999	DR9999
I60:S029	I60 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I60:S030	I60 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I60:S031	I60 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I60:S032	I60 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I60:S033	I60 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I60:S034	I60 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I60:S035	I60 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I60:S036	I60 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I60:S037	I60 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I60:S038	I60 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I60:S039	I60 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I60:S040	I60 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I60:S041	I60 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I60:S042	I60 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I60:S043	I60 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I60:S044	I60 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I60:S045	I60 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I60:S046	I60 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I60:S047	I60 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I60:S048	I60 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I60:S049	I60 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I60:S050	I60 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I60:S051	I60 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I60:S052	I60 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I60:S053	I60 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I60:S054	I60 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I60:S055	I60 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I60:S056	I60 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I60:S057	I60 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I60:S058	I60 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I60:S059	I60 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I60:S060	I60 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I60:S061	I60 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I60:S062	I60 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I60:S063	I60 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I60:S064	I60 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I60:S065	I60 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I60:S066	I60 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I60:S067	I60 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I60:S068	I60 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I60:S069	I60 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I60:S070	I60 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I60:S071	I60 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I60:S072	I60 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I60:S073	I60 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I60:S074	I60 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I60:S075	I60 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I60:S076	I60 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I60:S077	I60 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I60:S078	I60 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I60:S079	I60 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I60:S080	I60 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I60:S081	I60 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I60:S082	I60 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I60:S083	I60 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I60:S084	I60 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I60:S085	I60 Spare2	UA	UR	9999	UA9999	UR9999
I60:S086	I60 Spare3	UA	UR	9999	UA9999	UR9999
I60:S087	I60 Spare4	UA	UR	9999	UA9999	UR9999
I60:S088	I60 Spare5	UA	UR	9999	UA9999	UR9999
I60:S089	I60 Spare6	UA	UR	9999	UA9999	UR9999
I60:S090	I60 Spare7	UA	UR	9999	UA9999	UR9999
I60:S091	I60 Spare8	UA	UR	9999	UA9999	UR9999
I60:S092	I60 Spare9	UA	UR	9999	UA9999	UR9999
I60:S093	I60 Spare10	UA	UR	9999	UA9999	UR9999
I61:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I61:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I61:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I61:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I61:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I61:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I61:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I61:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I61:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I61:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I61:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I61:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I61:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I61:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I61:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I61:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I61:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I61:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I61:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I61:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I61:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I61:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I61:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I61:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I61:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I61:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I61:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I61:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I61:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I61:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I61:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I61:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I61:S001	I61 Cab Tamper	TA	TR	9999	TA9999	TR9999
I61:S002	I61 AC fail	AT	AR	9999	AT9999	AR9999
I61:S003	I61 Low Batt	YT	YR	9999	YT9999	YR9999
I61:S004	I61 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I61:S005	I61 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I61:S006	I61 Low Volts	YP	YQ	9999	YP9999	YQ9999
I61:S007	I61 PS Fail	YP	YQ	9999	YP9999	YQ9999
I61:S008	I61 Batt Test	IA	IR	9999	IA9999	IR9999
I61:S009	I61 Unibus	EM	EN	9999	EM9999	EN9999
I61:S010	I61 Download Fail	YF	UX	9999	YF9999	UX9999
I61:S011	I61 Spare1	UA	UR	9999	UA9999	UR9999
I61:S012	I61 LAN Comms	EM	EN	9999	EM9999	EN9999
I61:S013	I61 Door1 Fault	IA	IR	9999	IA9999	IR9999
I61:S014	I61 Door2 Fault	IA	IR	9999	IA9999	IR9999
I61:S015	I61 Door3 Fault	IA	IR	9999	IA9999	IR9999
I61:S016	I61 Door4 Fault	IA	IR	9999	IA9999	IR9999
I61:S017	I61 Door5 Fault	IA	IR	9999	IA9999	IR9999
I61:S018	I61 Door6 Fault	IA	IR	9999	IA9999	IR9999
I61:S019	I61 Door7 Fault	IA	IR	9999	IA9999	IR9999
I61:S020	I61 Door8 Fault	IA	IR	9999	IA9999	IR9999
I61:S021	I61 Door1 Forced	DF	DR	9999	DF9999	DR9999
I61:S022	I61 Door2 Forced	DF	DR	9999	DF9999	DR9999
I61:S023	I61 Door3 Forced	DF	DR	9999	DF9999	DR9999
I61:S024	I61 Door4 Forced	DF	DR	9999	DF9999	DR9999
I61:S025	I61 Door5 Forced	DF	DR	9999	DF9999	DR9999
I61:S026	I61 Door6 Forced	DF	DR	9999	DF9999	DR9999
I61:S027	I61 Door7 Forced	DF	DR	9999	DF9999	DR9999
I61:S028	I61 Door8 Forced	DF	DR	9999	DF9999	DR9999
I61:S029	I61 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I61:S030	I61 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I61:S031	I61 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I61:S032	I61 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I61:S033	I61 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I61:S034	I61 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I61:S035	I61 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I61:S036	I61 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I61:S037	I61 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I61:S038	I61 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I61:S039	I61 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I61:S040	I61 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I61:S041	I61 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I61:S042	I61 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I61:S043	I61 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I61:S044	I61 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I61:S045	I61 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I61:S046	I61 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I61:S047	I61 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I61:S048	I61 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I61:S049	I61 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I61:S050	I61 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I61:S051	I61 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I61:S052	I61 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I61:S053	I61 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I61:S054	I61 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I61:S055	I61 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I61:S056	I61 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I61:S057	I61 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I61:S058	I61 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I61:S059	I61 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I61:S060	I61 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I61:S061	I61 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I61:S062	I61 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I61:S063	I61 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I61:S064	I61 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I61:S065	I61 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I61:S066	I61 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I61:S067	I61 Rdr15 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I61:S068	I61 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I61:S069	I61 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I61:S070	I61 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I61:S071	I61 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I61:S072	I61 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I61:S073	I61 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I61:S074	I61 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I61:S075	I61 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I61:S076	I61 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I61:S077	I61 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I61:S078	I61 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I61:S079	I61 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I61:S080	I61 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I61:S081	I61 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I61:S082	I61 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I61:S083	I61 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I61:S084	I61 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I61:S085	I61 Spare2	UA	UR	9999	UA9999	UR9999
I61:S086	I61 Spare3	UA	UR	9999	UA9999	UR9999
I61:S087	I61 Spare4	UA	UR	9999	UA9999	UR9999
I61:S088	I61 Spare5	UA	UR	9999	UA9999	UR9999
I61:S089	I61 Spare6	UA	UR	9999	UA9999	UR9999
I61:S090	I61 Spare7	UA	UR	9999	UA9999	UR9999
I61:S091	I61 Spare8	UA	UR	9999	UA9999	UR9999
I61:S092	I61 Spare9	UA	UR	9999	UA9999	UR9999
I61:S093	I61 Spare10	UA	UR	9999	UA9999	UR9999
I62:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I62:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I62:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I62:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I62:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I62:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I62:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I62:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I62:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I62:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I62:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I62:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I62:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I62:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I62:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I62:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I62:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I62:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I62:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I62:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I62:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I62:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I62:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I62:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I62:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I62:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I62:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I62:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I62:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I62:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I62:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I62:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I62:S001	I62 Cab Tamper	TA	TR	9999	TA9999	TR9999
I62:S002	I62 AC fail	AT	AR	9999	AT9999	AR9999
I62:S003	I62 Low Batt	YT	YR	9999	YT9999	YR9999
I62:S004	I62 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I62:S005	I62 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I62:S006	I62 Low Volts	YP	YQ	9999	YP9999	YQ9999
I62:S007	I62 PS Fail	YP	YQ	9999	YP9999	YQ9999
I62:S008	I62 Batt Test	IA	IR	9999	IA9999	IR9999
I62:S009	I62 Unibus	EM	EN	9999	EM9999	EN9999
I62:S010	I62 Download Fail	YF	UX	9999	YF9999	UX9999
I62:S011	I62 Spare1	UA	UR	9999	UA9999	UR9999
I62:S012	I62 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

I62:S013	I62 Door1 Fault	IA	IR	9999	IA9999	IR9999
I62:S014	I62 Door2 Fault	IA	IR	9999	IA9999	IR9999
I62:S015	I62 Door3 Fault	IA	IR	9999	IA9999	IR9999
I62:S016	I62 Door4 Fault	IA	IR	9999	IA9999	IR9999
I62:S017	I62 Door5 Fault	IA	IR	9999	IA9999	IR9999
I62:S018	I62 Door6 Fault	IA	IR	9999	IA9999	IR9999
I62:S019	I62 Door7 Fault	IA	IR	9999	IA9999	IR9999
I62:S020	I62 Door8 Fault	IA	IR	9999	IA9999	IR9999
I62:S021	I62 Door1 Forced	DF	DR	9999	DF9999	DR9999
I62:S022	I62 Door2 Forced	DF	DR	9999	DF9999	DR9999
I62:S023	I62 Door3 Forced	DF	DR	9999	DF9999	DR9999
I62:S024	I62 Door4 Forced	DF	DR	9999	DF9999	DR9999
I62:S025	I62 Door5 Forced	DF	DR	9999	DF9999	DR9999
I62:S026	I62 Door6 Forced	DF	DR	9999	DF9999	DR9999
I62:S027	I62 Door7 Forced	DF	DR	9999	DF9999	DR9999
I62:S028	I62 Door8 Forced	DF	DR	9999	DF9999	DR9999
I62:S029	I62 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I62:S030	I62 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I62:S031	I62 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I62:S032	I62 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I62:S033	I62 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I62:S034	I62 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I62:S035	I62 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I62:S036	I62 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I62:S037	I62 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I62:S038	I62 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I62:S039	I62 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I62:S040	I62 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I62:S041	I62 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I62:S042	I62 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I62:S043	I62 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I62:S044	I62 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I62:S045	I62 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I62:S046	I62 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I62:S047	I62 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I62:S048	I62 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I62:S049	I62 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I62:S050	I62 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I62:S051	I62 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I62:S052	I62 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I62:S053	I62 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I62:S054	I62 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I62:S055	I62 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I62:S056	I62 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I62:S057	I62 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I62:S058	I62 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I62:S059	I62 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I62:S060	I62 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I62:S061	I62 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I62:S062	I62 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I62:S063	I62 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I62:S064	I62 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I62:S065	I62 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I62:S066	I62 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I62:S067	I62 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I62:S068	I62 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I62:S069	I62 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I62:S070	I62 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I62:S071	I62 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I62:S072	I62 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I62:S073	I62 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I62:S074	I62 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I62:S075	I62 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I62:S076	I62 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I62:S077	I62 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I62:S078	I62 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I62:S079	I62 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I62:S080	I62 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I62:S081	I62 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I62:S082	I62 Rdr14 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I62:S083	I62 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I62:S084	I62 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I62:S085	I62 Spare2	UA	UR	9999	UA9999	UR9999
I62:S086	I62 Spare3	UA	UR	9999	UA9999	UR9999
I62:S087	I62 Spare4	UA	UR	9999	UA9999	UR9999
I62:S088	I62 Spare5	UA	UR	9999	UA9999	UR9999
I62:S089	I62 Spare6	UA	UR	9999	UA9999	UR9999
I62:S090	I62 Spare7	UA	UR	9999	UA9999	UR9999
I62:S091	I62 Spare8	UA	UR	9999	UA9999	UR9999
I62:S092	I62 Spare9	UA	UR	9999	UA9999	UR9999
I62:S093	I62 Spare10	UA	UR	9999	UA9999	UR9999
I63:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I63:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I63:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I63:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I63:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I63:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I63:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I63:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I63:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I63:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I63:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I63:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I63:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I63:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I63:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I63:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I63:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I63:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I63:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I63:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I63:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I63:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I63:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I63:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I63:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I63:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I63:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I63:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I63:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I63:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I63:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I63:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I63:S001	I63 Cab Tamper	TA	TR	9999	TA9999	TR9999
I63:S002	I63 AC fail	AT	AR	9999	AT9999	AR9999
I63:S003	I63 Low Batt	YT	YR	9999	YT9999	YR9999
I63:S004	I63 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I63:S005	I63 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I63:S006	I63 Low Volts	YP	YQ	9999	YP9999	YQ9999
I63:S007	I63 PS Fail	YP	YQ	9999	YP9999	YQ9999
I63:S008	I63 Batt Test	IA	IR	9999	IA9999	IR9999
I63:S009	I63 Unibus	EM	EN	9999	EM9999	EN9999
I63:S010	I63 Download Fail	YF	UX	9999	YF9999	UX9999
I63:S011	I63 Spare1	UA	UR	9999	UA9999	UR9999
I63:S012	I63 LAN Comms	EM	EN	9999	EM9999	EN9999
I63:S013	I63 Door1 Fault	IA	IR	9999	IA9999	IR9999
I63:S014	I63 Door2 Fault	IA	IR	9999	IA9999	IR9999
I63:S015	I63 Door3 Fault	IA	IR	9999	IA9999	IR9999
I63:S016	I63 Door4 Fault	IA	IR	9999	IA9999	IR9999
I63:S017	I63 Door5 Fault	IA	IR	9999	IA9999	IR9999
I63:S018	I63 Door6 Fault	IA	IR	9999	IA9999	IR9999
I63:S019	I63 Door7 Fault	IA	IR	9999	IA9999	IR9999
I63:S020	I63 Door8 Fault	IA	IR	9999	IA9999	IR9999
I63:S021	I63 Door1 Forced	DF	DR	9999	DF9999	DR9999
I63:S022	I63 Door2 Forced	DF	DR	9999	DF9999	DR9999
I63:S023	I63 Door3 Forced	DF	DR	9999	DF9999	DR9999
I63:S024	I63 Door4 Forced	DF	DR	9999	DF9999	DR9999
I63:S025	I63 Door5 Forced	DF	DR	9999	DF9999	DR9999
I63:S026	I63 Door6 Forced	DF	DR	9999	DF9999	DR9999
I63:S027	I63 Door7 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I63:S028	I63 Door8 Forced	DF	DR	9999	DF9999	DR9999
I63:S029	I63 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I63:S030	I63 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I63:S031	I63 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I63:S032	I63 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I63:S033	I63 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I63:S034	I63 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I63:S035	I63 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I63:S036	I63 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I63:S037	I63 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I63:S038	I63 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I63:S039	I63 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I63:S040	I63 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I63:S041	I63 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I63:S042	I63 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I63:S043	I63 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I63:S044	I63 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I63:S045	I63 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I63:S046	I63 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I63:S047	I63 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I63:S048	I63 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I63:S049	I63 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I63:S050	I63 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I63:S051	I63 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I63:S052	I63 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I63:S053	I63 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I63:S054	I63 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I63:S055	I63 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I63:S056	I63 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I63:S057	I63 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I63:S058	I63 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I63:S059	I63 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I63:S060	I63 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I63:S061	I63 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I63:S062	I63 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I63:S063	I63 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I63:S064	I63 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I63:S065	I63 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I63:S066	I63 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I63:S067	I63 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I63:S068	I63 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I63:S069	I63 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I63:S070	I63 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I63:S071	I63 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I63:S072	I63 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I63:S073	I63 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I63:S074	I63 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I63:S075	I63 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I63:S076	I63 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I63:S077	I63 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I63:S078	I63 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I63:S079	I63 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I63:S080	I63 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I63:S081	I63 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I63:S082	I63 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I63:S083	I63 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I63:S084	I63 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I63:S085	I63 Spare2	UA	UR	9999	UA9999	UR9999
I63:S086	I63 Spare3	UA	UR	9999	UA9999	UR9999
I63:S087	I63 Spare4	UA	UR	9999	UA9999	UR9999
I63:S088	I63 Spare5	UA	UR	9999	UA9999	UR9999
I63:S089	I63 Spare6	UA	UR	9999	UA9999	UR9999
I63:S090	I63 Spare7	UA	UR	9999	UA9999	UR9999
I63:S091	I63 Spare8	UA	UR	9999	UA9999	UR9999
I63:S092	I63 Spare9	UA	UR	9999	UA9999	UR9999
I63:S093	I63 Spare10	UA	UR	9999	UA9999	UR9999
I64:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I64:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I64:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I64:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I64:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I64:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I64:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I64:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I64:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I64:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I64:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I64:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I64:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I64:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I64:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I64:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I64:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I64:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I64:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I64:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I64:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I64:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I64:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I64:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I64:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I64:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I64:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I64:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I64:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I64:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I64:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I64:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I64:S001	I64 Cab Tamper	TA	TR	9999	TA9999	TR9999
I64:S002	I64 AC fail	AT	AR	9999	AT9999	AR9999
I64:S003	I64 Low Batt	YT	YR	9999	YT9999	YR9999
I64:S004	I64 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I64:S005	I64 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I64:S006	I64 Low Volts	YP	YQ	9999	YP9999	YQ9999
I64:S007	I64 PS Fail	YP	YQ	9999	YP9999	YQ9999
I64:S008	I64 Batt Test	IA	IR	9999	IA9999	IR9999
I64:S009	I64 Unibus	EM	EN	9999	EM9999	EN9999
I64:S010	I64 Download Fail	YF	UX	9999	YF9999	UX9999
I64:S011	I64 Spare1	UA	UR	9999	UA9999	UR9999
I64:S012	I64 LAN Comms	EM	EN	9999	EM9999	EN9999
I64:S013	I64 Door1 Fault	IA	IR	9999	IA9999	IR9999
I64:S014	I64 Door2 Fault	IA	IR	9999	IA9999	IR9999
I64:S015	I64 Door3 Fault	IA	IR	9999	IA9999	IR9999
I64:S016	I64 Door4 Fault	IA	IR	9999	IA9999	IR9999
I64:S017	I64 Door5 Fault	IA	IR	9999	IA9999	IR9999
I64:S018	I64 Door6 Fault	IA	IR	9999	IA9999	IR9999
I64:S019	I64 Door7 Fault	IA	IR	9999	IA9999	IR9999
I64:S020	I64 Door8 Fault	IA	IR	9999	IA9999	IR9999
I64:S021	I64 Door1 Forced	DF	DR	9999	DF9999	DR9999
I64:S022	I64 Door2 Forced	DF	DR	9999	DF9999	DR9999
I64:S023	I64 Door3 Forced	DF	DR	9999	DF9999	DR9999
I64:S024	I64 Door4 Forced	DF	DR	9999	DF9999	DR9999
I64:S025	I64 Door5 Forced	DF	DR	9999	DF9999	DR9999
I64:S026	I64 Door6 Forced	DF	DR	9999	DF9999	DR9999
I64:S027	I64 Door7 Forced	DF	DR	9999	DF9999	DR9999
I64:S028	I64 Door8 Forced	DF	DR	9999	DF9999	DR9999
I64:S029	I64 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I64:S030	I64 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I64:S031	I64 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I64:S032	I64 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I64:S033	I64 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I64:S034	I64 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I64:S035	I64 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I64:S036	I64 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I64:S037	I64 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I64:S038	I64 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I64:S039	I64 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I64:S040	I64 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I64:S041	I64 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I64:S042	I64 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I64:S043	I64 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I64:S044	I64 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I64:S045	I64 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I64:S046	I64 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I64:S047	I64 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I64:S048	I64 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I64:S049	I64 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I64:S050	I64 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I64:S051	I64 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I64:S052	I64 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I64:S053	I64 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I64:S054	I64 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I64:S055	I64 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I64:S056	I64 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I64:S057	I64 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I64:S058	I64 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I64:S059	I64 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I64:S060	I64 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I64:S061	I64 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I64:S062	I64 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I64:S063	I64 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I64:S064	I64 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I64:S065	I64 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I64:S066	I64 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I64:S067	I64 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I64:S068	I64 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I64:S069	I64 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I64:S070	I64 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I64:S071	I64 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I64:S072	I64 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I64:S073	I64 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I64:S074	I64 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I64:S075	I64 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I64:S076	I64 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I64:S077	I64 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I64:S078	I64 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I64:S079	I64 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I64:S080	I64 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I64:S081	I64 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I64:S082	I64 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I64:S083	I64 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I64:S084	I64 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I64:S085	I64 Spare2	UA	UR	9999	UA9999	UR9999
I64:S086	I64 Spare3	UA	UR	9999	UA9999	UR9999
I64:S087	I64 Spare4	UA	UR	9999	UA9999	UR9999
I64:S088	I64 Spare5	UA	UR	9999	UA9999	UR9999
I64:S089	I64 Spare6	UA	UR	9999	UA9999	UR9999
I64:S090	I64 Spare7	UA	UR	9999	UA9999	UR9999
I64:S091	I64 Spare8	UA	UR	9999	UA9999	UR9999
I64:S092	I64 Spare9	UA	UR	9999	UA9999	UR9999
I64:S093	I64 Spare10	UA	UR	9999	UA9999	UR9999
I65:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I65:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I65:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I65:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I65:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I65:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I65:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I65:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I65:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I65:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I65:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I65:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I65:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I65:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I65:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I65:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I65:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I65:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I65:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I65:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I65:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I65:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I65:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I65:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I65:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I65:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I65:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I65:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I65:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I65:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I65:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I65:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I65:S001	I65 Cab Tamper	TA	TR	9999	TA9999	TR9999
I65:S002	I65 AC fail	AT	AR	9999	AT9999	AR9999
I65:S003	I65 Low Batt	YT	YR	9999	YT9999	YR9999
I65:S004	I65 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I65:S005	I65 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I65:S006	I65 Low Volts	YP	YQ	9999	YP9999	YQ9999
I65:S007	I65 PS Fail	YP	YQ	9999	YP9999	YQ9999
I65:S008	I65 Batt Test	IA	IR	9999	IA9999	IR9999
I65:S009	I65 Unibus	EM	EN	9999	EM9999	EN9999
I65:S010	I65 Download Fail	YF	UX	9999	YF9999	UX9999
I65:S011	I65 Spare1	UA	UR	9999	UA9999	UR9999
I65:S012	I65 LAN Comms	EM	EN	9999	EM9999	EN9999
I65:S013	I65 Door1 Fault	IA	IR	9999	IA9999	IR9999
I65:S014	I65 Door2 Fault	IA	IR	9999	IA9999	IR9999
I65:S015	I65 Door3 Fault	IA	IR	9999	IA9999	IR9999
I65:S016	I65 Door4 Fault	IA	IR	9999	IA9999	IR9999
I65:S017	I65 Door5 Fault	IA	IR	9999	IA9999	IR9999
I65:S018	I65 Door6 Fault	IA	IR	9999	IA9999	IR9999
I65:S019	I65 Door7 Fault	IA	IR	9999	IA9999	IR9999
I65:S020	I65 Door8 Fault	IA	IR	9999	IA9999	IR9999
I65:S021	I65 Door1 Forced	DF	DR	9999	DF9999	DR9999
I65:S022	I65 Door2 Forced	DF	DR	9999	DF9999	DR9999
I65:S023	I65 Door3 Forced	DF	DR	9999	DF9999	DR9999
I65:S024	I65 Door4 Forced	DF	DR	9999	DF9999	DR9999
I65:S025	I65 Door5 Forced	DF	DR	9999	DF9999	DR9999
I65:S026	I65 Door6 Forced	DF	DR	9999	DF9999	DR9999
I65:S027	I65 Door7 Forced	DF	DR	9999	DF9999	DR9999
I65:S028	I65 Door8 Forced	DF	DR	9999	DF9999	DR9999
I65:S029	I65 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I65:S030	I65 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I65:S031	I65 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I65:S032	I65 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I65:S033	I65 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I65:S034	I65 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I65:S035	I65 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I65:S036	I65 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I65:S037	I65 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I65:S038	I65 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I65:S039	I65 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I65:S040	I65 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I65:S041	I65 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I65:S042	I65 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I65:S043	I65 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I65:S044	I65 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I65:S045	I65 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I65:S046	I65 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I65:S047	I65 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I65:S048	I65 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I65:S049	I65 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I65:S050	I65 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I65:S051	I65 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I65:S052	I65 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I65:S053	I65 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I65:S054	I65 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I65:S055	I65 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I65:S056	I65 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I65:S057	I65 Rdr5 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I65:S058	I65 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I65:S059	I65 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I65:S060	I65 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I65:S061	I65 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I65:S062	I65 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I65:S063	I65 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I65:S064	I65 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I65:S065	I65 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I65:S066	I65 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I65:S067	I65 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I65:S068	I65 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I65:S069	I65 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I65:S070	I65 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I65:S071	I65 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I65:S072	I65 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I65:S073	I65 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I65:S074	I65 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I65:S075	I65 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I65:S076	I65 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I65:S077	I65 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I65:S078	I65 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I65:S079	I65 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I65:S080	I65 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I65:S081	I65 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I65:S082	I65 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I65:S083	I65 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I65:S084	I65 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I65:S085	I65 Spare2	UA	UR	9999	UA9999	UR9999
I65:S086	I65 Spare3	UA	UR	9999	UA9999	UR9999
I65:S087	I65 Spare4	UA	UR	9999	UA9999	UR9999
I65:S088	I65 Spare5	UA	UR	9999	UA9999	UR9999
I65:S089	I65 Spare6	UA	UR	9999	UA9999	UR9999
I65:S090	I65 Spare7	UA	UR	9999	UA9999	UR9999
I65:S091	I65 Spare8	UA	UR	9999	UA9999	UR9999
I65:S092	I65 Spare9	UA	UR	9999	UA9999	UR9999
I65:S093	I65 Spare10	UA	UR	9999	UA9999	UR9999
I66:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I66:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I66:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I66:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I66:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I66:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I66:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I66:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I66:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I66:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I66:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I66:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I66:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I66:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I66:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I66:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I66:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I66:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I66:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I66:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I66:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I66:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I66:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I66:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I66:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I66:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I66:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I66:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I66:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I66:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I66:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I66:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I66:S001	I66 Cab Tamper	TA	TR	9999	TA9999	TR9999
I66:S002	I66 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

I66:S003	I66 Low Batt	YT	YR	9999	YT9999	YR9999
I66:S004	I66 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I66:S005	I66 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I66:S006	I66 Low Volts	YP	YQ	9999	YP9999	YQ9999
I66:S007	I66 PS Fail	YP	YQ	9999	YP9999	YQ9999
I66:S008	I66 Batt Test	IA	IR	9999	IA9999	IR9999
I66:S009	I66 Unibus	EM	EN	9999	EM9999	EN9999
I66:S010	I66 Download Fail	YF	UX	9999	YF9999	UX9999
I66:S011	I66 Spare1	UA	UR	9999	UA9999	UR9999
I66:S012	I66 LAN Comms	EM	EN	9999	EM9999	EN9999
I66:S013	I66 Door1 Fault	IA	IR	9999	IA9999	IR9999
I66:S014	I66 Door2 Fault	IA	IR	9999	IA9999	IR9999
I66:S015	I66 Door3 Fault	IA	IR	9999	IA9999	IR9999
I66:S016	I66 Door4 Fault	IA	IR	9999	IA9999	IR9999
I66:S017	I66 Door5 Fault	IA	IR	9999	IA9999	IR9999
I66:S018	I66 Door6 Fault	IA	IR	9999	IA9999	IR9999
I66:S019	I66 Door7 Fault	IA	IR	9999	IA9999	IR9999
I66:S020	I66 Door8 Fault	IA	IR	9999	IA9999	IR9999
I66:S021	I66 Door1 Forced	DF	DR	9999	DF9999	DR9999
I66:S022	I66 Door2 Forced	DF	DR	9999	DF9999	DR9999
I66:S023	I66 Door3 Forced	DF	DR	9999	DF9999	DR9999
I66:S024	I66 Door4 Forced	DF	DR	9999	DF9999	DR9999
I66:S025	I66 Door5 Forced	DF	DR	9999	DF9999	DR9999
I66:S026	I66 Door6 Forced	DF	DR	9999	DF9999	DR9999
I66:S027	I66 Door7 Forced	DF	DR	9999	DF9999	DR9999
I66:S028	I66 Door8 Forced	DF	DR	9999	DF9999	DR9999
I66:S029	I66 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I66:S030	I66 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I66:S031	I66 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I66:S032	I66 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I66:S033	I66 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I66:S034	I66 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I66:S035	I66 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I66:S036	I66 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I66:S037	I66 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I66:S038	I66 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I66:S039	I66 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I66:S040	I66 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I66:S041	I66 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I66:S042	I66 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I66:S043	I66 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I66:S044	I66 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I66:S045	I66 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I66:S046	I66 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I66:S047	I66 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I66:S048	I66 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I66:S049	I66 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I66:S050	I66 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I66:S051	I66 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I66:S052	I66 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I66:S053	I66 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I66:S054	I66 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I66:S055	I66 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I66:S056	I66 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I66:S057	I66 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I66:S058	I66 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I66:S059	I66 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I66:S060	I66 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I66:S061	I66 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I66:S062	I66 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I66:S063	I66 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I66:S064	I66 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I66:S065	I66 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I66:S066	I66 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I66:S067	I66 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I66:S068	I66 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I66:S069	I66 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I66:S070	I66 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I66:S071	I66 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I66:S072	I66 Rdr4 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I66:S073	I66 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I66:S074	I66 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I66:S075	I66 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I66:S076	I66 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I66:S077	I66 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I66:S078	I66 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I66:S079	I66 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I66:S080	I66 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I66:S081	I66 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I66:S082	I66 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I66:S083	I66 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I66:S084	I66 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I66:S085	I66 Spare2	UA	UR	9999	UA9999	UR9999
I66:S086	I66 Spare3	UA	UR	9999	UA9999	UR9999
I66:S087	I66 Spare4	UA	UR	9999	UA9999	UR9999
I66:S088	I66 Spare5	UA	UR	9999	UA9999	UR9999
I66:S089	I66 Spare6	UA	UR	9999	UA9999	UR9999
I66:S090	I66 Spare7	UA	UR	9999	UA9999	UR9999
I66:S091	I66 Spare8	UA	UR	9999	UA9999	UR9999
I66:S092	I66 Spare9	UA	UR	9999	UA9999	UR9999
I66:S093	I66 Spare10	UA	UR	9999	UA9999	UR9999
I67:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I67:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I67:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I67:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I67:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I67:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I67:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I67:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I67:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I67:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I67:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I67:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I67:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I67:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I67:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I67:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I67:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I67:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I67:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I67:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I67:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I67:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I67:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I67:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I67:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I67:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I67:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I67:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I67:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I67:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I67:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I67:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I67:S001	I67 Cab Tamper	TA	TR	9999	TA9999	TR9999
I67:S002	I67 AC fail	AT	AR	9999	AT9999	AR9999
I67:S003	I67 Low Batt	YT	YR	9999	YT9999	YR9999
I67:S004	I67 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I67:S005	I67 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I67:S006	I67 Low Volts	YP	YQ	9999	YP9999	YQ9999
I67:S007	I67 PS Fail	YP	YQ	9999	YP9999	YQ9999
I67:S008	I67 Batt Test	IA	IR	9999	IA9999	IR9999
I67:S009	I67 Unibus	EM	EN	9999	EM9999	EN9999
I67:S010	I67 Download Fail	YF	UX	9999	YF9999	UX9999
I67:S011	I67 Spare1	UA	UR	9999	UA9999	UR9999
I67:S012	I67 LAN Comms	EM	EN	9999	EM9999	EN9999
I67:S013	I67 Door1 Fault	IA	IR	9999	IA9999	IR9999
I67:S014	I67 Door2 Fault	IA	IR	9999	IA9999	IR9999
I67:S015	I67 Door3 Fault	IA	IR	9999	IA9999	IR9999
I67:S016	I67 Door4 Fault	IA	IR	9999	IA9999	IR9999
I67:S017	I67 Door5 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I67:S018	I67 Door6 Fault	IA	IR	9999	IA9999	IR9999
I67:S019	I67 Door7 Fault	IA	IR	9999	IA9999	IR9999
I67:S020	I67 Door8 Fault	IA	IR	9999	IA9999	IR9999
I67:S021	I67 Door1 Forced	DF	DR	9999	DF9999	DR9999
I67:S022	I67 Door2 Forced	DF	DR	9999	DF9999	DR9999
I67:S023	I67 Door3 Forced	DF	DR	9999	DF9999	DR9999
I67:S024	I67 Door4 Forced	DF	DR	9999	DF9999	DR9999
I67:S025	I67 Door5 Forced	DF	DR	9999	DF9999	DR9999
I67:S026	I67 Door6 Forced	DF	DR	9999	DF9999	DR9999
I67:S027	I67 Door7 Forced	DF	DR	9999	DF9999	DR9999
I67:S028	I67 Door8 Forced	DF	DR	9999	DF9999	DR9999
I67:S029	I67 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I67:S030	I67 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I67:S031	I67 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I67:S032	I67 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I67:S033	I67 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I67:S034	I67 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I67:S035	I67 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I67:S036	I67 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I67:S037	I67 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I67:S038	I67 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I67:S039	I67 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I67:S040	I67 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I67:S041	I67 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I67:S042	I67 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I67:S043	I67 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I67:S044	I67 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I67:S045	I67 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I67:S046	I67 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I67:S047	I67 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I67:S048	I67 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I67:S049	I67 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I67:S050	I67 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I67:S051	I67 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I67:S052	I67 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I67:S053	I67 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I67:S054	I67 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I67:S055	I67 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I67:S056	I67 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I67:S057	I67 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I67:S058	I67 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I67:S059	I67 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I67:S060	I67 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I67:S061	I67 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I67:S062	I67 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I67:S063	I67 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I67:S064	I67 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I67:S065	I67 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I67:S066	I67 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I67:S067	I67 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I67:S068	I67 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I67:S069	I67 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I67:S070	I67 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I67:S071	I67 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I67:S072	I67 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I67:S073	I67 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I67:S074	I67 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I67:S075	I67 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I67:S076	I67 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I67:S077	I67 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I67:S078	I67 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I67:S079	I67 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I67:S080	I67 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I67:S081	I67 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I67:S082	I67 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I67:S083	I67 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I67:S084	I67 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I67:S085	I67 Spare2	UA	UR	9999	UA9999	UR9999
I67:S086	I67 Spare3	UA	UR	9999	UA9999	UR9999
I67:S087	I67 Spare4	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I67:S088	I67 Spare5	UA	UR	9999	UA9999	UR9999
I67:S089	I67 Spare6	UA	UR	9999	UA9999	UR9999
I67:S090	I67 Spare7	UA	UR	9999	UA9999	UR9999
I67:S091	I67 Spare8	UA	UR	9999	UA9999	UR9999
I67:S092	I67 Spare9	UA	UR	9999	UA9999	UR9999
I67:S093	I67 Spare10	UA	UR	9999	UA9999	UR9999
I68:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I68:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I68:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I68:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I68:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I68:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I68:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I68:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I68:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I68:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I68:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I68:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I68:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I68:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I68:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I68:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I68:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I68:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I68:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I68:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I68:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I68:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I68:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I68:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I68:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I68:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I68:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I68:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I68:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I68:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I68:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I68:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I68:S001	I68 Cab Tamper	TA	TR	9999	TA9999	TR9999
I68:S002	I68 AC fail	AT	AR	9999	AT9999	AR9999
I68:S003	I68 Low Batt	YT	YR	9999	YT9999	YR9999
I68:S004	I68 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I68:S005	I68 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I68:S006	I68 Low Volts	YP	YQ	9999	YP9999	YQ9999
I68:S007	I68 PS Fail	YP	YQ	9999	YP9999	YQ9999
I68:S008	I68 Batt Test	IA	IR	9999	IA9999	IR9999
I68:S009	I68 Unibus	EM	EN	9999	EM9999	EN9999
I68:S010	I68 Download Fail	YF	UX	9999	YF9999	UX9999
I68:S011	I68 Spare1	UA	UR	9999	UA9999	UR9999
I68:S012	I68 LAN Comms	EM	EN	9999	EM9999	EN9999
I68:S013	I68 Door1 Fault	IA	IR	9999	IA9999	IR9999
I68:S014	I68 Door2 Fault	IA	IR	9999	IA9999	IR9999
I68:S015	I68 Door3 Fault	IA	IR	9999	IA9999	IR9999
I68:S016	I68 Door4 Fault	IA	IR	9999	IA9999	IR9999
I68:S017	I68 Door5 Fault	IA	IR	9999	IA9999	IR9999
I68:S018	I68 Door6 Fault	IA	IR	9999	IA9999	IR9999
I68:S019	I68 Door7 Fault	IA	IR	9999	IA9999	IR9999
I68:S020	I68 Door8 Fault	IA	IR	9999	IA9999	IR9999
I68:S021	I68 Door1 Forced	DF	DR	9999	DF9999	DR9999
I68:S022	I68 Door2 Forced	DF	DR	9999	DF9999	DR9999
I68:S023	I68 Door3 Forced	DF	DR	9999	DF9999	DR9999
I68:S024	I68 Door4 Forced	DF	DR	9999	DF9999	DR9999
I68:S025	I68 Door5 Forced	DF	DR	9999	DF9999	DR9999
I68:S026	I68 Door6 Forced	DF	DR	9999	DF9999	DR9999
I68:S027	I68 Door7 Forced	DF	DR	9999	DF9999	DR9999
I68:S028	I68 Door8 Forced	DF	DR	9999	DF9999	DR9999
I68:S029	I68 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I68:S030	I68 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I68:S031	I68 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I68:S032	I68 Door4 DOTL	DL	DH	9999	DL9999	DH9999

Integriti SIA DECIMAL Map. V21

I68:S033	I68 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I68:S034	I68 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I68:S035	I68 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I68:S036	I68 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I68:S037	I68 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I68:S038	I68 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I68:S039	I68 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I68:S040	I68 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I68:S041	I68 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I68:S042	I68 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I68:S043	I68 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I68:S044	I68 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I68:S045	I68 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I68:S046	I68 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I68:S047	I68 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I68:S048	I68 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I68:S049	I68 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I68:S050	I68 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I68:S051	I68 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I68:S052	I68 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I68:S053	I68 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I68:S054	I68 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I68:S055	I68 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I68:S056	I68 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I68:S057	I68 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I68:S058	I68 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I68:S059	I68 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I68:S060	I68 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I68:S061	I68 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I68:S062	I68 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I68:S063	I68 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I68:S064	I68 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I68:S065	I68 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I68:S066	I68 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I68:S067	I68 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I68:S068	I68 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I68:S069	I68 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I68:S070	I68 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I68:S071	I68 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I68:S072	I68 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I68:S073	I68 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I68:S074	I68 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I68:S075	I68 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I68:S076	I68 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I68:S077	I68 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I68:S078	I68 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I68:S079	I68 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I68:S080	I68 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I68:S081	I68 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I68:S082	I68 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I68:S083	I68 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I68:S084	I68 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I68:S085	I68 Spare2	UA	UR	9999	UA9999	UR9999
I68:S086	I68 Spare3	UA	UR	9999	UA9999	UR9999
I68:S087	I68 Spare4	UA	UR	9999	UA9999	UR9999
I68:S088	I68 Spare5	UA	UR	9999	UA9999	UR9999
I68:S089	I68 Spare6	UA	UR	9999	UA9999	UR9999
I68:S090	I68 Spare7	UA	UR	9999	UA9999	UR9999
I68:S091	I68 Spare8	UA	UR	9999	UA9999	UR9999
I68:S092	I68 Spare9	UA	UR	9999	UA9999	UR9999
I68:S093	I68 Spare10	UA	UR	9999	UA9999	UR9999
I69:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I69:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I69:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I69:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I69:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I69:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I69:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I69:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I69:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I69:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I69:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I69:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I69:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I69:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I69:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I69:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I69:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I69:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I69:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I69:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I69:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I69:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I69:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I69:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I69:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I69:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I69:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I69:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I69:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I69:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I69:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I69:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I69:S001	I69 Cab Tamper	TA	TR	9999	TA9999	TR9999
I69:S002	I69 AC fail	AT	AR	9999	AT9999	AR9999
I69:S003	I69 Low Batt	YT	YR	9999	YT9999	YR9999
I69:S004	I69 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I69:S005	I69 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I69:S006	I69 Low Volts	YP	YQ	9999	YP9999	YQ9999
I69:S007	I69 PS Fail	YP	YQ	9999	YP9999	YQ9999
I69:S008	I69 Batt Test	IA	IR	9999	IA9999	IR9999
I69:S009	I69 Unibus	EM	EN	9999	EM9999	EN9999
I69:S010	I69 Download Fail	YF	UX	9999	YF9999	UX9999
I69:S011	I69 Spare1	UA	UR	9999	UA9999	UR9999
I69:S012	I69 LAN Comms	EM	EN	9999	EM9999	EN9999
I69:S013	I69 Door1 Fault	IA	IR	9999	IA9999	IR9999
I69:S014	I69 Door2 Fault	IA	IR	9999	IA9999	IR9999
I69:S015	I69 Door3 Fault	IA	IR	9999	IA9999	IR9999
I69:S016	I69 Door4 Fault	IA	IR	9999	IA9999	IR9999
I69:S017	I69 Door5 Fault	IA	IR	9999	IA9999	IR9999
I69:S018	I69 Door6 Fault	IA	IR	9999	IA9999	IR9999
I69:S019	I69 Door7 Fault	IA	IR	9999	IA9999	IR9999
I69:S020	I69 Door8 Fault	IA	IR	9999	IA9999	IR9999
I69:S021	I69 Door1 Forced	DF	DR	9999	DF9999	DR9999
I69:S022	I69 Door2 Forced	DF	DR	9999	DF9999	DR9999
I69:S023	I69 Door3 Forced	DF	DR	9999	DF9999	DR9999
I69:S024	I69 Door4 Forced	DF	DR	9999	DF9999	DR9999
I69:S025	I69 Door5 Forced	DF	DR	9999	DF9999	DR9999
I69:S026	I69 Door6 Forced	DF	DR	9999	DF9999	DR9999
I69:S027	I69 Door7 Forced	DF	DR	9999	DF9999	DR9999
I69:S028	I69 Door8 Forced	DF	DR	9999	DF9999	DR9999
I69:S029	I69 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I69:S030	I69 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I69:S031	I69 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I69:S032	I69 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I69:S033	I69 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I69:S034	I69 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I69:S035	I69 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I69:S036	I69 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I69:S037	I69 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I69:S038	I69 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I69:S039	I69 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I69:S040	I69 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I69:S041	I69 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I69:S042	I69 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I69:S043	I69 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I69:S044	I69 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I69:S045	I69 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I69:S046	I69 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I69:S047	I69 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I69:S048	I69 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I69:S049	I69 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I69:S050	I69 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I69:S051	I69 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I69:S052	I69 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I69:S053	I69 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I69:S054	I69 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I69:S055	I69 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I69:S056	I69 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I69:S057	I69 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I69:S058	I69 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I69:S059	I69 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I69:S060	I69 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I69:S061	I69 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I69:S062	I69 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I69:S063	I69 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I69:S064	I69 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I69:S065	I69 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I69:S066	I69 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I69:S067	I69 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I69:S068	I69 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I69:S069	I69 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I69:S070	I69 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I69:S071	I69 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I69:S072	I69 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I69:S073	I69 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I69:S074	I69 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I69:S075	I69 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I69:S076	I69 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I69:S077	I69 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I69:S078	I69 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I69:S079	I69 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I69:S080	I69 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I69:S081	I69 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I69:S082	I69 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I69:S083	I69 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I69:S084	I69 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I69:S085	I69 Spare2	UA	UR	9999	UA9999	UR9999
I69:S086	I69 Spare3	UA	UR	9999	UA9999	UR9999
I69:S087	I69 Spare4	UA	UR	9999	UA9999	UR9999
I69:S088	I69 Spare5	UA	UR	9999	UA9999	UR9999
I69:S089	I69 Spare6	UA	UR	9999	UA9999	UR9999
I69:S090	I69 Spare7	UA	UR	9999	UA9999	UR9999
I69:S091	I69 Spare8	UA	UR	9999	UA9999	UR9999
I69:S092	I69 Spare9	UA	UR	9999	UA9999	UR9999
I69:S093	I69 Spare10	UA	UR	9999	UA9999	UR9999
I70:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I70:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I70:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I70:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I70:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I70:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I70:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I70:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I70:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I70:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I70:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I70:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I70:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I70:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I70:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I70:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I70:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I70:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I70:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I70:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I70:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I70:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I70:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I70:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I70:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I70:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I70:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I70:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I70:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I70:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I70:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I70:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I70:S001	I70 Cab Tamper	TA	TR	9999	TA9999	TR9999
I70:S002	I70 AC fail	AT	AR	9999	AT9999	AR9999
I70:S003	I70 Low Batt	YT	YR	9999	YT9999	YR9999
I70:S004	I70 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I70:S005	I70 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I70:S006	I70 Low Volts	YP	YQ	9999	YP9999	YQ9999
I70:S007	I70 PS Fail	YP	YQ	9999	YP9999	YQ9999
I70:S008	I70 Batt Test	IA	IR	9999	IA9999	IR9999
I70:S009	I70 Unibus	EM	EN	9999	EM9999	EN9999
I70:S010	I70 Download Fail	YF	UX	9999	YF9999	UX9999
I70:S011	I70 Spare1	UA	UR	9999	UA9999	UR9999
I70:S012	I70 LAN Comms	EM	EN	9999	EM9999	EN9999
I70:S013	I70 Door1 Fault	IA	IR	9999	IA9999	IR9999
I70:S014	I70 Door2 Fault	IA	IR	9999	IA9999	IR9999
I70:S015	I70 Door3 Fault	IA	IR	9999	IA9999	IR9999
I70:S016	I70 Door4 Fault	IA	IR	9999	IA9999	IR9999
I70:S017	I70 Door5 Fault	IA	IR	9999	IA9999	IR9999
I70:S018	I70 Door6 Fault	IA	IR	9999	IA9999	IR9999
I70:S019	I70 Door7 Fault	IA	IR	9999	IA9999	IR9999
I70:S020	I70 Door8 Fault	IA	IR	9999	IA9999	IR9999
I70:S021	I70 Door1 Forced	DF	DR	9999	DF9999	DR9999
I70:S022	I70 Door2 Forced	DF	DR	9999	DF9999	DR9999
I70:S023	I70 Door3 Forced	DF	DR	9999	DF9999	DR9999
I70:S024	I70 Door4 Forced	DF	DR	9999	DF9999	DR9999
I70:S025	I70 Door5 Forced	DF	DR	9999	DF9999	DR9999
I70:S026	I70 Door6 Forced	DF	DR	9999	DF9999	DR9999
I70:S027	I70 Door7 Forced	DF	DR	9999	DF9999	DR9999
I70:S028	I70 Door8 Forced	DF	DR	9999	DF9999	DR9999
I70:S029	I70 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I70:S030	I70 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I70:S031	I70 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I70:S032	I70 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I70:S033	I70 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I70:S034	I70 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I70:S035	I70 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I70:S036	I70 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I70:S037	I70 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I70:S038	I70 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I70:S039	I70 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I70:S040	I70 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I70:S041	I70 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I70:S042	I70 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I70:S043	I70 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I70:S044	I70 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I70:S045	I70 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I70:S046	I70 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I70:S047	I70 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I70:S048	I70 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I70:S049	I70 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I70:S050	I70 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I70:S051	I70 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I70:S052	I70 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I70:S053	I70 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I70:S054	I70 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I70:S055	I70 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I70:S056	I70 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I70:S057	I70 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I70:S058	I70 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I70:S059	I70 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I70:S060	I70 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I70:S061	I70 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I70:S062	I70 Rdr10 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I70:S063	I70 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I70:S064	I70 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I70:S065	I70 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I70:S066	I70 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I70:S067	I70 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I70:S068	I70 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I70:S069	I70 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I70:S070	I70 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I70:S071	I70 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I70:S072	I70 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I70:S073	I70 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I70:S074	I70 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I70:S075	I70 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I70:S076	I70 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I70:S077	I70 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I70:S078	I70 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I70:S079	I70 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I70:S080	I70 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I70:S081	I70 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I70:S082	I70 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I70:S083	I70 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I70:S084	I70 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I70:S085	I70 Spare2	UA	UR	9999	UA9999	UR9999
I70:S086	I70 Spare3	UA	UR	9999	UA9999	UR9999
I70:S087	I70 Spare4	UA	UR	9999	UA9999	UR9999
I70:S088	I70 Spare5	UA	UR	9999	UA9999	UR9999
I70:S089	I70 Spare6	UA	UR	9999	UA9999	UR9999
I70:S090	I70 Spare7	UA	UR	9999	UA9999	UR9999
I70:S091	I70 Spare8	UA	UR	9999	UA9999	UR9999
I70:S092	I70 Spare9	UA	UR	9999	UA9999	UR9999
I70:S093	I70 Spare10	UA	UR	9999	UA9999	UR9999
I71:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I71:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I71:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I71:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I71:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I71:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I71:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I71:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I71:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I71:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I71:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I71:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I71:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I71:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I71:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I71:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I71:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I71:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I71:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I71:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I71:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I71:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I71:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I71:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I71:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I71:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I71:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I71:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I71:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I71:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I71:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I71:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I71:S001	I71 Cab Tamper	TA	TR	9999	TA9999	TR9999
I71:S002	I71 AC fail	AT	AR	9999	AT9999	AR9999
I71:S003	I71 Low Batt	YT	YR	9999	YT9999	YR9999
I71:S004	I71 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I71:S005	I71 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I71:S006	I71 Low Volts	YP	YQ	9999	YP9999	YQ9999
I71:S007	I71 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

I71:S008	I71 Batt Test	IA	IR	9999	IA9999	IR9999
I71:S009	I71 Unibus	EM	EN	9999	EM9999	EN9999
I71:S010	I71 Download Fail	YF	UX	9999	YF9999	UX9999
I71:S011	I71 Spare1	UA	UR	9999	UA9999	UR9999
I71:S012	I71 LAN Comms	EM	EN	9999	EM9999	EN9999
I71:S013	I71 Door1 Fault	IA	IR	9999	IA9999	IR9999
I71:S014	I71 Door2 Fault	IA	IR	9999	IA9999	IR9999
I71:S015	I71 Door3 Fault	IA	IR	9999	IA9999	IR9999
I71:S016	I71 Door4 Fault	IA	IR	9999	IA9999	IR9999
I71:S017	I71 Door5 Fault	IA	IR	9999	IA9999	IR9999
I71:S018	I71 Door6 Fault	IA	IR	9999	IA9999	IR9999
I71:S019	I71 Door7 Fault	IA	IR	9999	IA9999	IR9999
I71:S020	I71 Door8 Fault	IA	IR	9999	IA9999	IR9999
I71:S021	I71 Door1 Forced	DF	DR	9999	DF9999	DR9999
I71:S022	I71 Door2 Forced	DF	DR	9999	DF9999	DR9999
I71:S023	I71 Door3 Forced	DF	DR	9999	DF9999	DR9999
I71:S024	I71 Door4 Forced	DF	DR	9999	DF9999	DR9999
I71:S025	I71 Door5 Forced	DF	DR	9999	DF9999	DR9999
I71:S026	I71 Door6 Forced	DF	DR	9999	DF9999	DR9999
I71:S027	I71 Door7 Forced	DF	DR	9999	DF9999	DR9999
I71:S028	I71 Door8 Forced	DF	DR	9999	DF9999	DR9999
I71:S029	I71 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I71:S030	I71 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I71:S031	I71 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I71:S032	I71 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I71:S033	I71 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I71:S034	I71 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I71:S035	I71 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I71:S036	I71 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I71:S037	I71 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I71:S038	I71 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I71:S039	I71 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I71:S040	I71 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I71:S041	I71 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I71:S042	I71 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I71:S043	I71 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I71:S044	I71 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I71:S045	I71 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I71:S046	I71 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I71:S047	I71 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I71:S048	I71 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I71:S049	I71 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I71:S050	I71 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I71:S051	I71 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I71:S052	I71 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I71:S053	I71 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I71:S054	I71 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I71:S055	I71 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I71:S056	I71 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I71:S057	I71 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I71:S058	I71 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I71:S059	I71 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I71:S060	I71 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I71:S061	I71 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I71:S062	I71 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I71:S063	I71 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I71:S064	I71 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I71:S065	I71 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I71:S066	I71 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I71:S067	I71 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I71:S068	I71 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I71:S069	I71 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I71:S070	I71 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I71:S071	I71 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I71:S072	I71 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I71:S073	I71 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I71:S074	I71 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I71:S075	I71 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I71:S076	I71 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I71:S077	I71 Rdr9 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I71:S078	I71 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I71:S079	I71 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I71:S080	I71 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I71:S081	I71 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I71:S082	I71 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I71:S083	I71 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I71:S084	I71 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I71:S085	I71 Spare2	UA	UR	9999	UA9999	UR9999
I71:S086	I71 Spare3	UA	UR	9999	UA9999	UR9999
I71:S087	I71 Spare4	UA	UR	9999	UA9999	UR9999
I71:S088	I71 Spare5	UA	UR	9999	UA9999	UR9999
I71:S089	I71 Spare6	UA	UR	9999	UA9999	UR9999
I71:S090	I71 Spare7	UA	UR	9999	UA9999	UR9999
I71:S091	I71 Spare8	UA	UR	9999	UA9999	UR9999
I71:S092	I71 Spare9	UA	UR	9999	UA9999	UR9999
I71:S093	I71 Spare10	UA	UR	9999	UA9999	UR9999
I72:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I72:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I72:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I72:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I72:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I72:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I72:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I72:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I72:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I72:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I72:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I72:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I72:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I72:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I72:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I72:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I72:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I72:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I72:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I72:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I72:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I72:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I72:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I72:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I72:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I72:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I72:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I72:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I72:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I72:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I72:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I72:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I72:S001	I72 Cab Tamper	TA	TR	9999	TA9999	TR9999
I72:S002	I72 AC fail	AT	AR	9999	AT9999	AR9999
I72:S003	I72 Low Batt	YT	YR	9999	YT9999	YR9999
I72:S004	I72 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I72:S005	I72 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I72:S006	I72 Low Volts	YP	YQ	9999	YP9999	YQ9999
I72:S007	I72 PS Fail	YP	YQ	9999	YP9999	YQ9999
I72:S008	I72 Batt Test	IA	IR	9999	IA9999	IR9999
I72:S009	I72 Unibus	EM	EN	9999	EM9999	EN9999
I72:S010	I72 Download Fail	YF	UX	9999	YF9999	UX9999
I72:S011	I72 Spare1	UA	UR	9999	UA9999	UR9999
I72:S012	I72 LAN Comms	EM	EN	9999	EM9999	EN9999
I72:S013	I72 Door1 Fault	IA	IR	9999	IA9999	IR9999
I72:S014	I72 Door2 Fault	IA	IR	9999	IA9999	IR9999
I72:S015	I72 Door3 Fault	IA	IR	9999	IA9999	IR9999
I72:S016	I72 Door4 Fault	IA	IR	9999	IA9999	IR9999
I72:S017	I72 Door5 Fault	IA	IR	9999	IA9999	IR9999
I72:S018	I72 Door6 Fault	IA	IR	9999	IA9999	IR9999
I72:S019	I72 Door7 Fault	IA	IR	9999	IA9999	IR9999
I72:S020	I72 Door8 Fault	IA	IR	9999	IA9999	IR9999
I72:S021	I72 Door1 Forced	DF	DR	9999	DF9999	DR9999
I72:S022	I72 Door2 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I72:S023	I72 Door3 Forced	DF	DR	9999	DF9999	DR9999
I72:S024	I72 Door4 Forced	DF	DR	9999	DF9999	DR9999
I72:S025	I72 Door5 Forced	DF	DR	9999	DF9999	DR9999
I72:S026	I72 Door6 Forced	DF	DR	9999	DF9999	DR9999
I72:S027	I72 Door7 Forced	DF	DR	9999	DF9999	DR9999
I72:S028	I72 Door8 Forced	DF	DR	9999	DF9999	DR9999
I72:S029	I72 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I72:S030	I72 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I72:S031	I72 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I72:S032	I72 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I72:S033	I72 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I72:S034	I72 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I72:S035	I72 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I72:S036	I72 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I72:S037	I72 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I72:S038	I72 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I72:S039	I72 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I72:S040	I72 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I72:S041	I72 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I72:S042	I72 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I72:S043	I72 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I72:S044	I72 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I72:S045	I72 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I72:S046	I72 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I72:S047	I72 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I72:S048	I72 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I72:S049	I72 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I72:S050	I72 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I72:S051	I72 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I72:S052	I72 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I72:S053	I72 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I72:S054	I72 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I72:S055	I72 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I72:S056	I72 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I72:S057	I72 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I72:S058	I72 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I72:S059	I72 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I72:S060	I72 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I72:S061	I72 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I72:S062	I72 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I72:S063	I72 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I72:S064	I72 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I72:S065	I72 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I72:S066	I72 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I72:S067	I72 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I72:S068	I72 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I72:S069	I72 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I72:S070	I72 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I72:S071	I72 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I72:S072	I72 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I72:S073	I72 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I72:S074	I72 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I72:S075	I72 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I72:S076	I72 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I72:S077	I72 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I72:S078	I72 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I72:S079	I72 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I72:S080	I72 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I72:S081	I72 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I72:S082	I72 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I72:S083	I72 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I72:S084	I72 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I72:S085	I72 Spare2	UA	UR	9999	UA9999	UR9999
I72:S086	I72 Spare3	UA	UR	9999	UA9999	UR9999
I72:S087	I72 Spare4	UA	UR	9999	UA9999	UR9999
I72:S088	I72 Spare5	UA	UR	9999	UA9999	UR9999
I72:S089	I72 Spare6	UA	UR	9999	UA9999	UR9999
I72:S090	I72 Spare7	UA	UR	9999	UA9999	UR9999
I72:S091	I72 Spare8	UA	UR	9999	UA9999	UR9999
I72:S092	I72 Spare9	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I72:S093	I72 Spare10	UA	UR	9999	UA9999	UR9999
I73:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I73:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I73:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I73:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I73:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I73:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I73:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I73:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I73:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I73:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I73:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I73:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I73:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I73:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I73:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I73:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I73:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I73:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I73:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I73:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I73:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I73:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I73:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I73:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I73:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I73:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I73:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I73:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I73:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I73:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I73:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I73:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I73:S001	I73 Cab Tamper	TA	TR	9999	TA9999	TR9999
I73:S002	I73 AC fail	AT	AR	9999	AT9999	AR9999
I73:S003	I73 Low Batt	YT	YR	9999	YT9999	YR9999
I73:S004	I73 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I73:S005	I73 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I73:S006	I73 Low Volts	YP	YQ	9999	YP9999	YQ9999
I73:S007	I73 PS Fail	YP	YQ	9999	YP9999	YQ9999
I73:S008	I73 Batt Test	IA	IR	9999	IA9999	IR9999
I73:S009	I73 Unibus	EM	EN	9999	EM9999	EN9999
I73:S010	I73 Download Fail	YF	UX	9999	YF9999	UX9999
I73:S011	I73 Spare1	UA	UR	9999	UA9999	UR9999
I73:S012	I73 LAN Comms	EM	EN	9999	EM9999	EN9999
I73:S013	I73 Door1 Fault	IA	IR	9999	IA9999	IR9999
I73:S014	I73 Door2 Fault	IA	IR	9999	IA9999	IR9999
I73:S015	I73 Door3 Fault	IA	IR	9999	IA9999	IR9999
I73:S016	I73 Door4 Fault	IA	IR	9999	IA9999	IR9999
I73:S017	I73 Door5 Fault	IA	IR	9999	IA9999	IR9999
I73:S018	I73 Door6 Fault	IA	IR	9999	IA9999	IR9999
I73:S019	I73 Door7 Fault	IA	IR	9999	IA9999	IR9999
I73:S020	I73 Door8 Fault	IA	IR	9999	IA9999	IR9999
I73:S021	I73 Door1 Forced	DF	DR	9999	DF9999	DR9999
I73:S022	I73 Door2 Forced	DF	DR	9999	DF9999	DR9999
I73:S023	I73 Door3 Forced	DF	DR	9999	DF9999	DR9999
I73:S024	I73 Door4 Forced	DF	DR	9999	DF9999	DR9999
I73:S025	I73 Door5 Forced	DF	DR	9999	DF9999	DR9999
I73:S026	I73 Door6 Forced	DF	DR	9999	DF9999	DR9999
I73:S027	I73 Door7 Forced	DF	DR	9999	DF9999	DR9999
I73:S028	I73 Door8 Forced	DF	DR	9999	DF9999	DR9999
I73:S029	I73 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I73:S030	I73 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I73:S031	I73 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I73:S032	I73 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I73:S033	I73 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I73:S034	I73 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I73:S035	I73 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I73:S036	I73 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I73:S037	I73 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I73:S038	I73 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I73:S039	I73 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I73:S040	I73 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I73:S041	I73 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I73:S042	I73 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I73:S043	I73 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I73:S044	I73 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I73:S045	I73 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I73:S046	I73 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I73:S047	I73 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I73:S048	I73 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I73:S049	I73 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I73:S050	I73 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I73:S051	I73 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I73:S052	I73 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I73:S053	I73 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I73:S054	I73 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I73:S055	I73 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I73:S056	I73 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I73:S057	I73 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I73:S058	I73 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I73:S059	I73 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I73:S060	I73 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I73:S061	I73 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I73:S062	I73 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I73:S063	I73 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I73:S064	I73 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I73:S065	I73 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I73:S066	I73 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I73:S067	I73 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I73:S068	I73 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I73:S069	I73 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I73:S070	I73 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I73:S071	I73 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I73:S072	I73 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I73:S073	I73 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I73:S074	I73 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I73:S075	I73 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I73:S076	I73 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I73:S077	I73 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I73:S078	I73 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I73:S079	I73 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I73:S080	I73 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I73:S081	I73 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I73:S082	I73 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I73:S083	I73 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I73:S084	I73 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I73:S085	I73 Spare2	UA	UR	9999	UA9999	UR9999
I73:S086	I73 Spare3	UA	UR	9999	UA9999	UR9999
I73:S087	I73 Spare4	UA	UR	9999	UA9999	UR9999
I73:S088	I73 Spare5	UA	UR	9999	UA9999	UR9999
I73:S089	I73 Spare6	UA	UR	9999	UA9999	UR9999
I73:S090	I73 Spare7	UA	UR	9999	UA9999	UR9999
I73:S091	I73 Spare8	UA	UR	9999	UA9999	UR9999
I73:S092	I73 Spare9	UA	UR	9999	UA9999	UR9999
I73:S093	I73 Spare10	UA	UR	9999	UA9999	UR9999
I74:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I74:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I74:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I74:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I74:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I74:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I74:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I74:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I74:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I74:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I74:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I74:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I74:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I74:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I74:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I74:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I74:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I74:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I74:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I74:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I74:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I74:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I74:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I74:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I74:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I74:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I74:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I74:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I74:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I74:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I74:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I74:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I74:S001	I74 Cab Tamper	TA	TR	9999	TA9999	TR9999
I74:S002	I74 AC fail	AT	AR	9999	AT9999	AR9999
I74:S003	I74 Low Batt	YT	YR	9999	YT9999	YR9999
I74:S004	I74 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I74:S005	I74 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I74:S006	I74 Low Volts	YP	YQ	9999	YP9999	YQ9999
I74:S007	I74 PS Fail	YP	YQ	9999	YP9999	YQ9999
I74:S008	I74 Batt Test	IA	IR	9999	IA9999	IR9999
I74:S009	I74 Unibus	EM	EN	9999	EM9999	EN9999
I74:S010	I74 Download Fail	YF	UX	9999	YF9999	UX9999
I74:S011	I74 Spare1	UA	UR	9999	UA9999	UR9999
I74:S012	I74 LAN Comms	EM	EN	9999	EM9999	EN9999
I74:S013	I74 Door1 Fault	IA	IR	9999	IA9999	IR9999
I74:S014	I74 Door2 Fault	IA	IR	9999	IA9999	IR9999
I74:S015	I74 Door3 Fault	IA	IR	9999	IA9999	IR9999
I74:S016	I74 Door4 Fault	IA	IR	9999	IA9999	IR9999
I74:S017	I74 Door5 Fault	IA	IR	9999	IA9999	IR9999
I74:S018	I74 Door6 Fault	IA	IR	9999	IA9999	IR9999
I74:S019	I74 Door7 Fault	IA	IR	9999	IA9999	IR9999
I74:S020	I74 Door8 Fault	IA	IR	9999	IA9999	IR9999
I74:S021	I74 Door1 Forced	DF	DR	9999	DF9999	DR9999
I74:S022	I74 Door2 Forced	DF	DR	9999	DF9999	DR9999
I74:S023	I74 Door3 Forced	DF	DR	9999	DF9999	DR9999
I74:S024	I74 Door4 Forced	DF	DR	9999	DF9999	DR9999
I74:S025	I74 Door5 Forced	DF	DR	9999	DF9999	DR9999
I74:S026	I74 Door6 Forced	DF	DR	9999	DF9999	DR9999
I74:S027	I74 Door7 Forced	DF	DR	9999	DF9999	DR9999
I74:S028	I74 Door8 Forced	DF	DR	9999	DF9999	DR9999
I74:S029	I74 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I74:S030	I74 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I74:S031	I74 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I74:S032	I74 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I74:S033	I74 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I74:S034	I74 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I74:S035	I74 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I74:S036	I74 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I74:S037	I74 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I74:S038	I74 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I74:S039	I74 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I74:S040	I74 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I74:S041	I74 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I74:S042	I74 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I74:S043	I74 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I74:S044	I74 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I74:S045	I74 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I74:S046	I74 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I74:S047	I74 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I74:S048	I74 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I74:S049	I74 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I74:S050	I74 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I74:S051	I74 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I74:S052	I74 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I74:S053	I74 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I74:S054	I74 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I74:S055	I74 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I74:S056	I74 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I74:S057	I74 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I74:S058	I74 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I74:S059	I74 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I74:S060	I74 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I74:S061	I74 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I74:S062	I74 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I74:S063	I74 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I74:S064	I74 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I74:S065	I74 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I74:S066	I74 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I74:S067	I74 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I74:S068	I74 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I74:S069	I74 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I74:S070	I74 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I74:S071	I74 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I74:S072	I74 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I74:S073	I74 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I74:S074	I74 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I74:S075	I74 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I74:S076	I74 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I74:S077	I74 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I74:S078	I74 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I74:S079	I74 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I74:S080	I74 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I74:S081	I74 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I74:S082	I74 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I74:S083	I74 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I74:S084	I74 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I74:S085	I74 Spare2	UA	UR	9999	UA9999	UR9999
I74:S086	I74 Spare3	UA	UR	9999	UA9999	UR9999
I74:S087	I74 Spare4	UA	UR	9999	UA9999	UR9999
I74:S088	I74 Spare5	UA	UR	9999	UA9999	UR9999
I74:S089	I74 Spare6	UA	UR	9999	UA9999	UR9999
I74:S090	I74 Spare7	UA	UR	9999	UA9999	UR9999
I74:S091	I74 Spare8	UA	UR	9999	UA9999	UR9999
I74:S092	I74 Spare9	UA	UR	9999	UA9999	UR9999
I74:S093	I74 Spare10	UA	UR	9999	UA9999	UR9999
I75:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I75:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I75:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I75:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I75:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I75:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I75:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I75:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I75:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I75:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I75:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I75:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I75:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I75:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I75:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I75:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I75:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I75:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I75:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I75:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I75:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I75:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I75:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I75:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I75:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I75:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I75:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I75:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I75:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I75:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I75:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I75:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I75:S001	I75 Cab Tamper	TA	TR	9999	TA9999	TR9999
I75:S002	I75 AC fail	AT	AR	9999	AT9999	AR9999
I75:S003	I75 Low Batt	YT	YR	9999	YT9999	YR9999
I75:S004	I75 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I75:S005	I75 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I75:S006	I75 Low Volts	YP	YQ	9999	YP9999	YQ9999
I75:S007	I75 PS Fail	YP	YQ	9999	YP9999	YQ9999
I75:S008	I75 Batt Test	IA	IR	9999	IA9999	IR9999
I75:S009	I75 Unibus	EM	EN	9999	EM9999	EN9999
I75:S010	I75 Download Fail	YF	UX	9999	YF9999	UX9999
I75:S011	I75 Spare1	UA	UR	9999	UA9999	UR9999
I75:S012	I75 LAN Comms	EM	EN	9999	EM9999	EN9999
I75:S013	I75 Door1 Fault	IA	IR	9999	IA9999	IR9999
I75:S014	I75 Door2 Fault	IA	IR	9999	IA9999	IR9999
I75:S015	I75 Door3 Fault	IA	IR	9999	IA9999	IR9999
I75:S016	I75 Door4 Fault	IA	IR	9999	IA9999	IR9999
I75:S017	I75 Door5 Fault	IA	IR	9999	IA9999	IR9999
I75:S018	I75 Door6 Fault	IA	IR	9999	IA9999	IR9999
I75:S019	I75 Door7 Fault	IA	IR	9999	IA9999	IR9999
I75:S020	I75 Door8 Fault	IA	IR	9999	IA9999	IR9999
I75:S021	I75 Door1 Forced	DF	DR	9999	DF9999	DR9999
I75:S022	I75 Door2 Forced	DF	DR	9999	DF9999	DR9999
I75:S023	I75 Door3 Forced	DF	DR	9999	DF9999	DR9999
I75:S024	I75 Door4 Forced	DF	DR	9999	DF9999	DR9999
I75:S025	I75 Door5 Forced	DF	DR	9999	DF9999	DR9999
I75:S026	I75 Door6 Forced	DF	DR	9999	DF9999	DR9999
I75:S027	I75 Door7 Forced	DF	DR	9999	DF9999	DR9999
I75:S028	I75 Door8 Forced	DF	DR	9999	DF9999	DR9999
I75:S029	I75 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I75:S030	I75 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I75:S031	I75 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I75:S032	I75 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I75:S033	I75 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I75:S034	I75 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I75:S035	I75 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I75:S036	I75 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I75:S037	I75 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I75:S038	I75 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I75:S039	I75 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I75:S040	I75 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I75:S041	I75 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I75:S042	I75 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I75:S043	I75 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I75:S044	I75 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I75:S045	I75 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I75:S046	I75 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I75:S047	I75 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I75:S048	I75 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I75:S049	I75 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I75:S050	I75 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I75:S051	I75 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I75:S052	I75 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I75:S053	I75 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I75:S054	I75 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I75:S055	I75 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I75:S056	I75 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I75:S057	I75 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I75:S058	I75 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I75:S059	I75 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I75:S060	I75 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I75:S061	I75 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I75:S062	I75 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I75:S063	I75 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I75:S064	I75 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I75:S065	I75 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I75:S066	I75 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I75:S067	I75 Rdr15 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I75:S068	I75 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I75:S069	I75 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I75:S070	I75 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I75:S071	I75 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I75:S072	I75 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I75:S073	I75 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I75:S074	I75 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I75:S075	I75 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I75:S076	I75 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I75:S077	I75 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I75:S078	I75 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I75:S079	I75 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I75:S080	I75 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I75:S081	I75 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I75:S082	I75 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I75:S083	I75 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I75:S084	I75 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I75:S085	I75 Spare2	UA	UR	9999	UA9999	UR9999
I75:S086	I75 Spare3	UA	UR	9999	UA9999	UR9999
I75:S087	I75 Spare4	UA	UR	9999	UA9999	UR9999
I75:S088	I75 Spare5	UA	UR	9999	UA9999	UR9999
I75:S089	I75 Spare6	UA	UR	9999	UA9999	UR9999
I75:S090	I75 Spare7	UA	UR	9999	UA9999	UR9999
I75:S091	I75 Spare8	UA	UR	9999	UA9999	UR9999
I75:S092	I75 Spare9	UA	UR	9999	UA9999	UR9999
I75:S093	I75 Spare10	UA	UR	9999	UA9999	UR9999
I76:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I76:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I76:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I76:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I76:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I76:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I76:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I76:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I76:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I76:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I76:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I76:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I76:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I76:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I76:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I76:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I76:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I76:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I76:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I76:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I76:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I76:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I76:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I76:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I76:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I76:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I76:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I76:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I76:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I76:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I76:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I76:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I76:S001	I76 Cab Tamper	TA	TR	9999	TA9999	TR9999
I76:S002	I76 AC fail	AT	AR	9999	AT9999	AR9999
I76:S003	I76 Low Batt	YT	YR	9999	YT9999	YR9999
I76:S004	I76 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I76:S005	I76 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I76:S006	I76 Low Volts	YP	YQ	9999	YP9999	YQ9999
I76:S007	I76 PS Fail	YP	YQ	9999	YP9999	YQ9999
I76:S008	I76 Batt Test	IA	IR	9999	IA9999	IR9999
I76:S009	I76 Unibus	EM	EN	9999	EM9999	EN9999
I76:S010	I76 Download Fail	YF	UX	9999	YF9999	UX9999
I76:S011	I76 Spare1	UA	UR	9999	UA9999	UR9999
I76:S012	I76 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

I76:S013	I76 Door1 Fault	IA	IR	9999	IA9999	IR9999
I76:S014	I76 Door2 Fault	IA	IR	9999	IA9999	IR9999
I76:S015	I76 Door3 Fault	IA	IR	9999	IA9999	IR9999
I76:S016	I76 Door4 Fault	IA	IR	9999	IA9999	IR9999
I76:S017	I76 Door5 Fault	IA	IR	9999	IA9999	IR9999
I76:S018	I76 Door6 Fault	IA	IR	9999	IA9999	IR9999
I76:S019	I76 Door7 Fault	IA	IR	9999	IA9999	IR9999
I76:S020	I76 Door8 Fault	IA	IR	9999	IA9999	IR9999
I76:S021	I76 Door1 Forced	DF	DR	9999	DF9999	DR9999
I76:S022	I76 Door2 Forced	DF	DR	9999	DF9999	DR9999
I76:S023	I76 Door3 Forced	DF	DR	9999	DF9999	DR9999
I76:S024	I76 Door4 Forced	DF	DR	9999	DF9999	DR9999
I76:S025	I76 Door5 Forced	DF	DR	9999	DF9999	DR9999
I76:S026	I76 Door6 Forced	DF	DR	9999	DF9999	DR9999
I76:S027	I76 Door7 Forced	DF	DR	9999	DF9999	DR9999
I76:S028	I76 Door8 Forced	DF	DR	9999	DF9999	DR9999
I76:S029	I76 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I76:S030	I76 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I76:S031	I76 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I76:S032	I76 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I76:S033	I76 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I76:S034	I76 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I76:S035	I76 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I76:S036	I76 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I76:S037	I76 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I76:S038	I76 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I76:S039	I76 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I76:S040	I76 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I76:S041	I76 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I76:S042	I76 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I76:S043	I76 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I76:S044	I76 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I76:S045	I76 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I76:S046	I76 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I76:S047	I76 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I76:S048	I76 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I76:S049	I76 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I76:S050	I76 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I76:S051	I76 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I76:S052	I76 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I76:S053	I76 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I76:S054	I76 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I76:S055	I76 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I76:S056	I76 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I76:S057	I76 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I76:S058	I76 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I76:S059	I76 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I76:S060	I76 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I76:S061	I76 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I76:S062	I76 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I76:S063	I76 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I76:S064	I76 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I76:S065	I76 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I76:S066	I76 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I76:S067	I76 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I76:S068	I76 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I76:S069	I76 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I76:S070	I76 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I76:S071	I76 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I76:S072	I76 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I76:S073	I76 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I76:S074	I76 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I76:S075	I76 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I76:S076	I76 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I76:S077	I76 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I76:S078	I76 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I76:S079	I76 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I76:S080	I76 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I76:S081	I76 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I76:S082	I76 Rdr14 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I76:S083	I76 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I76:S084	I76 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I76:S085	I76 Spare2	UA	UR	9999	UA9999	UR9999
I76:S086	I76 Spare3	UA	UR	9999	UA9999	UR9999
I76:S087	I76 Spare4	UA	UR	9999	UA9999	UR9999
I76:S088	I76 Spare5	UA	UR	9999	UA9999	UR9999
I76:S089	I76 Spare6	UA	UR	9999	UA9999	UR9999
I76:S090	I76 Spare7	UA	UR	9999	UA9999	UR9999
I76:S091	I76 Spare8	UA	UR	9999	UA9999	UR9999
I76:S092	I76 Spare9	UA	UR	9999	UA9999	UR9999
I76:S093	I76 Spare10	UA	UR	9999	UA9999	UR9999
I77:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I77:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I77:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I77:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I77:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I77:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I77:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I77:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I77:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I77:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I77:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I77:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I77:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I77:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I77:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I77:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I77:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I77:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I77:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I77:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I77:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I77:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I77:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I77:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I77:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I77:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I77:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I77:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I77:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I77:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I77:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I77:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I77:S001	I77 Cab Tamper	TA	TR	9999	TA9999	TR9999
I77:S002	I77 AC fail	AT	AR	9999	AT9999	AR9999
I77:S003	I77 Low Batt	YT	YR	9999	YT9999	YR9999
I77:S004	I77 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I77:S005	I77 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I77:S006	I77 Low Volts	YP	YQ	9999	YP9999	YQ9999
I77:S007	I77 PS Fail	YP	YQ	9999	YP9999	YQ9999
I77:S008	I77 Batt Test	IA	IR	9999	IA9999	IR9999
I77:S009	I77 Unibus	EM	EN	9999	EM9999	EN9999
I77:S010	I77 Download Fail	YF	UX	9999	YF9999	UX9999
I77:S011	I77 Spare1	UA	UR	9999	UA9999	UR9999
I77:S012	I77 LAN Comms	EM	EN	9999	EM9999	EN9999
I77:S013	I77 Door1 Fault	IA	IR	9999	IA9999	IR9999
I77:S014	I77 Door2 Fault	IA	IR	9999	IA9999	IR9999
I77:S015	I77 Door3 Fault	IA	IR	9999	IA9999	IR9999
I77:S016	I77 Door4 Fault	IA	IR	9999	IA9999	IR9999
I77:S017	I77 Door5 Fault	IA	IR	9999	IA9999	IR9999
I77:S018	I77 Door6 Fault	IA	IR	9999	IA9999	IR9999
I77:S019	I77 Door7 Fault	IA	IR	9999	IA9999	IR9999
I77:S020	I77 Door8 Fault	IA	IR	9999	IA9999	IR9999
I77:S021	I77 Door1 Forced	DF	DR	9999	DF9999	DR9999
I77:S022	I77 Door2 Forced	DF	DR	9999	DF9999	DR9999
I77:S023	I77 Door3 Forced	DF	DR	9999	DF9999	DR9999
I77:S024	I77 Door4 Forced	DF	DR	9999	DF9999	DR9999
I77:S025	I77 Door5 Forced	DF	DR	9999	DF9999	DR9999
I77:S026	I77 Door6 Forced	DF	DR	9999	DF9999	DR9999
I77:S027	I77 Door7 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I77:S028	I77 Door8 Forced	DF	DR	9999	DF9999	DR9999
I77:S029	I77 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I77:S030	I77 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I77:S031	I77 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I77:S032	I77 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I77:S033	I77 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I77:S034	I77 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I77:S035	I77 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I77:S036	I77 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I77:S037	I77 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I77:S038	I77 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I77:S039	I77 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I77:S040	I77 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I77:S041	I77 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I77:S042	I77 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I77:S043	I77 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I77:S044	I77 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I77:S045	I77 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I77:S046	I77 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I77:S047	I77 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I77:S048	I77 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I77:S049	I77 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I77:S050	I77 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I77:S051	I77 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I77:S052	I77 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I77:S053	I77 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I77:S054	I77 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I77:S055	I77 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I77:S056	I77 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I77:S057	I77 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I77:S058	I77 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I77:S059	I77 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I77:S060	I77 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I77:S061	I77 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I77:S062	I77 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I77:S063	I77 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I77:S064	I77 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I77:S065	I77 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I77:S066	I77 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I77:S067	I77 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I77:S068	I77 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I77:S069	I77 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I77:S070	I77 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I77:S071	I77 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I77:S072	I77 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I77:S073	I77 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I77:S074	I77 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I77:S075	I77 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I77:S076	I77 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I77:S077	I77 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I77:S078	I77 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I77:S079	I77 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I77:S080	I77 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I77:S081	I77 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I77:S082	I77 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I77:S083	I77 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I77:S084	I77 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I77:S085	I77 Spare2	UA	UR	9999	UA9999	UR9999
I77:S086	I77 Spare3	UA	UR	9999	UA9999	UR9999
I77:S087	I77 Spare4	UA	UR	9999	UA9999	UR9999
I77:S088	I77 Spare5	UA	UR	9999	UA9999	UR9999
I77:S089	I77 Spare6	UA	UR	9999	UA9999	UR9999
I77:S090	I77 Spare7	UA	UR	9999	UA9999	UR9999
I77:S091	I77 Spare8	UA	UR	9999	UA9999	UR9999
I77:S092	I77 Spare9	UA	UR	9999	UA9999	UR9999
I77:S093	I77 Spare10	UA	UR	9999	UA9999	UR9999
I78:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I78:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I78:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I78:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I78:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I78:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I78:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I78:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I78:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I78:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I78:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I78:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I78:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I78:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I78:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I78:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I78:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I78:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I78:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I78:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I78:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I78:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I78:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I78:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I78:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I78:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I78:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I78:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I78:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I78:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I78:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I78:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I78:S001	I78 Cab Tamper	TA	TR	9999	TA9999	TR9999
I78:S002	I78 AC fail	AT	AR	9999	AT9999	AR9999
I78:S003	I78 Low Batt	YT	YR	9999	YT9999	YR9999
I78:S004	I78 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I78:S005	I78 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I78:S006	I78 Low Volts	YP	YQ	9999	YP9999	YQ9999
I78:S007	I78 PS Fail	YP	YQ	9999	YP9999	YQ9999
I78:S008	I78 Batt Test	IA	IR	9999	IA9999	IR9999
I78:S009	I78 Unibus	EM	EN	9999	EM9999	EN9999
I78:S010	I78 Download Fail	YF	UX	9999	YF9999	UX9999
I78:S011	I78 Spare1	UA	UR	9999	UA9999	UR9999
I78:S012	I78 LAN Comms	EM	EN	9999	EM9999	EN9999
I78:S013	I78 Door1 Fault	IA	IR	9999	IA9999	IR9999
I78:S014	I78 Door2 Fault	IA	IR	9999	IA9999	IR9999
I78:S015	I78 Door3 Fault	IA	IR	9999	IA9999	IR9999
I78:S016	I78 Door4 Fault	IA	IR	9999	IA9999	IR9999
I78:S017	I78 Door5 Fault	IA	IR	9999	IA9999	IR9999
I78:S018	I78 Door6 Fault	IA	IR	9999	IA9999	IR9999
I78:S019	I78 Door7 Fault	IA	IR	9999	IA9999	IR9999
I78:S020	I78 Door8 Fault	IA	IR	9999	IA9999	IR9999
I78:S021	I78 Door1 Forced	DF	DR	9999	DF9999	DR9999
I78:S022	I78 Door2 Forced	DF	DR	9999	DF9999	DR9999
I78:S023	I78 Door3 Forced	DF	DR	9999	DF9999	DR9999
I78:S024	I78 Door4 Forced	DF	DR	9999	DF9999	DR9999
I78:S025	I78 Door5 Forced	DF	DR	9999	DF9999	DR9999
I78:S026	I78 Door6 Forced	DF	DR	9999	DF9999	DR9999
I78:S027	I78 Door7 Forced	DF	DR	9999	DF9999	DR9999
I78:S028	I78 Door8 Forced	DF	DR	9999	DF9999	DR9999
I78:S029	I78 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I78:S030	I78 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I78:S031	I78 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I78:S032	I78 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I78:S033	I78 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I78:S034	I78 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I78:S035	I78 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I78:S036	I78 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I78:S037	I78 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I78:S038	I78 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I78:S039	I78 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I78:S040	I78 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I78:S041	I78 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I78:S042	I78 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I78:S043	I78 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I78:S044	I78 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I78:S045	I78 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I78:S046	I78 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I78:S047	I78 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I78:S048	I78 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I78:S049	I78 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I78:S050	I78 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I78:S051	I78 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I78:S052	I78 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I78:S053	I78 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I78:S054	I78 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I78:S055	I78 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I78:S056	I78 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I78:S057	I78 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I78:S058	I78 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I78:S059	I78 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I78:S060	I78 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I78:S061	I78 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I78:S062	I78 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I78:S063	I78 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I78:S064	I78 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I78:S065	I78 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I78:S066	I78 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I78:S067	I78 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I78:S068	I78 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I78:S069	I78 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I78:S070	I78 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I78:S071	I78 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I78:S072	I78 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I78:S073	I78 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I78:S074	I78 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I78:S075	I78 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I78:S076	I78 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I78:S077	I78 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I78:S078	I78 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I78:S079	I78 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I78:S080	I78 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I78:S081	I78 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I78:S082	I78 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I78:S083	I78 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I78:S084	I78 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I78:S085	I78 Spare2	UA	UR	9999	UA9999	UR9999
I78:S086	I78 Spare3	UA	UR	9999	UA9999	UR9999
I78:S087	I78 Spare4	UA	UR	9999	UA9999	UR9999
I78:S088	I78 Spare5	UA	UR	9999	UA9999	UR9999
I78:S089	I78 Spare6	UA	UR	9999	UA9999	UR9999
I78:S090	I78 Spare7	UA	UR	9999	UA9999	UR9999
I78:S091	I78 Spare8	UA	UR	9999	UA9999	UR9999
I78:S092	I78 Spare9	UA	UR	9999	UA9999	UR9999
I78:S093	I78 Spare10	UA	UR	9999	UA9999	UR9999
I79:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I79:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I79:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I79:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I79:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I79:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I79:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I79:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I79:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I79:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I79:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I79:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I79:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I79:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I79:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I79:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I79:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I79:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I79:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I79:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I79:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I79:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I79:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I79:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I79:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I79:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I79:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I79:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I79:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I79:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I79:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I79:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I79:S001	I79 Cab Tamper	TA	TR	9999	TA9999	TR9999
I79:S002	I79 AC fail	AT	AR	9999	AT9999	AR9999
I79:S003	I79 Low Batt	YT	YR	9999	YT9999	YR9999
I79:S004	I79 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I79:S005	I79 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I79:S006	I79 Low Volts	YP	YQ	9999	YP9999	YQ9999
I79:S007	I79 PS Fail	YP	YQ	9999	YP9999	YQ9999
I79:S008	I79 Batt Test	IA	IR	9999	IA9999	IR9999
I79:S009	I79 Unibus	EM	EN	9999	EM9999	EN9999
I79:S010	I79 Download Fail	YF	UX	9999	YF9999	UX9999
I79:S011	I79 Spare1	UA	UR	9999	UA9999	UR9999
I79:S012	I79 LAN Comms	EM	EN	9999	EM9999	EN9999
I79:S013	I79 Door1 Fault	IA	IR	9999	IA9999	IR9999
I79:S014	I79 Door2 Fault	IA	IR	9999	IA9999	IR9999
I79:S015	I79 Door3 Fault	IA	IR	9999	IA9999	IR9999
I79:S016	I79 Door4 Fault	IA	IR	9999	IA9999	IR9999
I79:S017	I79 Door5 Fault	IA	IR	9999	IA9999	IR9999
I79:S018	I79 Door6 Fault	IA	IR	9999	IA9999	IR9999
I79:S019	I79 Door7 Fault	IA	IR	9999	IA9999	IR9999
I79:S020	I79 Door8 Fault	IA	IR	9999	IA9999	IR9999
I79:S021	I79 Door1 Forced	DF	DR	9999	DF9999	DR9999
I79:S022	I79 Door2 Forced	DF	DR	9999	DF9999	DR9999
I79:S023	I79 Door3 Forced	DF	DR	9999	DF9999	DR9999
I79:S024	I79 Door4 Forced	DF	DR	9999	DF9999	DR9999
I79:S025	I79 Door5 Forced	DF	DR	9999	DF9999	DR9999
I79:S026	I79 Door6 Forced	DF	DR	9999	DF9999	DR9999
I79:S027	I79 Door7 Forced	DF	DR	9999	DF9999	DR9999
I79:S028	I79 Door8 Forced	DF	DR	9999	DF9999	DR9999
I79:S029	I79 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I79:S030	I79 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I79:S031	I79 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I79:S032	I79 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I79:S033	I79 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I79:S034	I79 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I79:S035	I79 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I79:S036	I79 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I79:S037	I79 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I79:S038	I79 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I79:S039	I79 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I79:S040	I79 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I79:S041	I79 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I79:S042	I79 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I79:S043	I79 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I79:S044	I79 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I79:S045	I79 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I79:S046	I79 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I79:S047	I79 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I79:S048	I79 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I79:S049	I79 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I79:S050	I79 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I79:S051	I79 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I79:S052	I79 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I79:S053	I79 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I79:S054	I79 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I79:S055	I79 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I79:S056	I79 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I79:S057	I79 Rdr5 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I79:S058	I79 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I79:S059	I79 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I79:S060	I79 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I79:S061	I79 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I79:S062	I79 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I79:S063	I79 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I79:S064	I79 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I79:S065	I79 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I79:S066	I79 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I79:S067	I79 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I79:S068	I79 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I79:S069	I79 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I79:S070	I79 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I79:S071	I79 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I79:S072	I79 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I79:S073	I79 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I79:S074	I79 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I79:S075	I79 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I79:S076	I79 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I79:S077	I79 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I79:S078	I79 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I79:S079	I79 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I79:S080	I79 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I79:S081	I79 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I79:S082	I79 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I79:S083	I79 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I79:S084	I79 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I79:S085	I79 Spare2	UA	UR	9999	UA9999	UR9999
I79:S086	I79 Spare3	UA	UR	9999	UA9999	UR9999
I79:S087	I79 Spare4	UA	UR	9999	UA9999	UR9999
I79:S088	I79 Spare5	UA	UR	9999	UA9999	UR9999
I79:S089	I79 Spare6	UA	UR	9999	UA9999	UR9999
I79:S090	I79 Spare7	UA	UR	9999	UA9999	UR9999
I79:S091	I79 Spare8	UA	UR	9999	UA9999	UR9999
I79:S092	I79 Spare9	UA	UR	9999	UA9999	UR9999
I79:S093	I79 Spare10	UA	UR	9999	UA9999	UR9999
I80:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I80:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I80:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I80:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I80:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I80:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I80:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I80:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I80:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I80:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I80:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I80:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I80:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I80:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I80:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I80:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I80:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I80:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I80:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I80:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I80:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I80:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I80:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I80:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I80:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I80:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I80:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I80:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I80:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I80:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I80:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I80:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I80:S001	I80 Cab Tamper	TA	TR	9999	TA9999	TR9999
I80:S002	I80 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

I80:S003	I80 Low Batt	YT	YR	9999	YT9999	YR9999
I80:S004	I80 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I80:S005	I80 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I80:S006	I80 Low Volts	YP	YQ	9999	YP9999	YQ9999
I80:S007	I80 PS Fail	YP	YQ	9999	YP9999	YQ9999
I80:S008	I80 Batt Test	IA	IR	9999	IA9999	IR9999
I80:S009	I80 Unibus	EM	EN	9999	EM9999	EN9999
I80:S010	I80 Download Fail	YF	UX	9999	YF9999	UX9999
I80:S011	I80 Spare1	UA	UR	9999	UA9999	UR9999
I80:S012	I80 LAN Comms	EM	EN	9999	EM9999	EN9999
I80:S013	I80 Door1 Fault	IA	IR	9999	IA9999	IR9999
I80:S014	I80 Door2 Fault	IA	IR	9999	IA9999	IR9999
I80:S015	I80 Door3 Fault	IA	IR	9999	IA9999	IR9999
I80:S016	I80 Door4 Fault	IA	IR	9999	IA9999	IR9999
I80:S017	I80 Door5 Fault	IA	IR	9999	IA9999	IR9999
I80:S018	I80 Door6 Fault	IA	IR	9999	IA9999	IR9999
I80:S019	I80 Door7 Fault	IA	IR	9999	IA9999	IR9999
I80:S020	I80 Door8 Fault	IA	IR	9999	IA9999	IR9999
I80:S021	I80 Door1 Forced	DF	DR	9999	DF9999	DR9999
I80:S022	I80 Door2 Forced	DF	DR	9999	DF9999	DR9999
I80:S023	I80 Door3 Forced	DF	DR	9999	DF9999	DR9999
I80:S024	I80 Door4 Forced	DF	DR	9999	DF9999	DR9999
I80:S025	I80 Door5 Forced	DF	DR	9999	DF9999	DR9999
I80:S026	I80 Door6 Forced	DF	DR	9999	DF9999	DR9999
I80:S027	I80 Door7 Forced	DF	DR	9999	DF9999	DR9999
I80:S028	I80 Door8 Forced	DF	DR	9999	DF9999	DR9999
I80:S029	I80 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I80:S030	I80 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I80:S031	I80 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I80:S032	I80 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I80:S033	I80 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I80:S034	I80 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I80:S035	I80 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I80:S036	I80 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I80:S037	I80 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I80:S038	I80 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I80:S039	I80 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I80:S040	I80 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I80:S041	I80 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I80:S042	I80 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I80:S043	I80 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I80:S044	I80 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I80:S045	I80 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I80:S046	I80 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I80:S047	I80 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I80:S048	I80 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I80:S049	I80 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I80:S050	I80 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I80:S051	I80 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I80:S052	I80 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I80:S053	I80 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I80:S054	I80 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I80:S055	I80 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I80:S056	I80 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I80:S057	I80 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I80:S058	I80 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I80:S059	I80 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I80:S060	I80 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I80:S061	I80 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I80:S062	I80 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I80:S063	I80 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I80:S064	I80 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I80:S065	I80 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I80:S066	I80 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I80:S067	I80 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I80:S068	I80 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I80:S069	I80 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I80:S070	I80 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I80:S071	I80 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I80:S072	I80 Rdr4 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I80:S073	I80 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I80:S074	I80 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I80:S075	I80 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I80:S076	I80 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I80:S077	I80 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I80:S078	I80 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I80:S079	I80 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I80:S080	I80 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I80:S081	I80 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I80:S082	I80 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I80:S083	I80 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I80:S084	I80 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I80:S085	I80 Spare2	UA	UR	9999	UA9999	UR9999
I80:S086	I80 Spare3	UA	UR	9999	UA9999	UR9999
I80:S087	I80 Spare4	UA	UR	9999	UA9999	UR9999
I80:S088	I80 Spare5	UA	UR	9999	UA9999	UR9999
I80:S089	I80 Spare6	UA	UR	9999	UA9999	UR9999
I80:S090	I80 Spare7	UA	UR	9999	UA9999	UR9999
I80:S091	I80 Spare8	UA	UR	9999	UA9999	UR9999
I80:S092	I80 Spare9	UA	UR	9999	UA9999	UR9999
I80:S093	I80 Spare10	UA	UR	9999	UA9999	UR9999
I81:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I81:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I81:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I81:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I81:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I81:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I81:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I81:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I81:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I81:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I81:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I81:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I81:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I81:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I81:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I81:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I81:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I81:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I81:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I81:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I81:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I81:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I81:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I81:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I81:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I81:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I81:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I81:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I81:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I81:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I81:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I81:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I81:S001	I81 Cab Tamper	TA	TR	9999	TA9999	TR9999
I81:S002	I81 AC fail	AT	AR	9999	AT9999	AR9999
I81:S003	I81 Low Batt	YT	YR	9999	YT9999	YR9999
I81:S004	I81 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I81:S005	I81 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I81:S006	I81 Low Volts	YP	YQ	9999	YP9999	YQ9999
I81:S007	I81 PS Fail	YP	YQ	9999	YP9999	YQ9999
I81:S008	I81 Batt Test	IA	IR	9999	IA9999	IR9999
I81:S009	I81 Unibus	EM	EN	9999	EM9999	EN9999
I81:S010	I81 Download Fail	YF	UX	9999	YF9999	UX9999
I81:S011	I81 Spare1	UA	UR	9999	UA9999	UR9999
I81:S012	I81 LAN Comms	EM	EN	9999	EM9999	EN9999
I81:S013	I81 Door1 Fault	IA	IR	9999	IA9999	IR9999
I81:S014	I81 Door2 Fault	IA	IR	9999	IA9999	IR9999
I81:S015	I81 Door3 Fault	IA	IR	9999	IA9999	IR9999
I81:S016	I81 Door4 Fault	IA	IR	9999	IA9999	IR9999
I81:S017	I81 Door5 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I81:S018	I81 Door6 Fault	IA	IR	9999	IA9999	IR9999
I81:S019	I81 Door7 Fault	IA	IR	9999	IA9999	IR9999
I81:S020	I81 Door8 Fault	IA	IR	9999	IA9999	IR9999
I81:S021	I81 Door1 Forced	DF	DR	9999	DF9999	DR9999
I81:S022	I81 Door2 Forced	DF	DR	9999	DF9999	DR9999
I81:S023	I81 Door3 Forced	DF	DR	9999	DF9999	DR9999
I81:S024	I81 Door4 Forced	DF	DR	9999	DF9999	DR9999
I81:S025	I81 Door5 Forced	DF	DR	9999	DF9999	DR9999
I81:S026	I81 Door6 Forced	DF	DR	9999	DF9999	DR9999
I81:S027	I81 Door7 Forced	DF	DR	9999	DF9999	DR9999
I81:S028	I81 Door8 Forced	DF	DR	9999	DF9999	DR9999
I81:S029	I81 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I81:S030	I81 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I81:S031	I81 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I81:S032	I81 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I81:S033	I81 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I81:S034	I81 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I81:S035	I81 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I81:S036	I81 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I81:S037	I81 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I81:S038	I81 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I81:S039	I81 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I81:S040	I81 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I81:S041	I81 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I81:S042	I81 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I81:S043	I81 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I81:S044	I81 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I81:S045	I81 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I81:S046	I81 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I81:S047	I81 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I81:S048	I81 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I81:S049	I81 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I81:S050	I81 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I81:S051	I81 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I81:S052	I81 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I81:S053	I81 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I81:S054	I81 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I81:S055	I81 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I81:S056	I81 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I81:S057	I81 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I81:S058	I81 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I81:S059	I81 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I81:S060	I81 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I81:S061	I81 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I81:S062	I81 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I81:S063	I81 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I81:S064	I81 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I81:S065	I81 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I81:S066	I81 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I81:S067	I81 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I81:S068	I81 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I81:S069	I81 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I81:S070	I81 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I81:S071	I81 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I81:S072	I81 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I81:S073	I81 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I81:S074	I81 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I81:S075	I81 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I81:S076	I81 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I81:S077	I81 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I81:S078	I81 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I81:S079	I81 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I81:S080	I81 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I81:S081	I81 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I81:S082	I81 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I81:S083	I81 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I81:S084	I81 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I81:S085	I81 Spare2	UA	UR	9999	UA9999	UR9999
I81:S086	I81 Spare3	UA	UR	9999	UA9999	UR9999
I81:S087	I81 Spare4	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I81:S088	I81 Spare5	UA	UR	9999	UA9999	UR9999
I81:S089	I81 Spare6	UA	UR	9999	UA9999	UR9999
I81:S090	I81 Spare7	UA	UR	9999	UA9999	UR9999
I81:S091	I81 Spare8	UA	UR	9999	UA9999	UR9999
I81:S092	I81 Spare9	UA	UR	9999	UA9999	UR9999
I81:S093	I81 Spare10	UA	UR	9999	UA9999	UR9999
I82:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I82:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I82:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I82:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I82:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I82:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I82:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I82:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I82:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I82:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I82:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I82:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I82:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I82:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I82:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I82:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I82:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I82:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I82:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I82:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I82:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I82:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I82:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I82:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I82:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I82:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I82:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I82:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I82:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I82:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I82:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I82:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I82:S001	I82 Cab Tamper	TA	TR	9999	TA9999	TR9999
I82:S002	I82 AC fail	AT	AR	9999	AT9999	AR9999
I82:S003	I82 Low Batt	YT	YR	9999	YT9999	YR9999
I82:S004	I82 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I82:S005	I82 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I82:S006	I82 Low Volts	YP	YQ	9999	YP9999	YQ9999
I82:S007	I82 PS Fail	YP	YQ	9999	YP9999	YQ9999
I82:S008	I82 Batt Test	IA	IR	9999	IA9999	IR9999
I82:S009	I82 Unibus	EM	EN	9999	EM9999	EN9999
I82:S010	I82 Download Fail	YF	UX	9999	YF9999	UX9999
I82:S011	I82 Spare1	UA	UR	9999	UA9999	UR9999
I82:S012	I82 LAN Comms	EM	EN	9999	EM9999	EN9999
I82:S013	I82 Door1 Fault	IA	IR	9999	IA9999	IR9999
I82:S014	I82 Door2 Fault	IA	IR	9999	IA9999	IR9999
I82:S015	I82 Door3 Fault	IA	IR	9999	IA9999	IR9999
I82:S016	I82 Door4 Fault	IA	IR	9999	IA9999	IR9999
I82:S017	I82 Door5 Fault	IA	IR	9999	IA9999	IR9999
I82:S018	I82 Door6 Fault	IA	IR	9999	IA9999	IR9999
I82:S019	I82 Door7 Fault	IA	IR	9999	IA9999	IR9999
I82:S020	I82 Door8 Fault	IA	IR	9999	IA9999	IR9999
I82:S021	I82 Door1 Forced	DF	DR	9999	DF9999	DR9999
I82:S022	I82 Door2 Forced	DF	DR	9999	DF9999	DR9999
I82:S023	I82 Door3 Forced	DF	DR	9999	DF9999	DR9999
I82:S024	I82 Door4 Forced	DF	DR	9999	DF9999	DR9999
I82:S025	I82 Door5 Forced	DF	DR	9999	DF9999	DR9999
I82:S026	I82 Door6 Forced	DF	DR	9999	DF9999	DR9999
I82:S027	I82 Door7 Forced	DF	DR	9999	DF9999	DR9999
I82:S028	I82 Door8 Forced	DF	DR	9999	DF9999	DR9999
I82:S029	I82 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I82:S030	I82 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I82:S031	I82 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I82:S032	I82 Door4 DOTL	DL	DH	9999	DL9999	DH9999

Integriti SIA DECIMAL Map. V21

I82:S033	I82 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I82:S034	I82 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I82:S035	I82 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I82:S036	I82 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I82:S037	I82 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I82:S038	I82 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I82:S039	I82 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I82:S040	I82 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I82:S041	I82 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I82:S042	I82 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I82:S043	I82 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I82:S044	I82 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I82:S045	I82 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I82:S046	I82 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I82:S047	I82 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I82:S048	I82 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I82:S049	I82 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I82:S050	I82 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I82:S051	I82 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I82:S052	I82 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I82:S053	I82 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I82:S054	I82 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I82:S055	I82 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I82:S056	I82 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I82:S057	I82 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I82:S058	I82 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I82:S059	I82 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I82:S060	I82 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I82:S061	I82 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I82:S062	I82 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I82:S063	I82 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I82:S064	I82 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I82:S065	I82 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I82:S066	I82 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I82:S067	I82 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I82:S068	I82 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I82:S069	I82 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I82:S070	I82 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I82:S071	I82 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I82:S072	I82 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I82:S073	I82 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I82:S074	I82 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I82:S075	I82 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I82:S076	I82 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I82:S077	I82 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I82:S078	I82 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I82:S079	I82 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I82:S080	I82 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I82:S081	I82 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I82:S082	I82 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I82:S083	I82 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I82:S084	I82 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I82:S085	I82 Spare2	UA	UR	9999	UA9999	UR9999
I82:S086	I82 Spare3	UA	UR	9999	UA9999	UR9999
I82:S087	I82 Spare4	UA	UR	9999	UA9999	UR9999
I82:S088	I82 Spare5	UA	UR	9999	UA9999	UR9999
I82:S089	I82 Spare6	UA	UR	9999	UA9999	UR9999
I82:S090	I82 Spare7	UA	UR	9999	UA9999	UR9999
I82:S091	I82 Spare8	UA	UR	9999	UA9999	UR9999
I82:S092	I82 Spare9	UA	UR	9999	UA9999	UR9999
I82:S093	I82 Spare10	UA	UR	9999	UA9999	UR9999
I83:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I83:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I83:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I83:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I83:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I83:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I83:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I83:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I83:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I83:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I83:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I83:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I83:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I83:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I83:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I83:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I83:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I83:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I83:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I83:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I83:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I83:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I83:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I83:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I83:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I83:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I83:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I83:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I83:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I83:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I83:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I83:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I83:S001	I83 Cab Tamper	TA	TR	9999	TA9999	TR9999
I83:S002	I83 AC fail	AT	AR	9999	AT9999	AR9999
I83:S003	I83 Low Batt	YT	YR	9999	YT9999	YR9999
I83:S004	I83 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I83:S005	I83 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I83:S006	I83 Low Volts	YP	YQ	9999	YP9999	YQ9999
I83:S007	I83 PS Fail	YP	YQ	9999	YP9999	YQ9999
I83:S008	I83 Batt Test	IA	IR	9999	IA9999	IR9999
I83:S009	I83 Unibus	EM	EN	9999	EM9999	EN9999
I83:S010	I83 Download Fail	YF	UX	9999	YF9999	UX9999
I83:S011	I83 Spare1	UA	UR	9999	UA9999	UR9999
I83:S012	I83 LAN Comms	EM	EN	9999	EM9999	EN9999
I83:S013	I83 Door1 Fault	IA	IR	9999	IA9999	IR9999
I83:S014	I83 Door2 Fault	IA	IR	9999	IA9999	IR9999
I83:S015	I83 Door3 Fault	IA	IR	9999	IA9999	IR9999
I83:S016	I83 Door4 Fault	IA	IR	9999	IA9999	IR9999
I83:S017	I83 Door5 Fault	IA	IR	9999	IA9999	IR9999
I83:S018	I83 Door6 Fault	IA	IR	9999	IA9999	IR9999
I83:S019	I83 Door7 Fault	IA	IR	9999	IA9999	IR9999
I83:S020	I83 Door8 Fault	IA	IR	9999	IA9999	IR9999
I83:S021	I83 Door1 Forced	DF	DR	9999	DF9999	DR9999
I83:S022	I83 Door2 Forced	DF	DR	9999	DF9999	DR9999
I83:S023	I83 Door3 Forced	DF	DR	9999	DF9999	DR9999
I83:S024	I83 Door4 Forced	DF	DR	9999	DF9999	DR9999
I83:S025	I83 Door5 Forced	DF	DR	9999	DF9999	DR9999
I83:S026	I83 Door6 Forced	DF	DR	9999	DF9999	DR9999
I83:S027	I83 Door7 Forced	DF	DR	9999	DF9999	DR9999
I83:S028	I83 Door8 Forced	DF	DR	9999	DF9999	DR9999
I83:S029	I83 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I83:S030	I83 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I83:S031	I83 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I83:S032	I83 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I83:S033	I83 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I83:S034	I83 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I83:S035	I83 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I83:S036	I83 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I83:S037	I83 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I83:S038	I83 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I83:S039	I83 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I83:S040	I83 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I83:S041	I83 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I83:S042	I83 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I83:S043	I83 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I83:S044	I83 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I83:S045	I83 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I83:S046	I83 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I83:S047	I83 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I83:S048	I83 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I83:S049	I83 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I83:S050	I83 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I83:S051	I83 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I83:S052	I83 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I83:S053	I83 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I83:S054	I83 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I83:S055	I83 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I83:S056	I83 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I83:S057	I83 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I83:S058	I83 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I83:S059	I83 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I83:S060	I83 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I83:S061	I83 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I83:S062	I83 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I83:S063	I83 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I83:S064	I83 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I83:S065	I83 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I83:S066	I83 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I83:S067	I83 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I83:S068	I83 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I83:S069	I83 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I83:S070	I83 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I83:S071	I83 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I83:S072	I83 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I83:S073	I83 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I83:S074	I83 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I83:S075	I83 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I83:S076	I83 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I83:S077	I83 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I83:S078	I83 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I83:S079	I83 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I83:S080	I83 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I83:S081	I83 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I83:S082	I83 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I83:S083	I83 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I83:S084	I83 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I83:S085	I83 Spare2	UA	UR	9999	UA9999	UR9999
I83:S086	I83 Spare3	UA	UR	9999	UA9999	UR9999
I83:S087	I83 Spare4	UA	UR	9999	UA9999	UR9999
I83:S088	I83 Spare5	UA	UR	9999	UA9999	UR9999
I83:S089	I83 Spare6	UA	UR	9999	UA9999	UR9999
I83:S090	I83 Spare7	UA	UR	9999	UA9999	UR9999
I83:S091	I83 Spare8	UA	UR	9999	UA9999	UR9999
I83:S092	I83 Spare9	UA	UR	9999	UA9999	UR9999
I83:S093	I83 Spare10	UA	UR	9999	UA9999	UR9999
I84:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I84:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I84:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I84:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I84:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I84:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I84:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I84:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I84:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I84:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I84:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I84:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I84:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I84:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I84:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I84:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I84:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I84:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I84:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I84:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I84:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I84:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I84:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I84:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999

I84:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I84:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I84:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I84:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I84:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I84:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I84:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I84:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I84:S001	I84 Cab Tamper	TA	TR	9999	TA9999	TR9999
I84:S002	I84 AC fail	AT	AR	9999	AT9999	AR9999
I84:S003	I84 Low Batt	YT	YR	9999	YT9999	YR9999
I84:S004	I84 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I84:S005	I84 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I84:S006	I84 Low Volts	YP	YQ	9999	YP9999	YQ9999
I84:S007	I84 PS Fail	YP	YQ	9999	YP9999	YQ9999
I84:S008	I84 Batt Test	IA	IR	9999	IA9999	IR9999
I84:S009	I84 Unibus	EM	EN	9999	EM9999	EN9999
I84:S010	I84 Download Fail	YF	UX	9999	YF9999	UX9999
I84:S011	I84 Spare1	UA	UR	9999	UA9999	UR9999
I84:S012	I84 LAN Comms	EM	EN	9999	EM9999	EN9999
I84:S013	I84 Door1 Fault	IA	IR	9999	IA9999	IR9999
I84:S014	I84 Door2 Fault	IA	IR	9999	IA9999	IR9999
I84:S015	I84 Door3 Fault	IA	IR	9999	IA9999	IR9999
I84:S016	I84 Door4 Fault	IA	IR	9999	IA9999	IR9999
I84:S017	I84 Door5 Fault	IA	IR	9999	IA9999	IR9999
I84:S018	I84 Door6 Fault	IA	IR	9999	IA9999	IR9999
I84:S019	I84 Door7 Fault	IA	IR	9999	IA9999	IR9999
I84:S020	I84 Door8 Fault	IA	IR	9999	IA9999	IR9999
I84:S021	I84 Door1 Forced	DF	DR	9999	DF9999	DR9999
I84:S022	I84 Door2 Forced	DF	DR	9999	DF9999	DR9999
I84:S023	I84 Door3 Forced	DF	DR	9999	DF9999	DR9999
I84:S024	I84 Door4 Forced	DF	DR	9999	DF9999	DR9999
I84:S025	I84 Door5 Forced	DF	DR	9999	DF9999	DR9999
I84:S026	I84 Door6 Forced	DF	DR	9999	DF9999	DR9999
I84:S027	I84 Door7 Forced	DF	DR	9999	DF9999	DR9999
I84:S028	I84 Door8 Forced	DF	DR	9999	DF9999	DR9999
I84:S029	I84 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I84:S030	I84 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I84:S031	I84 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I84:S032	I84 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I84:S033	I84 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I84:S034	I84 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I84:S035	I84 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I84:S036	I84 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I84:S037	I84 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I84:S038	I84 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I84:S039	I84 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I84:S040	I84 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I84:S041	I84 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I84:S042	I84 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I84:S043	I84 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I84:S044	I84 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I84:S045	I84 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I84:S046	I84 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I84:S047	I84 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I84:S048	I84 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I84:S049	I84 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I84:S050	I84 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I84:S051	I84 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I84:S052	I84 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I84:S053	I84 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I84:S054	I84 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I84:S055	I84 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I84:S056	I84 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I84:S057	I84 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I84:S058	I84 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I84:S059	I84 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I84:S060	I84 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I84:S061	I84 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I84:S062	I84 Rdr10 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I84:S063	I84 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I84:S064	I84 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I84:S065	I84 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I84:S066	I84 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I84:S067	I84 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I84:S068	I84 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I84:S069	I84 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I84:S070	I84 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I84:S071	I84 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I84:S072	I84 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I84:S073	I84 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I84:S074	I84 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I84:S075	I84 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I84:S076	I84 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I84:S077	I84 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I84:S078	I84 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I84:S079	I84 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I84:S080	I84 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I84:S081	I84 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I84:S082	I84 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I84:S083	I84 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I84:S084	I84 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I84:S085	I84 Spare2	UA	UR	9999	UA9999	UR9999
I84:S086	I84 Spare3	UA	UR	9999	UA9999	UR9999
I84:S087	I84 Spare4	UA	UR	9999	UA9999	UR9999
I84:S088	I84 Spare5	UA	UR	9999	UA9999	UR9999
I84:S089	I84 Spare6	UA	UR	9999	UA9999	UR9999
I84:S090	I84 Spare7	UA	UR	9999	UA9999	UR9999
I84:S091	I84 Spare8	UA	UR	9999	UA9999	UR9999
I84:S092	I84 Spare9	UA	UR	9999	UA9999	UR9999
I84:S093	I84 Spare10	UA	UR	9999	UA9999	UR9999
I85:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I85:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I85:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I85:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I85:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I85:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I85:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I85:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I85:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I85:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I85:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I85:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I85:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I85:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I85:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I85:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I85:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I85:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I85:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I85:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I85:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I85:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I85:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I85:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I85:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I85:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I85:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I85:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I85:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I85:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I85:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I85:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I85:S001	I85 Cab Tamper	TA	TR	9999	TA9999	TR9999
I85:S002	I85 AC fail	AT	AR	9999	AT9999	AR9999
I85:S003	I85 Low Batt	YT	YR	9999	YT9999	YR9999
I85:S004	I85 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I85:S005	I85 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I85:S006	I85 Low Volts	YP	YQ	9999	YP9999	YQ9999
I85:S007	I85 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

I85:S008	I85 Batt Test	IA	IR	9999	IA9999	IR9999
I85:S009	I85 Unibus	EM	EN	9999	EM9999	EN9999
I85:S010	I85 Download Fail	YF	UX	9999	YF9999	UX9999
I85:S011	I85 Spare1	UA	UR	9999	UA9999	UR9999
I85:S012	I85 LAN Comms	EM	EN	9999	EM9999	EN9999
I85:S013	I85 Door1 Fault	IA	IR	9999	IA9999	IR9999
I85:S014	I85 Door2 Fault	IA	IR	9999	IA9999	IR9999
I85:S015	I85 Door3 Fault	IA	IR	9999	IA9999	IR9999
I85:S016	I85 Door4 Fault	IA	IR	9999	IA9999	IR9999
I85:S017	I85 Door5 Fault	IA	IR	9999	IA9999	IR9999
I85:S018	I85 Door6 Fault	IA	IR	9999	IA9999	IR9999
I85:S019	I85 Door7 Fault	IA	IR	9999	IA9999	IR9999
I85:S020	I85 Door8 Fault	IA	IR	9999	IA9999	IR9999
I85:S021	I85 Door1 Forced	DF	DR	9999	DF9999	DR9999
I85:S022	I85 Door2 Forced	DF	DR	9999	DF9999	DR9999
I85:S023	I85 Door3 Forced	DF	DR	9999	DF9999	DR9999
I85:S024	I85 Door4 Forced	DF	DR	9999	DF9999	DR9999
I85:S025	I85 Door5 Forced	DF	DR	9999	DF9999	DR9999
I85:S026	I85 Door6 Forced	DF	DR	9999	DF9999	DR9999
I85:S027	I85 Door7 Forced	DF	DR	9999	DF9999	DR9999
I85:S028	I85 Door8 Forced	DF	DR	9999	DF9999	DR9999
I85:S029	I85 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I85:S030	I85 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I85:S031	I85 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I85:S032	I85 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I85:S033	I85 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I85:S034	I85 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I85:S035	I85 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I85:S036	I85 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I85:S037	I85 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I85:S038	I85 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I85:S039	I85 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I85:S040	I85 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I85:S041	I85 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I85:S042	I85 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I85:S043	I85 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I85:S044	I85 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I85:S045	I85 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I85:S046	I85 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I85:S047	I85 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I85:S048	I85 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I85:S049	I85 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I85:S050	I85 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I85:S051	I85 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I85:S052	I85 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I85:S053	I85 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I85:S054	I85 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I85:S055	I85 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I85:S056	I85 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I85:S057	I85 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I85:S058	I85 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I85:S059	I85 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I85:S060	I85 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I85:S061	I85 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I85:S062	I85 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I85:S063	I85 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I85:S064	I85 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I85:S065	I85 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I85:S066	I85 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I85:S067	I85 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I85:S068	I85 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I85:S069	I85 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I85:S070	I85 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I85:S071	I85 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I85:S072	I85 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I85:S073	I85 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I85:S074	I85 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I85:S075	I85 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I85:S076	I85 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I85:S077	I85 Rdr9 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I85:S078	I85 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I85:S079	I85 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I85:S080	I85 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I85:S081	I85 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I85:S082	I85 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I85:S083	I85 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I85:S084	I85 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I85:S085	I85 Spare2	UA	UR	9999	UA9999	UR9999
I85:S086	I85 Spare3	UA	UR	9999	UA9999	UR9999
I85:S087	I85 Spare4	UA	UR	9999	UA9999	UR9999
I85:S088	I85 Spare5	UA	UR	9999	UA9999	UR9999
I85:S089	I85 Spare6	UA	UR	9999	UA9999	UR9999
I85:S090	I85 Spare7	UA	UR	9999	UA9999	UR9999
I85:S091	I85 Spare8	UA	UR	9999	UA9999	UR9999
I85:S092	I85 Spare9	UA	UR	9999	UA9999	UR9999
I85:S093	I85 Spare10	UA	UR	9999	UA9999	UR9999
I86:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I86:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I86:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I86:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I86:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I86:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I86:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I86:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I86:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I86:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I86:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I86:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I86:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I86:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I86:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I86:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I86:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I86:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I86:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I86:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I86:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I86:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I86:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I86:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I86:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I86:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I86:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I86:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I86:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I86:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I86:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I86:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I86:S001	I86 Cab Tamper	TA	TR	9999	TA9999	TR9999
I86:S002	I86 AC fail	AT	AR	9999	AT9999	AR9999
I86:S003	I86 Low Batt	YT	YR	9999	YT9999	YR9999
I86:S004	I86 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I86:S005	I86 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I86:S006	I86 Low Volts	YP	YQ	9999	YP9999	YQ9999
I86:S007	I86 PS Fail	YP	YQ	9999	YP9999	YQ9999
I86:S008	I86 Batt Test	IA	IR	9999	IA9999	IR9999
I86:S009	I86 Unibus	EM	EN	9999	EM9999	EN9999
I86:S010	I86 Download Fail	YF	UX	9999	YF9999	UX9999
I86:S011	I86 Spare1	UA	UR	9999	UA9999	UR9999
I86:S012	I86 LAN Comms	EM	EN	9999	EM9999	EN9999
I86:S013	I86 Door1 Fault	IA	IR	9999	IA9999	IR9999
I86:S014	I86 Door2 Fault	IA	IR	9999	IA9999	IR9999
I86:S015	I86 Door3 Fault	IA	IR	9999	IA9999	IR9999
I86:S016	I86 Door4 Fault	IA	IR	9999	IA9999	IR9999
I86:S017	I86 Door5 Fault	IA	IR	9999	IA9999	IR9999
I86:S018	I86 Door6 Fault	IA	IR	9999	IA9999	IR9999
I86:S019	I86 Door7 Fault	IA	IR	9999	IA9999	IR9999
I86:S020	I86 Door8 Fault	IA	IR	9999	IA9999	IR9999
I86:S021	I86 Door1 Forced	DF	DR	9999	DF9999	DR9999
I86:S022	I86 Door2 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I86:S023	I86 Door3 Forced	DF	DR	9999	DF9999	DR9999
I86:S024	I86 Door4 Forced	DF	DR	9999	DF9999	DR9999
I86:S025	I86 Door5 Forced	DF	DR	9999	DF9999	DR9999
I86:S026	I86 Door6 Forced	DF	DR	9999	DF9999	DR9999
I86:S027	I86 Door7 Forced	DF	DR	9999	DF9999	DR9999
I86:S028	I86 Door8 Forced	DF	DR	9999	DF9999	DR9999
I86:S029	I86 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I86:S030	I86 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I86:S031	I86 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I86:S032	I86 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I86:S033	I86 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I86:S034	I86 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I86:S035	I86 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I86:S036	I86 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I86:S037	I86 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I86:S038	I86 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I86:S039	I86 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I86:S040	I86 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I86:S041	I86 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I86:S042	I86 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I86:S043	I86 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I86:S044	I86 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I86:S045	I86 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I86:S046	I86 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I86:S047	I86 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I86:S048	I86 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I86:S049	I86 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I86:S050	I86 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I86:S051	I86 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I86:S052	I86 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I86:S053	I86 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I86:S054	I86 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I86:S055	I86 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I86:S056	I86 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I86:S057	I86 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I86:S058	I86 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I86:S059	I86 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I86:S060	I86 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I86:S061	I86 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I86:S062	I86 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I86:S063	I86 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I86:S064	I86 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I86:S065	I86 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I86:S066	I86 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I86:S067	I86 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I86:S068	I86 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I86:S069	I86 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I86:S070	I86 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I86:S071	I86 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I86:S072	I86 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I86:S073	I86 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I86:S074	I86 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I86:S075	I86 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I86:S076	I86 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I86:S077	I86 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I86:S078	I86 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I86:S079	I86 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I86:S080	I86 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I86:S081	I86 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I86:S082	I86 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I86:S083	I86 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I86:S084	I86 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I86:S085	I86 Spare2	UA	UR	9999	UA9999	UR9999
I86:S086	I86 Spare3	UA	UR	9999	UA9999	UR9999
I86:S087	I86 Spare4	UA	UR	9999	UA9999	UR9999
I86:S088	I86 Spare5	UA	UR	9999	UA9999	UR9999
I86:S089	I86 Spare6	UA	UR	9999	UA9999	UR9999
I86:S090	I86 Spare7	UA	UR	9999	UA9999	UR9999
I86:S091	I86 Spare8	UA	UR	9999	UA9999	UR9999
I86:S092	I86 Spare9	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I86:S093	I86 Spare10	UA	UR	9999	UA9999	UR9999
I87:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I87:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I87:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I87:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I87:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I87:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I87:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I87:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I87:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I87:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I87:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I87:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I87:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I87:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I87:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I87:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I87:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I87:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I87:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I87:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I87:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I87:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I87:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I87:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I87:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I87:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I87:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I87:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I87:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I87:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I87:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I87:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I87:S001	I87 Cab Tamper	TA	TR	9999	TA9999	TR9999
I87:S002	I87 AC fail	AT	AR	9999	AT9999	AR9999
I87:S003	I87 Low Batt	YT	YR	9999	YT9999	YR9999
I87:S004	I87 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I87:S005	I87 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I87:S006	I87 Low Volts	YP	YQ	9999	YP9999	YQ9999
I87:S007	I87 PS Fail	YP	YQ	9999	YP9999	YQ9999
I87:S008	I87 Batt Test	IA	IR	9999	IA9999	IR9999
I87:S009	I87 Unibus	EM	EN	9999	EM9999	EN9999
I87:S010	I87 Download Fail	YF	UX	9999	YF9999	UX9999
I87:S011	I87 Spare1	UA	UR	9999	UA9999	UR9999
I87:S012	I87 LAN Comms	EM	EN	9999	EM9999	EN9999
I87:S013	I87 Door1 Fault	IA	IR	9999	IA9999	IR9999
I87:S014	I87 Door2 Fault	IA	IR	9999	IA9999	IR9999
I87:S015	I87 Door3 Fault	IA	IR	9999	IA9999	IR9999
I87:S016	I87 Door4 Fault	IA	IR	9999	IA9999	IR9999
I87:S017	I87 Door5 Fault	IA	IR	9999	IA9999	IR9999
I87:S018	I87 Door6 Fault	IA	IR	9999	IA9999	IR9999
I87:S019	I87 Door7 Fault	IA	IR	9999	IA9999	IR9999
I87:S020	I87 Door8 Fault	IA	IR	9999	IA9999	IR9999
I87:S021	I87 Door1 Forced	DF	DR	9999	DF9999	DR9999
I87:S022	I87 Door2 Forced	DF	DR	9999	DF9999	DR9999
I87:S023	I87 Door3 Forced	DF	DR	9999	DF9999	DR9999
I87:S024	I87 Door4 Forced	DF	DR	9999	DF9999	DR9999
I87:S025	I87 Door5 Forced	DF	DR	9999	DF9999	DR9999
I87:S026	I87 Door6 Forced	DF	DR	9999	DF9999	DR9999
I87:S027	I87 Door7 Forced	DF	DR	9999	DF9999	DR9999
I87:S028	I87 Door8 Forced	DF	DR	9999	DF9999	DR9999
I87:S029	I87 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I87:S030	I87 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I87:S031	I87 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I87:S032	I87 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I87:S033	I87 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I87:S034	I87 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I87:S035	I87 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I87:S036	I87 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I87:S037	I87 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I87:S038	I87 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I87:S039	I87 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I87:S040	I87 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I87:S041	I87 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I87:S042	I87 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I87:S043	I87 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I87:S044	I87 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I87:S045	I87 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I87:S046	I87 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I87:S047	I87 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I87:S048	I87 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I87:S049	I87 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I87:S050	I87 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I87:S051	I87 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I87:S052	I87 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I87:S053	I87 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I87:S054	I87 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I87:S055	I87 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I87:S056	I87 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I87:S057	I87 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I87:S058	I87 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I87:S059	I87 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I87:S060	I87 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I87:S061	I87 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I87:S062	I87 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I87:S063	I87 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I87:S064	I87 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I87:S065	I87 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I87:S066	I87 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I87:S067	I87 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I87:S068	I87 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I87:S069	I87 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I87:S070	I87 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I87:S071	I87 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I87:S072	I87 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I87:S073	I87 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I87:S074	I87 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I87:S075	I87 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I87:S076	I87 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I87:S077	I87 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I87:S078	I87 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I87:S079	I87 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I87:S080	I87 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I87:S081	I87 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I87:S082	I87 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I87:S083	I87 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I87:S084	I87 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I87:S085	I87 Spare2	UA	UR	9999	UA9999	UR9999
I87:S086	I87 Spare3	UA	UR	9999	UA9999	UR9999
I87:S087	I87 Spare4	UA	UR	9999	UA9999	UR9999
I87:S088	I87 Spare5	UA	UR	9999	UA9999	UR9999
I87:S089	I87 Spare6	UA	UR	9999	UA9999	UR9999
I87:S090	I87 Spare7	UA	UR	9999	UA9999	UR9999
I87:S091	I87 Spare8	UA	UR	9999	UA9999	UR9999
I87:S092	I87 Spare9	UA	UR	9999	UA9999	UR9999
I87:S093	I87 Spare10	UA	UR	9999	UA9999	UR9999
I88:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I88:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I88:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I88:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I88:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I88:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I88:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I88:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I88:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I88:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I88:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I88:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I88:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I88:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I88:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I88:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I88:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I88:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I88:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I88:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I88:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I88:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I88:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I88:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I88:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I88:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I88:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I88:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I88:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I88:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I88:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I88:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I88:S001	I88 Cab Tamper	TA	TR	9999	TA9999	TR9999
I88:S002	I88 AC fail	AT	AR	9999	AT9999	AR9999
I88:S003	I88 Low Batt	YT	YR	9999	YT9999	YR9999
I88:S004	I88 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I88:S005	I88 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I88:S006	I88 Low Volts	YP	YQ	9999	YP9999	YQ9999
I88:S007	I88 PS Fail	YP	YQ	9999	YP9999	YQ9999
I88:S008	I88 Batt Test	IA	IR	9999	IA9999	IR9999
I88:S009	I88 Unibus	EM	EN	9999	EM9999	EN9999
I88:S010	I88 Download Fail	YF	UX	9999	YF9999	UX9999
I88:S011	I88 Spare1	UA	UR	9999	UA9999	UR9999
I88:S012	I88 LAN Comms	EM	EN	9999	EM9999	EN9999
I88:S013	I88 Door1 Fault	IA	IR	9999	IA9999	IR9999
I88:S014	I88 Door2 Fault	IA	IR	9999	IA9999	IR9999
I88:S015	I88 Door3 Fault	IA	IR	9999	IA9999	IR9999
I88:S016	I88 Door4 Fault	IA	IR	9999	IA9999	IR9999
I88:S017	I88 Door5 Fault	IA	IR	9999	IA9999	IR9999
I88:S018	I88 Door6 Fault	IA	IR	9999	IA9999	IR9999
I88:S019	I88 Door7 Fault	IA	IR	9999	IA9999	IR9999
I88:S020	I88 Door8 Fault	IA	IR	9999	IA9999	IR9999
I88:S021	I88 Door1 Forced	DF	DR	9999	DF9999	DR9999
I88:S022	I88 Door2 Forced	DF	DR	9999	DF9999	DR9999
I88:S023	I88 Door3 Forced	DF	DR	9999	DF9999	DR9999
I88:S024	I88 Door4 Forced	DF	DR	9999	DF9999	DR9999
I88:S025	I88 Door5 Forced	DF	DR	9999	DF9999	DR9999
I88:S026	I88 Door6 Forced	DF	DR	9999	DF9999	DR9999
I88:S027	I88 Door7 Forced	DF	DR	9999	DF9999	DR9999
I88:S028	I88 Door8 Forced	DF	DR	9999	DF9999	DR9999
I88:S029	I88 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I88:S030	I88 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I88:S031	I88 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I88:S032	I88 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I88:S033	I88 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I88:S034	I88 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I88:S035	I88 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I88:S036	I88 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I88:S037	I88 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I88:S038	I88 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I88:S039	I88 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I88:S040	I88 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I88:S041	I88 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I88:S042	I88 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I88:S043	I88 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I88:S044	I88 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I88:S045	I88 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I88:S046	I88 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I88:S047	I88 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I88:S048	I88 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I88:S049	I88 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I88:S050	I88 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I88:S051	I88 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I88:S052	I88 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I88:S053	I88 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I88:S054	I88 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I88:S055	I88 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I88:S056	I88 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I88:S057	I88 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I88:S058	I88 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I88:S059	I88 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I88:S060	I88 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I88:S061	I88 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I88:S062	I88 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I88:S063	I88 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I88:S064	I88 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I88:S065	I88 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I88:S066	I88 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I88:S067	I88 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I88:S068	I88 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I88:S069	I88 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I88:S070	I88 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I88:S071	I88 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I88:S072	I88 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I88:S073	I88 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I88:S074	I88 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I88:S075	I88 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I88:S076	I88 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I88:S077	I88 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I88:S078	I88 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I88:S079	I88 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I88:S080	I88 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I88:S081	I88 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I88:S082	I88 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I88:S083	I88 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I88:S084	I88 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I88:S085	I88 Spare2	UA	UR	9999	UA9999	UR9999
I88:S086	I88 Spare3	UA	UR	9999	UA9999	UR9999
I88:S087	I88 Spare4	UA	UR	9999	UA9999	UR9999
I88:S088	I88 Spare5	UA	UR	9999	UA9999	UR9999
I88:S089	I88 Spare6	UA	UR	9999	UA9999	UR9999
I88:S090	I88 Spare7	UA	UR	9999	UA9999	UR9999
I88:S091	I88 Spare8	UA	UR	9999	UA9999	UR9999
I88:S092	I88 Spare9	UA	UR	9999	UA9999	UR9999
I88:S093	I88 Spare10	UA	UR	9999	UA9999	UR9999
I89:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I89:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I89:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I89:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I89:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I89:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I89:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I89:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I89:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I89:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I89:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I89:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I89:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I89:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I89:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I89:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I89:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I89:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I89:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I89:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I89:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I89:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I89:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I89:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I89:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I89:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I89:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I89:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I89:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I89:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I89:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I89:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I89:S001	I89 Cab Tamper	TA	TR	9999	TA9999	TR9999
I89:S002	I89 AC fail	AT	AR	9999	AT9999	AR9999
I89:S003	I89 Low Batt	YT	YR	9999	YT9999	YR9999
I89:S004	I89 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I89:S005	I89 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I89:S006	I89 Low Volts	YP	YQ	9999	YP9999	YQ9999
I89:S007	I89 PS Fail	YP	YQ	9999	YP9999	YQ9999
I89:S008	I89 Batt Test	IA	IR	9999	IA9999	IR9999
I89:S009	I89 Unibus	EM	EN	9999	EM9999	EN9999
I89:S010	I89 Download Fail	YF	UX	9999	YF9999	UX9999
I89:S011	I89 Spare1	UA	UR	9999	UA9999	UR9999
I89:S012	I89 LAN Comms	EM	EN	9999	EM9999	EN9999
I89:S013	I89 Door1 Fault	IA	IR	9999	IA9999	IR9999
I89:S014	I89 Door2 Fault	IA	IR	9999	IA9999	IR9999
I89:S015	I89 Door3 Fault	IA	IR	9999	IA9999	IR9999
I89:S016	I89 Door4 Fault	IA	IR	9999	IA9999	IR9999
I89:S017	I89 Door5 Fault	IA	IR	9999	IA9999	IR9999
I89:S018	I89 Door6 Fault	IA	IR	9999	IA9999	IR9999
I89:S019	I89 Door7 Fault	IA	IR	9999	IA9999	IR9999
I89:S020	I89 Door8 Fault	IA	IR	9999	IA9999	IR9999
I89:S021	I89 Door1 Forced	DF	DR	9999	DF9999	DR9999
I89:S022	I89 Door2 Forced	DF	DR	9999	DF9999	DR9999
I89:S023	I89 Door3 Forced	DF	DR	9999	DF9999	DR9999
I89:S024	I89 Door4 Forced	DF	DR	9999	DF9999	DR9999
I89:S025	I89 Door5 Forced	DF	DR	9999	DF9999	DR9999
I89:S026	I89 Door6 Forced	DF	DR	9999	DF9999	DR9999
I89:S027	I89 Door7 Forced	DF	DR	9999	DF9999	DR9999
I89:S028	I89 Door8 Forced	DF	DR	9999	DF9999	DR9999
I89:S029	I89 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I89:S030	I89 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I89:S031	I89 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I89:S032	I89 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I89:S033	I89 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I89:S034	I89 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I89:S035	I89 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I89:S036	I89 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I89:S037	I89 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I89:S038	I89 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I89:S039	I89 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I89:S040	I89 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I89:S041	I89 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I89:S042	I89 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I89:S043	I89 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I89:S044	I89 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I89:S045	I89 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I89:S046	I89 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I89:S047	I89 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I89:S048	I89 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I89:S049	I89 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I89:S050	I89 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I89:S051	I89 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I89:S052	I89 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I89:S053	I89 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I89:S054	I89 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I89:S055	I89 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I89:S056	I89 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I89:S057	I89 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I89:S058	I89 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I89:S059	I89 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I89:S060	I89 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I89:S061	I89 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I89:S062	I89 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I89:S063	I89 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I89:S064	I89 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I89:S065	I89 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I89:S066	I89 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I89:S067	I89 Rdr15 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I89:S068	I89 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I89:S069	I89 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I89:S070	I89 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I89:S071	I89 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I89:S072	I89 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I89:S073	I89 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I89:S074	I89 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I89:S075	I89 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I89:S076	I89 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I89:S077	I89 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I89:S078	I89 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I89:S079	I89 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I89:S080	I89 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I89:S081	I89 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I89:S082	I89 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I89:S083	I89 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I89:S084	I89 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I89:S085	I89 Spare2	UA	UR	9999	UA9999	UR9999
I89:S086	I89 Spare3	UA	UR	9999	UA9999	UR9999
I89:S087	I89 Spare4	UA	UR	9999	UA9999	UR9999
I89:S088	I89 Spare5	UA	UR	9999	UA9999	UR9999
I89:S089	I89 Spare6	UA	UR	9999	UA9999	UR9999
I89:S090	I89 Spare7	UA	UR	9999	UA9999	UR9999
I89:S091	I89 Spare8	UA	UR	9999	UA9999	UR9999
I89:S092	I89 Spare9	UA	UR	9999	UA9999	UR9999
I89:S093	I89 Spare10	UA	UR	9999	UA9999	UR9999
I90:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I90:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I90:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I90:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I90:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I90:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I90:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I90:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I90:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I90:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I90:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I90:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I90:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I90:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I90:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I90:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I90:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I90:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I90:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I90:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I90:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I90:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I90:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I90:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I90:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I90:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I90:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I90:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I90:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I90:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I90:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I90:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I90:S001	I90 Cab Tamper	TA	TR	9999	TA9999	TR9999
I90:S002	I90 AC fail	AT	AR	9999	AT9999	AR9999
I90:S003	I90 Low Batt	YT	YR	9999	YT9999	YR9999
I90:S004	I90 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I90:S005	I90 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I90:S006	I90 Low Volts	YP	YQ	9999	YP9999	YQ9999
I90:S007	I90 PS Fail	YP	YQ	9999	YP9999	YQ9999
I90:S008	I90 Batt Test	IA	IR	9999	IA9999	IR9999
I90:S009	I90 Unibus	EM	EN	9999	EM9999	EN9999
I90:S010	I90 Download Fail	YF	UX	9999	YF9999	UX9999
I90:S011	I90 Spare1	UA	UR	9999	UA9999	UR9999
I90:S012	I90 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

I90:S013	I90 Door1 Fault	IA	IR	9999	IA9999	IR9999
I90:S014	I90 Door2 Fault	IA	IR	9999	IA9999	IR9999
I90:S015	I90 Door3 Fault	IA	IR	9999	IA9999	IR9999
I90:S016	I90 Door4 Fault	IA	IR	9999	IA9999	IR9999
I90:S017	I90 Door5 Fault	IA	IR	9999	IA9999	IR9999
I90:S018	I90 Door6 Fault	IA	IR	9999	IA9999	IR9999
I90:S019	I90 Door7 Fault	IA	IR	9999	IA9999	IR9999
I90:S020	I90 Door8 Fault	IA	IR	9999	IA9999	IR9999
I90:S021	I90 Door1 Forced	DF	DR	9999	DF9999	DR9999
I90:S022	I90 Door2 Forced	DF	DR	9999	DF9999	DR9999
I90:S023	I90 Door3 Forced	DF	DR	9999	DF9999	DR9999
I90:S024	I90 Door4 Forced	DF	DR	9999	DF9999	DR9999
I90:S025	I90 Door5 Forced	DF	DR	9999	DF9999	DR9999
I90:S026	I90 Door6 Forced	DF	DR	9999	DF9999	DR9999
I90:S027	I90 Door7 Forced	DF	DR	9999	DF9999	DR9999
I90:S028	I90 Door8 Forced	DF	DR	9999	DF9999	DR9999
I90:S029	I90 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I90:S030	I90 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I90:S031	I90 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I90:S032	I90 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I90:S033	I90 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I90:S034	I90 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I90:S035	I90 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I90:S036	I90 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I90:S037	I90 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I90:S038	I90 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I90:S039	I90 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I90:S040	I90 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I90:S041	I90 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I90:S042	I90 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I90:S043	I90 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I90:S044	I90 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I90:S045	I90 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I90:S046	I90 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I90:S047	I90 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I90:S048	I90 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I90:S049	I90 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I90:S050	I90 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I90:S051	I90 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I90:S052	I90 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I90:S053	I90 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I90:S054	I90 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I90:S055	I90 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I90:S056	I90 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I90:S057	I90 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I90:S058	I90 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I90:S059	I90 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I90:S060	I90 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I90:S061	I90 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I90:S062	I90 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I90:S063	I90 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I90:S064	I90 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I90:S065	I90 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I90:S066	I90 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I90:S067	I90 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I90:S068	I90 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I90:S069	I90 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I90:S070	I90 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I90:S071	I90 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I90:S072	I90 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I90:S073	I90 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I90:S074	I90 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I90:S075	I90 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I90:S076	I90 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I90:S077	I90 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I90:S078	I90 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I90:S079	I90 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I90:S080	I90 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I90:S081	I90 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I90:S082	I90 Rdr14 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I90:S083	I90 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I90:S084	I90 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I90:S085	I90 Spare2	UA	UR	9999	UA9999	UR9999
I90:S086	I90 Spare3	UA	UR	9999	UA9999	UR9999
I90:S087	I90 Spare4	UA	UR	9999	UA9999	UR9999
I90:S088	I90 Spare5	UA	UR	9999	UA9999	UR9999
I90:S089	I90 Spare6	UA	UR	9999	UA9999	UR9999
I90:S090	I90 Spare7	UA	UR	9999	UA9999	UR9999
I90:S091	I90 Spare8	UA	UR	9999	UA9999	UR9999
I90:S092	I90 Spare9	UA	UR	9999	UA9999	UR9999
I90:S093	I90 Spare10	UA	UR	9999	UA9999	UR9999
I91:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I91:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I91:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I91:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I91:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I91:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I91:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I91:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I91:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I91:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I91:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I91:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I91:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I91:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I91:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I91:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I91:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I91:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I91:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I91:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I91:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I91:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I91:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I91:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I91:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I91:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I91:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I91:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I91:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I91:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I91:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I91:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I91:S001	I91 Cab Tamper	TA	TR	9999	TA9999	TR9999
I91:S002	I91 AC fail	AT	AR	9999	AT9999	AR9999
I91:S003	I91 Low Batt	YT	YR	9999	YT9999	YR9999
I91:S004	I91 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I91:S005	I91 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I91:S006	I91 Low Volts	YP	YQ	9999	YP9999	YQ9999
I91:S007	I91 PS Fail	YP	YQ	9999	YP9999	YQ9999
I91:S008	I91 Batt Test	IA	IR	9999	IA9999	IR9999
I91:S009	I91 Unibus	EM	EN	9999	EM9999	EN9999
I91:S010	I91 Download Fail	YF	UX	9999	YF9999	UX9999
I91:S011	I91 Spare1	UA	UR	9999	UA9999	UR9999
I91:S012	I91 LAN Comms	EM	EN	9999	EM9999	EN9999
I91:S013	I91 Door1 Fault	IA	IR	9999	IA9999	IR9999
I91:S014	I91 Door2 Fault	IA	IR	9999	IA9999	IR9999
I91:S015	I91 Door3 Fault	IA	IR	9999	IA9999	IR9999
I91:S016	I91 Door4 Fault	IA	IR	9999	IA9999	IR9999
I91:S017	I91 Door5 Fault	IA	IR	9999	IA9999	IR9999
I91:S018	I91 Door6 Fault	IA	IR	9999	IA9999	IR9999
I91:S019	I91 Door7 Fault	IA	IR	9999	IA9999	IR9999
I91:S020	I91 Door8 Fault	IA	IR	9999	IA9999	IR9999
I91:S021	I91 Door1 Forced	DF	DR	9999	DF9999	DR9999
I91:S022	I91 Door2 Forced	DF	DR	9999	DF9999	DR9999
I91:S023	I91 Door3 Forced	DF	DR	9999	DF9999	DR9999
I91:S024	I91 Door4 Forced	DF	DR	9999	DF9999	DR9999
I91:S025	I91 Door5 Forced	DF	DR	9999	DF9999	DR9999
I91:S026	I91 Door6 Forced	DF	DR	9999	DF9999	DR9999
I91:S027	I91 Door7 Forced	DF	DR	9999	DF9999	DR9999

Integriti SIA DECIMAL Map. V21

I91:S028	I91 Door8 Forced	DF	DR	9999	DF9999	DR9999
I91:S029	I91 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I91:S030	I91 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I91:S031	I91 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I91:S032	I91 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I91:S033	I91 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I91:S034	I91 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I91:S035	I91 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I91:S036	I91 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I91:S037	I91 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I91:S038	I91 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I91:S039	I91 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I91:S040	I91 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I91:S041	I91 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I91:S042	I91 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I91:S043	I91 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I91:S044	I91 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I91:S045	I91 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I91:S046	I91 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I91:S047	I91 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I91:S048	I91 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I91:S049	I91 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I91:S050	I91 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I91:S051	I91 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I91:S052	I91 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I91:S053	I91 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I91:S054	I91 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I91:S055	I91 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I91:S056	I91 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I91:S057	I91 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I91:S058	I91 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I91:S059	I91 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I91:S060	I91 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I91:S061	I91 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I91:S062	I91 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I91:S063	I91 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I91:S064	I91 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I91:S065	I91 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I91:S066	I91 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I91:S067	I91 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I91:S068	I91 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I91:S069	I91 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I91:S070	I91 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I91:S071	I91 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I91:S072	I91 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I91:S073	I91 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I91:S074	I91 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I91:S075	I91 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I91:S076	I91 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I91:S077	I91 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I91:S078	I91 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I91:S079	I91 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I91:S080	I91 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I91:S081	I91 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I91:S082	I91 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I91:S083	I91 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I91:S084	I91 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I91:S085	I91 Spare2	UA	UR	9999	UA9999	UR9999
I91:S086	I91 Spare3	UA	UR	9999	UA9999	UR9999
I91:S087	I91 Spare4	UA	UR	9999	UA9999	UR9999
I91:S088	I91 Spare5	UA	UR	9999	UA9999	UR9999
I91:S089	I91 Spare6	UA	UR	9999	UA9999	UR9999
I91:S090	I91 Spare7	UA	UR	9999	UA9999	UR9999
I91:S091	I91 Spare8	UA	UR	9999	UA9999	UR9999
I91:S092	I91 Spare9	UA	UR	9999	UA9999	UR9999
I91:S093	I91 Spare10	UA	UR	9999	UA9999	UR9999
I92:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I92:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I92:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I92:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I92:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I92:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I92:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I92:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I92:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I92:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I92:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I92:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I92:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I92:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I92:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I92:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I92:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I92:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I92:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I92:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I92:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I92:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I92:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I92:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I92:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I92:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I92:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I92:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I92:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I92:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I92:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I92:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I92:S001	I92 Cab Tamper	TA	TR	9999	TA9999	TR9999
I92:S002	I92 AC fail	AT	AR	9999	AT9999	AR9999
I92:S003	I92 Low Batt	YT	YR	9999	YT9999	YR9999
I92:S004	I92 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I92:S005	I92 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I92:S006	I92 Low Volts	YP	YQ	9999	YP9999	YQ9999
I92:S007	I92 PS Fail	YP	YQ	9999	YP9999	YQ9999
I92:S008	I92 Batt Test	IA	IR	9999	IA9999	IR9999
I92:S009	I92 Unibus	EM	EN	9999	EM9999	EN9999
I92:S010	I92 Download Fail	YF	UX	9999	YF9999	UX9999
I92:S011	I92 Spare1	UA	UR	9999	UA9999	UR9999
I92:S012	I92 LAN Comms	EM	EN	9999	EM9999	EN9999
I92:S013	I92 Door1 Fault	IA	IR	9999	IA9999	IR9999
I92:S014	I92 Door2 Fault	IA	IR	9999	IA9999	IR9999
I92:S015	I92 Door3 Fault	IA	IR	9999	IA9999	IR9999
I92:S016	I92 Door4 Fault	IA	IR	9999	IA9999	IR9999
I92:S017	I92 Door5 Fault	IA	IR	9999	IA9999	IR9999
I92:S018	I92 Door6 Fault	IA	IR	9999	IA9999	IR9999
I92:S019	I92 Door7 Fault	IA	IR	9999	IA9999	IR9999
I92:S020	I92 Door8 Fault	IA	IR	9999	IA9999	IR9999
I92:S021	I92 Door1 Forced	DF	DR	9999	DF9999	DR9999
I92:S022	I92 Door2 Forced	DF	DR	9999	DF9999	DR9999
I92:S023	I92 Door3 Forced	DF	DR	9999	DF9999	DR9999
I92:S024	I92 Door4 Forced	DF	DR	9999	DF9999	DR9999
I92:S025	I92 Door5 Forced	DF	DR	9999	DF9999	DR9999
I92:S026	I92 Door6 Forced	DF	DR	9999	DF9999	DR9999
I92:S027	I92 Door7 Forced	DF	DR	9999	DF9999	DR9999
I92:S028	I92 Door8 Forced	DF	DR	9999	DF9999	DR9999
I92:S029	I92 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I92:S030	I92 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I92:S031	I92 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I92:S032	I92 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I92:S033	I92 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I92:S034	I92 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I92:S035	I92 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I92:S036	I92 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I92:S037	I92 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I92:S038	I92 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I92:S039	I92 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I92:S040	I92 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I92:S041	I92 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I92:S042	I92 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I92:S043	I92 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I92:S044	I92 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I92:S045	I92 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I92:S046	I92 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I92:S047	I92 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I92:S048	I92 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I92:S049	I92 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I92:S050	I92 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I92:S051	I92 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I92:S052	I92 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I92:S053	I92 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I92:S054	I92 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I92:S055	I92 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I92:S056	I92 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I92:S057	I92 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I92:S058	I92 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I92:S059	I92 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I92:S060	I92 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I92:S061	I92 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I92:S062	I92 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I92:S063	I92 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I92:S064	I92 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I92:S065	I92 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I92:S066	I92 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I92:S067	I92 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I92:S068	I92 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I92:S069	I92 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I92:S070	I92 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I92:S071	I92 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I92:S072	I92 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I92:S073	I92 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I92:S074	I92 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I92:S075	I92 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I92:S076	I92 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I92:S077	I92 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I92:S078	I92 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I92:S079	I92 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I92:S080	I92 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I92:S081	I92 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I92:S082	I92 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I92:S083	I92 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I92:S084	I92 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I92:S085	I92 Spare2	UA	UR	9999	UA9999	UR9999
I92:S086	I92 Spare3	UA	UR	9999	UA9999	UR9999
I92:S087	I92 Spare4	UA	UR	9999	UA9999	UR9999
I92:S088	I92 Spare5	UA	UR	9999	UA9999	UR9999
I92:S089	I92 Spare6	UA	UR	9999	UA9999	UR9999
I92:S090	I92 Spare7	UA	UR	9999	UA9999	UR9999
I92:S091	I92 Spare8	UA	UR	9999	UA9999	UR9999
I92:S092	I92 Spare9	UA	UR	9999	UA9999	UR9999
I92:S093	I92 Spare10	UA	UR	9999	UA9999	UR9999
I93:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I93:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I93:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I93:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I93:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I93:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I93:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I93:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I93:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I93:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I93:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I93:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I93:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I93:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I93:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I93:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I93:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I93:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I93:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I93:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I93:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I93:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I93:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I93:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I93:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I93:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I93:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I93:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I93:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I93:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I93:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I93:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I93:S001	I93 Cab Tamper	TA	TR	9999	TA9999	TR9999
I93:S002	I93 AC fail	AT	AR	9999	AT9999	AR9999
I93:S003	I93 Low Batt	YT	YR	9999	YT9999	YR9999
I93:S004	I93 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I93:S005	I93 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I93:S006	I93 Low Volts	YP	YQ	9999	YP9999	YQ9999
I93:S007	I93 PS Fail	YP	YQ	9999	YP9999	YQ9999
I93:S008	I93 Batt Test	IA	IR	9999	IA9999	IR9999
I93:S009	I93 Unibus	EM	EN	9999	EM9999	EN9999
I93:S010	I93 Download Fail	YF	UX	9999	YF9999	UX9999
I93:S011	I93 Spare1	UA	UR	9999	UA9999	UR9999
I93:S012	I93 LAN Comms	EM	EN	9999	EM9999	EN9999
I93:S013	I93 Door1 Fault	IA	IR	9999	IA9999	IR9999
I93:S014	I93 Door2 Fault	IA	IR	9999	IA9999	IR9999
I93:S015	I93 Door3 Fault	IA	IR	9999	IA9999	IR9999
I93:S016	I93 Door4 Fault	IA	IR	9999	IA9999	IR9999
I93:S017	I93 Door5 Fault	IA	IR	9999	IA9999	IR9999
I93:S018	I93 Door6 Fault	IA	IR	9999	IA9999	IR9999
I93:S019	I93 Door7 Fault	IA	IR	9999	IA9999	IR9999
I93:S020	I93 Door8 Fault	IA	IR	9999	IA9999	IR9999
I93:S021	I93 Door1 Forced	DF	DR	9999	DF9999	DR9999
I93:S022	I93 Door2 Forced	DF	DR	9999	DF9999	DR9999
I93:S023	I93 Door3 Forced	DF	DR	9999	DF9999	DR9999
I93:S024	I93 Door4 Forced	DF	DR	9999	DF9999	DR9999
I93:S025	I93 Door5 Forced	DF	DR	9999	DF9999	DR9999
I93:S026	I93 Door6 Forced	DF	DR	9999	DF9999	DR9999
I93:S027	I93 Door7 Forced	DF	DR	9999	DF9999	DR9999
I93:S028	I93 Door8 Forced	DF	DR	9999	DF9999	DR9999
I93:S029	I93 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I93:S030	I93 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I93:S031	I93 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I93:S032	I93 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I93:S033	I93 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I93:S034	I93 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I93:S035	I93 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I93:S036	I93 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I93:S037	I93 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I93:S038	I93 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I93:S039	I93 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I93:S040	I93 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I93:S041	I93 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I93:S042	I93 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I93:S043	I93 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I93:S044	I93 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I93:S045	I93 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I93:S046	I93 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I93:S047	I93 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I93:S048	I93 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I93:S049	I93 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I93:S050	I93 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I93:S051	I93 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I93:S052	I93 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I93:S053	I93 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I93:S054	I93 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I93:S055	I93 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I93:S056	I93 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I93:S057	I93 Rdr5 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I93:S058	I93 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I93:S059	I93 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I93:S060	I93 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I93:S061	I93 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I93:S062	I93 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I93:S063	I93 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I93:S064	I93 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I93:S065	I93 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I93:S066	I93 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I93:S067	I93 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I93:S068	I93 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I93:S069	I93 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I93:S070	I93 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I93:S071	I93 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I93:S072	I93 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I93:S073	I93 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I93:S074	I93 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I93:S075	I93 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I93:S076	I93 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I93:S077	I93 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I93:S078	I93 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I93:S079	I93 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I93:S080	I93 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I93:S081	I93 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I93:S082	I93 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I93:S083	I93 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I93:S084	I93 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I93:S085	I93 Spare2	UA	UR	9999	UA9999	UR9999
I93:S086	I93 Spare3	UA	UR	9999	UA9999	UR9999
I93:S087	I93 Spare4	UA	UR	9999	UA9999	UR9999
I93:S088	I93 Spare5	UA	UR	9999	UA9999	UR9999
I93:S089	I93 Spare6	UA	UR	9999	UA9999	UR9999
I93:S090	I93 Spare7	UA	UR	9999	UA9999	UR9999
I93:S091	I93 Spare8	UA	UR	9999	UA9999	UR9999
I93:S092	I93 Spare9	UA	UR	9999	UA9999	UR9999
I93:S093	I93 Spare10	UA	UR	9999	UA9999	UR9999
I94:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I94:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I94:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I94:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I94:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I94:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I94:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I94:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I94:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I94:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I94:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I94:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I94:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I94:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I94:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I94:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I94:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I94:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I94:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I94:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I94:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I94:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I94:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I94:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I94:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I94:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I94:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I94:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I94:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I94:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I94:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I94:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I94:S001	I94 Cab Tamper	TA	TR	9999	TA9999	TR9999
I94:S002	I94 AC fail	AT	AR	9999	AT9999	AR9999

Integriti SIA DECIMAL Map. V21

I94:S003	I94 Low Batt	YT	YR	9999	YT9999	YR9999
I94:S004	I94 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I94:S005	I94 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I94:S006	I94 Low Volts	YP	YQ	9999	YP9999	YQ9999
I94:S007	I94 PS Fail	YP	YQ	9999	YP9999	YQ9999
I94:S008	I94 Batt Test	IA	IR	9999	IA9999	IR9999
I94:S009	I94 Unibus	EM	EN	9999	EM9999	EN9999
I94:S010	I94 Download Fail	YF	UX	9999	YF9999	UX9999
I94:S011	I94 Spare1	UA	UR	9999	UA9999	UR9999
I94:S012	I94 LAN Comms	EM	EN	9999	EM9999	EN9999
I94:S013	I94 Door1 Fault	IA	IR	9999	IA9999	IR9999
I94:S014	I94 Door2 Fault	IA	IR	9999	IA9999	IR9999
I94:S015	I94 Door3 Fault	IA	IR	9999	IA9999	IR9999
I94:S016	I94 Door4 Fault	IA	IR	9999	IA9999	IR9999
I94:S017	I94 Door5 Fault	IA	IR	9999	IA9999	IR9999
I94:S018	I94 Door6 Fault	IA	IR	9999	IA9999	IR9999
I94:S019	I94 Door7 Fault	IA	IR	9999	IA9999	IR9999
I94:S020	I94 Door8 Fault	IA	IR	9999	IA9999	IR9999
I94:S021	I94 Door1 Forced	DF	DR	9999	DF9999	DR9999
I94:S022	I94 Door2 Forced	DF	DR	9999	DF9999	DR9999
I94:S023	I94 Door3 Forced	DF	DR	9999	DF9999	DR9999
I94:S024	I94 Door4 Forced	DF	DR	9999	DF9999	DR9999
I94:S025	I94 Door5 Forced	DF	DR	9999	DF9999	DR9999
I94:S026	I94 Door6 Forced	DF	DR	9999	DF9999	DR9999
I94:S027	I94 Door7 Forced	DF	DR	9999	DF9999	DR9999
I94:S028	I94 Door8 Forced	DF	DR	9999	DF9999	DR9999
I94:S029	I94 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I94:S030	I94 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I94:S031	I94 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I94:S032	I94 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I94:S033	I94 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I94:S034	I94 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I94:S035	I94 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I94:S036	I94 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I94:S037	I94 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I94:S038	I94 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I94:S039	I94 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I94:S040	I94 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I94:S041	I94 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I94:S042	I94 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I94:S043	I94 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I94:S044	I94 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I94:S045	I94 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I94:S046	I94 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I94:S047	I94 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I94:S048	I94 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I94:S049	I94 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I94:S050	I94 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I94:S051	I94 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I94:S052	I94 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I94:S053	I94 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I94:S054	I94 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I94:S055	I94 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I94:S056	I94 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I94:S057	I94 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I94:S058	I94 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I94:S059	I94 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I94:S060	I94 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I94:S061	I94 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I94:S062	I94 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I94:S063	I94 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I94:S064	I94 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I94:S065	I94 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I94:S066	I94 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I94:S067	I94 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I94:S068	I94 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I94:S069	I94 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I94:S070	I94 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I94:S071	I94 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I94:S072	I94 Rdr4 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I94:S073	I94 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I94:S074	I94 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I94:S075	I94 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I94:S076	I94 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I94:S077	I94 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I94:S078	I94 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I94:S079	I94 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I94:S080	I94 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I94:S081	I94 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I94:S082	I94 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I94:S083	I94 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I94:S084	I94 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I94:S085	I94 Spare2	UA	UR	9999	UA9999	UR9999
I94:S086	I94 Spare3	UA	UR	9999	UA9999	UR9999
I94:S087	I94 Spare4	UA	UR	9999	UA9999	UR9999
I94:S088	I94 Spare5	UA	UR	9999	UA9999	UR9999
I94:S089	I94 Spare6	UA	UR	9999	UA9999	UR9999
I94:S090	I94 Spare7	UA	UR	9999	UA9999	UR9999
I94:S091	I94 Spare8	UA	UR	9999	UA9999	UR9999
I94:S092	I94 Spare9	UA	UR	9999	UA9999	UR9999
I94:S093	I94 Spare10	UA	UR	9999	UA9999	UR9999
I95:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I95:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I95:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I95:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I95:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I95:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I95:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I95:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I95:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I95:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I95:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I95:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I95:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I95:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I95:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I95:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I95:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I95:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I95:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I95:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I95:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I95:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I95:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I95:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I95:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I95:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I95:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I95:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I95:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I95:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I95:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I95:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I95:S001	I95 Cab Tamper	TA	TR	9999	TA9999	TR9999
I95:S002	I95 AC fail	AT	AR	9999	AT9999	AR9999
I95:S003	I95 Low Batt	YT	YR	9999	YT9999	YR9999
I95:S004	I95 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I95:S005	I95 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I95:S006	I95 Low Volts	YP	YQ	9999	YP9999	YQ9999
I95:S007	I95 PS Fail	YP	YQ	9999	YP9999	YQ9999
I95:S008	I95 Batt Test	IA	IR	9999	IA9999	IR9999
I95:S009	I95 Unibus	EM	EN	9999	EM9999	EN9999
I95:S010	I95 Download Fail	YF	UX	9999	YF9999	UX9999
I95:S011	I95 Spare1	UA	UR	9999	UA9999	UR9999
I95:S012	I95 LAN Comms	EM	EN	9999	EM9999	EN9999
I95:S013	I95 Door1 Fault	IA	IR	9999	IA9999	IR9999
I95:S014	I95 Door2 Fault	IA	IR	9999	IA9999	IR9999
I95:S015	I95 Door3 Fault	IA	IR	9999	IA9999	IR9999
I95:S016	I95 Door4 Fault	IA	IR	9999	IA9999	IR9999
I95:S017	I95 Door5 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I95:S018	I95 Door6 Fault	IA	IR	9999	IA9999	IR9999
I95:S019	I95 Door7 Fault	IA	IR	9999	IA9999	IR9999
I95:S020	I95 Door8 Fault	IA	IR	9999	IA9999	IR9999
I95:S021	I95 Door1 Forced	DF	DR	9999	DF9999	DR9999
I95:S022	I95 Door2 Forced	DF	DR	9999	DF9999	DR9999
I95:S023	I95 Door3 Forced	DF	DR	9999	DF9999	DR9999
I95:S024	I95 Door4 Forced	DF	DR	9999	DF9999	DR9999
I95:S025	I95 Door5 Forced	DF	DR	9999	DF9999	DR9999
I95:S026	I95 Door6 Forced	DF	DR	9999	DF9999	DR9999
I95:S027	I95 Door7 Forced	DF	DR	9999	DF9999	DR9999
I95:S028	I95 Door8 Forced	DF	DR	9999	DF9999	DR9999
I95:S029	I95 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I95:S030	I95 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I95:S031	I95 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I95:S032	I95 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I95:S033	I95 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I95:S034	I95 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I95:S035	I95 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I95:S036	I95 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I95:S037	I95 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I95:S038	I95 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I95:S039	I95 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I95:S040	I95 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I95:S041	I95 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I95:S042	I95 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I95:S043	I95 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I95:S044	I95 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I95:S045	I95 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I95:S046	I95 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I95:S047	I95 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I95:S048	I95 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I95:S049	I95 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I95:S050	I95 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I95:S051	I95 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I95:S052	I95 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I95:S053	I95 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I95:S054	I95 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I95:S055	I95 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I95:S056	I95 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I95:S057	I95 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I95:S058	I95 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I95:S059	I95 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I95:S060	I95 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I95:S061	I95 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I95:S062	I95 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I95:S063	I95 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I95:S064	I95 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I95:S065	I95 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I95:S066	I95 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I95:S067	I95 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I95:S068	I95 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I95:S069	I95 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I95:S070	I95 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I95:S071	I95 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I95:S072	I95 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I95:S073	I95 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I95:S074	I95 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I95:S075	I95 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I95:S076	I95 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I95:S077	I95 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I95:S078	I95 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I95:S079	I95 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I95:S080	I95 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I95:S081	I95 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I95:S082	I95 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I95:S083	I95 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I95:S084	I95 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I95:S085	I95 Spare2	UA	UR	9999	UA9999	UR9999
I95:S086	I95 Spare3	UA	UR	9999	UA9999	UR9999
I95:S087	I95 Spare4	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I95:S088	I95 Spare5	UA	UR	9999	UA9999	UR9999
I95:S089	I95 Spare6	UA	UR	9999	UA9999	UR9999
I95:S090	I95 Spare7	UA	UR	9999	UA9999	UR9999
I95:S091	I95 Spare8	UA	UR	9999	UA9999	UR9999
I95:S092	I95 Spare9	UA	UR	9999	UA9999	UR9999
I95:S093	I95 Spare10	UA	UR	9999	UA9999	UR9999
I96:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I96:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I96:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I96:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I96:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I96:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I96:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I96:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I96:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I96:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I96:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I96:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I96:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I96:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I96:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I96:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I96:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I96:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I96:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I96:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I96:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I96:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I96:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I96:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I96:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I96:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I96:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I96:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I96:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I96:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I96:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I96:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I96:S001	I96 Cab Tamper	TA	TR	9999	TA9999	TR9999
I96:S002	I96 AC fail	AT	AR	9999	AT9999	AR9999
I96:S003	I96 Low Batt	YT	YR	9999	YT9999	YR9999
I96:S004	I96 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I96:S005	I96 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I96:S006	I96 Low Volts	YP	YQ	9999	YP9999	YQ9999
I96:S007	I96 PS Fail	YP	YQ	9999	YP9999	YQ9999
I96:S008	I96 Batt Test	IA	IR	9999	IA9999	IR9999
I96:S009	I96 Unibus	EM	EN	9999	EM9999	EN9999
I96:S010	I96 Download Fail	YF	UX	9999	YF9999	UX9999
I96:S011	I96 Spare1	UA	UR	9999	UA9999	UR9999
I96:S012	I96 LAN Comms	EM	EN	9999	EM9999	EN9999
I96:S013	I96 Door1 Fault	IA	IR	9999	IA9999	IR9999
I96:S014	I96 Door2 Fault	IA	IR	9999	IA9999	IR9999
I96:S015	I96 Door3 Fault	IA	IR	9999	IA9999	IR9999
I96:S016	I96 Door4 Fault	IA	IR	9999	IA9999	IR9999
I96:S017	I96 Door5 Fault	IA	IR	9999	IA9999	IR9999
I96:S018	I96 Door6 Fault	IA	IR	9999	IA9999	IR9999
I96:S019	I96 Door7 Fault	IA	IR	9999	IA9999	IR9999
I96:S020	I96 Door8 Fault	IA	IR	9999	IA9999	IR9999
I96:S021	I96 Door1 Forced	DF	DR	9999	DF9999	DR9999
I96:S022	I96 Door2 Forced	DF	DR	9999	DF9999	DR9999
I96:S023	I96 Door3 Forced	DF	DR	9999	DF9999	DR9999
I96:S024	I96 Door4 Forced	DF	DR	9999	DF9999	DR9999
I96:S025	I96 Door5 Forced	DF	DR	9999	DF9999	DR9999
I96:S026	I96 Door6 Forced	DF	DR	9999	DF9999	DR9999
I96:S027	I96 Door7 Forced	DF	DR	9999	DF9999	DR9999
I96:S028	I96 Door8 Forced	DF	DR	9999	DF9999	DR9999
I96:S029	I96 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I96:S030	I96 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I96:S031	I96 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I96:S032	I96 Door4 DOTL	DL	DH	9999	DL9999	DH9999

Integriti SIA DECIMAL Map. V21

I96:S033	I96 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I96:S034	I96 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I96:S035	I96 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I96:S036	I96 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I96:S037	I96 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I96:S038	I96 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I96:S039	I96 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I96:S040	I96 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I96:S041	I96 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I96:S042	I96 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I96:S043	I96 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I96:S044	I96 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I96:S045	I96 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I96:S046	I96 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I96:S047	I96 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I96:S048	I96 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I96:S049	I96 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I96:S050	I96 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I96:S051	I96 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I96:S052	I96 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I96:S053	I96 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I96:S054	I96 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I96:S055	I96 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I96:S056	I96 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I96:S057	I96 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I96:S058	I96 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I96:S059	I96 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I96:S060	I96 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I96:S061	I96 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I96:S062	I96 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I96:S063	I96 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I96:S064	I96 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I96:S065	I96 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I96:S066	I96 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I96:S067	I96 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I96:S068	I96 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I96:S069	I96 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I96:S070	I96 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I96:S071	I96 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I96:S072	I96 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I96:S073	I96 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I96:S074	I96 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I96:S075	I96 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I96:S076	I96 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I96:S077	I96 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I96:S078	I96 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I96:S079	I96 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I96:S080	I96 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I96:S081	I96 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I96:S082	I96 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I96:S083	I96 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I96:S084	I96 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I96:S085	I96 Spare2	UA	UR	9999	UA9999	UR9999
I96:S086	I96 Spare3	UA	UR	9999	UA9999	UR9999
I96:S087	I96 Spare4	UA	UR	9999	UA9999	UR9999
I96:S088	I96 Spare5	UA	UR	9999	UA9999	UR9999
I96:S089	I96 Spare6	UA	UR	9999	UA9999	UR9999
I96:S090	I96 Spare7	UA	UR	9999	UA9999	UR9999
I96:S091	I96 Spare8	UA	UR	9999	UA9999	UR9999
I96:S092	I96 Spare9	UA	UR	9999	UA9999	UR9999
I96:S093	I96 Spare10	UA	UR	9999	UA9999	UR9999
I97:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I97:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I97:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I97:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I97:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I97:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I97:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I97:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I97:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999

I97:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I97:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I97:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I97:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I97:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I97:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I97:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I97:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I97:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I97:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I97:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I97:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I97:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I97:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I97:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I97:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I97:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I97:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I97:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I97:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I97:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I97:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I97:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I97:S001	I97 Cab Tamper	TA	TR	9999	TA9999	TR9999
I97:S002	I97 AC fail	AT	AR	9999	AT9999	AR9999
I97:S003	I97 Low Batt	YT	YR	9999	YT9999	YR9999
I97:S004	I97 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I97:S005	I97 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I97:S006	I97 Low Volts	YP	YQ	9999	YP9999	YQ9999
I97:S007	I97 PS Fail	YP	YQ	9999	YP9999	YQ9999
I97:S008	I97 Batt Test	IA	IR	9999	IA9999	IR9999
I97:S009	I97 Unibus	EM	EN	9999	EM9999	EN9999
I97:S010	I97 Download Fail	YF	UX	9999	YF9999	UX9999
I97:S011	I97 Spare1	UA	UR	9999	UA9999	UR9999
I97:S012	I97 LAN Comms	EM	EN	9999	EM9999	EN9999
I97:S013	I97 Door1 Fault	IA	IR	9999	IA9999	IR9999
I97:S014	I97 Door2 Fault	IA	IR	9999	IA9999	IR9999
I97:S015	I97 Door3 Fault	IA	IR	9999	IA9999	IR9999
I97:S016	I97 Door4 Fault	IA	IR	9999	IA9999	IR9999
I97:S017	I97 Door5 Fault	IA	IR	9999	IA9999	IR9999
I97:S018	I97 Door6 Fault	IA	IR	9999	IA9999	IR9999
I97:S019	I97 Door7 Fault	IA	IR	9999	IA9999	IR9999
I97:S020	I97 Door8 Fault	IA	IR	9999	IA9999	IR9999
I97:S021	I97 Door1 Forced	DF	DR	9999	DF9999	DR9999
I97:S022	I97 Door2 Forced	DF	DR	9999	DF9999	DR9999
I97:S023	I97 Door3 Forced	DF	DR	9999	DF9999	DR9999
I97:S024	I97 Door4 Forced	DF	DR	9999	DF9999	DR9999
I97:S025	I97 Door5 Forced	DF	DR	9999	DF9999	DR9999
I97:S026	I97 Door6 Forced	DF	DR	9999	DF9999	DR9999
I97:S027	I97 Door7 Forced	DF	DR	9999	DF9999	DR9999
I97:S028	I97 Door8 Forced	DF	DR	9999	DF9999	DR9999
I97:S029	I97 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I97:S030	I97 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I97:S031	I97 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I97:S032	I97 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I97:S033	I97 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I97:S034	I97 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I97:S035	I97 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I97:S036	I97 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I97:S037	I97 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I97:S038	I97 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I97:S039	I97 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I97:S040	I97 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I97:S041	I97 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I97:S042	I97 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I97:S043	I97 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I97:S044	I97 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I97:S045	I97 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I97:S046	I97 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I97:S047	I97 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999

Integriti SIA DECIMAL Map. V21

I97:S048	I97 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I97:S049	I97 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I97:S050	I97 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I97:S051	I97 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I97:S052	I97 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I97:S053	I97 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I97:S054	I97 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I97:S055	I97 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I97:S056	I97 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I97:S057	I97 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I97:S058	I97 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I97:S059	I97 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I97:S060	I97 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I97:S061	I97 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I97:S062	I97 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I97:S063	I97 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I97:S064	I97 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I97:S065	I97 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I97:S066	I97 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I97:S067	I97 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I97:S068	I97 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I97:S069	I97 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I97:S070	I97 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I97:S071	I97 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I97:S072	I97 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I97:S073	I97 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I97:S074	I97 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I97:S075	I97 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I97:S076	I97 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I97:S077	I97 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I97:S078	I97 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I97:S079	I97 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I97:S080	I97 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I97:S081	I97 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I97:S082	I97 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I97:S083	I97 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I97:S084	I97 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I97:S085	I97 Spare2	UA	UR	9999	UA9999	UR9999
I97:S086	I97 Spare3	UA	UR	9999	UA9999	UR9999
I97:S087	I97 Spare4	UA	UR	9999	UA9999	UR9999
I97:S088	I97 Spare5	UA	UR	9999	UA9999	UR9999
I97:S089	I97 Spare6	UA	UR	9999	UA9999	UR9999
I97:S090	I97 Spare7	UA	UR	9999	UA9999	UR9999
I97:S091	I97 Spare8	UA	UR	9999	UA9999	UR9999
I97:S092	I97 Spare9	UA	UR	9999	UA9999	UR9999
I97:S093	I97 Spare10	UA	UR	9999	UA9999	UR9999
I98:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I98:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I98:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I98:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I98:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I98:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I98:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I98:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I98:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I98:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I98:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I98:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I98:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I98:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I98:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I98:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I98:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I98:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I98:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I98:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I98:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I98:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I98:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I98:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

I98:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I98:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I98:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I98:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I98:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I98:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I98:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I98:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I98:S001	I98 Cab Tamper	TA	TR	9999	TA9999	TR9999
I98:S002	I98 AC fail	AT	AR	9999	AT9999	AR9999
I98:S003	I98 Low Batt	YT	YR	9999	YT9999	YR9999
I98:S004	I98 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I98:S005	I98 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I98:S006	I98 Low Volts	YP	YQ	9999	YP9999	YQ9999
I98:S007	I98 PS Fail	YP	YQ	9999	YP9999	YQ9999
I98:S008	I98 Batt Test	IA	IR	9999	IA9999	IR9999
I98:S009	I98 Unibus	EM	EN	9999	EM9999	EN9999
I98:S010	I98 Download Fail	YF	UX	9999	YF9999	UX9999
I98:S011	I98 Spare1	UA	UR	9999	UA9999	UR9999
I98:S012	I98 LAN Comms	EM	EN	9999	EM9999	EN9999
I98:S013	I98 Door1 Fault	IA	IR	9999	IA9999	IR9999
I98:S014	I98 Door2 Fault	IA	IR	9999	IA9999	IR9999
I98:S015	I98 Door3 Fault	IA	IR	9999	IA9999	IR9999
I98:S016	I98 Door4 Fault	IA	IR	9999	IA9999	IR9999
I98:S017	I98 Door5 Fault	IA	IR	9999	IA9999	IR9999
I98:S018	I98 Door6 Fault	IA	IR	9999	IA9999	IR9999
I98:S019	I98 Door7 Fault	IA	IR	9999	IA9999	IR9999
I98:S020	I98 Door8 Fault	IA	IR	9999	IA9999	IR9999
I98:S021	I98 Door1 Forced	DF	DR	9999	DF9999	DR9999
I98:S022	I98 Door2 Forced	DF	DR	9999	DF9999	DR9999
I98:S023	I98 Door3 Forced	DF	DR	9999	DF9999	DR9999
I98:S024	I98 Door4 Forced	DF	DR	9999	DF9999	DR9999
I98:S025	I98 Door5 Forced	DF	DR	9999	DF9999	DR9999
I98:S026	I98 Door6 Forced	DF	DR	9999	DF9999	DR9999
I98:S027	I98 Door7 Forced	DF	DR	9999	DF9999	DR9999
I98:S028	I98 Door8 Forced	DF	DR	9999	DF9999	DR9999
I98:S029	I98 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I98:S030	I98 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I98:S031	I98 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I98:S032	I98 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I98:S033	I98 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I98:S034	I98 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I98:S035	I98 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I98:S036	I98 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I98:S037	I98 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I98:S038	I98 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I98:S039	I98 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I98:S040	I98 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I98:S041	I98 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I98:S042	I98 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I98:S043	I98 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I98:S044	I98 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I98:S045	I98 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I98:S046	I98 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I98:S047	I98 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I98:S048	I98 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I98:S049	I98 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I98:S050	I98 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I98:S051	I98 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I98:S052	I98 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I98:S053	I98 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I98:S054	I98 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I98:S055	I98 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I98:S056	I98 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I98:S057	I98 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I98:S058	I98 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I98:S059	I98 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I98:S060	I98 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I98:S061	I98 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I98:S062	I98 Rdr10 Duress	HA	HR	9999	HA9999	HR9999

Integriti SIA DECIMAL Map. V21

I98:S063	I98 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I98:S064	I98 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I98:S065	I98 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I98:S066	I98 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I98:S067	I98 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I98:S068	I98 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I98:S069	I98 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I98:S070	I98 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I98:S071	I98 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I98:S072	I98 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I98:S073	I98 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I98:S074	I98 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I98:S075	I98 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I98:S076	I98 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I98:S077	I98 Rdr9 Fault	IA	IR	9999	IA9999	IR9999
I98:S078	I98 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I98:S079	I98 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I98:S080	I98 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I98:S081	I98 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I98:S082	I98 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I98:S083	I98 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I98:S084	I98 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I98:S085	I98 Spare2	UA	UR	9999	UA9999	UR9999
I98:S086	I98 Spare3	UA	UR	9999	UA9999	UR9999
I98:S087	I98 Spare4	UA	UR	9999	UA9999	UR9999
I98:S088	I98 Spare5	UA	UR	9999	UA9999	UR9999
I98:S089	I98 Spare6	UA	UR	9999	UA9999	UR9999
I98:S090	I98 Spare7	UA	UR	9999	UA9999	UR9999
I98:S091	I98 Spare8	UA	UR	9999	UA9999	UR9999
I98:S092	I98 Spare9	UA	UR	9999	UA9999	UR9999
I98:S093	I98 Spare10	UA	UR	9999	UA9999	UR9999
I99:Z001	Door1 Reed	UA	UR	9999	UA9999	UR9999
I99:Z002	Door2 Reed	UA	UR	9999	UA9999	UR9999
I99:Z003	Door1 Tongue	UA	UR	9999	UA9999	UR9999
I99:Z004	Door2 Tongue	UA	UR	9999	UA9999	UR9999
I99:Z005	Door1 Rex	UA	UR	9999	UA9999	UR9999
I99:Z006	Door2 Rex	UA	UR	9999	UA9999	UR9999
I99:Z007	Door1 Ren	UA	UR	9999	UA9999	UR9999
I99:Z008	Door2 Ren	UA	UR	9999	UA9999	UR9999
I99:Z009	Door3 Reed	UA	UR	9999	UA9999	UR9999
I99:Z010	Door4 Reed	UA	UR	9999	UA9999	UR9999
I99:Z011	Door3 Tongue	UA	UR	9999	UA9999	UR9999
I99:Z012	Door4 Tongue	UA	UR	9999	UA9999	UR9999
I99:Z013	Door3 Rex	UA	UR	9999	UA9999	UR9999
I99:Z014	Door4 Rex	UA	UR	9999	UA9999	UR9999
I99:Z015	Door3 Ren	UA	UR	9999	UA9999	UR9999
I99:Z016	Door4 Ren	UA	UR	9999	UA9999	UR9999
I99:Z017	Door5 Reed	UA	UR	9999	UA9999	UR9999
I99:Z018	Door6 Reed	UA	UR	9999	UA9999	UR9999
I99:Z019	Door5 Tongue	UA	UR	9999	UA9999	UR9999
I99:Z020	Door6 Tongue	UA	UR	9999	UA9999	UR9999
I99:Z021	Door5 Rex	UA	UR	9999	UA9999	UR9999
I99:Z022	Door6 Rex	UA	UR	9999	UA9999	UR9999
I99:Z023	Door5 Ren	UA	UR	9999	UA9999	UR9999
I99:Z024	Door6 Ren	UA	UR	9999	UA9999	UR9999
I99:Z025	Door7 Reed	UA	UR	9999	UA9999	UR9999
I99:Z026	Door8 Reed	UA	UR	9999	UA9999	UR9999
I99:Z027	Door7 Tongue	UA	UR	9999	UA9999	UR9999
I99:Z028	Door8 Tongue	UA	UR	9999	UA9999	UR9999
I99:Z029	Door7 Rex	UA	UR	9999	UA9999	UR9999
I99:Z030	Door8 Rex	UA	UR	9999	UA9999	UR9999
I99:Z031	Door7 Ren	UA	UR	9999	UA9999	UR9999
I99:Z032	Door8 Ren	UA	UR	9999	UA9999	UR9999
I99:S001	I99 Cab Tamper	TA	TR	9999	TA9999	TR9999
I99:S002	I99 AC fail	AT	AR	9999	AT9999	AR9999
I99:S003	I99 Low Batt	YT	YR	9999	YT9999	YR9999
I99:S004	I99 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
I99:S005	I99 DET Fuse	YP	YQ	9999	YP9999	YQ9999
I99:S006	I99 Low Volts	YP	YQ	9999	YP9999	YQ9999
I99:S007	I99 PS Fail	YP	YQ	9999	YP9999	YQ9999

I99:S008	I99 Batt Test	IA	IR	9999	IA9999	IR9999
I99:S009	I99 Unibus	EM	EN	9999	EM9999	EN9999
I99:S010	I99 Download Fail	YF	UX	9999	YF9999	UX9999
I99:S011	I99 Spare1	UA	UR	9999	UA9999	UR9999
I99:S012	I99 LAN Comms	EM	EN	9999	EM9999	EN9999
I99:S013	I99 Door1 Fault	IA	IR	9999	IA9999	IR9999
I99:S014	I99 Door2 Fault	IA	IR	9999	IA9999	IR9999
I99:S015	I99 Door3 Fault	IA	IR	9999	IA9999	IR9999
I99:S016	I99 Door4 Fault	IA	IR	9999	IA9999	IR9999
I99:S017	I99 Door5 Fault	IA	IR	9999	IA9999	IR9999
I99:S018	I99 Door6 Fault	IA	IR	9999	IA9999	IR9999
I99:S019	I99 Door7 Fault	IA	IR	9999	IA9999	IR9999
I99:S020	I99 Door8 Fault	IA	IR	9999	IA9999	IR9999
I99:S021	I99 Door1 Forced	DF	DR	9999	DF9999	DR9999
I99:S022	I99 Door2 Forced	DF	DR	9999	DF9999	DR9999
I99:S023	I99 Door3 Forced	DF	DR	9999	DF9999	DR9999
I99:S024	I99 Door4 Forced	DF	DR	9999	DF9999	DR9999
I99:S025	I99 Door5 Forced	DF	DR	9999	DF9999	DR9999
I99:S026	I99 Door6 Forced	DF	DR	9999	DF9999	DR9999
I99:S027	I99 Door7 Forced	DF	DR	9999	DF9999	DR9999
I99:S028	I99 Door8 Forced	DF	DR	9999	DF9999	DR9999
I99:S029	I99 Door1 DOTL	DL	DH	9999	DL9999	DH9999
I99:S030	I99 Door2 DOTL	DL	DH	9999	DL9999	DH9999
I99:S031	I99 Door3 DOTL	DL	DH	9999	DL9999	DH9999
I99:S032	I99 Door4 DOTL	DL	DH	9999	DL9999	DH9999
I99:S033	I99 Door5 DOTL	DL	DH	9999	DL9999	DH9999
I99:S034	I99 Door6 DOTL	DL	DH	9999	DL9999	DH9999
I99:S035	I99 Door7 DOTL	DL	DH	9999	DL9999	DH9999
I99:S036	I99 Door8 DOTL	DL	DH	9999	DL9999	DH9999
I99:S037	I99 Rdr1 Invalid	DD	DR	9999	DD9999	DR9999
I99:S038	I99 Rdr2 Invalid	DD	DR	9999	DD9999	DR9999
I99:S039	I99 Rdr3 Invalid	DD	DR	9999	DD9999	DR9999
I99:S040	I99 Rdr4 Invalid	DD	DR	9999	DD9999	DR9999
I99:S041	I99 Rdr5 Invalid	DD	DR	9999	DD9999	DR9999
I99:S042	I99 Rdr6 Invalid	DD	DR	9999	DD9999	DR9999
I99:S043	I99 Rdr7 Invalid	DD	DR	9999	DD9999	DR9999
I99:S044	I99 Rdr8 Invalid	DD	DR	9999	DD9999	DR9999
I99:S045	I99 Rdr9 Invalid	DD	DR	9999	DD9999	DR9999
I99:S046	I99 Rdr10 Invalid	DD	DR	9999	DD9999	DR9999
I99:S047	I99 Rdr11 Invalid	DD	DR	9999	DD9999	DR9999
I99:S048	I99 Rdr12 Invalid	DD	DR	9999	DD9999	DR9999
I99:S049	I99 Rdr13 Invalid	DD	DR	9999	DD9999	DR9999
I99:S050	I99 Rdr14 Invalid	DD	DR	9999	DD9999	DR9999
I99:S051	I99 Rdr15 Invalid	DD	DR	9999	DD9999	DR9999
I99:S052	I99 Rdr16 Invalid	DD	DR	9999	DD9999	DR9999
I99:S053	I99 Rdr1 Duress	HA	HR	9999	HA9999	HR9999
I99:S054	I99 Rdr2 Duress	HA	HR	9999	HA9999	HR9999
I99:S055	I99 Rdr3 Duress	HA	HR	9999	HA9999	HR9999
I99:S056	I99 Rdr4 Duress	HA	HR	9999	HA9999	HR9999
I99:S057	I99 Rdr5 Duress	HA	HR	9999	HA9999	HR9999
I99:S058	I99 Rdr6 Duress	HA	HR	9999	HA9999	HR9999
I99:S059	I99 Rdr7 Duress	HA	HR	9999	HA9999	HR9999
I99:S060	I99 Rdr8 Duress	HA	HR	9999	HA9999	HR9999
I99:S061	I99 Rdr9 Duress	HA	HR	9999	HA9999	HR9999
I99:S062	I99 Rdr10 Duress	HA	HR	9999	HA9999	HR9999
I99:S063	I99 Rdr11 Duress	HA	HR	9999	HA9999	HR9999
I99:S064	I99 Rdr12 Duress	HA	HR	9999	HA9999	HR9999
I99:S065	I99 Rdr13 Duress	HA	HR	9999	HA9999	HR9999
I99:S066	I99 Rdr14 Duress	HA	HR	9999	HA9999	HR9999
I99:S067	I99 Rdr15 Duress	HA	HR	9999	HA9999	HR9999
I99:S068	I99 Rdr16 Duress	HA	HR	9999	HA9999	HR9999
I99:S069	I99 Rdr1 Fault	IA	IR	9999	IA9999	IR9999
I99:S070	I99 Rdr2 Fault	IA	IR	9999	IA9999	IR9999
I99:S071	I99 Rdr3 Fault	IA	IR	9999	IA9999	IR9999
I99:S072	I99 Rdr4 Fault	IA	IR	9999	IA9999	IR9999
I99:S073	I99 Rdr5 Fault	IA	IR	9999	IA9999	IR9999
I99:S074	I99 Rdr6 Fault	IA	IR	9999	IA9999	IR9999
I99:S075	I99 Rdr7 Fault	IA	IR	9999	IA9999	IR9999
I99:S076	I99 Rdr8 Fault	IA	IR	9999	IA9999	IR9999
I99:S077	I99 Rdr9 Fault	IA	IR	9999	IA9999	IR9999

Integriti SIA DECIMAL Map. V21

I99:S078	I99 Rdr10 Fault	IA	IR	9999	IA9999	IR9999
I99:S079	I99 Rdr11 Fault	IA	IR	9999	IA9999	IR9999
I99:S080	I99 Rdr12 Fault	IA	IR	9999	IA9999	IR9999
I99:S081	I99 Rdr13 Fault	IA	IR	9999	IA9999	IR9999
I99:S082	I99 Rdr14 Fault	IA	IR	9999	IA9999	IR9999
I99:S083	I99 Rdr15 Fault	IA	IR	9999	IA9999	IR9999
I99:S084	I99 Rdr16 Fault	IA	IR	9999	IA9999	IR9999
I99:S085	I99 Spare2	UA	UR	9999	UA9999	UR9999
I99:S086	I99 Spare3	UA	UR	9999	UA9999	UR9999
I99:S087	I99 Spare4	UA	UR	9999	UA9999	UR9999
I99:S088	I99 Spare5	UA	UR	9999	UA9999	UR9999
I99:S089	I99 Spare6	UA	UR	9999	UA9999	UR9999
I99:S090	I99 Spare7	UA	UR	9999	UA9999	UR9999
I99:S091	I99 Spare8	UA	UR	9999	UA9999	UR9999
I99:S092	I99 Spare9	UA	UR	9999	UA9999	UR9999
I99:S093	I99 Spare10	UA	UR	9999	UA9999	UR9999
F01:Z001	F01:Z001	UA	UR	6825	UA6825	UR6825
F01:Z002	F01:Z002	UA	UR	6826	UA6826	UR6826
F01:Z003	F01:Z003	UA	UR	6827	UA6827	UR6827
F01:Z004	F01:Z004	UA	UR	6828	UA6828	UR6828
F01:Z005	F01:Z005	UA	UR	6829	UA6829	UR6829
F01:Z006	F01:Z006	UA	UR	6830	UA6830	UR6830
F01:Z007	F01:Z007	UA	UR	6831	UA6831	UR6831
F01:Z008	F01:Z008	UA	UR	6832	UA6832	UR6832
F01:Z009	F01:Z009	UA	UR	6833	UA6833	UR6833
F01:Z010	F01:Z010	UA	UR	6834	UA6834	UR6834
F01:Z011	F01:Z011	UA	UR	6835	UA6835	UR6835
F01:Z012	F01:Z012	UA	UR	6836	UA6836	UR6836
F01:Z013	F01:Z013	UA	UR	6837	UA6837	UR6837
F01:Z014	F01:Z014	UA	UR	6838	UA6838	UR6838
F01:Z015	F01:Z015	UA	UR	6839	UA6839	UR6839
F01:Z016	F01:Z016	UA	UR	6840	UA6840	UR6840
F01:Z017	F01:Z017	UA	UR	6841	UA6841	UR6841
F01:Z018	F01:Z018	UA	UR	6842	UA6842	UR6842
F01:Z019	F01:Z019	UA	UR	6843	UA6843	UR6843
F01:Z020	F01:Z020	UA	UR	6844	UA6844	UR6844
F01:Z021	F01:Z021	UA	UR	6845	UA6845	UR6845
F01:Z022	F01:Z022	UA	UR	6846	UA6846	UR6846
F01:Z023	F01:Z023	UA	UR	6847	UA6847	UR6847
F01:Z024	F01:Z024	UA	UR	6848	UA6848	UR6848
F01:Z025	F01:Z025	UA	UR	6849	UA6849	UR6849
F01:Z026	F01:Z026	UA	UR	6850	UA6850	UR6850
F01:Z027	F01:Z027	UA	UR	6851	UA6851	UR6851
F01:Z028	F01:Z028	UA	UR	6852	UA6852	UR6852
F01:Z029	F01:Z029	UA	UR	6853	UA6853	UR6853
F01:Z030	F01:Z030	UA	UR	6854	UA6854	UR6854
F01:Z031	F01:Z031	UA	UR	6855	UA6855	UR6855
F01:Z032	F01:Z032	UA	UR	6856	UA6856	UR6856
F01:S001	F01 Xmit LowBatt	XT	XR	6857	XT6857	XR6857
F01:S002	F01 XmitPollFail	NA	NS	6858	NA6858	NS6858
F01:S003	F01 Xmitter Jam	XQ	XH	6859	XQ6859	XH6859
F01:S004	F01 Cab Tamper	TA	TR	6860	TA6860	TR6860
F01:S005	F01 AC fail	AT	AR	6861	AT6861	AR6861
F01:S006	F01 Low Batt	YT	YR	6862	YT6862	YR6862
F01:S007	F01 LAN Fuse	YP	YQ	6863	YP6863	YQ6863
F01:S008	F01 DET Fuse	YP	YQ	6864	YP6864	YQ6864
F01:S009	F01 Low Volts	YP	YQ	6865	YP6865	YQ6865
F01:S010	F01 PS Fail	YP	YQ	6866	YP6866	YQ6866
F01:S011	F01 Batt Test	IA	IR	6867	IA6867	IR6867
F01:S012	F01 LAN Comms	EM	EN	6868	EM6868	EN6868
F01:S013	F01 Spare1	UA	UR	6869	UA6869	UR6869
F01:S014	F01 Spare2	UA	UR	6870	UA6870	UR6870
F02:Z001	F02:Z001	UA	UR	6871	UA6871	UR6871
F02:Z002	F02:Z002	UA	UR	6872	UA6872	UR6872
F02:Z003	F02:Z003	UA	UR	6873	UA6873	UR6873
F02:Z004	F02:Z004	UA	UR	6874	UA6874	UR6874
F02:Z005	F02:Z005	UA	UR	6875	UA6875	UR6875
F02:Z006	F02:Z006	UA	UR	6876	UA6876	UR6876
F02:Z007	F02:Z007	UA	UR	6877	UA6877	UR6877
F02:Z008	F02:Z008	UA	UR	6878	UA6878	UR6878

Integriti SIA DECIMAL Map. V21

F02:Z009	F02:Z009	UA	UR	6879	UA6879	UR6879
F02:Z010	F02:Z010	UA	UR	6880	UA6880	UR6880
F02:Z011	F02:Z011	UA	UR	6881	UA6881	UR6881
F02:Z012	F02:Z012	UA	UR	6882	UA6882	UR6882
F02:Z013	F02:Z013	UA	UR	6883	UA6883	UR6883
F02:Z014	F02:Z014	UA	UR	6884	UA6884	UR6884
F02:Z015	F02:Z015	UA	UR	6885	UA6885	UR6885
F02:Z016	F02:Z016	UA	UR	6886	UA6886	UR6886
F02:Z017	F02:Z017	UA	UR	6887	UA6887	UR6887
F02:Z018	F02:Z018	UA	UR	6888	UA6888	UR6888
F02:Z019	F02:Z019	UA	UR	6889	UA6889	UR6889
F02:Z020	F02:Z020	UA	UR	6890	UA6890	UR6890
F02:Z021	F02:Z021	UA	UR	6891	UA6891	UR6891
F02:Z022	F02:Z022	UA	UR	6892	UA6892	UR6892
F02:Z023	F02:Z023	UA	UR	6893	UA6893	UR6893
F02:Z024	F02:Z024	UA	UR	6894	UA6894	UR6894
F02:Z025	F02:Z025	UA	UR	6895	UA6895	UR6895
F02:Z026	F02:Z026	UA	UR	6896	UA6896	UR6896
F02:Z027	F02:Z027	UA	UR	6897	UA6897	UR6897
F02:Z028	F02:Z028	UA	UR	6898	UA6898	UR6898
F02:Z029	F02:Z029	UA	UR	6899	UA6899	UR6899
F02:Z030	F02:Z030	UA	UR	6900	UA6900	UR6900
F02:Z031	F02:Z031	UA	UR	6901	UA6901	UR6901
F02:Z032	F02:Z032	UA	UR	6902	UA6902	UR6902
F02:S001	F02 Xmit LowBatt	XT	XR	6903	XT6903	XR6903
F02:S002	F02 XmitPollFail	NA	NS	6904	NA6904	NS6904
F02:S003	F02 Xmitter Jam	XQ	XH	6905	XQ6905	XH6905
F02:S004	F02 Cab Tamper	TA	TR	6906	TA6906	TR6906
F02:S005	F02 AC fail	AT	AR	6907	AT6907	AR6907
F02:S006	F02 Low Batt	YT	YR	6908	YT6908	YR6908
F02:S007	F02 LAN Fuse	YP	YQ	6909	YP6909	YQ6909
F02:S008	F02 DET Fuse	YP	YQ	6910	YP6910	YQ6910
F02:S009	F02 Low Volts	YP	YQ	6911	YP6911	YQ6911
F02:S010	F02 PS Fail	YP	YQ	6912	YP6912	YQ6912
F02:S011	F02 Batt Test	IA	IR	6913	IA6913	IR6913
F02:S012	F02 LAN Comms	EM	EN	6914	EM6914	EN6914
F02:S013	F02 Spare1	UA	UR	6915	UA6915	UR6915
F02:S014	F02 Spare2	UA	UR	6916	UA6916	UR6916
F03:Z001	F03:Z001	UA	UR	6917	UA6917	UR6917
F03:Z002	F03:Z002	UA	UR	6918	UA6918	UR6918
F03:Z003	F03:Z003	UA	UR	6919	UA6919	UR6919
F03:Z004	F03:Z004	UA	UR	6920	UA6920	UR6920
F03:Z005	F03:Z005	UA	UR	6921	UA6921	UR6921
F03:Z006	F03:Z006	UA	UR	6922	UA6922	UR6922
F03:Z007	F03:Z007	UA	UR	6923	UA6923	UR6923
F03:Z008	F03:Z008	UA	UR	6924	UA6924	UR6924
F03:Z009	F03:Z009	UA	UR	6925	UA6925	UR6925
F03:Z010	F03:Z010	UA	UR	6926	UA6926	UR6926
F03:Z011	F03:Z011	UA	UR	6927	UA6927	UR6927
F03:Z012	F03:Z012	UA	UR	6928	UA6928	UR6928
F03:Z013	F03:Z013	UA	UR	6929	UA6929	UR6929
F03:Z014	F03:Z014	UA	UR	6930	UA6930	UR6930
F03:Z015	F03:Z015	UA	UR	6931	UA6931	UR6931
F03:Z016	F03:Z016	UA	UR	6932	UA6932	UR6932
F03:Z017	F03:Z017	UA	UR	6933	UA6933	UR6933
F03:Z018	F03:Z018	UA	UR	6934	UA6934	UR6934
F03:Z019	F03:Z019	UA	UR	6935	UA6935	UR6935
F03:Z020	F03:Z020	UA	UR	6936	UA6936	UR6936
F03:Z021	F03:Z021	UA	UR	6937	UA6937	UR6937
F03:Z022	F03:Z022	UA	UR	6938	UA6938	UR6938
F03:Z023	F03:Z023	UA	UR	6939	UA6939	UR6939
F03:Z024	F03:Z024	UA	UR	6940	UA6940	UR6940
F03:Z025	F03:Z025	UA	UR	6941	UA6941	UR6941
F03:Z026	F03:Z026	UA	UR	6942	UA6942	UR6942
F03:Z027	F03:Z027	UA	UR	6943	UA6943	UR6943
F03:Z028	F03:Z028	UA	UR	6944	UA6944	UR6944
F03:Z029	F03:Z029	UA	UR	6945	UA6945	UR6945
F03:Z030	F03:Z030	UA	UR	6946	UA6946	UR6946
F03:Z031	F03:Z031	UA	UR	6947	UA6947	UR6947
F03:Z032	F03:Z032	UA	UR	6948	UA6948	UR6948

Integriti SIA DECIMAL Map. V21

F03:S001	F03 Xmit LowBatt	XT	XR	6949	XT6949	XR6949
F03:S002	F03 XmitPollFail	NA	NS	6950	NA6950	NS6950
F03:S003	F03 Xmitter Jam	XQ	XH	6951	XQ6951	XH6951
F03:S004	F03 Cab Tamper	TA	TR	6952	TA6952	TR6952
F03:S005	F03 AC fail	AT	AR	6953	AT6953	AR6953
F03:S006	F03 Low Batt	YT	YR	6954	YT6954	YR6954
F03:S007	F03 LAN Fuse	YP	YQ	6955	YP6955	YQ6955
F03:S008	F03 DET Fuse	YP	YQ	6956	YP6956	YQ6956
F03:S009	F03 Low Volts	YP	YQ	6957	YP6957	YQ6957
F03:S010	F03 PS Fail	YP	YQ	6958	YP6958	YQ6958
F03:S011	F03 Batt Test	IA	IR	6959	IA6959	IR6959
F03:S012	F03 LAN Comms	EM	EN	6960	EM6960	EN6960
F03:S013	F03 Spare1	UA	UR	6961	UA6961	UR6961
F03:S014	F03 Spare2	UA	UR	6962	UA6962	UR6962
F04:Z001	F04:Z001	UA	UR	6963	UA6963	UR6963
F04:Z002	F04:Z002	UA	UR	6964	UA6964	UR6964
F04:Z003	F04:Z003	UA	UR	6965	UA6965	UR6965
F04:Z004	F04:Z004	UA	UR	6966	UA6966	UR6966
F04:Z005	F04:Z005	UA	UR	6967	UA6967	UR6967
F04:Z006	F04:Z006	UA	UR	6968	UA6968	UR6968
F04:Z007	F04:Z007	UA	UR	6969	UA6969	UR6969
F04:Z008	F04:Z008	UA	UR	6970	UA6970	UR6970
F04:Z009	F04:Z009	UA	UR	6971	UA6971	UR6971
F04:Z010	F04:Z010	UA	UR	6972	UA6972	UR6972
F04:Z011	F04:Z011	UA	UR	6973	UA6973	UR6973
F04:Z012	F04:Z012	UA	UR	6974	UA6974	UR6974
F04:Z013	F04:Z013	UA	UR	6975	UA6975	UR6975
F04:Z014	F04:Z014	UA	UR	6976	UA6976	UR6976
F04:Z015	F04:Z015	UA	UR	6977	UA6977	UR6977
F04:Z016	F04:Z016	UA	UR	6978	UA6978	UR6978
F04:Z017	F04:Z017	UA	UR	6979	UA6979	UR6979
F04:Z018	F04:Z018	UA	UR	6980	UA6980	UR6980
F04:Z019	F04:Z019	UA	UR	6981	UA6981	UR6981
F04:Z020	F04:Z020	UA	UR	6982	UA6982	UR6982
F04:Z021	F04:Z021	UA	UR	6983	UA6983	UR6983
F04:Z022	F04:Z022	UA	UR	6984	UA6984	UR6984
F04:Z023	F04:Z023	UA	UR	6985	UA6985	UR6985
F04:Z024	F04:Z024	UA	UR	6986	UA6986	UR6986
F04:Z025	F04:Z025	UA	UR	6987	UA6987	UR6987
F04:Z026	F04:Z026	UA	UR	6988	UA6988	UR6988
F04:Z027	F04:Z027	UA	UR	6989	UA6989	UR6989
F04:Z028	F04:Z028	UA	UR	6990	UA6990	UR6990
F04:Z029	F04:Z029	UA	UR	6991	UA6991	UR6991
F04:Z030	F04:Z030	UA	UR	6992	UA6992	UR6992
F04:Z031	F04:Z031	UA	UR	6993	UA6993	UR6993
F04:Z032	F04:Z032	UA	UR	6994	UA6994	UR6994
F04:S001	F04 Xmit LowBatt	XT	XR	6995	XT6995	XR6995
F04:S002	F04 XmitPollFail	NA	NS	6996	NA6996	NS6996
F04:S003	F04 Xmitter Jam	XQ	XH	6997	XQ6997	XH6997
F04:S004	F04 Cab Tamper	TA	TR	6998	TA6998	TR6998
F04:S005	F04 AC fail	AT	AR	6999	AT6999	AR6999
F04:S006	F04 Low Batt	YT	YR	7000	YT7000	YR7000
F04:S007	F04 LAN Fuse	YP	YQ	7001	YP7001	YQ7001
F04:S008	F04 DET Fuse	YP	YQ	7002	YP7002	YQ7002
F04:S009	F04 Low Volts	YP	YQ	7003	YP7003	YQ7003
F04:S010	F04 PS Fail	YP	YQ	7004	YP7004	YQ7004
F04:S011	F04 Batt Test	IA	IR	7005	IA7005	IR7005
F04:S012	F04 LAN Comms	EM	EN	7006	EM7006	EN7006
F04:S013	F04 Spare1	UA	UR	7007	UA7007	UR7007
F04:S014	F04 Spare2	UA	UR	7008	UA7008	UR7008
F05:Z001	F05:Z001	UA	UR	7009	UA7009	UR7009
F05:Z002	F05:Z002	UA	UR	7010	UA7010	UR7010
F05:Z003	F05:Z003	UA	UR	7011	UA7011	UR7011
F05:Z004	F05:Z004	UA	UR	7012	UA7012	UR7012
F05:Z005	F05:Z005	UA	UR	7013	UA7013	UR7013
F05:Z006	F05:Z006	UA	UR	7014	UA7014	UR7014
F05:Z007	F05:Z007	UA	UR	7015	UA7015	UR7015
F05:Z008	F05:Z008	UA	UR	7016	UA7016	UR7016
F05:Z009	F05:Z009	UA	UR	7017	UA7017	UR7017
F05:Z010	F05:Z010	UA	UR	7018	UA7018	UR7018

Integriti SIA DECIMAL Map. V21

F05:Z011	F05:Z011	UA	UR	7019	UA7019	UR7019
F05:Z012	F05:Z012	UA	UR	7020	UA7020	UR7020
F05:Z013	F05:Z013	UA	UR	7021	UA7021	UR7021
F05:Z014	F05:Z014	UA	UR	7022	UA7022	UR7022
F05:Z015	F05:Z015	UA	UR	7023	UA7023	UR7023
F05:Z016	F05:Z016	UA	UR	7024	UA7024	UR7024
F05:Z017	F05:Z017	UA	UR	7025	UA7025	UR7025
F05:Z018	F05:Z018	UA	UR	7026	UA7026	UR7026
F05:Z019	F05:Z019	UA	UR	7027	UA7027	UR7027
F05:Z020	F05:Z020	UA	UR	7028	UA7028	UR7028
F05:Z021	F05:Z021	UA	UR	7029	UA7029	UR7029
F05:Z022	F05:Z022	UA	UR	7030	UA7030	UR7030
F05:Z023	F05:Z023	UA	UR	7031	UA7031	UR7031
F05:Z024	F05:Z024	UA	UR	7032	UA7032	UR7032
F05:Z025	F05:Z025	UA	UR	7033	UA7033	UR7033
F05:Z026	F05:Z026	UA	UR	7034	UA7034	UR7034
F05:Z027	F05:Z027	UA	UR	7035	UA7035	UR7035
F05:Z028	F05:Z028	UA	UR	7036	UA7036	UR7036
F05:Z029	F05:Z029	UA	UR	7037	UA7037	UR7037
F05:Z030	F05:Z030	UA	UR	7038	UA7038	UR7038
F05:Z031	F05:Z031	UA	UR	7039	UA7039	UR7039
F05:Z032	F05:Z032	UA	UR	7040	UA7040	UR7040
F05:S001	F05 Xmit LowBatt	XT	XR	7041	XT7041	XR7041
F05:S002	F05 XmitPollFail	NA	NS	7042	NA7042	NS7042
F05:S003	F05 Xmitter Jam	XQ	XH	7043	XQ7043	XH7043
F05:S004	F05 Cab Tamper	TA	TR	7044	TA7044	TR7044
F05:S005	F05 AC fail	AT	AR	7045	AT7045	AR7045
F05:S006	F05 Low Batt	YT	YR	7046	YT7046	YR7046
F05:S007	F05 LAN Fuse	YP	YQ	7047	YP7047	YQ7047
F05:S008	F05 DET Fuse	YP	YQ	7048	YP7048	YQ7048
F05:S009	F05 Low Volts	YP	YQ	7049	YP7049	YQ7049
F05:S010	F05 PS Fail	YP	YQ	7050	YP7050	YQ7050
F05:S011	F05 Batt Test	IA	IR	7051	IA7051	IR7051
F05:S012	F05 LAN Comms	EM	EN	7052	EM7052	EN7052
F05:S013	F05 Spare1	UA	UR	7053	UA7053	UR7053
F05:S014	F05 Spare2	UA	UR	7054	UA7054	UR7054
F06:Z001	F06:Z001	UA	UR	7055	UA7055	UR7055
F06:Z002	F06:Z002	UA	UR	7056	UA7056	UR7056
F06:Z003	F06:Z003	UA	UR	7057	UA7057	UR7057
F06:Z004	F06:Z004	UA	UR	7058	UA7058	UR7058
F06:Z005	F06:Z005	UA	UR	7059	UA7059	UR7059
F06:Z006	F06:Z006	UA	UR	7060	UA7060	UR7060
F06:Z007	F06:Z007	UA	UR	7061	UA7061	UR7061
F06:Z008	F06:Z008	UA	UR	7062	UA7062	UR7062
F06:Z009	F06:Z009	UA	UR	7063	UA7063	UR7063
F06:Z010	F06:Z010	UA	UR	7064	UA7064	UR7064
F06:Z011	F06:Z011	UA	UR	7065	UA7065	UR7065
F06:Z012	F06:Z012	UA	UR	7066	UA7066	UR7066
F06:Z013	F06:Z013	UA	UR	7067	UA7067	UR7067
F06:Z014	F06:Z014	UA	UR	7068	UA7068	UR7068
F06:Z015	F06:Z015	UA	UR	7069	UA7069	UR7069
F06:Z016	F06:Z016	UA	UR	7070	UA7070	UR7070
F06:Z017	F06:Z017	UA	UR	7071	UA7071	UR7071
F06:Z018	F06:Z018	UA	UR	7072	UA7072	UR7072
F06:Z019	F06:Z019	UA	UR	7073	UA7073	UR7073
F06:Z020	F06:Z020	UA	UR	7074	UA7074	UR7074
F06:Z021	F06:Z021	UA	UR	7075	UA7075	UR7075
F06:Z022	F06:Z022	UA	UR	7076	UA7076	UR7076
F06:Z023	F06:Z023	UA	UR	7077	UA7077	UR7077
F06:Z024	F06:Z024	UA	UR	7078	UA7078	UR7078
F06:Z025	F06:Z025	UA	UR	7079	UA7079	UR7079
F06:Z026	F06:Z026	UA	UR	7080	UA7080	UR7080
F06:Z027	F06:Z027	UA	UR	7081	UA7081	UR7081
F06:Z028	F06:Z028	UA	UR	7082	UA7082	UR7082
F06:Z029	F06:Z029	UA	UR	7083	UA7083	UR7083
F06:Z030	F06:Z030	UA	UR	7084	UA7084	UR7084
F06:Z031	F06:Z031	UA	UR	7085	UA7085	UR7085
F06:Z032	F06:Z032	UA	UR	7086	UA7086	UR7086
F06:S001	F06 Xmit LowBatt	XT	XR	7087	XT7087	XR7087
F06:S002	F06 XmitPollFail	NA	NS	7088	NA7088	NS7088

Integriti SIA DECIMAL Map. V21

F06:S003	F06 Xmitter Jam	XQ	XH	7089	XQ7089	XH7089
F06:S004	F06 Cab Tamper	TA	TR	7090	TA7090	TR7090
F06:S005	F06 AC fail	AT	AR	7091	AT7091	AR7091
F06:S006	F06 Low Batt	YT	YR	7092	YT7092	YR7092
F06:S007	F06 LAN Fuse	YP	YQ	7093	YP7093	YQ7093
F06:S008	F06 DET Fuse	YP	YQ	7094	YP7094	YQ7094
F06:S009	F06 Low Volts	YP	YQ	7095	YP7095	YQ7095
F06:S010	F06 PS Fail	YP	YQ	7096	YP7096	YQ7096
F06:S011	F06 Batt Test	IA	IR	7097	IA7097	IR7097
F06:S012	F06 LAN Comms	EM	EN	7098	EM7098	EN7098
F06:S013	F06 Spare1	UA	UR	7099	UA7099	UR7099
F06:S014	F06 Spare2	UA	UR	7100	UA7100	UR7100
F07:Z001	F07:Z001	UA	UR	7101	UA7101	UR7101
F07:Z002	F07:Z002	UA	UR	7102	UA7102	UR7102
F07:Z003	F07:Z003	UA	UR	7103	UA7103	UR7103
F07:Z004	F07:Z004	UA	UR	7104	UA7104	UR7104
F07:Z005	F07:Z005	UA	UR	7105	UA7105	UR7105
F07:Z006	F07:Z006	UA	UR	7106	UA7106	UR7106
F07:Z007	F07:Z007	UA	UR	7107	UA7107	UR7107
F07:Z008	F07:Z008	UA	UR	7108	UA7108	UR7108
F07:Z009	F07:Z009	UA	UR	7109	UA7109	UR7109
F07:Z010	F07:Z010	UA	UR	7110	UA7110	UR7110
F07:Z011	F07:Z011	UA	UR	7111	UA7111	UR7111
F07:Z012	F07:Z012	UA	UR	7112	UA7112	UR7112
F07:Z013	F07:Z013	UA	UR	7113	UA7113	UR7113
F07:Z014	F07:Z014	UA	UR	7114	UA7114	UR7114
F07:Z015	F07:Z015	UA	UR	7115	UA7115	UR7115
F07:Z016	F07:Z016	UA	UR	7116	UA7116	UR7116
F07:Z017	F07:Z017	UA	UR	7117	UA7117	UR7117
F07:Z018	F07:Z018	UA	UR	7118	UA7118	UR7118
F07:Z019	F07:Z019	UA	UR	7119	UA7119	UR7119
F07:Z020	F07:Z020	UA	UR	7120	UA7120	UR7120
F07:Z021	F07:Z021	UA	UR	7121	UA7121	UR7121
F07:Z022	F07:Z022	UA	UR	7122	UA7122	UR7122
F07:Z023	F07:Z023	UA	UR	7123	UA7123	UR7123
F07:Z024	F07:Z024	UA	UR	7124	UA7124	UR7124
F07:Z025	F07:Z025	UA	UR	7125	UA7125	UR7125
F07:Z026	F07:Z026	UA	UR	7126	UA7126	UR7126
F07:Z027	F07:Z027	UA	UR	7127	UA7127	UR7127
F07:Z028	F07:Z028	UA	UR	7128	UA7128	UR7128
F07:Z029	F07:Z029	UA	UR	7129	UA7129	UR7129
F07:Z030	F07:Z030	UA	UR	7130	UA7130	UR7130
F07:Z031	F07:Z031	UA	UR	7131	UA7131	UR7131
F07:Z032	F07:Z032	UA	UR	7132	UA7132	UR7132
F07:S001	F07 Xmit LowBatt	XT	XR	7133	XT7133	XR7133
F07:S002	F07 XmitPollFail	NA	NS	7134	NA7134	NS7134
F07:S003	F07 Xmitter Jam	XQ	XH	7135	XQ7135	XH7135
F07:S004	F07 Cab Tamper	TA	TR	7136	TA7136	TR7136
F07:S005	F07 AC fail	AT	AR	7137	AT7137	AR7137
F07:S006	F07 Low Batt	YT	YR	7138	YT7138	YR7138
F07:S007	F07 LAN Fuse	YP	YQ	7139	YP7139	YQ7139
F07:S008	F07 DET Fuse	YP	YQ	7140	YP7140	YQ7140
F07:S009	F07 Low Volts	YP	YQ	7141	YP7141	YQ7141
F07:S010	F07 PS Fail	YP	YQ	7142	YP7142	YQ7142
F07:S011	F07 Batt Test	IA	IR	7143	IA7143	IR7143
F07:S012	F07 LAN Comms	EM	EN	7144	EM7144	EN7144
F07:S013	F07 Spare1	UA	UR	7145	UA7145	UR7145
F07:S014	F07 Spare2	UA	UR	7146	UA7146	UR7146
F08:Z001	F08:Z001	UA	UR	7147	UA7147	UR7147
F08:Z002	F08:Z002	UA	UR	7148	UA7148	UR7148
F08:Z003	F08:Z003	UA	UR	7149	UA7149	UR7149
F08:Z004	F08:Z004	UA	UR	7150	UA7150	UR7150
F08:Z005	F08:Z005	UA	UR	7151	UA7151	UR7151
F08:Z006	F08:Z006	UA	UR	7152	UA7152	UR7152
F08:Z007	F08:Z007	UA	UR	7153	UA7153	UR7153
F08:Z008	F08:Z008	UA	UR	7154	UA7154	UR7154
F08:Z009	F08:Z009	UA	UR	7155	UA7155	UR7155
F08:Z010	F08:Z010	UA	UR	7156	UA7156	UR7156
F08:Z011	F08:Z011	UA	UR	7157	UA7157	UR7157
F08:Z012	F08:Z012	UA	UR	7158	UA7158	UR7158

Integriti SIA DECIMAL Map. V21

F08:Z013	F08:Z013	UA	UR	7159	UA7159	UR7159
F08:Z014	F08:Z014	UA	UR	7160	UA7160	UR7160
F08:Z015	F08:Z015	UA	UR	7161	UA7161	UR7161
F08:Z016	F08:Z016	UA	UR	7162	UA7162	UR7162
F08:Z017	F08:Z017	UA	UR	7163	UA7163	UR7163
F08:Z018	F08:Z018	UA	UR	7164	UA7164	UR7164
F08:Z019	F08:Z019	UA	UR	7165	UA7165	UR7165
F08:Z020	F08:Z020	UA	UR	7166	UA7166	UR7166
F08:Z021	F08:Z021	UA	UR	7167	UA7167	UR7167
F08:Z022	F08:Z022	UA	UR	7168	UA7168	UR7168
F08:Z023	F08:Z023	UA	UR	7169	UA7169	UR7169
F08:Z024	F08:Z024	UA	UR	7170	UA7170	UR7170
F08:Z025	F08:Z025	UA	UR	7171	UA7171	UR7171
F08:Z026	F08:Z026	UA	UR	7172	UA7172	UR7172
F08:Z027	F08:Z027	UA	UR	7173	UA7173	UR7173
F08:Z028	F08:Z028	UA	UR	7174	UA7174	UR7174
F08:Z029	F08:Z029	UA	UR	7175	UA7175	UR7175
F08:Z030	F08:Z030	UA	UR	7176	UA7176	UR7176
F08:Z031	F08:Z031	UA	UR	7177	UA7177	UR7177
F08:Z032	F08:Z032	UA	UR	7178	UA7178	UR7178
F08:S001	F08 Xmit LowBatt	XT	XR	7179	XT7179	XR7179
F08:S002	F08 XmitPollFail	NA	NS	7180	NA7180	NS7180
F08:S003	F08 Xmitter Jam	XQ	XH	7181	XQ7181	XH7181
F08:S004	F08 Cab Tamper	TA	TR	7182	TA7182	TR7182
F08:S005	F08 AC fail	AT	AR	7183	AT7183	AR7183
F08:S006	F08 Low Batt	YT	YR	7184	YT7184	YR7184
F08:S007	F08 LAN Fuse	YP	YQ	7185	YP7185	YQ7185
F08:S008	F08 DET Fuse	YP	YQ	7186	YP7186	YQ7186
F08:S009	F08 Low Volts	YP	YQ	7187	YP7187	YQ7187
F08:S010	F08 PS Fail	YP	YQ	7188	YP7188	YQ7188
F08:S011	F08 Batt Test	IA	IR	7189	IA7189	IR7189
F08:S012	F08 LAN Comms	EM	EN	7190	EM7190	EN7190
F08:S013	F08 Spare1	UA	UR	7191	UA7191	UR7191
F08:S014	F08 Spare2	UA	UR	7192	UA7192	UR7192
F09:Z001	F09:Z001	UA	UR	7193	UA7193	UR7193
F09:Z002	F09:Z002	UA	UR	7194	UA7194	UR7194
F09:Z003	F09:Z003	UA	UR	7195	UA7195	UR7195
F09:Z004	F09:Z004	UA	UR	7196	UA7196	UR7196
F09:Z005	F09:Z005	UA	UR	7197	UA7197	UR7197
F09:Z006	F09:Z006	UA	UR	7198	UA7198	UR7198
F09:Z007	F09:Z007	UA	UR	7199	UA7199	UR7199
F09:Z008	F09:Z008	UA	UR	7200	UA7200	UR7200
F09:Z009	F09:Z009	UA	UR	7201	UA7201	UR7201
F09:Z010	F09:Z010	UA	UR	7202	UA7202	UR7202
F09:Z011	F09:Z011	UA	UR	7203	UA7203	UR7203
F09:Z012	F09:Z012	UA	UR	7204	UA7204	UR7204
F09:Z013	F09:Z013	UA	UR	7205	UA7205	UR7205
F09:Z014	F09:Z014	UA	UR	7206	UA7206	UR7206
F09:Z015	F09:Z015	UA	UR	7207	UA7207	UR7207
F09:Z016	F09:Z016	UA	UR	7208	UA7208	UR7208
F09:Z017	F09:Z017	UA	UR	7209	UA7209	UR7209
F09:Z018	F09:Z018	UA	UR	7210	UA7210	UR7210
F09:Z019	F09:Z019	UA	UR	7211	UA7211	UR7211
F09:Z020	F09:Z020	UA	UR	7212	UA7212	UR7212
F09:Z021	F09:Z021	UA	UR	7213	UA7213	UR7213
F09:Z022	F09:Z022	UA	UR	7214	UA7214	UR7214
F09:Z023	F09:Z023	UA	UR	7215	UA7215	UR7215
F09:Z024	F09:Z024	UA	UR	7216	UA7216	UR7216
F09:Z025	F09:Z025	UA	UR	7217	UA7217	UR7217
F09:Z026	F09:Z026	UA	UR	7218	UA7218	UR7218
F09:Z027	F09:Z027	UA	UR	7219	UA7219	UR7219
F09:Z028	F09:Z028	UA	UR	7220	UA7220	UR7220
F09:Z029	F09:Z029	UA	UR	7221	UA7221	UR7221
F09:Z030	F09:Z030	UA	UR	7222	UA7222	UR7222
F09:Z031	F09:Z031	UA	UR	7223	UA7223	UR7223
F09:Z032	F09:Z032	UA	UR	7224	UA7224	UR7224
F09:S001	F09 Xmit LowBatt	XT	XR	7225	XT7225	XR7225
F09:S002	F09 XmitPollFail	NA	NS	7226	NA7226	NS7226
F09:S003	F09 Xmitter Jam	XQ	XH	7227	XQ7227	XH7227
F09:S004	F09 Cab Tamper	TA	TR	7228	TA7228	TR7228

Integriti SIA DECIMAL Map. V21

F09:S005	F09 AC fail	AT	AR	7229	AT7229	AR7229
F09:S006	F09 Low Batt	YT	YR	7230	YT7230	YR7230
F09:S007	F09 LAN Fuse	YP	YQ	7231	YP7231	YQ7231
F09:S008	F09 DET Fuse	YP	YQ	7232	YP7232	YQ7232
F09:S009	F09 Low Volts	YP	YQ	7233	YP7233	YQ7233
F09:S010	F09 PS Fail	YP	YQ	7234	YP7234	YQ7234
F09:S011	F09 Batt Test	IA	IR	7235	IA7235	IR7235
F09:S012	F09 LAN Comms	EM	EN	7236	EM7236	EN7236
F09:S013	F09 Spare1	UA	UR	7237	UA7237	UR7237
F09:S014	F09 Spare2	UA	UR	7238	UA7238	UR7238
F10:Z001	F10:Z001	UA	UR	7239	UA7239	UR7239
F10:Z002	F10:Z002	UA	UR	7240	UA7240	UR7240
F10:Z003	F10:Z003	UA	UR	7241	UA7241	UR7241
F10:Z004	F10:Z004	UA	UR	7242	UA7242	UR7242
F10:Z005	F10:Z005	UA	UR	7243	UA7243	UR7243
F10:Z006	F10:Z006	UA	UR	7244	UA7244	UR7244
F10:Z007	F10:Z007	UA	UR	7245	UA7245	UR7245
F10:Z008	F10:Z008	UA	UR	7246	UA7246	UR7246
F10:Z009	F10:Z009	UA	UR	7247	UA7247	UR7247
F10:Z010	F10:Z010	UA	UR	7248	UA7248	UR7248
F10:Z011	F10:Z011	UA	UR	7249	UA7249	UR7249
F10:Z012	F10:Z012	UA	UR	7250	UA7250	UR7250
F10:Z013	F10:Z013	UA	UR	7251	UA7251	UR7251
F10:Z014	F10:Z014	UA	UR	7252	UA7252	UR7252
F10:Z015	F10:Z015	UA	UR	7253	UA7253	UR7253
F10:Z016	F10:Z016	UA	UR	7254	UA7254	UR7254
F10:Z017	F10:Z017	UA	UR	7255	UA7255	UR7255
F10:Z018	F10:Z018	UA	UR	7256	UA7256	UR7256
F10:Z019	F10:Z019	UA	UR	7257	UA7257	UR7257
F10:Z020	F10:Z020	UA	UR	7258	UA7258	UR7258
F10:Z021	F10:Z021	UA	UR	7259	UA7259	UR7259
F10:Z022	F10:Z022	UA	UR	7260	UA7260	UR7260
F10:Z023	F10:Z023	UA	UR	7261	UA7261	UR7261
F10:Z024	F10:Z024	UA	UR	7262	UA7262	UR7262
F10:Z025	F10:Z025	UA	UR	7263	UA7263	UR7263
F10:Z026	F10:Z026	UA	UR	7264	UA7264	UR7264
F10:Z027	F10:Z027	UA	UR	7265	UA7265	UR7265
F10:Z028	F10:Z028	UA	UR	7266	UA7266	UR7266
F10:Z029	F10:Z029	UA	UR	7267	UA7267	UR7267
F10:Z030	F10:Z030	UA	UR	7268	UA7268	UR7268
F10:Z031	F10:Z031	UA	UR	7269	UA7269	UR7269
F10:Z032	F10:Z032	UA	UR	7270	UA7270	UR7270
F10:S001	F10 Xmit LowBatt	XT	XR	7271	XT7271	XR7271
F10:S002	F10 XmitPollFail	NA	NS	7272	NA7272	NS7272
F10:S003	F10 Xmitter Jam	XQ	XH	7273	XQ7273	XH7273
F10:S004	F10 Cab Tamper	TA	TR	7274	TA7274	TR7274
F10:S005	F10 AC fail	AT	AR	7275	AT7275	AR7275
F10:S006	F10 Low Batt	YT	YR	7276	YT7276	YR7276
F10:S007	F10 LAN Fuse	YP	YQ	7277	YP7277	YQ7277
F10:S008	F10 DET Fuse	YP	YQ	7278	YP7278	YQ7278
F10:S009	F10 Low Volts	YP	YQ	7279	YP7279	YQ7279
F10:S010	F10 PS Fail	YP	YQ	7280	YP7280	YQ7280
F10:S011	F10 Batt Test	IA	IR	7281	IA7281	IR7281
F10:S012	F10 LAN Comms	EM	EN	7282	EM7282	EN7282
F10:S013	F10 Spare1	UA	UR	7283	UA7283	UR7283
F10:S014	F10 Spare2	UA	UR	7284	UA7284	UR7284
F11:Z001	F11:Z001	UA	UR	7285	UA7285	UR7285
F11:Z002	F11:Z002	UA	UR	7286	UA7286	UR7286
F11:Z003	F11:Z003	UA	UR	7287	UA7287	UR7287
F11:Z004	F11:Z004	UA	UR	7288	UA7288	UR7288
F11:Z005	F11:Z005	UA	UR	7289	UA7289	UR7289
F11:Z006	F11:Z006	UA	UR	7290	UA7290	UR7290
F11:Z007	F11:Z007	UA	UR	7291	UA7291	UR7291
F11:Z008	F11:Z008	UA	UR	7292	UA7292	UR7292
F11:Z009	F11:Z009	UA	UR	7293	UA7293	UR7293
F11:Z010	F11:Z010	UA	UR	7294	UA7294	UR7294
F11:Z011	F11:Z011	UA	UR	7295	UA7295	UR7295
F11:Z012	F11:Z012	UA	UR	7296	UA7296	UR7296
F11:Z013	F11:Z013	UA	UR	7297	UA7297	UR7297
F11:Z014	F11:Z014	UA	UR	7298	UA7298	UR7298

Integriti SIA DECIMAL Map. V21

F11:Z015	F11:Z015	UA	UR	7299	UA7299	UR7299
F11:Z016	F11:Z016	UA	UR	7300	UA7300	UR7300
F11:Z017	F11:Z017	UA	UR	7301	UA7301	UR7301
F11:Z018	F11:Z018	UA	UR	7302	UA7302	UR7302
F11:Z019	F11:Z019	UA	UR	7303	UA7303	UR7303
F11:Z020	F11:Z020	UA	UR	7304	UA7304	UR7304
F11:Z021	F11:Z021	UA	UR	7305	UA7305	UR7305
F11:Z022	F11:Z022	UA	UR	7306	UA7306	UR7306
F11:Z023	F11:Z023	UA	UR	7307	UA7307	UR7307
F11:Z024	F11:Z024	UA	UR	7308	UA7308	UR7308
F11:Z025	F11:Z025	UA	UR	7309	UA7309	UR7309
F11:Z026	F11:Z026	UA	UR	7310	UA7310	UR7310
F11:Z027	F11:Z027	UA	UR	7311	UA7311	UR7311
F11:Z028	F11:Z028	UA	UR	7312	UA7312	UR7312
F11:Z029	F11:Z029	UA	UR	7313	UA7313	UR7313
F11:Z030	F11:Z030	UA	UR	7314	UA7314	UR7314
F11:Z031	F11:Z031	UA	UR	7315	UA7315	UR7315
F11:Z032	F11:Z032	UA	UR	7316	UA7316	UR7316
F11:S001	F11 Xmit LowBatt	XT	XR	7317	XT7317	XR7317
F11:S002	F11 XmitPollFail	NA	NS	7318	NA7318	NS7318
F11:S003	F11 Xmitter Jam	XQ	XH	7319	XQ7319	XH7319
F11:S004	F11 Cab Tamper	TA	TR	7320	TA7320	TR7320
F11:S005	F11 AC fail	AT	AR	7321	AT7321	AR7321
F11:S006	F11 Low Batt	YT	YR	7322	YT7322	YR7322
F11:S007	F11 LAN Fuse	YP	YQ	7323	YP7323	YQ7323
F11:S008	F11 DET Fuse	YP	YQ	7324	YP7324	YQ7324
F11:S009	F11 Low Volts	YP	YQ	7325	YP7325	YQ7325
F11:S010	F11 PS Fail	YP	YQ	7326	YP7326	YQ7326
F11:S011	F11 Batt Test	IA	IR	7327	IA7327	IR7327
F11:S012	F11 LAN Comms	EM	EN	7328	EM7328	EN7328
F11:S013	F11 Spare1	UA	UR	7329	UA7329	UR7329
F11:S014	F11 Spare2	UA	UR	7330	UA7330	UR7330
F12:Z001	F12:Z001	UA	UR	7331	UA7331	UR7331
F12:Z002	F12:Z002	UA	UR	7332	UA7332	UR7332
F12:Z003	F12:Z003	UA	UR	7333	UA7333	UR7333
F12:Z004	F12:Z004	UA	UR	7334	UA7334	UR7334
F12:Z005	F12:Z005	UA	UR	7335	UA7335	UR7335
F12:Z006	F12:Z006	UA	UR	7336	UA7336	UR7336
F12:Z007	F12:Z007	UA	UR	7337	UA7337	UR7337
F12:Z008	F12:Z008	UA	UR	7338	UA7338	UR7338
F12:Z009	F12:Z009	UA	UR	7339	UA7339	UR7339
F12:Z010	F12:Z010	UA	UR	7340	UA7340	UR7340
F12:Z011	F12:Z011	UA	UR	7341	UA7341	UR7341
F12:Z012	F12:Z012	UA	UR	7342	UA7342	UR7342
F12:Z013	F12:Z013	UA	UR	7343	UA7343	UR7343
F12:Z014	F12:Z014	UA	UR	7344	UA7344	UR7344
F12:Z015	F12:Z015	UA	UR	7345	UA7345	UR7345
F12:Z016	F12:Z016	UA	UR	7346	UA7346	UR7346
F12:Z017	F12:Z017	UA	UR	7347	UA7347	UR7347
F12:Z018	F12:Z018	UA	UR	7348	UA7348	UR7348
F12:Z019	F12:Z019	UA	UR	7349	UA7349	UR7349
F12:Z020	F12:Z020	UA	UR	7350	UA7350	UR7350
F12:Z021	F12:Z021	UA	UR	7351	UA7351	UR7351
F12:Z022	F12:Z022	UA	UR	7352	UA7352	UR7352
F12:Z023	F12:Z023	UA	UR	7353	UA7353	UR7353
F12:Z024	F12:Z024	UA	UR	7354	UA7354	UR7354
F12:Z025	F12:Z025	UA	UR	7355	UA7355	UR7355
F12:Z026	F12:Z026	UA	UR	7356	UA7356	UR7356
F12:Z027	F12:Z027	UA	UR	7357	UA7357	UR7357
F12:Z028	F12:Z028	UA	UR	7358	UA7358	UR7358
F12:Z029	F12:Z029	UA	UR	7359	UA7359	UR7359
F12:Z030	F12:Z030	UA	UR	7360	UA7360	UR7360
F12:Z031	F12:Z031	UA	UR	7361	UA7361	UR7361
F12:Z032	F12:Z032	UA	UR	7362	UA7362	UR7362
F12:S001	F12 Xmit LowBatt	XT	XR	7363	XT7363	XR7363
F12:S002	F12 XmitPollFail	NA	NS	7364	NA7364	NS7364
F12:S003	F12 Xmitter Jam	XQ	XH	7365	XQ7365	XH7365
F12:S004	F12 Cab Tamper	TA	TR	7366	TA7366	TR7366
F12:S005	F12 AC fail	AT	AR	7367	AT7367	AR7367
F12:S006	F12 Low Batt	YT	YR	7368	YT7368	YR7368

Integriti SIA DECIMAL Map. V21

F12:S007	F12 LAN Fuse	YP	YQ	7369	YP7369	YQ7369
F12:S008	F12 DET Fuse	YP	YQ	7370	YP7370	YQ7370
F12:S009	F12 Low Volts	YP	YQ	7371	YP7371	YQ7371
F12:S010	F12 PS Fail	YP	YQ	7372	YP7372	YQ7372
F12:S011	F12 Batt Test	IA	IR	7373	IA7373	IR7373
F12:S012	F12 LAN Comms	EM	EN	7374	EM7374	EN7374
F12:S013	F12 Spare1	UA	UR	7375	UA7375	UR7375
F12:S014	F12 Spare2	UA	UR	7376	UA7376	UR7376
F13:Z001	F13:Z001	UA	UR	7377	UA7377	UR7377
F13:Z002	F13:Z002	UA	UR	7378	UA7378	UR7378
F13:Z003	F13:Z003	UA	UR	7379	UA7379	UR7379
F13:Z004	F13:Z004	UA	UR	7380	UA7380	UR7380
F13:Z005	F13:Z005	UA	UR	7381	UA7381	UR7381
F13:Z006	F13:Z006	UA	UR	7382	UA7382	UR7382
F13:Z007	F13:Z007	UA	UR	7383	UA7383	UR7383
F13:Z008	F13:Z008	UA	UR	7384	UA7384	UR7384
F13:Z009	F13:Z009	UA	UR	7385	UA7385	UR7385
F13:Z010	F13:Z010	UA	UR	7386	UA7386	UR7386
F13:Z011	F13:Z011	UA	UR	7387	UA7387	UR7387
F13:Z012	F13:Z012	UA	UR	7388	UA7388	UR7388
F13:Z013	F13:Z013	UA	UR	7389	UA7389	UR7389
F13:Z014	F13:Z014	UA	UR	7390	UA7390	UR7390
F13:Z015	F13:Z015	UA	UR	7391	UA7391	UR7391
F13:Z016	F13:Z016	UA	UR	7392	UA7392	UR7392
F13:Z017	F13:Z017	UA	UR	7393	UA7393	UR7393
F13:Z018	F13:Z018	UA	UR	7394	UA7394	UR7394
F13:Z019	F13:Z019	UA	UR	7395	UA7395	UR7395
F13:Z020	F13:Z020	UA	UR	7396	UA7396	UR7396
F13:Z021	F13:Z021	UA	UR	7397	UA7397	UR7397
F13:Z022	F13:Z022	UA	UR	7398	UA7398	UR7398
F13:Z023	F13:Z023	UA	UR	7399	UA7399	UR7399
F13:Z024	F13:Z024	UA	UR	7400	UA7400	UR7400
F13:Z025	F13:Z025	UA	UR	7401	UA7401	UR7401
F13:Z026	F13:Z026	UA	UR	7402	UA7402	UR7402
F13:Z027	F13:Z027	UA	UR	7403	UA7403	UR7403
F13:Z028	F13:Z028	UA	UR	7404	UA7404	UR7404
F13:Z029	F13:Z029	UA	UR	7405	UA7405	UR7405
F13:Z030	F13:Z030	UA	UR	7406	UA7406	UR7406
F13:Z031	F13:Z031	UA	UR	7407	UA7407	UR7407
F13:Z032	F13:Z032	UA	UR	7408	UA7408	UR7408
F13:S001	F13 Xmit LowBatt	XT	XR	7409	XT7409	XR7409
F13:S002	F13 XmitPollFail	NA	NS	7410	NA7410	NS7410
F13:S003	F13 Xmitter Jam	XQ	XH	7411	XQ7411	XH7411
F13:S004	F13 Cab Tamper	TA	TR	7412	TA7412	TR7412
F13:S005	F13 AC fail	AT	AR	7413	AT7413	AR7413
F13:S006	F13 Low Batt	YT	YR	7414	YT7414	YR7414
F13:S007	F13 LAN Fuse	YP	YQ	7415	YP7415	YQ7415
F13:S008	F13 DET Fuse	YP	YQ	7416	YP7416	YQ7416
F13:S009	F13 Low Volts	YP	YQ	7417	YP7417	YQ7417
F13:S010	F13 PS Fail	YP	YQ	7418	YP7418	YQ7418
F13:S011	F13 Batt Test	IA	IR	7419	IA7419	IR7419
F13:S012	F13 LAN Comms	EM	EN	7420	EM7420	EN7420
F13:S013	F13 Spare1	UA	UR	7421	UA7421	UR7421
F13:S014	F13 Spare2	UA	UR	7422	UA7422	UR7422
F14:Z001	F14:Z001	UA	UR	7423	UA7423	UR7423
F14:Z002	F14:Z002	UA	UR	7424	UA7424	UR7424
F14:Z003	F14:Z003	UA	UR	7425	UA7425	UR7425
F14:Z004	F14:Z004	UA	UR	7426	UA7426	UR7426
F14:Z005	F14:Z005	UA	UR	7427	UA7427	UR7427
F14:Z006	F14:Z006	UA	UR	7428	UA7428	UR7428
F14:Z007	F14:Z007	UA	UR	7429	UA7429	UR7429
F14:Z008	F14:Z008	UA	UR	7430	UA7430	UR7430
F14:Z009	F14:Z009	UA	UR	7431	UA7431	UR7431
F14:Z010	F14:Z010	UA	UR	7432	UA7432	UR7432
F14:Z011	F14:Z011	UA	UR	7433	UA7433	UR7433
F14:Z012	F14:Z012	UA	UR	7434	UA7434	UR7434
F14:Z013	F14:Z013	UA	UR	7435	UA7435	UR7435
F14:Z014	F14:Z014	UA	UR	7436	UA7436	UR7436
F14:Z015	F14:Z015	UA	UR	7437	UA7437	UR7437
F14:Z016	F14:Z016	UA	UR	7438	UA7438	UR7438

Integriti SIA DECIMAL Map. V21

F14:Z017	F14:Z017	UA	UR	7439	UA7439	UR7439
F14:Z018	F14:Z018	UA	UR	7440	UA7440	UR7440
F14:Z019	F14:Z019	UA	UR	7441	UA7441	UR7441
F14:Z020	F14:Z020	UA	UR	7442	UA7442	UR7442
F14:Z021	F14:Z021	UA	UR	7443	UA7443	UR7443
F14:Z022	F14:Z022	UA	UR	7444	UA7444	UR7444
F14:Z023	F14:Z023	UA	UR	7445	UA7445	UR7445
F14:Z024	F14:Z024	UA	UR	7446	UA7446	UR7446
F14:Z025	F14:Z025	UA	UR	7447	UA7447	UR7447
F14:Z026	F14:Z026	UA	UR	7448	UA7448	UR7448
F14:Z027	F14:Z027	UA	UR	7449	UA7449	UR7449
F14:Z028	F14:Z028	UA	UR	7450	UA7450	UR7450
F14:Z029	F14:Z029	UA	UR	7451	UA7451	UR7451
F14:Z030	F14:Z030	UA	UR	7452	UA7452	UR7452
F14:Z031	F14:Z031	UA	UR	7453	UA7453	UR7453
F14:Z032	F14:Z032	UA	UR	7454	UA7454	UR7454
F14:S001	F14 Xmit LowBatt	XT	XR	7455	XT7455	XR7455
F14:S002	F14 XmitPollFail	NA	NS	7456	NA7456	NS7456
F14:S003	F14 Xmitter Jam	XQ	XH	7457	XQ7457	XH7457
F14:S004	F14 Cab Tamper	TA	TR	7458	TA7458	TR7458
F14:S005	F14 AC fail	AT	AR	7459	AT7459	AR7459
F14:S006	F14 Low Batt	YT	YR	7460	YT7460	YR7460
F14:S007	F14 LAN Fuse	YP	YQ	7461	YP7461	YQ7461
F14:S008	F14 DET Fuse	YP	YQ	7462	YP7462	YQ7462
F14:S009	F14 Low Volts	YP	YQ	7463	YP7463	YQ7463
F14:S010	F14 PS Fail	YP	YQ	7464	YP7464	YQ7464
F14:S011	F14 Batt Test	IA	IR	7465	IA7465	IR7465
F14:S012	F14 LAN Comms	EM	EN	7466	EM7466	EN7466
F14:S013	F14 Spare1	UA	UR	7467	UA7467	UR7467
F14:S014	F14 Spare2	UA	UR	7468	UA7468	UR7468
F15:Z001	F15:Z001	UA	UR	7469	UA7469	UR7469
F15:Z002	F15:Z002	UA	UR	7470	UA7470	UR7470
F15:Z003	F15:Z003	UA	UR	7471	UA7471	UR7471
F15:Z004	F15:Z004	UA	UR	7472	UA7472	UR7472
F15:Z005	F15:Z005	UA	UR	7473	UA7473	UR7473
F15:Z006	F15:Z006	UA	UR	7474	UA7474	UR7474
F15:Z007	F15:Z007	UA	UR	7475	UA7475	UR7475
F15:Z008	F15:Z008	UA	UR	7476	UA7476	UR7476
F15:Z009	F15:Z009	UA	UR	7477	UA7477	UR7477
F15:Z010	F15:Z010	UA	UR	7478	UA7478	UR7478
F15:Z011	F15:Z011	UA	UR	7479	UA7479	UR7479
F15:Z012	F15:Z012	UA	UR	7480	UA7480	UR7480
F15:Z013	F15:Z013	UA	UR	7481	UA7481	UR7481
F15:Z014	F15:Z014	UA	UR	7482	UA7482	UR7482
F15:Z015	F15:Z015	UA	UR	7483	UA7483	UR7483
F15:Z016	F15:Z016	UA	UR	7484	UA7484	UR7484
F15:Z017	F15:Z017	UA	UR	7485	UA7485	UR7485
F15:Z018	F15:Z018	UA	UR	7486	UA7486	UR7486
F15:Z019	F15:Z019	UA	UR	7487	UA7487	UR7487
F15:Z020	F15:Z020	UA	UR	7488	UA7488	UR7488
F15:Z021	F15:Z021	UA	UR	7489	UA7489	UR7489
F15:Z022	F15:Z022	UA	UR	7490	UA7490	UR7490
F15:Z023	F15:Z023	UA	UR	7491	UA7491	UR7491
F15:Z024	F15:Z024	UA	UR	7492	UA7492	UR7492
F15:Z025	F15:Z025	UA	UR	7493	UA7493	UR7493
F15:Z026	F15:Z026	UA	UR	7494	UA7494	UR7494
F15:Z027	F15:Z027	UA	UR	7495	UA7495	UR7495
F15:Z028	F15:Z028	UA	UR	7496	UA7496	UR7496
F15:Z029	F15:Z029	UA	UR	7497	UA7497	UR7497
F15:Z030	F15:Z030	UA	UR	7498	UA7498	UR7498
F15:Z031	F15:Z031	UA	UR	7499	UA7499	UR7499
F15:Z032	F15:Z032	UA	UR	7500	UA7500	UR7500
F15:S001	F15 Xmit LowBatt	XT	XR	7501	XT7501	XR7501
F15:S002	F15 XmitPollFail	NA	NS	7502	NA7502	NS7502
F15:S003	F15 Xmitter Jam	XQ	XH	7503	XQ7503	XH7503
F15:S004	F15 Cab Tamper	TA	TR	7504	TA7504	TR7504
F15:S005	F15 AC fail	AT	AR	7505	AT7505	AR7505
F15:S006	F15 Low Batt	YT	YR	7506	YT7506	YR7506
F15:S007	F15 LAN Fuse	YP	YQ	7507	YP7507	YQ7507
F15:S008	F15 DET Fuse	YP	YQ	7508	YP7508	YQ7508

Integriti SIA DECIMAL Map. V21

F15:S009	F15 Low Volts	YP	YQ	7509	YP7509	YQ7509
F15:S010	F15 PS Fail	YP	YQ	7510	YP7510	YQ7510
F15:S011	F15 Batt Test	IA	IR	7511	IA7511	IR7511
F15:S012	F15 LAN Comms	EM	EN	7512	EM7512	EN7512
F15:S013	F15 Spare1	UA	UR	7513	UA7513	UR7513
F15:S014	F15 Spare2	UA	UR	7514	UA7514	UR7514
F16:Z001	F16:Z001	UA	UR	7515	UA7515	UR7515
F16:Z002	F16:Z002	UA	UR	7516	UA7516	UR7516
F16:Z003	F16:Z003	UA	UR	7517	UA7517	UR7517
F16:Z004	F16:Z004	UA	UR	7518	UA7518	UR7518
F16:Z005	F16:Z005	UA	UR	7519	UA7519	UR7519
F16:Z006	F16:Z006	UA	UR	7520	UA7520	UR7520
F16:Z007	F16:Z007	UA	UR	7521	UA7521	UR7521
F16:Z008	F16:Z008	UA	UR	7522	UA7522	UR7522
F16:Z009	F16:Z009	UA	UR	7523	UA7523	UR7523
F16:Z010	F16:Z010	UA	UR	7524	UA7524	UR7524
F16:Z011	F16:Z011	UA	UR	7525	UA7525	UR7525
F16:Z012	F16:Z012	UA	UR	7526	UA7526	UR7526
F16:Z013	F16:Z013	UA	UR	7527	UA7527	UR7527
F16:Z014	F16:Z014	UA	UR	7528	UA7528	UR7528
F16:Z015	F16:Z015	UA	UR	7529	UA7529	UR7529
F16:Z016	F16:Z016	UA	UR	7530	UA7530	UR7530
F16:Z017	F16:Z017	UA	UR	7531	UA7531	UR7531
F16:Z018	F16:Z018	UA	UR	7532	UA7532	UR7532
F16:Z019	F16:Z019	UA	UR	7533	UA7533	UR7533
F16:Z020	F16:Z020	UA	UR	7534	UA7534	UR7534
F16:Z021	F16:Z021	UA	UR	7535	UA7535	UR7535
F16:Z022	F16:Z022	UA	UR	7536	UA7536	UR7536
F16:Z023	F16:Z023	UA	UR	7537	UA7537	UR7537
F16:Z024	F16:Z024	UA	UR	7538	UA7538	UR7538
F16:Z025	F16:Z025	UA	UR	7539	UA7539	UR7539
F16:Z026	F16:Z026	UA	UR	7540	UA7540	UR7540
F16:Z027	F16:Z027	UA	UR	7541	UA7541	UR7541
F16:Z028	F16:Z028	UA	UR	7542	UA7542	UR7542
F16:Z029	F16:Z029	UA	UR	7543	UA7543	UR7543
F16:Z030	F16:Z030	UA	UR	7544	UA7544	UR7544
F16:Z031	F16:Z031	UA	UR	7545	UA7545	UR7545
F16:Z032	F16:Z032	UA	UR	7546	UA7546	UR7546
F16:S001	F16 Xmit LowBatt	XT	XR	7547	XT7547	XR7547
F16:S002	F16 XmitPollFail	NA	NS	7548	NA7548	NS7548
F16:S003	F16 Xmitter Jam	XQ	XH	7549	XQ7549	XH7549
F16:S004	F16 Cab Tamper	TA	TR	7550	TA7550	TR7550
F16:S005	F16 AC fail	AT	AR	7551	AT7551	AR7551
F16:S006	F16 Low Batt	YT	YR	7552	YT7552	YR7552
F16:S007	F16 LAN Fuse	YP	YQ	7553	YP7553	YQ7553
F16:S008	F16 DET Fuse	YP	YQ	7554	YP7554	YQ7554
F16:S009	F16 Low Volts	YP	YQ	7555	YP7555	YQ7555
F16:S010	F16 PS Fail	YP	YQ	7556	YP7556	YQ7556
F16:S011	F16 Batt Test	IA	IR	7557	IA7557	IR7557
F16:S012	F16 LAN Comms	EM	EN	7558	EM7558	EN7558
F16:S013	F16 Spare1	UA	UR	7559	UA7559	UR7559
F16:S014	F16 Spare2	UA	UR	7560	UA7560	UR7560
F17:Z001	F17:Z001	UA	UR	7561	UA7561	UR7561
F17:Z002	F17:Z002	UA	UR	7562	UA7562	UR7562
F17:Z003	F17:Z003	UA	UR	7563	UA7563	UR7563
F17:Z004	F17:Z004	UA	UR	7564	UA7564	UR7564
F17:Z005	F17:Z005	UA	UR	7565	UA7565	UR7565
F17:Z006	F17:Z006	UA	UR	7566	UA7566	UR7566
F17:Z007	F17:Z007	UA	UR	7567	UA7567	UR7567
F17:Z008	F17:Z008	UA	UR	7568	UA7568	UR7568
F17:Z009	F17:Z009	UA	UR	7569	UA7569	UR7569
F17:Z010	F17:Z010	UA	UR	7570	UA7570	UR7570
F17:Z011	F17:Z011	UA	UR	7571	UA7571	UR7571
F17:Z012	F17:Z012	UA	UR	7572	UA7572	UR7572
F17:Z013	F17:Z013	UA	UR	7573	UA7573	UR7573
F17:Z014	F17:Z014	UA	UR	7574	UA7574	UR7574
F17:Z015	F17:Z015	UA	UR	7575	UA7575	UR7575
F17:Z016	F17:Z016	UA	UR	7576	UA7576	UR7576
F17:Z017	F17:Z017	UA	UR	7577	UA7577	UR7577
F17:Z018	F17:Z018	UA	UR	7578	UA7578	UR7578

Integriti SIA DECIMAL Map. V21

F17:Z019	F17:Z019	UA	UR	7579	UA7579	UR7579
F17:Z020	F17:Z020	UA	UR	7580	UA7580	UR7580
F17:Z021	F17:Z021	UA	UR	7581	UA7581	UR7581
F17:Z022	F17:Z022	UA	UR	7582	UA7582	UR7582
F17:Z023	F17:Z023	UA	UR	7583	UA7583	UR7583
F17:Z024	F17:Z024	UA	UR	7584	UA7584	UR7584
F17:Z025	F17:Z025	UA	UR	7585	UA7585	UR7585
F17:Z026	F17:Z026	UA	UR	7586	UA7586	UR7586
F17:Z027	F17:Z027	UA	UR	7587	UA7587	UR7587
F17:Z028	F17:Z028	UA	UR	7588	UA7588	UR7588
F17:Z029	F17:Z029	UA	UR	7589	UA7589	UR7589
F17:Z030	F17:Z030	UA	UR	7590	UA7590	UR7590
F17:Z031	F17:Z031	UA	UR	7591	UA7591	UR7591
F17:Z032	F17:Z032	UA	UR	7592	UA7592	UR7592
F17:S001	F17 Xmit LowBatt	XT	XR	7593	XT7593	XR7593
F17:S002	F17 XmitPollFail	NA	NS	7594	NA7594	NS7594
F17:S003	F17 Xmitter Jam	XQ	XH	7595	XQ7595	XH7595
F17:S004	F17 Cab Tamper	TA	TR	7596	TA7596	TR7596
F17:S005	F17 AC fail	AT	AR	7597	AT7597	AR7597
F17:S006	F17 Low Batt	YT	YR	7598	YT7598	YR7598
F17:S007	F17 LAN Fuse	YP	YQ	7599	YP7599	YQ7599
F17:S008	F17 DET Fuse	YP	YQ	7600	YP7600	YQ7600
F17:S009	F17 Low Volts	YP	YQ	7601	YP7601	YQ7601
F17:S010	F17 PS Fail	YP	YQ	7602	YP7602	YQ7602
F17:S011	F17 Batt Test	IA	IR	7603	IA7603	IR7603
F17:S012	F17 LAN Comms	EM	EN	7604	EM7604	EN7604
F17:S013	F17 Spare1	UA	UR	7605	UA7605	UR7605
F17:S014	F17 Spare2	UA	UR	7606	UA7606	UR7606
F18:Z001	F18:Z001	UA	UR	7607	UA7607	UR7607
F18:Z002	F18:Z002	UA	UR	7608	UA7608	UR7608
F18:Z003	F18:Z003	UA	UR	7609	UA7609	UR7609
F18:Z004	F18:Z004	UA	UR	7610	UA7610	UR7610
F18:Z005	F18:Z005	UA	UR	7611	UA7611	UR7611
F18:Z006	F18:Z006	UA	UR	7612	UA7612	UR7612
F18:Z007	F18:Z007	UA	UR	7613	UA7613	UR7613
F18:Z008	F18:Z008	UA	UR	7614	UA7614	UR7614
F18:Z009	F18:Z009	UA	UR	7615	UA7615	UR7615
F18:Z010	F18:Z010	UA	UR	7616	UA7616	UR7616
F18:Z011	F18:Z011	UA	UR	7617	UA7617	UR7617
F18:Z012	F18:Z012	UA	UR	7618	UA7618	UR7618
F18:Z013	F18:Z013	UA	UR	7619	UA7619	UR7619
F18:Z014	F18:Z014	UA	UR	7620	UA7620	UR7620
F18:Z015	F18:Z015	UA	UR	7621	UA7621	UR7621
F18:Z016	F18:Z016	UA	UR	7622	UA7622	UR7622
F18:Z017	F18:Z017	UA	UR	7623	UA7623	UR7623
F18:Z018	F18:Z018	UA	UR	7624	UA7624	UR7624
F18:Z019	F18:Z019	UA	UR	7625	UA7625	UR7625
F18:Z020	F18:Z020	UA	UR	7626	UA7626	UR7626
F18:Z021	F18:Z021	UA	UR	7627	UA7627	UR7627
F18:Z022	F18:Z022	UA	UR	7628	UA7628	UR7628
F18:Z023	F18:Z023	UA	UR	7629	UA7629	UR7629
F18:Z024	F18:Z024	UA	UR	7630	UA7630	UR7630
F18:Z025	F18:Z025	UA	UR	7631	UA7631	UR7631
F18:Z026	F18:Z026	UA	UR	7632	UA7632	UR7632
F18:Z027	F18:Z027	UA	UR	7633	UA7633	UR7633
F18:Z028	F18:Z028	UA	UR	7634	UA7634	UR7634
F18:Z029	F18:Z029	UA	UR	7635	UA7635	UR7635
F18:Z030	F18:Z030	UA	UR	7636	UA7636	UR7636
F18:Z031	F18:Z031	UA	UR	7637	UA7637	UR7637
F18:Z032	F18:Z032	UA	UR	7638	UA7638	UR7638
F18:S001	F18 Xmit LowBatt	XT	XR	7639	XT7639	XR7639
F18:S002	F18 XmitPollFail	NA	NS	7640	NA7640	NS7640
F18:S003	F18 Xmitter Jam	XQ	XH	7641	XQ7641	XH7641
F18:S004	F18 Cab Tamper	TA	TR	7642	TA7642	TR7642
F18:S005	F18 AC fail	AT	AR	7643	AT7643	AR7643
F18:S006	F18 Low Batt	YT	YR	7644	YT7644	YR7644
F18:S007	F18 LAN Fuse	YP	YQ	7645	YP7645	YQ7645
F18:S008	F18 DET Fuse	YP	YQ	7646	YP7646	YQ7646
F18:S009	F18 Low Volts	YP	YQ	7647	YP7647	YQ7647
F18:S010	F18 PS Fail	YP	YQ	7648	YP7648	YQ7648

Integriti SIA DECIMAL Map. V21

F18:S011	F18 Batt Test	IA	IR	7649	IA7649	IR7649
F18:S012	F18 LAN Comms	EM	EN	7650	EM7650	EN7650
F18:S013	F18 Spare1	UA	UR	7651	UA7651	UR7651
F18:S014	F18 Spare2	UA	UR	7652	UA7652	UR7652
F19:Z001	F19:Z001	UA	UR	7653	UA7653	UR7653
F19:Z002	F19:Z002	UA	UR	7654	UA7654	UR7654
F19:Z003	F19:Z003	UA	UR	7655	UA7655	UR7655
F19:Z004	F19:Z004	UA	UR	7656	UA7656	UR7656
F19:Z005	F19:Z005	UA	UR	7657	UA7657	UR7657
F19:Z006	F19:Z006	UA	UR	7658	UA7658	UR7658
F19:Z007	F19:Z007	UA	UR	7659	UA7659	UR7659
F19:Z008	F19:Z008	UA	UR	7660	UA7660	UR7660
F19:Z009	F19:Z009	UA	UR	7661	UA7661	UR7661
F19:Z010	F19:Z010	UA	UR	7662	UA7662	UR7662
F19:Z011	F19:Z011	UA	UR	7663	UA7663	UR7663
F19:Z012	F19:Z012	UA	UR	7664	UA7664	UR7664
F19:Z013	F19:Z013	UA	UR	7665	UA7665	UR7665
F19:Z014	F19:Z014	UA	UR	7666	UA7666	UR7666
F19:Z015	F19:Z015	UA	UR	7667	UA7667	UR7667
F19:Z016	F19:Z016	UA	UR	7668	UA7668	UR7668
F19:Z017	F19:Z017	UA	UR	7669	UA7669	UR7669
F19:Z018	F19:Z018	UA	UR	7670	UA7670	UR7670
F19:Z019	F19:Z019	UA	UR	7671	UA7671	UR7671
F19:Z020	F19:Z020	UA	UR	7672	UA7672	UR7672
F19:Z021	F19:Z021	UA	UR	7673	UA7673	UR7673
F19:Z022	F19:Z022	UA	UR	7674	UA7674	UR7674
F19:Z023	F19:Z023	UA	UR	7675	UA7675	UR7675
F19:Z024	F19:Z024	UA	UR	7676	UA7676	UR7676
F19:Z025	F19:Z025	UA	UR	7677	UA7677	UR7677
F19:Z026	F19:Z026	UA	UR	7678	UA7678	UR7678
F19:Z027	F19:Z027	UA	UR	7679	UA7679	UR7679
F19:Z028	F19:Z028	UA	UR	7680	UA7680	UR7680
F19:Z029	F19:Z029	UA	UR	7681	UA7681	UR7681
F19:Z030	F19:Z030	UA	UR	7682	UA7682	UR7682
F19:Z031	F19:Z031	UA	UR	7683	UA7683	UR7683
F19:Z032	F19:Z032	UA	UR	7684	UA7684	UR7684
F19:S001	F19 Xmit LowBatt	XT	XR	7685	XT7685	XR7685
F19:S002	F19 XmitPollFail	NA	NS	7686	NA7686	NS7686
F19:S003	F19 Xmitter Jam	XQ	XH	7687	XQ7687	XH7687
F19:S004	F19 Cab Tamper	TA	TR	7688	TA7688	TR7688
F19:S005	F19 AC fail	AT	AR	7689	AT7689	AR7689
F19:S006	F19 Low Batt	YT	YR	7690	YT7690	YR7690
F19:S007	F19 LAN Fuse	YP	YQ	7691	YP7691	YQ7691
F19:S008	F19 DET Fuse	YP	YQ	7692	YP7692	YQ7692
F19:S009	F19 Low Volts	YP	YQ	7693	YP7693	YQ7693
F19:S010	F19 PS Fail	YP	YQ	7694	YP7694	YQ7694
F19:S011	F19 Batt Test	IA	IR	7695	IA7695	IR7695
F19:S012	F19 LAN Comms	EM	EN	7696	EM7696	EN7696
F19:S013	F19 Spare1	UA	UR	7697	UA7697	UR7697
F19:S014	F19 Spare2	UA	UR	7698	UA7698	UR7698
F20:Z001	F20:Z001	UA	UR	7699	UA7699	UR7699
F20:Z002	F20:Z002	UA	UR	7700	UA7700	UR7700
F20:Z003	F20:Z003	UA	UR	7701	UA7701	UR7701
F20:Z004	F20:Z004	UA	UR	7702	UA7702	UR7702
F20:Z005	F20:Z005	UA	UR	7703	UA7703	UR7703
F20:Z006	F20:Z006	UA	UR	7704	UA7704	UR7704
F20:Z007	F20:Z007	UA	UR	7705	UA7705	UR7705
F20:Z008	F20:Z008	UA	UR	7706	UA7706	UR7706
F20:Z009	F20:Z009	UA	UR	7707	UA7707	UR7707
F20:Z010	F20:Z010	UA	UR	7708	UA7708	UR7708
F20:Z011	F20:Z011	UA	UR	7709	UA7709	UR7709
F20:Z012	F20:Z012	UA	UR	7710	UA7710	UR7710
F20:Z013	F20:Z013	UA	UR	7711	UA7711	UR7711
F20:Z014	F20:Z014	UA	UR	7712	UA7712	UR7712
F20:Z015	F20:Z015	UA	UR	7713	UA7713	UR7713
F20:Z016	F20:Z016	UA	UR	7714	UA7714	UR7714
F20:Z017	F20:Z017	UA	UR	7715	UA7715	UR7715
F20:Z018	F20:Z018	UA	UR	7716	UA7716	UR7716
F20:Z019	F20:Z019	UA	UR	7717	UA7717	UR7717
F20:Z020	F20:Z020	UA	UR	7718	UA7718	UR7718

Integriti SIA DECIMAL Map. V21

F20:Z021	F20:Z021	UA	UR	7719	UA7719	UR7719
F20:Z022	F20:Z022	UA	UR	7720	UA7720	UR7720
F20:Z023	F20:Z023	UA	UR	7721	UA7721	UR7721
F20:Z024	F20:Z024	UA	UR	7722	UA7722	UR7722
F20:Z025	F20:Z025	UA	UR	7723	UA7723	UR7723
F20:Z026	F20:Z026	UA	UR	7724	UA7724	UR7724
F20:Z027	F20:Z027	UA	UR	7725	UA7725	UR7725
F20:Z028	F20:Z028	UA	UR	7726	UA7726	UR7726
F20:Z029	F20:Z029	UA	UR	7727	UA7727	UR7727
F20:Z030	F20:Z030	UA	UR	7728	UA7728	UR7728
F20:Z031	F20:Z031	UA	UR	7729	UA7729	UR7729
F20:Z032	F20:Z032	UA	UR	7730	UA7730	UR7730
F20:S001	F20 Xmit LowBatt	XT	XR	7731	XT7731	XR7731
F20:S002	F20 XmitPollFail	NA	NS	7732	NA7732	NS7732
F20:S003	F20 Xmitter Jam	XQ	XH	7733	XQ7733	XH7733
F20:S004	F20 Cab Tamper	TA	TR	7734	TA7734	TR7734
F20:S005	F20 AC fail	AT	AR	7735	AT7735	AR7735
F20:S006	F20 Low Batt	YT	YR	7736	YT7736	YR7736
F20:S007	F20 LAN Fuse	YP	YQ	7737	YP7737	YQ7737
F20:S008	F20 DET Fuse	YP	YQ	7738	YP7738	YQ7738
F20:S009	F20 Low Volts	YP	YQ	7739	YP7739	YQ7739
F20:S010	F20 PS Fail	YP	YQ	7740	YP7740	YQ7740
F20:S011	F20 Batt Test	IA	IR	7741	IA7741	IR7741
F20:S012	F20 LAN Comms	EM	EN	7742	EM7742	EN7742
F20:S013	F20 Spare1	UA	UR	7743	UA7743	UR7743
F20:S014	F20 Spare2	UA	UR	7744	UA7744	UR7744
F21:Z001	F21:Z001	UA	UR	7745	UA7745	UR7745
F21:Z002	F21:Z002	UA	UR	7746	UA7746	UR7746
F21:Z003	F21:Z003	UA	UR	7747	UA7747	UR7747
F21:Z004	F21:Z004	UA	UR	7748	UA7748	UR7748
F21:Z005	F21:Z005	UA	UR	7749	UA7749	UR7749
F21:Z006	F21:Z006	UA	UR	7750	UA7750	UR7750
F21:Z007	F21:Z007	UA	UR	7751	UA7751	UR7751
F21:Z008	F21:Z008	UA	UR	7752	UA7752	UR7752
F21:Z009	F21:Z009	UA	UR	7753	UA7753	UR7753
F21:Z010	F21:Z010	UA	UR	7754	UA7754	UR7754
F21:Z011	F21:Z011	UA	UR	7755	UA7755	UR7755
F21:Z012	F21:Z012	UA	UR	7756	UA7756	UR7756
F21:Z013	F21:Z013	UA	UR	7757	UA7757	UR7757
F21:Z014	F21:Z014	UA	UR	7758	UA7758	UR7758
F21:Z015	F21:Z015	UA	UR	7759	UA7759	UR7759
F21:Z016	F21:Z016	UA	UR	7760	UA7760	UR7760
F21:Z017	F21:Z017	UA	UR	7761	UA7761	UR7761
F21:Z018	F21:Z018	UA	UR	7762	UA7762	UR7762
F21:Z019	F21:Z019	UA	UR	7763	UA7763	UR7763
F21:Z020	F21:Z020	UA	UR	7764	UA7764	UR7764
F21:Z021	F21:Z021	UA	UR	7765	UA7765	UR7765
F21:Z022	F21:Z022	UA	UR	7766	UA7766	UR7766
F21:Z023	F21:Z023	UA	UR	7767	UA7767	UR7767
F21:Z024	F21:Z024	UA	UR	7768	UA7768	UR7768
F21:Z025	F21:Z025	UA	UR	7769	UA7769	UR7769
F21:Z026	F21:Z026	UA	UR	7770	UA7770	UR7770
F21:Z027	F21:Z027	UA	UR	7771	UA7771	UR7771
F21:Z028	F21:Z028	UA	UR	7772	UA7772	UR7772
F21:Z029	F21:Z029	UA	UR	7773	UA7773	UR7773
F21:Z030	F21:Z030	UA	UR	7774	UA7774	UR7774
F21:Z031	F21:Z031	UA	UR	7775	UA7775	UR7775
F21:Z032	F21:Z032	UA	UR	7776	UA7776	UR7776
F21:S001	F21 Xmit LowBatt	XT	XR	7777	XT7777	XR7777
F21:S002	F21 XmitPollFail	NA	NS	7778	NA7778	NS7778
F21:S003	F21 Xmitter Jam	XQ	XH	7779	XQ7779	XH7779
F21:S004	F21 Cab Tamper	TA	TR	7780	TA7780	TR7780
F21:S005	F21 AC fail	AT	AR	7781	AT7781	AR7781
F21:S006	F21 Low Batt	YT	YR	7782	YT7782	YR7782
F21:S007	F21 LAN Fuse	YP	YQ	7783	YP7783	YQ7783
F21:S008	F21 DET Fuse	YP	YQ	7784	YP7784	YQ7784
F21:S009	F21 Low Volts	YP	YQ	7785	YP7785	YQ7785
F21:S010	F21 PS Fail	YP	YQ	7786	YP7786	YQ7786
F21:S011	F21 Batt Test	IA	IR	7787	IA7787	IR7787
F21:S012	F21 LAN Comms	EM	EN	7788	EM7788	EN7788

Integriti SIA DECIMAL Map. V21

F21:S013	F21 Spare1	UA	UR	7789	UA7789	UR7789
F21:S014	F21 Spare2	UA	UR	7790	UA7790	UR7790
F22:Z001	F22:Z001	UA	UR	7791	UA7791	UR7791
F22:Z002	F22:Z002	UA	UR	7792	UA7792	UR7792
F22:Z003	F22:Z003	UA	UR	7793	UA7793	UR7793
F22:Z004	F22:Z004	UA	UR	7794	UA7794	UR7794
F22:Z005	F22:Z005	UA	UR	7795	UA7795	UR7795
F22:Z006	F22:Z006	UA	UR	7796	UA7796	UR7796
F22:Z007	F22:Z007	UA	UR	7797	UA7797	UR7797
F22:Z008	F22:Z008	UA	UR	7798	UA7798	UR7798
F22:Z009	F22:Z009	UA	UR	7799	UA7799	UR7799
F22:Z010	F22:Z010	UA	UR	7800	UA7800	UR7800
F22:Z011	F22:Z011	UA	UR	7801	UA7801	UR7801
F22:Z012	F22:Z012	UA	UR	7802	UA7802	UR7802
F22:Z013	F22:Z013	UA	UR	7803	UA7803	UR7803
F22:Z014	F22:Z014	UA	UR	7804	UA7804	UR7804
F22:Z015	F22:Z015	UA	UR	7805	UA7805	UR7805
F22:Z016	F22:Z016	UA	UR	7806	UA7806	UR7806
F22:Z017	F22:Z017	UA	UR	7807	UA7807	UR7807
F22:Z018	F22:Z018	UA	UR	7808	UA7808	UR7808
F22:Z019	F22:Z019	UA	UR	7809	UA7809	UR7809
F22:Z020	F22:Z020	UA	UR	7810	UA7810	UR7810
F22:Z021	F22:Z021	UA	UR	7811	UA7811	UR7811
F22:Z022	F22:Z022	UA	UR	7812	UA7812	UR7812
F22:Z023	F22:Z023	UA	UR	7813	UA7813	UR7813
F22:Z024	F22:Z024	UA	UR	7814	UA7814	UR7814
F22:Z025	F22:Z025	UA	UR	7815	UA7815	UR7815
F22:Z026	F22:Z026	UA	UR	7816	UA7816	UR7816
F22:Z027	F22:Z027	UA	UR	7817	UA7817	UR7817
F22:Z028	F22:Z028	UA	UR	7818	UA7818	UR7818
F22:Z029	F22:Z029	UA	UR	7819	UA7819	UR7819
F22:Z030	F22:Z030	UA	UR	7820	UA7820	UR7820
F22:Z031	F22:Z031	UA	UR	7821	UA7821	UR7821
F22:Z032	F22:Z032	UA	UR	7822	UA7822	UR7822
F22:S001	F22 Xmit LowBatt	XT	XR	7823	XT7823	XR7823
F22:S002	F22 XmitPollFail	NA	NS	7824	NA7824	NS7824
F22:S003	F22 Xmitter Jam	XQ	XH	7825	XQ7825	XH7825
F22:S004	F22 Cab Tamper	TA	TR	7826	TA7826	TR7826
F22:S005	F22 AC fail	AT	AR	7827	AT7827	AR7827
F22:S006	F22 Low Batt	YT	YR	7828	YT7828	YR7828
F22:S007	F22 LAN Fuse	YP	YQ	7829	YP7829	YQ7829
F22:S008	F22 DET Fuse	YP	YQ	7830	YP7830	YQ7830
F22:S009	F22 Low Volts	YP	YQ	7831	YP7831	YQ7831
F22:S010	F22 PS Fail	YP	YQ	7832	YP7832	YQ7832
F22:S011	F22 Batt Test	IA	IR	7833	IA7833	IR7833
F22:S012	F22 LAN Comms	EM	EN	7834	EM7834	EN7834
F22:S013	F22 Spare1	UA	UR	7835	UA7835	UR7835
F22:S014	F22 Spare2	UA	UR	7836	UA7836	UR7836
F23:Z001	F23:Z001	UA	UR	7837	UA7837	UR7837
F23:Z002	F23:Z002	UA	UR	7838	UA7838	UR7838
F23:Z003	F23:Z003	UA	UR	7839	UA7839	UR7839
F23:Z004	F23:Z004	UA	UR	7840	UA7840	UR7840
F23:Z005	F23:Z005	UA	UR	7841	UA7841	UR7841
F23:Z006	F23:Z006	UA	UR	7842	UA7842	UR7842
F23:Z007	F23:Z007	UA	UR	7843	UA7843	UR7843
F23:Z008	F23:Z008	UA	UR	7844	UA7844	UR7844
F23:Z009	F23:Z009	UA	UR	7845	UA7845	UR7845
F23:Z010	F23:Z010	UA	UR	7846	UA7846	UR7846
F23:Z011	F23:Z011	UA	UR	7847	UA7847	UR7847
F23:Z012	F23:Z012	UA	UR	7848	UA7848	UR7848
F23:Z013	F23:Z013	UA	UR	7849	UA7849	UR7849
F23:Z014	F23:Z014	UA	UR	7850	UA7850	UR7850
F23:Z015	F23:Z015	UA	UR	7851	UA7851	UR7851
F23:Z016	F23:Z016	UA	UR	7852	UA7852	UR7852
F23:Z017	F23:Z017	UA	UR	7853	UA7853	UR7853
F23:Z018	F23:Z018	UA	UR	7854	UA7854	UR7854
F23:Z019	F23:Z019	UA	UR	7855	UA7855	UR7855
F23:Z020	F23:Z020	UA	UR	7856	UA7856	UR7856
F23:Z021	F23:Z021	UA	UR	7857	UA7857	UR7857
F23:Z022	F23:Z022	UA	UR	7858	UA7858	UR7858

Integriti SIA DECIMAL Map. V21

F23:Z023	F23:Z023	UA	UR	7859	UA7859	UR7859
F23:Z024	F23:Z024	UA	UR	7860	UA7860	UR7860
F23:Z025	F23:Z025	UA	UR	7861	UA7861	UR7861
F23:Z026	F23:Z026	UA	UR	7862	UA7862	UR7862
F23:Z027	F23:Z027	UA	UR	7863	UA7863	UR7863
F23:Z028	F23:Z028	UA	UR	7864	UA7864	UR7864
F23:Z029	F23:Z029	UA	UR	7865	UA7865	UR7865
F23:Z030	F23:Z030	UA	UR	7866	UA7866	UR7866
F23:Z031	F23:Z031	UA	UR	7867	UA7867	UR7867
F23:Z032	F23:Z032	UA	UR	7868	UA7868	UR7868
F23:S001	F23 Xmit LowBatt	XT	XR	7869	XT7869	XR7869
F23:S002	F23 XmitPollFail	NA	NS	7870	NA7870	NS7870
F23:S003	F23 Xmitter Jam	XQ	XH	7871	XQ7871	XH7871
F23:S004	F23 Cab Tamper	TA	TR	7872	TA7872	TR7872
F23:S005	F23 AC fail	AT	AR	7873	AT7873	AR7873
F23:S006	F23 Low Batt	YT	YR	7874	YT7874	YR7874
F23:S007	F23 LAN Fuse	YP	YQ	7875	YP7875	YQ7875
F23:S008	F23 DET Fuse	YP	YQ	7876	YP7876	YQ7876
F23:S009	F23 Low Volts	YP	YQ	7877	YP7877	YQ7877
F23:S010	F23 PS Fail	YP	YQ	7878	YP7878	YQ7878
F23:S011	F23 Batt Test	IA	IR	7879	IA7879	IR7879
F23:S012	F23 LAN Comms	EM	EN	7880	EM7880	EN7880
F23:S013	F23 Spare1	UA	UR	7881	UA7881	UR7881
F23:S014	F23 Spare2	UA	UR	7882	UA7882	UR7882
F24:Z001	F24:Z001	UA	UR	7883	UA7883	UR7883
F24:Z002	F24:Z002	UA	UR	7884	UA7884	UR7884
F24:Z003	F24:Z003	UA	UR	7885	UA7885	UR7885
F24:Z004	F24:Z004	UA	UR	7886	UA7886	UR7886
F24:Z005	F24:Z005	UA	UR	7887	UA7887	UR7887
F24:Z006	F24:Z006	UA	UR	7888	UA7888	UR7888
F24:Z007	F24:Z007	UA	UR	7889	UA7889	UR7889
F24:Z008	F24:Z008	UA	UR	7890	UA7890	UR7890
F24:Z009	F24:Z009	UA	UR	7891	UA7891	UR7891
F24:Z010	F24:Z010	UA	UR	7892	UA7892	UR7892
F24:Z011	F24:Z011	UA	UR	7893	UA7893	UR7893
F24:Z012	F24:Z012	UA	UR	7894	UA7894	UR7894
F24:Z013	F24:Z013	UA	UR	7895	UA7895	UR7895
F24:Z014	F24:Z014	UA	UR	7896	UA7896	UR7896
F24:Z015	F24:Z015	UA	UR	7897	UA7897	UR7897
F24:Z016	F24:Z016	UA	UR	7898	UA7898	UR7898
F24:Z017	F24:Z017	UA	UR	7899	UA7899	UR7899
F24:Z018	F24:Z018	UA	UR	7900	UA7900	UR7900
F24:Z019	F24:Z019	UA	UR	7901	UA7901	UR7901
F24:Z020	F24:Z020	UA	UR	7902	UA7902	UR7902
F24:Z021	F24:Z021	UA	UR	7903	UA7903	UR7903
F24:Z022	F24:Z022	UA	UR	7904	UA7904	UR7904
F24:Z023	F24:Z023	UA	UR	7905	UA7905	UR7905
F24:Z024	F24:Z024	UA	UR	7906	UA7906	UR7906
F24:Z025	F24:Z025	UA	UR	7907	UA7907	UR7907
F24:Z026	F24:Z026	UA	UR	7908	UA7908	UR7908
F24:Z027	F24:Z027	UA	UR	7909	UA7909	UR7909
F24:Z028	F24:Z028	UA	UR	7910	UA7910	UR7910
F24:Z029	F24:Z029	UA	UR	7911	UA7911	UR7911
F24:Z030	F24:Z030	UA	UR	7912	UA7912	UR7912
F24:Z031	F24:Z031	UA	UR	7913	UA7913	UR7913
F24:Z032	F24:Z032	UA	UR	7914	UA7914	UR7914
F24:S001	F24 Xmit LowBatt	XT	XR	7915	XT7915	XR7915
F24:S002	F24 XmitPollFail	NA	NS	7916	NA7916	NS7916
F24:S003	F24 Xmitter Jam	XQ	XH	7917	XQ7917	XH7917
F24:S004	F24 Cab Tamper	TA	TR	7918	TA7918	TR7918
F24:S005	F24 AC fail	AT	AR	7919	AT7919	AR7919
F24:S006	F24 Low Batt	YT	YR	7920	YT7920	YR7920
F24:S007	F24 LAN Fuse	YP	YQ	7921	YP7921	YQ7921
F24:S008	F24 DET Fuse	YP	YQ	7922	YP7922	YQ7922
F24:S009	F24 Low Volts	YP	YQ	7923	YP7923	YQ7923
F24:S010	F24 PS Fail	YP	YQ	7924	YP7924	YQ7924
F24:S011	F24 Batt Test	IA	IR	7925	IA7925	IR7925
F24:S012	F24 LAN Comms	EM	EN	7926	EM7926	EN7926
F24:S013	F24 Spare1	UA	UR	7927	UA7927	UR7927
F24:S014	F24 Spare2	UA	UR	7928	UA7928	UR7928

Integriti SIA DECIMAL Map. V21

F25:Z001	F25:Z001	UA	UR	7929	UA7929	UR7929
F25:Z002	F25:Z002	UA	UR	7930	UA7930	UR7930
F25:Z003	F25:Z003	UA	UR	7931	UA7931	UR7931
F25:Z004	F25:Z004	UA	UR	7932	UA7932	UR7932
F25:Z005	F25:Z005	UA	UR	7933	UA7933	UR7933
F25:Z006	F25:Z006	UA	UR	7934	UA7934	UR7934
F25:Z007	F25:Z007	UA	UR	7935	UA7935	UR7935
F25:Z008	F25:Z008	UA	UR	7936	UA7936	UR7936
F25:Z009	F25:Z009	UA	UR	7937	UA7937	UR7937
F25:Z010	F25:Z010	UA	UR	7938	UA7938	UR7938
F25:Z011	F25:Z011	UA	UR	7939	UA7939	UR7939
F25:Z012	F25:Z012	UA	UR	7940	UA7940	UR7940
F25:Z013	F25:Z013	UA	UR	7941	UA7941	UR7941
F25:Z014	F25:Z014	UA	UR	7942	UA7942	UR7942
F25:Z015	F25:Z015	UA	UR	7943	UA7943	UR7943
F25:Z016	F25:Z016	UA	UR	7944	UA7944	UR7944
F25:Z017	F25:Z017	UA	UR	7945	UA7945	UR7945
F25:Z018	F25:Z018	UA	UR	7946	UA7946	UR7946
F25:Z019	F25:Z019	UA	UR	7947	UA7947	UR7947
F25:Z020	F25:Z020	UA	UR	7948	UA7948	UR7948
F25:Z021	F25:Z021	UA	UR	7949	UA7949	UR7949
F25:Z022	F25:Z022	UA	UR	7950	UA7950	UR7950
F25:Z023	F25:Z023	UA	UR	7951	UA7951	UR7951
F25:Z024	F25:Z024	UA	UR	7952	UA7952	UR7952
F25:Z025	F25:Z025	UA	UR	7953	UA7953	UR7953
F25:Z026	F25:Z026	UA	UR	7954	UA7954	UR7954
F25:Z027	F25:Z027	UA	UR	7955	UA7955	UR7955
F25:Z028	F25:Z028	UA	UR	7956	UA7956	UR7956
F25:Z029	F25:Z029	UA	UR	7957	UA7957	UR7957
F25:Z030	F25:Z030	UA	UR	7958	UA7958	UR7958
F25:Z031	F25:Z031	UA	UR	7959	UA7959	UR7959
F25:Z032	F25:Z032	UA	UR	7960	UA7960	UR7960
F25:S001	F25 Xmit LowBatt	XT	XR	7961	XT7961	XR7961
F25:S002	F25 XmitPollFail	NA	NS	7962	NA7962	NS7962
F25:S003	F25 Xmitter Jam	XQ	XH	7963	XQ7963	XH7963
F25:S004	F25 Cab Tamper	TA	TR	7964	TA7964	TR7964
F25:S005	F25 AC fail	AT	AR	7965	AT7965	AR7965
F25:S006	F25 Low Batt	YT	YR	7966	YT7966	YR7966
F25:S007	F25 LAN Fuse	YP	YQ	7967	YP7967	YQ7967
F25:S008	F25 DET Fuse	YP	YQ	7968	YP7968	YQ7968
F25:S009	F25 Low Volts	YP	YQ	7969	YP7969	YQ7969
F25:S010	F25 PS Fail	YP	YQ	7970	YP7970	YQ7970
F25:S011	F25 Batt Test	IA	IR	7971	IA7971	IR7971
F25:S012	F25 LAN Comms	EM	EN	7972	EM7972	EN7972
F25:S013	F25 Spare1	UA	UR	7973	UA7973	UR7973
F25:S014	F25 Spare2	UA	UR	7974	UA7974	UR7974
F26:Z001	F26:Z001	UA	UR	7975	UA7975	UR7975
F26:Z002	F26:Z002	UA	UR	7976	UA7976	UR7976
F26:Z003	F26:Z003	UA	UR	7977	UA7977	UR7977
F26:Z004	F26:Z004	UA	UR	7978	UA7978	UR7978
F26:Z005	F26:Z005	UA	UR	7979	UA7979	UR7979
F26:Z006	F26:Z006	UA	UR	7980	UA7980	UR7980
F26:Z007	F26:Z007	UA	UR	7981	UA7981	UR7981
F26:Z008	F26:Z008	UA	UR	7982	UA7982	UR7982
F26:Z009	F26:Z009	UA	UR	7983	UA7983	UR7983
F26:Z010	F26:Z010	UA	UR	7984	UA7984	UR7984
F26:Z011	F26:Z011	UA	UR	7985	UA7985	UR7985
F26:Z012	F26:Z012	UA	UR	7986	UA7986	UR7986
F26:Z013	F26:Z013	UA	UR	7987	UA7987	UR7987
F26:Z014	F26:Z014	UA	UR	7988	UA7988	UR7988
F26:Z015	F26:Z015	UA	UR	7989	UA7989	UR7989
F26:Z016	F26:Z016	UA	UR	7990	UA7990	UR7990
F26:Z017	F26:Z017	UA	UR	7991	UA7991	UR7991
F26:Z018	F26:Z018	UA	UR	7992	UA7992	UR7992
F26:Z019	F26:Z019	UA	UR	7993	UA7993	UR7993
F26:Z020	F26:Z020	UA	UR	7994	UA7994	UR7994
F26:Z021	F26:Z021	UA	UR	7995	UA7995	UR7995
F26:Z022	F26:Z022	UA	UR	7996	UA7996	UR7996
F26:Z023	F26:Z023	UA	UR	7997	UA7997	UR7997
F26:Z024	F26:Z024	UA	UR	7998	UA7998	UR7998

Integriti SIA DECIMAL Map. V21

F26:Z025	F26:Z025	UA	UR	7999	UA7999	UR7999
F26:Z026	F26:Z026	UA	UR	8000	UA8000	UR8000
F26:Z027	F26:Z027	UA	UR	8001	UA8001	UR8001
F26:Z028	F26:Z028	UA	UR	8002	UA8002	UR8002
F26:Z029	F26:Z029	UA	UR	8003	UA8003	UR8003
F26:Z030	F26:Z030	UA	UR	8004	UA8004	UR8004
F26:Z031	F26:Z031	UA	UR	8005	UA8005	UR8005
F26:Z032	F26:Z032	UA	UR	8006	UA8006	UR8006
F26:S001	F26 Xmit LowBatt	XT	XR	8007	XT8007	XR8007
F26:S002	F26 XmitPollFail	NA	NS	8008	NA8008	NS8008
F26:S003	F26 Xmitter Jam	XQ	XH	8009	XQ8009	XH8009
F26:S004	F26 Cab Tamper	TA	TR	8010	TA8010	TR8010
F26:S005	F26 AC fail	AT	AR	8011	AT8011	AR8011
F26:S006	F26 Low Batt	YT	YR	8012	YT8012	YR8012
F26:S007	F26 LAN Fuse	YP	YQ	8013	YP8013	YQ8013
F26:S008	F26 DET Fuse	YP	YQ	8014	YP8014	YQ8014
F26:S009	F26 Low Volts	YP	YQ	8015	YP8015	YQ8015
F26:S010	F26 PS Fail	YP	YQ	8016	YP8016	YQ8016
F26:S011	F26 Batt Test	IA	IR	8017	IA8017	IR8017
F26:S012	F26 LAN Comms	EM	EN	8018	EM8018	EN8018
F26:S013	F26 Spare1	UA	UR	8019	UA8019	UR8019
F26:S014	F26 Spare2	UA	UR	8020	UA8020	UR8020
F27:Z001	F27:Z001	UA	UR	8021	UA8021	UR8021
F27:Z002	F27:Z002	UA	UR	8022	UA8022	UR8022
F27:Z003	F27:Z003	UA	UR	8023	UA8023	UR8023
F27:Z004	F27:Z004	UA	UR	8024	UA8024	UR8024
F27:Z005	F27:Z005	UA	UR	8025	UA8025	UR8025
F27:Z006	F27:Z006	UA	UR	8026	UA8026	UR8026
F27:Z007	F27:Z007	UA	UR	8027	UA8027	UR8027
F27:Z008	F27:Z008	UA	UR	8028	UA8028	UR8028
F27:Z009	F27:Z009	UA	UR	8029	UA8029	UR8029
F27:Z010	F27:Z010	UA	UR	8030	UA8030	UR8030
F27:Z011	F27:Z011	UA	UR	8031	UA8031	UR8031
F27:Z012	F27:Z012	UA	UR	8032	UA8032	UR8032
F27:Z013	F27:Z013	UA	UR	8033	UA8033	UR8033
F27:Z014	F27:Z014	UA	UR	8034	UA8034	UR8034
F27:Z015	F27:Z015	UA	UR	8035	UA8035	UR8035
F27:Z016	F27:Z016	UA	UR	8036	UA8036	UR8036
F27:Z017	F27:Z017	UA	UR	8037	UA8037	UR8037
F27:Z018	F27:Z018	UA	UR	8038	UA8038	UR8038
F27:Z019	F27:Z019	UA	UR	8039	UA8039	UR8039
F27:Z020	F27:Z020	UA	UR	8040	UA8040	UR8040
F27:Z021	F27:Z021	UA	UR	8041	UA8041	UR8041
F27:Z022	F27:Z022	UA	UR	8042	UA8042	UR8042
F27:Z023	F27:Z023	UA	UR	8043	UA8043	UR8043
F27:Z024	F27:Z024	UA	UR	8044	UA8044	UR8044
F27:Z025	F27:Z025	UA	UR	8045	UA8045	UR8045
F27:Z026	F27:Z026	UA	UR	8046	UA8046	UR8046
F27:Z027	F27:Z027	UA	UR	8047	UA8047	UR8047
F27:Z028	F27:Z028	UA	UR	8048	UA8048	UR8048
F27:Z029	F27:Z029	UA	UR	8049	UA8049	UR8049
F27:Z030	F27:Z030	UA	UR	8050	UA8050	UR8050
F27:Z031	F27:Z031	UA	UR	8051	UA8051	UR8051
F27:Z032	F27:Z032	UA	UR	8052	UA8052	UR8052
F27:S001	F27 Xmit LowBatt	XT	XR	8053	XT8053	XR8053
F27:S002	F27 XmitPollFail	NA	NS	8054	NA8054	NS8054
F27:S003	F27 Xmitter Jam	XQ	XH	8055	XQ8055	XH8055
F27:S004	F27 Cab Tamper	TA	TR	8056	TA8056	TR8056
F27:S005	F27 AC fail	AT	AR	8057	AT8057	AR8057
F27:S006	F27 Low Batt	YT	YR	8058	YT8058	YR8058
F27:S007	F27 LAN Fuse	YP	YQ	8059	YP8059	YQ8059
F27:S008	F27 DET Fuse	YP	YQ	8060	YP8060	YQ8060
F27:S009	F27 Low Volts	YP	YQ	8061	YP8061	YQ8061
F27:S010	F27 PS Fail	YP	YQ	8062	YP8062	YQ8062
F27:S011	F27 Batt Test	IA	IR	8063	IA8063	IR8063
F27:S012	F27 LAN Comms	EM	EN	8064	EM8064	EN8064
F27:S013	F27 Spare1	UA	UR	8065	UA8065	UR8065
F27:S014	F27 Spare2	UA	UR	8066	UA8066	UR8066
F28:Z001	F28:Z001	UA	UR	8067	UA8067	UR8067
F28:Z002	F28:Z002	UA	UR	8068	UA8068	UR8068

Integriti SIA DECIMAL Map. V21

F28:Z003	F28:Z003	UA	UR	8069	UA8069	UR8069
F28:Z004	F28:Z004	UA	UR	8070	UA8070	UR8070
F28:Z005	F28:Z005	UA	UR	8071	UA8071	UR8071
F28:Z006	F28:Z006	UA	UR	8072	UA8072	UR8072
F28:Z007	F28:Z007	UA	UR	8073	UA8073	UR8073
F28:Z008	F28:Z008	UA	UR	8074	UA8074	UR8074
F28:Z009	F28:Z009	UA	UR	8075	UA8075	UR8075
F28:Z010	F28:Z010	UA	UR	8076	UA8076	UR8076
F28:Z011	F28:Z011	UA	UR	8077	UA8077	UR8077
F28:Z012	F28:Z012	UA	UR	8078	UA8078	UR8078
F28:Z013	F28:Z013	UA	UR	8079	UA8079	UR8079
F28:Z014	F28:Z014	UA	UR	8080	UA8080	UR8080
F28:Z015	F28:Z015	UA	UR	8081	UA8081	UR8081
F28:Z016	F28:Z016	UA	UR	8082	UA8082	UR8082
F28:Z017	F28:Z017	UA	UR	8083	UA8083	UR8083
F28:Z018	F28:Z018	UA	UR	8084	UA8084	UR8084
F28:Z019	F28:Z019	UA	UR	8085	UA8085	UR8085
F28:Z020	F28:Z020	UA	UR	8086	UA8086	UR8086
F28:Z021	F28:Z021	UA	UR	8087	UA8087	UR8087
F28:Z022	F28:Z022	UA	UR	8088	UA8088	UR8088
F28:Z023	F28:Z023	UA	UR	8089	UA8089	UR8089
F28:Z024	F28:Z024	UA	UR	8090	UA8090	UR8090
F28:Z025	F28:Z025	UA	UR	8091	UA8091	UR8091
F28:Z026	F28:Z026	UA	UR	8092	UA8092	UR8092
F28:Z027	F28:Z027	UA	UR	8093	UA8093	UR8093
F28:Z028	F28:Z028	UA	UR	8094	UA8094	UR8094
F28:Z029	F28:Z029	UA	UR	8095	UA8095	UR8095
F28:Z030	F28:Z030	UA	UR	8096	UA8096	UR8096
F28:Z031	F28:Z031	UA	UR	8097	UA8097	UR8097
F28:Z032	F28:Z032	UA	UR	8098	UA8098	UR8098
F28:S001	F28 Xmit LowBatt	XT	XR	8099	XT8099	XR8099
F28:S002	F28 XmitPollFail	NA	NS	8100	NA8100	NS8100
F28:S003	F28 Xmitter Jam	XQ	XH	8101	XQ8101	XH8101
F28:S004	F28 Cab Tamper	TA	TR	8102	TA8102	TR8102
F28:S005	F28 AC fail	AT	AR	8103	AT8103	AR8103
F28:S006	F28 Low Batt	YT	YR	8104	YT8104	YR8104
F28:S007	F28 LAN Fuse	YP	YQ	8105	YP8105	YQ8105
F28:S008	F28 DET Fuse	YP	YQ	8106	YP8106	YQ8106
F28:S009	F28 Low Volts	YP	YQ	8107	YP8107	YQ8107
F28:S010	F28 PS Fail	YP	YQ	8108	YP8108	YQ8108
F28:S011	F28 Batt Test	IA	IR	8109	IA8109	IR8109
F28:S012	F28 LAN Comms	EM	EN	8110	EM8110	EN8110
F28:S013	F28 Spare1	UA	UR	8111	UA8111	UR8111
F28:S014	F28 Spare2	UA	UR	8112	UA8112	UR8112
F29:Z001	F29:Z001	UA	UR	8113	UA8113	UR8113
F29:Z002	F29:Z002	UA	UR	8114	UA8114	UR8114
F29:Z003	F29:Z003	UA	UR	8115	UA8115	UR8115
F29:Z004	F29:Z004	UA	UR	8116	UA8116	UR8116
F29:Z005	F29:Z005	UA	UR	8117	UA8117	UR8117
F29:Z006	F29:Z006	UA	UR	8118	UA8118	UR8118
F29:Z007	F29:Z007	UA	UR	8119	UA8119	UR8119
F29:Z008	F29:Z008	UA	UR	8120	UA8120	UR8120
F29:Z009	F29:Z009	UA	UR	8121	UA8121	UR8121
F29:Z010	F29:Z010	UA	UR	8122	UA8122	UR8122
F29:Z011	F29:Z011	UA	UR	8123	UA8123	UR8123
F29:Z012	F29:Z012	UA	UR	8124	UA8124	UR8124
F29:Z013	F29:Z013	UA	UR	8125	UA8125	UR8125
F29:Z014	F29:Z014	UA	UR	8126	UA8126	UR8126
F29:Z015	F29:Z015	UA	UR	8127	UA8127	UR8127
F29:Z016	F29:Z016	UA	UR	8128	UA8128	UR8128
F29:Z017	F29:Z017	UA	UR	8129	UA8129	UR8129
F29:Z018	F29:Z018	UA	UR	8130	UA8130	UR8130
F29:Z019	F29:Z019	UA	UR	8131	UA8131	UR8131
F29:Z020	F29:Z020	UA	UR	8132	UA8132	UR8132
F29:Z021	F29:Z021	UA	UR	8133	UA8133	UR8133
F29:Z022	F29:Z022	UA	UR	8134	UA8134	UR8134
F29:Z023	F29:Z023	UA	UR	8135	UA8135	UR8135
F29:Z024	F29:Z024	UA	UR	8136	UA8136	UR8136
F29:Z025	F29:Z025	UA	UR	8137	UA8137	UR8137
F29:Z026	F29:Z026	UA	UR	8138	UA8138	UR8138

Integriti SIA DECIMAL Map. V21

F29:Z027	F29:Z027	UA	UR	8139	UA8139	UR8139
F29:Z028	F29:Z028	UA	UR	8140	UA8140	UR8140
F29:Z029	F29:Z029	UA	UR	8141	UA8141	UR8141
F29:Z030	F29:Z030	UA	UR	8142	UA8142	UR8142
F29:Z031	F29:Z031	UA	UR	8143	UA8143	UR8143
F29:Z032	F29:Z032	UA	UR	8144	UA8144	UR8144
F29:S001	F29 Xmit LowBatt	XT	XR	8145	XT8145	XR8145
F29:S002	F29 XmitPollFail	NA	NS	8146	NA8146	NS8146
F29:S003	F29 Xmitter Jam	XQ	XH	8147	XQ8147	XH8147
F29:S004	F29 Cab Tamper	TA	TR	8148	TA8148	TR8148
F29:S005	F29 AC fail	AT	AR	8149	AT8149	AR8149
F29:S006	F29 Low Batt	YT	YR	8150	YT8150	YR8150
F29:S007	F29 LAN Fuse	YP	YQ	8151	YP8151	YQ8151
F29:S008	F29 DET Fuse	YP	YQ	8152	YP8152	YQ8152
F29:S009	F29 Low Volts	YP	YQ	8153	YP8153	YQ8153
F29:S010	F29 PS Fail	YP	YQ	8154	YP8154	YQ8154
F29:S011	F29 Batt Test	IA	IR	8155	IA8155	IR8155
F29:S012	F29 LAN Comms	EM	EN	8156	EM8156	EN8156
F29:S013	F29 Spare1	UA	UR	8157	UA8157	UR8157
F29:S014	F29 Spare2	UA	UR	8158	UA8158	UR8158
F30:Z001	F30:Z001	UA	UR	8159	UA8159	UR8159
F30:Z002	F30:Z002	UA	UR	8160	UA8160	UR8160
F30:Z003	F30:Z003	UA	UR	8161	UA8161	UR8161
F30:Z004	F30:Z004	UA	UR	8162	UA8162	UR8162
F30:Z005	F30:Z005	UA	UR	8163	UA8163	UR8163
F30:Z006	F30:Z006	UA	UR	8164	UA8164	UR8164
F30:Z007	F30:Z007	UA	UR	8165	UA8165	UR8165
F30:Z008	F30:Z008	UA	UR	8166	UA8166	UR8166
F30:Z009	F30:Z009	UA	UR	8167	UA8167	UR8167
F30:Z010	F30:Z010	UA	UR	8168	UA8168	UR8168
F30:Z011	F30:Z011	UA	UR	9999	UA9999	UR9999
F30:Z012	F30:Z012	UA	UR	9999	UA9999	UR9999
F30:Z013	F30:Z013	UA	UR	9999	UA9999	UR9999
F30:Z014	F30:Z014	UA	UR	9999	UA9999	UR9999
F30:Z015	F30:Z015	UA	UR	9999	UA9999	UR9999
F30:Z016	F30:Z016	UA	UR	9999	UA9999	UR9999
F30:Z017	F30:Z017	UA	UR	9999	UA9999	UR9999
F30:Z018	F30:Z018	UA	UR	9999	UA9999	UR9999
F30:Z019	F30:Z019	UA	UR	9999	UA9999	UR9999
F30:Z020	F30:Z020	UA	UR	9999	UA9999	UR9999
F30:Z021	F30:Z021	UA	UR	9999	UA9999	UR9999
F30:Z022	F30:Z022	UA	UR	9999	UA9999	UR9999
F30:Z023	F30:Z023	UA	UR	9999	UA9999	UR9999
F30:Z024	F30:Z024	UA	UR	9999	UA9999	UR9999
F30:Z025	F30:Z025	UA	UR	9999	UA9999	UR9999
F30:Z026	F30:Z026	UA	UR	9999	UA9999	UR9999
F30:Z027	F30:Z027	UA	UR	9999	UA9999	UR9999
F30:Z028	F30:Z028	UA	UR	9999	UA9999	UR9999
F30:Z029	F30:Z029	UA	UR	9999	UA9999	UR9999
F30:Z030	F30:Z030	UA	UR	9999	UA9999	UR9999
F30:Z031	F30:Z031	UA	UR	9999	UA9999	UR9999
F30:Z032	F30:Z032	UA	UR	9999	UA9999	UR9999
F30:S001	F30 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F30:S002	F30 XmitPollFail	NA	NS	9999	NA9999	NS9999
F30:S003	F30 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F30:S004	F30 Cab Tamper	TA	TR	9999	TA9999	TR9999
F30:S005	F30 AC fail	AT	AR	9999	AT9999	AR9999
F30:S006	F30 Low Batt	YT	YR	9999	YT9999	YR9999
F30:S007	F30 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F30:S008	F30 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F30:S009	F30 Low Volts	YP	YQ	9999	YP9999	YQ9999
F30:S010	F30 PS Fail	YP	YQ	9999	YP9999	YQ9999
F30:S011	F30 Batt Test	IA	IR	9999	IA9999	IR9999
F30:S012	F30 LAN Comms	EM	EN	9999	EM9999	EN9999
F30:S013	F30 Spare1	UA	UR	9999	UA9999	UR9999
F30:S014	F30 Spare2	UA	UR	9999	UA9999	UR9999
F31:Z001	F31:Z001	UA	UR	9999	UA9999	UR9999
F31:Z002	F31:Z002	UA	UR	9999	UA9999	UR9999
F31:Z003	F31:Z003	UA	UR	9999	UA9999	UR9999
F31:Z004	F31:Z004	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F31:Z005	F31:Z005	UA	UR	9999	UA9999	UR9999
F31:Z006	F31:Z006	UA	UR	9999	UA9999	UR9999
F31:Z007	F31:Z007	UA	UR	9999	UA9999	UR9999
F31:Z008	F31:Z008	UA	UR	9999	UA9999	UR9999
F31:Z009	F31:Z009	UA	UR	9999	UA9999	UR9999
F31:Z010	F31:Z010	UA	UR	9999	UA9999	UR9999
F31:Z011	F31:Z011	UA	UR	9999	UA9999	UR9999
F31:Z012	F31:Z012	UA	UR	9999	UA9999	UR9999
F31:Z013	F31:Z013	UA	UR	9999	UA9999	UR9999
F31:Z014	F31:Z014	UA	UR	9999	UA9999	UR9999
F31:Z015	F31:Z015	UA	UR	9999	UA9999	UR9999
F31:Z016	F31:Z016	UA	UR	9999	UA9999	UR9999
F31:Z017	F31:Z017	UA	UR	9999	UA9999	UR9999
F31:Z018	F31:Z018	UA	UR	9999	UA9999	UR9999
F31:Z019	F31:Z019	UA	UR	9999	UA9999	UR9999
F31:Z020	F31:Z020	UA	UR	9999	UA9999	UR9999
F31:Z021	F31:Z021	UA	UR	9999	UA9999	UR9999
F31:Z022	F31:Z022	UA	UR	9999	UA9999	UR9999
F31:Z023	F31:Z023	UA	UR	9999	UA9999	UR9999
F31:Z024	F31:Z024	UA	UR	9999	UA9999	UR9999
F31:Z025	F31:Z025	UA	UR	9999	UA9999	UR9999
F31:Z026	F31:Z026	UA	UR	9999	UA9999	UR9999
F31:Z027	F31:Z027	UA	UR	9999	UA9999	UR9999
F31:Z028	F31:Z028	UA	UR	9999	UA9999	UR9999
F31:Z029	F31:Z029	UA	UR	9999	UA9999	UR9999
F31:Z030	F31:Z030	UA	UR	9999	UA9999	UR9999
F31:Z031	F31:Z031	UA	UR	9999	UA9999	UR9999
F31:Z032	F31:Z032	UA	UR	9999	UA9999	UR9999
F31:S001	F31 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F31:S002	F31 XmitPollFail	NA	NS	9999	NA9999	NS9999
F31:S003	F31 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F31:S004	F31 Cab Tamper	TA	TR	9999	TA9999	TR9999
F31:S005	F31 AC fail	AT	AR	9999	AT9999	AR9999
F31:S006	F31 Low Batt	YT	YR	9999	YT9999	YR9999
F31:S007	F31 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F31:S008	F31 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F31:S009	F31 Low Volts	YP	YQ	9999	YP9999	YQ9999
F31:S010	F31 PS Fail	YP	YQ	9999	YP9999	YQ9999
F31:S011	F31 Batt Test	IA	IR	9999	IA9999	IR9999
F31:S012	F31 LAN Comms	EM	EN	9999	EM9999	EN9999
F31:S013	F31 Spare1	UA	UR	9999	UA9999	UR9999
F31:S014	F31 Spare2	UA	UR	9999	UA9999	UR9999
F32:Z001	F32:Z001	UA	UR	9999	UA9999	UR9999
F32:Z002	F32:Z002	UA	UR	9999	UA9999	UR9999
F32:Z003	F32:Z003	UA	UR	9999	UA9999	UR9999
F32:Z004	F32:Z004	UA	UR	9999	UA9999	UR9999
F32:Z005	F32:Z005	UA	UR	9999	UA9999	UR9999
F32:Z006	F32:Z006	UA	UR	9999	UA9999	UR9999
F32:Z007	F32:Z007	UA	UR	9999	UA9999	UR9999
F32:Z008	F32:Z008	UA	UR	9999	UA9999	UR9999
F32:Z009	F32:Z009	UA	UR	9999	UA9999	UR9999
F32:Z010	F32:Z010	UA	UR	9999	UA9999	UR9999
F32:Z011	F32:Z011	UA	UR	9999	UA9999	UR9999
F32:Z012	F32:Z012	UA	UR	9999	UA9999	UR9999
F32:Z013	F32:Z013	UA	UR	9999	UA9999	UR9999
F32:Z014	F32:Z014	UA	UR	9999	UA9999	UR9999
F32:Z015	F32:Z015	UA	UR	9999	UA9999	UR9999
F32:Z016	F32:Z016	UA	UR	9999	UA9999	UR9999
F32:Z017	F32:Z017	UA	UR	9999	UA9999	UR9999
F32:Z018	F32:Z018	UA	UR	9999	UA9999	UR9999
F32:Z019	F32:Z019	UA	UR	9999	UA9999	UR9999
F32:Z020	F32:Z020	UA	UR	9999	UA9999	UR9999
F32:Z021	F32:Z021	UA	UR	9999	UA9999	UR9999
F32:Z022	F32:Z022	UA	UR	9999	UA9999	UR9999
F32:Z023	F32:Z023	UA	UR	9999	UA9999	UR9999
F32:Z024	F32:Z024	UA	UR	9999	UA9999	UR9999
F32:Z025	F32:Z025	UA	UR	9999	UA9999	UR9999
F32:Z026	F32:Z026	UA	UR	9999	UA9999	UR9999
F32:Z027	F32:Z027	UA	UR	9999	UA9999	UR9999
F32:Z028	F32:Z028	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F32:Z029	F32:Z029	UA	UR	9999	UA9999	UR9999
F32:Z030	F32:Z030	UA	UR	9999	UA9999	UR9999
F32:Z031	F32:Z031	UA	UR	9999	UA9999	UR9999
F32:Z032	F32:Z032	UA	UR	9999	UA9999	UR9999
F32:S001	F32 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F32:S002	F32 XmitPollFail	NA	NS	9999	NA9999	NS9999
F32:S003	F32 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F32:S004	F32 Cab Tamper	TA	TR	9999	TA9999	TR9999
F32:S005	F32 AC fail	AT	AR	9999	AT9999	AR9999
F32:S006	F32 Low Batt	YT	YR	9999	YT9999	YR9999
F32:S007	F32 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F32:S008	F32 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F32:S009	F32 Low Volts	YP	YQ	9999	YP9999	YQ9999
F32:S010	F32 PS Fail	YP	YQ	9999	YP9999	YQ9999
F32:S011	F32 Batt Test	IA	IR	9999	IA9999	IR9999
F32:S012	F32 LAN Comms	EM	EN	9999	EM9999	EN9999
F32:S013	F32 Spare1	UA	UR	9999	UA9999	UR9999
F32:S014	F32 Spare2	UA	UR	9999	UA9999	UR9999
F33:Z001	F33:Z001	UA	UR	9999	UA9999	UR9999
F33:Z002	F33:Z002	UA	UR	9999	UA9999	UR9999
F33:Z003	F33:Z003	UA	UR	9999	UA9999	UR9999
F33:Z004	F33:Z004	UA	UR	9999	UA9999	UR9999
F33:Z005	F33:Z005	UA	UR	9999	UA9999	UR9999
F33:Z006	F33:Z006	UA	UR	9999	UA9999	UR9999
F33:Z007	F33:Z007	UA	UR	9999	UA9999	UR9999
F33:Z008	F33:Z008	UA	UR	9999	UA9999	UR9999
F33:Z009	F33:Z009	UA	UR	9999	UA9999	UR9999
F33:Z010	F33:Z010	UA	UR	9999	UA9999	UR9999
F33:Z011	F33:Z011	UA	UR	9999	UA9999	UR9999
F33:Z012	F33:Z012	UA	UR	9999	UA9999	UR9999
F33:Z013	F33:Z013	UA	UR	9999	UA9999	UR9999
F33:Z014	F33:Z014	UA	UR	9999	UA9999	UR9999
F33:Z015	F33:Z015	UA	UR	9999	UA9999	UR9999
F33:Z016	F33:Z016	UA	UR	9999	UA9999	UR9999
F33:Z017	F33:Z017	UA	UR	9999	UA9999	UR9999
F33:Z018	F33:Z018	UA	UR	9999	UA9999	UR9999
F33:Z019	F33:Z019	UA	UR	9999	UA9999	UR9999
F33:Z020	F33:Z020	UA	UR	9999	UA9999	UR9999
F33:Z021	F33:Z021	UA	UR	9999	UA9999	UR9999
F33:Z022	F33:Z022	UA	UR	9999	UA9999	UR9999
F33:Z023	F33:Z023	UA	UR	9999	UA9999	UR9999
F33:Z024	F33:Z024	UA	UR	9999	UA9999	UR9999
F33:Z025	F33:Z025	UA	UR	9999	UA9999	UR9999
F33:Z026	F33:Z026	UA	UR	9999	UA9999	UR9999
F33:Z027	F33:Z027	UA	UR	9999	UA9999	UR9999
F33:Z028	F33:Z028	UA	UR	9999	UA9999	UR9999
F33:Z029	F33:Z029	UA	UR	9999	UA9999	UR9999
F33:Z030	F33:Z030	UA	UR	9999	UA9999	UR9999
F33:Z031	F33:Z031	UA	UR	9999	UA9999	UR9999
F33:Z032	F33:Z032	UA	UR	9999	UA9999	UR9999
F33:S001	F33 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F33:S002	F33 XmitPollFail	NA	NS	9999	NA9999	NS9999
F33:S003	F33 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F33:S004	F33 Cab Tamper	TA	TR	9999	TA9999	TR9999
F33:S005	F33 AC fail	AT	AR	9999	AT9999	AR9999
F33:S006	F33 Low Batt	YT	YR	9999	YT9999	YR9999
F33:S007	F33 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F33:S008	F33 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F33:S009	F33 Low Volts	YP	YQ	9999	YP9999	YQ9999
F33:S010	F33 PS Fail	YP	YQ	9999	YP9999	YQ9999
F33:S011	F33 Batt Test	IA	IR	9999	IA9999	IR9999
F33:S012	F33 LAN Comms	EM	EN	9999	EM9999	EN9999
F33:S013	F33 Spare1	UA	UR	9999	UA9999	UR9999
F33:S014	F33 Spare2	UA	UR	9999	UA9999	UR9999
F34:Z001	F34:Z001	UA	UR	9999	UA9999	UR9999
F34:Z002	F34:Z002	UA	UR	9999	UA9999	UR9999
F34:Z003	F34:Z003	UA	UR	9999	UA9999	UR9999
F34:Z004	F34:Z004	UA	UR	9999	UA9999	UR9999
F34:Z005	F34:Z005	UA	UR	9999	UA9999	UR9999
F34:Z006	F34:Z006	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F34:Z007	F34:Z007	UA	UR	9999	UA9999	UR9999
F34:Z008	F34:Z008	UA	UR	9999	UA9999	UR9999
F34:Z009	F34:Z009	UA	UR	9999	UA9999	UR9999
F34:Z010	F34:Z010	UA	UR	9999	UA9999	UR9999
F34:Z011	F34:Z011	UA	UR	9999	UA9999	UR9999
F34:Z012	F34:Z012	UA	UR	9999	UA9999	UR9999
F34:Z013	F34:Z013	UA	UR	9999	UA9999	UR9999
F34:Z014	F34:Z014	UA	UR	9999	UA9999	UR9999
F34:Z015	F34:Z015	UA	UR	9999	UA9999	UR9999
F34:Z016	F34:Z016	UA	UR	9999	UA9999	UR9999
F34:Z017	F34:Z017	UA	UR	9999	UA9999	UR9999
F34:Z018	F34:Z018	UA	UR	9999	UA9999	UR9999
F34:Z019	F34:Z019	UA	UR	9999	UA9999	UR9999
F34:Z020	F34:Z020	UA	UR	9999	UA9999	UR9999
F34:Z021	F34:Z021	UA	UR	9999	UA9999	UR9999
F34:Z022	F34:Z022	UA	UR	9999	UA9999	UR9999
F34:Z023	F34:Z023	UA	UR	9999	UA9999	UR9999
F34:Z024	F34:Z024	UA	UR	9999	UA9999	UR9999
F34:Z025	F34:Z025	UA	UR	9999	UA9999	UR9999
F34:Z026	F34:Z026	UA	UR	9999	UA9999	UR9999
F34:Z027	F34:Z027	UA	UR	9999	UA9999	UR9999
F34:Z028	F34:Z028	UA	UR	9999	UA9999	UR9999
F34:Z029	F34:Z029	UA	UR	9999	UA9999	UR9999
F34:Z030	F34:Z030	UA	UR	9999	UA9999	UR9999
F34:Z031	F34:Z031	UA	UR	9999	UA9999	UR9999
F34:Z032	F34:Z032	UA	UR	9999	UA9999	UR9999
F34:S001	F34 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F34:S002	F34 XmitPollFail	NA	NS	9999	NA9999	NS9999
F34:S003	F34 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F34:S004	F34 Cab Tamper	TA	TR	9999	TA9999	TR9999
F34:S005	F34 AC fail	AT	AR	9999	AT9999	AR9999
F34:S006	F34 Low Batt	YT	YR	9999	YT9999	YR9999
F34:S007	F34 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F34:S008	F34 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F34:S009	F34 Low Volts	YP	YQ	9999	YP9999	YQ9999
F34:S010	F34 PS Fail	YP	YQ	9999	YP9999	YQ9999
F34:S011	F34 Batt Test	IA	IR	9999	IA9999	IR9999
F34:S012	F34 LAN Comms	EM	EN	9999	EM9999	EN9999
F34:S013	F34 Spare1	UA	UR	9999	UA9999	UR9999
F34:S014	F34 Spare2	UA	UR	9999	UA9999	UR9999
F35:Z001	F35:Z001	UA	UR	9999	UA9999	UR9999
F35:Z002	F35:Z002	UA	UR	9999	UA9999	UR9999
F35:Z003	F35:Z003	UA	UR	9999	UA9999	UR9999
F35:Z004	F35:Z004	UA	UR	9999	UA9999	UR9999
F35:Z005	F35:Z005	UA	UR	9999	UA9999	UR9999
F35:Z006	F35:Z006	UA	UR	9999	UA9999	UR9999
F35:Z007	F35:Z007	UA	UR	9999	UA9999	UR9999
F35:Z008	F35:Z008	UA	UR	9999	UA9999	UR9999
F35:Z009	F35:Z009	UA	UR	9999	UA9999	UR9999
F35:Z010	F35:Z010	UA	UR	9999	UA9999	UR9999
F35:Z011	F35:Z011	UA	UR	9999	UA9999	UR9999
F35:Z012	F35:Z012	UA	UR	9999	UA9999	UR9999
F35:Z013	F35:Z013	UA	UR	9999	UA9999	UR9999
F35:Z014	F35:Z014	UA	UR	9999	UA9999	UR9999
F35:Z015	F35:Z015	UA	UR	9999	UA9999	UR9999
F35:Z016	F35:Z016	UA	UR	9999	UA9999	UR9999
F35:Z017	F35:Z017	UA	UR	9999	UA9999	UR9999
F35:Z018	F35:Z018	UA	UR	9999	UA9999	UR9999
F35:Z019	F35:Z019	UA	UR	9999	UA9999	UR9999
F35:Z020	F35:Z020	UA	UR	9999	UA9999	UR9999
F35:Z021	F35:Z021	UA	UR	9999	UA9999	UR9999
F35:Z022	F35:Z022	UA	UR	9999	UA9999	UR9999
F35:Z023	F35:Z023	UA	UR	9999	UA9999	UR9999
F35:Z024	F35:Z024	UA	UR	9999	UA9999	UR9999
F35:Z025	F35:Z025	UA	UR	9999	UA9999	UR9999
F35:Z026	F35:Z026	UA	UR	9999	UA9999	UR9999
F35:Z027	F35:Z027	UA	UR	9999	UA9999	UR9999
F35:Z028	F35:Z028	UA	UR	9999	UA9999	UR9999
F35:Z029	F35:Z029	UA	UR	9999	UA9999	UR9999
F35:Z030	F35:Z030	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F35:Z031	F35:Z031	UA	UR	9999	UA9999	UR9999
F35:Z032	F35:Z032	UA	UR	9999	UA9999	UR9999
F35:S001	F35 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F35:S002	F35 XmitPollFail	NA	NS	9999	NA9999	NS9999
F35:S003	F35 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F35:S004	F35 Cab Tamper	TA	TR	9999	TA9999	TR9999
F35:S005	F35 AC fail	AT	AR	9999	AT9999	AR9999
F35:S006	F35 Low Batt	YT	YR	9999	YT9999	YR9999
F35:S007	F35 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F35:S008	F35 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F35:S009	F35 Low Volts	YP	YQ	9999	YP9999	YQ9999
F35:S010	F35 PS Fail	YP	YQ	9999	YP9999	YQ9999
F35:S011	F35 Batt Test	IA	IR	9999	IA9999	IR9999
F35:S012	F35 LAN Comms	EM	EN	9999	EM9999	EN9999
F35:S013	F35 Spare1	UA	UR	9999	UA9999	UR9999
F35:S014	F35 Spare2	UA	UR	9999	UA9999	UR9999
F36:Z001	F36:Z001	UA	UR	9999	UA9999	UR9999
F36:Z002	F36:Z002	UA	UR	9999	UA9999	UR9999
F36:Z003	F36:Z003	UA	UR	9999	UA9999	UR9999
F36:Z004	F36:Z004	UA	UR	9999	UA9999	UR9999
F36:Z005	F36:Z005	UA	UR	9999	UA9999	UR9999
F36:Z006	F36:Z006	UA	UR	9999	UA9999	UR9999
F36:Z007	F36:Z007	UA	UR	9999	UA9999	UR9999
F36:Z008	F36:Z008	UA	UR	9999	UA9999	UR9999
F36:Z009	F36:Z009	UA	UR	9999	UA9999	UR9999
F36:Z010	F36:Z010	UA	UR	9999	UA9999	UR9999
F36:Z011	F36:Z011	UA	UR	9999	UA9999	UR9999
F36:Z012	F36:Z012	UA	UR	9999	UA9999	UR9999
F36:Z013	F36:Z013	UA	UR	9999	UA9999	UR9999
F36:Z014	F36:Z014	UA	UR	9999	UA9999	UR9999
F36:Z015	F36:Z015	UA	UR	9999	UA9999	UR9999
F36:Z016	F36:Z016	UA	UR	9999	UA9999	UR9999
F36:Z017	F36:Z017	UA	UR	9999	UA9999	UR9999
F36:Z018	F36:Z018	UA	UR	9999	UA9999	UR9999
F36:Z019	F36:Z019	UA	UR	9999	UA9999	UR9999
F36:Z020	F36:Z020	UA	UR	9999	UA9999	UR9999
F36:Z021	F36:Z021	UA	UR	9999	UA9999	UR9999
F36:Z022	F36:Z022	UA	UR	9999	UA9999	UR9999
F36:Z023	F36:Z023	UA	UR	9999	UA9999	UR9999
F36:Z024	F36:Z024	UA	UR	9999	UA9999	UR9999
F36:Z025	F36:Z025	UA	UR	9999	UA9999	UR9999
F36:Z026	F36:Z026	UA	UR	9999	UA9999	UR9999
F36:Z027	F36:Z027	UA	UR	9999	UA9999	UR9999
F36:Z028	F36:Z028	UA	UR	9999	UA9999	UR9999
F36:Z029	F36:Z029	UA	UR	9999	UA9999	UR9999
F36:Z030	F36:Z030	UA	UR	9999	UA9999	UR9999
F36:Z031	F36:Z031	UA	UR	9999	UA9999	UR9999
F36:Z032	F36:Z032	UA	UR	9999	UA9999	UR9999
F36:S001	F36 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F36:S002	F36 XmitPollFail	NA	NS	9999	NA9999	NS9999
F36:S003	F36 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F36:S004	F36 Cab Tamper	TA	TR	9999	TA9999	TR9999
F36:S005	F36 AC fail	AT	AR	9999	AT9999	AR9999
F36:S006	F36 Low Batt	YT	YR	9999	YT9999	YR9999
F36:S007	F36 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F36:S008	F36 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F36:S009	F36 Low Volts	YP	YQ	9999	YP9999	YQ9999
F36:S010	F36 PS Fail	YP	YQ	9999	YP9999	YQ9999
F36:S011	F36 Batt Test	IA	IR	9999	IA9999	IR9999
F36:S012	F36 LAN Comms	EM	EN	9999	EM9999	EN9999
F36:S013	F36 Spare1	UA	UR	9999	UA9999	UR9999
F36:S014	F36 Spare2	UA	UR	9999	UA9999	UR9999
F37:Z001	F37:Z001	UA	UR	9999	UA9999	UR9999
F37:Z002	F37:Z002	UA	UR	9999	UA9999	UR9999
F37:Z003	F37:Z003	UA	UR	9999	UA9999	UR9999
F37:Z004	F37:Z004	UA	UR	9999	UA9999	UR9999
F37:Z005	F37:Z005	UA	UR	9999	UA9999	UR9999
F37:Z006	F37:Z006	UA	UR	9999	UA9999	UR9999
F37:Z007	F37:Z007	UA	UR	9999	UA9999	UR9999
F37:Z008	F37:Z008	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F37:Z009	F37:Z009	UA	UR	9999	UA9999	UR9999
F37:Z010	F37:Z010	UA	UR	9999	UA9999	UR9999
F37:Z011	F37:Z011	UA	UR	9999	UA9999	UR9999
F37:Z012	F37:Z012	UA	UR	9999	UA9999	UR9999
F37:Z013	F37:Z013	UA	UR	9999	UA9999	UR9999
F37:Z014	F37:Z014	UA	UR	9999	UA9999	UR9999
F37:Z015	F37:Z015	UA	UR	9999	UA9999	UR9999
F37:Z016	F37:Z016	UA	UR	9999	UA9999	UR9999
F37:Z017	F37:Z017	UA	UR	9999	UA9999	UR9999
F37:Z018	F37:Z018	UA	UR	9999	UA9999	UR9999
F37:Z019	F37:Z019	UA	UR	9999	UA9999	UR9999
F37:Z020	F37:Z020	UA	UR	9999	UA9999	UR9999
F37:Z021	F37:Z021	UA	UR	9999	UA9999	UR9999
F37:Z022	F37:Z022	UA	UR	9999	UA9999	UR9999
F37:Z023	F37:Z023	UA	UR	9999	UA9999	UR9999
F37:Z024	F37:Z024	UA	UR	9999	UA9999	UR9999
F37:Z025	F37:Z025	UA	UR	9999	UA9999	UR9999
F37:Z026	F37:Z026	UA	UR	9999	UA9999	UR9999
F37:Z027	F37:Z027	UA	UR	9999	UA9999	UR9999
F37:Z028	F37:Z028	UA	UR	9999	UA9999	UR9999
F37:Z029	F37:Z029	UA	UR	9999	UA9999	UR9999
F37:Z030	F37:Z030	UA	UR	9999	UA9999	UR9999
F37:Z031	F37:Z031	UA	UR	9999	UA9999	UR9999
F37:Z032	F37:Z032	UA	UR	9999	UA9999	UR9999
F37:S001	F37 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F37:S002	F37 XmitPollFail	NA	NS	9999	NA9999	NS9999
F37:S003	F37 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F37:S004	F37 Cab Tamper	TA	TR	9999	TA9999	TR9999
F37:S005	F37 AC fail	AT	AR	9999	AT9999	AR9999
F37:S006	F37 Low Batt	YT	YR	9999	YT9999	YR9999
F37:S007	F37 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F37:S008	F37 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F37:S009	F37 Low Volts	YP	YQ	9999	YP9999	YQ9999
F37:S010	F37 PS Fail	YP	YQ	9999	YP9999	YQ9999
F37:S011	F37 Batt Test	IA	IR	9999	IA9999	IR9999
F37:S012	F37 LAN Comms	EM	EN	9999	EM9999	EN9999
F37:S013	F37 Spare1	UA	UR	9999	UA9999	UR9999
F37:S014	F37 Spare2	UA	UR	9999	UA9999	UR9999
F38:Z001	F38:Z001	UA	UR	9999	UA9999	UR9999
F38:Z002	F38:Z002	UA	UR	9999	UA9999	UR9999
F38:Z003	F38:Z003	UA	UR	9999	UA9999	UR9999
F38:Z004	F38:Z004	UA	UR	9999	UA9999	UR9999
F38:Z005	F38:Z005	UA	UR	9999	UA9999	UR9999
F38:Z006	F38:Z006	UA	UR	9999	UA9999	UR9999
F38:Z007	F38:Z007	UA	UR	9999	UA9999	UR9999
F38:Z008	F38:Z008	UA	UR	9999	UA9999	UR9999
F38:Z009	F38:Z009	UA	UR	9999	UA9999	UR9999
F38:Z010	F38:Z010	UA	UR	9999	UA9999	UR9999
F38:Z011	F38:Z011	UA	UR	9999	UA9999	UR9999
F38:Z012	F38:Z012	UA	UR	9999	UA9999	UR9999
F38:Z013	F38:Z013	UA	UR	9999	UA9999	UR9999
F38:Z014	F38:Z014	UA	UR	9999	UA9999	UR9999
F38:Z015	F38:Z015	UA	UR	9999	UA9999	UR9999
F38:Z016	F38:Z016	UA	UR	9999	UA9999	UR9999
F38:Z017	F38:Z017	UA	UR	9999	UA9999	UR9999
F38:Z018	F38:Z018	UA	UR	9999	UA9999	UR9999
F38:Z019	F38:Z019	UA	UR	9999	UA9999	UR9999
F38:Z020	F38:Z020	UA	UR	9999	UA9999	UR9999
F38:Z021	F38:Z021	UA	UR	9999	UA9999	UR9999
F38:Z022	F38:Z022	UA	UR	9999	UA9999	UR9999
F38:Z023	F38:Z023	UA	UR	9999	UA9999	UR9999
F38:Z024	F38:Z024	UA	UR	9999	UA9999	UR9999
F38:Z025	F38:Z025	UA	UR	9999	UA9999	UR9999
F38:Z026	F38:Z026	UA	UR	9999	UA9999	UR9999
F38:Z027	F38:Z027	UA	UR	9999	UA9999	UR9999
F38:Z028	F38:Z028	UA	UR	9999	UA9999	UR9999
F38:Z029	F38:Z029	UA	UR	9999	UA9999	UR9999
F38:Z030	F38:Z030	UA	UR	9999	UA9999	UR9999
F38:Z031	F38:Z031	UA	UR	9999	UA9999	UR9999
F38:Z032	F38:Z032	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F38:S001	F38 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F38:S002	F38 XmitPollFail	NA	NS	9999	NA9999	NS9999
F38:S003	F38 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F38:S004	F38 Cab Tamper	TA	TR	9999	TA9999	TR9999
F38:S005	F38 AC fail	AT	AR	9999	AT9999	AR9999
F38:S006	F38 Low Batt	YT	YR	9999	YT9999	YR9999
F38:S007	F38 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F38:S008	F38 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F38:S009	F38 Low Volts	YP	YQ	9999	YP9999	YQ9999
F38:S010	F38 PS Fail	YP	YQ	9999	YP9999	YQ9999
F38:S011	F38 Batt Test	IA	IR	9999	IA9999	IR9999
F38:S012	F38 LAN Comms	EM	EN	9999	EM9999	EN9999
F38:S013	F38 Spare1	UA	UR	9999	UA9999	UR9999
F38:S014	F38 Spare2	UA	UR	9999	UA9999	UR9999
F39:Z001	F39:Z001	UA	UR	9999	UA9999	UR9999
F39:Z002	F39:Z002	UA	UR	9999	UA9999	UR9999
F39:Z003	F39:Z003	UA	UR	9999	UA9999	UR9999
F39:Z004	F39:Z004	UA	UR	9999	UA9999	UR9999
F39:Z005	F39:Z005	UA	UR	9999	UA9999	UR9999
F39:Z006	F39:Z006	UA	UR	9999	UA9999	UR9999
F39:Z007	F39:Z007	UA	UR	9999	UA9999	UR9999
F39:Z008	F39:Z008	UA	UR	9999	UA9999	UR9999
F39:Z009	F39:Z009	UA	UR	9999	UA9999	UR9999
F39:Z010	F39:Z010	UA	UR	9999	UA9999	UR9999
F39:Z011	F39:Z011	UA	UR	9999	UA9999	UR9999
F39:Z012	F39:Z012	UA	UR	9999	UA9999	UR9999
F39:Z013	F39:Z013	UA	UR	9999	UA9999	UR9999
F39:Z014	F39:Z014	UA	UR	9999	UA9999	UR9999
F39:Z015	F39:Z015	UA	UR	9999	UA9999	UR9999
F39:Z016	F39:Z016	UA	UR	9999	UA9999	UR9999
F39:Z017	F39:Z017	UA	UR	9999	UA9999	UR9999
F39:Z018	F39:Z018	UA	UR	9999	UA9999	UR9999
F39:Z019	F39:Z019	UA	UR	9999	UA9999	UR9999
F39:Z020	F39:Z020	UA	UR	9999	UA9999	UR9999
F39:Z021	F39:Z021	UA	UR	9999	UA9999	UR9999
F39:Z022	F39:Z022	UA	UR	9999	UA9999	UR9999
F39:Z023	F39:Z023	UA	UR	9999	UA9999	UR9999
F39:Z024	F39:Z024	UA	UR	9999	UA9999	UR9999
F39:Z025	F39:Z025	UA	UR	9999	UA9999	UR9999
F39:Z026	F39:Z026	UA	UR	9999	UA9999	UR9999
F39:Z027	F39:Z027	UA	UR	9999	UA9999	UR9999
F39:Z028	F39:Z028	UA	UR	9999	UA9999	UR9999
F39:Z029	F39:Z029	UA	UR	9999	UA9999	UR9999
F39:Z030	F39:Z030	UA	UR	9999	UA9999	UR9999
F39:Z031	F39:Z031	UA	UR	9999	UA9999	UR9999
F39:Z032	F39:Z032	UA	UR	9999	UA9999	UR9999
F39:S001	F39 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F39:S002	F39 XmitPollFail	NA	NS	9999	NA9999	NS9999
F39:S003	F39 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F39:S004	F39 Cab Tamper	TA	TR	9999	TA9999	TR9999
F39:S005	F39 AC fail	AT	AR	9999	AT9999	AR9999
F39:S006	F39 Low Batt	YT	YR	9999	YT9999	YR9999
F39:S007	F39 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F39:S008	F39 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F39:S009	F39 Low Volts	YP	YQ	9999	YP9999	YQ9999
F39:S010	F39 PS Fail	YP	YQ	9999	YP9999	YQ9999
F39:S011	F39 Batt Test	IA	IR	9999	IA9999	IR9999
F39:S012	F39 LAN Comms	EM	EN	9999	EM9999	EN9999
F39:S013	F39 Spare1	UA	UR	9999	UA9999	UR9999
F39:S014	F39 Spare2	UA	UR	9999	UA9999	UR9999
F40:Z001	F40:Z001	UA	UR	9999	UA9999	UR9999
F40:Z002	F40:Z002	UA	UR	9999	UA9999	UR9999
F40:Z003	F40:Z003	UA	UR	9999	UA9999	UR9999
F40:Z004	F40:Z004	UA	UR	9999	UA9999	UR9999
F40:Z005	F40:Z005	UA	UR	9999	UA9999	UR9999
F40:Z006	F40:Z006	UA	UR	9999	UA9999	UR9999
F40:Z007	F40:Z007	UA	UR	9999	UA9999	UR9999
F40:Z008	F40:Z008	UA	UR	9999	UA9999	UR9999
F40:Z009	F40:Z009	UA	UR	9999	UA9999	UR9999
F40:Z010	F40:Z010	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F40:Z011	F40:Z011	UA	UR	9999	UA9999	UR9999
F40:Z012	F40:Z012	UA	UR	9999	UA9999	UR9999
F40:Z013	F40:Z013	UA	UR	9999	UA9999	UR9999
F40:Z014	F40:Z014	UA	UR	9999	UA9999	UR9999
F40:Z015	F40:Z015	UA	UR	9999	UA9999	UR9999
F40:Z016	F40:Z016	UA	UR	9999	UA9999	UR9999
F40:Z017	F40:Z017	UA	UR	9999	UA9999	UR9999
F40:Z018	F40:Z018	UA	UR	9999	UA9999	UR9999
F40:Z019	F40:Z019	UA	UR	9999	UA9999	UR9999
F40:Z020	F40:Z020	UA	UR	9999	UA9999	UR9999
F40:Z021	F40:Z021	UA	UR	9999	UA9999	UR9999
F40:Z022	F40:Z022	UA	UR	9999	UA9999	UR9999
F40:Z023	F40:Z023	UA	UR	9999	UA9999	UR9999
F40:Z024	F40:Z024	UA	UR	9999	UA9999	UR9999
F40:Z025	F40:Z025	UA	UR	9999	UA9999	UR9999
F40:Z026	F40:Z026	UA	UR	9999	UA9999	UR9999
F40:Z027	F40:Z027	UA	UR	9999	UA9999	UR9999
F40:Z028	F40:Z028	UA	UR	9999	UA9999	UR9999
F40:Z029	F40:Z029	UA	UR	9999	UA9999	UR9999
F40:Z030	F40:Z030	UA	UR	9999	UA9999	UR9999
F40:Z031	F40:Z031	UA	UR	9999	UA9999	UR9999
F40:Z032	F40:Z032	UA	UR	9999	UA9999	UR9999
F40:S001	F40 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F40:S002	F40 XmitPollFail	NA	NS	9999	NA9999	NS9999
F40:S003	F40 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F40:S004	F40 Cab Tamper	TA	TR	9999	TA9999	TR9999
F40:S005	F40 AC fail	AT	AR	9999	AT9999	AR9999
F40:S006	F40 Low Batt	YT	YR	9999	YT9999	YR9999
F40:S007	F40 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F40:S008	F40 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F40:S009	F40 Low Volts	YP	YQ	9999	YP9999	YQ9999
F40:S010	F40 PS Fail	YP	YQ	9999	YP9999	YQ9999
F40:S011	F40 Batt Test	IA	IR	9999	IA9999	IR9999
F40:S012	F40 LAN Comms	EM	EN	9999	EM9999	EN9999
F40:S013	F40 Spare1	UA	UR	9999	UA9999	UR9999
F40:S014	F40 Spare2	UA	UR	9999	UA9999	UR9999
F41:Z001	F41:Z001	UA	UR	9999	UA9999	UR9999
F41:Z002	F41:Z002	UA	UR	9999	UA9999	UR9999
F41:Z003	F41:Z003	UA	UR	9999	UA9999	UR9999
F41:Z004	F41:Z004	UA	UR	9999	UA9999	UR9999
F41:Z005	F41:Z005	UA	UR	9999	UA9999	UR9999
F41:Z006	F41:Z006	UA	UR	9999	UA9999	UR9999
F41:Z007	F41:Z007	UA	UR	9999	UA9999	UR9999
F41:Z008	F41:Z008	UA	UR	9999	UA9999	UR9999
F41:Z009	F41:Z009	UA	UR	9999	UA9999	UR9999
F41:Z010	F41:Z010	UA	UR	9999	UA9999	UR9999
F41:Z011	F41:Z011	UA	UR	9999	UA9999	UR9999
F41:Z012	F41:Z012	UA	UR	9999	UA9999	UR9999
F41:Z013	F41:Z013	UA	UR	9999	UA9999	UR9999
F41:Z014	F41:Z014	UA	UR	9999	UA9999	UR9999
F41:Z015	F41:Z015	UA	UR	9999	UA9999	UR9999
F41:Z016	F41:Z016	UA	UR	9999	UA9999	UR9999
F41:Z017	F41:Z017	UA	UR	9999	UA9999	UR9999
F41:Z018	F41:Z018	UA	UR	9999	UA9999	UR9999
F41:Z019	F41:Z019	UA	UR	9999	UA9999	UR9999
F41:Z020	F41:Z020	UA	UR	9999	UA9999	UR9999
F41:Z021	F41:Z021	UA	UR	9999	UA9999	UR9999
F41:Z022	F41:Z022	UA	UR	9999	UA9999	UR9999
F41:Z023	F41:Z023	UA	UR	9999	UA9999	UR9999
F41:Z024	F41:Z024	UA	UR	9999	UA9999	UR9999
F41:Z025	F41:Z025	UA	UR	9999	UA9999	UR9999
F41:Z026	F41:Z026	UA	UR	9999	UA9999	UR9999
F41:Z027	F41:Z027	UA	UR	9999	UA9999	UR9999
F41:Z028	F41:Z028	UA	UR	9999	UA9999	UR9999
F41:Z029	F41:Z029	UA	UR	9999	UA9999	UR9999
F41:Z030	F41:Z030	UA	UR	9999	UA9999	UR9999
F41:Z031	F41:Z031	UA	UR	9999	UA9999	UR9999
F41:Z032	F41:Z032	UA	UR	9999	UA9999	UR9999
F41:S001	F41 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F41:S002	F41 XmitPollFail	NA	NS	9999	NA9999	NS9999

Integriti SIA DECIMAL Map. V21

F41:S003	F41 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F41:S004	F41 Cab Tamper	TA	TR	9999	TA9999	TR9999
F41:S005	F41 AC fail	AT	AR	9999	AT9999	AR9999
F41:S006	F41 Low Batt	YT	YR	9999	YT9999	YR9999
F41:S007	F41 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F41:S008	F41 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F41:S009	F41 Low Volts	YP	YQ	9999	YP9999	YQ9999
F41:S010	F41 PS Fail	YP	YQ	9999	YP9999	YQ9999
F41:S011	F41 Batt Test	IA	IR	9999	IA9999	IR9999
F41:S012	F41 LAN Comms	EM	EN	9999	EM9999	EN9999
F41:S013	F41 Spare1	UA	UR	9999	UA9999	UR9999
F41:S014	F41 Spare2	UA	UR	9999	UA9999	UR9999
F42:Z001	F42:Z001	UA	UR	9999	UA9999	UR9999
F42:Z002	F42:Z002	UA	UR	9999	UA9999	UR9999
F42:Z003	F42:Z003	UA	UR	9999	UA9999	UR9999
F42:Z004	F42:Z004	UA	UR	9999	UA9999	UR9999
F42:Z005	F42:Z005	UA	UR	9999	UA9999	UR9999
F42:Z006	F42:Z006	UA	UR	9999	UA9999	UR9999
F42:Z007	F42:Z007	UA	UR	9999	UA9999	UR9999
F42:Z008	F42:Z008	UA	UR	9999	UA9999	UR9999
F42:Z009	F42:Z009	UA	UR	9999	UA9999	UR9999
F42:Z010	F42:Z010	UA	UR	9999	UA9999	UR9999
F42:Z011	F42:Z011	UA	UR	9999	UA9999	UR9999
F42:Z012	F42:Z012	UA	UR	9999	UA9999	UR9999
F42:Z013	F42:Z013	UA	UR	9999	UA9999	UR9999
F42:Z014	F42:Z014	UA	UR	9999	UA9999	UR9999
F42:Z015	F42:Z015	UA	UR	9999	UA9999	UR9999
F42:Z016	F42:Z016	UA	UR	9999	UA9999	UR9999
F42:Z017	F42:Z017	UA	UR	9999	UA9999	UR9999
F42:Z018	F42:Z018	UA	UR	9999	UA9999	UR9999
F42:Z019	F42:Z019	UA	UR	9999	UA9999	UR9999
F42:Z020	F42:Z020	UA	UR	9999	UA9999	UR9999
F42:Z021	F42:Z021	UA	UR	9999	UA9999	UR9999
F42:Z022	F42:Z022	UA	UR	9999	UA9999	UR9999
F42:Z023	F42:Z023	UA	UR	9999	UA9999	UR9999
F42:Z024	F42:Z024	UA	UR	9999	UA9999	UR9999
F42:Z025	F42:Z025	UA	UR	9999	UA9999	UR9999
F42:Z026	F42:Z026	UA	UR	9999	UA9999	UR9999
F42:Z027	F42:Z027	UA	UR	9999	UA9999	UR9999
F42:Z028	F42:Z028	UA	UR	9999	UA9999	UR9999
F42:Z029	F42:Z029	UA	UR	9999	UA9999	UR9999
F42:Z030	F42:Z030	UA	UR	9999	UA9999	UR9999
F42:Z031	F42:Z031	UA	UR	9999	UA9999	UR9999
F42:Z032	F42:Z032	UA	UR	9999	UA9999	UR9999
F42:S001	F42 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F42:S002	F42 XmitPollFail	NA	NS	9999	NA9999	NS9999
F42:S003	F42 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F42:S004	F42 Cab Tamper	TA	TR	9999	TA9999	TR9999
F42:S005	F42 AC fail	AT	AR	9999	AT9999	AR9999
F42:S006	F42 Low Batt	YT	YR	9999	YT9999	YR9999
F42:S007	F42 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F42:S008	F42 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F42:S009	F42 Low Volts	YP	YQ	9999	YP9999	YQ9999
F42:S010	F42 PS Fail	YP	YQ	9999	YP9999	YQ9999
F42:S011	F42 Batt Test	IA	IR	9999	IA9999	IR9999
F42:S012	F42 LAN Comms	EM	EN	9999	EM9999	EN9999
F42:S013	F42 Spare1	UA	UR	9999	UA9999	UR9999
F42:S014	F42 Spare2	UA	UR	9999	UA9999	UR9999
F43:Z001	F43:Z001	UA	UR	9999	UA9999	UR9999
F43:Z002	F43:Z002	UA	UR	9999	UA9999	UR9999
F43:Z003	F43:Z003	UA	UR	9999	UA9999	UR9999
F43:Z004	F43:Z004	UA	UR	9999	UA9999	UR9999
F43:Z005	F43:Z005	UA	UR	9999	UA9999	UR9999
F43:Z006	F43:Z006	UA	UR	9999	UA9999	UR9999
F43:Z007	F43:Z007	UA	UR	9999	UA9999	UR9999
F43:Z008	F43:Z008	UA	UR	9999	UA9999	UR9999
F43:Z009	F43:Z009	UA	UR	9999	UA9999	UR9999
F43:Z010	F43:Z010	UA	UR	9999	UA9999	UR9999
F43:Z011	F43:Z011	UA	UR	9999	UA9999	UR9999
F43:Z012	F43:Z012	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F43:Z013	F43:Z013	UA	UR	9999	UA9999	UR9999
F43:Z014	F43:Z014	UA	UR	9999	UA9999	UR9999
F43:Z015	F43:Z015	UA	UR	9999	UA9999	UR9999
F43:Z016	F43:Z016	UA	UR	9999	UA9999	UR9999
F43:Z017	F43:Z017	UA	UR	9999	UA9999	UR9999
F43:Z018	F43:Z018	UA	UR	9999	UA9999	UR9999
F43:Z019	F43:Z019	UA	UR	9999	UA9999	UR9999
F43:Z020	F43:Z020	UA	UR	9999	UA9999	UR9999
F43:Z021	F43:Z021	UA	UR	9999	UA9999	UR9999
F43:Z022	F43:Z022	UA	UR	9999	UA9999	UR9999
F43:Z023	F43:Z023	UA	UR	9999	UA9999	UR9999
F43:Z024	F43:Z024	UA	UR	9999	UA9999	UR9999
F43:Z025	F43:Z025	UA	UR	9999	UA9999	UR9999
F43:Z026	F43:Z026	UA	UR	9999	UA9999	UR9999
F43:Z027	F43:Z027	UA	UR	9999	UA9999	UR9999
F43:Z028	F43:Z028	UA	UR	9999	UA9999	UR9999
F43:Z029	F43:Z029	UA	UR	9999	UA9999	UR9999
F43:Z030	F43:Z030	UA	UR	9999	UA9999	UR9999
F43:Z031	F43:Z031	UA	UR	9999	UA9999	UR9999
F43:Z032	F43:Z032	UA	UR	9999	UA9999	UR9999
F43:S001	F43 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F43:S002	F43 XmitPollFail	NA	NS	9999	NA9999	NS9999
F43:S003	F43 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F43:S004	F43 Cab Tamper	TA	TR	9999	TA9999	TR9999
F43:S005	F43 AC fail	AT	AR	9999	AT9999	AR9999
F43:S006	F43 Low Batt	YT	YR	9999	YT9999	YR9999
F43:S007	F43 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F43:S008	F43 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F43:S009	F43 Low Volts	YP	YQ	9999	YP9999	YQ9999
F43:S010	F43 PS Fail	YP	YQ	9999	YP9999	YQ9999
F43:S011	F43 Batt Test	IA	IR	9999	IA9999	IR9999
F43:S012	F43 LAN Comms	EM	EN	9999	EM9999	EN9999
F43:S013	F43 Spare1	UA	UR	9999	UA9999	UR9999
F43:S014	F43 Spare2	UA	UR	9999	UA9999	UR9999
F44:Z001	F44:Z001	UA	UR	9999	UA9999	UR9999
F44:Z002	F44:Z002	UA	UR	9999	UA9999	UR9999
F44:Z003	F44:Z003	UA	UR	9999	UA9999	UR9999
F44:Z004	F44:Z004	UA	UR	9999	UA9999	UR9999
F44:Z005	F44:Z005	UA	UR	9999	UA9999	UR9999
F44:Z006	F44:Z006	UA	UR	9999	UA9999	UR9999
F44:Z007	F44:Z007	UA	UR	9999	UA9999	UR9999
F44:Z008	F44:Z008	UA	UR	9999	UA9999	UR9999
F44:Z009	F44:Z009	UA	UR	9999	UA9999	UR9999
F44:Z010	F44:Z010	UA	UR	9999	UA9999	UR9999
F44:Z011	F44:Z011	UA	UR	9999	UA9999	UR9999
F44:Z012	F44:Z012	UA	UR	9999	UA9999	UR9999
F44:Z013	F44:Z013	UA	UR	9999	UA9999	UR9999
F44:Z014	F44:Z014	UA	UR	9999	UA9999	UR9999
F44:Z015	F44:Z015	UA	UR	9999	UA9999	UR9999
F44:Z016	F44:Z016	UA	UR	9999	UA9999	UR9999
F44:Z017	F44:Z017	UA	UR	9999	UA9999	UR9999
F44:Z018	F44:Z018	UA	UR	9999	UA9999	UR9999
F44:Z019	F44:Z019	UA	UR	9999	UA9999	UR9999
F44:Z020	F44:Z020	UA	UR	9999	UA9999	UR9999
F44:Z021	F44:Z021	UA	UR	9999	UA9999	UR9999
F44:Z022	F44:Z022	UA	UR	9999	UA9999	UR9999
F44:Z023	F44:Z023	UA	UR	9999	UA9999	UR9999
F44:Z024	F44:Z024	UA	UR	9999	UA9999	UR9999
F44:Z025	F44:Z025	UA	UR	9999	UA9999	UR9999
F44:Z026	F44:Z026	UA	UR	9999	UA9999	UR9999
F44:Z027	F44:Z027	UA	UR	9999	UA9999	UR9999
F44:Z028	F44:Z028	UA	UR	9999	UA9999	UR9999
F44:Z029	F44:Z029	UA	UR	9999	UA9999	UR9999
F44:Z030	F44:Z030	UA	UR	9999	UA9999	UR9999
F44:Z031	F44:Z031	UA	UR	9999	UA9999	UR9999
F44:Z032	F44:Z032	UA	UR	9999	UA9999	UR9999
F44:S001	F44 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F44:S002	F44 XmitPollFail	NA	NS	9999	NA9999	NS9999
F44:S003	F44 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F44:S004	F44 Cab Tamper	TA	TR	9999	TA9999	TR9999

Integriti SIA DECIMAL Map. V21

F44:S005	F44 AC fail	AT	AR	9999	AT9999	AR9999
F44:S006	F44 Low Batt	YT	YR	9999	YT9999	YR9999
F44:S007	F44 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F44:S008	F44 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F44:S009	F44 Low Volts	YP	YQ	9999	YP9999	YQ9999
F44:S010	F44 PS Fail	YP	YQ	9999	YP9999	YQ9999
F44:S011	F44 Batt Test	IA	IR	9999	IA9999	IR9999
F44:S012	F44 LAN Comms	EM	EN	9999	EM9999	EN9999
F44:S013	F44 Spare1	UA	UR	9999	UA9999	UR9999
F44:S014	F44 Spare2	UA	UR	9999	UA9999	UR9999
F45:Z001	F45:Z001	UA	UR	9999	UA9999	UR9999
F45:Z002	F45:Z002	UA	UR	9999	UA9999	UR9999
F45:Z003	F45:Z003	UA	UR	9999	UA9999	UR9999
F45:Z004	F45:Z004	UA	UR	9999	UA9999	UR9999
F45:Z005	F45:Z005	UA	UR	9999	UA9999	UR9999
F45:Z006	F45:Z006	UA	UR	9999	UA9999	UR9999
F45:Z007	F45:Z007	UA	UR	9999	UA9999	UR9999
F45:Z008	F45:Z008	UA	UR	9999	UA9999	UR9999
F45:Z009	F45:Z009	UA	UR	9999	UA9999	UR9999
F45:Z010	F45:Z010	UA	UR	9999	UA9999	UR9999
F45:Z011	F45:Z011	UA	UR	9999	UA9999	UR9999
F45:Z012	F45:Z012	UA	UR	9999	UA9999	UR9999
F45:Z013	F45:Z013	UA	UR	9999	UA9999	UR9999
F45:Z014	F45:Z014	UA	UR	9999	UA9999	UR9999
F45:Z015	F45:Z015	UA	UR	9999	UA9999	UR9999
F45:Z016	F45:Z016	UA	UR	9999	UA9999	UR9999
F45:Z017	F45:Z017	UA	UR	9999	UA9999	UR9999
F45:Z018	F45:Z018	UA	UR	9999	UA9999	UR9999
F45:Z019	F45:Z019	UA	UR	9999	UA9999	UR9999
F45:Z020	F45:Z020	UA	UR	9999	UA9999	UR9999
F45:Z021	F45:Z021	UA	UR	9999	UA9999	UR9999
F45:Z022	F45:Z022	UA	UR	9999	UA9999	UR9999
F45:Z023	F45:Z023	UA	UR	9999	UA9999	UR9999
F45:Z024	F45:Z024	UA	UR	9999	UA9999	UR9999
F45:Z025	F45:Z025	UA	UR	9999	UA9999	UR9999
F45:Z026	F45:Z026	UA	UR	9999	UA9999	UR9999
F45:Z027	F45:Z027	UA	UR	9999	UA9999	UR9999
F45:Z028	F45:Z028	UA	UR	9999	UA9999	UR9999
F45:Z029	F45:Z029	UA	UR	9999	UA9999	UR9999
F45:Z030	F45:Z030	UA	UR	9999	UA9999	UR9999
F45:Z031	F45:Z031	UA	UR	9999	UA9999	UR9999
F45:Z032	F45:Z032	UA	UR	9999	UA9999	UR9999
F45:S001	F45 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F45:S002	F45 XmitPollFail	NA	NS	9999	NA9999	NS9999
F45:S003	F45 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F45:S004	F45 Cab Tamper	TA	TR	9999	TA9999	TR9999
F45:S005	F45 AC fail	AT	AR	9999	AT9999	AR9999
F45:S006	F45 Low Batt	YT	YR	9999	YT9999	YR9999
F45:S007	F45 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F45:S008	F45 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F45:S009	F45 Low Volts	YP	YQ	9999	YP9999	YQ9999
F45:S010	F45 PS Fail	YP	YQ	9999	YP9999	YQ9999
F45:S011	F45 Batt Test	IA	IR	9999	IA9999	IR9999
F45:S012	F45 LAN Comms	EM	EN	9999	EM9999	EN9999
F45:S013	F45 Spare1	UA	UR	9999	UA9999	UR9999
F45:S014	F45 Spare2	UA	UR	9999	UA9999	UR9999
F46:Z001	F46:Z001	UA	UR	9999	UA9999	UR9999
F46:Z002	F46:Z002	UA	UR	9999	UA9999	UR9999
F46:Z003	F46:Z003	UA	UR	9999	UA9999	UR9999
F46:Z004	F46:Z004	UA	UR	9999	UA9999	UR9999
F46:Z005	F46:Z005	UA	UR	9999	UA9999	UR9999
F46:Z006	F46:Z006	UA	UR	9999	UA9999	UR9999
F46:Z007	F46:Z007	UA	UR	9999	UA9999	UR9999
F46:Z008	F46:Z008	UA	UR	9999	UA9999	UR9999
F46:Z009	F46:Z009	UA	UR	9999	UA9999	UR9999
F46:Z010	F46:Z010	UA	UR	9999	UA9999	UR9999
F46:Z011	F46:Z011	UA	UR	9999	UA9999	UR9999
F46:Z012	F46:Z012	UA	UR	9999	UA9999	UR9999
F46:Z013	F46:Z013	UA	UR	9999	UA9999	UR9999
F46:Z014	F46:Z014	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F46:Z015	F46:Z015	UA	UR	9999	UA9999	UR9999
F46:Z016	F46:Z016	UA	UR	9999	UA9999	UR9999
F46:Z017	F46:Z017	UA	UR	9999	UA9999	UR9999
F46:Z018	F46:Z018	UA	UR	9999	UA9999	UR9999
F46:Z019	F46:Z019	UA	UR	9999	UA9999	UR9999
F46:Z020	F46:Z020	UA	UR	9999	UA9999	UR9999
F46:Z021	F46:Z021	UA	UR	9999	UA9999	UR9999
F46:Z022	F46:Z022	UA	UR	9999	UA9999	UR9999
F46:Z023	F46:Z023	UA	UR	9999	UA9999	UR9999
F46:Z024	F46:Z024	UA	UR	9999	UA9999	UR9999
F46:Z025	F46:Z025	UA	UR	9999	UA9999	UR9999
F46:Z026	F46:Z026	UA	UR	9999	UA9999	UR9999
F46:Z027	F46:Z027	UA	UR	9999	UA9999	UR9999
F46:Z028	F46:Z028	UA	UR	9999	UA9999	UR9999
F46:Z029	F46:Z029	UA	UR	9999	UA9999	UR9999
F46:Z030	F46:Z030	UA	UR	9999	UA9999	UR9999
F46:Z031	F46:Z031	UA	UR	9999	UA9999	UR9999
F46:Z032	F46:Z032	UA	UR	9999	UA9999	UR9999
F46:S001	F46 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F46:S002	F46 XmitPollFail	NA	NS	9999	NA9999	NS9999
F46:S003	F46 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F46:S004	F46 Cab Tamper	TA	TR	9999	TA9999	TR9999
F46:S005	F46 AC fail	AT	AR	9999	AT9999	AR9999
F46:S006	F46 Low Batt	YT	YR	9999	YT9999	YR9999
F46:S007	F46 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F46:S008	F46 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F46:S009	F46 Low Volts	YP	YQ	9999	YP9999	YQ9999
F46:S010	F46 PS Fail	YP	YQ	9999	YP9999	YQ9999
F46:S011	F46 Batt Test	IA	IR	9999	IA9999	IR9999
F46:S012	F46 LAN Comms	EM	EN	9999	EM9999	EN9999
F46:S013	F46 Spare1	UA	UR	9999	UA9999	UR9999
F46:S014	F46 Spare2	UA	UR	9999	UA9999	UR9999
F47:Z001	F47:Z001	UA	UR	9999	UA9999	UR9999
F47:Z002	F47:Z002	UA	UR	9999	UA9999	UR9999
F47:Z003	F47:Z003	UA	UR	9999	UA9999	UR9999
F47:Z004	F47:Z004	UA	UR	9999	UA9999	UR9999
F47:Z005	F47:Z005	UA	UR	9999	UA9999	UR9999
F47:Z006	F47:Z006	UA	UR	9999	UA9999	UR9999
F47:Z007	F47:Z007	UA	UR	9999	UA9999	UR9999
F47:Z008	F47:Z008	UA	UR	9999	UA9999	UR9999
F47:Z009	F47:Z009	UA	UR	9999	UA9999	UR9999
F47:Z010	F47:Z010	UA	UR	9999	UA9999	UR9999
F47:Z011	F47:Z011	UA	UR	9999	UA9999	UR9999
F47:Z012	F47:Z012	UA	UR	9999	UA9999	UR9999
F47:Z013	F47:Z013	UA	UR	9999	UA9999	UR9999
F47:Z014	F47:Z014	UA	UR	9999	UA9999	UR9999
F47:Z015	F47:Z015	UA	UR	9999	UA9999	UR9999
F47:Z016	F47:Z016	UA	UR	9999	UA9999	UR9999
F47:Z017	F47:Z017	UA	UR	9999	UA9999	UR9999
F47:Z018	F47:Z018	UA	UR	9999	UA9999	UR9999
F47:Z019	F47:Z019	UA	UR	9999	UA9999	UR9999
F47:Z020	F47:Z020	UA	UR	9999	UA9999	UR9999
F47:Z021	F47:Z021	UA	UR	9999	UA9999	UR9999
F47:Z022	F47:Z022	UA	UR	9999	UA9999	UR9999
F47:Z023	F47:Z023	UA	UR	9999	UA9999	UR9999
F47:Z024	F47:Z024	UA	UR	9999	UA9999	UR9999
F47:Z025	F47:Z025	UA	UR	9999	UA9999	UR9999
F47:Z026	F47:Z026	UA	UR	9999	UA9999	UR9999
F47:Z027	F47:Z027	UA	UR	9999	UA9999	UR9999
F47:Z028	F47:Z028	UA	UR	9999	UA9999	UR9999
F47:Z029	F47:Z029	UA	UR	9999	UA9999	UR9999
F47:Z030	F47:Z030	UA	UR	9999	UA9999	UR9999
F47:Z031	F47:Z031	UA	UR	9999	UA9999	UR9999
F47:Z032	F47:Z032	UA	UR	9999	UA9999	UR9999
F47:S001	F47 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F47:S002	F47 XmitPollFail	NA	NS	9999	NA9999	NS9999
F47:S003	F47 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F47:S004	F47 Cab Tamper	TA	TR	9999	TA9999	TR9999
F47:S005	F47 AC fail	AT	AR	9999	AT9999	AR9999
F47:S006	F47 Low Batt	YT	YR	9999	YT9999	YR9999

Integriti SIA DECIMAL Map. V21

F47:S007	F47 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F47:S008	F47 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F47:S009	F47 Low Volts	YP	YQ	9999	YP9999	YQ9999
F47:S010	F47 PS Fail	YP	YQ	9999	YP9999	YQ9999
F47:S011	F47 Batt Test	IA	IR	9999	IA9999	IR9999
F47:S012	F47 LAN Comms	EM	EN	9999	EM9999	EN9999
F47:S013	F47 Spare1	UA	UR	9999	UA9999	UR9999
F47:S014	F47 Spare2	UA	UR	9999	UA9999	UR9999
F48:Z001	F48:Z001	UA	UR	9999	UA9999	UR9999
F48:Z002	F48:Z002	UA	UR	9999	UA9999	UR9999
F48:Z003	F48:Z003	UA	UR	9999	UA9999	UR9999
F48:Z004	F48:Z004	UA	UR	9999	UA9999	UR9999
F48:Z005	F48:Z005	UA	UR	9999	UA9999	UR9999
F48:Z006	F48:Z006	UA	UR	9999	UA9999	UR9999
F48:Z007	F48:Z007	UA	UR	9999	UA9999	UR9999
F48:Z008	F48:Z008	UA	UR	9999	UA9999	UR9999
F48:Z009	F48:Z009	UA	UR	9999	UA9999	UR9999
F48:Z010	F48:Z010	UA	UR	9999	UA9999	UR9999
F48:Z011	F48:Z011	UA	UR	9999	UA9999	UR9999
F48:Z012	F48:Z012	UA	UR	9999	UA9999	UR9999
F48:Z013	F48:Z013	UA	UR	9999	UA9999	UR9999
F48:Z014	F48:Z014	UA	UR	9999	UA9999	UR9999
F48:Z015	F48:Z015	UA	UR	9999	UA9999	UR9999
F48:Z016	F48:Z016	UA	UR	9999	UA9999	UR9999
F48:Z017	F48:Z017	UA	UR	9999	UA9999	UR9999
F48:Z018	F48:Z018	UA	UR	9999	UA9999	UR9999
F48:Z019	F48:Z019	UA	UR	9999	UA9999	UR9999
F48:Z020	F48:Z020	UA	UR	9999	UA9999	UR9999
F48:Z021	F48:Z021	UA	UR	9999	UA9999	UR9999
F48:Z022	F48:Z022	UA	UR	9999	UA9999	UR9999
F48:Z023	F48:Z023	UA	UR	9999	UA9999	UR9999
F48:Z024	F48:Z024	UA	UR	9999	UA9999	UR9999
F48:Z025	F48:Z025	UA	UR	9999	UA9999	UR9999
F48:Z026	F48:Z026	UA	UR	9999	UA9999	UR9999
F48:Z027	F48:Z027	UA	UR	9999	UA9999	UR9999
F48:Z028	F48:Z028	UA	UR	9999	UA9999	UR9999
F48:Z029	F48:Z029	UA	UR	9999	UA9999	UR9999
F48:Z030	F48:Z030	UA	UR	9999	UA9999	UR9999
F48:Z031	F48:Z031	UA	UR	9999	UA9999	UR9999
F48:Z032	F48:Z032	UA	UR	9999	UA9999	UR9999
F48:S001	F48 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F48:S002	F48 XmitPollFail	NA	NS	9999	NA9999	NS9999
F48:S003	F48 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F48:S004	F48 Cab Tamper	TA	TR	9999	TA9999	TR9999
F48:S005	F48 AC fail	AT	AR	9999	AT9999	AR9999
F48:S006	F48 Low Batt	YT	YR	9999	YT9999	YR9999
F48:S007	F48 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F48:S008	F48 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F48:S009	F48 Low Volts	YP	YQ	9999	YP9999	YQ9999
F48:S010	F48 PS Fail	YP	YQ	9999	YP9999	YQ9999
F48:S011	F48 Batt Test	IA	IR	9999	IA9999	IR9999
F48:S012	F48 LAN Comms	EM	EN	9999	EM9999	EN9999
F48:S013	F48 Spare1	UA	UR	9999	UA9999	UR9999
F48:S014	F48 Spare2	UA	UR	9999	UA9999	UR9999
F49:Z001	F49:Z001	UA	UR	9999	UA9999	UR9999
F49:Z002	F49:Z002	UA	UR	9999	UA9999	UR9999
F49:Z003	F49:Z003	UA	UR	9999	UA9999	UR9999
F49:Z004	F49:Z004	UA	UR	9999	UA9999	UR9999
F49:Z005	F49:Z005	UA	UR	9999	UA9999	UR9999
F49:Z006	F49:Z006	UA	UR	9999	UA9999	UR9999
F49:Z007	F49:Z007	UA	UR	9999	UA9999	UR9999
F49:Z008	F49:Z008	UA	UR	9999	UA9999	UR9999
F49:Z009	F49:Z009	UA	UR	9999	UA9999	UR9999
F49:Z010	F49:Z010	UA	UR	9999	UA9999	UR9999
F49:Z011	F49:Z011	UA	UR	9999	UA9999	UR9999
F49:Z012	F49:Z012	UA	UR	9999	UA9999	UR9999
F49:Z013	F49:Z013	UA	UR	9999	UA9999	UR9999
F49:Z014	F49:Z014	UA	UR	9999	UA9999	UR9999
F49:Z015	F49:Z015	UA	UR	9999	UA9999	UR9999
F49:Z016	F49:Z016	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F49:Z017	F49:Z017	UA	UR	9999	UA9999	UR9999
F49:Z018	F49:Z018	UA	UR	9999	UA9999	UR9999
F49:Z019	F49:Z019	UA	UR	9999	UA9999	UR9999
F49:Z020	F49:Z020	UA	UR	9999	UA9999	UR9999
F49:Z021	F49:Z021	UA	UR	9999	UA9999	UR9999
F49:Z022	F49:Z022	UA	UR	9999	UA9999	UR9999
F49:Z023	F49:Z023	UA	UR	9999	UA9999	UR9999
F49:Z024	F49:Z024	UA	UR	9999	UA9999	UR9999
F49:Z025	F49:Z025	UA	UR	9999	UA9999	UR9999
F49:Z026	F49:Z026	UA	UR	9999	UA9999	UR9999
F49:Z027	F49:Z027	UA	UR	9999	UA9999	UR9999
F49:Z028	F49:Z028	UA	UR	9999	UA9999	UR9999
F49:Z029	F49:Z029	UA	UR	9999	UA9999	UR9999
F49:Z030	F49:Z030	UA	UR	9999	UA9999	UR9999
F49:Z031	F49:Z031	UA	UR	9999	UA9999	UR9999
F49:Z032	F49:Z032	UA	UR	9999	UA9999	UR9999
F49:S001	F49 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F49:S002	F49 XmitPollFail	NA	NS	9999	NA9999	NS9999
F49:S003	F49 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F49:S004	F49 Cab Tamper	TA	TR	9999	TA9999	TR9999
F49:S005	F49 AC fail	AT	AR	9999	AT9999	AR9999
F49:S006	F49 Low Batt	YT	YR	9999	YT9999	YR9999
F49:S007	F49 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F49:S008	F49 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F49:S009	F49 Low Volts	YP	YQ	9999	YP9999	YQ9999
F49:S010	F49 PS Fail	YP	YQ	9999	YP9999	YQ9999
F49:S011	F49 Batt Test	IA	IR	9999	IA9999	IR9999
F49:S012	F49 LAN Comms	EM	EN	9999	EM9999	EN9999
F49:S013	F49 Spare1	UA	UR	9999	UA9999	UR9999
F49:S014	F49 Spare2	UA	UR	9999	UA9999	UR9999
F50:Z001	F50:Z001	UA	UR	9999	UA9999	UR9999
F50:Z002	F50:Z002	UA	UR	9999	UA9999	UR9999
F50:Z003	F50:Z003	UA	UR	9999	UA9999	UR9999
F50:Z004	F50:Z004	UA	UR	9999	UA9999	UR9999
F50:Z005	F50:Z005	UA	UR	9999	UA9999	UR9999
F50:Z006	F50:Z006	UA	UR	9999	UA9999	UR9999
F50:Z007	F50:Z007	UA	UR	9999	UA9999	UR9999
F50:Z008	F50:Z008	UA	UR	9999	UA9999	UR9999
F50:Z009	F50:Z009	UA	UR	9999	UA9999	UR9999
F50:Z010	F50:Z010	UA	UR	9999	UA9999	UR9999
F50:Z011	F50:Z011	UA	UR	9999	UA9999	UR9999
F50:Z012	F50:Z012	UA	UR	9999	UA9999	UR9999
F50:Z013	F50:Z013	UA	UR	9999	UA9999	UR9999
F50:Z014	F50:Z014	UA	UR	9999	UA9999	UR9999
F50:Z015	F50:Z015	UA	UR	9999	UA9999	UR9999
F50:Z016	F50:Z016	UA	UR	9999	UA9999	UR9999
F50:Z017	F50:Z017	UA	UR	9999	UA9999	UR9999
F50:Z018	F50:Z018	UA	UR	9999	UA9999	UR9999
F50:Z019	F50:Z019	UA	UR	9999	UA9999	UR9999
F50:Z020	F50:Z020	UA	UR	9999	UA9999	UR9999
F50:Z021	F50:Z021	UA	UR	9999	UA9999	UR9999
F50:Z022	F50:Z022	UA	UR	9999	UA9999	UR9999
F50:Z023	F50:Z023	UA	UR	9999	UA9999	UR9999
F50:Z024	F50:Z024	UA	UR	9999	UA9999	UR9999
F50:Z025	F50:Z025	UA	UR	9999	UA9999	UR9999
F50:Z026	F50:Z026	UA	UR	9999	UA9999	UR9999
F50:Z027	F50:Z027	UA	UR	9999	UA9999	UR9999
F50:Z028	F50:Z028	UA	UR	9999	UA9999	UR9999
F50:Z029	F50:Z029	UA	UR	9999	UA9999	UR9999
F50:Z030	F50:Z030	UA	UR	9999	UA9999	UR9999
F50:Z031	F50:Z031	UA	UR	9999	UA9999	UR9999
F50:Z032	F50:Z032	UA	UR	9999	UA9999	UR9999
F50:S001	F50 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F50:S002	F50 XmitPollFail	NA	NS	9999	NA9999	NS9999
F50:S003	F50 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F50:S004	F50 Cab Tamper	TA	TR	9999	TA9999	TR9999
F50:S005	F50 AC fail	AT	AR	9999	AT9999	AR9999
F50:S006	F50 Low Batt	YT	YR	9999	YT9999	YR9999
F50:S007	F50 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F50:S008	F50 DET Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

F50:S009	F50 Low Volts	YP	YQ	9999	YP9999	YQ9999
F50:S010	F50 PS Fail	YP	YQ	9999	YP9999	YQ9999
F50:S011	F50 Batt Test	IA	IR	9999	IA9999	IR9999
F50:S012	F50 LAN Comms	EM	EN	9999	EM9999	EN9999
F50:S013	F50 Spare1	UA	UR	9999	UA9999	UR9999
F50:S014	F50 Spare2	UA	UR	9999	UA9999	UR9999
F51:Z001	F51:Z001	UA	UR	9999	UA9999	UR9999
F51:Z002	F51:Z002	UA	UR	9999	UA9999	UR9999
F51:Z003	F51:Z003	UA	UR	9999	UA9999	UR9999
F51:Z004	F51:Z004	UA	UR	9999	UA9999	UR9999
F51:Z005	F51:Z005	UA	UR	9999	UA9999	UR9999
F51:Z006	F51:Z006	UA	UR	9999	UA9999	UR9999
F51:Z007	F51:Z007	UA	UR	9999	UA9999	UR9999
F51:Z008	F51:Z008	UA	UR	9999	UA9999	UR9999
F51:Z009	F51:Z009	UA	UR	9999	UA9999	UR9999
F51:Z010	F51:Z010	UA	UR	9999	UA9999	UR9999
F51:Z011	F51:Z011	UA	UR	9999	UA9999	UR9999
F51:Z012	F51:Z012	UA	UR	9999	UA9999	UR9999
F51:Z013	F51:Z013	UA	UR	9999	UA9999	UR9999
F51:Z014	F51:Z014	UA	UR	9999	UA9999	UR9999
F51:Z015	F51:Z015	UA	UR	9999	UA9999	UR9999
F51:Z016	F51:Z016	UA	UR	9999	UA9999	UR9999
F51:Z017	F51:Z017	UA	UR	9999	UA9999	UR9999
F51:Z018	F51:Z018	UA	UR	9999	UA9999	UR9999
F51:Z019	F51:Z019	UA	UR	9999	UA9999	UR9999
F51:Z020	F51:Z020	UA	UR	9999	UA9999	UR9999
F51:Z021	F51:Z021	UA	UR	9999	UA9999	UR9999
F51:Z022	F51:Z022	UA	UR	9999	UA9999	UR9999
F51:Z023	F51:Z023	UA	UR	9999	UA9999	UR9999
F51:Z024	F51:Z024	UA	UR	9999	UA9999	UR9999
F51:Z025	F51:Z025	UA	UR	9999	UA9999	UR9999
F51:Z026	F51:Z026	UA	UR	9999	UA9999	UR9999
F51:Z027	F51:Z027	UA	UR	9999	UA9999	UR9999
F51:Z028	F51:Z028	UA	UR	9999	UA9999	UR9999
F51:Z029	F51:Z029	UA	UR	9999	UA9999	UR9999
F51:Z030	F51:Z030	UA	UR	9999	UA9999	UR9999
F51:Z031	F51:Z031	UA	UR	9999	UA9999	UR9999
F51:Z032	F51:Z032	UA	UR	9999	UA9999	UR9999
F51:S001	F51 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F51:S002	F51 XmitPollFail	NA	NS	9999	NA9999	NS9999
F51:S003	F51 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F51:S004	F51 Cab Tamper	TA	TR	9999	TA9999	TR9999
F51:S005	F51 AC fail	AT	AR	9999	AT9999	AR9999
F51:S006	F51 Low Batt	YT	YR	9999	YT9999	YR9999
F51:S007	F51 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F51:S008	F51 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F51:S009	F51 Low Volts	YP	YQ	9999	YP9999	YQ9999
F51:S010	F51 PS Fail	YP	YQ	9999	YP9999	YQ9999
F51:S011	F51 Batt Test	IA	IR	9999	IA9999	IR9999
F51:S012	F51 LAN Comms	EM	EN	9999	EM9999	EN9999
F51:S013	F51 Spare1	UA	UR	9999	UA9999	UR9999
F51:S014	F51 Spare2	UA	UR	9999	UA9999	UR9999
F52:Z001	F52:Z001	UA	UR	9999	UA9999	UR9999
F52:Z002	F52:Z002	UA	UR	9999	UA9999	UR9999
F52:Z003	F52:Z003	UA	UR	9999	UA9999	UR9999
F52:Z004	F52:Z004	UA	UR	9999	UA9999	UR9999
F52:Z005	F52:Z005	UA	UR	9999	UA9999	UR9999
F52:Z006	F52:Z006	UA	UR	9999	UA9999	UR9999
F52:Z007	F52:Z007	UA	UR	9999	UA9999	UR9999
F52:Z008	F52:Z008	UA	UR	9999	UA9999	UR9999
F52:Z009	F52:Z009	UA	UR	9999	UA9999	UR9999
F52:Z010	F52:Z010	UA	UR	9999	UA9999	UR9999
F52:Z011	F52:Z011	UA	UR	9999	UA9999	UR9999
F52:Z012	F52:Z012	UA	UR	9999	UA9999	UR9999
F52:Z013	F52:Z013	UA	UR	9999	UA9999	UR9999
F52:Z014	F52:Z014	UA	UR	9999	UA9999	UR9999
F52:Z015	F52:Z015	UA	UR	9999	UA9999	UR9999
F52:Z016	F52:Z016	UA	UR	9999	UA9999	UR9999
F52:Z017	F52:Z017	UA	UR	9999	UA9999	UR9999
F52:Z018	F52:Z018	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F52:Z019	F52:Z019	UA	UR	9999	UA9999	UR9999
F52:Z020	F52:Z020	UA	UR	9999	UA9999	UR9999
F52:Z021	F52:Z021	UA	UR	9999	UA9999	UR9999
F52:Z022	F52:Z022	UA	UR	9999	UA9999	UR9999
F52:Z023	F52:Z023	UA	UR	9999	UA9999	UR9999
F52:Z024	F52:Z024	UA	UR	9999	UA9999	UR9999
F52:Z025	F52:Z025	UA	UR	9999	UA9999	UR9999
F52:Z026	F52:Z026	UA	UR	9999	UA9999	UR9999
F52:Z027	F52:Z027	UA	UR	9999	UA9999	UR9999
F52:Z028	F52:Z028	UA	UR	9999	UA9999	UR9999
F52:Z029	F52:Z029	UA	UR	9999	UA9999	UR9999
F52:Z030	F52:Z030	UA	UR	9999	UA9999	UR9999
F52:Z031	F52:Z031	UA	UR	9999	UA9999	UR9999
F52:Z032	F52:Z032	UA	UR	9999	UA9999	UR9999
F52:S001	F52 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F52:S002	F52 XmitPollFail	NA	NS	9999	NA9999	NS9999
F52:S003	F52 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F52:S004	F52 Cab Tamper	TA	TR	9999	TA9999	TR9999
F52:S005	F52 AC fail	AT	AR	9999	AT9999	AR9999
F52:S006	F52 Low Batt	YT	YR	9999	YT9999	YR9999
F52:S007	F52 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F52:S008	F52 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F52:S009	F52 Low Volts	YP	YQ	9999	YP9999	YQ9999
F52:S010	F52 PS Fail	YP	YQ	9999	YP9999	YQ9999
F52:S011	F52 Batt Test	IA	IR	9999	IA9999	IR9999
F52:S012	F52 LAN Comms	EM	EN	9999	EM9999	EN9999
F52:S013	F52 Spare1	UA	UR	9999	UA9999	UR9999
F52:S014	F52 Spare2	UA	UR	9999	UA9999	UR9999
F53:Z001	F53:Z001	UA	UR	9999	UA9999	UR9999
F53:Z002	F53:Z002	UA	UR	9999	UA9999	UR9999
F53:Z003	F53:Z003	UA	UR	9999	UA9999	UR9999
F53:Z004	F53:Z004	UA	UR	9999	UA9999	UR9999
F53:Z005	F53:Z005	UA	UR	9999	UA9999	UR9999
F53:Z006	F53:Z006	UA	UR	9999	UA9999	UR9999
F53:Z007	F53:Z007	UA	UR	9999	UA9999	UR9999
F53:Z008	F53:Z008	UA	UR	9999	UA9999	UR9999
F53:Z009	F53:Z009	UA	UR	9999	UA9999	UR9999
F53:Z010	F53:Z010	UA	UR	9999	UA9999	UR9999
F53:Z011	F53:Z011	UA	UR	9999	UA9999	UR9999
F53:Z012	F53:Z012	UA	UR	9999	UA9999	UR9999
F53:Z013	F53:Z013	UA	UR	9999	UA9999	UR9999
F53:Z014	F53:Z014	UA	UR	9999	UA9999	UR9999
F53:Z015	F53:Z015	UA	UR	9999	UA9999	UR9999
F53:Z016	F53:Z016	UA	UR	9999	UA9999	UR9999
F53:Z017	F53:Z017	UA	UR	9999	UA9999	UR9999
F53:Z018	F53:Z018	UA	UR	9999	UA9999	UR9999
F53:Z019	F53:Z019	UA	UR	9999	UA9999	UR9999
F53:Z020	F53:Z020	UA	UR	9999	UA9999	UR9999
F53:Z021	F53:Z021	UA	UR	9999	UA9999	UR9999
F53:Z022	F53:Z022	UA	UR	9999	UA9999	UR9999
F53:Z023	F53:Z023	UA	UR	9999	UA9999	UR9999
F53:Z024	F53:Z024	UA	UR	9999	UA9999	UR9999
F53:Z025	F53:Z025	UA	UR	9999	UA9999	UR9999
F53:Z026	F53:Z026	UA	UR	9999	UA9999	UR9999
F53:Z027	F53:Z027	UA	UR	9999	UA9999	UR9999
F53:Z028	F53:Z028	UA	UR	9999	UA9999	UR9999
F53:Z029	F53:Z029	UA	UR	9999	UA9999	UR9999
F53:Z030	F53:Z030	UA	UR	9999	UA9999	UR9999
F53:Z031	F53:Z031	UA	UR	9999	UA9999	UR9999
F53:Z032	F53:Z032	UA	UR	9999	UA9999	UR9999
F53:S001	F53 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F53:S002	F53 XmitPollFail	NA	NS	9999	NA9999	NS9999
F53:S003	F53 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F53:S004	F53 Cab Tamper	TA	TR	9999	TA9999	TR9999
F53:S005	F53 AC fail	AT	AR	9999	AT9999	AR9999
F53:S006	F53 Low Batt	YT	YR	9999	YT9999	YR9999
F53:S007	F53 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F53:S008	F53 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F53:S009	F53 Low Volts	YP	YQ	9999	YP9999	YQ9999
F53:S010	F53 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

F53:S011	F53 Batt Test	IA	IR	9999	IA9999	IR9999
F53:S012	F53 LAN Comms	EM	EN	9999	EM9999	EN9999
F53:S013	F53 Spare1	UA	UR	9999	UA9999	UR9999
F53:S014	F53 Spare2	UA	UR	9999	UA9999	UR9999
F54:Z001	F54:Z001	UA	UR	9999	UA9999	UR9999
F54:Z002	F54:Z002	UA	UR	9999	UA9999	UR9999
F54:Z003	F54:Z003	UA	UR	9999	UA9999	UR9999
F54:Z004	F54:Z004	UA	UR	9999	UA9999	UR9999
F54:Z005	F54:Z005	UA	UR	9999	UA9999	UR9999
F54:Z006	F54:Z006	UA	UR	9999	UA9999	UR9999
F54:Z007	F54:Z007	UA	UR	9999	UA9999	UR9999
F54:Z008	F54:Z008	UA	UR	9999	UA9999	UR9999
F54:Z009	F54:Z009	UA	UR	9999	UA9999	UR9999
F54:Z010	F54:Z010	UA	UR	9999	UA9999	UR9999
F54:Z011	F54:Z011	UA	UR	9999	UA9999	UR9999
F54:Z012	F54:Z012	UA	UR	9999	UA9999	UR9999
F54:Z013	F54:Z013	UA	UR	9999	UA9999	UR9999
F54:Z014	F54:Z014	UA	UR	9999	UA9999	UR9999
F54:Z015	F54:Z015	UA	UR	9999	UA9999	UR9999
F54:Z016	F54:Z016	UA	UR	9999	UA9999	UR9999
F54:Z017	F54:Z017	UA	UR	9999	UA9999	UR9999
F54:Z018	F54:Z018	UA	UR	9999	UA9999	UR9999
F54:Z019	F54:Z019	UA	UR	9999	UA9999	UR9999
F54:Z020	F54:Z020	UA	UR	9999	UA9999	UR9999
F54:Z021	F54:Z021	UA	UR	9999	UA9999	UR9999
F54:Z022	F54:Z022	UA	UR	9999	UA9999	UR9999
F54:Z023	F54:Z023	UA	UR	9999	UA9999	UR9999
F54:Z024	F54:Z024	UA	UR	9999	UA9999	UR9999
F54:Z025	F54:Z025	UA	UR	9999	UA9999	UR9999
F54:Z026	F54:Z026	UA	UR	9999	UA9999	UR9999
F54:Z027	F54:Z027	UA	UR	9999	UA9999	UR9999
F54:Z028	F54:Z028	UA	UR	9999	UA9999	UR9999
F54:Z029	F54:Z029	UA	UR	9999	UA9999	UR9999
F54:Z030	F54:Z030	UA	UR	9999	UA9999	UR9999
F54:Z031	F54:Z031	UA	UR	9999	UA9999	UR9999
F54:Z032	F54:Z032	UA	UR	9999	UA9999	UR9999
F54:S001	F54 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F54:S002	F54 XmitPollFail	NA	NS	9999	NA9999	NS9999
F54:S003	F54 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F54:S004	F54 Cab Tamper	TA	TR	9999	TA9999	TR9999
F54:S005	F54 AC fail	AT	AR	9999	AT9999	AR9999
F54:S006	F54 Low Batt	YT	YR	9999	YT9999	YR9999
F54:S007	F54 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F54:S008	F54 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F54:S009	F54 Low Volts	YP	YQ	9999	YP9999	YQ9999
F54:S010	F54 PS Fail	YP	YQ	9999	YP9999	YQ9999
F54:S011	F54 Batt Test	IA	IR	9999	IA9999	IR9999
F54:S012	F54 LAN Comms	EM	EN	9999	EM9999	EN9999
F54:S013	F54 Spare1	UA	UR	9999	UA9999	UR9999
F54:S014	F54 Spare2	UA	UR	9999	UA9999	UR9999
F55:Z001	F55:Z001	UA	UR	9999	UA9999	UR9999
F55:Z002	F55:Z002	UA	UR	9999	UA9999	UR9999
F55:Z003	F55:Z003	UA	UR	9999	UA9999	UR9999
F55:Z004	F55:Z004	UA	UR	9999	UA9999	UR9999
F55:Z005	F55:Z005	UA	UR	9999	UA9999	UR9999
F55:Z006	F55:Z006	UA	UR	9999	UA9999	UR9999
F55:Z007	F55:Z007	UA	UR	9999	UA9999	UR9999
F55:Z008	F55:Z008	UA	UR	9999	UA9999	UR9999
F55:Z009	F55:Z009	UA	UR	9999	UA9999	UR9999
F55:Z010	F55:Z010	UA	UR	9999	UA9999	UR9999
F55:Z011	F55:Z011	UA	UR	9999	UA9999	UR9999
F55:Z012	F55:Z012	UA	UR	9999	UA9999	UR9999
F55:Z013	F55:Z013	UA	UR	9999	UA9999	UR9999
F55:Z014	F55:Z014	UA	UR	9999	UA9999	UR9999
F55:Z015	F55:Z015	UA	UR	9999	UA9999	UR9999
F55:Z016	F55:Z016	UA	UR	9999	UA9999	UR9999
F55:Z017	F55:Z017	UA	UR	9999	UA9999	UR9999
F55:Z018	F55:Z018	UA	UR	9999	UA9999	UR9999
F55:Z019	F55:Z019	UA	UR	9999	UA9999	UR9999
F55:Z020	F55:Z020	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F55:Z021	F55:Z021	UA	UR	9999	UA9999	UR9999
F55:Z022	F55:Z022	UA	UR	9999	UA9999	UR9999
F55:Z023	F55:Z023	UA	UR	9999	UA9999	UR9999
F55:Z024	F55:Z024	UA	UR	9999	UA9999	UR9999
F55:Z025	F55:Z025	UA	UR	9999	UA9999	UR9999
F55:Z026	F55:Z026	UA	UR	9999	UA9999	UR9999
F55:Z027	F55:Z027	UA	UR	9999	UA9999	UR9999
F55:Z028	F55:Z028	UA	UR	9999	UA9999	UR9999
F55:Z029	F55:Z029	UA	UR	9999	UA9999	UR9999
F55:Z030	F55:Z030	UA	UR	9999	UA9999	UR9999
F55:Z031	F55:Z031	UA	UR	9999	UA9999	UR9999
F55:Z032	F55:Z032	UA	UR	9999	UA9999	UR9999
F55:S001	F55 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F55:S002	F55 XmitPollFail	NA	NS	9999	NA9999	NS9999
F55:S003	F55 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F55:S004	F55 Cab Tamper	TA	TR	9999	TA9999	TR9999
F55:S005	F55 AC fail	AT	AR	9999	AT9999	AR9999
F55:S006	F55 Low Batt	YT	YR	9999	YT9999	YR9999
F55:S007	F55 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F55:S008	F55 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F55:S009	F55 Low Volts	YP	YQ	9999	YP9999	YQ9999
F55:S010	F55 PS Fail	YP	YQ	9999	YP9999	YQ9999
F55:S011	F55 Batt Test	IA	IR	9999	IA9999	IR9999
F55:S012	F55 LAN Comms	EM	EN	9999	EM9999	EN9999
F55:S013	F55 Spare1	UA	UR	9999	UA9999	UR9999
F55:S014	F55 Spare2	UA	UR	9999	UA9999	UR9999
F56:Z001	F56:Z001	UA	UR	9999	UA9999	UR9999
F56:Z002	F56:Z002	UA	UR	9999	UA9999	UR9999
F56:Z003	F56:Z003	UA	UR	9999	UA9999	UR9999
F56:Z004	F56:Z004	UA	UR	9999	UA9999	UR9999
F56:Z005	F56:Z005	UA	UR	9999	UA9999	UR9999
F56:Z006	F56:Z006	UA	UR	9999	UA9999	UR9999
F56:Z007	F56:Z007	UA	UR	9999	UA9999	UR9999
F56:Z008	F56:Z008	UA	UR	9999	UA9999	UR9999
F56:Z009	F56:Z009	UA	UR	9999	UA9999	UR9999
F56:Z010	F56:Z010	UA	UR	9999	UA9999	UR9999
F56:Z011	F56:Z011	UA	UR	9999	UA9999	UR9999
F56:Z012	F56:Z012	UA	UR	9999	UA9999	UR9999
F56:Z013	F56:Z013	UA	UR	9999	UA9999	UR9999
F56:Z014	F56:Z014	UA	UR	9999	UA9999	UR9999
F56:Z015	F56:Z015	UA	UR	9999	UA9999	UR9999
F56:Z016	F56:Z016	UA	UR	9999	UA9999	UR9999
F56:Z017	F56:Z017	UA	UR	9999	UA9999	UR9999
F56:Z018	F56:Z018	UA	UR	9999	UA9999	UR9999
F56:Z019	F56:Z019	UA	UR	9999	UA9999	UR9999
F56:Z020	F56:Z020	UA	UR	9999	UA9999	UR9999
F56:Z021	F56:Z021	UA	UR	9999	UA9999	UR9999
F56:Z022	F56:Z022	UA	UR	9999	UA9999	UR9999
F56:Z023	F56:Z023	UA	UR	9999	UA9999	UR9999
F56:Z024	F56:Z024	UA	UR	9999	UA9999	UR9999
F56:Z025	F56:Z025	UA	UR	9999	UA9999	UR9999
F56:Z026	F56:Z026	UA	UR	9999	UA9999	UR9999
F56:Z027	F56:Z027	UA	UR	9999	UA9999	UR9999
F56:Z028	F56:Z028	UA	UR	9999	UA9999	UR9999
F56:Z029	F56:Z029	UA	UR	9999	UA9999	UR9999
F56:Z030	F56:Z030	UA	UR	9999	UA9999	UR9999
F56:Z031	F56:Z031	UA	UR	9999	UA9999	UR9999
F56:Z032	F56:Z032	UA	UR	9999	UA9999	UR9999
F56:S001	F56 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F56:S002	F56 XmitPollFail	NA	NS	9999	NA9999	NS9999
F56:S003	F56 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F56:S004	F56 Cab Tamper	TA	TR	9999	TA9999	TR9999
F56:S005	F56 AC fail	AT	AR	9999	AT9999	AR9999
F56:S006	F56 Low Batt	YT	YR	9999	YT9999	YR9999
F56:S007	F56 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F56:S008	F56 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F56:S009	F56 Low Volts	YP	YQ	9999	YP9999	YQ9999
F56:S010	F56 PS Fail	YP	YQ	9999	YP9999	YQ9999
F56:S011	F56 Batt Test	IA	IR	9999	IA9999	IR9999
F56:S012	F56 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

F56:S013	F56 Spare1	UA	UR	9999	UA9999	UR9999
F56:S014	F56 Spare2	UA	UR	9999	UA9999	UR9999
F57:Z001	F57:Z001	UA	UR	9999	UA9999	UR9999
F57:Z002	F57:Z002	UA	UR	9999	UA9999	UR9999
F57:Z003	F57:Z003	UA	UR	9999	UA9999	UR9999
F57:Z004	F57:Z004	UA	UR	9999	UA9999	UR9999
F57:Z005	F57:Z005	UA	UR	9999	UA9999	UR9999
F57:Z006	F57:Z006	UA	UR	9999	UA9999	UR9999
F57:Z007	F57:Z007	UA	UR	9999	UA9999	UR9999
F57:Z008	F57:Z008	UA	UR	9999	UA9999	UR9999
F57:Z009	F57:Z009	UA	UR	9999	UA9999	UR9999
F57:Z010	F57:Z010	UA	UR	9999	UA9999	UR9999
F57:Z011	F57:Z011	UA	UR	9999	UA9999	UR9999
F57:Z012	F57:Z012	UA	UR	9999	UA9999	UR9999
F57:Z013	F57:Z013	UA	UR	9999	UA9999	UR9999
F57:Z014	F57:Z014	UA	UR	9999	UA9999	UR9999
F57:Z015	F57:Z015	UA	UR	9999	UA9999	UR9999
F57:Z016	F57:Z016	UA	UR	9999	UA9999	UR9999
F57:Z017	F57:Z017	UA	UR	9999	UA9999	UR9999
F57:Z018	F57:Z018	UA	UR	9999	UA9999	UR9999
F57:Z019	F57:Z019	UA	UR	9999	UA9999	UR9999
F57:Z020	F57:Z020	UA	UR	9999	UA9999	UR9999
F57:Z021	F57:Z021	UA	UR	9999	UA9999	UR9999
F57:Z022	F57:Z022	UA	UR	9999	UA9999	UR9999
F57:Z023	F57:Z023	UA	UR	9999	UA9999	UR9999
F57:Z024	F57:Z024	UA	UR	9999	UA9999	UR9999
F57:Z025	F57:Z025	UA	UR	9999	UA9999	UR9999
F57:Z026	F57:Z026	UA	UR	9999	UA9999	UR9999
F57:Z027	F57:Z027	UA	UR	9999	UA9999	UR9999
F57:Z028	F57:Z028	UA	UR	9999	UA9999	UR9999
F57:Z029	F57:Z029	UA	UR	9999	UA9999	UR9999
F57:Z030	F57:Z030	UA	UR	9999	UA9999	UR9999
F57:Z031	F57:Z031	UA	UR	9999	UA9999	UR9999
F57:Z032	F57:Z032	UA	UR	9999	UA9999	UR9999
F57:S001	F57 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F57:S002	F57 XmitPollFail	NA	NS	9999	NA9999	NS9999
F57:S003	F57 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F57:S004	F57 Cab Tamper	TA	TR	9999	TA9999	TR9999
F57:S005	F57 AC fail	AT	AR	9999	AT9999	AR9999
F57:S006	F57 Low Batt	YT	YR	9999	YT9999	YR9999
F57:S007	F57 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F57:S008	F57 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F57:S009	F57 Low Volts	YP	YQ	9999	YP9999	YQ9999
F57:S010	F57 PS Fail	YP	YQ	9999	YP9999	YQ9999
F57:S011	F57 Batt Test	IA	IR	9999	IA9999	IR9999
F57:S012	F57 LAN Comms	EM	EN	9999	EM9999	EN9999
F57:S013	F57 Spare1	UA	UR	9999	UA9999	UR9999
F57:S014	F57 Spare2	UA	UR	9999	UA9999	UR9999
F58:Z001	F58:Z001	UA	UR	9999	UA9999	UR9999
F58:Z002	F58:Z002	UA	UR	9999	UA9999	UR9999
F58:Z003	F58:Z003	UA	UR	9999	UA9999	UR9999
F58:Z004	F58:Z004	UA	UR	9999	UA9999	UR9999
F58:Z005	F58:Z005	UA	UR	9999	UA9999	UR9999
F58:Z006	F58:Z006	UA	UR	9999	UA9999	UR9999
F58:Z007	F58:Z007	UA	UR	9999	UA9999	UR9999
F58:Z008	F58:Z008	UA	UR	9999	UA9999	UR9999
F58:Z009	F58:Z009	UA	UR	9999	UA9999	UR9999
F58:Z010	F58:Z010	UA	UR	9999	UA9999	UR9999
F58:Z011	F58:Z011	UA	UR	9999	UA9999	UR9999
F58:Z012	F58:Z012	UA	UR	9999	UA9999	UR9999
F58:Z013	F58:Z013	UA	UR	9999	UA9999	UR9999
F58:Z014	F58:Z014	UA	UR	9999	UA9999	UR9999
F58:Z015	F58:Z015	UA	UR	9999	UA9999	UR9999
F58:Z016	F58:Z016	UA	UR	9999	UA9999	UR9999
F58:Z017	F58:Z017	UA	UR	9999	UA9999	UR9999
F58:Z018	F58:Z018	UA	UR	9999	UA9999	UR9999
F58:Z019	F58:Z019	UA	UR	9999	UA9999	UR9999
F58:Z020	F58:Z020	UA	UR	9999	UA9999	UR9999
F58:Z021	F58:Z021	UA	UR	9999	UA9999	UR9999
F58:Z022	F58:Z022	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F58:Z023	F58:Z023	UA	UR	9999	UA9999	UR9999
F58:Z024	F58:Z024	UA	UR	9999	UA9999	UR9999
F58:Z025	F58:Z025	UA	UR	9999	UA9999	UR9999
F58:Z026	F58:Z026	UA	UR	9999	UA9999	UR9999
F58:Z027	F58:Z027	UA	UR	9999	UA9999	UR9999
F58:Z028	F58:Z028	UA	UR	9999	UA9999	UR9999
F58:Z029	F58:Z029	UA	UR	9999	UA9999	UR9999
F58:Z030	F58:Z030	UA	UR	9999	UA9999	UR9999
F58:Z031	F58:Z031	UA	UR	9999	UA9999	UR9999
F58:Z032	F58:Z032	UA	UR	9999	UA9999	UR9999
F58:S001	F58 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F58:S002	F58 XmitPollFail	NA	NS	9999	NA9999	NS9999
F58:S003	F58 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F58:S004	F58 Cab Tamper	TA	TR	9999	TA9999	TR9999
F58:S005	F58 AC fail	AT	AR	9999	AT9999	AR9999
F58:S006	F58 Low Batt	YT	YR	9999	YT9999	YR9999
F58:S007	F58 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F58:S008	F58 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F58:S009	F58 Low Volts	YP	YQ	9999	YP9999	YQ9999
F58:S010	F58 PS Fail	YP	YQ	9999	YP9999	YQ9999
F58:S011	F58 Batt Test	IA	IR	9999	IA9999	IR9999
F58:S012	F58 LAN Comms	EM	EN	9999	EM9999	EN9999
F58:S013	F58 Spare1	UA	UR	9999	UA9999	UR9999
F58:S014	F58 Spare2	UA	UR	9999	UA9999	UR9999
F59:Z001	F59:Z001	UA	UR	9999	UA9999	UR9999
F59:Z002	F59:Z002	UA	UR	9999	UA9999	UR9999
F59:Z003	F59:Z003	UA	UR	9999	UA9999	UR9999
F59:Z004	F59:Z004	UA	UR	9999	UA9999	UR9999
F59:Z005	F59:Z005	UA	UR	9999	UA9999	UR9999
F59:Z006	F59:Z006	UA	UR	9999	UA9999	UR9999
F59:Z007	F59:Z007	UA	UR	9999	UA9999	UR9999
F59:Z008	F59:Z008	UA	UR	9999	UA9999	UR9999
F59:Z009	F59:Z009	UA	UR	9999	UA9999	UR9999
F59:Z010	F59:Z010	UA	UR	9999	UA9999	UR9999
F59:Z011	F59:Z011	UA	UR	9999	UA9999	UR9999
F59:Z012	F59:Z012	UA	UR	9999	UA9999	UR9999
F59:Z013	F59:Z013	UA	UR	9999	UA9999	UR9999
F59:Z014	F59:Z014	UA	UR	9999	UA9999	UR9999
F59:Z015	F59:Z015	UA	UR	9999	UA9999	UR9999
F59:Z016	F59:Z016	UA	UR	9999	UA9999	UR9999
F59:Z017	F59:Z017	UA	UR	9999	UA9999	UR9999
F59:Z018	F59:Z018	UA	UR	9999	UA9999	UR9999
F59:Z019	F59:Z019	UA	UR	9999	UA9999	UR9999
F59:Z020	F59:Z020	UA	UR	9999	UA9999	UR9999
F59:Z021	F59:Z021	UA	UR	9999	UA9999	UR9999
F59:Z022	F59:Z022	UA	UR	9999	UA9999	UR9999
F59:Z023	F59:Z023	UA	UR	9999	UA9999	UR9999
F59:Z024	F59:Z024	UA	UR	9999	UA9999	UR9999
F59:Z025	F59:Z025	UA	UR	9999	UA9999	UR9999
F59:Z026	F59:Z026	UA	UR	9999	UA9999	UR9999
F59:Z027	F59:Z027	UA	UR	9999	UA9999	UR9999
F59:Z028	F59:Z028	UA	UR	9999	UA9999	UR9999
F59:Z029	F59:Z029	UA	UR	9999	UA9999	UR9999
F59:Z030	F59:Z030	UA	UR	9999	UA9999	UR9999
F59:Z031	F59:Z031	UA	UR	9999	UA9999	UR9999
F59:Z032	F59:Z032	UA	UR	9999	UA9999	UR9999
F59:S001	F59 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F59:S002	F59 XmitPollFail	NA	NS	9999	NA9999	NS9999
F59:S003	F59 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F59:S004	F59 Cab Tamper	TA	TR	9999	TA9999	TR9999
F59:S005	F59 AC fail	AT	AR	9999	AT9999	AR9999
F59:S006	F59 Low Batt	YT	YR	9999	YT9999	YR9999
F59:S007	F59 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F59:S008	F59 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F59:S009	F59 Low Volts	YP	YQ	9999	YP9999	YQ9999
F59:S010	F59 PS Fail	YP	YQ	9999	YP9999	YQ9999
F59:S011	F59 Batt Test	IA	IR	9999	IA9999	IR9999
F59:S012	F59 LAN Comms	EM	EN	9999	EM9999	EN9999
F59:S013	F59 Spare1	UA	UR	9999	UA9999	UR9999
F59:S014	F59 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F60:Z001	F60:Z001	UA	UR	9999	UA9999	UR9999
F60:Z002	F60:Z002	UA	UR	9999	UA9999	UR9999
F60:Z003	F60:Z003	UA	UR	9999	UA9999	UR9999
F60:Z004	F60:Z004	UA	UR	9999	UA9999	UR9999
F60:Z005	F60:Z005	UA	UR	9999	UA9999	UR9999
F60:Z006	F60:Z006	UA	UR	9999	UA9999	UR9999
F60:Z007	F60:Z007	UA	UR	9999	UA9999	UR9999
F60:Z008	F60:Z008	UA	UR	9999	UA9999	UR9999
F60:Z009	F60:Z009	UA	UR	9999	UA9999	UR9999
F60:Z010	F60:Z010	UA	UR	9999	UA9999	UR9999
F60:Z011	F60:Z011	UA	UR	9999	UA9999	UR9999
F60:Z012	F60:Z012	UA	UR	9999	UA9999	UR9999
F60:Z013	F60:Z013	UA	UR	9999	UA9999	UR9999
F60:Z014	F60:Z014	UA	UR	9999	UA9999	UR9999
F60:Z015	F60:Z015	UA	UR	9999	UA9999	UR9999
F60:Z016	F60:Z016	UA	UR	9999	UA9999	UR9999
F60:Z017	F60:Z017	UA	UR	9999	UA9999	UR9999
F60:Z018	F60:Z018	UA	UR	9999	UA9999	UR9999
F60:Z019	F60:Z019	UA	UR	9999	UA9999	UR9999
F60:Z020	F60:Z020	UA	UR	9999	UA9999	UR9999
F60:Z021	F60:Z021	UA	UR	9999	UA9999	UR9999
F60:Z022	F60:Z022	UA	UR	9999	UA9999	UR9999
F60:Z023	F60:Z023	UA	UR	9999	UA9999	UR9999
F60:Z024	F60:Z024	UA	UR	9999	UA9999	UR9999
F60:Z025	F60:Z025	UA	UR	9999	UA9999	UR9999
F60:Z026	F60:Z026	UA	UR	9999	UA9999	UR9999
F60:Z027	F60:Z027	UA	UR	9999	UA9999	UR9999
F60:Z028	F60:Z028	UA	UR	9999	UA9999	UR9999
F60:Z029	F60:Z029	UA	UR	9999	UA9999	UR9999
F60:Z030	F60:Z030	UA	UR	9999	UA9999	UR9999
F60:Z031	F60:Z031	UA	UR	9999	UA9999	UR9999
F60:Z032	F60:Z032	UA	UR	9999	UA9999	UR9999
F60:S001	F60 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F60:S002	F60 XmitPollFail	NA	NS	9999	NA9999	NS9999
F60:S003	F60 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F60:S004	F60 Cab Tamper	TA	TR	9999	TA9999	TR9999
F60:S005	F60 AC fail	AT	AR	9999	AT9999	AR9999
F60:S006	F60 Low Batt	YT	YR	9999	YT9999	YR9999
F60:S007	F60 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F60:S008	F60 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F60:S009	F60 Low Volts	YP	YQ	9999	YP9999	YQ9999
F60:S010	F60 PS Fail	YP	YQ	9999	YP9999	YQ9999
F60:S011	F60 Batt Test	IA	IR	9999	IA9999	IR9999
F60:S012	F60 LAN Comms	EM	EN	9999	EM9999	EN9999
F60:S013	F60 Spare1	UA	UR	9999	UA9999	UR9999
F60:S014	F60 Spare2	UA	UR	9999	UA9999	UR9999
F61:Z001	F61:Z001	UA	UR	9999	UA9999	UR9999
F61:Z002	F61:Z002	UA	UR	9999	UA9999	UR9999
F61:Z003	F61:Z003	UA	UR	9999	UA9999	UR9999
F61:Z004	F61:Z004	UA	UR	9999	UA9999	UR9999
F61:Z005	F61:Z005	UA	UR	9999	UA9999	UR9999
F61:Z006	F61:Z006	UA	UR	9999	UA9999	UR9999
F61:Z007	F61:Z007	UA	UR	9999	UA9999	UR9999
F61:Z008	F61:Z008	UA	UR	9999	UA9999	UR9999
F61:Z009	F61:Z009	UA	UR	9999	UA9999	UR9999
F61:Z010	F61:Z010	UA	UR	9999	UA9999	UR9999
F61:Z011	F61:Z011	UA	UR	9999	UA9999	UR9999
F61:Z012	F61:Z012	UA	UR	9999	UA9999	UR9999
F61:Z013	F61:Z013	UA	UR	9999	UA9999	UR9999
F61:Z014	F61:Z014	UA	UR	9999	UA9999	UR9999
F61:Z015	F61:Z015	UA	UR	9999	UA9999	UR9999
F61:Z016	F61:Z016	UA	UR	9999	UA9999	UR9999
F61:Z017	F61:Z017	UA	UR	9999	UA9999	UR9999
F61:Z018	F61:Z018	UA	UR	9999	UA9999	UR9999
F61:Z019	F61:Z019	UA	UR	9999	UA9999	UR9999
F61:Z020	F61:Z020	UA	UR	9999	UA9999	UR9999
F61:Z021	F61:Z021	UA	UR	9999	UA9999	UR9999
F61:Z022	F61:Z022	UA	UR	9999	UA9999	UR9999
F61:Z023	F61:Z023	UA	UR	9999	UA9999	UR9999
F61:Z024	F61:Z024	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F61:Z025	F61:Z025	UA	UR	9999	UA9999	UR9999
F61:Z026	F61:Z026	UA	UR	9999	UA9999	UR9999
F61:Z027	F61:Z027	UA	UR	9999	UA9999	UR9999
F61:Z028	F61:Z028	UA	UR	9999	UA9999	UR9999
F61:Z029	F61:Z029	UA	UR	9999	UA9999	UR9999
F61:Z030	F61:Z030	UA	UR	9999	UA9999	UR9999
F61:Z031	F61:Z031	UA	UR	9999	UA9999	UR9999
F61:Z032	F61:Z032	UA	UR	9999	UA9999	UR9999
F61:S001	F61 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F61:S002	F61 XmitPollFail	NA	NS	9999	NA9999	NS9999
F61:S003	F61 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F61:S004	F61 Cab Tamper	TA	TR	9999	TA9999	TR9999
F61:S005	F61 AC fail	AT	AR	9999	AT9999	AR9999
F61:S006	F61 Low Batt	YT	YR	9999	YT9999	YR9999
F61:S007	F61 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F61:S008	F61 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F61:S009	F61 Low Volts	YP	YQ	9999	YP9999	YQ9999
F61:S010	F61 PS Fail	YP	YQ	9999	YP9999	YQ9999
F61:S011	F61 Batt Test	IA	IR	9999	IA9999	IR9999
F61:S012	F61 LAN Comms	EM	EN	9999	EM9999	EN9999
F61:S013	F61 Spare1	UA	UR	9999	UA9999	UR9999
F61:S014	F61 Spare2	UA	UR	9999	UA9999	UR9999
F62:Z001	F62:Z001	UA	UR	9999	UA9999	UR9999
F62:Z002	F62:Z002	UA	UR	9999	UA9999	UR9999
F62:Z003	F62:Z003	UA	UR	9999	UA9999	UR9999
F62:Z004	F62:Z004	UA	UR	9999	UA9999	UR9999
F62:Z005	F62:Z005	UA	UR	9999	UA9999	UR9999
F62:Z006	F62:Z006	UA	UR	9999	UA9999	UR9999
F62:Z007	F62:Z007	UA	UR	9999	UA9999	UR9999
F62:Z008	F62:Z008	UA	UR	9999	UA9999	UR9999
F62:Z009	F62:Z009	UA	UR	9999	UA9999	UR9999
F62:Z010	F62:Z010	UA	UR	9999	UA9999	UR9999
F62:Z011	F62:Z011	UA	UR	9999	UA9999	UR9999
F62:Z012	F62:Z012	UA	UR	9999	UA9999	UR9999
F62:Z013	F62:Z013	UA	UR	9999	UA9999	UR9999
F62:Z014	F62:Z014	UA	UR	9999	UA9999	UR9999
F62:Z015	F62:Z015	UA	UR	9999	UA9999	UR9999
F62:Z016	F62:Z016	UA	UR	9999	UA9999	UR9999
F62:Z017	F62:Z017	UA	UR	9999	UA9999	UR9999
F62:Z018	F62:Z018	UA	UR	9999	UA9999	UR9999
F62:Z019	F62:Z019	UA	UR	9999	UA9999	UR9999
F62:Z020	F62:Z020	UA	UR	9999	UA9999	UR9999
F62:Z021	F62:Z021	UA	UR	9999	UA9999	UR9999
F62:Z022	F62:Z022	UA	UR	9999	UA9999	UR9999
F62:Z023	F62:Z023	UA	UR	9999	UA9999	UR9999
F62:Z024	F62:Z024	UA	UR	9999	UA9999	UR9999
F62:Z025	F62:Z025	UA	UR	9999	UA9999	UR9999
F62:Z026	F62:Z026	UA	UR	9999	UA9999	UR9999
F62:Z027	F62:Z027	UA	UR	9999	UA9999	UR9999
F62:Z028	F62:Z028	UA	UR	9999	UA9999	UR9999
F62:Z029	F62:Z029	UA	UR	9999	UA9999	UR9999
F62:Z030	F62:Z030	UA	UR	9999	UA9999	UR9999
F62:Z031	F62:Z031	UA	UR	9999	UA9999	UR9999
F62:Z032	F62:Z032	UA	UR	9999	UA9999	UR9999
F62:S001	F62 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F62:S002	F62 XmitPollFail	NA	NS	9999	NA9999	NS9999
F62:S003	F62 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F62:S004	F62 Cab Tamper	TA	TR	9999	TA9999	TR9999
F62:S005	F62 AC fail	AT	AR	9999	AT9999	AR9999
F62:S006	F62 Low Batt	YT	YR	9999	YT9999	YR9999
F62:S007	F62 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F62:S008	F62 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F62:S009	F62 Low Volts	YP	YQ	9999	YP9999	YQ9999
F62:S010	F62 PS Fail	YP	YQ	9999	YP9999	YQ9999
F62:S011	F62 Batt Test	IA	IR	9999	IA9999	IR9999
F62:S012	F62 LAN Comms	EM	EN	9999	EM9999	EN9999
F62:S013	F62 Spare1	UA	UR	9999	UA9999	UR9999
F62:S014	F62 Spare2	UA	UR	9999	UA9999	UR9999
F63:Z001	F63:Z001	UA	UR	9999	UA9999	UR9999
F63:Z002	F63:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F63:Z003	F63:Z003	UA	UR	9999	UA9999	UR9999
F63:Z004	F63:Z004	UA	UR	9999	UA9999	UR9999
F63:Z005	F63:Z005	UA	UR	9999	UA9999	UR9999
F63:Z006	F63:Z006	UA	UR	9999	UA9999	UR9999
F63:Z007	F63:Z007	UA	UR	9999	UA9999	UR9999
F63:Z008	F63:Z008	UA	UR	9999	UA9999	UR9999
F63:Z009	F63:Z009	UA	UR	9999	UA9999	UR9999
F63:Z010	F63:Z010	UA	UR	9999	UA9999	UR9999
F63:Z011	F63:Z011	UA	UR	9999	UA9999	UR9999
F63:Z012	F63:Z012	UA	UR	9999	UA9999	UR9999
F63:Z013	F63:Z013	UA	UR	9999	UA9999	UR9999
F63:Z014	F63:Z014	UA	UR	9999	UA9999	UR9999
F63:Z015	F63:Z015	UA	UR	9999	UA9999	UR9999
F63:Z016	F63:Z016	UA	UR	9999	UA9999	UR9999
F63:Z017	F63:Z017	UA	UR	9999	UA9999	UR9999
F63:Z018	F63:Z018	UA	UR	9999	UA9999	UR9999
F63:Z019	F63:Z019	UA	UR	9999	UA9999	UR9999
F63:Z020	F63:Z020	UA	UR	9999	UA9999	UR9999
F63:Z021	F63:Z021	UA	UR	9999	UA9999	UR9999
F63:Z022	F63:Z022	UA	UR	9999	UA9999	UR9999
F63:Z023	F63:Z023	UA	UR	9999	UA9999	UR9999
F63:Z024	F63:Z024	UA	UR	9999	UA9999	UR9999
F63:Z025	F63:Z025	UA	UR	9999	UA9999	UR9999
F63:Z026	F63:Z026	UA	UR	9999	UA9999	UR9999
F63:Z027	F63:Z027	UA	UR	9999	UA9999	UR9999
F63:Z028	F63:Z028	UA	UR	9999	UA9999	UR9999
F63:Z029	F63:Z029	UA	UR	9999	UA9999	UR9999
F63:Z030	F63:Z030	UA	UR	9999	UA9999	UR9999
F63:Z031	F63:Z031	UA	UR	9999	UA9999	UR9999
F63:Z032	F63:Z032	UA	UR	9999	UA9999	UR9999
F63:S001	F63 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F63:S002	F63 XmitPollFail	NA	NS	9999	NA9999	NS9999
F63:S003	F63 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F63:S004	F63 Cab Tamper	TA	TR	9999	TA9999	TR9999
F63:S005	F63 AC fail	AT	AR	9999	AT9999	AR9999
F63:S006	F63 Low Batt	YT	YR	9999	YT9999	YR9999
F63:S007	F63 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F63:S008	F63 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F63:S009	F63 Low Volts	YP	YQ	9999	YP9999	YQ9999
F63:S010	F63 PS Fail	YP	YQ	9999	YP9999	YQ9999
F63:S011	F63 Batt Test	IA	IR	9999	IA9999	IR9999
F63:S012	F63 LAN Comms	EM	EN	9999	EM9999	EN9999
F63:S013	F63 Spare1	UA	UR	9999	UA9999	UR9999
F63:S014	F63 Spare2	UA	UR	9999	UA9999	UR9999
F64:Z001	F64:Z001	UA	UR	9999	UA9999	UR9999
F64:Z002	F64:Z002	UA	UR	9999	UA9999	UR9999
F64:Z003	F64:Z003	UA	UR	9999	UA9999	UR9999
F64:Z004	F64:Z004	UA	UR	9999	UA9999	UR9999
F64:Z005	F64:Z005	UA	UR	9999	UA9999	UR9999
F64:Z006	F64:Z006	UA	UR	9999	UA9999	UR9999
F64:Z007	F64:Z007	UA	UR	9999	UA9999	UR9999
F64:Z008	F64:Z008	UA	UR	9999	UA9999	UR9999
F64:Z009	F64:Z009	UA	UR	9999	UA9999	UR9999
F64:Z010	F64:Z010	UA	UR	9999	UA9999	UR9999
F64:Z011	F64:Z011	UA	UR	9999	UA9999	UR9999
F64:Z012	F64:Z012	UA	UR	9999	UA9999	UR9999
F64:Z013	F64:Z013	UA	UR	9999	UA9999	UR9999
F64:Z014	F64:Z014	UA	UR	9999	UA9999	UR9999
F64:Z015	F64:Z015	UA	UR	9999	UA9999	UR9999
F64:Z016	F64:Z016	UA	UR	9999	UA9999	UR9999
F64:Z017	F64:Z017	UA	UR	9999	UA9999	UR9999
F64:Z018	F64:Z018	UA	UR	9999	UA9999	UR9999
F64:Z019	F64:Z019	UA	UR	9999	UA9999	UR9999
F64:Z020	F64:Z020	UA	UR	9999	UA9999	UR9999
F64:Z021	F64:Z021	UA	UR	9999	UA9999	UR9999
F64:Z022	F64:Z022	UA	UR	9999	UA9999	UR9999
F64:Z023	F64:Z023	UA	UR	9999	UA9999	UR9999
F64:Z024	F64:Z024	UA	UR	9999	UA9999	UR9999
F64:Z025	F64:Z025	UA	UR	9999	UA9999	UR9999
F64:Z026	F64:Z026	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F64:Z027	F64:Z027	UA	UR	9999	UA9999	UR9999
F64:Z028	F64:Z028	UA	UR	9999	UA9999	UR9999
F64:Z029	F64:Z029	UA	UR	9999	UA9999	UR9999
F64:Z030	F64:Z030	UA	UR	9999	UA9999	UR9999
F64:Z031	F64:Z031	UA	UR	9999	UA9999	UR9999
F64:Z032	F64:Z032	UA	UR	9999	UA9999	UR9999
F64:S001	F64 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F64:S002	F64 XmitPollFail	NA	NS	9999	NA9999	NS9999
F64:S003	F64 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F64:S004	F64 Cab Tamper	TA	TR	9999	TA9999	TR9999
F64:S005	F64 AC fail	AT	AR	9999	AT9999	AR9999
F64:S006	F64 Low Batt	YT	YR	9999	YT9999	YR9999
F64:S007	F64 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F64:S008	F64 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F64:S009	F64 Low Volts	YP	YQ	9999	YP9999	YQ9999
F64:S010	F64 PS Fail	YP	YQ	9999	YP9999	YQ9999
F64:S011	F64 Batt Test	IA	IR	9999	IA9999	IR9999
F64:S012	F64 LAN Comms	EM	EN	9999	EM9999	EN9999
F64:S013	F64 Spare1	UA	UR	9999	UA9999	UR9999
F64:S014	F64 Spare2	UA	UR	9999	UA9999	UR9999
F65:Z001	F65:Z001	UA	UR	9999	UA9999	UR9999
F65:Z002	F65:Z002	UA	UR	9999	UA9999	UR9999
F65:Z003	F65:Z003	UA	UR	9999	UA9999	UR9999
F65:Z004	F65:Z004	UA	UR	9999	UA9999	UR9999
F65:Z005	F65:Z005	UA	UR	9999	UA9999	UR9999
F65:Z006	F65:Z006	UA	UR	9999	UA9999	UR9999
F65:Z007	F65:Z007	UA	UR	9999	UA9999	UR9999
F65:Z008	F65:Z008	UA	UR	9999	UA9999	UR9999
F65:Z009	F65:Z009	UA	UR	9999	UA9999	UR9999
F65:Z010	F65:Z010	UA	UR	9999	UA9999	UR9999
F65:Z011	F65:Z011	UA	UR	9999	UA9999	UR9999
F65:Z012	F65:Z012	UA	UR	9999	UA9999	UR9999
F65:Z013	F65:Z013	UA	UR	9999	UA9999	UR9999
F65:Z014	F65:Z014	UA	UR	9999	UA9999	UR9999
F65:Z015	F65:Z015	UA	UR	9999	UA9999	UR9999
F65:Z016	F65:Z016	UA	UR	9999	UA9999	UR9999
F65:Z017	F65:Z017	UA	UR	9999	UA9999	UR9999
F65:Z018	F65:Z018	UA	UR	9999	UA9999	UR9999
F65:Z019	F65:Z019	UA	UR	9999	UA9999	UR9999
F65:Z020	F65:Z020	UA	UR	9999	UA9999	UR9999
F65:Z021	F65:Z021	UA	UR	9999	UA9999	UR9999
F65:Z022	F65:Z022	UA	UR	9999	UA9999	UR9999
F65:Z023	F65:Z023	UA	UR	9999	UA9999	UR9999
F65:Z024	F65:Z024	UA	UR	9999	UA9999	UR9999
F65:Z025	F65:Z025	UA	UR	9999	UA9999	UR9999
F65:Z026	F65:Z026	UA	UR	9999	UA9999	UR9999
F65:Z027	F65:Z027	UA	UR	9999	UA9999	UR9999
F65:Z028	F65:Z028	UA	UR	9999	UA9999	UR9999
F65:Z029	F65:Z029	UA	UR	9999	UA9999	UR9999
F65:Z030	F65:Z030	UA	UR	9999	UA9999	UR9999
F65:Z031	F65:Z031	UA	UR	9999	UA9999	UR9999
F65:Z032	F65:Z032	UA	UR	9999	UA9999	UR9999
F65:S001	F65 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F65:S002	F65 XmitPollFail	NA	NS	9999	NA9999	NS9999
F65:S003	F65 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F65:S004	F65 Cab Tamper	TA	TR	9999	TA9999	TR9999
F65:S005	F65 AC fail	AT	AR	9999	AT9999	AR9999
F65:S006	F65 Low Batt	YT	YR	9999	YT9999	YR9999
F65:S007	F65 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F65:S008	F65 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F65:S009	F65 Low Volts	YP	YQ	9999	YP9999	YQ9999
F65:S010	F65 PS Fail	YP	YQ	9999	YP9999	YQ9999
F65:S011	F65 Batt Test	IA	IR	9999	IA9999	IR9999
F65:S012	F65 LAN Comms	EM	EN	9999	EM9999	EN9999
F65:S013	F65 Spare1	UA	UR	9999	UA9999	UR9999
F65:S014	F65 Spare2	UA	UR	9999	UA9999	UR9999
F66:Z001	F66:Z001	UA	UR	9999	UA9999	UR9999
F66:Z002	F66:Z002	UA	UR	9999	UA9999	UR9999
F66:Z003	F66:Z003	UA	UR	9999	UA9999	UR9999
F66:Z004	F66:Z004	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F66:Z005	F66:Z005	UA	UR	9999	UA9999	UR9999
F66:Z006	F66:Z006	UA	UR	9999	UA9999	UR9999
F66:Z007	F66:Z007	UA	UR	9999	UA9999	UR9999
F66:Z008	F66:Z008	UA	UR	9999	UA9999	UR9999
F66:Z009	F66:Z009	UA	UR	9999	UA9999	UR9999
F66:Z010	F66:Z010	UA	UR	9999	UA9999	UR9999
F66:Z011	F66:Z011	UA	UR	9999	UA9999	UR9999
F66:Z012	F66:Z012	UA	UR	9999	UA9999	UR9999
F66:Z013	F66:Z013	UA	UR	9999	UA9999	UR9999
F66:Z014	F66:Z014	UA	UR	9999	UA9999	UR9999
F66:Z015	F66:Z015	UA	UR	9999	UA9999	UR9999
F66:Z016	F66:Z016	UA	UR	9999	UA9999	UR9999
F66:Z017	F66:Z017	UA	UR	9999	UA9999	UR9999
F66:Z018	F66:Z018	UA	UR	9999	UA9999	UR9999
F66:Z019	F66:Z019	UA	UR	9999	UA9999	UR9999
F66:Z020	F66:Z020	UA	UR	9999	UA9999	UR9999
F66:Z021	F66:Z021	UA	UR	9999	UA9999	UR9999
F66:Z022	F66:Z022	UA	UR	9999	UA9999	UR9999
F66:Z023	F66:Z023	UA	UR	9999	UA9999	UR9999
F66:Z024	F66:Z024	UA	UR	9999	UA9999	UR9999
F66:Z025	F66:Z025	UA	UR	9999	UA9999	UR9999
F66:Z026	F66:Z026	UA	UR	9999	UA9999	UR9999
F66:Z027	F66:Z027	UA	UR	9999	UA9999	UR9999
F66:Z028	F66:Z028	UA	UR	9999	UA9999	UR9999
F66:Z029	F66:Z029	UA	UR	9999	UA9999	UR9999
F66:Z030	F66:Z030	UA	UR	9999	UA9999	UR9999
F66:Z031	F66:Z031	UA	UR	9999	UA9999	UR9999
F66:Z032	F66:Z032	UA	UR	9999	UA9999	UR9999
F66:S001	F66 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F66:S002	F66 XmitPollFail	NA	NS	9999	NA9999	NS9999
F66:S003	F66 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F66:S004	F66 Cab Tamper	TA	TR	9999	TA9999	TR9999
F66:S005	F66 AC fail	AT	AR	9999	AT9999	AR9999
F66:S006	F66 Low Batt	YT	YR	9999	YT9999	YR9999
F66:S007	F66 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F66:S008	F66 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F66:S009	F66 Low Volts	YP	YQ	9999	YP9999	YQ9999
F66:S010	F66 PS Fail	YP	YQ	9999	YP9999	YQ9999
F66:S011	F66 Batt Test	IA	IR	9999	IA9999	IR9999
F66:S012	F66 LAN Comms	EM	EN	9999	EM9999	EN9999
F66:S013	F66 Spare1	UA	UR	9999	UA9999	UR9999
F66:S014	F66 Spare2	UA	UR	9999	UA9999	UR9999
F67:Z001	F67:Z001	UA	UR	9999	UA9999	UR9999
F67:Z002	F67:Z002	UA	UR	9999	UA9999	UR9999
F67:Z003	F67:Z003	UA	UR	9999	UA9999	UR9999
F67:Z004	F67:Z004	UA	UR	9999	UA9999	UR9999
F67:Z005	F67:Z005	UA	UR	9999	UA9999	UR9999
F67:Z006	F67:Z006	UA	UR	9999	UA9999	UR9999
F67:Z007	F67:Z007	UA	UR	9999	UA9999	UR9999
F67:Z008	F67:Z008	UA	UR	9999	UA9999	UR9999
F67:Z009	F67:Z009	UA	UR	9999	UA9999	UR9999
F67:Z010	F67:Z010	UA	UR	9999	UA9999	UR9999
F67:Z011	F67:Z011	UA	UR	9999	UA9999	UR9999
F67:Z012	F67:Z012	UA	UR	9999	UA9999	UR9999
F67:Z013	F67:Z013	UA	UR	9999	UA9999	UR9999
F67:Z014	F67:Z014	UA	UR	9999	UA9999	UR9999
F67:Z015	F67:Z015	UA	UR	9999	UA9999	UR9999
F67:Z016	F67:Z016	UA	UR	9999	UA9999	UR9999
F67:Z017	F67:Z017	UA	UR	9999	UA9999	UR9999
F67:Z018	F67:Z018	UA	UR	9999	UA9999	UR9999
F67:Z019	F67:Z019	UA	UR	9999	UA9999	UR9999
F67:Z020	F67:Z020	UA	UR	9999	UA9999	UR9999
F67:Z021	F67:Z021	UA	UR	9999	UA9999	UR9999
F67:Z022	F67:Z022	UA	UR	9999	UA9999	UR9999
F67:Z023	F67:Z023	UA	UR	9999	UA9999	UR9999
F67:Z024	F67:Z024	UA	UR	9999	UA9999	UR9999
F67:Z025	F67:Z025	UA	UR	9999	UA9999	UR9999
F67:Z026	F67:Z026	UA	UR	9999	UA9999	UR9999
F67:Z027	F67:Z027	UA	UR	9999	UA9999	UR9999
F67:Z028	F67:Z028	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F67:Z029	F67:Z029	UA	UR	9999	UA9999	UR9999
F67:Z030	F67:Z030	UA	UR	9999	UA9999	UR9999
F67:Z031	F67:Z031	UA	UR	9999	UA9999	UR9999
F67:Z032	F67:Z032	UA	UR	9999	UA9999	UR9999
F67:S001	F67 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F67:S002	F67 XmitPollFail	NA	NS	9999	NA9999	NS9999
F67:S003	F67 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F67:S004	F67 Cab Tamper	TA	TR	9999	TA9999	TR9999
F67:S005	F67 AC fail	AT	AR	9999	AT9999	AR9999
F67:S006	F67 Low Batt	YT	YR	9999	YT9999	YR9999
F67:S007	F67 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F67:S008	F67 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F67:S009	F67 Low Volts	YP	YQ	9999	YP9999	YQ9999
F67:S010	F67 PS Fail	YP	YQ	9999	YP9999	YQ9999
F67:S011	F67 Batt Test	IA	IR	9999	IA9999	IR9999
F67:S012	F67 LAN Comms	EM	EN	9999	EM9999	EN9999
F67:S013	F67 Spare1	UA	UR	9999	UA9999	UR9999
F67:S014	F67 Spare2	UA	UR	9999	UA9999	UR9999
F68:Z001	F68:Z001	UA	UR	9999	UA9999	UR9999
F68:Z002	F68:Z002	UA	UR	9999	UA9999	UR9999
F68:Z003	F68:Z003	UA	UR	9999	UA9999	UR9999
F68:Z004	F68:Z004	UA	UR	9999	UA9999	UR9999
F68:Z005	F68:Z005	UA	UR	9999	UA9999	UR9999
F68:Z006	F68:Z006	UA	UR	9999	UA9999	UR9999
F68:Z007	F68:Z007	UA	UR	9999	UA9999	UR9999
F68:Z008	F68:Z008	UA	UR	9999	UA9999	UR9999
F68:Z009	F68:Z009	UA	UR	9999	UA9999	UR9999
F68:Z010	F68:Z010	UA	UR	9999	UA9999	UR9999
F68:Z011	F68:Z011	UA	UR	9999	UA9999	UR9999
F68:Z012	F68:Z012	UA	UR	9999	UA9999	UR9999
F68:Z013	F68:Z013	UA	UR	9999	UA9999	UR9999
F68:Z014	F68:Z014	UA	UR	9999	UA9999	UR9999
F68:Z015	F68:Z015	UA	UR	9999	UA9999	UR9999
F68:Z016	F68:Z016	UA	UR	9999	UA9999	UR9999
F68:Z017	F68:Z017	UA	UR	9999	UA9999	UR9999
F68:Z018	F68:Z018	UA	UR	9999	UA9999	UR9999
F68:Z019	F68:Z019	UA	UR	9999	UA9999	UR9999
F68:Z020	F68:Z020	UA	UR	9999	UA9999	UR9999
F68:Z021	F68:Z021	UA	UR	9999	UA9999	UR9999
F68:Z022	F68:Z022	UA	UR	9999	UA9999	UR9999
F68:Z023	F68:Z023	UA	UR	9999	UA9999	UR9999
F68:Z024	F68:Z024	UA	UR	9999	UA9999	UR9999
F68:Z025	F68:Z025	UA	UR	9999	UA9999	UR9999
F68:Z026	F68:Z026	UA	UR	9999	UA9999	UR9999
F68:Z027	F68:Z027	UA	UR	9999	UA9999	UR9999
F68:Z028	F68:Z028	UA	UR	9999	UA9999	UR9999
F68:Z029	F68:Z029	UA	UR	9999	UA9999	UR9999
F68:Z030	F68:Z030	UA	UR	9999	UA9999	UR9999
F68:Z031	F68:Z031	UA	UR	9999	UA9999	UR9999
F68:Z032	F68:Z032	UA	UR	9999	UA9999	UR9999
F68:S001	F68 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F68:S002	F68 XmitPollFail	NA	NS	9999	NA9999	NS9999
F68:S003	F68 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F68:S004	F68 Cab Tamper	TA	TR	9999	TA9999	TR9999
F68:S005	F68 AC fail	AT	AR	9999	AT9999	AR9999
F68:S006	F68 Low Batt	YT	YR	9999	YT9999	YR9999
F68:S007	F68 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F68:S008	F68 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F68:S009	F68 Low Volts	YP	YQ	9999	YP9999	YQ9999
F68:S010	F68 PS Fail	YP	YQ	9999	YP9999	YQ9999
F68:S011	F68 Batt Test	IA	IR	9999	IA9999	IR9999
F68:S012	F68 LAN Comms	EM	EN	9999	EM9999	EN9999
F68:S013	F68 Spare1	UA	UR	9999	UA9999	UR9999
F68:S014	F68 Spare2	UA	UR	9999	UA9999	UR9999
F69:Z001	F69:Z001	UA	UR	9999	UA9999	UR9999
F69:Z002	F69:Z002	UA	UR	9999	UA9999	UR9999
F69:Z003	F69:Z003	UA	UR	9999	UA9999	UR9999
F69:Z004	F69:Z004	UA	UR	9999	UA9999	UR9999
F69:Z005	F69:Z005	UA	UR	9999	UA9999	UR9999
F69:Z006	F69:Z006	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F69:Z007	F69:Z007	UA	UR	9999	UA9999	UR9999
F69:Z008	F69:Z008	UA	UR	9999	UA9999	UR9999
F69:Z009	F69:Z009	UA	UR	9999	UA9999	UR9999
F69:Z010	F69:Z010	UA	UR	9999	UA9999	UR9999
F69:Z011	F69:Z011	UA	UR	9999	UA9999	UR9999
F69:Z012	F69:Z012	UA	UR	9999	UA9999	UR9999
F69:Z013	F69:Z013	UA	UR	9999	UA9999	UR9999
F69:Z014	F69:Z014	UA	UR	9999	UA9999	UR9999
F69:Z015	F69:Z015	UA	UR	9999	UA9999	UR9999
F69:Z016	F69:Z016	UA	UR	9999	UA9999	UR9999
F69:Z017	F69:Z017	UA	UR	9999	UA9999	UR9999
F69:Z018	F69:Z018	UA	UR	9999	UA9999	UR9999
F69:Z019	F69:Z019	UA	UR	9999	UA9999	UR9999
F69:Z020	F69:Z020	UA	UR	9999	UA9999	UR9999
F69:Z021	F69:Z021	UA	UR	9999	UA9999	UR9999
F69:Z022	F69:Z022	UA	UR	9999	UA9999	UR9999
F69:Z023	F69:Z023	UA	UR	9999	UA9999	UR9999
F69:Z024	F69:Z024	UA	UR	9999	UA9999	UR9999
F69:Z025	F69:Z025	UA	UR	9999	UA9999	UR9999
F69:Z026	F69:Z026	UA	UR	9999	UA9999	UR9999
F69:Z027	F69:Z027	UA	UR	9999	UA9999	UR9999
F69:Z028	F69:Z028	UA	UR	9999	UA9999	UR9999
F69:Z029	F69:Z029	UA	UR	9999	UA9999	UR9999
F69:Z030	F69:Z030	UA	UR	9999	UA9999	UR9999
F69:Z031	F69:Z031	UA	UR	9999	UA9999	UR9999
F69:Z032	F69:Z032	UA	UR	9999	UA9999	UR9999
F69:S001	F69 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F69:S002	F69 XmitPollFail	NA	NS	9999	NA9999	NS9999
F69:S003	F69 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F69:S004	F69 Cab Tamper	TA	TR	9999	TA9999	TR9999
F69:S005	F69 AC fail	AT	AR	9999	AT9999	AR9999
F69:S006	F69 Low Batt	YT	YR	9999	YT9999	YR9999
F69:S007	F69 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F69:S008	F69 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F69:S009	F69 Low Volts	YP	YQ	9999	YP9999	YQ9999
F69:S010	F69 PS Fail	YP	YQ	9999	YP9999	YQ9999
F69:S011	F69 Batt Test	IA	IR	9999	IA9999	IR9999
F69:S012	F69 LAN Comms	EM	EN	9999	EM9999	EN9999
F69:S013	F69 Spare1	UA	UR	9999	UA9999	UR9999
F69:S014	F69 Spare2	UA	UR	9999	UA9999	UR9999
F70:Z001	F70:Z001	UA	UR	9999	UA9999	UR9999
F70:Z002	F70:Z002	UA	UR	9999	UA9999	UR9999
F70:Z003	F70:Z003	UA	UR	9999	UA9999	UR9999
F70:Z004	F70:Z004	UA	UR	9999	UA9999	UR9999
F70:Z005	F70:Z005	UA	UR	9999	UA9999	UR9999
F70:Z006	F70:Z006	UA	UR	9999	UA9999	UR9999
F70:Z007	F70:Z007	UA	UR	9999	UA9999	UR9999
F70:Z008	F70:Z008	UA	UR	9999	UA9999	UR9999
F70:Z009	F70:Z009	UA	UR	9999	UA9999	UR9999
F70:Z010	F70:Z010	UA	UR	9999	UA9999	UR9999
F70:Z011	F70:Z011	UA	UR	9999	UA9999	UR9999
F70:Z012	F70:Z012	UA	UR	9999	UA9999	UR9999
F70:Z013	F70:Z013	UA	UR	9999	UA9999	UR9999
F70:Z014	F70:Z014	UA	UR	9999	UA9999	UR9999
F70:Z015	F70:Z015	UA	UR	9999	UA9999	UR9999
F70:Z016	F70:Z016	UA	UR	9999	UA9999	UR9999
F70:Z017	F70:Z017	UA	UR	9999	UA9999	UR9999
F70:Z018	F70:Z018	UA	UR	9999	UA9999	UR9999
F70:Z019	F70:Z019	UA	UR	9999	UA9999	UR9999
F70:Z020	F70:Z020	UA	UR	9999	UA9999	UR9999
F70:Z021	F70:Z021	UA	UR	9999	UA9999	UR9999
F70:Z022	F70:Z022	UA	UR	9999	UA9999	UR9999
F70:Z023	F70:Z023	UA	UR	9999	UA9999	UR9999
F70:Z024	F70:Z024	UA	UR	9999	UA9999	UR9999
F70:Z025	F70:Z025	UA	UR	9999	UA9999	UR9999
F70:Z026	F70:Z026	UA	UR	9999	UA9999	UR9999
F70:Z027	F70:Z027	UA	UR	9999	UA9999	UR9999
F70:Z028	F70:Z028	UA	UR	9999	UA9999	UR9999
F70:Z029	F70:Z029	UA	UR	9999	UA9999	UR9999
F70:Z030	F70:Z030	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F70:Z031	F70:Z031	UA	UR	9999	UA9999	UR9999
F70:Z032	F70:Z032	UA	UR	9999	UA9999	UR9999
F70:S001	F70 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F70:S002	F70 XmitPollFail	NA	NS	9999	NA9999	NS9999
F70:S003	F70 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F70:S004	F70 Cab Tamper	TA	TR	9999	TA9999	TR9999
F70:S005	F70 AC fail	AT	AR	9999	AT9999	AR9999
F70:S006	F70 Low Batt	YT	YR	9999	YT9999	YR9999
F70:S007	F70 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F70:S008	F70 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F70:S009	F70 Low Volts	YP	YQ	9999	YP9999	YQ9999
F70:S010	F70 PS Fail	YP	YQ	9999	YP9999	YQ9999
F70:S011	F70 Batt Test	IA	IR	9999	IA9999	IR9999
F70:S012	F70 LAN Comms	EM	EN	9999	EM9999	EN9999
F70:S013	F70 Spare1	UA	UR	9999	UA9999	UR9999
F70:S014	F70 Spare2	UA	UR	9999	UA9999	UR9999
F71:Z001	F71:Z001	UA	UR	9999	UA9999	UR9999
F71:Z002	F71:Z002	UA	UR	9999	UA9999	UR9999
F71:Z003	F71:Z003	UA	UR	9999	UA9999	UR9999
F71:Z004	F71:Z004	UA	UR	9999	UA9999	UR9999
F71:Z005	F71:Z005	UA	UR	9999	UA9999	UR9999
F71:Z006	F71:Z006	UA	UR	9999	UA9999	UR9999
F71:Z007	F71:Z007	UA	UR	9999	UA9999	UR9999
F71:Z008	F71:Z008	UA	UR	9999	UA9999	UR9999
F71:Z009	F71:Z009	UA	UR	9999	UA9999	UR9999
F71:Z010	F71:Z010	UA	UR	9999	UA9999	UR9999
F71:Z011	F71:Z011	UA	UR	9999	UA9999	UR9999
F71:Z012	F71:Z012	UA	UR	9999	UA9999	UR9999
F71:Z013	F71:Z013	UA	UR	9999	UA9999	UR9999
F71:Z014	F71:Z014	UA	UR	9999	UA9999	UR9999
F71:Z015	F71:Z015	UA	UR	9999	UA9999	UR9999
F71:Z016	F71:Z016	UA	UR	9999	UA9999	UR9999
F71:Z017	F71:Z017	UA	UR	9999	UA9999	UR9999
F71:Z018	F71:Z018	UA	UR	9999	UA9999	UR9999
F71:Z019	F71:Z019	UA	UR	9999	UA9999	UR9999
F71:Z020	F71:Z020	UA	UR	9999	UA9999	UR9999
F71:Z021	F71:Z021	UA	UR	9999	UA9999	UR9999
F71:Z022	F71:Z022	UA	UR	9999	UA9999	UR9999
F71:Z023	F71:Z023	UA	UR	9999	UA9999	UR9999
F71:Z024	F71:Z024	UA	UR	9999	UA9999	UR9999
F71:Z025	F71:Z025	UA	UR	9999	UA9999	UR9999
F71:Z026	F71:Z026	UA	UR	9999	UA9999	UR9999
F71:Z027	F71:Z027	UA	UR	9999	UA9999	UR9999
F71:Z028	F71:Z028	UA	UR	9999	UA9999	UR9999
F71:Z029	F71:Z029	UA	UR	9999	UA9999	UR9999
F71:Z030	F71:Z030	UA	UR	9999	UA9999	UR9999
F71:Z031	F71:Z031	UA	UR	9999	UA9999	UR9999
F71:Z032	F71:Z032	UA	UR	9999	UA9999	UR9999
F71:S001	F71 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F71:S002	F71 XmitPollFail	NA	NS	9999	NA9999	NS9999
F71:S003	F71 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F71:S004	F71 Cab Tamper	TA	TR	9999	TA9999	TR9999
F71:S005	F71 AC fail	AT	AR	9999	AT9999	AR9999
F71:S006	F71 Low Batt	YT	YR	9999	YT9999	YR9999
F71:S007	F71 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F71:S008	F71 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F71:S009	F71 Low Volts	YP	YQ	9999	YP9999	YQ9999
F71:S010	F71 PS Fail	YP	YQ	9999	YP9999	YQ9999
F71:S011	F71 Batt Test	IA	IR	9999	IA9999	IR9999
F71:S012	F71 LAN Comms	EM	EN	9999	EM9999	EN9999
F71:S013	F71 Spare1	UA	UR	9999	UA9999	UR9999
F71:S014	F71 Spare2	UA	UR	9999	UA9999	UR9999
F72:Z001	F72:Z001	UA	UR	9999	UA9999	UR9999
F72:Z002	F72:Z002	UA	UR	9999	UA9999	UR9999
F72:Z003	F72:Z003	UA	UR	9999	UA9999	UR9999
F72:Z004	F72:Z004	UA	UR	9999	UA9999	UR9999
F72:Z005	F72:Z005	UA	UR	9999	UA9999	UR9999
F72:Z006	F72:Z006	UA	UR	9999	UA9999	UR9999
F72:Z007	F72:Z007	UA	UR	9999	UA9999	UR9999
F72:Z008	F72:Z008	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F72:Z009	F72:Z009	UA	UR	9999	UA9999	UR9999
F72:Z010	F72:Z010	UA	UR	9999	UA9999	UR9999
F72:Z011	F72:Z011	UA	UR	9999	UA9999	UR9999
F72:Z012	F72:Z012	UA	UR	9999	UA9999	UR9999
F72:Z013	F72:Z013	UA	UR	9999	UA9999	UR9999
F72:Z014	F72:Z014	UA	UR	9999	UA9999	UR9999
F72:Z015	F72:Z015	UA	UR	9999	UA9999	UR9999
F72:Z016	F72:Z016	UA	UR	9999	UA9999	UR9999
F72:Z017	F72:Z017	UA	UR	9999	UA9999	UR9999
F72:Z018	F72:Z018	UA	UR	9999	UA9999	UR9999
F72:Z019	F72:Z019	UA	UR	9999	UA9999	UR9999
F72:Z020	F72:Z020	UA	UR	9999	UA9999	UR9999
F72:Z021	F72:Z021	UA	UR	9999	UA9999	UR9999
F72:Z022	F72:Z022	UA	UR	9999	UA9999	UR9999
F72:Z023	F72:Z023	UA	UR	9999	UA9999	UR9999
F72:Z024	F72:Z024	UA	UR	9999	UA9999	UR9999
F72:Z025	F72:Z025	UA	UR	9999	UA9999	UR9999
F72:Z026	F72:Z026	UA	UR	9999	UA9999	UR9999
F72:Z027	F72:Z027	UA	UR	9999	UA9999	UR9999
F72:Z028	F72:Z028	UA	UR	9999	UA9999	UR9999
F72:Z029	F72:Z029	UA	UR	9999	UA9999	UR9999
F72:Z030	F72:Z030	UA	UR	9999	UA9999	UR9999
F72:Z031	F72:Z031	UA	UR	9999	UA9999	UR9999
F72:Z032	F72:Z032	UA	UR	9999	UA9999	UR9999
F72:S001	F72 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F72:S002	F72 XmitPollFail	NA	NS	9999	NA9999	NS9999
F72:S003	F72 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F72:S004	F72 Cab Tamper	TA	TR	9999	TA9999	TR9999
F72:S005	F72 AC fail	AT	AR	9999	AT9999	AR9999
F72:S006	F72 Low Batt	YT	YR	9999	YT9999	YR9999
F72:S007	F72 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F72:S008	F72 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F72:S009	F72 Low Volts	YP	YQ	9999	YP9999	YQ9999
F72:S010	F72 PS Fail	YP	YQ	9999	YP9999	YQ9999
F72:S011	F72 Batt Test	IA	IR	9999	IA9999	IR9999
F72:S012	F72 LAN Comms	EM	EN	9999	EM9999	EN9999
F72:S013	F72 Spare1	UA	UR	9999	UA9999	UR9999
F72:S014	F72 Spare2	UA	UR	9999	UA9999	UR9999
F73:Z001	F73:Z001	UA	UR	9999	UA9999	UR9999
F73:Z002	F73:Z002	UA	UR	9999	UA9999	UR9999
F73:Z003	F73:Z003	UA	UR	9999	UA9999	UR9999
F73:Z004	F73:Z004	UA	UR	9999	UA9999	UR9999
F73:Z005	F73:Z005	UA	UR	9999	UA9999	UR9999
F73:Z006	F73:Z006	UA	UR	9999	UA9999	UR9999
F73:Z007	F73:Z007	UA	UR	9999	UA9999	UR9999
F73:Z008	F73:Z008	UA	UR	9999	UA9999	UR9999
F73:Z009	F73:Z009	UA	UR	9999	UA9999	UR9999
F73:Z010	F73:Z010	UA	UR	9999	UA9999	UR9999
F73:Z011	F73:Z011	UA	UR	9999	UA9999	UR9999
F73:Z012	F73:Z012	UA	UR	9999	UA9999	UR9999
F73:Z013	F73:Z013	UA	UR	9999	UA9999	UR9999
F73:Z014	F73:Z014	UA	UR	9999	UA9999	UR9999
F73:Z015	F73:Z015	UA	UR	9999	UA9999	UR9999
F73:Z016	F73:Z016	UA	UR	9999	UA9999	UR9999
F73:Z017	F73:Z017	UA	UR	9999	UA9999	UR9999
F73:Z018	F73:Z018	UA	UR	9999	UA9999	UR9999
F73:Z019	F73:Z019	UA	UR	9999	UA9999	UR9999
F73:Z020	F73:Z020	UA	UR	9999	UA9999	UR9999
F73:Z021	F73:Z021	UA	UR	9999	UA9999	UR9999
F73:Z022	F73:Z022	UA	UR	9999	UA9999	UR9999
F73:Z023	F73:Z023	UA	UR	9999	UA9999	UR9999
F73:Z024	F73:Z024	UA	UR	9999	UA9999	UR9999
F73:Z025	F73:Z025	UA	UR	9999	UA9999	UR9999
F73:Z026	F73:Z026	UA	UR	9999	UA9999	UR9999
F73:Z027	F73:Z027	UA	UR	9999	UA9999	UR9999
F73:Z028	F73:Z028	UA	UR	9999	UA9999	UR9999
F73:Z029	F73:Z029	UA	UR	9999	UA9999	UR9999
F73:Z030	F73:Z030	UA	UR	9999	UA9999	UR9999
F73:Z031	F73:Z031	UA	UR	9999	UA9999	UR9999
F73:Z032	F73:Z032	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F73:S001	F73 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F73:S002	F73 XmitPollFail	NA	NS	9999	NA9999	NS9999
F73:S003	F73 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F73:S004	F73 Cab Tamper	TA	TR	9999	TA9999	TR9999
F73:S005	F73 AC fail	AT	AR	9999	AT9999	AR9999
F73:S006	F73 Low Batt	YT	YR	9999	YT9999	YR9999
F73:S007	F73 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F73:S008	F73 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F73:S009	F73 Low Volts	YP	YQ	9999	YP9999	YQ9999
F73:S010	F73 PS Fail	YP	YQ	9999	YP9999	YQ9999
F73:S011	F73 Batt Test	IA	IR	9999	IA9999	IR9999
F73:S012	F73 LAN Comms	EM	EN	9999	EM9999	EN9999
F73:S013	F73 Spare1	UA	UR	9999	UA9999	UR9999
F73:S014	F73 Spare2	UA	UR	9999	UA9999	UR9999
F74:Z001	F74:Z001	UA	UR	9999	UA9999	UR9999
F74:Z002	F74:Z002	UA	UR	9999	UA9999	UR9999
F74:Z003	F74:Z003	UA	UR	9999	UA9999	UR9999
F74:Z004	F74:Z004	UA	UR	9999	UA9999	UR9999
F74:Z005	F74:Z005	UA	UR	9999	UA9999	UR9999
F74:Z006	F74:Z006	UA	UR	9999	UA9999	UR9999
F74:Z007	F74:Z007	UA	UR	9999	UA9999	UR9999
F74:Z008	F74:Z008	UA	UR	9999	UA9999	UR9999
F74:Z009	F74:Z009	UA	UR	9999	UA9999	UR9999
F74:Z010	F74:Z010	UA	UR	9999	UA9999	UR9999
F74:Z011	F74:Z011	UA	UR	9999	UA9999	UR9999
F74:Z012	F74:Z012	UA	UR	9999	UA9999	UR9999
F74:Z013	F74:Z013	UA	UR	9999	UA9999	UR9999
F74:Z014	F74:Z014	UA	UR	9999	UA9999	UR9999
F74:Z015	F74:Z015	UA	UR	9999	UA9999	UR9999
F74:Z016	F74:Z016	UA	UR	9999	UA9999	UR9999
F74:Z017	F74:Z017	UA	UR	9999	UA9999	UR9999
F74:Z018	F74:Z018	UA	UR	9999	UA9999	UR9999
F74:Z019	F74:Z019	UA	UR	9999	UA9999	UR9999
F74:Z020	F74:Z020	UA	UR	9999	UA9999	UR9999
F74:Z021	F74:Z021	UA	UR	9999	UA9999	UR9999
F74:Z022	F74:Z022	UA	UR	9999	UA9999	UR9999
F74:Z023	F74:Z023	UA	UR	9999	UA9999	UR9999
F74:Z024	F74:Z024	UA	UR	9999	UA9999	UR9999
F74:Z025	F74:Z025	UA	UR	9999	UA9999	UR9999
F74:Z026	F74:Z026	UA	UR	9999	UA9999	UR9999
F74:Z027	F74:Z027	UA	UR	9999	UA9999	UR9999
F74:Z028	F74:Z028	UA	UR	9999	UA9999	UR9999
F74:Z029	F74:Z029	UA	UR	9999	UA9999	UR9999
F74:Z030	F74:Z030	UA	UR	9999	UA9999	UR9999
F74:Z031	F74:Z031	UA	UR	9999	UA9999	UR9999
F74:Z032	F74:Z032	UA	UR	9999	UA9999	UR9999
F74:S001	F74 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F74:S002	F74 XmitPollFail	NA	NS	9999	NA9999	NS9999
F74:S003	F74 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F74:S004	F74 Cab Tamper	TA	TR	9999	TA9999	TR9999
F74:S005	F74 AC fail	AT	AR	9999	AT9999	AR9999
F74:S006	F74 Low Batt	YT	YR	9999	YT9999	YR9999
F74:S007	F74 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F74:S008	F74 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F74:S009	F74 Low Volts	YP	YQ	9999	YP9999	YQ9999
F74:S010	F74 PS Fail	YP	YQ	9999	YP9999	YQ9999
F74:S011	F74 Batt Test	IA	IR	9999	IA9999	IR9999
F74:S012	F74 LAN Comms	EM	EN	9999	EM9999	EN9999
F74:S013	F74 Spare1	UA	UR	9999	UA9999	UR9999
F74:S014	F74 Spare2	UA	UR	9999	UA9999	UR9999
F75:Z001	F75:Z001	UA	UR	9999	UA9999	UR9999
F75:Z002	F75:Z002	UA	UR	9999	UA9999	UR9999
F75:Z003	F75:Z003	UA	UR	9999	UA9999	UR9999
F75:Z004	F75:Z004	UA	UR	9999	UA9999	UR9999
F75:Z005	F75:Z005	UA	UR	9999	UA9999	UR9999
F75:Z006	F75:Z006	UA	UR	9999	UA9999	UR9999
F75:Z007	F75:Z007	UA	UR	9999	UA9999	UR9999
F75:Z008	F75:Z008	UA	UR	9999	UA9999	UR9999
F75:Z009	F75:Z009	UA	UR	9999	UA9999	UR9999
F75:Z010	F75:Z010	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F75:Z011	F75:Z011	UA	UR	9999	UA9999	UR9999
F75:Z012	F75:Z012	UA	UR	9999	UA9999	UR9999
F75:Z013	F75:Z013	UA	UR	9999	UA9999	UR9999
F75:Z014	F75:Z014	UA	UR	9999	UA9999	UR9999
F75:Z015	F75:Z015	UA	UR	9999	UA9999	UR9999
F75:Z016	F75:Z016	UA	UR	9999	UA9999	UR9999
F75:Z017	F75:Z017	UA	UR	9999	UA9999	UR9999
F75:Z018	F75:Z018	UA	UR	9999	UA9999	UR9999
F75:Z019	F75:Z019	UA	UR	9999	UA9999	UR9999
F75:Z020	F75:Z020	UA	UR	9999	UA9999	UR9999
F75:Z021	F75:Z021	UA	UR	9999	UA9999	UR9999
F75:Z022	F75:Z022	UA	UR	9999	UA9999	UR9999
F75:Z023	F75:Z023	UA	UR	9999	UA9999	UR9999
F75:Z024	F75:Z024	UA	UR	9999	UA9999	UR9999
F75:Z025	F75:Z025	UA	UR	9999	UA9999	UR9999
F75:Z026	F75:Z026	UA	UR	9999	UA9999	UR9999
F75:Z027	F75:Z027	UA	UR	9999	UA9999	UR9999
F75:Z028	F75:Z028	UA	UR	9999	UA9999	UR9999
F75:Z029	F75:Z029	UA	UR	9999	UA9999	UR9999
F75:Z030	F75:Z030	UA	UR	9999	UA9999	UR9999
F75:Z031	F75:Z031	UA	UR	9999	UA9999	UR9999
F75:Z032	F75:Z032	UA	UR	9999	UA9999	UR9999
F75:S001	F75 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F75:S002	F75 XmitPollFail	NA	NS	9999	NA9999	NS9999
F75:S003	F75 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F75:S004	F75 Cab Tamper	TA	TR	9999	TA9999	TR9999
F75:S005	F75 AC fail	AT	AR	9999	AT9999	AR9999
F75:S006	F75 Low Batt	YT	YR	9999	YT9999	YR9999
F75:S007	F75 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F75:S008	F75 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F75:S009	F75 Low Volts	YP	YQ	9999	YP9999	YQ9999
F75:S010	F75 PS Fail	YP	YQ	9999	YP9999	YQ9999
F75:S011	F75 Batt Test	IA	IR	9999	IA9999	IR9999
F75:S012	F75 LAN Comms	EM	EN	9999	EM9999	EN9999
F75:S013	F75 Spare1	UA	UR	9999	UA9999	UR9999
F75:S014	F75 Spare2	UA	UR	9999	UA9999	UR9999
F76:Z001	F76:Z001	UA	UR	9999	UA9999	UR9999
F76:Z002	F76:Z002	UA	UR	9999	UA9999	UR9999
F76:Z003	F76:Z003	UA	UR	9999	UA9999	UR9999
F76:Z004	F76:Z004	UA	UR	9999	UA9999	UR9999
F76:Z005	F76:Z005	UA	UR	9999	UA9999	UR9999
F76:Z006	F76:Z006	UA	UR	9999	UA9999	UR9999
F76:Z007	F76:Z007	UA	UR	9999	UA9999	UR9999
F76:Z008	F76:Z008	UA	UR	9999	UA9999	UR9999
F76:Z009	F76:Z009	UA	UR	9999	UA9999	UR9999
F76:Z010	F76:Z010	UA	UR	9999	UA9999	UR9999
F76:Z011	F76:Z011	UA	UR	9999	UA9999	UR9999
F76:Z012	F76:Z012	UA	UR	9999	UA9999	UR9999
F76:Z013	F76:Z013	UA	UR	9999	UA9999	UR9999
F76:Z014	F76:Z014	UA	UR	9999	UA9999	UR9999
F76:Z015	F76:Z015	UA	UR	9999	UA9999	UR9999
F76:Z016	F76:Z016	UA	UR	9999	UA9999	UR9999
F76:Z017	F76:Z017	UA	UR	9999	UA9999	UR9999
F76:Z018	F76:Z018	UA	UR	9999	UA9999	UR9999
F76:Z019	F76:Z019	UA	UR	9999	UA9999	UR9999
F76:Z020	F76:Z020	UA	UR	9999	UA9999	UR9999
F76:Z021	F76:Z021	UA	UR	9999	UA9999	UR9999
F76:Z022	F76:Z022	UA	UR	9999	UA9999	UR9999
F76:Z023	F76:Z023	UA	UR	9999	UA9999	UR9999
F76:Z024	F76:Z024	UA	UR	9999	UA9999	UR9999
F76:Z025	F76:Z025	UA	UR	9999	UA9999	UR9999
F76:Z026	F76:Z026	UA	UR	9999	UA9999	UR9999
F76:Z027	F76:Z027	UA	UR	9999	UA9999	UR9999
F76:Z028	F76:Z028	UA	UR	9999	UA9999	UR9999
F76:Z029	F76:Z029	UA	UR	9999	UA9999	UR9999
F76:Z030	F76:Z030	UA	UR	9999	UA9999	UR9999
F76:Z031	F76:Z031	UA	UR	9999	UA9999	UR9999
F76:Z032	F76:Z032	UA	UR	9999	UA9999	UR9999
F76:S001	F76 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F76:S002	F76 XmitPollFail	NA	NS	9999	NA9999	NS9999

Integriti SIA DECIMAL Map. V21

F76:S003	F76 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F76:S004	F76 Cab Tamper	TA	TR	9999	TA9999	TR9999
F76:S005	F76 AC fail	AT	AR	9999	AT9999	AR9999
F76:S006	F76 Low Batt	YT	YR	9999	YT9999	YR9999
F76:S007	F76 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F76:S008	F76 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F76:S009	F76 Low Volts	YP	YQ	9999	YP9999	YQ9999
F76:S010	F76 PS Fail	YP	YQ	9999	YP9999	YQ9999
F76:S011	F76 Batt Test	IA	IR	9999	IA9999	IR9999
F76:S012	F76 LAN Comms	EM	EN	9999	EM9999	EN9999
F76:S013	F76 Spare1	UA	UR	9999	UA9999	UR9999
F76:S014	F76 Spare2	UA	UR	9999	UA9999	UR9999
F77:Z001	F77:Z001	UA	UR	9999	UA9999	UR9999
F77:Z002	F77:Z002	UA	UR	9999	UA9999	UR9999
F77:Z003	F77:Z003	UA	UR	9999	UA9999	UR9999
F77:Z004	F77:Z004	UA	UR	9999	UA9999	UR9999
F77:Z005	F77:Z005	UA	UR	9999	UA9999	UR9999
F77:Z006	F77:Z006	UA	UR	9999	UA9999	UR9999
F77:Z007	F77:Z007	UA	UR	9999	UA9999	UR9999
F77:Z008	F77:Z008	UA	UR	9999	UA9999	UR9999
F77:Z009	F77:Z009	UA	UR	9999	UA9999	UR9999
F77:Z010	F77:Z010	UA	UR	9999	UA9999	UR9999
F77:Z011	F77:Z011	UA	UR	9999	UA9999	UR9999
F77:Z012	F77:Z012	UA	UR	9999	UA9999	UR9999
F77:Z013	F77:Z013	UA	UR	9999	UA9999	UR9999
F77:Z014	F77:Z014	UA	UR	9999	UA9999	UR9999
F77:Z015	F77:Z015	UA	UR	9999	UA9999	UR9999
F77:Z016	F77:Z016	UA	UR	9999	UA9999	UR9999
F77:Z017	F77:Z017	UA	UR	9999	UA9999	UR9999
F77:Z018	F77:Z018	UA	UR	9999	UA9999	UR9999
F77:Z019	F77:Z019	UA	UR	9999	UA9999	UR9999
F77:Z020	F77:Z020	UA	UR	9999	UA9999	UR9999
F77:Z021	F77:Z021	UA	UR	9999	UA9999	UR9999
F77:Z022	F77:Z022	UA	UR	9999	UA9999	UR9999
F77:Z023	F77:Z023	UA	UR	9999	UA9999	UR9999
F77:Z024	F77:Z024	UA	UR	9999	UA9999	UR9999
F77:Z025	F77:Z025	UA	UR	9999	UA9999	UR9999
F77:Z026	F77:Z026	UA	UR	9999	UA9999	UR9999
F77:Z027	F77:Z027	UA	UR	9999	UA9999	UR9999
F77:Z028	F77:Z028	UA	UR	9999	UA9999	UR9999
F77:Z029	F77:Z029	UA	UR	9999	UA9999	UR9999
F77:Z030	F77:Z030	UA	UR	9999	UA9999	UR9999
F77:Z031	F77:Z031	UA	UR	9999	UA9999	UR9999
F77:Z032	F77:Z032	UA	UR	9999	UA9999	UR9999
F77:S001	F77 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F77:S002	F77 XmitPollFail	NA	NS	9999	NA9999	NS9999
F77:S003	F77 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F77:S004	F77 Cab Tamper	TA	TR	9999	TA9999	TR9999
F77:S005	F77 AC fail	AT	AR	9999	AT9999	AR9999
F77:S006	F77 Low Batt	YT	YR	9999	YT9999	YR9999
F77:S007	F77 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F77:S008	F77 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F77:S009	F77 Low Volts	YP	YQ	9999	YP9999	YQ9999
F77:S010	F77 PS Fail	YP	YQ	9999	YP9999	YQ9999
F77:S011	F77 Batt Test	IA	IR	9999	IA9999	IR9999
F77:S012	F77 LAN Comms	EM	EN	9999	EM9999	EN9999
F77:S013	F77 Spare1	UA	UR	9999	UA9999	UR9999
F77:S014	F77 Spare2	UA	UR	9999	UA9999	UR9999
F78:Z001	F78:Z001	UA	UR	9999	UA9999	UR9999
F78:Z002	F78:Z002	UA	UR	9999	UA9999	UR9999
F78:Z003	F78:Z003	UA	UR	9999	UA9999	UR9999
F78:Z004	F78:Z004	UA	UR	9999	UA9999	UR9999
F78:Z005	F78:Z005	UA	UR	9999	UA9999	UR9999
F78:Z006	F78:Z006	UA	UR	9999	UA9999	UR9999
F78:Z007	F78:Z007	UA	UR	9999	UA9999	UR9999
F78:Z008	F78:Z008	UA	UR	9999	UA9999	UR9999
F78:Z009	F78:Z009	UA	UR	9999	UA9999	UR9999
F78:Z010	F78:Z010	UA	UR	9999	UA9999	UR9999
F78:Z011	F78:Z011	UA	UR	9999	UA9999	UR9999
F78:Z012	F78:Z012	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F78:Z013	F78:Z013	UA	UR	9999	UA9999	UR9999
F78:Z014	F78:Z014	UA	UR	9999	UA9999	UR9999
F78:Z015	F78:Z015	UA	UR	9999	UA9999	UR9999
F78:Z016	F78:Z016	UA	UR	9999	UA9999	UR9999
F78:Z017	F78:Z017	UA	UR	9999	UA9999	UR9999
F78:Z018	F78:Z018	UA	UR	9999	UA9999	UR9999
F78:Z019	F78:Z019	UA	UR	9999	UA9999	UR9999
F78:Z020	F78:Z020	UA	UR	9999	UA9999	UR9999
F78:Z021	F78:Z021	UA	UR	9999	UA9999	UR9999
F78:Z022	F78:Z022	UA	UR	9999	UA9999	UR9999
F78:Z023	F78:Z023	UA	UR	9999	UA9999	UR9999
F78:Z024	F78:Z024	UA	UR	9999	UA9999	UR9999
F78:Z025	F78:Z025	UA	UR	9999	UA9999	UR9999
F78:Z026	F78:Z026	UA	UR	9999	UA9999	UR9999
F78:Z027	F78:Z027	UA	UR	9999	UA9999	UR9999
F78:Z028	F78:Z028	UA	UR	9999	UA9999	UR9999
F78:Z029	F78:Z029	UA	UR	9999	UA9999	UR9999
F78:Z030	F78:Z030	UA	UR	9999	UA9999	UR9999
F78:Z031	F78:Z031	UA	UR	9999	UA9999	UR9999
F78:Z032	F78:Z032	UA	UR	9999	UA9999	UR9999
F78:S001	F78 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F78:S002	F78 XmitPollFail	NA	NS	9999	NA9999	NS9999
F78:S003	F78 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F78:S004	F78 Cab Tamper	TA	TR	9999	TA9999	TR9999
F78:S005	F78 AC fail	AT	AR	9999	AT9999	AR9999
F78:S006	F78 Low Batt	YT	YR	9999	YT9999	YR9999
F78:S007	F78 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F78:S008	F78 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F78:S009	F78 Low Volts	YP	YQ	9999	YP9999	YQ9999
F78:S010	F78 PS Fail	YP	YQ	9999	YP9999	YQ9999
F78:S011	F78 Batt Test	IA	IR	9999	IA9999	IR9999
F78:S012	F78 LAN Comms	EM	EN	9999	EM9999	EN9999
F78:S013	F78 Spare1	UA	UR	9999	UA9999	UR9999
F78:S014	F78 Spare2	UA	UR	9999	UA9999	UR9999
F79:Z001	F79:Z001	UA	UR	9999	UA9999	UR9999
F79:Z002	F79:Z002	UA	UR	9999	UA9999	UR9999
F79:Z003	F79:Z003	UA	UR	9999	UA9999	UR9999
F79:Z004	F79:Z004	UA	UR	9999	UA9999	UR9999
F79:Z005	F79:Z005	UA	UR	9999	UA9999	UR9999
F79:Z006	F79:Z006	UA	UR	9999	UA9999	UR9999
F79:Z007	F79:Z007	UA	UR	9999	UA9999	UR9999
F79:Z008	F79:Z008	UA	UR	9999	UA9999	UR9999
F79:Z009	F79:Z009	UA	UR	9999	UA9999	UR9999
F79:Z010	F79:Z010	UA	UR	9999	UA9999	UR9999
F79:Z011	F79:Z011	UA	UR	9999	UA9999	UR9999
F79:Z012	F79:Z012	UA	UR	9999	UA9999	UR9999
F79:Z013	F79:Z013	UA	UR	9999	UA9999	UR9999
F79:Z014	F79:Z014	UA	UR	9999	UA9999	UR9999
F79:Z015	F79:Z015	UA	UR	9999	UA9999	UR9999
F79:Z016	F79:Z016	UA	UR	9999	UA9999	UR9999
F79:Z017	F79:Z017	UA	UR	9999	UA9999	UR9999
F79:Z018	F79:Z018	UA	UR	9999	UA9999	UR9999
F79:Z019	F79:Z019	UA	UR	9999	UA9999	UR9999
F79:Z020	F79:Z020	UA	UR	9999	UA9999	UR9999
F79:Z021	F79:Z021	UA	UR	9999	UA9999	UR9999
F79:Z022	F79:Z022	UA	UR	9999	UA9999	UR9999
F79:Z023	F79:Z023	UA	UR	9999	UA9999	UR9999
F79:Z024	F79:Z024	UA	UR	9999	UA9999	UR9999
F79:Z025	F79:Z025	UA	UR	9999	UA9999	UR9999
F79:Z026	F79:Z026	UA	UR	9999	UA9999	UR9999
F79:Z027	F79:Z027	UA	UR	9999	UA9999	UR9999
F79:Z028	F79:Z028	UA	UR	9999	UA9999	UR9999
F79:Z029	F79:Z029	UA	UR	9999	UA9999	UR9999
F79:Z030	F79:Z030	UA	UR	9999	UA9999	UR9999
F79:Z031	F79:Z031	UA	UR	9999	UA9999	UR9999
F79:Z032	F79:Z032	UA	UR	9999	UA9999	UR9999
F79:S001	F79 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F79:S002	F79 XmitPollFail	NA	NS	9999	NA9999	NS9999
F79:S003	F79 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F79:S004	F79 Cab Tamper	TA	TR	9999	TA9999	TR9999

Integriti SIA DECIMAL Map. V21

F79:S005	F79 AC fail	AT	AR	9999	AT9999	AR9999
F79:S006	F79 Low Batt	YT	YR	9999	YT9999	YR9999
F79:S007	F79 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F79:S008	F79 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F79:S009	F79 Low Volts	YP	YQ	9999	YP9999	YQ9999
F79:S010	F79 PS Fail	YP	YQ	9999	YP9999	YQ9999
F79:S011	F79 Batt Test	IA	IR	9999	IA9999	IR9999
F79:S012	F79 LAN Comms	EM	EN	9999	EM9999	EN9999
F79:S013	F79 Spare1	UA	UR	9999	UA9999	UR9999
F79:S014	F79 Spare2	UA	UR	9999	UA9999	UR9999
F80:Z001	F80:Z001	UA	UR	9999	UA9999	UR9999
F80:Z002	F80:Z002	UA	UR	9999	UA9999	UR9999
F80:Z003	F80:Z003	UA	UR	9999	UA9999	UR9999
F80:Z004	F80:Z004	UA	UR	9999	UA9999	UR9999
F80:Z005	F80:Z005	UA	UR	9999	UA9999	UR9999
F80:Z006	F80:Z006	UA	UR	9999	UA9999	UR9999
F80:Z007	F80:Z007	UA	UR	9999	UA9999	UR9999
F80:Z008	F80:Z008	UA	UR	9999	UA9999	UR9999
F80:Z009	F80:Z009	UA	UR	9999	UA9999	UR9999
F80:Z010	F80:Z010	UA	UR	9999	UA9999	UR9999
F80:Z011	F80:Z011	UA	UR	9999	UA9999	UR9999
F80:Z012	F80:Z012	UA	UR	9999	UA9999	UR9999
F80:Z013	F80:Z013	UA	UR	9999	UA9999	UR9999
F80:Z014	F80:Z014	UA	UR	9999	UA9999	UR9999
F80:Z015	F80:Z015	UA	UR	9999	UA9999	UR9999
F80:Z016	F80:Z016	UA	UR	9999	UA9999	UR9999
F80:Z017	F80:Z017	UA	UR	9999	UA9999	UR9999
F80:Z018	F80:Z018	UA	UR	9999	UA9999	UR9999
F80:Z019	F80:Z019	UA	UR	9999	UA9999	UR9999
F80:Z020	F80:Z020	UA	UR	9999	UA9999	UR9999
F80:Z021	F80:Z021	UA	UR	9999	UA9999	UR9999
F80:Z022	F80:Z022	UA	UR	9999	UA9999	UR9999
F80:Z023	F80:Z023	UA	UR	9999	UA9999	UR9999
F80:Z024	F80:Z024	UA	UR	9999	UA9999	UR9999
F80:Z025	F80:Z025	UA	UR	9999	UA9999	UR9999
F80:Z026	F80:Z026	UA	UR	9999	UA9999	UR9999
F80:Z027	F80:Z027	UA	UR	9999	UA9999	UR9999
F80:Z028	F80:Z028	UA	UR	9999	UA9999	UR9999
F80:Z029	F80:Z029	UA	UR	9999	UA9999	UR9999
F80:Z030	F80:Z030	UA	UR	9999	UA9999	UR9999
F80:Z031	F80:Z031	UA	UR	9999	UA9999	UR9999
F80:Z032	F80:Z032	UA	UR	9999	UA9999	UR9999
F80:S001	F80 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F80:S002	F80 XmitPollFail	NA	NS	9999	NA9999	NS9999
F80:S003	F80 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F80:S004	F80 Cab Tamper	TA	TR	9999	TA9999	TR9999
F80:S005	F80 AC fail	AT	AR	9999	AT9999	AR9999
F80:S006	F80 Low Batt	YT	YR	9999	YT9999	YR9999
F80:S007	F80 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F80:S008	F80 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F80:S009	F80 Low Volts	YP	YQ	9999	YP9999	YQ9999
F80:S010	F80 PS Fail	YP	YQ	9999	YP9999	YQ9999
F80:S011	F80 Batt Test	IA	IR	9999	IA9999	IR9999
F80:S012	F80 LAN Comms	EM	EN	9999	EM9999	EN9999
F80:S013	F80 Spare1	UA	UR	9999	UA9999	UR9999
F80:S014	F80 Spare2	UA	UR	9999	UA9999	UR9999
F81:Z001	F81:Z001	UA	UR	9999	UA9999	UR9999
F81:Z002	F81:Z002	UA	UR	9999	UA9999	UR9999
F81:Z003	F81:Z003	UA	UR	9999	UA9999	UR9999
F81:Z004	F81:Z004	UA	UR	9999	UA9999	UR9999
F81:Z005	F81:Z005	UA	UR	9999	UA9999	UR9999
F81:Z006	F81:Z006	UA	UR	9999	UA9999	UR9999
F81:Z007	F81:Z007	UA	UR	9999	UA9999	UR9999
F81:Z008	F81:Z008	UA	UR	9999	UA9999	UR9999
F81:Z009	F81:Z009	UA	UR	9999	UA9999	UR9999
F81:Z010	F81:Z010	UA	UR	9999	UA9999	UR9999
F81:Z011	F81:Z011	UA	UR	9999	UA9999	UR9999
F81:Z012	F81:Z012	UA	UR	9999	UA9999	UR9999
F81:Z013	F81:Z013	UA	UR	9999	UA9999	UR9999
F81:Z014	F81:Z014	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F81:Z015	F81:Z015	UA	UR	9999	UA9999	UR9999
F81:Z016	F81:Z016	UA	UR	9999	UA9999	UR9999
F81:Z017	F81:Z017	UA	UR	9999	UA9999	UR9999
F81:Z018	F81:Z018	UA	UR	9999	UA9999	UR9999
F81:Z019	F81:Z019	UA	UR	9999	UA9999	UR9999
F81:Z020	F81:Z020	UA	UR	9999	UA9999	UR9999
F81:Z021	F81:Z021	UA	UR	9999	UA9999	UR9999
F81:Z022	F81:Z022	UA	UR	9999	UA9999	UR9999
F81:Z023	F81:Z023	UA	UR	9999	UA9999	UR9999
F81:Z024	F81:Z024	UA	UR	9999	UA9999	UR9999
F81:Z025	F81:Z025	UA	UR	9999	UA9999	UR9999
F81:Z026	F81:Z026	UA	UR	9999	UA9999	UR9999
F81:Z027	F81:Z027	UA	UR	9999	UA9999	UR9999
F81:Z028	F81:Z028	UA	UR	9999	UA9999	UR9999
F81:Z029	F81:Z029	UA	UR	9999	UA9999	UR9999
F81:Z030	F81:Z030	UA	UR	9999	UA9999	UR9999
F81:Z031	F81:Z031	UA	UR	9999	UA9999	UR9999
F81:Z032	F81:Z032	UA	UR	9999	UA9999	UR9999
F81:S001	F81 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F81:S002	F81 XmitPollFail	NA	NS	9999	NA9999	NS9999
F81:S003	F81 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F81:S004	F81 Cab Tamper	TA	TR	9999	TA9999	TR9999
F81:S005	F81 AC fail	AT	AR	9999	AT9999	AR9999
F81:S006	F81 Low Batt	YT	YR	9999	YT9999	YR9999
F81:S007	F81 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F81:S008	F81 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F81:S009	F81 Low Volts	YP	YQ	9999	YP9999	YQ9999
F81:S010	F81 PS Fail	YP	YQ	9999	YP9999	YQ9999
F81:S011	F81 Batt Test	IA	IR	9999	IA9999	IR9999
F81:S012	F81 LAN Comms	EM	EN	9999	EM9999	EN9999
F81:S013	F81 Spare1	UA	UR	9999	UA9999	UR9999
F81:S014	F81 Spare2	UA	UR	9999	UA9999	UR9999
F82:Z001	F82:Z001	UA	UR	9999	UA9999	UR9999
F82:Z002	F82:Z002	UA	UR	9999	UA9999	UR9999
F82:Z003	F82:Z003	UA	UR	9999	UA9999	UR9999
F82:Z004	F82:Z004	UA	UR	9999	UA9999	UR9999
F82:Z005	F82:Z005	UA	UR	9999	UA9999	UR9999
F82:Z006	F82:Z006	UA	UR	9999	UA9999	UR9999
F82:Z007	F82:Z007	UA	UR	9999	UA9999	UR9999
F82:Z008	F82:Z008	UA	UR	9999	UA9999	UR9999
F82:Z009	F82:Z009	UA	UR	9999	UA9999	UR9999
F82:Z010	F82:Z010	UA	UR	9999	UA9999	UR9999
F82:Z011	F82:Z011	UA	UR	9999	UA9999	UR9999
F82:Z012	F82:Z012	UA	UR	9999	UA9999	UR9999
F82:Z013	F82:Z013	UA	UR	9999	UA9999	UR9999
F82:Z014	F82:Z014	UA	UR	9999	UA9999	UR9999
F82:Z015	F82:Z015	UA	UR	9999	UA9999	UR9999
F82:Z016	F82:Z016	UA	UR	9999	UA9999	UR9999
F82:Z017	F82:Z017	UA	UR	9999	UA9999	UR9999
F82:Z018	F82:Z018	UA	UR	9999	UA9999	UR9999
F82:Z019	F82:Z019	UA	UR	9999	UA9999	UR9999
F82:Z020	F82:Z020	UA	UR	9999	UA9999	UR9999
F82:Z021	F82:Z021	UA	UR	9999	UA9999	UR9999
F82:Z022	F82:Z022	UA	UR	9999	UA9999	UR9999
F82:Z023	F82:Z023	UA	UR	9999	UA9999	UR9999
F82:Z024	F82:Z024	UA	UR	9999	UA9999	UR9999
F82:Z025	F82:Z025	UA	UR	9999	UA9999	UR9999
F82:Z026	F82:Z026	UA	UR	9999	UA9999	UR9999
F82:Z027	F82:Z027	UA	UR	9999	UA9999	UR9999
F82:Z028	F82:Z028	UA	UR	9999	UA9999	UR9999
F82:Z029	F82:Z029	UA	UR	9999	UA9999	UR9999
F82:Z030	F82:Z030	UA	UR	9999	UA9999	UR9999
F82:Z031	F82:Z031	UA	UR	9999	UA9999	UR9999
F82:Z032	F82:Z032	UA	UR	9999	UA9999	UR9999
F82:S001	F82 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F82:S002	F82 XmitPollFail	NA	NS	9999	NA9999	NS9999
F82:S003	F82 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F82:S004	F82 Cab Tamper	TA	TR	9999	TA9999	TR9999
F82:S005	F82 AC fail	AT	AR	9999	AT9999	AR9999
F82:S006	F82 Low Batt	YT	YR	9999	YT9999	YR9999

Integriti SIA DECIMAL Map. V21

F82:S007	F82 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F82:S008	F82 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F82:S009	F82 Low Volts	YP	YQ	9999	YP9999	YQ9999
F82:S010	F82 PS Fail	YP	YQ	9999	YP9999	YQ9999
F82:S011	F82 Batt Test	IA	IR	9999	IA9999	IR9999
F82:S012	F82 LAN Comms	EM	EN	9999	EM9999	EN9999
F82:S013	F82 Spare1	UA	UR	9999	UA9999	UR9999
F82:S014	F82 Spare2	UA	UR	9999	UA9999	UR9999
F83:Z001	F83:Z001	UA	UR	9999	UA9999	UR9999
F83:Z002	F83:Z002	UA	UR	9999	UA9999	UR9999
F83:Z003	F83:Z003	UA	UR	9999	UA9999	UR9999
F83:Z004	F83:Z004	UA	UR	9999	UA9999	UR9999
F83:Z005	F83:Z005	UA	UR	9999	UA9999	UR9999
F83:Z006	F83:Z006	UA	UR	9999	UA9999	UR9999
F83:Z007	F83:Z007	UA	UR	9999	UA9999	UR9999
F83:Z008	F83:Z008	UA	UR	9999	UA9999	UR9999
F83:Z009	F83:Z009	UA	UR	9999	UA9999	UR9999
F83:Z010	F83:Z010	UA	UR	9999	UA9999	UR9999
F83:Z011	F83:Z011	UA	UR	9999	UA9999	UR9999
F83:Z012	F83:Z012	UA	UR	9999	UA9999	UR9999
F83:Z013	F83:Z013	UA	UR	9999	UA9999	UR9999
F83:Z014	F83:Z014	UA	UR	9999	UA9999	UR9999
F83:Z015	F83:Z015	UA	UR	9999	UA9999	UR9999
F83:Z016	F83:Z016	UA	UR	9999	UA9999	UR9999
F83:Z017	F83:Z017	UA	UR	9999	UA9999	UR9999
F83:Z018	F83:Z018	UA	UR	9999	UA9999	UR9999
F83:Z019	F83:Z019	UA	UR	9999	UA9999	UR9999
F83:Z020	F83:Z020	UA	UR	9999	UA9999	UR9999
F83:Z021	F83:Z021	UA	UR	9999	UA9999	UR9999
F83:Z022	F83:Z022	UA	UR	9999	UA9999	UR9999
F83:Z023	F83:Z023	UA	UR	9999	UA9999	UR9999
F83:Z024	F83:Z024	UA	UR	9999	UA9999	UR9999
F83:Z025	F83:Z025	UA	UR	9999	UA9999	UR9999
F83:Z026	F83:Z026	UA	UR	9999	UA9999	UR9999
F83:Z027	F83:Z027	UA	UR	9999	UA9999	UR9999
F83:Z028	F83:Z028	UA	UR	9999	UA9999	UR9999
F83:Z029	F83:Z029	UA	UR	9999	UA9999	UR9999
F83:Z030	F83:Z030	UA	UR	9999	UA9999	UR9999
F83:Z031	F83:Z031	UA	UR	9999	UA9999	UR9999
F83:Z032	F83:Z032	UA	UR	9999	UA9999	UR9999
F83:S001	F83 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F83:S002	F83 XmitPollFail	NA	NS	9999	NA9999	NS9999
F83:S003	F83 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F83:S004	F83 Cab Tamper	TA	TR	9999	TA9999	TR9999
F83:S005	F83 AC fail	AT	AR	9999	AT9999	AR9999
F83:S006	F83 Low Batt	YT	YR	9999	YT9999	YR9999
F83:S007	F83 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F83:S008	F83 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F83:S009	F83 Low Volts	YP	YQ	9999	YP9999	YQ9999
F83:S010	F83 PS Fail	YP	YQ	9999	YP9999	YQ9999
F83:S011	F83 Batt Test	IA	IR	9999	IA9999	IR9999
F83:S012	F83 LAN Comms	EM	EN	9999	EM9999	EN9999
F83:S013	F83 Spare1	UA	UR	9999	UA9999	UR9999
F83:S014	F83 Spare2	UA	UR	9999	UA9999	UR9999
F84:Z001	F84:Z001	UA	UR	9999	UA9999	UR9999
F84:Z002	F84:Z002	UA	UR	9999	UA9999	UR9999
F84:Z003	F84:Z003	UA	UR	9999	UA9999	UR9999
F84:Z004	F84:Z004	UA	UR	9999	UA9999	UR9999
F84:Z005	F84:Z005	UA	UR	9999	UA9999	UR9999
F84:Z006	F84:Z006	UA	UR	9999	UA9999	UR9999
F84:Z007	F84:Z007	UA	UR	9999	UA9999	UR9999
F84:Z008	F84:Z008	UA	UR	9999	UA9999	UR9999
F84:Z009	F84:Z009	UA	UR	9999	UA9999	UR9999
F84:Z010	F84:Z010	UA	UR	9999	UA9999	UR9999
F84:Z011	F84:Z011	UA	UR	9999	UA9999	UR9999
F84:Z012	F84:Z012	UA	UR	9999	UA9999	UR9999
F84:Z013	F84:Z013	UA	UR	9999	UA9999	UR9999
F84:Z014	F84:Z014	UA	UR	9999	UA9999	UR9999
F84:Z015	F84:Z015	UA	UR	9999	UA9999	UR9999
F84:Z016	F84:Z016	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F84:Z017	F84:Z017	UA	UR	9999	UA9999	UR9999
F84:Z018	F84:Z018	UA	UR	9999	UA9999	UR9999
F84:Z019	F84:Z019	UA	UR	9999	UA9999	UR9999
F84:Z020	F84:Z020	UA	UR	9999	UA9999	UR9999
F84:Z021	F84:Z021	UA	UR	9999	UA9999	UR9999
F84:Z022	F84:Z022	UA	UR	9999	UA9999	UR9999
F84:Z023	F84:Z023	UA	UR	9999	UA9999	UR9999
F84:Z024	F84:Z024	UA	UR	9999	UA9999	UR9999
F84:Z025	F84:Z025	UA	UR	9999	UA9999	UR9999
F84:Z026	F84:Z026	UA	UR	9999	UA9999	UR9999
F84:Z027	F84:Z027	UA	UR	9999	UA9999	UR9999
F84:Z028	F84:Z028	UA	UR	9999	UA9999	UR9999
F84:Z029	F84:Z029	UA	UR	9999	UA9999	UR9999
F84:Z030	F84:Z030	UA	UR	9999	UA9999	UR9999
F84:Z031	F84:Z031	UA	UR	9999	UA9999	UR9999
F84:Z032	F84:Z032	UA	UR	9999	UA9999	UR9999
F84:S001	F84 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F84:S002	F84 XmitPollFail	NA	NS	9999	NA9999	NS9999
F84:S003	F84 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F84:S004	F84 Cab Tamper	TA	TR	9999	TA9999	TR9999
F84:S005	F84 AC fail	AT	AR	9999	AT9999	AR9999
F84:S006	F84 Low Batt	YT	YR	9999	YT9999	YR9999
F84:S007	F84 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F84:S008	F84 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F84:S009	F84 Low Volts	YP	YQ	9999	YP9999	YQ9999
F84:S010	F84 PS Fail	YP	YQ	9999	YP9999	YQ9999
F84:S011	F84 Batt Test	IA	IR	9999	IA9999	IR9999
F84:S012	F84 LAN Comms	EM	EN	9999	EM9999	EN9999
F84:S013	F84 Spare1	UA	UR	9999	UA9999	UR9999
F84:S014	F84 Spare2	UA	UR	9999	UA9999	UR9999
F85:Z001	F85:Z001	UA	UR	9999	UA9999	UR9999
F85:Z002	F85:Z002	UA	UR	9999	UA9999	UR9999
F85:Z003	F85:Z003	UA	UR	9999	UA9999	UR9999
F85:Z004	F85:Z004	UA	UR	9999	UA9999	UR9999
F85:Z005	F85:Z005	UA	UR	9999	UA9999	UR9999
F85:Z006	F85:Z006	UA	UR	9999	UA9999	UR9999
F85:Z007	F85:Z007	UA	UR	9999	UA9999	UR9999
F85:Z008	F85:Z008	UA	UR	9999	UA9999	UR9999
F85:Z009	F85:Z009	UA	UR	9999	UA9999	UR9999
F85:Z010	F85:Z010	UA	UR	9999	UA9999	UR9999
F85:Z011	F85:Z011	UA	UR	9999	UA9999	UR9999
F85:Z012	F85:Z012	UA	UR	9999	UA9999	UR9999
F85:Z013	F85:Z013	UA	UR	9999	UA9999	UR9999
F85:Z014	F85:Z014	UA	UR	9999	UA9999	UR9999
F85:Z015	F85:Z015	UA	UR	9999	UA9999	UR9999
F85:Z016	F85:Z016	UA	UR	9999	UA9999	UR9999
F85:Z017	F85:Z017	UA	UR	9999	UA9999	UR9999
F85:Z018	F85:Z018	UA	UR	9999	UA9999	UR9999
F85:Z019	F85:Z019	UA	UR	9999	UA9999	UR9999
F85:Z020	F85:Z020	UA	UR	9999	UA9999	UR9999
F85:Z021	F85:Z021	UA	UR	9999	UA9999	UR9999
F85:Z022	F85:Z022	UA	UR	9999	UA9999	UR9999
F85:Z023	F85:Z023	UA	UR	9999	UA9999	UR9999
F85:Z024	F85:Z024	UA	UR	9999	UA9999	UR9999
F85:Z025	F85:Z025	UA	UR	9999	UA9999	UR9999
F85:Z026	F85:Z026	UA	UR	9999	UA9999	UR9999
F85:Z027	F85:Z027	UA	UR	9999	UA9999	UR9999
F85:Z028	F85:Z028	UA	UR	9999	UA9999	UR9999
F85:Z029	F85:Z029	UA	UR	9999	UA9999	UR9999
F85:Z030	F85:Z030	UA	UR	9999	UA9999	UR9999
F85:Z031	F85:Z031	UA	UR	9999	UA9999	UR9999
F85:Z032	F85:Z032	UA	UR	9999	UA9999	UR9999
F85:S001	F85 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F85:S002	F85 XmitPollFail	NA	NS	9999	NA9999	NS9999
F85:S003	F85 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F85:S004	F85 Cab Tamper	TA	TR	9999	TA9999	TR9999
F85:S005	F85 AC fail	AT	AR	9999	AT9999	AR9999
F85:S006	F85 Low Batt	YT	YR	9999	YT9999	YR9999
F85:S007	F85 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F85:S008	F85 DET Fuse	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

F85:S009	F85 Low Volts	YP	YQ	9999	YP9999	YQ9999
F85:S010	F85 PS Fail	YP	YQ	9999	YP9999	YQ9999
F85:S011	F85 Batt Test	IA	IR	9999	IA9999	IR9999
F85:S012	F85 LAN Comms	EM	EN	9999	EM9999	EN9999
F85:S013	F85 Spare1	UA	UR	9999	UA9999	UR9999
F85:S014	F85 Spare2	UA	UR	9999	UA9999	UR9999
F86:Z001	F86:Z001	UA	UR	9999	UA9999	UR9999
F86:Z002	F86:Z002	UA	UR	9999	UA9999	UR9999
F86:Z003	F86:Z003	UA	UR	9999	UA9999	UR9999
F86:Z004	F86:Z004	UA	UR	9999	UA9999	UR9999
F86:Z005	F86:Z005	UA	UR	9999	UA9999	UR9999
F86:Z006	F86:Z006	UA	UR	9999	UA9999	UR9999
F86:Z007	F86:Z007	UA	UR	9999	UA9999	UR9999
F86:Z008	F86:Z008	UA	UR	9999	UA9999	UR9999
F86:Z009	F86:Z009	UA	UR	9999	UA9999	UR9999
F86:Z010	F86:Z010	UA	UR	9999	UA9999	UR9999
F86:Z011	F86:Z011	UA	UR	9999	UA9999	UR9999
F86:Z012	F86:Z012	UA	UR	9999	UA9999	UR9999
F86:Z013	F86:Z013	UA	UR	9999	UA9999	UR9999
F86:Z014	F86:Z014	UA	UR	9999	UA9999	UR9999
F86:Z015	F86:Z015	UA	UR	9999	UA9999	UR9999
F86:Z016	F86:Z016	UA	UR	9999	UA9999	UR9999
F86:Z017	F86:Z017	UA	UR	9999	UA9999	UR9999
F86:Z018	F86:Z018	UA	UR	9999	UA9999	UR9999
F86:Z019	F86:Z019	UA	UR	9999	UA9999	UR9999
F86:Z020	F86:Z020	UA	UR	9999	UA9999	UR9999
F86:Z021	F86:Z021	UA	UR	9999	UA9999	UR9999
F86:Z022	F86:Z022	UA	UR	9999	UA9999	UR9999
F86:Z023	F86:Z023	UA	UR	9999	UA9999	UR9999
F86:Z024	F86:Z024	UA	UR	9999	UA9999	UR9999
F86:Z025	F86:Z025	UA	UR	9999	UA9999	UR9999
F86:Z026	F86:Z026	UA	UR	9999	UA9999	UR9999
F86:Z027	F86:Z027	UA	UR	9999	UA9999	UR9999
F86:Z028	F86:Z028	UA	UR	9999	UA9999	UR9999
F86:Z029	F86:Z029	UA	UR	9999	UA9999	UR9999
F86:Z030	F86:Z030	UA	UR	9999	UA9999	UR9999
F86:Z031	F86:Z031	UA	UR	9999	UA9999	UR9999
F86:Z032	F86:Z032	UA	UR	9999	UA9999	UR9999
F86:S001	F86 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F86:S002	F86 XmitPollFail	NA	NS	9999	NA9999	NS9999
F86:S003	F86 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F86:S004	F86 Cab Tamper	TA	TR	9999	TA9999	TR9999
F86:S005	F86 AC fail	AT	AR	9999	AT9999	AR9999
F86:S006	F86 Low Batt	YT	YR	9999	YT9999	YR9999
F86:S007	F86 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F86:S008	F86 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F86:S009	F86 Low Volts	YP	YQ	9999	YP9999	YQ9999
F86:S010	F86 PS Fail	YP	YQ	9999	YP9999	YQ9999
F86:S011	F86 Batt Test	IA	IR	9999	IA9999	IR9999
F86:S012	F86 LAN Comms	EM	EN	9999	EM9999	EN9999
F86:S013	F86 Spare1	UA	UR	9999	UA9999	UR9999
F86:S014	F86 Spare2	UA	UR	9999	UA9999	UR9999
F87:Z001	F87:Z001	UA	UR	9999	UA9999	UR9999
F87:Z002	F87:Z002	UA	UR	9999	UA9999	UR9999
F87:Z003	F87:Z003	UA	UR	9999	UA9999	UR9999
F87:Z004	F87:Z004	UA	UR	9999	UA9999	UR9999
F87:Z005	F87:Z005	UA	UR	9999	UA9999	UR9999
F87:Z006	F87:Z006	UA	UR	9999	UA9999	UR9999
F87:Z007	F87:Z007	UA	UR	9999	UA9999	UR9999
F87:Z008	F87:Z008	UA	UR	9999	UA9999	UR9999
F87:Z009	F87:Z009	UA	UR	9999	UA9999	UR9999
F87:Z010	F87:Z010	UA	UR	9999	UA9999	UR9999
F87:Z011	F87:Z011	UA	UR	9999	UA9999	UR9999
F87:Z012	F87:Z012	UA	UR	9999	UA9999	UR9999
F87:Z013	F87:Z013	UA	UR	9999	UA9999	UR9999
F87:Z014	F87:Z014	UA	UR	9999	UA9999	UR9999
F87:Z015	F87:Z015	UA	UR	9999	UA9999	UR9999
F87:Z016	F87:Z016	UA	UR	9999	UA9999	UR9999
F87:Z017	F87:Z017	UA	UR	9999	UA9999	UR9999
F87:Z018	F87:Z018	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F87:Z019	F87:Z019	UA	UR	9999	UA9999	UR9999
F87:Z020	F87:Z020	UA	UR	9999	UA9999	UR9999
F87:Z021	F87:Z021	UA	UR	9999	UA9999	UR9999
F87:Z022	F87:Z022	UA	UR	9999	UA9999	UR9999
F87:Z023	F87:Z023	UA	UR	9999	UA9999	UR9999
F87:Z024	F87:Z024	UA	UR	9999	UA9999	UR9999
F87:Z025	F87:Z025	UA	UR	9999	UA9999	UR9999
F87:Z026	F87:Z026	UA	UR	9999	UA9999	UR9999
F87:Z027	F87:Z027	UA	UR	9999	UA9999	UR9999
F87:Z028	F87:Z028	UA	UR	9999	UA9999	UR9999
F87:Z029	F87:Z029	UA	UR	9999	UA9999	UR9999
F87:Z030	F87:Z030	UA	UR	9999	UA9999	UR9999
F87:Z031	F87:Z031	UA	UR	9999	UA9999	UR9999
F87:Z032	F87:Z032	UA	UR	9999	UA9999	UR9999
F87:S001	F87 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F87:S002	F87 XmitPollFail	NA	NS	9999	NA9999	NS9999
F87:S003	F87 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F87:S004	F87 Cab Tamper	TA	TR	9999	TA9999	TR9999
F87:S005	F87 AC fail	AT	AR	9999	AT9999	AR9999
F87:S006	F87 Low Batt	YT	YR	9999	YT9999	YR9999
F87:S007	F87 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F87:S008	F87 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F87:S009	F87 Low Volts	YP	YQ	9999	YP9999	YQ9999
F87:S010	F87 PS Fail	YP	YQ	9999	YP9999	YQ9999
F87:S011	F87 Batt Test	IA	IR	9999	IA9999	IR9999
F87:S012	F87 LAN Comms	EM	EN	9999	EM9999	EN9999
F87:S013	F87 Spare1	UA	UR	9999	UA9999	UR9999
F87:S014	F87 Spare2	UA	UR	9999	UA9999	UR9999
F88:Z001	F88:Z001	UA	UR	9999	UA9999	UR9999
F88:Z002	F88:Z002	UA	UR	9999	UA9999	UR9999
F88:Z003	F88:Z003	UA	UR	9999	UA9999	UR9999
F88:Z004	F88:Z004	UA	UR	9999	UA9999	UR9999
F88:Z005	F88:Z005	UA	UR	9999	UA9999	UR9999
F88:Z006	F88:Z006	UA	UR	9999	UA9999	UR9999
F88:Z007	F88:Z007	UA	UR	9999	UA9999	UR9999
F88:Z008	F88:Z008	UA	UR	9999	UA9999	UR9999
F88:Z009	F88:Z009	UA	UR	9999	UA9999	UR9999
F88:Z010	F88:Z010	UA	UR	9999	UA9999	UR9999
F88:Z011	F88:Z011	UA	UR	9999	UA9999	UR9999
F88:Z012	F88:Z012	UA	UR	9999	UA9999	UR9999
F88:Z013	F88:Z013	UA	UR	9999	UA9999	UR9999
F88:Z014	F88:Z014	UA	UR	9999	UA9999	UR9999
F88:Z015	F88:Z015	UA	UR	9999	UA9999	UR9999
F88:Z016	F88:Z016	UA	UR	9999	UA9999	UR9999
F88:Z017	F88:Z017	UA	UR	9999	UA9999	UR9999
F88:Z018	F88:Z018	UA	UR	9999	UA9999	UR9999
F88:Z019	F88:Z019	UA	UR	9999	UA9999	UR9999
F88:Z020	F88:Z020	UA	UR	9999	UA9999	UR9999
F88:Z021	F88:Z021	UA	UR	9999	UA9999	UR9999
F88:Z022	F88:Z022	UA	UR	9999	UA9999	UR9999
F88:Z023	F88:Z023	UA	UR	9999	UA9999	UR9999
F88:Z024	F88:Z024	UA	UR	9999	UA9999	UR9999
F88:Z025	F88:Z025	UA	UR	9999	UA9999	UR9999
F88:Z026	F88:Z026	UA	UR	9999	UA9999	UR9999
F88:Z027	F88:Z027	UA	UR	9999	UA9999	UR9999
F88:Z028	F88:Z028	UA	UR	9999	UA9999	UR9999
F88:Z029	F88:Z029	UA	UR	9999	UA9999	UR9999
F88:Z030	F88:Z030	UA	UR	9999	UA9999	UR9999
F88:Z031	F88:Z031	UA	UR	9999	UA9999	UR9999
F88:Z032	F88:Z032	UA	UR	9999	UA9999	UR9999
F88:S001	F88 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F88:S002	F88 XmitPollFail	NA	NS	9999	NA9999	NS9999
F88:S003	F88 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F88:S004	F88 Cab Tamper	TA	TR	9999	TA9999	TR9999
F88:S005	F88 AC fail	AT	AR	9999	AT9999	AR9999
F88:S006	F88 Low Batt	YT	YR	9999	YT9999	YR9999
F88:S007	F88 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F88:S008	F88 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F88:S009	F88 Low Volts	YP	YQ	9999	YP9999	YQ9999
F88:S010	F88 PS Fail	YP	YQ	9999	YP9999	YQ9999

Integriti SIA DECIMAL Map. V21

F88:S011	F88 Batt Test	IA	IR	9999	IA9999	IR9999
F88:S012	F88 LAN Comms	EM	EN	9999	EM9999	EN9999
F88:S013	F88 Spare1	UA	UR	9999	UA9999	UR9999
F88:S014	F88 Spare2	UA	UR	9999	UA9999	UR9999
F89:Z001	F89:Z001	UA	UR	9999	UA9999	UR9999
F89:Z002	F89:Z002	UA	UR	9999	UA9999	UR9999
F89:Z003	F89:Z003	UA	UR	9999	UA9999	UR9999
F89:Z004	F89:Z004	UA	UR	9999	UA9999	UR9999
F89:Z005	F89:Z005	UA	UR	9999	UA9999	UR9999
F89:Z006	F89:Z006	UA	UR	9999	UA9999	UR9999
F89:Z007	F89:Z007	UA	UR	9999	UA9999	UR9999
F89:Z008	F89:Z008	UA	UR	9999	UA9999	UR9999
F89:Z009	F89:Z009	UA	UR	9999	UA9999	UR9999
F89:Z010	F89:Z010	UA	UR	9999	UA9999	UR9999
F89:Z011	F89:Z011	UA	UR	9999	UA9999	UR9999
F89:Z012	F89:Z012	UA	UR	9999	UA9999	UR9999
F89:Z013	F89:Z013	UA	UR	9999	UA9999	UR9999
F89:Z014	F89:Z014	UA	UR	9999	UA9999	UR9999
F89:Z015	F89:Z015	UA	UR	9999	UA9999	UR9999
F89:Z016	F89:Z016	UA	UR	9999	UA9999	UR9999
F89:Z017	F89:Z017	UA	UR	9999	UA9999	UR9999
F89:Z018	F89:Z018	UA	UR	9999	UA9999	UR9999
F89:Z019	F89:Z019	UA	UR	9999	UA9999	UR9999
F89:Z020	F89:Z020	UA	UR	9999	UA9999	UR9999
F89:Z021	F89:Z021	UA	UR	9999	UA9999	UR9999
F89:Z022	F89:Z022	UA	UR	9999	UA9999	UR9999
F89:Z023	F89:Z023	UA	UR	9999	UA9999	UR9999
F89:Z024	F89:Z024	UA	UR	9999	UA9999	UR9999
F89:Z025	F89:Z025	UA	UR	9999	UA9999	UR9999
F89:Z026	F89:Z026	UA	UR	9999	UA9999	UR9999
F89:Z027	F89:Z027	UA	UR	9999	UA9999	UR9999
F89:Z028	F89:Z028	UA	UR	9999	UA9999	UR9999
F89:Z029	F89:Z029	UA	UR	9999	UA9999	UR9999
F89:Z030	F89:Z030	UA	UR	9999	UA9999	UR9999
F89:Z031	F89:Z031	UA	UR	9999	UA9999	UR9999
F89:Z032	F89:Z032	UA	UR	9999	UA9999	UR9999
F89:S001	F89 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F89:S002	F89 XmitPollFail	NA	NS	9999	NA9999	NS9999
F89:S003	F89 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F89:S004	F89 Cab Tamper	TA	TR	9999	TA9999	TR9999
F89:S005	F89 AC fail	AT	AR	9999	AT9999	AR9999
F89:S006	F89 Low Batt	YT	YR	9999	YT9999	YR9999
F89:S007	F89 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F89:S008	F89 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F89:S009	F89 Low Volts	YP	YQ	9999	YP9999	YQ9999
F89:S010	F89 PS Fail	YP	YQ	9999	YP9999	YQ9999
F89:S011	F89 Batt Test	IA	IR	9999	IA9999	IR9999
F89:S012	F89 LAN Comms	EM	EN	9999	EM9999	EN9999
F89:S013	F89 Spare1	UA	UR	9999	UA9999	UR9999
F89:S014	F89 Spare2	UA	UR	9999	UA9999	UR9999
F90:Z001	F90:Z001	UA	UR	9999	UA9999	UR9999
F90:Z002	F90:Z002	UA	UR	9999	UA9999	UR9999
F90:Z003	F90:Z003	UA	UR	9999	UA9999	UR9999
F90:Z004	F90:Z004	UA	UR	9999	UA9999	UR9999
F90:Z005	F90:Z005	UA	UR	9999	UA9999	UR9999
F90:Z006	F90:Z006	UA	UR	9999	UA9999	UR9999
F90:Z007	F90:Z007	UA	UR	9999	UA9999	UR9999
F90:Z008	F90:Z008	UA	UR	9999	UA9999	UR9999
F90:Z009	F90:Z009	UA	UR	9999	UA9999	UR9999
F90:Z010	F90:Z010	UA	UR	9999	UA9999	UR9999
F90:Z011	F90:Z011	UA	UR	9999	UA9999	UR9999
F90:Z012	F90:Z012	UA	UR	9999	UA9999	UR9999
F90:Z013	F90:Z013	UA	UR	9999	UA9999	UR9999
F90:Z014	F90:Z014	UA	UR	9999	UA9999	UR9999
F90:Z015	F90:Z015	UA	UR	9999	UA9999	UR9999
F90:Z016	F90:Z016	UA	UR	9999	UA9999	UR9999
F90:Z017	F90:Z017	UA	UR	9999	UA9999	UR9999
F90:Z018	F90:Z018	UA	UR	9999	UA9999	UR9999
F90:Z019	F90:Z019	UA	UR	9999	UA9999	UR9999
F90:Z020	F90:Z020	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F90:Z021	F90:Z021	UA	UR	9999	UA9999	UR9999
F90:Z022	F90:Z022	UA	UR	9999	UA9999	UR9999
F90:Z023	F90:Z023	UA	UR	9999	UA9999	UR9999
F90:Z024	F90:Z024	UA	UR	9999	UA9999	UR9999
F90:Z025	F90:Z025	UA	UR	9999	UA9999	UR9999
F90:Z026	F90:Z026	UA	UR	9999	UA9999	UR9999
F90:Z027	F90:Z027	UA	UR	9999	UA9999	UR9999
F90:Z028	F90:Z028	UA	UR	9999	UA9999	UR9999
F90:Z029	F90:Z029	UA	UR	9999	UA9999	UR9999
F90:Z030	F90:Z030	UA	UR	9999	UA9999	UR9999
F90:Z031	F90:Z031	UA	UR	9999	UA9999	UR9999
F90:Z032	F90:Z032	UA	UR	9999	UA9999	UR9999
F90:S001	F90 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F90:S002	F90 XmitPollFail	NA	NS	9999	NA9999	NS9999
F90:S003	F90 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F90:S004	F90 Cab Tamper	TA	TR	9999	TA9999	TR9999
F90:S005	F90 AC fail	AT	AR	9999	AT9999	AR9999
F90:S006	F90 Low Batt	YT	YR	9999	YT9999	YR9999
F90:S007	F90 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F90:S008	F90 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F90:S009	F90 Low Volts	YP	YQ	9999	YP9999	YQ9999
F90:S010	F90 PS Fail	YP	YQ	9999	YP9999	YQ9999
F90:S011	F90 Batt Test	IA	IR	9999	IA9999	IR9999
F90:S012	F90 LAN Comms	EM	EN	9999	EM9999	EN9999
F90:S013	F90 Spare1	UA	UR	9999	UA9999	UR9999
F90:S014	F90 Spare2	UA	UR	9999	UA9999	UR9999
F91:Z001	F91:Z001	UA	UR	9999	UA9999	UR9999
F91:Z002	F91:Z002	UA	UR	9999	UA9999	UR9999
F91:Z003	F91:Z003	UA	UR	9999	UA9999	UR9999
F91:Z004	F91:Z004	UA	UR	9999	UA9999	UR9999
F91:Z005	F91:Z005	UA	UR	9999	UA9999	UR9999
F91:Z006	F91:Z006	UA	UR	9999	UA9999	UR9999
F91:Z007	F91:Z007	UA	UR	9999	UA9999	UR9999
F91:Z008	F91:Z008	UA	UR	9999	UA9999	UR9999
F91:Z009	F91:Z009	UA	UR	9999	UA9999	UR9999
F91:Z010	F91:Z010	UA	UR	9999	UA9999	UR9999
F91:Z011	F91:Z011	UA	UR	9999	UA9999	UR9999
F91:Z012	F91:Z012	UA	UR	9999	UA9999	UR9999
F91:Z013	F91:Z013	UA	UR	9999	UA9999	UR9999
F91:Z014	F91:Z014	UA	UR	9999	UA9999	UR9999
F91:Z015	F91:Z015	UA	UR	9999	UA9999	UR9999
F91:Z016	F91:Z016	UA	UR	9999	UA9999	UR9999
F91:Z017	F91:Z017	UA	UR	9999	UA9999	UR9999
F91:Z018	F91:Z018	UA	UR	9999	UA9999	UR9999
F91:Z019	F91:Z019	UA	UR	9999	UA9999	UR9999
F91:Z020	F91:Z020	UA	UR	9999	UA9999	UR9999
F91:Z021	F91:Z021	UA	UR	9999	UA9999	UR9999
F91:Z022	F91:Z022	UA	UR	9999	UA9999	UR9999
F91:Z023	F91:Z023	UA	UR	9999	UA9999	UR9999
F91:Z024	F91:Z024	UA	UR	9999	UA9999	UR9999
F91:Z025	F91:Z025	UA	UR	9999	UA9999	UR9999
F91:Z026	F91:Z026	UA	UR	9999	UA9999	UR9999
F91:Z027	F91:Z027	UA	UR	9999	UA9999	UR9999
F91:Z028	F91:Z028	UA	UR	9999	UA9999	UR9999
F91:Z029	F91:Z029	UA	UR	9999	UA9999	UR9999
F91:Z030	F91:Z030	UA	UR	9999	UA9999	UR9999
F91:Z031	F91:Z031	UA	UR	9999	UA9999	UR9999
F91:Z032	F91:Z032	UA	UR	9999	UA9999	UR9999
F91:S001	F91 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F91:S002	F91 XmitPollFail	NA	NS	9999	NA9999	NS9999
F91:S003	F91 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F91:S004	F91 Cab Tamper	TA	TR	9999	TA9999	TR9999
F91:S005	F91 AC fail	AT	AR	9999	AT9999	AR9999
F91:S006	F91 Low Batt	YT	YR	9999	YT9999	YR9999
F91:S007	F91 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F91:S008	F91 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F91:S009	F91 Low Volts	YP	YQ	9999	YP9999	YQ9999
F91:S010	F91 PS Fail	YP	YQ	9999	YP9999	YQ9999
F91:S011	F91 Batt Test	IA	IR	9999	IA9999	IR9999
F91:S012	F91 LAN Comms	EM	EN	9999	EM9999	EN9999

Integriti SIA DECIMAL Map. V21

F91:S013	F91 Spare1	UA	UR	9999	UA9999	UR9999
F91:S014	F91 Spare2	UA	UR	9999	UA9999	UR9999
F92:Z001	F92:Z001	UA	UR	9999	UA9999	UR9999
F92:Z002	F92:Z002	UA	UR	9999	UA9999	UR9999
F92:Z003	F92:Z003	UA	UR	9999	UA9999	UR9999
F92:Z004	F92:Z004	UA	UR	9999	UA9999	UR9999
F92:Z005	F92:Z005	UA	UR	9999	UA9999	UR9999
F92:Z006	F92:Z006	UA	UR	9999	UA9999	UR9999
F92:Z007	F92:Z007	UA	UR	9999	UA9999	UR9999
F92:Z008	F92:Z008	UA	UR	9999	UA9999	UR9999
F92:Z009	F92:Z009	UA	UR	9999	UA9999	UR9999
F92:Z010	F92:Z010	UA	UR	9999	UA9999	UR9999
F92:Z011	F92:Z011	UA	UR	9999	UA9999	UR9999
F92:Z012	F92:Z012	UA	UR	9999	UA9999	UR9999
F92:Z013	F92:Z013	UA	UR	9999	UA9999	UR9999
F92:Z014	F92:Z014	UA	UR	9999	UA9999	UR9999
F92:Z015	F92:Z015	UA	UR	9999	UA9999	UR9999
F92:Z016	F92:Z016	UA	UR	9999	UA9999	UR9999
F92:Z017	F92:Z017	UA	UR	9999	UA9999	UR9999
F92:Z018	F92:Z018	UA	UR	9999	UA9999	UR9999
F92:Z019	F92:Z019	UA	UR	9999	UA9999	UR9999
F92:Z020	F92:Z020	UA	UR	9999	UA9999	UR9999
F92:Z021	F92:Z021	UA	UR	9999	UA9999	UR9999
F92:Z022	F92:Z022	UA	UR	9999	UA9999	UR9999
F92:Z023	F92:Z023	UA	UR	9999	UA9999	UR9999
F92:Z024	F92:Z024	UA	UR	9999	UA9999	UR9999
F92:Z025	F92:Z025	UA	UR	9999	UA9999	UR9999
F92:Z026	F92:Z026	UA	UR	9999	UA9999	UR9999
F92:Z027	F92:Z027	UA	UR	9999	UA9999	UR9999
F92:Z028	F92:Z028	UA	UR	9999	UA9999	UR9999
F92:Z029	F92:Z029	UA	UR	9999	UA9999	UR9999
F92:Z030	F92:Z030	UA	UR	9999	UA9999	UR9999
F92:Z031	F92:Z031	UA	UR	9999	UA9999	UR9999
F92:Z032	F92:Z032	UA	UR	9999	UA9999	UR9999
F92:S001	F92 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F92:S002	F92 XmitPollFail	NA	NS	9999	NA9999	NS9999
F92:S003	F92 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F92:S004	F92 Cab Tamper	TA	TR	9999	TA9999	TR9999
F92:S005	F92 AC fail	AT	AR	9999	AT9999	AR9999
F92:S006	F92 Low Batt	YT	YR	9999	YT9999	YR9999
F92:S007	F92 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F92:S008	F92 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F92:S009	F92 Low Volts	YP	YQ	9999	YP9999	YQ9999
F92:S010	F92 PS Fail	YP	YQ	9999	YP9999	YQ9999
F92:S011	F92 Batt Test	IA	IR	9999	IA9999	IR9999
F92:S012	F92 LAN Comms	EM	EN	9999	EM9999	EN9999
F92:S013	F92 Spare1	UA	UR	9999	UA9999	UR9999
F92:S014	F92 Spare2	UA	UR	9999	UA9999	UR9999
F93:Z001	F93:Z001	UA	UR	9999	UA9999	UR9999
F93:Z002	F93:Z002	UA	UR	9999	UA9999	UR9999
F93:Z003	F93:Z003	UA	UR	9999	UA9999	UR9999
F93:Z004	F93:Z004	UA	UR	9999	UA9999	UR9999
F93:Z005	F93:Z005	UA	UR	9999	UA9999	UR9999
F93:Z006	F93:Z006	UA	UR	9999	UA9999	UR9999
F93:Z007	F93:Z007	UA	UR	9999	UA9999	UR9999
F93:Z008	F93:Z008	UA	UR	9999	UA9999	UR9999
F93:Z009	F93:Z009	UA	UR	9999	UA9999	UR9999
F93:Z010	F93:Z010	UA	UR	9999	UA9999	UR9999
F93:Z011	F93:Z011	UA	UR	9999	UA9999	UR9999
F93:Z012	F93:Z012	UA	UR	9999	UA9999	UR9999
F93:Z013	F93:Z013	UA	UR	9999	UA9999	UR9999
F93:Z014	F93:Z014	UA	UR	9999	UA9999	UR9999
F93:Z015	F93:Z015	UA	UR	9999	UA9999	UR9999
F93:Z016	F93:Z016	UA	UR	9999	UA9999	UR9999
F93:Z017	F93:Z017	UA	UR	9999	UA9999	UR9999
F93:Z018	F93:Z018	UA	UR	9999	UA9999	UR9999
F93:Z019	F93:Z019	UA	UR	9999	UA9999	UR9999
F93:Z020	F93:Z020	UA	UR	9999	UA9999	UR9999
F93:Z021	F93:Z021	UA	UR	9999	UA9999	UR9999
F93:Z022	F93:Z022	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F93:Z023	F93:Z023	UA	UR	9999	UA9999	UR9999
F93:Z024	F93:Z024	UA	UR	9999	UA9999	UR9999
F93:Z025	F93:Z025	UA	UR	9999	UA9999	UR9999
F93:Z026	F93:Z026	UA	UR	9999	UA9999	UR9999
F93:Z027	F93:Z027	UA	UR	9999	UA9999	UR9999
F93:Z028	F93:Z028	UA	UR	9999	UA9999	UR9999
F93:Z029	F93:Z029	UA	UR	9999	UA9999	UR9999
F93:Z030	F93:Z030	UA	UR	9999	UA9999	UR9999
F93:Z031	F93:Z031	UA	UR	9999	UA9999	UR9999
F93:Z032	F93:Z032	UA	UR	9999	UA9999	UR9999
F93:S001	F93 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F93:S002	F93 XmitPollFail	NA	NS	9999	NA9999	NS9999
F93:S003	F93 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F93:S004	F93 Cab Tamper	TA	TR	9999	TA9999	TR9999
F93:S005	F93 AC fail	AT	AR	9999	AT9999	AR9999
F93:S006	F93 Low Batt	YT	YR	9999	YT9999	YR9999
F93:S007	F93 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F93:S008	F93 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F93:S009	F93 Low Volts	YP	YQ	9999	YP9999	YQ9999
F93:S010	F93 PS Fail	YP	YQ	9999	YP9999	YQ9999
F93:S011	F93 Batt Test	IA	IR	9999	IA9999	IR9999
F93:S012	F93 LAN Comms	EM	EN	9999	EM9999	EN9999
F93:S013	F93 Spare1	UA	UR	9999	UA9999	UR9999
F93:S014	F93 Spare2	UA	UR	9999	UA9999	UR9999
F94:Z001	F94:Z001	UA	UR	9999	UA9999	UR9999
F94:Z002	F94:Z002	UA	UR	9999	UA9999	UR9999
F94:Z003	F94:Z003	UA	UR	9999	UA9999	UR9999
F94:Z004	F94:Z004	UA	UR	9999	UA9999	UR9999
F94:Z005	F94:Z005	UA	UR	9999	UA9999	UR9999
F94:Z006	F94:Z006	UA	UR	9999	UA9999	UR9999
F94:Z007	F94:Z007	UA	UR	9999	UA9999	UR9999
F94:Z008	F94:Z008	UA	UR	9999	UA9999	UR9999
F94:Z009	F94:Z009	UA	UR	9999	UA9999	UR9999
F94:Z010	F94:Z010	UA	UR	9999	UA9999	UR9999
F94:Z011	F94:Z011	UA	UR	9999	UA9999	UR9999
F94:Z012	F94:Z012	UA	UR	9999	UA9999	UR9999
F94:Z013	F94:Z013	UA	UR	9999	UA9999	UR9999
F94:Z014	F94:Z014	UA	UR	9999	UA9999	UR9999
F94:Z015	F94:Z015	UA	UR	9999	UA9999	UR9999
F94:Z016	F94:Z016	UA	UR	9999	UA9999	UR9999
F94:Z017	F94:Z017	UA	UR	9999	UA9999	UR9999
F94:Z018	F94:Z018	UA	UR	9999	UA9999	UR9999
F94:Z019	F94:Z019	UA	UR	9999	UA9999	UR9999
F94:Z020	F94:Z020	UA	UR	9999	UA9999	UR9999
F94:Z021	F94:Z021	UA	UR	9999	UA9999	UR9999
F94:Z022	F94:Z022	UA	UR	9999	UA9999	UR9999
F94:Z023	F94:Z023	UA	UR	9999	UA9999	UR9999
F94:Z024	F94:Z024	UA	UR	9999	UA9999	UR9999
F94:Z025	F94:Z025	UA	UR	9999	UA9999	UR9999
F94:Z026	F94:Z026	UA	UR	9999	UA9999	UR9999
F94:Z027	F94:Z027	UA	UR	9999	UA9999	UR9999
F94:Z028	F94:Z028	UA	UR	9999	UA9999	UR9999
F94:Z029	F94:Z029	UA	UR	9999	UA9999	UR9999
F94:Z030	F94:Z030	UA	UR	9999	UA9999	UR9999
F94:Z031	F94:Z031	UA	UR	9999	UA9999	UR9999
F94:Z032	F94:Z032	UA	UR	9999	UA9999	UR9999
F94:S001	F94 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F94:S002	F94 XmitPollFail	NA	NS	9999	NA9999	NS9999
F94:S003	F94 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F94:S004	F94 Cab Tamper	TA	TR	9999	TA9999	TR9999
F94:S005	F94 AC fail	AT	AR	9999	AT9999	AR9999
F94:S006	F94 Low Batt	YT	YR	9999	YT9999	YR9999
F94:S007	F94 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F94:S008	F94 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F94:S009	F94 Low Volts	YP	YQ	9999	YP9999	YQ9999
F94:S010	F94 PS Fail	YP	YQ	9999	YP9999	YQ9999
F94:S011	F94 Batt Test	IA	IR	9999	IA9999	IR9999
F94:S012	F94 LAN Comms	EM	EN	9999	EM9999	EN9999
F94:S013	F94 Spare1	UA	UR	9999	UA9999	UR9999
F94:S014	F94 Spare2	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F95:Z001	F95:Z001	UA	UR	9999	UA9999	UR9999
F95:Z002	F95:Z002	UA	UR	9999	UA9999	UR9999
F95:Z003	F95:Z003	UA	UR	9999	UA9999	UR9999
F95:Z004	F95:Z004	UA	UR	9999	UA9999	UR9999
F95:Z005	F95:Z005	UA	UR	9999	UA9999	UR9999
F95:Z006	F95:Z006	UA	UR	9999	UA9999	UR9999
F95:Z007	F95:Z007	UA	UR	9999	UA9999	UR9999
F95:Z008	F95:Z008	UA	UR	9999	UA9999	UR9999
F95:Z009	F95:Z009	UA	UR	9999	UA9999	UR9999
F95:Z010	F95:Z010	UA	UR	9999	UA9999	UR9999
F95:Z011	F95:Z011	UA	UR	9999	UA9999	UR9999
F95:Z012	F95:Z012	UA	UR	9999	UA9999	UR9999
F95:Z013	F95:Z013	UA	UR	9999	UA9999	UR9999
F95:Z014	F95:Z014	UA	UR	9999	UA9999	UR9999
F95:Z015	F95:Z015	UA	UR	9999	UA9999	UR9999
F95:Z016	F95:Z016	UA	UR	9999	UA9999	UR9999
F95:Z017	F95:Z017	UA	UR	9999	UA9999	UR9999
F95:Z018	F95:Z018	UA	UR	9999	UA9999	UR9999
F95:Z019	F95:Z019	UA	UR	9999	UA9999	UR9999
F95:Z020	F95:Z020	UA	UR	9999	UA9999	UR9999
F95:Z021	F95:Z021	UA	UR	9999	UA9999	UR9999
F95:Z022	F95:Z022	UA	UR	9999	UA9999	UR9999
F95:Z023	F95:Z023	UA	UR	9999	UA9999	UR9999
F95:Z024	F95:Z024	UA	UR	9999	UA9999	UR9999
F95:Z025	F95:Z025	UA	UR	9999	UA9999	UR9999
F95:Z026	F95:Z026	UA	UR	9999	UA9999	UR9999
F95:Z027	F95:Z027	UA	UR	9999	UA9999	UR9999
F95:Z028	F95:Z028	UA	UR	9999	UA9999	UR9999
F95:Z029	F95:Z029	UA	UR	9999	UA9999	UR9999
F95:Z030	F95:Z030	UA	UR	9999	UA9999	UR9999
F95:Z031	F95:Z031	UA	UR	9999	UA9999	UR9999
F95:Z032	F95:Z032	UA	UR	9999	UA9999	UR9999
F95:S001	F95 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F95:S002	F95 XmitPollFail	NA	NS	9999	NA9999	NS9999
F95:S003	F95 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F95:S004	F95 Cab Tamper	TA	TR	9999	TA9999	TR9999
F95:S005	F95 AC fail	AT	AR	9999	AT9999	AR9999
F95:S006	F95 Low Batt	YT	YR	9999	YT9999	YR9999
F95:S007	F95 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F95:S008	F95 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F95:S009	F95 Low Volts	YP	YQ	9999	YP9999	YQ9999
F95:S010	F95 PS Fail	YP	YQ	9999	YP9999	YQ9999
F95:S011	F95 Batt Test	IA	IR	9999	IA9999	IR9999
F95:S012	F95 LAN Comms	EM	EN	9999	EM9999	EN9999
F95:S013	F95 Spare1	UA	UR	9999	UA9999	UR9999
F95:S014	F95 Spare2	UA	UR	9999	UA9999	UR9999
F96:Z001	F96:Z001	UA	UR	9999	UA9999	UR9999
F96:Z002	F96:Z002	UA	UR	9999	UA9999	UR9999
F96:Z003	F96:Z003	UA	UR	9999	UA9999	UR9999
F96:Z004	F96:Z004	UA	UR	9999	UA9999	UR9999
F96:Z005	F96:Z005	UA	UR	9999	UA9999	UR9999
F96:Z006	F96:Z006	UA	UR	9999	UA9999	UR9999
F96:Z007	F96:Z007	UA	UR	9999	UA9999	UR9999
F96:Z008	F96:Z008	UA	UR	9999	UA9999	UR9999
F96:Z009	F96:Z009	UA	UR	9999	UA9999	UR9999
F96:Z010	F96:Z010	UA	UR	9999	UA9999	UR9999
F96:Z011	F96:Z011	UA	UR	9999	UA9999	UR9999
F96:Z012	F96:Z012	UA	UR	9999	UA9999	UR9999
F96:Z013	F96:Z013	UA	UR	9999	UA9999	UR9999
F96:Z014	F96:Z014	UA	UR	9999	UA9999	UR9999
F96:Z015	F96:Z015	UA	UR	9999	UA9999	UR9999
F96:Z016	F96:Z016	UA	UR	9999	UA9999	UR9999
F96:Z017	F96:Z017	UA	UR	9999	UA9999	UR9999
F96:Z018	F96:Z018	UA	UR	9999	UA9999	UR9999
F96:Z019	F96:Z019	UA	UR	9999	UA9999	UR9999
F96:Z020	F96:Z020	UA	UR	9999	UA9999	UR9999
F96:Z021	F96:Z021	UA	UR	9999	UA9999	UR9999
F96:Z022	F96:Z022	UA	UR	9999	UA9999	UR9999
F96:Z023	F96:Z023	UA	UR	9999	UA9999	UR9999
F96:Z024	F96:Z024	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F96:Z025	F96:Z025	UA	UR	9999	UA9999	UR9999
F96:Z026	F96:Z026	UA	UR	9999	UA9999	UR9999
F96:Z027	F96:Z027	UA	UR	9999	UA9999	UR9999
F96:Z028	F96:Z028	UA	UR	9999	UA9999	UR9999
F96:Z029	F96:Z029	UA	UR	9999	UA9999	UR9999
F96:Z030	F96:Z030	UA	UR	9999	UA9999	UR9999
F96:Z031	F96:Z031	UA	UR	9999	UA9999	UR9999
F96:Z032	F96:Z032	UA	UR	9999	UA9999	UR9999
F96:S001	F96 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F96:S002	F96 XmitPollFail	NA	NS	9999	NA9999	NS9999
F96:S003	F96 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F96:S004	F96 Cab Tamper	TA	TR	9999	TA9999	TR9999
F96:S005	F96 AC fail	AT	AR	9999	AT9999	AR9999
F96:S006	F96 Low Batt	YT	YR	9999	YT9999	YR9999
F96:S007	F96 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F96:S008	F96 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F96:S009	F96 Low Volts	YP	YQ	9999	YP9999	YQ9999
F96:S010	F96 PS Fail	YP	YQ	9999	YP9999	YQ9999
F96:S011	F96 Batt Test	IA	IR	9999	IA9999	IR9999
F96:S012	F96 LAN Comms	EM	EN	9999	EM9999	EN9999
F96:S013	F96 Spare1	UA	UR	9999	UA9999	UR9999
F96:S014	F96 Spare2	UA	UR	9999	UA9999	UR9999
F97:Z001	F97:Z001	UA	UR	9999	UA9999	UR9999
F97:Z002	F97:Z002	UA	UR	9999	UA9999	UR9999
F97:Z003	F97:Z003	UA	UR	9999	UA9999	UR9999
F97:Z004	F97:Z004	UA	UR	9999	UA9999	UR9999
F97:Z005	F97:Z005	UA	UR	9999	UA9999	UR9999
F97:Z006	F97:Z006	UA	UR	9999	UA9999	UR9999
F97:Z007	F97:Z007	UA	UR	9999	UA9999	UR9999
F97:Z008	F97:Z008	UA	UR	9999	UA9999	UR9999
F97:Z009	F97:Z009	UA	UR	9999	UA9999	UR9999
F97:Z010	F97:Z010	UA	UR	9999	UA9999	UR9999
F97:Z011	F97:Z011	UA	UR	9999	UA9999	UR9999
F97:Z012	F97:Z012	UA	UR	9999	UA9999	UR9999
F97:Z013	F97:Z013	UA	UR	9999	UA9999	UR9999
F97:Z014	F97:Z014	UA	UR	9999	UA9999	UR9999
F97:Z015	F97:Z015	UA	UR	9999	UA9999	UR9999
F97:Z016	F97:Z016	UA	UR	9999	UA9999	UR9999
F97:Z017	F97:Z017	UA	UR	9999	UA9999	UR9999
F97:Z018	F97:Z018	UA	UR	9999	UA9999	UR9999
F97:Z019	F97:Z019	UA	UR	9999	UA9999	UR9999
F97:Z020	F97:Z020	UA	UR	9999	UA9999	UR9999
F97:Z021	F97:Z021	UA	UR	9999	UA9999	UR9999
F97:Z022	F97:Z022	UA	UR	9999	UA9999	UR9999
F97:Z023	F97:Z023	UA	UR	9999	UA9999	UR9999
F97:Z024	F97:Z024	UA	UR	9999	UA9999	UR9999
F97:Z025	F97:Z025	UA	UR	9999	UA9999	UR9999
F97:Z026	F97:Z026	UA	UR	9999	UA9999	UR9999
F97:Z027	F97:Z027	UA	UR	9999	UA9999	UR9999
F97:Z028	F97:Z028	UA	UR	9999	UA9999	UR9999
F97:Z029	F97:Z029	UA	UR	9999	UA9999	UR9999
F97:Z030	F97:Z030	UA	UR	9999	UA9999	UR9999
F97:Z031	F97:Z031	UA	UR	9999	UA9999	UR9999
F97:Z032	F97:Z032	UA	UR	9999	UA9999	UR9999
F97:S001	F97 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F97:S002	F97 XmitPollFail	NA	NS	9999	NA9999	NS9999
F97:S003	F97 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F97:S004	F97 Cab Tamper	TA	TR	9999	TA9999	TR9999
F97:S005	F97 AC fail	AT	AR	9999	AT9999	AR9999
F97:S006	F97 Low Batt	YT	YR	9999	YT9999	YR9999
F97:S007	F97 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F97:S008	F97 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F97:S009	F97 Low Volts	YP	YQ	9999	YP9999	YQ9999
F97:S010	F97 PS Fail	YP	YQ	9999	YP9999	YQ9999
F97:S011	F97 Batt Test	IA	IR	9999	IA9999	IR9999
F97:S012	F97 LAN Comms	EM	EN	9999	EM9999	EN9999
F97:S013	F97 Spare1	UA	UR	9999	UA9999	UR9999
F97:S014	F97 Spare2	UA	UR	9999	UA9999	UR9999
F98:Z001	F98:Z001	UA	UR	9999	UA9999	UR9999
F98:Z002	F98:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F98:Z003	F98:Z003	UA	UR	9999	UA9999	UR9999
F98:Z004	F98:Z004	UA	UR	9999	UA9999	UR9999
F98:Z005	F98:Z005	UA	UR	9999	UA9999	UR9999
F98:Z006	F98:Z006	UA	UR	9999	UA9999	UR9999
F98:Z007	F98:Z007	UA	UR	9999	UA9999	UR9999
F98:Z008	F98:Z008	UA	UR	9999	UA9999	UR9999
F98:Z009	F98:Z009	UA	UR	9999	UA9999	UR9999
F98:Z010	F98:Z010	UA	UR	9999	UA9999	UR9999
F98:Z011	F98:Z011	UA	UR	9999	UA9999	UR9999
F98:Z012	F98:Z012	UA	UR	9999	UA9999	UR9999
F98:Z013	F98:Z013	UA	UR	9999	UA9999	UR9999
F98:Z014	F98:Z014	UA	UR	9999	UA9999	UR9999
F98:Z015	F98:Z015	UA	UR	9999	UA9999	UR9999
F98:Z016	F98:Z016	UA	UR	9999	UA9999	UR9999
F98:Z017	F98:Z017	UA	UR	9999	UA9999	UR9999
F98:Z018	F98:Z018	UA	UR	9999	UA9999	UR9999
F98:Z019	F98:Z019	UA	UR	9999	UA9999	UR9999
F98:Z020	F98:Z020	UA	UR	9999	UA9999	UR9999
F98:Z021	F98:Z021	UA	UR	9999	UA9999	UR9999
F98:Z022	F98:Z022	UA	UR	9999	UA9999	UR9999
F98:Z023	F98:Z023	UA	UR	9999	UA9999	UR9999
F98:Z024	F98:Z024	UA	UR	9999	UA9999	UR9999
F98:Z025	F98:Z025	UA	UR	9999	UA9999	UR9999
F98:Z026	F98:Z026	UA	UR	9999	UA9999	UR9999
F98:Z027	F98:Z027	UA	UR	9999	UA9999	UR9999
F98:Z028	F98:Z028	UA	UR	9999	UA9999	UR9999
F98:Z029	F98:Z029	UA	UR	9999	UA9999	UR9999
F98:Z030	F98:Z030	UA	UR	9999	UA9999	UR9999
F98:Z031	F98:Z031	UA	UR	9999	UA9999	UR9999
F98:Z032	F98:Z032	UA	UR	9999	UA9999	UR9999
F98:S001	F98 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F98:S002	F98 XmitPollFail	NA	NS	9999	NA9999	NS9999
F98:S003	F98 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F98:S004	F98 Cab Tamper	TA	TR	9999	TA9999	TR9999
F98:S005	F98 AC fail	AT	AR	9999	AT9999	AR9999
F98:S006	F98 Low Batt	YT	YR	9999	YT9999	YR9999
F98:S007	F98 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F98:S008	F98 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F98:S009	F98 Low Volts	YP	YQ	9999	YP9999	YQ9999
F98:S010	F98 PS Fail	YP	YQ	9999	YP9999	YQ9999
F98:S011	F98 Batt Test	IA	IR	9999	IA9999	IR9999
F98:S012	F98 LAN Comms	EM	EN	9999	EM9999	EN9999
F98:S013	F98 Spare1	UA	UR	9999	UA9999	UR9999
F98:S014	F98 Spare2	UA	UR	9999	UA9999	UR9999
F99:Z001	F99:Z001	UA	UR	9999	UA9999	UR9999
F99:Z002	F99:Z002	UA	UR	9999	UA9999	UR9999
F99:Z003	F99:Z003	UA	UR	9999	UA9999	UR9999
F99:Z004	F99:Z004	UA	UR	9999	UA9999	UR9999
F99:Z005	F99:Z005	UA	UR	9999	UA9999	UR9999
F99:Z006	F99:Z006	UA	UR	9999	UA9999	UR9999
F99:Z007	F99:Z007	UA	UR	9999	UA9999	UR9999
F99:Z008	F99:Z008	UA	UR	9999	UA9999	UR9999
F99:Z009	F99:Z009	UA	UR	9999	UA9999	UR9999
F99:Z010	F99:Z010	UA	UR	9999	UA9999	UR9999
F99:Z011	F99:Z011	UA	UR	9999	UA9999	UR9999
F99:Z012	F99:Z012	UA	UR	9999	UA9999	UR9999
F99:Z013	F99:Z013	UA	UR	9999	UA9999	UR9999
F99:Z014	F99:Z014	UA	UR	9999	UA9999	UR9999
F99:Z015	F99:Z015	UA	UR	9999	UA9999	UR9999
F99:Z016	F99:Z016	UA	UR	9999	UA9999	UR9999
F99:Z017	F99:Z017	UA	UR	9999	UA9999	UR9999
F99:Z018	F99:Z018	UA	UR	9999	UA9999	UR9999
F99:Z019	F99:Z019	UA	UR	9999	UA9999	UR9999
F99:Z020	F99:Z020	UA	UR	9999	UA9999	UR9999
F99:Z021	F99:Z021	UA	UR	9999	UA9999	UR9999
F99:Z022	F99:Z022	UA	UR	9999	UA9999	UR9999
F99:Z023	F99:Z023	UA	UR	9999	UA9999	UR9999
F99:Z024	F99:Z024	UA	UR	9999	UA9999	UR9999
F99:Z025	F99:Z025	UA	UR	9999	UA9999	UR9999
F99:Z026	F99:Z026	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

F99:Z027	F99:Z027	UA	UR	9999	UA9999	UR9999
F99:Z028	F99:Z028	UA	UR	9999	UA9999	UR9999
F99:Z029	F99:Z029	UA	UR	9999	UA9999	UR9999
F99:Z030	F99:Z030	UA	UR	9999	UA9999	UR9999
F99:Z031	F99:Z031	UA	UR	9999	UA9999	UR9999
F99:Z032	F99:Z032	UA	UR	9999	UA9999	UR9999
F99:S001	F99 Xmit LowBatt	XT	XR	9999	XT9999	XR9999
F99:S002	F99 XmitPollFail	NA	NS	9999	NA9999	NS9999
F99:S003	F99 Xmitter Jam	XQ	XH	9999	XQ9999	XH9999
F99:S004	F99 Cab Tamper	TA	TR	9999	TA9999	TR9999
F99:S005	F99 AC fail	AT	AR	9999	AT9999	AR9999
F99:S006	F99 Low Batt	YT	YR	9999	YT9999	YR9999
F99:S007	F99 LAN Fuse	YP	YQ	9999	YP9999	YQ9999
F99:S008	F99 DET Fuse	YP	YQ	9999	YP9999	YQ9999
F99:S009	F99 Low Volts	YP	YQ	9999	YP9999	YQ9999
F99:S010	F99 PS Fail	YP	YQ	9999	YP9999	YQ9999
F99:S011	F99 Batt Test	IA	IR	9999	IA9999	IR9999
F99:S012	F99 LAN Comms	EM	EN	9999	EM9999	EN9999
F99:S013	F99 Spare1	UA	UR	9999	UA9999	UR9999
F99:S014	F99 Spare2	UA	UR	9999	UA9999	UR9999
V01:Z001	V01:Z001	UA	UR	8167	UA8167	UR8167
V01:Z002	V01:Z002	UA	UR	8168	UA8168	UR8168
V01:Z003	V01:Z003	UA	UR	8169	UA8169	UR8169
V01:Z004	V01:Z004	UA	UR	8170	UA8170	UR8170
V01:Z005	V01:Z005	UA	UR	8171	UA8171	UR8171
V01:Z006	V01:Z006	UA	UR	8172	UA8172	UR8172
V01:Z007	V01:Z007	UA	UR	8173	UA8173	UR8173
V01:Z008	V01:Z008	UA	UR	8174	UA8174	UR8174
V01:Z009	V01:Z009	UA	UR	8175	UA8175	UR8175
V01:Z010	V01:Z010	UA	UR	8176	UA8176	UR8176
V01:Z011	V01:Z011	UA	UR	8177	UA8177	UR8177
V01:Z012	V01:Z012	UA	UR	8178	UA8178	UR8178
V01:Z013	V01:Z013	UA	UR	8179	UA8179	UR8179
V01:Z014	V01:Z014	UA	UR	8180	UA8180	UR8180
V01:Z015	V01:Z015	UA	UR	8181	UA8181	UR8181
V01:Z016	V01:Z016	UA	UR	8182	UA8182	UR8182
V01:Z017	V01:Z017	UA	UR	8183	UA8183	UR8183
V01:Z018	V01:Z018	UA	UR	8184	UA8184	UR8184
V01:Z019	V01:Z019	UA	UR	8185	UA8185	UR8185
V01:Z020	V01:Z020	UA	UR	8186	UA8186	UR8186
V01:Z021	V01:Z021	UA	UR	8187	UA8187	UR8187
V01:Z022	V01:Z022	UA	UR	8188	UA8188	UR8188
V01:Z023	V01:Z023	UA	UR	8189	UA8189	UR8189
V01:Z024	V01:Z024	UA	UR	8190	UA8190	UR8190
V01:Z025	V01:Z025	UA	UR	8191	UA8191	UR8191
V01:Z026	V01:Z026	UA	UR	8192	UA8192	UR8192
V01:Z027	V01:Z027	UA	UR	8193	UA8193	UR8193
V01:Z028	V01:Z028	UA	UR	8194	UA8194	UR8194
V01:Z029	V01:Z029	UA	UR	8195	UA8195	UR8195
V01:Z030	V01:Z030	UA	UR	8196	UA8196	UR8196
V01:Z031	V01:Z031	UA	UR	8197	UA8197	UR8197
V01:Z032	V01:Z032	UA	UR	8198	UA8198	UR8198
V02:Z001	V02:Z001	UA	UR	8199	UA8199	UR8199
V02:Z002	V02:Z002	UA	UR	8200	UA8200	UR8200
V02:Z003	V02:Z003	UA	UR	8201	UA8201	UR8201
V02:Z004	V02:Z004	UA	UR	8202	UA8202	UR8202
V02:Z005	V02:Z005	UA	UR	8203	UA8203	UR8203
V02:Z006	V02:Z006	UA	UR	8204	UA8204	UR8204
V02:Z007	V02:Z007	UA	UR	8205	UA8205	UR8205
V02:Z008	V02:Z008	UA	UR	8206	UA8206	UR8206
V02:Z009	V02:Z009	UA	UR	8207	UA8207	UR8207
V02:Z010	V02:Z010	UA	UR	8208	UA8208	UR8208
V02:Z011	V02:Z011	UA	UR	8209	UA8209	UR8209
V02:Z012	V02:Z012	UA	UR	8210	UA8210	UR8210
V02:Z013	V02:Z013	UA	UR	8211	UA8211	UR8211
V02:Z014	V02:Z014	UA	UR	8212	UA8212	UR8212
V02:Z015	V02:Z015	UA	UR	8213	UA8213	UR8213
V02:Z016	V02:Z016	UA	UR	8214	UA8214	UR8214
V02:Z017	V02:Z017	UA	UR	8215	UA8215	UR8215
V02:Z018	V02:Z018	UA	UR	8216	UA8216	UR8216

Integriti SIA DECIMAL Map. V21

V02:Z019	V02:Z019	UA	UR	8217	UA8217	UR8217
V02:Z020	V02:Z020	UA	UR	8218	UA8218	UR8218
V02:Z021	V02:Z021	UA	UR	8219	UA8219	UR8219
V02:Z022	V02:Z022	UA	UR	8220	UA8220	UR8220
V02:Z023	V02:Z023	UA	UR	8221	UA8221	UR8221
V02:Z024	V02:Z024	UA	UR	8222	UA8222	UR8222
V02:Z025	V02:Z025	UA	UR	8223	UA8223	UR8223
V02:Z026	V02:Z026	UA	UR	8224	UA8224	UR8224
V02:Z027	V02:Z027	UA	UR	8225	UA8225	UR8225
V02:Z028	V02:Z028	UA	UR	8226	UA8226	UR8226
V02:Z029	V02:Z029	UA	UR	8227	UA8227	UR8227
V02:Z030	V02:Z030	UA	UR	8228	UA8228	UR8228
V02:Z031	V02:Z031	UA	UR	8229	UA8229	UR8229
V02:Z032	V02:Z032	UA	UR	8230	UA8230	UR8230
V03:Z001	V03:Z001	UA	UR	8231	UA8231	UR8231
V03:Z002	V03:Z002	UA	UR	8232	UA8232	UR8232
V03:Z003	V03:Z003	UA	UR	8233	UA8233	UR8233
V03:Z004	V03:Z004	UA	UR	8234	UA8234	UR8234
V03:Z005	V03:Z005	UA	UR	8235	UA8235	UR8235
V03:Z006	V03:Z006	UA	UR	8236	UA8236	UR8236
V03:Z007	V03:Z007	UA	UR	8237	UA8237	UR8237
V03:Z008	V03:Z008	UA	UR	8238	UA8238	UR8238
V03:Z009	V03:Z009	UA	UR	8239	UA8239	UR8239
V03:Z010	V03:Z010	UA	UR	8240	UA8240	UR8240
V03:Z011	V03:Z011	UA	UR	8241	UA8241	UR8241
V03:Z012	V03:Z012	UA	UR	8242	UA8242	UR8242
V03:Z013	V03:Z013	UA	UR	8243	UA8243	UR8243
V03:Z014	V03:Z014	UA	UR	8244	UA8244	UR8244
V03:Z015	V03:Z015	UA	UR	8245	UA8245	UR8245
V03:Z016	V03:Z016	UA	UR	8246	UA8246	UR8246
V03:Z017	V03:Z017	UA	UR	8247	UA8247	UR8247
V03:Z018	V03:Z018	UA	UR	8248	UA8248	UR8248
V03:Z019	V03:Z019	UA	UR	8249	UA8249	UR8249
V03:Z020	V03:Z020	UA	UR	8250	UA8250	UR8250
V03:Z021	V03:Z021	UA	UR	8251	UA8251	UR8251
V03:Z022	V03:Z022	UA	UR	8252	UA8252	UR8252
V03:Z023	V03:Z023	UA	UR	8253	UA8253	UR8253
V03:Z024	V03:Z024	UA	UR	8254	UA8254	UR8254
V03:Z025	V03:Z025	UA	UR	8255	UA8255	UR8255
V03:Z026	V03:Z026	UA	UR	8256	UA8256	UR8256
V03:Z027	V03:Z027	UA	UR	8257	UA8257	UR8257
V03:Z028	V03:Z028	UA	UR	8258	UA8258	UR8258
V03:Z029	V03:Z029	UA	UR	8259	UA8259	UR8259
V03:Z030	V03:Z030	UA	UR	8260	UA8260	UR8260
V03:Z031	V03:Z031	UA	UR	8261	UA8261	UR8261
V03:Z032	V03:Z032	UA	UR	8262	UA8262	UR8262
V04:Z001	V04:Z001	UA	UR	8263	UA8263	UR8263
V04:Z002	V04:Z002	UA	UR	8264	UA8264	UR8264
V04:Z003	V04:Z003	UA	UR	8265	UA8265	UR8265
V04:Z004	V04:Z004	UA	UR	8266	UA8266	UR8266
V04:Z005	V04:Z005	UA	UR	8267	UA8267	UR8267
V04:Z006	V04:Z006	UA	UR	8268	UA8268	UR8268
V04:Z007	V04:Z007	UA	UR	8269	UA8269	UR8269
V04:Z008	V04:Z008	UA	UR	8270	UA8270	UR8270
V04:Z009	V04:Z009	UA	UR	8271	UA8271	UR8271
V04:Z010	V04:Z010	UA	UR	8272	UA8272	UR8272
V04:Z011	V04:Z011	UA	UR	8273	UA8273	UR8273
V04:Z012	V04:Z012	UA	UR	8274	UA8274	UR8274
V04:Z013	V04:Z013	UA	UR	8275	UA8275	UR8275
V04:Z014	V04:Z014	UA	UR	8276	UA8276	UR8276
V04:Z015	V04:Z015	UA	UR	8277	UA8277	UR8277
V04:Z016	V04:Z016	UA	UR	8278	UA8278	UR8278
V04:Z017	V04:Z017	UA	UR	8279	UA8279	UR8279
V04:Z018	V04:Z018	UA	UR	8280	UA8280	UR8280
V04:Z019	V04:Z019	UA	UR	8281	UA8281	UR8281
V04:Z020	V04:Z020	UA	UR	8282	UA8282	UR8282
V04:Z021	V04:Z021	UA	UR	8283	UA8283	UR8283
V04:Z022	V04:Z022	UA	UR	8284	UA8284	UR8284
V04:Z023	V04:Z023	UA	UR	8285	UA8285	UR8285
V04:Z024	V04:Z024	UA	UR	8286	UA8286	UR8286

Integriti SIA DECIMAL Map. V21

V04:Z025	V04:Z025	UA	UR	8287	UA8287	UR8287
V04:Z026	V04:Z026	UA	UR	8288	UA8288	UR8288
V04:Z027	V04:Z027	UA	UR	8289	UA8289	UR8289
V04:Z028	V04:Z028	UA	UR	8290	UA8290	UR8290
V04:Z029	V04:Z029	UA	UR	8291	UA8291	UR8291
V04:Z030	V04:Z030	UA	UR	8292	UA8292	UR8292
V04:Z031	V04:Z031	UA	UR	8293	UA8293	UR8293
V04:Z032	V04:Z032	UA	UR	8294	UA8294	UR8294
V05:Z001	V05:Z001	UA	UR	8295	UA8295	UR8295
V05:Z002	V05:Z002	UA	UR	8296	UA8296	UR8296
V05:Z003	V05:Z003	UA	UR	8297	UA8297	UR8297
V05:Z004	V05:Z004	UA	UR	8298	UA8298	UR8298
V05:Z005	V05:Z005	UA	UR	8299	UA8299	UR8299
V05:Z006	V05:Z006	UA	UR	8300	UA8300	UR8300
V05:Z007	V05:Z007	UA	UR	8301	UA8301	UR8301
V05:Z008	V05:Z008	UA	UR	8302	UA8302	UR8302
V05:Z009	V05:Z009	UA	UR	8303	UA8303	UR8303
V05:Z010	V05:Z010	UA	UR	8304	UA8304	UR8304
V05:Z011	V05:Z011	UA	UR	8305	UA8305	UR8305
V05:Z012	V05:Z012	UA	UR	8306	UA8306	UR8306
V05:Z013	V05:Z013	UA	UR	8307	UA8307	UR8307
V05:Z014	V05:Z014	UA	UR	8308	UA8308	UR8308
V05:Z015	V05:Z015	UA	UR	8309	UA8309	UR8309
V05:Z016	V05:Z016	UA	UR	8310	UA8310	UR8310
V05:Z017	V05:Z017	UA	UR	8311	UA8311	UR8311
V05:Z018	V05:Z018	UA	UR	8312	UA8312	UR8312
V05:Z019	V05:Z019	UA	UR	8313	UA8313	UR8313
V05:Z020	V05:Z020	UA	UR	8314	UA8314	UR8314
V05:Z021	V05:Z021	UA	UR	8315	UA8315	UR8315
V05:Z022	V05:Z022	UA	UR	8316	UA8316	UR8316
V05:Z023	V05:Z023	UA	UR	8317	UA8317	UR8317
V05:Z024	V05:Z024	UA	UR	8318	UA8318	UR8318
V05:Z025	V05:Z025	UA	UR	8319	UA8319	UR8319
V05:Z026	V05:Z026	UA	UR	8320	UA8320	UR8320
V05:Z027	V05:Z027	UA	UR	8321	UA8321	UR8321
V05:Z028	V05:Z028	UA	UR	8322	UA8322	UR8322
V05:Z029	V05:Z029	UA	UR	8323	UA8323	UR8323
V05:Z030	V05:Z030	UA	UR	8324	UA8324	UR8324
V05:Z031	V05:Z031	UA	UR	8325	UA8325	UR8325
V05:Z032	V05:Z032	UA	UR	8326	UA8326	UR8326
V06:Z001	V06:Z001	UA	UR	8327	UA8327	UR8327
V06:Z002	V06:Z002	UA	UR	8328	UA8328	UR8328
V06:Z003	V06:Z003	UA	UR	8329	UA8329	UR8329
V06:Z004	V06:Z004	UA	UR	8330	UA8330	UR8330
V06:Z005	V06:Z005	UA	UR	8331	UA8331	UR8331
V06:Z006	V06:Z006	UA	UR	8332	UA8332	UR8332
V06:Z007	V06:Z007	UA	UR	8333	UA8333	UR8333
V06:Z008	V06:Z008	UA	UR	8334	UA8334	UR8334
V06:Z009	V06:Z009	UA	UR	8335	UA8335	UR8335
V06:Z010	V06:Z010	UA	UR	8336	UA8336	UR8336
V06:Z011	V06:Z011	UA	UR	8337	UA8337	UR8337
V06:Z012	V06:Z012	UA	UR	8338	UA8338	UR8338
V06:Z013	V06:Z013	UA	UR	8339	UA8339	UR8339
V06:Z014	V06:Z014	UA	UR	8340	UA8340	UR8340
V06:Z015	V06:Z015	UA	UR	8341	UA8341	UR8341
V06:Z016	V06:Z016	UA	UR	8342	UA8342	UR8342
V06:Z017	V06:Z017	UA	UR	8343	UA8343	UR8343
V06:Z018	V06:Z018	UA	UR	8344	UA8344	UR8344
V06:Z019	V06:Z019	UA	UR	8345	UA8345	UR8345
V06:Z020	V06:Z020	UA	UR	8346	UA8346	UR8346
V06:Z021	V06:Z021	UA	UR	8347	UA8347	UR8347
V06:Z022	V06:Z022	UA	UR	8348	UA8348	UR8348
V06:Z023	V06:Z023	UA	UR	8349	UA8349	UR8349
V06:Z024	V06:Z024	UA	UR	8350	UA8350	UR8350
V06:Z025	V06:Z025	UA	UR	8351	UA8351	UR8351
V06:Z026	V06:Z026	UA	UR	8352	UA8352	UR8352
V06:Z027	V06:Z027	UA	UR	8353	UA8353	UR8353
V06:Z028	V06:Z028	UA	UR	8354	UA8354	UR8354
V06:Z029	V06:Z029	UA	UR	8355	UA8355	UR8355
V06:Z030	V06:Z030	UA	UR	8356	UA8356	UR8356

Integriti SIA DECIMAL Map. V21

V06:Z031	V06:Z031	UA	UR	8357	UA8357	UR8357
V06:Z032	V06:Z032	UA	UR	8358	UA8358	UR8358
V07:Z001	V07:Z001	UA	UR	8359	UA8359	UR8359
V07:Z002	V07:Z002	UA	UR	8360	UA8360	UR8360
V07:Z003	V07:Z003	UA	UR	8361	UA8361	UR8361
V07:Z004	V07:Z004	UA	UR	8362	UA8362	UR8362
V07:Z005	V07:Z005	UA	UR	8363	UA8363	UR8363
V07:Z006	V07:Z006	UA	UR	8364	UA8364	UR8364
V07:Z007	V07:Z007	UA	UR	8365	UA8365	UR8365
V07:Z008	V07:Z008	UA	UR	8366	UA8366	UR8366
V07:Z009	V07:Z009	UA	UR	8367	UA8367	UR8367
V07:Z010	V07:Z010	UA	UR	8368	UA8368	UR8368
V07:Z011	V07:Z011	UA	UR	8369	UA8369	UR8369
V07:Z012	V07:Z012	UA	UR	8370	UA8370	UR8370
V07:Z013	V07:Z013	UA	UR	8371	UA8371	UR8371
V07:Z014	V07:Z014	UA	UR	8372	UA8372	UR8372
V07:Z015	V07:Z015	UA	UR	8373	UA8373	UR8373
V07:Z016	V07:Z016	UA	UR	8374	UA8374	UR8374
V07:Z017	V07:Z017	UA	UR	8375	UA8375	UR8375
V07:Z018	V07:Z018	UA	UR	8376	UA8376	UR8376
V07:Z019	V07:Z019	UA	UR	8377	UA8377	UR8377
V07:Z020	V07:Z020	UA	UR	8378	UA8378	UR8378
V07:Z021	V07:Z021	UA	UR	8379	UA8379	UR8379
V07:Z022	V07:Z022	UA	UR	8380	UA8380	UR8380
V07:Z023	V07:Z023	UA	UR	8381	UA8381	UR8381
V07:Z024	V07:Z024	UA	UR	8382	UA8382	UR8382
V07:Z025	V07:Z025	UA	UR	8383	UA8383	UR8383
V07:Z026	V07:Z026	UA	UR	8384	UA8384	UR8384
V07:Z027	V07:Z027	UA	UR	8385	UA8385	UR8385
V07:Z028	V07:Z028	UA	UR	8386	UA8386	UR8386
V07:Z029	V07:Z029	UA	UR	8387	UA8387	UR8387
V07:Z030	V07:Z030	UA	UR	8388	UA8388	UR8388
V07:Z031	V07:Z031	UA	UR	8389	UA8389	UR8389
V07:Z032	V07:Z032	UA	UR	8390	UA8390	UR8390
V08:Z001	V08:Z001	UA	UR	8391	UA8391	UR8391
V08:Z002	V08:Z002	UA	UR	8392	UA8392	UR8392
V08:Z003	V08:Z003	UA	UR	8393	UA8393	UR8393
V08:Z004	V08:Z004	UA	UR	8394	UA8394	UR8394
V08:Z005	V08:Z005	UA	UR	8395	UA8395	UR8395
V08:Z006	V08:Z006	UA	UR	8396	UA8396	UR8396
V08:Z007	V08:Z007	UA	UR	8397	UA8397	UR8397
V08:Z008	V08:Z008	UA	UR	8398	UA8398	UR8398
V08:Z009	V08:Z009	UA	UR	8399	UA8399	UR8399
V08:Z010	V08:Z010	UA	UR	8400	UA8400	UR8400
V08:Z011	V08:Z011	UA	UR	8401	UA8401	UR8401
V08:Z012	V08:Z012	UA	UR	8402	UA8402	UR8402
V08:Z013	V08:Z013	UA	UR	8403	UA8403	UR8403
V08:Z014	V08:Z014	UA	UR	8404	UA8404	UR8404
V08:Z015	V08:Z015	UA	UR	8405	UA8405	UR8405
V08:Z016	V08:Z016	UA	UR	8406	UA8406	UR8406
V08:Z017	V08:Z017	UA	UR	8407	UA8407	UR8407
V08:Z018	V08:Z018	UA	UR	8408	UA8408	UR8408
V08:Z019	V08:Z019	UA	UR	8409	UA8409	UR8409
V08:Z020	V08:Z020	UA	UR	8410	UA8410	UR8410
V08:Z021	V08:Z021	UA	UR	8411	UA8411	UR8411
V08:Z022	V08:Z022	UA	UR	8412	UA8412	UR8412
V08:Z023	V08:Z023	UA	UR	8413	UA8413	UR8413
V08:Z024	V08:Z024	UA	UR	8414	UA8414	UR8414
V08:Z025	V08:Z025	UA	UR	8415	UA8415	UR8415
V08:Z026	V08:Z026	UA	UR	8416	UA8416	UR8416
V08:Z027	V08:Z027	UA	UR	8417	UA8417	UR8417
V08:Z028	V08:Z028	UA	UR	8418	UA8418	UR8418
V08:Z029	V08:Z029	UA	UR	8419	UA8419	UR8419
V08:Z030	V08:Z030	UA	UR	8420	UA8420	UR8420
V08:Z031	V08:Z031	UA	UR	8421	UA8421	UR8421
V08:Z032	V08:Z032	UA	UR	8422	UA8422	UR8422
V09:Z001	V09:Z001	UA	UR	8423	UA8423	UR8423
V09:Z002	V09:Z002	UA	UR	8424	UA8424	UR8424
V09:Z003	V09:Z003	UA	UR	8425	UA8425	UR8425
V09:Z004	V09:Z004	UA	UR	8426	UA8426	UR8426

Integriti SIA DECIMAL Map. V21

V09:Z005	V09:Z005	UA	UR	8427	UA8427	UR8427
V09:Z006	V09:Z006	UA	UR	8428	UA8428	UR8428
V09:Z007	V09:Z007	UA	UR	8429	UA8429	UR8429
V09:Z008	V09:Z008	UA	UR	8430	UA8430	UR8430
V09:Z009	V09:Z009	UA	UR	8431	UA8431	UR8431
V09:Z010	V09:Z010	UA	UR	8432	UA8432	UR8432
V09:Z011	V09:Z011	UA	UR	8433	UA8433	UR8433
V09:Z012	V09:Z012	UA	UR	8434	UA8434	UR8434
V09:Z013	V09:Z013	UA	UR	8435	UA8435	UR8435
V09:Z014	V09:Z014	UA	UR	8436	UA8436	UR8436
V09:Z015	V09:Z015	UA	UR	8437	UA8437	UR8437
V09:Z016	V09:Z016	UA	UR	8438	UA8438	UR8438
V09:Z017	V09:Z017	UA	UR	8439	UA8439	UR8439
V09:Z018	V09:Z018	UA	UR	8440	UA8440	UR8440
V09:Z019	V09:Z019	UA	UR	8441	UA8441	UR8441
V09:Z020	V09:Z020	UA	UR	8442	UA8442	UR8442
V09:Z021	V09:Z021	UA	UR	8443	UA8443	UR8443
V09:Z022	V09:Z022	UA	UR	8444	UA8444	UR8444
V09:Z023	V09:Z023	UA	UR	8445	UA8445	UR8445
V09:Z024	V09:Z024	UA	UR	8446	UA8446	UR8446
V09:Z025	V09:Z025	UA	UR	8447	UA8447	UR8447
V09:Z026	V09:Z026	UA	UR	8448	UA8448	UR8448
V09:Z027	V09:Z027	UA	UR	8449	UA8449	UR8449
V09:Z028	V09:Z028	UA	UR	8450	UA8450	UR8450
V09:Z029	V09:Z029	UA	UR	8451	UA8451	UR8451
V09:Z030	V09:Z030	UA	UR	8452	UA8452	UR8452
V09:Z031	V09:Z031	UA	UR	8453	UA8453	UR8453
V09:Z032	V09:Z032	UA	UR	8454	UA8454	UR8454
V10:Z001	V10:Z001	UA	UR	8455	UA8455	UR8455
V10:Z002	V10:Z002	UA	UR	8456	UA8456	UR8456
V10:Z003	V10:Z003	UA	UR	8457	UA8457	UR8457
V10:Z004	V10:Z004	UA	UR	8458	UA8458	UR8458
V10:Z005	V10:Z005	UA	UR	8459	UA8459	UR8459
V10:Z006	V10:Z006	UA	UR	8460	UA8460	UR8460
V10:Z007	V10:Z007	UA	UR	8461	UA8461	UR8461
V10:Z008	V10:Z008	UA	UR	8462	UA8462	UR8462
V10:Z009	V10:Z009	UA	UR	8463	UA8463	UR8463
V10:Z010	V10:Z010	UA	UR	8464	UA8464	UR8464
V10:Z011	V10:Z011	UA	UR	8465	UA8465	UR8465
V10:Z012	V10:Z012	UA	UR	8466	UA8466	UR8466
V10:Z013	V10:Z013	UA	UR	8467	UA8467	UR8467
V10:Z014	V10:Z014	UA	UR	8468	UA8468	UR8468
V10:Z015	V10:Z015	UA	UR	8469	UA8469	UR8469
V10:Z016	V10:Z016	UA	UR	8470	UA8470	UR8470
V10:Z017	V10:Z017	UA	UR	8471	UA8471	UR8471
V10:Z018	V10:Z018	UA	UR	8472	UA8472	UR8472
V10:Z019	V10:Z019	UA	UR	8473	UA8473	UR8473
V10:Z020	V10:Z020	UA	UR	8474	UA8474	UR8474
V10:Z021	V10:Z021	UA	UR	8475	UA8475	UR8475
V10:Z022	V10:Z022	UA	UR	8476	UA8476	UR8476
V10:Z023	V10:Z023	UA	UR	8477	UA8477	UR8477
V10:Z024	V10:Z024	UA	UR	8478	UA8478	UR8478
V10:Z025	V10:Z025	UA	UR	8479	UA8479	UR8479
V10:Z026	V10:Z026	UA	UR	8480	UA8480	UR8480
V10:Z027	V10:Z027	UA	UR	8481	UA8481	UR8481
V10:Z028	V10:Z028	UA	UR	8482	UA8482	UR8482
V10:Z029	V10:Z029	UA	UR	8483	UA8483	UR8483
V10:Z030	V10:Z030	UA	UR	8484	UA8484	UR8484
V10:Z031	V10:Z031	UA	UR	8485	UA8485	UR8485
V10:Z032	V10:Z032	UA	UR	8486	UA8486	UR8486
V11:Z001	V11:Z001	UA	UR	8487	UA8487	UR8487
V11:Z002	V11:Z002	UA	UR	8488	UA8488	UR8488
V11:Z003	V11:Z003	UA	UR	8489	UA8489	UR8489
V11:Z004	V11:Z004	UA	UR	8490	UA8490	UR8490
V11:Z005	V11:Z005	UA	UR	8491	UA8491	UR8491
V11:Z006	V11:Z006	UA	UR	8492	UA8492	UR8492
V11:Z007	V11:Z007	UA	UR	8493	UA8493	UR8493
V11:Z008	V11:Z008	UA	UR	8494	UA8494	UR8494
V11:Z009	V11:Z009	UA	UR	8495	UA8495	UR8495
V11:Z010	V11:Z010	UA	UR	8496	UA8496	UR8496

Integriti SIA DECIMAL Map. V21

V11:Z011	V11:Z011	UA	UR	8497	UA8497	UR8497
V11:Z012	V11:Z012	UA	UR	8498	UA8498	UR8498
V11:Z013	V11:Z013	UA	UR	8499	UA8499	UR8499
V11:Z014	V11:Z014	UA	UR	8500	UA8500	UR8500
V11:Z015	V11:Z015	UA	UR	8501	UA8501	UR8501
V11:Z016	V11:Z016	UA	UR	8502	UA8502	UR8502
V11:Z017	V11:Z017	UA	UR	8503	UA8503	UR8503
V11:Z018	V11:Z018	UA	UR	8504	UA8504	UR8504
V11:Z019	V11:Z019	UA	UR	8505	UA8505	UR8505
V11:Z020	V11:Z020	UA	UR	8506	UA8506	UR8506
V11:Z021	V11:Z021	UA	UR	8507	UA8507	UR8507
V11:Z022	V11:Z022	UA	UR	8508	UA8508	UR8508
V11:Z023	V11:Z023	UA	UR	8509	UA8509	UR8509
V11:Z024	V11:Z024	UA	UR	8510	UA8510	UR8510
V11:Z025	V11:Z025	UA	UR	8511	UA8511	UR8511
V11:Z026	V11:Z026	UA	UR	8512	UA8512	UR8512
V11:Z027	V11:Z027	UA	UR	8513	UA8513	UR8513
V11:Z028	V11:Z028	UA	UR	8514	UA8514	UR8514
V11:Z029	V11:Z029	UA	UR	8515	UA8515	UR8515
V11:Z030	V11:Z030	UA	UR	8516	UA8516	UR8516
V11:Z031	V11:Z031	UA	UR	8517	UA8517	UR8517
V11:Z032	V11:Z032	UA	UR	8518	UA8518	UR8518
V12:Z001	V12:Z001	UA	UR	8519	UA8519	UR8519
V12:Z002	V12:Z002	UA	UR	8520	UA8520	UR8520
V12:Z003	V12:Z003	UA	UR	8521	UA8521	UR8521
V12:Z004	V12:Z004	UA	UR	8522	UA8522	UR8522
V12:Z005	V12:Z005	UA	UR	8523	UA8523	UR8523
V12:Z006	V12:Z006	UA	UR	8524	UA8524	UR8524
V12:Z007	V12:Z007	UA	UR	8525	UA8525	UR8525
V12:Z008	V12:Z008	UA	UR	8526	UA8526	UR8526
V12:Z009	V12:Z009	UA	UR	8527	UA8527	UR8527
V12:Z010	V12:Z010	UA	UR	8528	UA8528	UR8528
V12:Z011	V12:Z011	UA	UR	8529	UA8529	UR8529
V12:Z012	V12:Z012	UA	UR	8530	UA8530	UR8530
V12:Z013	V12:Z013	UA	UR	8531	UA8531	UR8531
V12:Z014	V12:Z014	UA	UR	8532	UA8532	UR8532
V12:Z015	V12:Z015	UA	UR	8533	UA8533	UR8533
V12:Z016	V12:Z016	UA	UR	8534	UA8534	UR8534
V12:Z017	V12:Z017	UA	UR	8535	UA8535	UR8535
V12:Z018	V12:Z018	UA	UR	8536	UA8536	UR8536
V12:Z019	V12:Z019	UA	UR	8537	UA8537	UR8537
V12:Z020	V12:Z020	UA	UR	8538	UA8538	UR8538
V12:Z021	V12:Z021	UA	UR	8539	UA8539	UR8539
V12:Z022	V12:Z022	UA	UR	8540	UA8540	UR8540
V12:Z023	V12:Z023	UA	UR	8541	UA8541	UR8541
V12:Z024	V12:Z024	UA	UR	8542	UA8542	UR8542
V12:Z025	V12:Z025	UA	UR	8543	UA8543	UR8543
V12:Z026	V12:Z026	UA	UR	8544	UA8544	UR8544
V12:Z027	V12:Z027	UA	UR	8545	UA8545	UR8545
V12:Z028	V12:Z028	UA	UR	8546	UA8546	UR8546
V12:Z029	V12:Z029	UA	UR	8547	UA8547	UR8547
V12:Z030	V12:Z030	UA	UR	8548	UA8548	UR8548
V12:Z031	V12:Z031	UA	UR	8549	UA8549	UR8549
V12:Z032	V12:Z032	UA	UR	8550	UA8550	UR8550
V13:Z001	V13:Z001	UA	UR	8551	UA8551	UR8551
V13:Z002	V13:Z002	UA	UR	8552	UA8552	UR8552
V13:Z003	V13:Z003	UA	UR	8553	UA8553	UR8553
V13:Z004	V13:Z004	UA	UR	8554	UA8554	UR8554
V13:Z005	V13:Z005	UA	UR	8555	UA8555	UR8555
V13:Z006	V13:Z006	UA	UR	8556	UA8556	UR8556
V13:Z007	V13:Z007	UA	UR	8557	UA8557	UR8557
V13:Z008	V13:Z008	UA	UR	8558	UA8558	UR8558
V13:Z009	V13:Z009	UA	UR	8559	UA8559	UR8559
V13:Z010	V13:Z010	UA	UR	8560	UA8560	UR8560
V13:Z011	V13:Z011	UA	UR	8561	UA8561	UR8561
V13:Z012	V13:Z012	UA	UR	8562	UA8562	UR8562
V13:Z013	V13:Z013	UA	UR	8563	UA8563	UR8563
V13:Z014	V13:Z014	UA	UR	8564	UA8564	UR8564
V13:Z015	V13:Z015	UA	UR	8565	UA8565	UR8565
V13:Z016	V13:Z016	UA	UR	8566	UA8566	UR8566

Integriti SIA DECIMAL Map. V21

V13:Z017	V13:Z017	UA	UR	8567	UA8567	UR8567
V13:Z018	V13:Z018	UA	UR	8568	UA8568	UR8568
V13:Z019	V13:Z019	UA	UR	8569	UA8569	UR8569
V13:Z020	V13:Z020	UA	UR	8570	UA8570	UR8570
V13:Z021	V13:Z021	UA	UR	8571	UA8571	UR8571
V13:Z022	V13:Z022	UA	UR	8572	UA8572	UR8572
V13:Z023	V13:Z023	UA	UR	8573	UA8573	UR8573
V13:Z024	V13:Z024	UA	UR	8574	UA8574	UR8574
V13:Z025	V13:Z025	UA	UR	8575	UA8575	UR8575
V13:Z026	V13:Z026	UA	UR	8576	UA8576	UR8576
V13:Z027	V13:Z027	UA	UR	8577	UA8577	UR8577
V13:Z028	V13:Z028	UA	UR	8578	UA8578	UR8578
V13:Z029	V13:Z029	UA	UR	8579	UA8579	UR8579
V13:Z030	V13:Z030	UA	UR	8580	UA8580	UR8580
V13:Z031	V13:Z031	UA	UR	8581	UA8581	UR8581
V13:Z032	V13:Z032	UA	UR	8582	UA8582	UR8582
V14:Z001	V14:Z001	UA	UR	8583	UA8583	UR8583
V14:Z002	V14:Z002	UA	UR	8584	UA8584	UR8584
V14:Z003	V14:Z003	UA	UR	8585	UA8585	UR8585
V14:Z004	V14:Z004	UA	UR	8586	UA8586	UR8586
V14:Z005	V14:Z005	UA	UR	8587	UA8587	UR8587
V14:Z006	V14:Z006	UA	UR	8588	UA8588	UR8588
V14:Z007	V14:Z007	UA	UR	8589	UA8589	UR8589
V14:Z008	V14:Z008	UA	UR	8590	UA8590	UR8590
V14:Z009	V14:Z009	UA	UR	8591	UA8591	UR8591
V14:Z010	V14:Z010	UA	UR	8592	UA8592	UR8592
V14:Z011	V14:Z011	UA	UR	8593	UA8593	UR8593
V14:Z012	V14:Z012	UA	UR	8594	UA8594	UR8594
V14:Z013	V14:Z013	UA	UR	8595	UA8595	UR8595
V14:Z014	V14:Z014	UA	UR	8596	UA8596	UR8596
V14:Z015	V14:Z015	UA	UR	8597	UA8597	UR8597
V14:Z016	V14:Z016	UA	UR	8598	UA8598	UR8598
V14:Z017	V14:Z017	UA	UR	8599	UA8599	UR8599
V14:Z018	V14:Z018	UA	UR	8600	UA8600	UR8600
V14:Z019	V14:Z019	UA	UR	8601	UA8601	UR8601
V14:Z020	V14:Z020	UA	UR	8602	UA8602	UR8602
V14:Z021	V14:Z021	UA	UR	8603	UA8603	UR8603
V14:Z022	V14:Z022	UA	UR	8604	UA8604	UR8604
V14:Z023	V14:Z023	UA	UR	8605	UA8605	UR8605
V14:Z024	V14:Z024	UA	UR	8606	UA8606	UR8606
V14:Z025	V14:Z025	UA	UR	8607	UA8607	UR8607
V14:Z026	V14:Z026	UA	UR	8608	UA8608	UR8608
V14:Z027	V14:Z027	UA	UR	8609	UA8609	UR8609
V14:Z028	V14:Z028	UA	UR	8610	UA8610	UR8610
V14:Z029	V14:Z029	UA	UR	8611	UA8611	UR8611
V14:Z030	V14:Z030	UA	UR	8612	UA8612	UR8612
V14:Z031	V14:Z031	UA	UR	8613	UA8613	UR8613
V14:Z032	V14:Z032	UA	UR	8614	UA8614	UR8614
V15:Z001	V15:Z001	UA	UR	8615	UA8615	UR8615
V15:Z002	V15:Z002	UA	UR	8616	UA8616	UR8616
V15:Z003	V15:Z003	UA	UR	8617	UA8617	UR8617
V15:Z004	V15:Z004	UA	UR	8618	UA8618	UR8618
V15:Z005	V15:Z005	UA	UR	8619	UA8619	UR8619
V15:Z006	V15:Z006	UA	UR	8620	UA8620	UR8620
V15:Z007	V15:Z007	UA	UR	8621	UA8621	UR8621
V15:Z008	V15:Z008	UA	UR	8622	UA8622	UR8622
V15:Z009	V15:Z009	UA	UR	8623	UA8623	UR8623
V15:Z010	V15:Z010	UA	UR	8624	UA8624	UR8624
V15:Z011	V15:Z011	UA	UR	8625	UA8625	UR8625
V15:Z012	V15:Z012	UA	UR	8626	UA8626	UR8626
V15:Z013	V15:Z013	UA	UR	8627	UA8627	UR8627
V15:Z014	V15:Z014	UA	UR	8628	UA8628	UR8628
V15:Z015	V15:Z015	UA	UR	8629	UA8629	UR8629
V15:Z016	V15:Z016	UA	UR	8630	UA8630	UR8630
V15:Z017	V15:Z017	UA	UR	8631	UA8631	UR8631
V15:Z018	V15:Z018	UA	UR	8632	UA8632	UR8632
V15:Z019	V15:Z019	UA	UR	8633	UA8633	UR8633
V15:Z020	V15:Z020	UA	UR	8634	UA8634	UR8634
V15:Z021	V15:Z021	UA	UR	8635	UA8635	UR8635
V15:Z022	V15:Z022	UA	UR	8636	UA8636	UR8636

Integriti SIA DECIMAL Map. V21

V15:Z023	V15:Z023	UA	UR	8637	UA8637	UR8637
V15:Z024	V15:Z024	UA	UR	8638	UA8638	UR8638
V15:Z025	V15:Z025	UA	UR	8639	UA8639	UR8639
V15:Z026	V15:Z026	UA	UR	8640	UA8640	UR8640
V15:Z027	V15:Z027	UA	UR	8641	UA8641	UR8641
V15:Z028	V15:Z028	UA	UR	8642	UA8642	UR8642
V15:Z029	V15:Z029	UA	UR	8643	UA8643	UR8643
V15:Z030	V15:Z030	UA	UR	8644	UA8644	UR8644
V15:Z031	V15:Z031	UA	UR	8645	UA8645	UR8645
V15:Z032	V15:Z032	UA	UR	8646	UA8646	UR8646
V16:Z001	V16:Z001	UA	UR	8647	UA8647	UR8647
V16:Z002	V16:Z002	UA	UR	8648	UA8648	UR8648
V16:Z003	V16:Z003	UA	UR	8649	UA8649	UR8649
V16:Z004	V16:Z004	UA	UR	8650	UA8650	UR8650
V16:Z005	V16:Z005	UA	UR	8651	UA8651	UR8651
V16:Z006	V16:Z006	UA	UR	8652	UA8652	UR8652
V16:Z007	V16:Z007	UA	UR	8653	UA8653	UR8653
V16:Z008	V16:Z008	UA	UR	8654	UA8654	UR8654
V16:Z009	V16:Z009	UA	UR	8655	UA8655	UR8655
V16:Z010	V16:Z010	UA	UR	8656	UA8656	UR8656
V16:Z011	V16:Z011	UA	UR	8657	UA8657	UR8657
V16:Z012	V16:Z012	UA	UR	8658	UA8658	UR8658
V16:Z013	V16:Z013	UA	UR	8659	UA8659	UR8659
V16:Z014	V16:Z014	UA	UR	8660	UA8660	UR8660
V16:Z015	V16:Z015	UA	UR	8661	UA8661	UR8661
V16:Z016	V16:Z016	UA	UR	8662	UA8662	UR8662
V16:Z017	V16:Z017	UA	UR	8663	UA8663	UR8663
V16:Z018	V16:Z018	UA	UR	8664	UA8664	UR8664
V16:Z019	V16:Z019	UA	UR	8665	UA8665	UR8665
V16:Z020	V16:Z020	UA	UR	8666	UA8666	UR8666
V16:Z021	V16:Z021	UA	UR	8667	UA8667	UR8667
V16:Z022	V16:Z022	UA	UR	8668	UA8668	UR8668
V16:Z023	V16:Z023	UA	UR	8669	UA8669	UR8669
V16:Z024	V16:Z024	UA	UR	8670	UA8670	UR8670
V16:Z025	V16:Z025	UA	UR	8671	UA8671	UR8671
V16:Z026	V16:Z026	UA	UR	8672	UA8672	UR8672
V16:Z027	V16:Z027	UA	UR	8673	UA8673	UR8673
V16:Z028	V16:Z028	UA	UR	8674	UA8674	UR8674
V16:Z029	V16:Z029	UA	UR	8675	UA8675	UR8675
V16:Z030	V16:Z030	UA	UR	8676	UA8676	UR8676
V16:Z031	V16:Z031	UA	UR	8677	UA8677	UR8677
V16:Z032	V16:Z032	UA	UR	8678	UA8678	UR8678
V17:Z001	V17:Z001	UA	UR	8679	UA8679	UR8679
V17:Z002	V17:Z002	UA	UR	8680	UA8680	UR8680
V17:Z003	V17:Z003	UA	UR	8681	UA8681	UR8681
V17:Z004	V17:Z004	UA	UR	8682	UA8682	UR8682
V17:Z005	V17:Z005	UA	UR	8683	UA8683	UR8683
V17:Z006	V17:Z006	UA	UR	8684	UA8684	UR8684
V17:Z007	V17:Z007	UA	UR	8685	UA8685	UR8685
V17:Z008	V17:Z008	UA	UR	8686	UA8686	UR8686
V17:Z009	V17:Z009	UA	UR	8687	UA8687	UR8687
V17:Z010	V17:Z010	UA	UR	8688	UA8688	UR8688
V17:Z011	V17:Z011	UA	UR	8689	UA8689	UR8689
V17:Z012	V17:Z012	UA	UR	8690	UA8690	UR8690
V17:Z013	V17:Z013	UA	UR	8691	UA8691	UR8691
V17:Z014	V17:Z014	UA	UR	8692	UA8692	UR8692
V17:Z015	V17:Z015	UA	UR	8693	UA8693	UR8693
V17:Z016	V17:Z016	UA	UR	8694	UA8694	UR8694
V17:Z017	V17:Z017	UA	UR	8695	UA8695	UR8695
V17:Z018	V17:Z018	UA	UR	8696	UA8696	UR8696
V17:Z019	V17:Z019	UA	UR	8697	UA8697	UR8697
V17:Z020	V17:Z020	UA	UR	8698	UA8698	UR8698
V17:Z021	V17:Z021	UA	UR	8699	UA8699	UR8699
V17:Z022	V17:Z022	UA	UR	8700	UA8700	UR8700
V17:Z023	V17:Z023	UA	UR	8701	UA8701	UR8701
V17:Z024	V17:Z024	UA	UR	8702	UA8702	UR8702
V17:Z025	V17:Z025	UA	UR	8703	UA8703	UR8703
V17:Z026	V17:Z026	UA	UR	8704	UA8704	UR8704
V17:Z027	V17:Z027	UA	UR	8705	UA8705	UR8705
V17:Z028	V17:Z028	UA	UR	8706	UA8706	UR8706

Integriti SIA DECIMAL Map. V21

V17:Z029	V17:Z029	UA	UR	8707	UA8707	UR8707
V17:Z030	V17:Z030	UA	UR	8708	UA8708	UR8708
V17:Z031	V17:Z031	UA	UR	8709	UA8709	UR8709
V17:Z032	V17:Z032	UA	UR	8710	UA8710	UR8710
V18:Z001	V18:Z001	UA	UR	8711	UA8711	UR8711
V18:Z002	V18:Z002	UA	UR	8712	UA8712	UR8712
V18:Z003	V18:Z003	UA	UR	8713	UA8713	UR8713
V18:Z004	V18:Z004	UA	UR	8714	UA8714	UR8714
V18:Z005	V18:Z005	UA	UR	8715	UA8715	UR8715
V18:Z006	V18:Z006	UA	UR	8716	UA8716	UR8716
V18:Z007	V18:Z007	UA	UR	8717	UA8717	UR8717
V18:Z008	V18:Z008	UA	UR	8718	UA8718	UR8718
V18:Z009	V18:Z009	UA	UR	8719	UA8719	UR8719
V18:Z010	V18:Z010	UA	UR	8720	UA8720	UR8720
V18:Z011	V18:Z011	UA	UR	8721	UA8721	UR8721
V18:Z012	V18:Z012	UA	UR	8722	UA8722	UR8722
V18:Z013	V18:Z013	UA	UR	8723	UA8723	UR8723
V18:Z014	V18:Z014	UA	UR	8724	UA8724	UR8724
V18:Z015	V18:Z015	UA	UR	8725	UA8725	UR8725
V18:Z016	V18:Z016	UA	UR	8726	UA8726	UR8726
V18:Z017	V18:Z017	UA	UR	8727	UA8727	UR8727
V18:Z018	V18:Z018	UA	UR	8728	UA8728	UR8728
V18:Z019	V18:Z019	UA	UR	8729	UA8729	UR8729
V18:Z020	V18:Z020	UA	UR	8730	UA8730	UR8730
V18:Z021	V18:Z021	UA	UR	8731	UA8731	UR8731
V18:Z022	V18:Z022	UA	UR	8732	UA8732	UR8732
V18:Z023	V18:Z023	UA	UR	8733	UA8733	UR8733
V18:Z024	V18:Z024	UA	UR	8734	UA8734	UR8734
V18:Z025	V18:Z025	UA	UR	8735	UA8735	UR8735
V18:Z026	V18:Z026	UA	UR	8736	UA8736	UR8736
V18:Z027	V18:Z027	UA	UR	8737	UA8737	UR8737
V18:Z028	V18:Z028	UA	UR	8738	UA8738	UR8738
V18:Z029	V18:Z029	UA	UR	8739	UA8739	UR8739
V18:Z030	V18:Z030	UA	UR	8740	UA8740	UR8740
V18:Z031	V18:Z031	UA	UR	8741	UA8741	UR8741
V18:Z032	V18:Z032	UA	UR	8742	UA8742	UR8742
V19:Z001	V19:Z001	UA	UR	8743	UA8743	UR8743
V19:Z002	V19:Z002	UA	UR	8744	UA8744	UR8744
V19:Z003	V19:Z003	UA	UR	8745	UA8745	UR8745
V19:Z004	V19:Z004	UA	UR	8746	UA8746	UR8746
V19:Z005	V19:Z005	UA	UR	8747	UA8747	UR8747
V19:Z006	V19:Z006	UA	UR	8748	UA8748	UR8748
V19:Z007	V19:Z007	UA	UR	8749	UA8749	UR8749
V19:Z008	V19:Z008	UA	UR	8750	UA8750	UR8750
V19:Z009	V19:Z009	UA	UR	8751	UA8751	UR8751
V19:Z010	V19:Z010	UA	UR	8752	UA8752	UR8752
V19:Z011	V19:Z011	UA	UR	8753	UA8753	UR8753
V19:Z012	V19:Z012	UA	UR	8754	UA8754	UR8754
V19:Z013	V19:Z013	UA	UR	8755	UA8755	UR8755
V19:Z014	V19:Z014	UA	UR	8756	UA8756	UR8756
V19:Z015	V19:Z015	UA	UR	8757	UA8757	UR8757
V19:Z016	V19:Z016	UA	UR	8758	UA8758	UR8758
V19:Z017	V19:Z017	UA	UR	8759	UA8759	UR8759
V19:Z018	V19:Z018	UA	UR	8760	UA8760	UR8760
V19:Z019	V19:Z019	UA	UR	8761	UA8761	UR8761
V19:Z020	V19:Z020	UA	UR	8762	UA8762	UR8762
V19:Z021	V19:Z021	UA	UR	8763	UA8763	UR8763
V19:Z022	V19:Z022	UA	UR	8764	UA8764	UR8764
V19:Z023	V19:Z023	UA	UR	8765	UA8765	UR8765
V19:Z024	V19:Z024	UA	UR	8766	UA8766	UR8766
V19:Z025	V19:Z025	UA	UR	8767	UA8767	UR8767
V19:Z026	V19:Z026	UA	UR	8768	UA8768	UR8768
V19:Z027	V19:Z027	UA	UR	8769	UA8769	UR8769
V19:Z028	V19:Z028	UA	UR	8770	UA8770	UR8770
V19:Z029	V19:Z029	UA	UR	8771	UA8771	UR8771
V19:Z030	V19:Z030	UA	UR	8772	UA8772	UR8772
V19:Z031	V19:Z031	UA	UR	8773	UA8773	UR8773
V19:Z032	V19:Z032	UA	UR	8774	UA8774	UR8774
V20:Z001	V20:Z001	UA	UR	8775	UA8775	UR8775
V20:Z002	V20:Z002	UA	UR	8776	UA8776	UR8776

Integriti SIA DECIMAL Map. V21

V20:Z003	V20:Z003	UA	UR	8777	UA8777	UR8777
V20:Z004	V20:Z004	UA	UR	8778	UA8778	UR8778
V20:Z005	V20:Z005	UA	UR	8779	UA8779	UR8779
V20:Z006	V20:Z006	UA	UR	8780	UA8780	UR8780
V20:Z007	V20:Z007	UA	UR	8781	UA8781	UR8781
V20:Z008	V20:Z008	UA	UR	8782	UA8782	UR8782
V20:Z009	V20:Z009	UA	UR	8783	UA8783	UR8783
V20:Z010	V20:Z010	UA	UR	8784	UA8784	UR8784
V20:Z011	V20:Z011	UA	UR	8785	UA8785	UR8785
V20:Z012	V20:Z012	UA	UR	8786	UA8786	UR8786
V20:Z013	V20:Z013	UA	UR	8787	UA8787	UR8787
V20:Z014	V20:Z014	UA	UR	8788	UA8788	UR8788
V20:Z015	V20:Z015	UA	UR	8789	UA8789	UR8789
V20:Z016	V20:Z016	UA	UR	8790	UA8790	UR8790
V20:Z017	V20:Z017	UA	UR	8791	UA8791	UR8791
V20:Z018	V20:Z018	UA	UR	8792	UA8792	UR8792
V20:Z019	V20:Z019	UA	UR	8793	UA8793	UR8793
V20:Z020	V20:Z020	UA	UR	8794	UA8794	UR8794
V20:Z021	V20:Z021	UA	UR	8795	UA8795	UR8795
V20:Z022	V20:Z022	UA	UR	8796	UA8796	UR8796
V20:Z023	V20:Z023	UA	UR	8797	UA8797	UR8797
V20:Z024	V20:Z024	UA	UR	8798	UA8798	UR8798
V20:Z025	V20:Z025	UA	UR	8799	UA8799	UR8799
V20:Z026	V20:Z026	UA	UR	8800	UA8800	UR8800
V20:Z027	V20:Z027	UA	UR	8801	UA8801	UR8801
V20:Z028	V20:Z028	UA	UR	8802	UA8802	UR8802
V20:Z029	V20:Z029	UA	UR	8803	UA8803	UR8803
V20:Z030	V20:Z030	UA	UR	8804	UA8804	UR8804
V20:Z031	V20:Z031	UA	UR	8805	UA8805	UR8805
V20:Z032	V20:Z032	UA	UR	8806	UA8806	UR8806
V21:Z001	V21:Z001	UA	UR	8807	UA8807	UR8807
V21:Z002	V21:Z002	UA	UR	8808	UA8808	UR8808
V21:Z003	V21:Z003	UA	UR	8809	UA8809	UR8809
V21:Z004	V21:Z004	UA	UR	8810	UA8810	UR8810
V21:Z005	V21:Z005	UA	UR	8811	UA8811	UR8811
V21:Z006	V21:Z006	UA	UR	8812	UA8812	UR8812
V21:Z007	V21:Z007	UA	UR	8813	UA8813	UR8813
V21:Z008	V21:Z008	UA	UR	8814	UA8814	UR8814
V21:Z009	V21:Z009	UA	UR	8815	UA8815	UR8815
V21:Z010	V21:Z010	UA	UR	8816	UA8816	UR8816
V21:Z011	V21:Z011	UA	UR	8817	UA8817	UR8817
V21:Z012	V21:Z012	UA	UR	8818	UA8818	UR8818
V21:Z013	V21:Z013	UA	UR	8819	UA8819	UR8819
V21:Z014	V21:Z014	UA	UR	8820	UA8820	UR8820
V21:Z015	V21:Z015	UA	UR	8821	UA8821	UR8821
V21:Z016	V21:Z016	UA	UR	8822	UA8822	UR8822
V21:Z017	V21:Z017	UA	UR	8823	UA8823	UR8823
V21:Z018	V21:Z018	UA	UR	8824	UA8824	UR8824
V21:Z019	V21:Z019	UA	UR	8825	UA8825	UR8825
V21:Z020	V21:Z020	UA	UR	8826	UA8826	UR8826
V21:Z021	V21:Z021	UA	UR	8827	UA8827	UR8827
V21:Z022	V21:Z022	UA	UR	8828	UA8828	UR8828
V21:Z023	V21:Z023	UA	UR	8829	UA8829	UR8829
V21:Z024	V21:Z024	UA	UR	8830	UA8830	UR8830
V21:Z025	V21:Z025	UA	UR	8831	UA8831	UR8831
V21:Z026	V21:Z026	UA	UR	8832	UA8832	UR8832
V21:Z027	V21:Z027	UA	UR	8833	UA8833	UR8833
V21:Z028	V21:Z028	UA	UR	8834	UA8834	UR8834
V21:Z029	V21:Z029	UA	UR	8835	UA8835	UR8835
V21:Z030	V21:Z030	UA	UR	8836	UA8836	UR8836
V21:Z031	V21:Z031	UA	UR	8837	UA8837	UR8837
V21:Z032	V21:Z032	UA	UR	8838	UA8838	UR8838
V22:Z001	V22:Z001	UA	UR	8839	UA8839	UR8839
V22:Z002	V22:Z002	UA	UR	8840	UA8840	UR8840
V22:Z003	V22:Z003	UA	UR	8841	UA8841	UR8841
V22:Z004	V22:Z004	UA	UR	8842	UA8842	UR8842
V22:Z005	V22:Z005	UA	UR	8843	UA8843	UR8843
V22:Z006	V22:Z006	UA	UR	8844	UA8844	UR8844
V22:Z007	V22:Z007	UA	UR	8845	UA8845	UR8845
V22:Z008	V22:Z008	UA	UR	8846	UA8846	UR8846

Integriti SIA DECIMAL Map. V21

V22:Z009	V22:Z009	UA	UR	8847	UA8847	UR8847
V22:Z010	V22:Z010	UA	UR	8848	UA8848	UR8848
V22:Z011	V22:Z011	UA	UR	8849	UA8849	UR8849
V22:Z012	V22:Z012	UA	UR	8850	UA8850	UR8850
V22:Z013	V22:Z013	UA	UR	8851	UA8851	UR8851
V22:Z014	V22:Z014	UA	UR	8852	UA8852	UR8852
V22:Z015	V22:Z015	UA	UR	8853	UA8853	UR8853
V22:Z016	V22:Z016	UA	UR	8854	UA8854	UR8854
V22:Z017	V22:Z017	UA	UR	8855	UA8855	UR8855
V22:Z018	V22:Z018	UA	UR	8856	UA8856	UR8856
V22:Z019	V22:Z019	UA	UR	8857	UA8857	UR8857
V22:Z020	V22:Z020	UA	UR	8858	UA8858	UR8858
V22:Z021	V22:Z021	UA	UR	8859	UA8859	UR8859
V22:Z022	V22:Z022	UA	UR	8860	UA8860	UR8860
V22:Z023	V22:Z023	UA	UR	8861	UA8861	UR8861
V22:Z024	V22:Z024	UA	UR	8862	UA8862	UR8862
V22:Z025	V22:Z025	UA	UR	8863	UA8863	UR8863
V22:Z026	V22:Z026	UA	UR	8864	UA8864	UR8864
V22:Z027	V22:Z027	UA	UR	8865	UA8865	UR8865
V22:Z028	V22:Z028	UA	UR	8866	UA8866	UR8866
V22:Z029	V22:Z029	UA	UR	8867	UA8867	UR8867
V22:Z030	V22:Z030	UA	UR	8868	UA8868	UR8868
V22:Z031	V22:Z031	UA	UR	8869	UA8869	UR8869
V22:Z032	V22:Z032	UA	UR	8870	UA8870	UR8870
V23:Z001	V23:Z001	UA	UR	8871	UA8871	UR8871
V23:Z002	V23:Z002	UA	UR	8872	UA8872	UR8872
V23:Z003	V23:Z003	UA	UR	8873	UA8873	UR8873
V23:Z004	V23:Z004	UA	UR	8874	UA8874	UR8874
V23:Z005	V23:Z005	UA	UR	8875	UA8875	UR8875
V23:Z006	V23:Z006	UA	UR	8876	UA8876	UR8876
V23:Z007	V23:Z007	UA	UR	8877	UA8877	UR8877
V23:Z008	V23:Z008	UA	UR	8878	UA8878	UR8878
V23:Z009	V23:Z009	UA	UR	8879	UA8879	UR8879
V23:Z010	V23:Z010	UA	UR	8880	UA8880	UR8880
V23:Z011	V23:Z011	UA	UR	8881	UA8881	UR8881
V23:Z012	V23:Z012	UA	UR	8882	UA8882	UR8882
V23:Z013	V23:Z013	UA	UR	8883	UA8883	UR8883
V23:Z014	V23:Z014	UA	UR	8884	UA8884	UR8884
V23:Z015	V23:Z015	UA	UR	8885	UA8885	UR8885
V23:Z016	V23:Z016	UA	UR	8886	UA8886	UR8886
V23:Z017	V23:Z017	UA	UR	8887	UA8887	UR8887
V23:Z018	V23:Z018	UA	UR	8888	UA8888	UR8888
V23:Z019	V23:Z019	UA	UR	8889	UA8889	UR8889
V23:Z020	V23:Z020	UA	UR	8890	UA8890	UR8890
V23:Z021	V23:Z021	UA	UR	8891	UA8891	UR8891
V23:Z022	V23:Z022	UA	UR	8892	UA8892	UR8892
V23:Z023	V23:Z023	UA	UR	8893	UA8893	UR8893
V23:Z024	V23:Z024	UA	UR	8894	UA8894	UR8894
V23:Z025	V23:Z025	UA	UR	8895	UA8895	UR8895
V23:Z026	V23:Z026	UA	UR	8896	UA8896	UR8896
V23:Z027	V23:Z027	UA	UR	8897	UA8897	UR8897
V23:Z028	V23:Z028	UA	UR	8898	UA8898	UR8898
V23:Z029	V23:Z029	UA	UR	8899	UA8899	UR8899
V23:Z030	V23:Z030	UA	UR	8900	UA8900	UR8900
V23:Z031	V23:Z031	UA	UR	8901	UA8901	UR8901
V23:Z032	V23:Z032	UA	UR	8902	UA8902	UR8902
V24:Z001	V24:Z001	UA	UR	8903	UA8903	UR8903
V24:Z002	V24:Z002	UA	UR	8904	UA8904	UR8904
V24:Z003	V24:Z003	UA	UR	8905	UA8905	UR8905
V24:Z004	V24:Z004	UA	UR	8906	UA8906	UR8906
V24:Z005	V24:Z005	UA	UR	8907	UA8907	UR8907
V24:Z006	V24:Z006	UA	UR	8908	UA8908	UR8908
V24:Z007	V24:Z007	UA	UR	8909	UA8909	UR8909
V24:Z008	V24:Z008	UA	UR	8910	UA8910	UR8910
V24:Z009	V24:Z009	UA	UR	8911	UA8911	UR8911
V24:Z010	V24:Z010	UA	UR	8912	UA8912	UR8912
V24:Z011	V24:Z011	UA	UR	8913	UA8913	UR8913
V24:Z012	V24:Z012	UA	UR	8914	UA8914	UR8914
V24:Z013	V24:Z013	UA	UR	8915	UA8915	UR8915
V24:Z014	V24:Z014	UA	UR	8916	UA8916	UR8916

Integriti SIA DECIMAL Map. V21

V24:Z015	V24:Z015	UA	UR	8917	UA8917	UR8917
V24:Z016	V24:Z016	UA	UR	8918	UA8918	UR8918
V24:Z017	V24:Z017	UA	UR	8919	UA8919	UR8919
V24:Z018	V24:Z018	UA	UR	8920	UA8920	UR8920
V24:Z019	V24:Z019	UA	UR	8921	UA8921	UR8921
V24:Z020	V24:Z020	UA	UR	8922	UA8922	UR8922
V24:Z021	V24:Z021	UA	UR	8923	UA8923	UR8923
V24:Z022	V24:Z022	UA	UR	8924	UA8924	UR8924
V24:Z023	V24:Z023	UA	UR	8925	UA8925	UR8925
V24:Z024	V24:Z024	UA	UR	8926	UA8926	UR8926
V24:Z025	V24:Z025	UA	UR	8927	UA8927	UR8927
V24:Z026	V24:Z026	UA	UR	8928	UA8928	UR8928
V24:Z027	V24:Z027	UA	UR	8929	UA8929	UR8929
V24:Z028	V24:Z028	UA	UR	8930	UA8930	UR8930
V24:Z029	V24:Z029	UA	UR	8931	UA8931	UR8931
V24:Z030	V24:Z030	UA	UR	8932	UA8932	UR8932
V24:Z031	V24:Z031	UA	UR	8933	UA8933	UR8933
V24:Z032	V24:Z032	UA	UR	8934	UA8934	UR8934
V25:Z001	V25:Z001	UA	UR	8935	UA8935	UR8935
V25:Z002	V25:Z002	UA	UR	8936	UA8936	UR8936
V25:Z003	V25:Z003	UA	UR	8937	UA8937	UR8937
V25:Z004	V25:Z004	UA	UR	8938	UA8938	UR8938
V25:Z005	V25:Z005	UA	UR	8939	UA8939	UR8939
V25:Z006	V25:Z006	UA	UR	8940	UA8940	UR8940
V25:Z007	V25:Z007	UA	UR	8941	UA8941	UR8941
V25:Z008	V25:Z008	UA	UR	8942	UA8942	UR8942
V25:Z009	V25:Z009	UA	UR	8943	UA8943	UR8943
V25:Z010	V25:Z010	UA	UR	8944	UA8944	UR8944
V25:Z011	V25:Z011	UA	UR	8945	UA8945	UR8945
V25:Z012	V25:Z012	UA	UR	8946	UA8946	UR8946
V25:Z013	V25:Z013	UA	UR	8947	UA8947	UR8947
V25:Z014	V25:Z014	UA	UR	8948	UA8948	UR8948
V25:Z015	V25:Z015	UA	UR	8949	UA8949	UR8949
V25:Z016	V25:Z016	UA	UR	8950	UA8950	UR8950
V25:Z017	V25:Z017	UA	UR	8951	UA8951	UR8951
V25:Z018	V25:Z018	UA	UR	8952	UA8952	UR8952
V25:Z019	V25:Z019	UA	UR	8953	UA8953	UR8953
V25:Z020	V25:Z020	UA	UR	8954	UA8954	UR8954
V25:Z021	V25:Z021	UA	UR	8955	UA8955	UR8955
V25:Z022	V25:Z022	UA	UR	8956	UA8956	UR8956
V25:Z023	V25:Z023	UA	UR	8957	UA8957	UR8957
V25:Z024	V25:Z024	UA	UR	8958	UA8958	UR8958
V25:Z025	V25:Z025	UA	UR	8959	UA8959	UR8959
V25:Z026	V25:Z026	UA	UR	8960	UA8960	UR8960
V25:Z027	V25:Z027	UA	UR	8961	UA8961	UR8961
V25:Z028	V25:Z028	UA	UR	8962	UA8962	UR8962
V25:Z029	V25:Z029	UA	UR	8963	UA8963	UR8963
V25:Z030	V25:Z030	UA	UR	8964	UA8964	UR8964
V25:Z031	V25:Z031	UA	UR	8965	UA8965	UR8965
V25:Z032	V25:Z032	UA	UR	8966	UA8966	UR8966
V26:Z001	V26:Z001	UA	UR	8967	UA8967	UR8967
V26:Z002	V26:Z002	UA	UR	8968	UA8968	UR8968
V26:Z003	V26:Z003	UA	UR	8969	UA8969	UR8969
V26:Z004	V26:Z004	UA	UR	8970	UA8970	UR8970
V26:Z005	V26:Z005	UA	UR	8971	UA8971	UR8971
V26:Z006	V26:Z006	UA	UR	8972	UA8972	UR8972
V26:Z007	V26:Z007	UA	UR	8973	UA8973	UR8973
V26:Z008	V26:Z008	UA	UR	8974	UA8974	UR8974
V26:Z009	V26:Z009	UA	UR	8975	UA8975	UR8975
V26:Z010	V26:Z010	UA	UR	8976	UA8976	UR8976
V26:Z011	V26:Z011	UA	UR	8977	UA8977	UR8977
V26:Z012	V26:Z012	UA	UR	8978	UA8978	UR8978
V26:Z013	V26:Z013	UA	UR	8979	UA8979	UR8979
V26:Z014	V26:Z014	UA	UR	8980	UA8980	UR8980
V26:Z015	V26:Z015	UA	UR	8981	UA8981	UR8981
V26:Z016	V26:Z016	UA	UR	8982	UA8982	UR8982
V26:Z017	V26:Z017	UA	UR	8983	UA8983	UR8983
V26:Z018	V26:Z018	UA	UR	8984	UA8984	UR8984
V26:Z019	V26:Z019	UA	UR	8985	UA8985	UR8985
V26:Z020	V26:Z020	UA	UR	8986	UA8986	UR8986

Integriti SIA DECIMAL Map. V21

V26:Z021	V26:Z021	UA	UR	8987	UA8987	UR8987
V26:Z022	V26:Z022	UA	UR	8988	UA8988	UR8988
V26:Z023	V26:Z023	UA	UR	8989	UA8989	UR8989
V26:Z024	V26:Z024	UA	UR	8990	UA8990	UR8990
V26:Z025	V26:Z025	UA	UR	8991	UA8991	UR8991
V26:Z026	V26:Z026	UA	UR	8992	UA8992	UR8992
V26:Z027	V26:Z027	UA	UR	8993	UA8993	UR8993
V26:Z028	V26:Z028	UA	UR	8994	UA8994	UR8994
V26:Z029	V26:Z029	UA	UR	8995	UA8995	UR8995
V26:Z030	V26:Z030	UA	UR	8996	UA8996	UR8996
V26:Z031	V26:Z031	UA	UR	8997	UA8997	UR8997
V26:Z032	V26:Z032	UA	UR	8998	UA8998	UR8998
V27:Z001	V27:Z001	UA	UR	8999	UA8999	UR8999
V27:Z002	V27:Z002	UA	UR	9000	UA9000	UR9000
V27:Z003	V27:Z003	UA	UR	9001	UA9001	UR9001
V27:Z004	V27:Z004	UA	UR	9002	UA9002	UR9002
V27:Z005	V27:Z005	UA	UR	9003	UA9003	UR9003
V27:Z006	V27:Z006	UA	UR	9004	UA9004	UR9004
V27:Z007	V27:Z007	UA	UR	9005	UA9005	UR9005
V27:Z008	V27:Z008	UA	UR	9006	UA9006	UR9006
V27:Z009	V27:Z009	UA	UR	9007	UA9007	UR9007
V27:Z010	V27:Z010	UA	UR	9008	UA9008	UR9008
V27:Z011	V27:Z011	UA	UR	9009	UA9009	UR9009
V27:Z012	V27:Z012	UA	UR	9010	UA9010	UR9010
V27:Z013	V27:Z013	UA	UR	9011	UA9011	UR9011
V27:Z014	V27:Z014	UA	UR	9012	UA9012	UR9012
V27:Z015	V27:Z015	UA	UR	9013	UA9013	UR9013
V27:Z016	V27:Z016	UA	UR	9014	UA9014	UR9014
V27:Z017	V27:Z017	UA	UR	9015	UA9015	UR9015
V27:Z018	V27:Z018	UA	UR	9016	UA9016	UR9016
V27:Z019	V27:Z019	UA	UR	9017	UA9017	UR9017
V27:Z020	V27:Z020	UA	UR	9018	UA9018	UR9018
V27:Z021	V27:Z021	UA	UR	9019	UA9019	UR9019
V27:Z022	V27:Z022	UA	UR	9020	UA9020	UR9020
V27:Z023	V27:Z023	UA	UR	9021	UA9021	UR9021
V27:Z024	V27:Z024	UA	UR	9022	UA9022	UR9022
V27:Z025	V27:Z025	UA	UR	9023	UA9023	UR9023
V27:Z026	V27:Z026	UA	UR	9024	UA9024	UR9024
V27:Z027	V27:Z027	UA	UR	9025	UA9025	UR9025
V27:Z028	V27:Z028	UA	UR	9026	UA9026	UR9026
V27:Z029	V27:Z029	UA	UR	9027	UA9027	UR9027
V27:Z030	V27:Z030	UA	UR	9028	UA9028	UR9028
V27:Z031	V27:Z031	UA	UR	9029	UA9029	UR9029
V27:Z032	V27:Z032	UA	UR	9030	UA9030	UR9030
V28:Z001	V28:Z001	UA	UR	9031	UA9031	UR9031
V28:Z002	V28:Z002	UA	UR	9032	UA9032	UR9032
V28:Z003	V28:Z003	UA	UR	9033	UA9033	UR9033
V28:Z004	V28:Z004	UA	UR	9034	UA9034	UR9034
V28:Z005	V28:Z005	UA	UR	9035	UA9035	UR9035
V28:Z006	V28:Z006	UA	UR	9036	UA9036	UR9036
V28:Z007	V28:Z007	UA	UR	9037	UA9037	UR9037
V28:Z008	V28:Z008	UA	UR	9038	UA9038	UR9038
V28:Z009	V28:Z009	UA	UR	9039	UA9039	UR9039
V28:Z010	V28:Z010	UA	UR	9040	UA9040	UR9040
V28:Z011	V28:Z011	UA	UR	9041	UA9041	UR9041
V28:Z012	V28:Z012	UA	UR	9042	UA9042	UR9042
V28:Z013	V28:Z013	UA	UR	9043	UA9043	UR9043
V28:Z014	V28:Z014	UA	UR	9044	UA9044	UR9044
V28:Z015	V28:Z015	UA	UR	9045	UA9045	UR9045
V28:Z016	V28:Z016	UA	UR	9046	UA9046	UR9046
V28:Z017	V28:Z017	UA	UR	9047	UA9047	UR9047
V28:Z018	V28:Z018	UA	UR	9048	UA9048	UR9048
V28:Z019	V28:Z019	UA	UR	9049	UA9049	UR9049
V28:Z020	V28:Z020	UA	UR	9050	UA9050	UR9050
V28:Z021	V28:Z021	UA	UR	9051	UA9051	UR9051
V28:Z022	V28:Z022	UA	UR	9052	UA9052	UR9052
V28:Z023	V28:Z023	UA	UR	9053	UA9053	UR9053
V28:Z024	V28:Z024	UA	UR	9054	UA9054	UR9054
V28:Z025	V28:Z025	UA	UR	9055	UA9055	UR9055
V28:Z026	V28:Z026	UA	UR	9056	UA9056	UR9056

Integriti SIA DECIMAL Map. V21

V28:Z027	V28:Z027	UA	UR	9057	UA9057	UR9057
V28:Z028	V28:Z028	UA	UR	9058	UA9058	UR9058
V28:Z029	V28:Z029	UA	UR	9059	UA9059	UR9059
V28:Z030	V28:Z030	UA	UR	9060	UA9060	UR9060
V28:Z031	V28:Z031	UA	UR	9061	UA9061	UR9061
V28:Z032	V28:Z032	UA	UR	9062	UA9062	UR9062
V29:Z001	V29:Z001	UA	UR	9063	UA9063	UR9063
V29:Z002	V29:Z002	UA	UR	9064	UA9064	UR9064
V29:Z003	V29:Z003	UA	UR	9065	UA9065	UR9065
V29:Z004	V29:Z004	UA	UR	9066	UA9066	UR9066
V29:Z005	V29:Z005	UA	UR	9067	UA9067	UR9067
V29:Z006	V29:Z006	UA	UR	9068	UA9068	UR9068
V29:Z007	V29:Z007	UA	UR	9069	UA9069	UR9069
V29:Z008	V29:Z008	UA	UR	9070	UA9070	UR9070
V29:Z009	V29:Z009	UA	UR	9071	UA9071	UR9071
V29:Z010	V29:Z010	UA	UR	9072	UA9072	UR9072
V29:Z011	V29:Z011	UA	UR	9073	UA9073	UR9073
V29:Z012	V29:Z012	UA	UR	9074	UA9074	UR9074
V29:Z013	V29:Z013	UA	UR	9075	UA9075	UR9075
V29:Z014	V29:Z014	UA	UR	9076	UA9076	UR9076
V29:Z015	V29:Z015	UA	UR	9077	UA9077	UR9077
V29:Z016	V29:Z016	UA	UR	9078	UA9078	UR9078
V29:Z017	V29:Z017	UA	UR	9079	UA9079	UR9079
V29:Z018	V29:Z018	UA	UR	9080	UA9080	UR9080
V29:Z019	V29:Z019	UA	UR	9081	UA9081	UR9081
V29:Z020	V29:Z020	UA	UR	9082	UA9082	UR9082
V29:Z021	V29:Z021	UA	UR	9083	UA9083	UR9083
V29:Z022	V29:Z022	UA	UR	9084	UA9084	UR9084
V29:Z023	V29:Z023	UA	UR	9085	UA9085	UR9085
V29:Z024	V29:Z024	UA	UR	9086	UA9086	UR9086
V29:Z025	V29:Z025	UA	UR	9087	UA9087	UR9087
V29:Z026	V29:Z026	UA	UR	9088	UA9088	UR9088
V29:Z027	V29:Z027	UA	UR	9089	UA9089	UR9089
V29:Z028	V29:Z028	UA	UR	9090	UA9090	UR9090
V29:Z029	V29:Z029	UA	UR	9091	UA9091	UR9091
V29:Z030	V29:Z030	UA	UR	9092	UA9092	UR9092
V29:Z031	V29:Z031	UA	UR	9093	UA9093	UR9093
V29:Z032	V29:Z032	UA	UR	9094	UA9094	UR9094
V30:Z001	V30:Z001	UA	UR	9095	UA9095	UR9095
V30:Z002	V30:Z002	UA	UR	9096	UA9096	UR9096
V30:Z003	V30:Z003	UA	UR	9097	UA9097	UR9097
V30:Z004	V30:Z004	UA	UR	9098	UA9098	UR9098
V30:Z005	V30:Z005	UA	UR	9099	UA9099	UR9099
V30:Z006	V30:Z006	UA	UR	9100	UA9100	UR9100
V30:Z007	V30:Z007	UA	UR	9101	UA9101	UR9101
V30:Z008	V30:Z008	UA	UR	9102	UA9102	UR9102
V30:Z009	V30:Z009	UA	UR	9103	UA9103	UR9103
V30:Z010	V30:Z010	UA	UR	9104	UA9104	UR9104
V30:Z011	V30:Z011	UA	UR	9105	UA9105	UR9105
V30:Z012	V30:Z012	UA	UR	9106	UA9106	UR9106
V30:Z013	V30:Z013	UA	UR	9107	UA9107	UR9107
V30:Z014	V30:Z014	UA	UR	9108	UA9108	UR9108
V30:Z015	V30:Z015	UA	UR	9109	UA9109	UR9109
V30:Z016	V30:Z016	UA	UR	9110	UA9110	UR9110
V30:Z017	V30:Z017	UA	UR	9111	UA9111	UR9111
V30:Z018	V30:Z018	UA	UR	9112	UA9112	UR9112
V30:Z019	V30:Z019	UA	UR	9113	UA9113	UR9113
V30:Z020	V30:Z020	UA	UR	9114	UA9114	UR9114
V30:Z021	V30:Z021	UA	UR	9115	UA9115	UR9115
V30:Z022	V30:Z022	UA	UR	9116	UA9116	UR9116
V30:Z023	V30:Z023	UA	UR	9117	UA9117	UR9117
V30:Z024	V30:Z024	UA	UR	9118	UA9118	UR9118
V30:Z025	V30:Z025	UA	UR	9119	UA9119	UR9119
V30:Z026	V30:Z026	UA	UR	9120	UA9120	UR9120
V30:Z027	V30:Z027	UA	UR	9121	UA9121	UR9121
V30:Z028	V30:Z028	UA	UR	9122	UA9122	UR9122
V30:Z029	V30:Z029	UA	UR	9123	UA9123	UR9123
V30:Z030	V30:Z030	UA	UR	9124	UA9124	UR9124
V30:Z031	V30:Z031	UA	UR	9125	UA9125	UR9125
V30:Z032	V30:Z032	UA	UR	9126	UA9126	UR9126

Integriti SIA DECIMAL Map. V21

V31:Z001	V31:Z001	UA	UR	9127	UA9127	UR9127
V31:Z002	V31:Z002	UA	UR	9128	UA9128	UR9128
V31:Z003	V31:Z003	UA	UR	9129	UA9129	UR9129
V31:Z004	V31:Z004	UA	UR	9130	UA9130	UR9130
V31:Z005	V31:Z005	UA	UR	9131	UA9131	UR9131
V31:Z006	V31:Z006	UA	UR	9132	UA9132	UR9132
V31:Z007	V31:Z007	UA	UR	9133	UA9133	UR9133
V31:Z008	V31:Z008	UA	UR	9134	UA9134	UR9134
V31:Z009	V31:Z009	UA	UR	9135	UA9135	UR9135
V31:Z010	V31:Z010	UA	UR	9136	UA9136	UR9136
V31:Z011	V31:Z011	UA	UR	9137	UA9137	UR9137
V31:Z012	V31:Z012	UA	UR	9138	UA9138	UR9138
V31:Z013	V31:Z013	UA	UR	9139	UA9139	UR9139
V31:Z014	V31:Z014	UA	UR	9140	UA9140	UR9140
V31:Z015	V31:Z015	UA	UR	9141	UA9141	UR9141
V31:Z016	V31:Z016	UA	UR	9142	UA9142	UR9142
V31:Z017	V31:Z017	UA	UR	9143	UA9143	UR9143
V31:Z018	V31:Z018	UA	UR	9144	UA9144	UR9144
V31:Z019	V31:Z019	UA	UR	9145	UA9145	UR9145
V31:Z020	V31:Z020	UA	UR	9146	UA9146	UR9146
V31:Z021	V31:Z021	UA	UR	9147	UA9147	UR9147
V31:Z022	V31:Z022	UA	UR	9148	UA9148	UR9148
V31:Z023	V31:Z023	UA	UR	9149	UA9149	UR9149
V31:Z024	V31:Z024	UA	UR	9150	UA9150	UR9150
V31:Z025	V31:Z025	UA	UR	9151	UA9151	UR9151
V31:Z026	V31:Z026	UA	UR	9152	UA9152	UR9152
V31:Z027	V31:Z027	UA	UR	9153	UA9153	UR9153
V31:Z028	V31:Z028	UA	UR	9154	UA9154	UR9154
V31:Z029	V31:Z029	UA	UR	9155	UA9155	UR9155
V31:Z030	V31:Z030	UA	UR	9156	UA9156	UR9156
V31:Z031	V31:Z031	UA	UR	9157	UA9157	UR9157
V31:Z032	V31:Z032	UA	UR	9158	UA9158	UR9158
V32:Z001	V32:Z001	UA	UR	9159	UA9159	UR9159
V32:Z002	V32:Z002	UA	UR	9160	UA9160	UR9160
V32:Z003	V32:Z003	UA	UR	9161	UA9161	UR9161
V32:Z004	V32:Z004	UA	UR	9162	UA9162	UR9162
V32:Z005	V32:Z005	UA	UR	9163	UA9163	UR9163
V32:Z006	V32:Z006	UA	UR	9164	UA9164	UR9164
V32:Z007	V32:Z007	UA	UR	9165	UA9165	UR9165
V32:Z008	V32:Z008	UA	UR	9166	UA9166	UR9166
V32:Z009	V32:Z009	UA	UR	9167	UA9167	UR9167
V32:Z010	V32:Z010	UA	UR	9168	UA9168	UR9168
V32:Z011	V32:Z011	UA	UR	9169	UA9169	UR9169
V32:Z012	V32:Z012	UA	UR	9170	UA9170	UR9170
V32:Z013	V32:Z013	UA	UR	9171	UA9171	UR9171
V32:Z014	V32:Z014	UA	UR	9172	UA9172	UR9172
V32:Z015	V32:Z015	UA	UR	9173	UA9173	UR9173
V32:Z016	V32:Z016	UA	UR	9174	UA9174	UR9174
V32:Z017	V32:Z017	UA	UR	9175	UA9175	UR9175
V32:Z018	V32:Z018	UA	UR	9176	UA9176	UR9176
V32:Z019	V32:Z019	UA	UR	9177	UA9177	UR9177
V32:Z020	V32:Z020	UA	UR	9178	UA9178	UR9178
V32:Z021	V32:Z021	UA	UR	9179	UA9179	UR9179
V32:Z022	V32:Z022	UA	UR	9180	UA9180	UR9180
V32:Z023	V32:Z023	UA	UR	9181	UA9181	UR9181
V32:Z024	V32:Z024	UA	UR	9182	UA9182	UR9182
V32:Z025	V32:Z025	UA	UR	9183	UA9183	UR9183
V32:Z026	V32:Z026	UA	UR	9184	UA9184	UR9184
V32:Z027	V32:Z027	UA	UR	9185	UA9185	UR9185
V32:Z028	V32:Z028	UA	UR	9186	UA9186	UR9186
V32:Z029	V32:Z029	UA	UR	9187	UA9187	UR9187
V32:Z030	V32:Z030	UA	UR	9188	UA9188	UR9188
V32:Z031	V32:Z031	UA	UR	9189	UA9189	UR9189
V32:Z032	V32:Z032	UA	UR	9190	UA9190	UR9190
V33:Z001	V33:Z001	UA	UR	9999	UA9999	UR9999
V33:Z002	V33:Z002	UA	UR	9999	UA9999	UR9999
V33:Z003	V33:Z003	UA	UR	9999	UA9999	UR9999
V33:Z004	V33:Z004	UA	UR	9999	UA9999	UR9999
V33:Z005	V33:Z005	UA	UR	9999	UA9999	UR9999
V33:Z006	V33:Z006	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

V33:Z007	V33:Z007	UA	UR	9999	JA9999	UR9999
V33:Z008	V33:Z008	UA	UR	9999	JA9999	UR9999
V33:Z009	V33:Z009	UA	UR	9999	JA9999	UR9999
V33:Z010	V33:Z010	UA	UR	9999	JA9999	UR9999
V33:Z011	V33:Z011	UA	UR	9999	JA9999	UR9999
V33:Z012	V33:Z012	UA	UR	9999	JA9999	UR9999
V33:Z013	V33:Z013	UA	UR	9999	JA9999	UR9999
V33:Z014	V33:Z014	UA	UR	9999	JA9999	UR9999
V33:Z015	V33:Z015	UA	UR	9999	JA9999	UR9999
V33:Z016	V33:Z016	UA	UR	9999	JA9999	UR9999
V33:Z017	V33:Z017	UA	UR	9999	JA9999	UR9999
V33:Z018	V33:Z018	UA	UR	9999	JA9999	UR9999
V33:Z019	V33:Z019	UA	UR	9999	JA9999	UR9999
V33:Z020	V33:Z020	UA	UR	9999	JA9999	UR9999
V33:Z021	V33:Z021	UA	UR	9999	JA9999	UR9999
V33:Z022	V33:Z022	UA	UR	9999	JA9999	UR9999
V33:Z023	V33:Z023	UA	UR	9999	JA9999	UR9999
V33:Z024	V33:Z024	UA	UR	9999	JA9999	UR9999
V33:Z025	V33:Z025	UA	UR	9999	JA9999	UR9999
V33:Z026	V33:Z026	UA	UR	9999	JA9999	UR9999
V33:Z027	V33:Z027	UA	UR	9999	JA9999	UR9999
V33:Z028	V33:Z028	UA	UR	9999	JA9999	UR9999
V33:Z029	V33:Z029	UA	UR	9999	JA9999	UR9999
V33:Z030	V33:Z030	UA	UR	9999	JA9999	UR9999
V33:Z031	V33:Z031	UA	UR	9999	JA9999	UR9999
V33:Z032	V33:Z032	UA	UR	9999	JA9999	UR9999
V34:Z001	V34:Z001	UA	UR	9999	JA9999	UR9999
V34:Z002	V34:Z002	UA	UR	9999	JA9999	UR9999
V34:Z003	V34:Z003	UA	UR	9999	JA9999	UR9999
V34:Z004	V34:Z004	UA	UR	9999	JA9999	UR9999
V34:Z005	V34:Z005	UA	UR	9999	JA9999	UR9999
V34:Z006	V34:Z006	UA	UR	9999	JA9999	UR9999
V34:Z007	V34:Z007	UA	UR	9999	JA9999	UR9999
V34:Z008	V34:Z008	UA	UR	9999	JA9999	UR9999
V34:Z009	V34:Z009	UA	UR	9999	JA9999	UR9999
V34:Z010	V34:Z010	UA	UR	9999	JA9999	UR9999
V34:Z011	V34:Z011	UA	UR	9999	JA9999	UR9999
V34:Z012	V34:Z012	UA	UR	9999	JA9999	UR9999
V34:Z013	V34:Z013	UA	UR	9999	JA9999	UR9999
V34:Z014	V34:Z014	UA	UR	9999	JA9999	UR9999
V34:Z015	V34:Z015	UA	UR	9999	JA9999	UR9999
V34:Z016	V34:Z016	UA	UR	9999	JA9999	UR9999
V34:Z017	V34:Z017	UA	UR	9999	JA9999	UR9999
V34:Z018	V34:Z018	UA	UR	9999	JA9999	UR9999
V34:Z019	V34:Z019	UA	UR	9999	JA9999	UR9999
V34:Z020	V34:Z020	UA	UR	9999	JA9999	UR9999
V34:Z021	V34:Z021	UA	UR	9999	JA9999	UR9999
V34:Z022	V34:Z022	UA	UR	9999	JA9999	UR9999
V34:Z023	V34:Z023	UA	UR	9999	JA9999	UR9999
V34:Z024	V34:Z024	UA	UR	9999	JA9999	UR9999
V34:Z025	V34:Z025	UA	UR	9999	JA9999	UR9999
V34:Z026	V34:Z026	UA	UR	9999	JA9999	UR9999
V34:Z027	V34:Z027	UA	UR	9999	JA9999	UR9999
V34:Z028	V34:Z028	UA	UR	9999	JA9999	UR9999
V34:Z029	V34:Z029	UA	UR	9999	JA9999	UR9999
V34:Z030	V34:Z030	UA	UR	9999	JA9999	UR9999
V34:Z031	V34:Z031	UA	UR	9999	JA9999	UR9999
V34:Z032	V34:Z032	UA	UR	9999	JA9999	UR9999
V35:Z001	V35:Z001	UA	UR	9999	JA9999	UR9999
V35:Z002	V35:Z002	UA	UR	9999	JA9999	UR9999
V35:Z003	V35:Z003	UA	UR	9999	JA9999	UR9999
V35:Z004	V35:Z004	UA	UR	9999	JA9999	UR9999
V35:Z005	V35:Z005	UA	UR	9999	JA9999	UR9999
V35:Z006	V35:Z006	UA	UR	9999	JA9999	UR9999
V35:Z007	V35:Z007	UA	UR	9999	JA9999	UR9999
V35:Z008	V35:Z008	UA	UR	9999	JA9999	UR9999
V35:Z009	V35:Z009	UA	UR	9999	JA9999	UR9999
V35:Z010	V35:Z010	UA	UR	9999	JA9999	UR9999
V35:Z011	V35:Z011	UA	UR	9999	JA9999	UR9999
V35:Z012	V35:Z012	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V35:Z013	V35:Z013	UA	UR	9999	JA9999	UR9999
V35:Z014	V35:Z014	UA	UR	9999	JA9999	UR9999
V35:Z015	V35:Z015	UA	UR	9999	JA9999	UR9999
V35:Z016	V35:Z016	UA	UR	9999	JA9999	UR9999
V35:Z017	V35:Z017	UA	UR	9999	JA9999	UR9999
V35:Z018	V35:Z018	UA	UR	9999	JA9999	UR9999
V35:Z019	V35:Z019	UA	UR	9999	JA9999	UR9999
V35:Z020	V35:Z020	UA	UR	9999	JA9999	UR9999
V35:Z021	V35:Z021	UA	UR	9999	JA9999	UR9999
V35:Z022	V35:Z022	UA	UR	9999	JA9999	UR9999
V35:Z023	V35:Z023	UA	UR	9999	JA9999	UR9999
V35:Z024	V35:Z024	UA	UR	9999	JA9999	UR9999
V35:Z025	V35:Z025	UA	UR	9999	JA9999	UR9999
V35:Z026	V35:Z026	UA	UR	9999	JA9999	UR9999
V35:Z027	V35:Z027	UA	UR	9999	JA9999	UR9999
V35:Z028	V35:Z028	UA	UR	9999	JA9999	UR9999
V35:Z029	V35:Z029	UA	UR	9999	JA9999	UR9999
V35:Z030	V35:Z030	UA	UR	9999	JA9999	UR9999
V35:Z031	V35:Z031	UA	UR	9999	JA9999	UR9999
V35:Z032	V35:Z032	UA	UR	9999	JA9999	UR9999
V36:Z001	V36:Z001	UA	UR	9999	JA9999	UR9999
V36:Z002	V36:Z002	UA	UR	9999	JA9999	UR9999
V36:Z003	V36:Z003	UA	UR	9999	JA9999	UR9999
V36:Z004	V36:Z004	UA	UR	9999	JA9999	UR9999
V36:Z005	V36:Z005	UA	UR	9999	JA9999	UR9999
V36:Z006	V36:Z006	UA	UR	9999	JA9999	UR9999
V36:Z007	V36:Z007	UA	UR	9999	JA9999	UR9999
V36:Z008	V36:Z008	UA	UR	9999	JA9999	UR9999
V36:Z009	V36:Z009	UA	UR	9999	JA9999	UR9999
V36:Z010	V36:Z010	UA	UR	9999	JA9999	UR9999
V36:Z011	V36:Z011	UA	UR	9999	JA9999	UR9999
V36:Z012	V36:Z012	UA	UR	9999	JA9999	UR9999
V36:Z013	V36:Z013	UA	UR	9999	JA9999	UR9999
V36:Z014	V36:Z014	UA	UR	9999	JA9999	UR9999
V36:Z015	V36:Z015	UA	UR	9999	JA9999	UR9999
V36:Z016	V36:Z016	UA	UR	9999	JA9999	UR9999
V36:Z017	V36:Z017	UA	UR	9999	JA9999	UR9999
V36:Z018	V36:Z018	UA	UR	9999	JA9999	UR9999
V36:Z019	V36:Z019	UA	UR	9999	JA9999	UR9999
V36:Z020	V36:Z020	UA	UR	9999	JA9999	UR9999
V36:Z021	V36:Z021	UA	UR	9999	JA9999	UR9999
V36:Z022	V36:Z022	UA	UR	9999	JA9999	UR9999
V36:Z023	V36:Z023	UA	UR	9999	JA9999	UR9999
V36:Z024	V36:Z024	UA	UR	9999	JA9999	UR9999
V36:Z025	V36:Z025	UA	UR	9999	JA9999	UR9999
V36:Z026	V36:Z026	UA	UR	9999	JA9999	UR9999
V36:Z027	V36:Z027	UA	UR	9999	JA9999	UR9999
V36:Z028	V36:Z028	UA	UR	9999	JA9999	UR9999
V36:Z029	V36:Z029	UA	UR	9999	JA9999	UR9999
V36:Z030	V36:Z030	UA	UR	9999	JA9999	UR9999
V36:Z031	V36:Z031	UA	UR	9999	JA9999	UR9999
V36:Z032	V36:Z032	UA	UR	9999	JA9999	UR9999
V37:Z001	V37:Z001	UA	UR	9999	JA9999	UR9999
V37:Z002	V37:Z002	UA	UR	9999	JA9999	UR9999
V37:Z003	V37:Z003	UA	UR	9999	JA9999	UR9999
V37:Z004	V37:Z004	UA	UR	9999	JA9999	UR9999
V37:Z005	V37:Z005	UA	UR	9999	JA9999	UR9999
V37:Z006	V37:Z006	UA	UR	9999	JA9999	UR9999
V37:Z007	V37:Z007	UA	UR	9999	JA9999	UR9999
V37:Z008	V37:Z008	UA	UR	9999	JA9999	UR9999
V37:Z009	V37:Z009	UA	UR	9999	JA9999	UR9999
V37:Z010	V37:Z010	UA	UR	9999	JA9999	UR9999
V37:Z011	V37:Z011	UA	UR	9999	JA9999	UR9999
V37:Z012	V37:Z012	UA	UR	9999	JA9999	UR9999
V37:Z013	V37:Z013	UA	UR	9999	JA9999	UR9999
V37:Z014	V37:Z014	UA	UR	9999	JA9999	UR9999
V37:Z015	V37:Z015	UA	UR	9999	JA9999	UR9999
V37:Z016	V37:Z016	UA	UR	9999	JA9999	UR9999
V37:Z017	V37:Z017	UA	UR	9999	JA9999	UR9999
V37:Z018	V37:Z018	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V37:Z019	V37:Z019	UA	UR	9999	JA9999	UR9999
V37:Z020	V37:Z020	UA	UR	9999	JA9999	UR9999
V37:Z021	V37:Z021	UA	UR	9999	JA9999	UR9999
V37:Z022	V37:Z022	UA	UR	9999	JA9999	UR9999
V37:Z023	V37:Z023	UA	UR	9999	JA9999	UR9999
V37:Z024	V37:Z024	UA	UR	9999	JA9999	UR9999
V37:Z025	V37:Z025	UA	UR	9999	JA9999	UR9999
V37:Z026	V37:Z026	UA	UR	9999	JA9999	UR9999
V37:Z027	V37:Z027	UA	UR	9999	JA9999	UR9999
V37:Z028	V37:Z028	UA	UR	9999	JA9999	UR9999
V37:Z029	V37:Z029	UA	UR	9999	JA9999	UR9999
V37:Z030	V37:Z030	UA	UR	9999	JA9999	UR9999
V37:Z031	V37:Z031	UA	UR	9999	JA9999	UR9999
V37:Z032	V37:Z032	UA	UR	9999	JA9999	UR9999
V38:Z001	V38:Z001	UA	UR	9999	JA9999	UR9999
V38:Z002	V38:Z002	UA	UR	9999	JA9999	UR9999
V38:Z003	V38:Z003	UA	UR	9999	JA9999	UR9999
V38:Z004	V38:Z004	UA	UR	9999	JA9999	UR9999
V38:Z005	V38:Z005	UA	UR	9999	JA9999	UR9999
V38:Z006	V38:Z006	UA	UR	9999	JA9999	UR9999
V38:Z007	V38:Z007	UA	UR	9999	JA9999	UR9999
V38:Z008	V38:Z008	UA	UR	9999	JA9999	UR9999
V38:Z009	V38:Z009	UA	UR	9999	JA9999	UR9999
V38:Z010	V38:Z010	UA	UR	9999	JA9999	UR9999
V38:Z011	V38:Z011	UA	UR	9999	JA9999	UR9999
V38:Z012	V38:Z012	UA	UR	9999	JA9999	UR9999
V38:Z013	V38:Z013	UA	UR	9999	JA9999	UR9999
V38:Z014	V38:Z014	UA	UR	9999	JA9999	UR9999
V38:Z015	V38:Z015	UA	UR	9999	JA9999	UR9999
V38:Z016	V38:Z016	UA	UR	9999	JA9999	UR9999
V38:Z017	V38:Z017	UA	UR	9999	JA9999	UR9999
V38:Z018	V38:Z018	UA	UR	9999	JA9999	UR9999
V38:Z019	V38:Z019	UA	UR	9999	JA9999	UR9999
V38:Z020	V38:Z020	UA	UR	9999	JA9999	UR9999
V38:Z021	V38:Z021	UA	UR	9999	JA9999	UR9999
V38:Z022	V38:Z022	UA	UR	9999	JA9999	UR9999
V38:Z023	V38:Z023	UA	UR	9999	JA9999	UR9999
V38:Z024	V38:Z024	UA	UR	9999	JA9999	UR9999
V38:Z025	V38:Z025	UA	UR	9999	JA9999	UR9999
V38:Z026	V38:Z026	UA	UR	9999	JA9999	UR9999
V38:Z027	V38:Z027	UA	UR	9999	JA9999	UR9999
V38:Z028	V38:Z028	UA	UR	9999	JA9999	UR9999
V38:Z029	V38:Z029	UA	UR	9999	JA9999	UR9999
V38:Z030	V38:Z030	UA	UR	9999	JA9999	UR9999
V38:Z031	V38:Z031	UA	UR	9999	JA9999	UR9999
V38:Z032	V38:Z032	UA	UR	9999	JA9999	UR9999
V39:Z001	V39:Z001	UA	UR	9999	JA9999	UR9999
V39:Z002	V39:Z002	UA	UR	9999	JA9999	UR9999
V39:Z003	V39:Z003	UA	UR	9999	JA9999	UR9999
V39:Z004	V39:Z004	UA	UR	9999	JA9999	UR9999
V39:Z005	V39:Z005	UA	UR	9999	JA9999	UR9999
V39:Z006	V39:Z006	UA	UR	9999	JA9999	UR9999
V39:Z007	V39:Z007	UA	UR	9999	JA9999	UR9999
V39:Z008	V39:Z008	UA	UR	9999	JA9999	UR9999
V39:Z009	V39:Z009	UA	UR	9999	JA9999	UR9999
V39:Z010	V39:Z010	UA	UR	9999	JA9999	UR9999
V39:Z011	V39:Z011	UA	UR	9999	JA9999	UR9999
V39:Z012	V39:Z012	UA	UR	9999	JA9999	UR9999
V39:Z013	V39:Z013	UA	UR	9999	JA9999	UR9999
V39:Z014	V39:Z014	UA	UR	9999	JA9999	UR9999
V39:Z015	V39:Z015	UA	UR	9999	JA9999	UR9999
V39:Z016	V39:Z016	UA	UR	9999	JA9999	UR9999
V39:Z017	V39:Z017	UA	UR	9999	JA9999	UR9999
V39:Z018	V39:Z018	UA	UR	9999	JA9999	UR9999
V39:Z019	V39:Z019	UA	UR	9999	JA9999	UR9999
V39:Z020	V39:Z020	UA	UR	9999	JA9999	UR9999
V39:Z021	V39:Z021	UA	UR	9999	JA9999	UR9999
V39:Z022	V39:Z022	UA	UR	9999	JA9999	UR9999
V39:Z023	V39:Z023	UA	UR	9999	JA9999	UR9999
V39:Z024	V39:Z024	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V39:Z025	V39:Z025	UA	UR	9999	JA9999	UR9999
V39:Z026	V39:Z026	UA	UR	9999	JA9999	UR9999
V39:Z027	V39:Z027	UA	UR	9999	JA9999	UR9999
V39:Z028	V39:Z028	UA	UR	9999	JA9999	UR9999
V39:Z029	V39:Z029	UA	UR	9999	JA9999	UR9999
V39:Z030	V39:Z030	UA	UR	9999	JA9999	UR9999
V39:Z031	V39:Z031	UA	UR	9999	JA9999	UR9999
V39:Z032	V39:Z032	UA	UR	9999	JA9999	UR9999
V40:Z001	V40:Z001	UA	UR	9999	JA9999	UR9999
V40:Z002	V40:Z002	UA	UR	9999	JA9999	UR9999
V40:Z003	V40:Z003	UA	UR	9999	JA9999	UR9999
V40:Z004	V40:Z004	UA	UR	9999	JA9999	UR9999
V40:Z005	V40:Z005	UA	UR	9999	JA9999	UR9999
V40:Z006	V40:Z006	UA	UR	9999	JA9999	UR9999
V40:Z007	V40:Z007	UA	UR	9999	JA9999	UR9999
V40:Z008	V40:Z008	UA	UR	9999	JA9999	UR9999
V40:Z009	V40:Z009	UA	UR	9999	JA9999	UR9999
V40:Z010	V40:Z010	UA	UR	9999	JA9999	UR9999
V40:Z011	V40:Z011	UA	UR	9999	JA9999	UR9999
V40:Z012	V40:Z012	UA	UR	9999	JA9999	UR9999
V40:Z013	V40:Z013	UA	UR	9999	JA9999	UR9999
V40:Z014	V40:Z014	UA	UR	9999	JA9999	UR9999
V40:Z015	V40:Z015	UA	UR	9999	JA9999	UR9999
V40:Z016	V40:Z016	UA	UR	9999	JA9999	UR9999
V40:Z017	V40:Z017	UA	UR	9999	JA9999	UR9999
V40:Z018	V40:Z018	UA	UR	9999	JA9999	UR9999
V40:Z019	V40:Z019	UA	UR	9999	JA9999	UR9999
V40:Z020	V40:Z020	UA	UR	9999	JA9999	UR9999
V40:Z021	V40:Z021	UA	UR	9999	JA9999	UR9999
V40:Z022	V40:Z022	UA	UR	9999	JA9999	UR9999
V40:Z023	V40:Z023	UA	UR	9999	JA9999	UR9999
V40:Z024	V40:Z024	UA	UR	9999	JA9999	UR9999
V40:Z025	V40:Z025	UA	UR	9999	JA9999	UR9999
V40:Z026	V40:Z026	UA	UR	9999	JA9999	UR9999
V40:Z027	V40:Z027	UA	UR	9999	JA9999	UR9999
V40:Z028	V40:Z028	UA	UR	9999	JA9999	UR9999
V40:Z029	V40:Z029	UA	UR	9999	JA9999	UR9999
V40:Z030	V40:Z030	UA	UR	9999	JA9999	UR9999
V40:Z031	V40:Z031	UA	UR	9999	JA9999	UR9999
V40:Z032	V40:Z032	UA	UR	9999	JA9999	UR9999
V41:Z001	V41:Z001	UA	UR	9999	JA9999	UR9999
V41:Z002	V41:Z002	UA	UR	9999	JA9999	UR9999
V41:Z003	V41:Z003	UA	UR	9999	JA9999	UR9999
V41:Z004	V41:Z004	UA	UR	9999	JA9999	UR9999
V41:Z005	V41:Z005	UA	UR	9999	JA9999	UR9999
V41:Z006	V41:Z006	UA	UR	9999	JA9999	UR9999
V41:Z007	V41:Z007	UA	UR	9999	JA9999	UR9999
V41:Z008	V41:Z008	UA	UR	9999	JA9999	UR9999
V41:Z009	V41:Z009	UA	UR	9999	JA9999	UR9999
V41:Z010	V41:Z010	UA	UR	9999	JA9999	UR9999
V41:Z011	V41:Z011	UA	UR	9999	JA9999	UR9999
V41:Z012	V41:Z012	UA	UR	9999	JA9999	UR9999
V41:Z013	V41:Z013	UA	UR	9999	JA9999	UR9999
V41:Z014	V41:Z014	UA	UR	9999	JA9999	UR9999
V41:Z015	V41:Z015	UA	UR	9999	JA9999	UR9999
V41:Z016	V41:Z016	UA	UR	9999	JA9999	UR9999
V41:Z017	V41:Z017	UA	UR	9999	JA9999	UR9999
V41:Z018	V41:Z018	UA	UR	9999	JA9999	UR9999
V41:Z019	V41:Z019	UA	UR	9999	JA9999	UR9999
V41:Z020	V41:Z020	UA	UR	9999	JA9999	UR9999
V41:Z021	V41:Z021	UA	UR	9999	JA9999	UR9999
V41:Z022	V41:Z022	UA	UR	9999	JA9999	UR9999
V41:Z023	V41:Z023	UA	UR	9999	JA9999	UR9999
V41:Z024	V41:Z024	UA	UR	9999	JA9999	UR9999
V41:Z025	V41:Z025	UA	UR	9999	JA9999	UR9999
V41:Z026	V41:Z026	UA	UR	9999	JA9999	UR9999
V41:Z027	V41:Z027	UA	UR	9999	JA9999	UR9999
V41:Z028	V41:Z028	UA	UR	9999	JA9999	UR9999
V41:Z029	V41:Z029	UA	UR	9999	JA9999	UR9999
V41:Z030	V41:Z030	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V41:Z031	V41:Z031	UA	UR	9999	JA9999	UR9999
V41:Z032	V41:Z032	UA	UR	9999	JA9999	UR9999
V42:Z001	V42:Z001	UA	UR	9999	JA9999	UR9999
V42:Z002	V42:Z002	UA	UR	9999	JA9999	UR9999
V42:Z003	V42:Z003	UA	UR	9999	JA9999	UR9999
V42:Z004	V42:Z004	UA	UR	9999	JA9999	UR9999
V42:Z005	V42:Z005	UA	UR	9999	JA9999	UR9999
V42:Z006	V42:Z006	UA	UR	9999	JA9999	UR9999
V42:Z007	V42:Z007	UA	UR	9999	JA9999	UR9999
V42:Z008	V42:Z008	UA	UR	9999	JA9999	UR9999
V42:Z009	V42:Z009	UA	UR	9999	JA9999	UR9999
V42:Z010	V42:Z010	UA	UR	9999	JA9999	UR9999
V42:Z011	V42:Z011	UA	UR	9999	JA9999	UR9999
V42:Z012	V42:Z012	UA	UR	9999	JA9999	UR9999
V42:Z013	V42:Z013	UA	UR	9999	JA9999	UR9999
V42:Z014	V42:Z014	UA	UR	9999	JA9999	UR9999
V42:Z015	V42:Z015	UA	UR	9999	JA9999	UR9999
V42:Z016	V42:Z016	UA	UR	9999	JA9999	UR9999
V42:Z017	V42:Z017	UA	UR	9999	JA9999	UR9999
V42:Z018	V42:Z018	UA	UR	9999	JA9999	UR9999
V42:Z019	V42:Z019	UA	UR	9999	JA9999	UR9999
V42:Z020	V42:Z020	UA	UR	9999	JA9999	UR9999
V42:Z021	V42:Z021	UA	UR	9999	JA9999	UR9999
V42:Z022	V42:Z022	UA	UR	9999	JA9999	UR9999
V42:Z023	V42:Z023	UA	UR	9999	JA9999	UR9999
V42:Z024	V42:Z024	UA	UR	9999	JA9999	UR9999
V42:Z025	V42:Z025	UA	UR	9999	JA9999	UR9999
V42:Z026	V42:Z026	UA	UR	9999	JA9999	UR9999
V42:Z027	V42:Z027	UA	UR	9999	JA9999	UR9999
V42:Z028	V42:Z028	UA	UR	9999	JA9999	UR9999
V42:Z029	V42:Z029	UA	UR	9999	JA9999	UR9999
V42:Z030	V42:Z030	UA	UR	9999	JA9999	UR9999
V42:Z031	V42:Z031	UA	UR	9999	JA9999	UR9999
V42:Z032	V42:Z032	UA	UR	9999	JA9999	UR9999
V43:Z001	V43:Z001	UA	UR	9999	JA9999	UR9999
V43:Z002	V43:Z002	UA	UR	9999	JA9999	UR9999
V43:Z003	V43:Z003	UA	UR	9999	JA9999	UR9999
V43:Z004	V43:Z004	UA	UR	9999	JA9999	UR9999
V43:Z005	V43:Z005	UA	UR	9999	JA9999	UR9999
V43:Z006	V43:Z006	UA	UR	9999	JA9999	UR9999
V43:Z007	V43:Z007	UA	UR	9999	JA9999	UR9999
V43:Z008	V43:Z008	UA	UR	9999	JA9999	UR9999
V43:Z009	V43:Z009	UA	UR	9999	JA9999	UR9999
V43:Z010	V43:Z010	UA	UR	9999	JA9999	UR9999
V43:Z011	V43:Z011	UA	UR	9999	JA9999	UR9999
V43:Z012	V43:Z012	UA	UR	9999	JA9999	UR9999
V43:Z013	V43:Z013	UA	UR	9999	JA9999	UR9999
V43:Z014	V43:Z014	UA	UR	9999	JA9999	UR9999
V43:Z015	V43:Z015	UA	UR	9999	JA9999	UR9999
V43:Z016	V43:Z016	UA	UR	9999	JA9999	UR9999
V43:Z017	V43:Z017	UA	UR	9999	JA9999	UR9999
V43:Z018	V43:Z018	UA	UR	9999	JA9999	UR9999
V43:Z019	V43:Z019	UA	UR	9999	JA9999	UR9999
V43:Z020	V43:Z020	UA	UR	9999	JA9999	UR9999
V43:Z021	V43:Z021	UA	UR	9999	JA9999	UR9999
V43:Z022	V43:Z022	UA	UR	9999	JA9999	UR9999
V43:Z023	V43:Z023	UA	UR	9999	JA9999	UR9999
V43:Z024	V43:Z024	UA	UR	9999	JA9999	UR9999
V43:Z025	V43:Z025	UA	UR	9999	JA9999	UR9999
V43:Z026	V43:Z026	UA	UR	9999	JA9999	UR9999
V43:Z027	V43:Z027	UA	UR	9999	JA9999	UR9999
V43:Z028	V43:Z028	UA	UR	9999	JA9999	UR9999
V43:Z029	V43:Z029	UA	UR	9999	JA9999	UR9999
V43:Z030	V43:Z030	UA	UR	9999	JA9999	UR9999
V43:Z031	V43:Z031	UA	UR	9999	JA9999	UR9999
V43:Z032	V43:Z032	UA	UR	9999	JA9999	UR9999
V44:Z001	V44:Z001	UA	UR	9999	JA9999	UR9999
V44:Z002	V44:Z002	UA	UR	9999	JA9999	UR9999
V44:Z003	V44:Z003	UA	UR	9999	JA9999	UR9999
V44:Z004	V44:Z004	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V44:Z005	V44:Z005	UA	UR	9999	JA9999	UR9999
V44:Z006	V44:Z006	UA	UR	9999	JA9999	UR9999
V44:Z007	V44:Z007	UA	UR	9999	JA9999	UR9999
V44:Z008	V44:Z008	UA	UR	9999	JA9999	UR9999
V44:Z009	V44:Z009	UA	UR	9999	JA9999	UR9999
V44:Z010	V44:Z010	UA	UR	9999	JA9999	UR9999
V44:Z011	V44:Z011	UA	UR	9999	JA9999	UR9999
V44:Z012	V44:Z012	UA	UR	9999	JA9999	UR9999
V44:Z013	V44:Z013	UA	UR	9999	JA9999	UR9999
V44:Z014	V44:Z014	UA	UR	9999	JA9999	UR9999
V44:Z015	V44:Z015	UA	UR	9999	JA9999	UR9999
V44:Z016	V44:Z016	UA	UR	9999	JA9999	UR9999
V44:Z017	V44:Z017	UA	UR	9999	JA9999	UR9999
V44:Z018	V44:Z018	UA	UR	9999	JA9999	UR9999
V44:Z019	V44:Z019	UA	UR	9999	JA9999	UR9999
V44:Z020	V44:Z020	UA	UR	9999	JA9999	UR9999
V44:Z021	V44:Z021	UA	UR	9999	JA9999	UR9999
V44:Z022	V44:Z022	UA	UR	9999	JA9999	UR9999
V44:Z023	V44:Z023	UA	UR	9999	JA9999	UR9999
V44:Z024	V44:Z024	UA	UR	9999	JA9999	UR9999
V44:Z025	V44:Z025	UA	UR	9999	JA9999	UR9999
V44:Z026	V44:Z026	UA	UR	9999	JA9999	UR9999
V44:Z027	V44:Z027	UA	UR	9999	JA9999	UR9999
V44:Z028	V44:Z028	UA	UR	9999	JA9999	UR9999
V44:Z029	V44:Z029	UA	UR	9999	JA9999	UR9999
V44:Z030	V44:Z030	UA	UR	9999	JA9999	UR9999
V44:Z031	V44:Z031	UA	UR	9999	JA9999	UR9999
V44:Z032	V44:Z032	UA	UR	9999	JA9999	UR9999
V45:Z001	V45:Z001	UA	UR	9999	JA9999	UR9999
V45:Z002	V45:Z002	UA	UR	9999	JA9999	UR9999
V45:Z003	V45:Z003	UA	UR	9999	JA9999	UR9999
V45:Z004	V45:Z004	UA	UR	9999	JA9999	UR9999
V45:Z005	V45:Z005	UA	UR	9999	JA9999	UR9999
V45:Z006	V45:Z006	UA	UR	9999	JA9999	UR9999
V45:Z007	V45:Z007	UA	UR	9999	JA9999	UR9999
V45:Z008	V45:Z008	UA	UR	9999	JA9999	UR9999
V45:Z009	V45:Z009	UA	UR	9999	JA9999	UR9999
V45:Z010	V45:Z010	UA	UR	9999	JA9999	UR9999
V45:Z011	V45:Z011	UA	UR	9999	JA9999	UR9999
V45:Z012	V45:Z012	UA	UR	9999	JA9999	UR9999
V45:Z013	V45:Z013	UA	UR	9999	JA9999	UR9999
V45:Z014	V45:Z014	UA	UR	9999	JA9999	UR9999
V45:Z015	V45:Z015	UA	UR	9999	JA9999	UR9999
V45:Z016	V45:Z016	UA	UR	9999	JA9999	UR9999
V45:Z017	V45:Z017	UA	UR	9999	JA9999	UR9999
V45:Z018	V45:Z018	UA	UR	9999	JA9999	UR9999
V45:Z019	V45:Z019	UA	UR	9999	JA9999	UR9999
V45:Z020	V45:Z020	UA	UR	9999	JA9999	UR9999
V45:Z021	V45:Z021	UA	UR	9999	JA9999	UR9999
V45:Z022	V45:Z022	UA	UR	9999	JA9999	UR9999
V45:Z023	V45:Z023	UA	UR	9999	JA9999	UR9999
V45:Z024	V45:Z024	UA	UR	9999	JA9999	UR9999
V45:Z025	V45:Z025	UA	UR	9999	JA9999	UR9999
V45:Z026	V45:Z026	UA	UR	9999	JA9999	UR9999
V45:Z027	V45:Z027	UA	UR	9999	JA9999	UR9999
V45:Z028	V45:Z028	UA	UR	9999	JA9999	UR9999
V45:Z029	V45:Z029	UA	UR	9999	JA9999	UR9999
V45:Z030	V45:Z030	UA	UR	9999	JA9999	UR9999
V45:Z031	V45:Z031	UA	UR	9999	JA9999	UR9999
V45:Z032	V45:Z032	UA	UR	9999	JA9999	UR9999
V46:Z001	V46:Z001	UA	UR	9999	JA9999	UR9999
V46:Z002	V46:Z002	UA	UR	9999	JA9999	UR9999
V46:Z003	V46:Z003	UA	UR	9999	JA9999	UR9999
V46:Z004	V46:Z004	UA	UR	9999	JA9999	UR9999
V46:Z005	V46:Z005	UA	UR	9999	JA9999	UR9999
V46:Z006	V46:Z006	UA	UR	9999	JA9999	UR9999
V46:Z007	V46:Z007	UA	UR	9999	JA9999	UR9999
V46:Z008	V46:Z008	UA	UR	9999	JA9999	UR9999
V46:Z009	V46:Z009	UA	UR	9999	JA9999	UR9999
V46:Z010	V46:Z010	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V46:Z011	V46:Z011	UA	UR	9999	JA9999	UR9999
V46:Z012	V46:Z012	UA	UR	9999	JA9999	UR9999
V46:Z013	V46:Z013	UA	UR	9999	JA9999	UR9999
V46:Z014	V46:Z014	UA	UR	9999	JA9999	UR9999
V46:Z015	V46:Z015	UA	UR	9999	JA9999	UR9999
V46:Z016	V46:Z016	UA	UR	9999	JA9999	UR9999
V46:Z017	V46:Z017	UA	UR	9999	JA9999	UR9999
V46:Z018	V46:Z018	UA	UR	9999	JA9999	UR9999
V46:Z019	V46:Z019	UA	UR	9999	JA9999	UR9999
V46:Z020	V46:Z020	UA	UR	9999	JA9999	UR9999
V46:Z021	V46:Z021	UA	UR	9999	JA9999	UR9999
V46:Z022	V46:Z022	UA	UR	9999	JA9999	UR9999
V46:Z023	V46:Z023	UA	UR	9999	JA9999	UR9999
V46:Z024	V46:Z024	UA	UR	9999	JA9999	UR9999
V46:Z025	V46:Z025	UA	UR	9999	JA9999	UR9999
V46:Z026	V46:Z026	UA	UR	9999	JA9999	UR9999
V46:Z027	V46:Z027	UA	UR	9999	JA9999	UR9999
V46:Z028	V46:Z028	UA	UR	9999	JA9999	UR9999
V46:Z029	V46:Z029	UA	UR	9999	JA9999	UR9999
V46:Z030	V46:Z030	UA	UR	9999	JA9999	UR9999
V46:Z031	V46:Z031	UA	UR	9999	JA9999	UR9999
V46:Z032	V46:Z032	UA	UR	9999	JA9999	UR9999
V47:Z001	V47:Z001	UA	UR	9999	JA9999	UR9999
V47:Z002	V47:Z002	UA	UR	9999	JA9999	UR9999
V47:Z003	V47:Z003	UA	UR	9999	JA9999	UR9999
V47:Z004	V47:Z004	UA	UR	9999	JA9999	UR9999
V47:Z005	V47:Z005	UA	UR	9999	JA9999	UR9999
V47:Z006	V47:Z006	UA	UR	9999	JA9999	UR9999
V47:Z007	V47:Z007	UA	UR	9999	JA9999	UR9999
V47:Z008	V47:Z008	UA	UR	9999	JA9999	UR9999
V47:Z009	V47:Z009	UA	UR	9999	JA9999	UR9999
V47:Z010	V47:Z010	UA	UR	9999	JA9999	UR9999
V47:Z011	V47:Z011	UA	UR	9999	JA9999	UR9999
V47:Z012	V47:Z012	UA	UR	9999	JA9999	UR9999
V47:Z013	V47:Z013	UA	UR	9999	JA9999	UR9999
V47:Z014	V47:Z014	UA	UR	9999	JA9999	UR9999
V47:Z015	V47:Z015	UA	UR	9999	JA9999	UR9999
V47:Z016	V47:Z016	UA	UR	9999	JA9999	UR9999
V47:Z017	V47:Z017	UA	UR	9999	JA9999	UR9999
V47:Z018	V47:Z018	UA	UR	9999	JA9999	UR9999
V47:Z019	V47:Z019	UA	UR	9999	JA9999	UR9999
V47:Z020	V47:Z020	UA	UR	9999	JA9999	UR9999
V47:Z021	V47:Z021	UA	UR	9999	JA9999	UR9999
V47:Z022	V47:Z022	UA	UR	9999	JA9999	UR9999
V47:Z023	V47:Z023	UA	UR	9999	JA9999	UR9999
V47:Z024	V47:Z024	UA	UR	9999	JA9999	UR9999
V47:Z025	V47:Z025	UA	UR	9999	JA9999	UR9999
V47:Z026	V47:Z026	UA	UR	9999	JA9999	UR9999
V47:Z027	V47:Z027	UA	UR	9999	JA9999	UR9999
V47:Z028	V47:Z028	UA	UR	9999	JA9999	UR9999
V47:Z029	V47:Z029	UA	UR	9999	JA9999	UR9999
V47:Z030	V47:Z030	UA	UR	9999	JA9999	UR9999
V47:Z031	V47:Z031	UA	UR	9999	JA9999	UR9999
V47:Z032	V47:Z032	UA	UR	9999	JA9999	UR9999
V48:Z001	V48:Z001	UA	UR	9999	JA9999	UR9999
V48:Z002	V48:Z002	UA	UR	9999	JA9999	UR9999
V48:Z003	V48:Z003	UA	UR	9999	JA9999	UR9999
V48:Z004	V48:Z004	UA	UR	9999	JA9999	UR9999
V48:Z005	V48:Z005	UA	UR	9999	JA9999	UR9999
V48:Z006	V48:Z006	UA	UR	9999	JA9999	UR9999
V48:Z007	V48:Z007	UA	UR	9999	JA9999	UR9999
V48:Z008	V48:Z008	UA	UR	9999	JA9999	UR9999
V48:Z009	V48:Z009	UA	UR	9999	JA9999	UR9999
V48:Z010	V48:Z010	UA	UR	9999	JA9999	UR9999
V48:Z011	V48:Z011	UA	UR	9999	JA9999	UR9999
V48:Z012	V48:Z012	UA	UR	9999	JA9999	UR9999
V48:Z013	V48:Z013	UA	UR	9999	JA9999	UR9999
V48:Z014	V48:Z014	UA	UR	9999	JA9999	UR9999
V48:Z015	V48:Z015	UA	UR	9999	JA9999	UR9999
V48:Z016	V48:Z016	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V48:Z017	V48:Z017	UA	UR	9999	JA9999	UR9999
V48:Z018	V48:Z018	UA	UR	9999	JA9999	UR9999
V48:Z019	V48:Z019	UA	UR	9999	JA9999	UR9999
V48:Z020	V48:Z020	UA	UR	9999	JA9999	UR9999
V48:Z021	V48:Z021	UA	UR	9999	JA9999	UR9999
V48:Z022	V48:Z022	UA	UR	9999	JA9999	UR9999
V48:Z023	V48:Z023	UA	UR	9999	JA9999	UR9999
V48:Z024	V48:Z024	UA	UR	9999	JA9999	UR9999
V48:Z025	V48:Z025	UA	UR	9999	JA9999	UR9999
V48:Z026	V48:Z026	UA	UR	9999	JA9999	UR9999
V48:Z027	V48:Z027	UA	UR	9999	JA9999	UR9999
V48:Z028	V48:Z028	UA	UR	9999	JA9999	UR9999
V48:Z029	V48:Z029	UA	UR	9999	JA9999	UR9999
V48:Z030	V48:Z030	UA	UR	9999	JA9999	UR9999
V48:Z031	V48:Z031	UA	UR	9999	JA9999	UR9999
V48:Z032	V48:Z032	UA	UR	9999	JA9999	UR9999
V49:Z001	V49:Z001	UA	UR	9999	JA9999	UR9999
V49:Z002	V49:Z002	UA	UR	9999	JA9999	UR9999
V49:Z003	V49:Z003	UA	UR	9999	JA9999	UR9999
V49:Z004	V49:Z004	UA	UR	9999	JA9999	UR9999
V49:Z005	V49:Z005	UA	UR	9999	JA9999	UR9999
V49:Z006	V49:Z006	UA	UR	9999	JA9999	UR9999
V49:Z007	V49:Z007	UA	UR	9999	JA9999	UR9999
V49:Z008	V49:Z008	UA	UR	9999	JA9999	UR9999
V49:Z009	V49:Z009	UA	UR	9999	JA9999	UR9999
V49:Z010	V49:Z010	UA	UR	9999	JA9999	UR9999
V49:Z011	V49:Z011	UA	UR	9999	JA9999	UR9999
V49:Z012	V49:Z012	UA	UR	9999	JA9999	UR9999
V49:Z013	V49:Z013	UA	UR	9999	JA9999	UR9999
V49:Z014	V49:Z014	UA	UR	9999	JA9999	UR9999
V49:Z015	V49:Z015	UA	UR	9999	JA9999	UR9999
V49:Z016	V49:Z016	UA	UR	9999	JA9999	UR9999
V49:Z017	V49:Z017	UA	UR	9999	JA9999	UR9999
V49:Z018	V49:Z018	UA	UR	9999	JA9999	UR9999
V49:Z019	V49:Z019	UA	UR	9999	JA9999	UR9999
V49:Z020	V49:Z020	UA	UR	9999	JA9999	UR9999
V49:Z021	V49:Z021	UA	UR	9999	JA9999	UR9999
V49:Z022	V49:Z022	UA	UR	9999	JA9999	UR9999
V49:Z023	V49:Z023	UA	UR	9999	JA9999	UR9999
V49:Z024	V49:Z024	UA	UR	9999	JA9999	UR9999
V49:Z025	V49:Z025	UA	UR	9999	JA9999	UR9999
V49:Z026	V49:Z026	UA	UR	9999	JA9999	UR9999
V49:Z027	V49:Z027	UA	UR	9999	JA9999	UR9999
V49:Z028	V49:Z028	UA	UR	9999	JA9999	UR9999
V49:Z029	V49:Z029	UA	UR	9999	JA9999	UR9999
V49:Z030	V49:Z030	UA	UR	9999	JA9999	UR9999
V49:Z031	V49:Z031	UA	UR	9999	JA9999	UR9999
V49:Z032	V49:Z032	UA	UR	9999	JA9999	UR9999
V50:Z001	V50:Z001	UA	UR	9999	JA9999	UR9999
V50:Z002	V50:Z002	UA	UR	9999	JA9999	UR9999
V50:Z003	V50:Z003	UA	UR	9999	JA9999	UR9999
V50:Z004	V50:Z004	UA	UR	9999	JA9999	UR9999
V50:Z005	V50:Z005	UA	UR	9999	JA9999	UR9999
V50:Z006	V50:Z006	UA	UR	9999	JA9999	UR9999
V50:Z007	V50:Z007	UA	UR	9999	JA9999	UR9999
V50:Z008	V50:Z008	UA	UR	9999	JA9999	UR9999
V50:Z009	V50:Z009	UA	UR	9999	JA9999	UR9999
V50:Z010	V50:Z010	UA	UR	9999	JA9999	UR9999
V50:Z011	V50:Z011	UA	UR	9999	JA9999	UR9999
V50:Z012	V50:Z012	UA	UR	9999	JA9999	UR9999
V50:Z013	V50:Z013	UA	UR	9999	JA9999	UR9999
V50:Z014	V50:Z014	UA	UR	9999	JA9999	UR9999
V50:Z015	V50:Z015	UA	UR	9999	JA9999	UR9999
V50:Z016	V50:Z016	UA	UR	9999	JA9999	UR9999
V50:Z017	V50:Z017	UA	UR	9999	JA9999	UR9999
V50:Z018	V50:Z018	UA	UR	9999	JA9999	UR9999
V50:Z019	V50:Z019	UA	UR	9999	JA9999	UR9999
V50:Z020	V50:Z020	UA	UR	9999	JA9999	UR9999
V50:Z021	V50:Z021	UA	UR	9999	JA9999	UR9999
V50:Z022	V50:Z022	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V50:Z023	V50:Z023	UA	UR	9999	UA9999	UR9999
V50:Z024	V50:Z024	UA	UR	9999	UA9999	UR9999
V50:Z025	V50:Z025	UA	UR	9999	UA9999	UR9999
V50:Z026	V50:Z026	UA	UR	9999	UA9999	UR9999
V50:Z027	V50:Z027	UA	UR	9999	UA9999	UR9999
V50:Z028	V50:Z028	UA	UR	9999	UA9999	UR9999
V50:Z029	V50:Z029	UA	UR	9999	UA9999	UR9999
V50:Z030	V50:Z030	UA	UR	9999	UA9999	UR9999
V50:Z031	V50:Z031	UA	UR	9999	UA9999	UR9999
V50:Z032	V50:Z032	UA	UR	9999	UA9999	UR9999
V51:Z001	V51:Z001	UA	UR	9999	UA9999	UR9999
V51:Z002	V51:Z002	UA	UR	9999	UA9999	UR9999
V51:Z003	V51:Z003	UA	UR	9999	UA9999	UR9999
V51:Z004	V51:Z004	UA	UR	9999	UA9999	UR9999
V51:Z005	V51:Z005	UA	UR	9999	UA9999	UR9999
V51:Z006	V51:Z006	UA	UR	9999	UA9999	UR9999
V51:Z007	V51:Z007	UA	UR	9999	UA9999	UR9999
V51:Z008	V51:Z008	UA	UR	9999	UA9999	UR9999
V51:Z009	V51:Z009	UA	UR	9999	UA9999	UR9999
V51:Z010	V51:Z010	UA	UR	9999	UA9999	UR9999
V51:Z011	V51:Z011	UA	UR	9999	UA9999	UR9999
V51:Z012	V51:Z012	UA	UR	9999	UA9999	UR9999
V51:Z013	V51:Z013	UA	UR	9999	UA9999	UR9999
V51:Z014	V51:Z014	UA	UR	9999	UA9999	UR9999
V51:Z015	V51:Z015	UA	UR	9999	UA9999	UR9999
V51:Z016	V51:Z016	UA	UR	9999	UA9999	UR9999
V51:Z017	V51:Z017	UA	UR	9999	UA9999	UR9999
V51:Z018	V51:Z018	UA	UR	9999	UA9999	UR9999
V51:Z019	V51:Z019	UA	UR	9999	UA9999	UR9999
V51:Z020	V51:Z020	UA	UR	9999	UA9999	UR9999
V51:Z021	V51:Z021	UA	UR	9999	UA9999	UR9999
V51:Z022	V51:Z022	UA	UR	9999	UA9999	UR9999
V51:Z023	V51:Z023	UA	UR	9999	UA9999	UR9999
V51:Z024	V51:Z024	UA	UR	9999	UA9999	UR9999
V51:Z025	V51:Z025	UA	UR	9999	UA9999	UR9999
V51:Z026	V51:Z026	UA	UR	9999	UA9999	UR9999
V51:Z027	V51:Z027	UA	UR	9999	UA9999	UR9999
V51:Z028	V51:Z028	UA	UR	9999	UA9999	UR9999
V51:Z029	V51:Z029	UA	UR	9999	UA9999	UR9999
V51:Z030	V51:Z030	UA	UR	9999	UA9999	UR9999
V51:Z031	V51:Z031	UA	UR	9999	UA9999	UR9999
V51:Z032	V51:Z032	UA	UR	9999	UA9999	UR9999
V52:Z001	V52:Z001	UA	UR	9999	UA9999	UR9999
V52:Z002	V52:Z002	UA	UR	9999	UA9999	UR9999
V52:Z003	V52:Z003	UA	UR	9999	UA9999	UR9999
V52:Z004	V52:Z004	UA	UR	9999	UA9999	UR9999
V52:Z005	V52:Z005	UA	UR	9999	UA9999	UR9999
V52:Z006	V52:Z006	UA	UR	9999	UA9999	UR9999
V52:Z007	V52:Z007	UA	UR	9999	UA9999	UR9999
V52:Z008	V52:Z008	UA	UR	9999	UA9999	UR9999
V52:Z009	V52:Z009	UA	UR	9999	UA9999	UR9999
V52:Z010	V52:Z010	UA	UR	9999	UA9999	UR9999
V52:Z011	V52:Z011	UA	UR	9999	UA9999	UR9999
V52:Z012	V52:Z012	UA	UR	9999	UA9999	UR9999
V52:Z013	V52:Z013	UA	UR	9999	UA9999	UR9999
V52:Z014	V52:Z014	UA	UR	9999	UA9999	UR9999
V52:Z015	V52:Z015	UA	UR	9999	UA9999	UR9999
V52:Z016	V52:Z016	UA	UR	9999	UA9999	UR9999
V52:Z017	V52:Z017	UA	UR	9999	UA9999	UR9999
V52:Z018	V52:Z018	UA	UR	9999	UA9999	UR9999
V52:Z019	V52:Z019	UA	UR	9999	UA9999	UR9999
V52:Z020	V52:Z020	UA	UR	9999	UA9999	UR9999
V52:Z021	V52:Z021	UA	UR	9999	UA9999	UR9999
V52:Z022	V52:Z022	UA	UR	9999	UA9999	UR9999
V52:Z023	V52:Z023	UA	UR	9999	UA9999	UR9999
V52:Z024	V52:Z024	UA	UR	9999	UA9999	UR9999
V52:Z025	V52:Z025	UA	UR	9999	UA9999	UR9999
V52:Z026	V52:Z026	UA	UR	9999	UA9999	UR9999
V52:Z027	V52:Z027	UA	UR	9999	UA9999	UR9999
V52:Z028	V52:Z028	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

V52:Z029	V52:Z029	UA	UR	9999	JA9999	UR9999
V52:Z030	V52:Z030	UA	UR	9999	JA9999	UR9999
V52:Z031	V52:Z031	UA	UR	9999	JA9999	UR9999
V52:Z032	V52:Z032	UA	UR	9999	JA9999	UR9999
V53:Z001	V53:Z001	UA	UR	9999	JA9999	UR9999
V53:Z002	V53:Z002	UA	UR	9999	JA9999	UR9999
V53:Z003	V53:Z003	UA	UR	9999	JA9999	UR9999
V53:Z004	V53:Z004	UA	UR	9999	JA9999	UR9999
V53:Z005	V53:Z005	UA	UR	9999	JA9999	UR9999
V53:Z006	V53:Z006	UA	UR	9999	JA9999	UR9999
V53:Z007	V53:Z007	UA	UR	9999	JA9999	UR9999
V53:Z008	V53:Z008	UA	UR	9999	JA9999	UR9999
V53:Z009	V53:Z009	UA	UR	9999	JA9999	UR9999
V53:Z010	V53:Z010	UA	UR	9999	JA9999	UR9999
V53:Z011	V53:Z011	UA	UR	9999	JA9999	UR9999
V53:Z012	V53:Z012	UA	UR	9999	JA9999	UR9999
V53:Z013	V53:Z013	UA	UR	9999	JA9999	UR9999
V53:Z014	V53:Z014	UA	UR	9999	JA9999	UR9999
V53:Z015	V53:Z015	UA	UR	9999	JA9999	UR9999
V53:Z016	V53:Z016	UA	UR	9999	JA9999	UR9999
V53:Z017	V53:Z017	UA	UR	9999	JA9999	UR9999
V53:Z018	V53:Z018	UA	UR	9999	JA9999	UR9999
V53:Z019	V53:Z019	UA	UR	9999	JA9999	UR9999
V53:Z020	V53:Z020	UA	UR	9999	JA9999	UR9999
V53:Z021	V53:Z021	UA	UR	9999	JA9999	UR9999
V53:Z022	V53:Z022	UA	UR	9999	JA9999	UR9999
V53:Z023	V53:Z023	UA	UR	9999	JA9999	UR9999
V53:Z024	V53:Z024	UA	UR	9999	JA9999	UR9999
V53:Z025	V53:Z025	UA	UR	9999	JA9999	UR9999
V53:Z026	V53:Z026	UA	UR	9999	JA9999	UR9999
V53:Z027	V53:Z027	UA	UR	9999	JA9999	UR9999
V53:Z028	V53:Z028	UA	UR	9999	JA9999	UR9999
V53:Z029	V53:Z029	UA	UR	9999	JA9999	UR9999
V53:Z030	V53:Z030	UA	UR	9999	JA9999	UR9999
V53:Z031	V53:Z031	UA	UR	9999	JA9999	UR9999
V53:Z032	V53:Z032	UA	UR	9999	JA9999	UR9999
V54:Z001	V54:Z001	UA	UR	9999	JA9999	UR9999
V54:Z002	V54:Z002	UA	UR	9999	JA9999	UR9999
V54:Z003	V54:Z003	UA	UR	9999	JA9999	UR9999
V54:Z004	V54:Z004	UA	UR	9999	JA9999	UR9999
V54:Z005	V54:Z005	UA	UR	9999	JA9999	UR9999
V54:Z006	V54:Z006	UA	UR	9999	JA9999	UR9999
V54:Z007	V54:Z007	UA	UR	9999	JA9999	UR9999
V54:Z008	V54:Z008	UA	UR	9999	JA9999	UR9999
V54:Z009	V54:Z009	UA	UR	9999	JA9999	UR9999
V54:Z010	V54:Z010	UA	UR	9999	JA9999	UR9999
V54:Z011	V54:Z011	UA	UR	9999	JA9999	UR9999
V54:Z012	V54:Z012	UA	UR	9999	JA9999	UR9999
V54:Z013	V54:Z013	UA	UR	9999	JA9999	UR9999
V54:Z014	V54:Z014	UA	UR	9999	JA9999	UR9999
V54:Z015	V54:Z015	UA	UR	9999	JA9999	UR9999
V54:Z016	V54:Z016	UA	UR	9999	JA9999	UR9999
V54:Z017	V54:Z017	UA	UR	9999	JA9999	UR9999
V54:Z018	V54:Z018	UA	UR	9999	JA9999	UR9999
V54:Z019	V54:Z019	UA	UR	9999	JA9999	UR9999
V54:Z020	V54:Z020	UA	UR	9999	JA9999	UR9999
V54:Z021	V54:Z021	UA	UR	9999	JA9999	UR9999
V54:Z022	V54:Z022	UA	UR	9999	JA9999	UR9999
V54:Z023	V54:Z023	UA	UR	9999	JA9999	UR9999
V54:Z024	V54:Z024	UA	UR	9999	JA9999	UR9999
V54:Z025	V54:Z025	UA	UR	9999	JA9999	UR9999
V54:Z026	V54:Z026	UA	UR	9999	JA9999	UR9999
V54:Z027	V54:Z027	UA	UR	9999	JA9999	UR9999
V54:Z028	V54:Z028	UA	UR	9999	JA9999	UR9999
V54:Z029	V54:Z029	UA	UR	9999	JA9999	UR9999
V54:Z030	V54:Z030	UA	UR	9999	JA9999	UR9999
V54:Z031	V54:Z031	UA	UR	9999	JA9999	UR9999
V54:Z032	V54:Z032	UA	UR	9999	JA9999	UR9999
V55:Z001	V55:Z001	UA	UR	9999	JA9999	UR9999
V55:Z002	V55:Z002	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V55:Z003	V55:Z003	UA	UR	9999	JA9999	UR9999
V55:Z004	V55:Z004	UA	UR	9999	JA9999	UR9999
V55:Z005	V55:Z005	UA	UR	9999	JA9999	UR9999
V55:Z006	V55:Z006	UA	UR	9999	JA9999	UR9999
V55:Z007	V55:Z007	UA	UR	9999	JA9999	UR9999
V55:Z008	V55:Z008	UA	UR	9999	JA9999	UR9999
V55:Z009	V55:Z009	UA	UR	9999	JA9999	UR9999
V55:Z010	V55:Z010	UA	UR	9999	JA9999	UR9999
V55:Z011	V55:Z011	UA	UR	9999	JA9999	UR9999
V55:Z012	V55:Z012	UA	UR	9999	JA9999	UR9999
V55:Z013	V55:Z013	UA	UR	9999	JA9999	UR9999
V55:Z014	V55:Z014	UA	UR	9999	JA9999	UR9999
V55:Z015	V55:Z015	UA	UR	9999	JA9999	UR9999
V55:Z016	V55:Z016	UA	UR	9999	JA9999	UR9999
V55:Z017	V55:Z017	UA	UR	9999	JA9999	UR9999
V55:Z018	V55:Z018	UA	UR	9999	JA9999	UR9999
V55:Z019	V55:Z019	UA	UR	9999	JA9999	UR9999
V55:Z020	V55:Z020	UA	UR	9999	JA9999	UR9999
V55:Z021	V55:Z021	UA	UR	9999	JA9999	UR9999
V55:Z022	V55:Z022	UA	UR	9999	JA9999	UR9999
V55:Z023	V55:Z023	UA	UR	9999	JA9999	UR9999
V55:Z024	V55:Z024	UA	UR	9999	JA9999	UR9999
V55:Z025	V55:Z025	UA	UR	9999	JA9999	UR9999
V55:Z026	V55:Z026	UA	UR	9999	JA9999	UR9999
V55:Z027	V55:Z027	UA	UR	9999	JA9999	UR9999
V55:Z028	V55:Z028	UA	UR	9999	JA9999	UR9999
V55:Z029	V55:Z029	UA	UR	9999	JA9999	UR9999
V55:Z030	V55:Z030	UA	UR	9999	JA9999	UR9999
V55:Z031	V55:Z031	UA	UR	9999	JA9999	UR9999
V55:Z032	V55:Z032	UA	UR	9999	JA9999	UR9999
V56:Z001	V56:Z001	UA	UR	9999	JA9999	UR9999
V56:Z002	V56:Z002	UA	UR	9999	JA9999	UR9999
V56:Z003	V56:Z003	UA	UR	9999	JA9999	UR9999
V56:Z004	V56:Z004	UA	UR	9999	JA9999	UR9999
V56:Z005	V56:Z005	UA	UR	9999	JA9999	UR9999
V56:Z006	V56:Z006	UA	UR	9999	JA9999	UR9999
V56:Z007	V56:Z007	UA	UR	9999	JA9999	UR9999
V56:Z008	V56:Z008	UA	UR	9999	JA9999	UR9999
V56:Z009	V56:Z009	UA	UR	9999	JA9999	UR9999
V56:Z010	V56:Z010	UA	UR	9999	JA9999	UR9999
V56:Z011	V56:Z011	UA	UR	9999	JA9999	UR9999
V56:Z012	V56:Z012	UA	UR	9999	JA9999	UR9999
V56:Z013	V56:Z013	UA	UR	9999	JA9999	UR9999
V56:Z014	V56:Z014	UA	UR	9999	JA9999	UR9999
V56:Z015	V56:Z015	UA	UR	9999	JA9999	UR9999
V56:Z016	V56:Z016	UA	UR	9999	JA9999	UR9999
V56:Z017	V56:Z017	UA	UR	9999	JA9999	UR9999
V56:Z018	V56:Z018	UA	UR	9999	JA9999	UR9999
V56:Z019	V56:Z019	UA	UR	9999	JA9999	UR9999
V56:Z020	V56:Z020	UA	UR	9999	JA9999	UR9999
V56:Z021	V56:Z021	UA	UR	9999	JA9999	UR9999
V56:Z022	V56:Z022	UA	UR	9999	JA9999	UR9999
V56:Z023	V56:Z023	UA	UR	9999	JA9999	UR9999
V56:Z024	V56:Z024	UA	UR	9999	JA9999	UR9999
V56:Z025	V56:Z025	UA	UR	9999	JA9999	UR9999
V56:Z026	V56:Z026	UA	UR	9999	JA9999	UR9999
V56:Z027	V56:Z027	UA	UR	9999	JA9999	UR9999
V56:Z028	V56:Z028	UA	UR	9999	JA9999	UR9999
V56:Z029	V56:Z029	UA	UR	9999	JA9999	UR9999
V56:Z030	V56:Z030	UA	UR	9999	JA9999	UR9999
V56:Z031	V56:Z031	UA	UR	9999	JA9999	UR9999
V56:Z032	V56:Z032	UA	UR	9999	JA9999	UR9999
V57:Z001	V57:Z001	UA	UR	9999	JA9999	UR9999
V57:Z002	V57:Z002	UA	UR	9999	JA9999	UR9999
V57:Z003	V57:Z003	UA	UR	9999	JA9999	UR9999
V57:Z004	V57:Z004	UA	UR	9999	JA9999	UR9999
V57:Z005	V57:Z005	UA	UR	9999	JA9999	UR9999
V57:Z006	V57:Z006	UA	UR	9999	JA9999	UR9999
V57:Z007	V57:Z007	UA	UR	9999	JA9999	UR9999
V57:Z008	V57:Z008	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V57:Z009	V57:Z009	UA	UR	9999	JA9999	UR9999
V57:Z010	V57:Z010	UA	UR	9999	JA9999	UR9999
V57:Z011	V57:Z011	UA	UR	9999	JA9999	UR9999
V57:Z012	V57:Z012	UA	UR	9999	JA9999	UR9999
V57:Z013	V57:Z013	UA	UR	9999	JA9999	UR9999
V57:Z014	V57:Z014	UA	UR	9999	JA9999	UR9999
V57:Z015	V57:Z015	UA	UR	9999	JA9999	UR9999
V57:Z016	V57:Z016	UA	UR	9999	JA9999	UR9999
V57:Z017	V57:Z017	UA	UR	9999	JA9999	UR9999
V57:Z018	V57:Z018	UA	UR	9999	JA9999	UR9999
V57:Z019	V57:Z019	UA	UR	9999	JA9999	UR9999
V57:Z020	V57:Z020	UA	UR	9999	JA9999	UR9999
V57:Z021	V57:Z021	UA	UR	9999	JA9999	UR9999
V57:Z022	V57:Z022	UA	UR	9999	JA9999	UR9999
V57:Z023	V57:Z023	UA	UR	9999	JA9999	UR9999
V57:Z024	V57:Z024	UA	UR	9999	JA9999	UR9999
V57:Z025	V57:Z025	UA	UR	9999	JA9999	UR9999
V57:Z026	V57:Z026	UA	UR	9999	JA9999	UR9999
V57:Z027	V57:Z027	UA	UR	9999	JA9999	UR9999
V57:Z028	V57:Z028	UA	UR	9999	JA9999	UR9999
V57:Z029	V57:Z029	UA	UR	9999	JA9999	UR9999
V57:Z030	V57:Z030	UA	UR	9999	JA9999	UR9999
V57:Z031	V57:Z031	UA	UR	9999	JA9999	UR9999
V57:Z032	V57:Z032	UA	UR	9999	JA9999	UR9999
V58:Z001	V58:Z001	UA	UR	9999	JA9999	UR9999
V58:Z002	V58:Z002	UA	UR	9999	JA9999	UR9999
V58:Z003	V58:Z003	UA	UR	9999	JA9999	UR9999
V58:Z004	V58:Z004	UA	UR	9999	JA9999	UR9999
V58:Z005	V58:Z005	UA	UR	9999	JA9999	UR9999
V58:Z006	V58:Z006	UA	UR	9999	JA9999	UR9999
V58:Z007	V58:Z007	UA	UR	9999	JA9999	UR9999
V58:Z008	V58:Z008	UA	UR	9999	JA9999	UR9999
V58:Z009	V58:Z009	UA	UR	9999	JA9999	UR9999
V58:Z010	V58:Z010	UA	UR	9999	JA9999	UR9999
V58:Z011	V58:Z011	UA	UR	9999	JA9999	UR9999
V58:Z012	V58:Z012	UA	UR	9999	JA9999	UR9999
V58:Z013	V58:Z013	UA	UR	9999	JA9999	UR9999
V58:Z014	V58:Z014	UA	UR	9999	JA9999	UR9999
V58:Z015	V58:Z015	UA	UR	9999	JA9999	UR9999
V58:Z016	V58:Z016	UA	UR	9999	JA9999	UR9999
V58:Z017	V58:Z017	UA	UR	9999	JA9999	UR9999
V58:Z018	V58:Z018	UA	UR	9999	JA9999	UR9999
V58:Z019	V58:Z019	UA	UR	9999	JA9999	UR9999
V58:Z020	V58:Z020	UA	UR	9999	JA9999	UR9999
V58:Z021	V58:Z021	UA	UR	9999	JA9999	UR9999
V58:Z022	V58:Z022	UA	UR	9999	JA9999	UR9999
V58:Z023	V58:Z023	UA	UR	9999	JA9999	UR9999
V58:Z024	V58:Z024	UA	UR	9999	JA9999	UR9999
V58:Z025	V58:Z025	UA	UR	9999	JA9999	UR9999
V58:Z026	V58:Z026	UA	UR	9999	JA9999	UR9999
V58:Z027	V58:Z027	UA	UR	9999	JA9999	UR9999
V58:Z028	V58:Z028	UA	UR	9999	JA9999	UR9999
V58:Z029	V58:Z029	UA	UR	9999	JA9999	UR9999
V58:Z030	V58:Z030	UA	UR	9999	JA9999	UR9999
V58:Z031	V58:Z031	UA	UR	9999	JA9999	UR9999
V58:Z032	V58:Z032	UA	UR	9999	JA9999	UR9999
V59:Z001	V59:Z001	UA	UR	9999	JA9999	UR9999
V59:Z002	V59:Z002	UA	UR	9999	JA9999	UR9999
V59:Z003	V59:Z003	UA	UR	9999	JA9999	UR9999
V59:Z004	V59:Z004	UA	UR	9999	JA9999	UR9999
V59:Z005	V59:Z005	UA	UR	9999	JA9999	UR9999
V59:Z006	V59:Z006	UA	UR	9999	JA9999	UR9999
V59:Z007	V59:Z007	UA	UR	9999	JA9999	UR9999
V59:Z008	V59:Z008	UA	UR	9999	JA9999	UR9999
V59:Z009	V59:Z009	UA	UR	9999	JA9999	UR9999
V59:Z010	V59:Z010	UA	UR	9999	JA9999	UR9999
V59:Z011	V59:Z011	UA	UR	9999	JA9999	UR9999
V59:Z012	V59:Z012	UA	UR	9999	JA9999	UR9999
V59:Z013	V59:Z013	UA	UR	9999	JA9999	UR9999
V59:Z014	V59:Z014	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V59:Z015	V59:Z015	UA	UR	9999	JA9999	UR9999
V59:Z016	V59:Z016	UA	UR	9999	JA9999	UR9999
V59:Z017	V59:Z017	UA	UR	9999	JA9999	UR9999
V59:Z018	V59:Z018	UA	UR	9999	JA9999	UR9999
V59:Z019	V59:Z019	UA	UR	9999	JA9999	UR9999
V59:Z020	V59:Z020	UA	UR	9999	JA9999	UR9999
V59:Z021	V59:Z021	UA	UR	9999	JA9999	UR9999
V59:Z022	V59:Z022	UA	UR	9999	JA9999	UR9999
V59:Z023	V59:Z023	UA	UR	9999	JA9999	UR9999
V59:Z024	V59:Z024	UA	UR	9999	JA9999	UR9999
V59:Z025	V59:Z025	UA	UR	9999	JA9999	UR9999
V59:Z026	V59:Z026	UA	UR	9999	JA9999	UR9999
V59:Z027	V59:Z027	UA	UR	9999	JA9999	UR9999
V59:Z028	V59:Z028	UA	UR	9999	JA9999	UR9999
V59:Z029	V59:Z029	UA	UR	9999	JA9999	UR9999
V59:Z030	V59:Z030	UA	UR	9999	JA9999	UR9999
V59:Z031	V59:Z031	UA	UR	9999	JA9999	UR9999
V59:Z032	V59:Z032	UA	UR	9999	JA9999	UR9999
V60:Z001	V60:Z001	UA	UR	9999	JA9999	UR9999
V60:Z002	V60:Z002	UA	UR	9999	JA9999	UR9999
V60:Z003	V60:Z003	UA	UR	9999	JA9999	UR9999
V60:Z004	V60:Z004	UA	UR	9999	JA9999	UR9999
V60:Z005	V60:Z005	UA	UR	9999	JA9999	UR9999
V60:Z006	V60:Z006	UA	UR	9999	JA9999	UR9999
V60:Z007	V60:Z007	UA	UR	9999	JA9999	UR9999
V60:Z008	V60:Z008	UA	UR	9999	JA9999	UR9999
V60:Z009	V60:Z009	UA	UR	9999	JA9999	UR9999
V60:Z010	V60:Z010	UA	UR	9999	JA9999	UR9999
V60:Z011	V60:Z011	UA	UR	9999	JA9999	UR9999
V60:Z012	V60:Z012	UA	UR	9999	JA9999	UR9999
V60:Z013	V60:Z013	UA	UR	9999	JA9999	UR9999
V60:Z014	V60:Z014	UA	UR	9999	JA9999	UR9999
V60:Z015	V60:Z015	UA	UR	9999	JA9999	UR9999
V60:Z016	V60:Z016	UA	UR	9999	JA9999	UR9999
V60:Z017	V60:Z017	UA	UR	9999	JA9999	UR9999
V60:Z018	V60:Z018	UA	UR	9999	JA9999	UR9999
V60:Z019	V60:Z019	UA	UR	9999	JA9999	UR9999
V60:Z020	V60:Z020	UA	UR	9999	JA9999	UR9999
V60:Z021	V60:Z021	UA	UR	9999	JA9999	UR9999
V60:Z022	V60:Z022	UA	UR	9999	JA9999	UR9999
V60:Z023	V60:Z023	UA	UR	9999	JA9999	UR9999
V60:Z024	V60:Z024	UA	UR	9999	JA9999	UR9999
V60:Z025	V60:Z025	UA	UR	9999	JA9999	UR9999
V60:Z026	V60:Z026	UA	UR	9999	JA9999	UR9999
V60:Z027	V60:Z027	UA	UR	9999	JA9999	UR9999
V60:Z028	V60:Z028	UA	UR	9999	JA9999	UR9999
V60:Z029	V60:Z029	UA	UR	9999	JA9999	UR9999
V60:Z030	V60:Z030	UA	UR	9999	JA9999	UR9999
V60:Z031	V60:Z031	UA	UR	9999	JA9999	UR9999
V60:Z032	V60:Z032	UA	UR	9999	JA9999	UR9999
V61:Z001	V61:Z001	UA	UR	9999	JA9999	UR9999
V61:Z002	V61:Z002	UA	UR	9999	JA9999	UR9999
V61:Z003	V61:Z003	UA	UR	9999	JA9999	UR9999
V61:Z004	V61:Z004	UA	UR	9999	JA9999	UR9999
V61:Z005	V61:Z005	UA	UR	9999	JA9999	UR9999
V61:Z006	V61:Z006	UA	UR	9999	JA9999	UR9999
V61:Z007	V61:Z007	UA	UR	9999	JA9999	UR9999
V61:Z008	V61:Z008	UA	UR	9999	JA9999	UR9999
V61:Z009	V61:Z009	UA	UR	9999	JA9999	UR9999
V61:Z010	V61:Z010	UA	UR	9999	JA9999	UR9999
V61:Z011	V61:Z011	UA	UR	9999	JA9999	UR9999
V61:Z012	V61:Z012	UA	UR	9999	JA9999	UR9999
V61:Z013	V61:Z013	UA	UR	9999	JA9999	UR9999
V61:Z014	V61:Z014	UA	UR	9999	JA9999	UR9999
V61:Z015	V61:Z015	UA	UR	9999	JA9999	UR9999
V61:Z016	V61:Z016	UA	UR	9999	JA9999	UR9999
V61:Z017	V61:Z017	UA	UR	9999	JA9999	UR9999
V61:Z018	V61:Z018	UA	UR	9999	JA9999	UR9999
V61:Z019	V61:Z019	UA	UR	9999	JA9999	UR9999
V61:Z020	V61:Z020	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V61:Z021	V61:Z021	UA	UR	9999	UA9999	UR9999
V61:Z022	V61:Z022	UA	UR	9999	UA9999	UR9999
V61:Z023	V61:Z023	UA	UR	9999	UA9999	UR9999
V61:Z024	V61:Z024	UA	UR	9999	UA9999	UR9999
V61:Z025	V61:Z025	UA	UR	9999	UA9999	UR9999
V61:Z026	V61:Z026	UA	UR	9999	UA9999	UR9999
V61:Z027	V61:Z027	UA	UR	9999	UA9999	UR9999
V61:Z028	V61:Z028	UA	UR	9999	UA9999	UR9999
V61:Z029	V61:Z029	UA	UR	9999	UA9999	UR9999
V61:Z030	V61:Z030	UA	UR	9999	UA9999	UR9999
V61:Z031	V61:Z031	UA	UR	9999	UA9999	UR9999
V61:Z032	V61:Z032	UA	UR	9999	UA9999	UR9999
V62:Z001	V62:Z001	UA	UR	9999	UA9999	UR9999
V62:Z002	V62:Z002	UA	UR	9999	UA9999	UR9999
V62:Z003	V62:Z003	UA	UR	9999	UA9999	UR9999
V62:Z004	V62:Z004	UA	UR	9999	UA9999	UR9999
V62:Z005	V62:Z005	UA	UR	9999	UA9999	UR9999
V62:Z006	V62:Z006	UA	UR	9999	UA9999	UR9999
V62:Z007	V62:Z007	UA	UR	9999	UA9999	UR9999
V62:Z008	V62:Z008	UA	UR	9999	UA9999	UR9999
V62:Z009	V62:Z009	UA	UR	9999	UA9999	UR9999
V62:Z010	V62:Z010	UA	UR	9999	UA9999	UR9999
V62:Z011	V62:Z011	UA	UR	9999	UA9999	UR9999
V62:Z012	V62:Z012	UA	UR	9999	UA9999	UR9999
V62:Z013	V62:Z013	UA	UR	9999	UA9999	UR9999
V62:Z014	V62:Z014	UA	UR	9999	UA9999	UR9999
V62:Z015	V62:Z015	UA	UR	9999	UA9999	UR9999
V62:Z016	V62:Z016	UA	UR	9999	UA9999	UR9999
V62:Z017	V62:Z017	UA	UR	9999	UA9999	UR9999
V62:Z018	V62:Z018	UA	UR	9999	UA9999	UR9999
V62:Z019	V62:Z019	UA	UR	9999	UA9999	UR9999
V62:Z020	V62:Z020	UA	UR	9999	UA9999	UR9999
V62:Z021	V62:Z021	UA	UR	9999	UA9999	UR9999
V62:Z022	V62:Z022	UA	UR	9999	UA9999	UR9999
V62:Z023	V62:Z023	UA	UR	9999	UA9999	UR9999
V62:Z024	V62:Z024	UA	UR	9999	UA9999	UR9999
V62:Z025	V62:Z025	UA	UR	9999	UA9999	UR9999
V62:Z026	V62:Z026	UA	UR	9999	UA9999	UR9999
V62:Z027	V62:Z027	UA	UR	9999	UA9999	UR9999
V62:Z028	V62:Z028	UA	UR	9999	UA9999	UR9999
V62:Z029	V62:Z029	UA	UR	9999	UA9999	UR9999
V62:Z030	V62:Z030	UA	UR	9999	UA9999	UR9999
V62:Z031	V62:Z031	UA	UR	9999	UA9999	UR9999
V62:Z032	V62:Z032	UA	UR	9999	UA9999	UR9999
V63:Z001	V63:Z001	UA	UR	9999	UA9999	UR9999
V63:Z002	V63:Z002	UA	UR	9999	UA9999	UR9999
V63:Z003	V63:Z003	UA	UR	9999	UA9999	UR9999
V63:Z004	V63:Z004	UA	UR	9999	UA9999	UR9999
V63:Z005	V63:Z005	UA	UR	9999	UA9999	UR9999
V63:Z006	V63:Z006	UA	UR	9999	UA9999	UR9999
V63:Z007	V63:Z007	UA	UR	9999	UA9999	UR9999
V63:Z008	V63:Z008	UA	UR	9999	UA9999	UR9999
V63:Z009	V63:Z009	UA	UR	9999	UA9999	UR9999
V63:Z010	V63:Z010	UA	UR	9999	UA9999	UR9999
V63:Z011	V63:Z011	UA	UR	9999	UA9999	UR9999
V63:Z012	V63:Z012	UA	UR	9999	UA9999	UR9999
V63:Z013	V63:Z013	UA	UR	9999	UA9999	UR9999
V63:Z014	V63:Z014	UA	UR	9999	UA9999	UR9999
V63:Z015	V63:Z015	UA	UR	9999	UA9999	UR9999
V63:Z016	V63:Z016	UA	UR	9999	UA9999	UR9999
V63:Z017	V63:Z017	UA	UR	9999	UA9999	UR9999
V63:Z018	V63:Z018	UA	UR	9999	UA9999	UR9999
V63:Z019	V63:Z019	UA	UR	9999	UA9999	UR9999
V63:Z020	V63:Z020	UA	UR	9999	UA9999	UR9999
V63:Z021	V63:Z021	UA	UR	9999	UA9999	UR9999
V63:Z022	V63:Z022	UA	UR	9999	UA9999	UR9999
V63:Z023	V63:Z023	UA	UR	9999	UA9999	UR9999
V63:Z024	V63:Z024	UA	UR	9999	UA9999	UR9999
V63:Z025	V63:Z025	UA	UR	9999	UA9999	UR9999
V63:Z026	V63:Z026	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

V63:Z027	V63:Z027	UA	UR	9999	UA9999	UR9999
V63:Z028	V63:Z028	UA	UR	9999	UA9999	UR9999
V63:Z029	V63:Z029	UA	UR	9999	UA9999	UR9999
V63:Z030	V63:Z030	UA	UR	9999	UA9999	UR9999
V63:Z031	V63:Z031	UA	UR	9999	UA9999	UR9999
V63:Z032	V63:Z032	UA	UR	9999	UA9999	UR9999
V64:Z001	V64:Z001	UA	UR	9999	UA9999	UR9999
V64:Z002	V64:Z002	UA	UR	9999	UA9999	UR9999
V64:Z003	V64:Z003	UA	UR	9999	UA9999	UR9999
V64:Z004	V64:Z004	UA	UR	9999	UA9999	UR9999
V64:Z005	V64:Z005	UA	UR	9999	UA9999	UR9999
V64:Z006	V64:Z006	UA	UR	9999	UA9999	UR9999
V64:Z007	V64:Z007	UA	UR	9999	UA9999	UR9999
V64:Z008	V64:Z008	UA	UR	9999	UA9999	UR9999
V64:Z009	V64:Z009	UA	UR	9999	UA9999	UR9999
V64:Z010	V64:Z010	UA	UR	9999	UA9999	UR9999
V64:Z011	V64:Z011	UA	UR	9999	UA9999	UR9999
V64:Z012	V64:Z012	UA	UR	9999	UA9999	UR9999
V64:Z013	V64:Z013	UA	UR	9999	UA9999	UR9999
V64:Z014	V64:Z014	UA	UR	9999	UA9999	UR9999
V64:Z015	V64:Z015	UA	UR	9999	UA9999	UR9999
V64:Z016	V64:Z016	UA	UR	9999	UA9999	UR9999
V64:Z017	V64:Z017	UA	UR	9999	UA9999	UR9999
V64:Z018	V64:Z018	UA	UR	9999	UA9999	UR9999
V64:Z019	V64:Z019	UA	UR	9999	UA9999	UR9999
V64:Z020	V64:Z020	UA	UR	9999	UA9999	UR9999
V64:Z021	V64:Z021	UA	UR	9999	UA9999	UR9999
V64:Z022	V64:Z022	UA	UR	9999	UA9999	UR9999
V64:Z023	V64:Z023	UA	UR	9999	UA9999	UR9999
V64:Z024	V64:Z024	UA	UR	9999	UA9999	UR9999
V64:Z025	V64:Z025	UA	UR	9999	UA9999	UR9999
V64:Z026	V64:Z026	UA	UR	9999	UA9999	UR9999
V64:Z027	V64:Z027	UA	UR	9999	UA9999	UR9999
V64:Z028	V64:Z028	UA	UR	9999	UA9999	UR9999
V64:Z029	V64:Z029	UA	UR	9999	UA9999	UR9999
V64:Z030	V64:Z030	UA	UR	9999	UA9999	UR9999
V64:Z031	V64:Z031	UA	UR	9999	UA9999	UR9999
V64:Z032	V64:Z032	UA	UR	9999	UA9999	UR9999
V65:Z001	V65:Z001	UA	UR	9999	UA9999	UR9999
V65:Z002	V65:Z002	UA	UR	9999	UA9999	UR9999
V65:Z003	V65:Z003	UA	UR	9999	UA9999	UR9999
V65:Z004	V65:Z004	UA	UR	9999	UA9999	UR9999
V65:Z005	V65:Z005	UA	UR	9999	UA9999	UR9999
V65:Z006	V65:Z006	UA	UR	9999	UA9999	UR9999
V65:Z007	V65:Z007	UA	UR	9999	UA9999	UR9999
V65:Z008	V65:Z008	UA	UR	9999	UA9999	UR9999
V65:Z009	V65:Z009	UA	UR	9999	UA9999	UR9999
V65:Z010	V65:Z010	UA	UR	9999	UA9999	UR9999
V65:Z011	V65:Z011	UA	UR	9999	UA9999	UR9999
V65:Z012	V65:Z012	UA	UR	9999	UA9999	UR9999
V65:Z013	V65:Z013	UA	UR	9999	UA9999	UR9999
V65:Z014	V65:Z014	UA	UR	9999	UA9999	UR9999
V65:Z015	V65:Z015	UA	UR	9999	UA9999	UR9999
V65:Z016	V65:Z016	UA	UR	9999	UA9999	UR9999
V65:Z017	V65:Z017	UA	UR	9999	UA9999	UR9999
V65:Z018	V65:Z018	UA	UR	9999	UA9999	UR9999
V65:Z019	V65:Z019	UA	UR	9999	UA9999	UR9999
V65:Z020	V65:Z020	UA	UR	9999	UA9999	UR9999
V65:Z021	V65:Z021	UA	UR	9999	UA9999	UR9999
V65:Z022	V65:Z022	UA	UR	9999	UA9999	UR9999
V65:Z023	V65:Z023	UA	UR	9999	UA9999	UR9999
V65:Z024	V65:Z024	UA	UR	9999	UA9999	UR9999
V65:Z025	V65:Z025	UA	UR	9999	UA9999	UR9999
V65:Z026	V65:Z026	UA	UR	9999	UA9999	UR9999
V65:Z027	V65:Z027	UA	UR	9999	UA9999	UR9999
V65:Z028	V65:Z028	UA	UR	9999	UA9999	UR9999
V65:Z029	V65:Z029	UA	UR	9999	UA9999	UR9999
V65:Z030	V65:Z030	UA	UR	9999	UA9999	UR9999
V65:Z031	V65:Z031	UA	UR	9999	UA9999	UR9999
V65:Z032	V65:Z032	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

V66:Z001	V66:Z001	UA	UR	9999	JA9999	UR9999
V66:Z002	V66:Z002	UA	UR	9999	JA9999	UR9999
V66:Z003	V66:Z003	UA	UR	9999	JA9999	UR9999
V66:Z004	V66:Z004	UA	UR	9999	JA9999	UR9999
V66:Z005	V66:Z005	UA	UR	9999	JA9999	UR9999
V66:Z006	V66:Z006	UA	UR	9999	JA9999	UR9999
V66:Z007	V66:Z007	UA	UR	9999	JA9999	UR9999
V66:Z008	V66:Z008	UA	UR	9999	JA9999	UR9999
V66:Z009	V66:Z009	UA	UR	9999	JA9999	UR9999
V66:Z010	V66:Z010	UA	UR	9999	JA9999	UR9999
V66:Z011	V66:Z011	UA	UR	9999	JA9999	UR9999
V66:Z012	V66:Z012	UA	UR	9999	JA9999	UR9999
V66:Z013	V66:Z013	UA	UR	9999	JA9999	UR9999
V66:Z014	V66:Z014	UA	UR	9999	JA9999	UR9999
V66:Z015	V66:Z015	UA	UR	9999	JA9999	UR9999
V66:Z016	V66:Z016	UA	UR	9999	JA9999	UR9999
V66:Z017	V66:Z017	UA	UR	9999	JA9999	UR9999
V66:Z018	V66:Z018	UA	UR	9999	JA9999	UR9999
V66:Z019	V66:Z019	UA	UR	9999	JA9999	UR9999
V66:Z020	V66:Z020	UA	UR	9999	JA9999	UR9999
V66:Z021	V66:Z021	UA	UR	9999	JA9999	UR9999
V66:Z022	V66:Z022	UA	UR	9999	JA9999	UR9999
V66:Z023	V66:Z023	UA	UR	9999	JA9999	UR9999
V66:Z024	V66:Z024	UA	UR	9999	JA9999	UR9999
V66:Z025	V66:Z025	UA	UR	9999	JA9999	UR9999
V66:Z026	V66:Z026	UA	UR	9999	JA9999	UR9999
V66:Z027	V66:Z027	UA	UR	9999	JA9999	UR9999
V66:Z028	V66:Z028	UA	UR	9999	JA9999	UR9999
V66:Z029	V66:Z029	UA	UR	9999	JA9999	UR9999
V66:Z030	V66:Z030	UA	UR	9999	JA9999	UR9999
V66:Z031	V66:Z031	UA	UR	9999	JA9999	UR9999
V66:Z032	V66:Z032	UA	UR	9999	JA9999	UR9999
V67:Z001	V67:Z001	UA	UR	9999	JA9999	UR9999
V67:Z002	V67:Z002	UA	UR	9999	JA9999	UR9999
V67:Z003	V67:Z003	UA	UR	9999	JA9999	UR9999
V67:Z004	V67:Z004	UA	UR	9999	JA9999	UR9999
V67:Z005	V67:Z005	UA	UR	9999	JA9999	UR9999
V67:Z006	V67:Z006	UA	UR	9999	JA9999	UR9999
V67:Z007	V67:Z007	UA	UR	9999	JA9999	UR9999
V67:Z008	V67:Z008	UA	UR	9999	JA9999	UR9999
V67:Z009	V67:Z009	UA	UR	9999	JA9999	UR9999
V67:Z010	V67:Z010	UA	UR	9999	JA9999	UR9999
V67:Z011	V67:Z011	UA	UR	9999	JA9999	UR9999
V67:Z012	V67:Z012	UA	UR	9999	JA9999	UR9999
V67:Z013	V67:Z013	UA	UR	9999	JA9999	UR9999
V67:Z014	V67:Z014	UA	UR	9999	JA9999	UR9999
V67:Z015	V67:Z015	UA	UR	9999	JA9999	UR9999
V67:Z016	V67:Z016	UA	UR	9999	JA9999	UR9999
V67:Z017	V67:Z017	UA	UR	9999	JA9999	UR9999
V67:Z018	V67:Z018	UA	UR	9999	JA9999	UR9999
V67:Z019	V67:Z019	UA	UR	9999	JA9999	UR9999
V67:Z020	V67:Z020	UA	UR	9999	JA9999	UR9999
V67:Z021	V67:Z021	UA	UR	9999	JA9999	UR9999
V67:Z022	V67:Z022	UA	UR	9999	JA9999	UR9999
V67:Z023	V67:Z023	UA	UR	9999	JA9999	UR9999
V67:Z024	V67:Z024	UA	UR	9999	JA9999	UR9999
V67:Z025	V67:Z025	UA	UR	9999	JA9999	UR9999
V67:Z026	V67:Z026	UA	UR	9999	JA9999	UR9999
V67:Z027	V67:Z027	UA	UR	9999	JA9999	UR9999
V67:Z028	V67:Z028	UA	UR	9999	JA9999	UR9999
V67:Z029	V67:Z029	UA	UR	9999	JA9999	UR9999
V67:Z030	V67:Z030	UA	UR	9999	JA9999	UR9999
V67:Z031	V67:Z031	UA	UR	9999	JA9999	UR9999
V67:Z032	V67:Z032	UA	UR	9999	JA9999	UR9999
V68:Z001	V68:Z001	UA	UR	9999	JA9999	UR9999
V68:Z002	V68:Z002	UA	UR	9999	JA9999	UR9999
V68:Z003	V68:Z003	UA	UR	9999	JA9999	UR9999
V68:Z004	V68:Z004	UA	UR	9999	JA9999	UR9999
V68:Z005	V68:Z005	UA	UR	9999	JA9999	UR9999
V68:Z006	V68:Z006	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V68:Z007	V68:Z007	UA	UR	9999	JA9999	UR9999
V68:Z008	V68:Z008	UA	UR	9999	JA9999	UR9999
V68:Z009	V68:Z009	UA	UR	9999	JA9999	UR9999
V68:Z010	V68:Z010	UA	UR	9999	JA9999	UR9999
V68:Z011	V68:Z011	UA	UR	9999	JA9999	UR9999
V68:Z012	V68:Z012	UA	UR	9999	JA9999	UR9999
V68:Z013	V68:Z013	UA	UR	9999	JA9999	UR9999
V68:Z014	V68:Z014	UA	UR	9999	JA9999	UR9999
V68:Z015	V68:Z015	UA	UR	9999	JA9999	UR9999
V68:Z016	V68:Z016	UA	UR	9999	JA9999	UR9999
V68:Z017	V68:Z017	UA	UR	9999	JA9999	UR9999
V68:Z018	V68:Z018	UA	UR	9999	JA9999	UR9999
V68:Z019	V68:Z019	UA	UR	9999	JA9999	UR9999
V68:Z020	V68:Z020	UA	UR	9999	JA9999	UR9999
V68:Z021	V68:Z021	UA	UR	9999	JA9999	UR9999
V68:Z022	V68:Z022	UA	UR	9999	JA9999	UR9999
V68:Z023	V68:Z023	UA	UR	9999	JA9999	UR9999
V68:Z024	V68:Z024	UA	UR	9999	JA9999	UR9999
V68:Z025	V68:Z025	UA	UR	9999	JA9999	UR9999
V68:Z026	V68:Z026	UA	UR	9999	JA9999	UR9999
V68:Z027	V68:Z027	UA	UR	9999	JA9999	UR9999
V68:Z028	V68:Z028	UA	UR	9999	JA9999	UR9999
V68:Z029	V68:Z029	UA	UR	9999	JA9999	UR9999
V68:Z030	V68:Z030	UA	UR	9999	JA9999	UR9999
V68:Z031	V68:Z031	UA	UR	9999	JA9999	UR9999
V68:Z032	V68:Z032	UA	UR	9999	JA9999	UR9999
V69:Z001	V69:Z001	UA	UR	9999	JA9999	UR9999
V69:Z002	V69:Z002	UA	UR	9999	JA9999	UR9999
V69:Z003	V69:Z003	UA	UR	9999	JA9999	UR9999
V69:Z004	V69:Z004	UA	UR	9999	JA9999	UR9999
V69:Z005	V69:Z005	UA	UR	9999	JA9999	UR9999
V69:Z006	V69:Z006	UA	UR	9999	JA9999	UR9999
V69:Z007	V69:Z007	UA	UR	9999	JA9999	UR9999
V69:Z008	V69:Z008	UA	UR	9999	JA9999	UR9999
V69:Z009	V69:Z009	UA	UR	9999	JA9999	UR9999
V69:Z010	V69:Z010	UA	UR	9999	JA9999	UR9999
V69:Z011	V69:Z011	UA	UR	9999	JA9999	UR9999
V69:Z012	V69:Z012	UA	UR	9999	JA9999	UR9999
V69:Z013	V69:Z013	UA	UR	9999	JA9999	UR9999
V69:Z014	V69:Z014	UA	UR	9999	JA9999	UR9999
V69:Z015	V69:Z015	UA	UR	9999	JA9999	UR9999
V69:Z016	V69:Z016	UA	UR	9999	JA9999	UR9999
V69:Z017	V69:Z017	UA	UR	9999	JA9999	UR9999
V69:Z018	V69:Z018	UA	UR	9999	JA9999	UR9999
V69:Z019	V69:Z019	UA	UR	9999	JA9999	UR9999
V69:Z020	V69:Z020	UA	UR	9999	JA9999	UR9999
V69:Z021	V69:Z021	UA	UR	9999	JA9999	UR9999
V69:Z022	V69:Z022	UA	UR	9999	JA9999	UR9999
V69:Z023	V69:Z023	UA	UR	9999	JA9999	UR9999
V69:Z024	V69:Z024	UA	UR	9999	JA9999	UR9999
V69:Z025	V69:Z025	UA	UR	9999	JA9999	UR9999
V69:Z026	V69:Z026	UA	UR	9999	JA9999	UR9999
V69:Z027	V69:Z027	UA	UR	9999	JA9999	UR9999
V69:Z028	V69:Z028	UA	UR	9999	JA9999	UR9999
V69:Z029	V69:Z029	UA	UR	9999	JA9999	UR9999
V69:Z030	V69:Z030	UA	UR	9999	JA9999	UR9999
V69:Z031	V69:Z031	UA	UR	9999	JA9999	UR9999
V69:Z032	V69:Z032	UA	UR	9999	JA9999	UR9999
V70:Z001	V70:Z001	UA	UR	9999	JA9999	UR9999
V70:Z002	V70:Z002	UA	UR	9999	JA9999	UR9999
V70:Z003	V70:Z003	UA	UR	9999	JA9999	UR9999
V70:Z004	V70:Z004	UA	UR	9999	JA9999	UR9999
V70:Z005	V70:Z005	UA	UR	9999	JA9999	UR9999
V70:Z006	V70:Z006	UA	UR	9999	JA9999	UR9999
V70:Z007	V70:Z007	UA	UR	9999	JA9999	UR9999
V70:Z008	V70:Z008	UA	UR	9999	JA9999	UR9999
V70:Z009	V70:Z009	UA	UR	9999	JA9999	UR9999
V70:Z010	V70:Z010	UA	UR	9999	JA9999	UR9999
V70:Z011	V70:Z011	UA	UR	9999	JA9999	UR9999
V70:Z012	V70:Z012	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V70:Z013	V70:Z013	UA	UR	9999	UA9999	UR9999
V70:Z014	V70:Z014	UA	UR	9999	UA9999	UR9999
V70:Z015	V70:Z015	UA	UR	9999	UA9999	UR9999
V70:Z016	V70:Z016	UA	UR	9999	UA9999	UR9999
V70:Z017	V70:Z017	UA	UR	9999	UA9999	UR9999
V70:Z018	V70:Z018	UA	UR	9999	UA9999	UR9999
V70:Z019	V70:Z019	UA	UR	9999	UA9999	UR9999
V70:Z020	V70:Z020	UA	UR	9999	UA9999	UR9999
V70:Z021	V70:Z021	UA	UR	9999	UA9999	UR9999
V70:Z022	V70:Z022	UA	UR	9999	UA9999	UR9999
V70:Z023	V70:Z023	UA	UR	9999	UA9999	UR9999
V70:Z024	V70:Z024	UA	UR	9999	UA9999	UR9999
V70:Z025	V70:Z025	UA	UR	9999	UA9999	UR9999
V70:Z026	V70:Z026	UA	UR	9999	UA9999	UR9999
V70:Z027	V70:Z027	UA	UR	9999	UA9999	UR9999
V70:Z028	V70:Z028	UA	UR	9999	UA9999	UR9999
V70:Z029	V70:Z029	UA	UR	9999	UA9999	UR9999
V70:Z030	V70:Z030	UA	UR	9999	UA9999	UR9999
V70:Z031	V70:Z031	UA	UR	9999	UA9999	UR9999
V70:Z032	V70:Z032	UA	UR	9999	UA9999	UR9999
V71:Z001	V71:Z001	UA	UR	9999	UA9999	UR9999
V71:Z002	V71:Z002	UA	UR	9999	UA9999	UR9999
V71:Z003	V71:Z003	UA	UR	9999	UA9999	UR9999
V71:Z004	V71:Z004	UA	UR	9999	UA9999	UR9999
V71:Z005	V71:Z005	UA	UR	9999	UA9999	UR9999
V71:Z006	V71:Z006	UA	UR	9999	UA9999	UR9999
V71:Z007	V71:Z007	UA	UR	9999	UA9999	UR9999
V71:Z008	V71:Z008	UA	UR	9999	UA9999	UR9999
V71:Z009	V71:Z009	UA	UR	9999	UA9999	UR9999
V71:Z010	V71:Z010	UA	UR	9999	UA9999	UR9999
V71:Z011	V71:Z011	UA	UR	9999	UA9999	UR9999
V71:Z012	V71:Z012	UA	UR	9999	UA9999	UR9999
V71:Z013	V71:Z013	UA	UR	9999	UA9999	UR9999
V71:Z014	V71:Z014	UA	UR	9999	UA9999	UR9999
V71:Z015	V71:Z015	UA	UR	9999	UA9999	UR9999
V71:Z016	V71:Z016	UA	UR	9999	UA9999	UR9999
V71:Z017	V71:Z017	UA	UR	9999	UA9999	UR9999
V71:Z018	V71:Z018	UA	UR	9999	UA9999	UR9999
V71:Z019	V71:Z019	UA	UR	9999	UA9999	UR9999
V71:Z020	V71:Z020	UA	UR	9999	UA9999	UR9999
V71:Z021	V71:Z021	UA	UR	9999	UA9999	UR9999
V71:Z022	V71:Z022	UA	UR	9999	UA9999	UR9999
V71:Z023	V71:Z023	UA	UR	9999	UA9999	UR9999
V71:Z024	V71:Z024	UA	UR	9999	UA9999	UR9999
V71:Z025	V71:Z025	UA	UR	9999	UA9999	UR9999
V71:Z026	V71:Z026	UA	UR	9999	UA9999	UR9999
V71:Z027	V71:Z027	UA	UR	9999	UA9999	UR9999
V71:Z028	V71:Z028	UA	UR	9999	UA9999	UR9999
V71:Z029	V71:Z029	UA	UR	9999	UA9999	UR9999
V71:Z030	V71:Z030	UA	UR	9999	UA9999	UR9999
V71:Z031	V71:Z031	UA	UR	9999	UA9999	UR9999
V71:Z032	V71:Z032	UA	UR	9999	UA9999	UR9999
V72:Z001	V72:Z001	UA	UR	9999	UA9999	UR9999
V72:Z002	V72:Z002	UA	UR	9999	UA9999	UR9999
V72:Z003	V72:Z003	UA	UR	9999	UA9999	UR9999
V72:Z004	V72:Z004	UA	UR	9999	UA9999	UR9999
V72:Z005	V72:Z005	UA	UR	9999	UA9999	UR9999
V72:Z006	V72:Z006	UA	UR	9999	UA9999	UR9999
V72:Z007	V72:Z007	UA	UR	9999	UA9999	UR9999
V72:Z008	V72:Z008	UA	UR	9999	UA9999	UR9999
V72:Z009	V72:Z009	UA	UR	9999	UA9999	UR9999
V72:Z010	V72:Z010	UA	UR	9999	UA9999	UR9999
V72:Z011	V72:Z011	UA	UR	9999	UA9999	UR9999
V72:Z012	V72:Z012	UA	UR	9999	UA9999	UR9999
V72:Z013	V72:Z013	UA	UR	9999	UA9999	UR9999
V72:Z014	V72:Z014	UA	UR	9999	UA9999	UR9999
V72:Z015	V72:Z015	UA	UR	9999	UA9999	UR9999
V72:Z016	V72:Z016	UA	UR	9999	UA9999	UR9999
V72:Z017	V72:Z017	UA	UR	9999	UA9999	UR9999
V72:Z018	V72:Z018	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

V72:Z019	V72:Z019	UA	UR	9999	JA9999	UR9999
V72:Z020	V72:Z020	UA	UR	9999	JA9999	UR9999
V72:Z021	V72:Z021	UA	UR	9999	JA9999	UR9999
V72:Z022	V72:Z022	UA	UR	9999	JA9999	UR9999
V72:Z023	V72:Z023	UA	UR	9999	JA9999	UR9999
V72:Z024	V72:Z024	UA	UR	9999	JA9999	UR9999
V72:Z025	V72:Z025	UA	UR	9999	JA9999	UR9999
V72:Z026	V72:Z026	UA	UR	9999	JA9999	UR9999
V72:Z027	V72:Z027	UA	UR	9999	JA9999	UR9999
V72:Z028	V72:Z028	UA	UR	9999	JA9999	UR9999
V72:Z029	V72:Z029	UA	UR	9999	JA9999	UR9999
V72:Z030	V72:Z030	UA	UR	9999	JA9999	UR9999
V72:Z031	V72:Z031	UA	UR	9999	JA9999	UR9999
V72:Z032	V72:Z032	UA	UR	9999	JA9999	UR9999
V73:Z001	V73:Z001	UA	UR	9999	JA9999	UR9999
V73:Z002	V73:Z002	UA	UR	9999	JA9999	UR9999
V73:Z003	V73:Z003	UA	UR	9999	JA9999	UR9999
V73:Z004	V73:Z004	UA	UR	9999	JA9999	UR9999
V73:Z005	V73:Z005	UA	UR	9999	JA9999	UR9999
V73:Z006	V73:Z006	UA	UR	9999	JA9999	UR9999
V73:Z007	V73:Z007	UA	UR	9999	JA9999	UR9999
V73:Z008	V73:Z008	UA	UR	9999	JA9999	UR9999
V73:Z009	V73:Z009	UA	UR	9999	JA9999	UR9999
V73:Z010	V73:Z010	UA	UR	9999	JA9999	UR9999
V73:Z011	V73:Z011	UA	UR	9999	JA9999	UR9999
V73:Z012	V73:Z012	UA	UR	9999	JA9999	UR9999
V73:Z013	V73:Z013	UA	UR	9999	JA9999	UR9999
V73:Z014	V73:Z014	UA	UR	9999	JA9999	UR9999
V73:Z015	V73:Z015	UA	UR	9999	JA9999	UR9999
V73:Z016	V73:Z016	UA	UR	9999	JA9999	UR9999
V73:Z017	V73:Z017	UA	UR	9999	JA9999	UR9999
V73:Z018	V73:Z018	UA	UR	9999	JA9999	UR9999
V73:Z019	V73:Z019	UA	UR	9999	JA9999	UR9999
V73:Z020	V73:Z020	UA	UR	9999	JA9999	UR9999
V73:Z021	V73:Z021	UA	UR	9999	JA9999	UR9999
V73:Z022	V73:Z022	UA	UR	9999	JA9999	UR9999
V73:Z023	V73:Z023	UA	UR	9999	JA9999	UR9999
V73:Z024	V73:Z024	UA	UR	9999	JA9999	UR9999
V73:Z025	V73:Z025	UA	UR	9999	JA9999	UR9999
V73:Z026	V73:Z026	UA	UR	9999	JA9999	UR9999
V73:Z027	V73:Z027	UA	UR	9999	JA9999	UR9999
V73:Z028	V73:Z028	UA	UR	9999	JA9999	UR9999
V73:Z029	V73:Z029	UA	UR	9999	JA9999	UR9999
V73:Z030	V73:Z030	UA	UR	9999	JA9999	UR9999
V73:Z031	V73:Z031	UA	UR	9999	JA9999	UR9999
V73:Z032	V73:Z032	UA	UR	9999	JA9999	UR9999
V74:Z001	V74:Z001	UA	UR	9999	JA9999	UR9999
V74:Z002	V74:Z002	UA	UR	9999	JA9999	UR9999
V74:Z003	V74:Z003	UA	UR	9999	JA9999	UR9999
V74:Z004	V74:Z004	UA	UR	9999	JA9999	UR9999
V74:Z005	V74:Z005	UA	UR	9999	JA9999	UR9999
V74:Z006	V74:Z006	UA	UR	9999	JA9999	UR9999
V74:Z007	V74:Z007	UA	UR	9999	JA9999	UR9999
V74:Z008	V74:Z008	UA	UR	9999	JA9999	UR9999
V74:Z009	V74:Z009	UA	UR	9999	JA9999	UR9999
V74:Z010	V74:Z010	UA	UR	9999	JA9999	UR9999
V74:Z011	V74:Z011	UA	UR	9999	JA9999	UR9999
V74:Z012	V74:Z012	UA	UR	9999	JA9999	UR9999
V74:Z013	V74:Z013	UA	UR	9999	JA9999	UR9999
V74:Z014	V74:Z014	UA	UR	9999	JA9999	UR9999
V74:Z015	V74:Z015	UA	UR	9999	JA9999	UR9999
V74:Z016	V74:Z016	UA	UR	9999	JA9999	UR9999
V74:Z017	V74:Z017	UA	UR	9999	JA9999	UR9999
V74:Z018	V74:Z018	UA	UR	9999	JA9999	UR9999
V74:Z019	V74:Z019	UA	UR	9999	JA9999	UR9999
V74:Z020	V74:Z020	UA	UR	9999	JA9999	UR9999
V74:Z021	V74:Z021	UA	UR	9999	JA9999	UR9999
V74:Z022	V74:Z022	UA	UR	9999	JA9999	UR9999
V74:Z023	V74:Z023	UA	UR	9999	JA9999	UR9999
V74:Z024	V74:Z024	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V74:Z025	V74:Z025	UA	UR	9999	JA9999	UR9999
V74:Z026	V74:Z026	UA	UR	9999	JA9999	UR9999
V74:Z027	V74:Z027	UA	UR	9999	JA9999	UR9999
V74:Z028	V74:Z028	UA	UR	9999	JA9999	UR9999
V74:Z029	V74:Z029	UA	UR	9999	JA9999	UR9999
V74:Z030	V74:Z030	UA	UR	9999	JA9999	UR9999
V74:Z031	V74:Z031	UA	UR	9999	JA9999	UR9999
V74:Z032	V74:Z032	UA	UR	9999	JA9999	UR9999
V75:Z001	V75:Z001	UA	UR	9999	JA9999	UR9999
V75:Z002	V75:Z002	UA	UR	9999	JA9999	UR9999
V75:Z003	V75:Z003	UA	UR	9999	JA9999	UR9999
V75:Z004	V75:Z004	UA	UR	9999	JA9999	UR9999
V75:Z005	V75:Z005	UA	UR	9999	JA9999	UR9999
V75:Z006	V75:Z006	UA	UR	9999	JA9999	UR9999
V75:Z007	V75:Z007	UA	UR	9999	JA9999	UR9999
V75:Z008	V75:Z008	UA	UR	9999	JA9999	UR9999
V75:Z009	V75:Z009	UA	UR	9999	JA9999	UR9999
V75:Z010	V75:Z010	UA	UR	9999	JA9999	UR9999
V75:Z011	V75:Z011	UA	UR	9999	JA9999	UR9999
V75:Z012	V75:Z012	UA	UR	9999	JA9999	UR9999
V75:Z013	V75:Z013	UA	UR	9999	JA9999	UR9999
V75:Z014	V75:Z014	UA	UR	9999	JA9999	UR9999
V75:Z015	V75:Z015	UA	UR	9999	JA9999	UR9999
V75:Z016	V75:Z016	UA	UR	9999	JA9999	UR9999
V75:Z017	V75:Z017	UA	UR	9999	JA9999	UR9999
V75:Z018	V75:Z018	UA	UR	9999	JA9999	UR9999
V75:Z019	V75:Z019	UA	UR	9999	JA9999	UR9999
V75:Z020	V75:Z020	UA	UR	9999	JA9999	UR9999
V75:Z021	V75:Z021	UA	UR	9999	JA9999	UR9999
V75:Z022	V75:Z022	UA	UR	9999	JA9999	UR9999
V75:Z023	V75:Z023	UA	UR	9999	JA9999	UR9999
V75:Z024	V75:Z024	UA	UR	9999	JA9999	UR9999
V75:Z025	V75:Z025	UA	UR	9999	JA9999	UR9999
V75:Z026	V75:Z026	UA	UR	9999	JA9999	UR9999
V75:Z027	V75:Z027	UA	UR	9999	JA9999	UR9999
V75:Z028	V75:Z028	UA	UR	9999	JA9999	UR9999
V75:Z029	V75:Z029	UA	UR	9999	JA9999	UR9999
V75:Z030	V75:Z030	UA	UR	9999	JA9999	UR9999
V75:Z031	V75:Z031	UA	UR	9999	JA9999	UR9999
V75:Z032	V75:Z032	UA	UR	9999	JA9999	UR9999
V76:Z001	V76:Z001	UA	UR	9999	JA9999	UR9999
V76:Z002	V76:Z002	UA	UR	9999	JA9999	UR9999
V76:Z003	V76:Z003	UA	UR	9999	JA9999	UR9999
V76:Z004	V76:Z004	UA	UR	9999	JA9999	UR9999
V76:Z005	V76:Z005	UA	UR	9999	JA9999	UR9999
V76:Z006	V76:Z006	UA	UR	9999	JA9999	UR9999
V76:Z007	V76:Z007	UA	UR	9999	JA9999	UR9999
V76:Z008	V76:Z008	UA	UR	9999	JA9999	UR9999
V76:Z009	V76:Z009	UA	UR	9999	JA9999	UR9999
V76:Z010	V76:Z010	UA	UR	9999	JA9999	UR9999
V76:Z011	V76:Z011	UA	UR	9999	JA9999	UR9999
V76:Z012	V76:Z012	UA	UR	9999	JA9999	UR9999
V76:Z013	V76:Z013	UA	UR	9999	JA9999	UR9999
V76:Z014	V76:Z014	UA	UR	9999	JA9999	UR9999
V76:Z015	V76:Z015	UA	UR	9999	JA9999	UR9999
V76:Z016	V76:Z016	UA	UR	9999	JA9999	UR9999
V76:Z017	V76:Z017	UA	UR	9999	JA9999	UR9999
V76:Z018	V76:Z018	UA	UR	9999	JA9999	UR9999
V76:Z019	V76:Z019	UA	UR	9999	JA9999	UR9999
V76:Z020	V76:Z020	UA	UR	9999	JA9999	UR9999
V76:Z021	V76:Z021	UA	UR	9999	JA9999	UR9999
V76:Z022	V76:Z022	UA	UR	9999	JA9999	UR9999
V76:Z023	V76:Z023	UA	UR	9999	JA9999	UR9999
V76:Z024	V76:Z024	UA	UR	9999	JA9999	UR9999
V76:Z025	V76:Z025	UA	UR	9999	JA9999	UR9999
V76:Z026	V76:Z026	UA	UR	9999	JA9999	UR9999
V76:Z027	V76:Z027	UA	UR	9999	JA9999	UR9999
V76:Z028	V76:Z028	UA	UR	9999	JA9999	UR9999
V76:Z029	V76:Z029	UA	UR	9999	JA9999	UR9999
V76:Z030	V76:Z030	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V76:Z031	V76:Z031	UA	UR	9999	UA9999	UR9999
V76:Z032	V76:Z032	UA	UR	9999	UA9999	UR9999
V77:Z001	V77:Z001	UA	UR	9999	UA9999	UR9999
V77:Z002	V77:Z002	UA	UR	9999	UA9999	UR9999
V77:Z003	V77:Z003	UA	UR	9999	UA9999	UR9999
V77:Z004	V77:Z004	UA	UR	9999	UA9999	UR9999
V77:Z005	V77:Z005	UA	UR	9999	UA9999	UR9999
V77:Z006	V77:Z006	UA	UR	9999	UA9999	UR9999
V77:Z007	V77:Z007	UA	UR	9999	UA9999	UR9999
V77:Z008	V77:Z008	UA	UR	9999	UA9999	UR9999
V77:Z009	V77:Z009	UA	UR	9999	UA9999	UR9999
V77:Z010	V77:Z010	UA	UR	9999	UA9999	UR9999
V77:Z011	V77:Z011	UA	UR	9999	UA9999	UR9999
V77:Z012	V77:Z012	UA	UR	9999	UA9999	UR9999
V77:Z013	V77:Z013	UA	UR	9999	UA9999	UR9999
V77:Z014	V77:Z014	UA	UR	9999	UA9999	UR9999
V77:Z015	V77:Z015	UA	UR	9999	UA9999	UR9999
V77:Z016	V77:Z016	UA	UR	9999	UA9999	UR9999
V77:Z017	V77:Z017	UA	UR	9999	UA9999	UR9999
V77:Z018	V77:Z018	UA	UR	9999	UA9999	UR9999
V77:Z019	V77:Z019	UA	UR	9999	UA9999	UR9999
V77:Z020	V77:Z020	UA	UR	9999	UA9999	UR9999
V77:Z021	V77:Z021	UA	UR	9999	UA9999	UR9999
V77:Z022	V77:Z022	UA	UR	9999	UA9999	UR9999
V77:Z023	V77:Z023	UA	UR	9999	UA9999	UR9999
V77:Z024	V77:Z024	UA	UR	9999	UA9999	UR9999
V77:Z025	V77:Z025	UA	UR	9999	UA9999	UR9999
V77:Z026	V77:Z026	UA	UR	9999	UA9999	UR9999
V77:Z027	V77:Z027	UA	UR	9999	UA9999	UR9999
V77:Z028	V77:Z028	UA	UR	9999	UA9999	UR9999
V77:Z029	V77:Z029	UA	UR	9999	UA9999	UR9999
V77:Z030	V77:Z030	UA	UR	9999	UA9999	UR9999
V77:Z031	V77:Z031	UA	UR	9999	UA9999	UR9999
V77:Z032	V77:Z032	UA	UR	9999	UA9999	UR9999
V78:Z001	V78:Z001	UA	UR	9999	UA9999	UR9999
V78:Z002	V78:Z002	UA	UR	9999	UA9999	UR9999
V78:Z003	V78:Z003	UA	UR	9999	UA9999	UR9999
V78:Z004	V78:Z004	UA	UR	9999	UA9999	UR9999
V78:Z005	V78:Z005	UA	UR	9999	UA9999	UR9999
V78:Z006	V78:Z006	UA	UR	9999	UA9999	UR9999
V78:Z007	V78:Z007	UA	UR	9999	UA9999	UR9999
V78:Z008	V78:Z008	UA	UR	9999	UA9999	UR9999
V78:Z009	V78:Z009	UA	UR	9999	UA9999	UR9999
V78:Z010	V78:Z010	UA	UR	9999	UA9999	UR9999
V78:Z011	V78:Z011	UA	UR	9999	UA9999	UR9999
V78:Z012	V78:Z012	UA	UR	9999	UA9999	UR9999
V78:Z013	V78:Z013	UA	UR	9999	UA9999	UR9999
V78:Z014	V78:Z014	UA	UR	9999	UA9999	UR9999
V78:Z015	V78:Z015	UA	UR	9999	UA9999	UR9999
V78:Z016	V78:Z016	UA	UR	9999	UA9999	UR9999
V78:Z017	V78:Z017	UA	UR	9999	UA9999	UR9999
V78:Z018	V78:Z018	UA	UR	9999	UA9999	UR9999
V78:Z019	V78:Z019	UA	UR	9999	UA9999	UR9999
V78:Z020	V78:Z020	UA	UR	9999	UA9999	UR9999
V78:Z021	V78:Z021	UA	UR	9999	UA9999	UR9999
V78:Z022	V78:Z022	UA	UR	9999	UA9999	UR9999
V78:Z023	V78:Z023	UA	UR	9999	UA9999	UR9999
V78:Z024	V78:Z024	UA	UR	9999	UA9999	UR9999
V78:Z025	V78:Z025	UA	UR	9999	UA9999	UR9999
V78:Z026	V78:Z026	UA	UR	9999	UA9999	UR9999
V78:Z027	V78:Z027	UA	UR	9999	UA9999	UR9999
V78:Z028	V78:Z028	UA	UR	9999	UA9999	UR9999
V78:Z029	V78:Z029	UA	UR	9999	UA9999	UR9999
V78:Z030	V78:Z030	UA	UR	9999	UA9999	UR9999
V78:Z031	V78:Z031	UA	UR	9999	UA9999	UR9999
V78:Z032	V78:Z032	UA	UR	9999	UA9999	UR9999
V79:Z001	V79:Z001	UA	UR	9999	UA9999	UR9999
V79:Z002	V79:Z002	UA	UR	9999	UA9999	UR9999
V79:Z003	V79:Z003	UA	UR	9999	UA9999	UR9999
V79:Z004	V79:Z004	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

V79:Z005	V79:Z005	UA	UR	9999	JA9999	UR9999
V79:Z006	V79:Z006	UA	UR	9999	JA9999	UR9999
V79:Z007	V79:Z007	UA	UR	9999	JA9999	UR9999
V79:Z008	V79:Z008	UA	UR	9999	JA9999	UR9999
V79:Z009	V79:Z009	UA	UR	9999	JA9999	UR9999
V79:Z010	V79:Z010	UA	UR	9999	JA9999	UR9999
V79:Z011	V79:Z011	UA	UR	9999	JA9999	UR9999
V79:Z012	V79:Z012	UA	UR	9999	JA9999	UR9999
V79:Z013	V79:Z013	UA	UR	9999	JA9999	UR9999
V79:Z014	V79:Z014	UA	UR	9999	JA9999	UR9999
V79:Z015	V79:Z015	UA	UR	9999	JA9999	UR9999
V79:Z016	V79:Z016	UA	UR	9999	JA9999	UR9999
V79:Z017	V79:Z017	UA	UR	9999	JA9999	UR9999
V79:Z018	V79:Z018	UA	UR	9999	JA9999	UR9999
V79:Z019	V79:Z019	UA	UR	9999	JA9999	UR9999
V79:Z020	V79:Z020	UA	UR	9999	JA9999	UR9999
V79:Z021	V79:Z021	UA	UR	9999	JA9999	UR9999
V79:Z022	V79:Z022	UA	UR	9999	JA9999	UR9999
V79:Z023	V79:Z023	UA	UR	9999	JA9999	UR9999
V79:Z024	V79:Z024	UA	UR	9999	JA9999	UR9999
V79:Z025	V79:Z025	UA	UR	9999	JA9999	UR9999
V79:Z026	V79:Z026	UA	UR	9999	JA9999	UR9999
V79:Z027	V79:Z027	UA	UR	9999	JA9999	UR9999
V79:Z028	V79:Z028	UA	UR	9999	JA9999	UR9999
V79:Z029	V79:Z029	UA	UR	9999	JA9999	UR9999
V79:Z030	V79:Z030	UA	UR	9999	JA9999	UR9999
V79:Z031	V79:Z031	UA	UR	9999	JA9999	UR9999
V79:Z032	V79:Z032	UA	UR	9999	JA9999	UR9999
V80:Z001	V80:Z001	UA	UR	9999	JA9999	UR9999
V80:Z002	V80:Z002	UA	UR	9999	JA9999	UR9999
V80:Z003	V80:Z003	UA	UR	9999	JA9999	UR9999
V80:Z004	V80:Z004	UA	UR	9999	JA9999	UR9999
V80:Z005	V80:Z005	UA	UR	9999	JA9999	UR9999
V80:Z006	V80:Z006	UA	UR	9999	JA9999	UR9999
V80:Z007	V80:Z007	UA	UR	9999	JA9999	UR9999
V80:Z008	V80:Z008	UA	UR	9999	JA9999	UR9999
V80:Z009	V80:Z009	UA	UR	9999	JA9999	UR9999
V80:Z010	V80:Z010	UA	UR	9999	JA9999	UR9999
V80:Z011	V80:Z011	UA	UR	9999	JA9999	UR9999
V80:Z012	V80:Z012	UA	UR	9999	JA9999	UR9999
V80:Z013	V80:Z013	UA	UR	9999	JA9999	UR9999
V80:Z014	V80:Z014	UA	UR	9999	JA9999	UR9999
V80:Z015	V80:Z015	UA	UR	9999	JA9999	UR9999
V80:Z016	V80:Z016	UA	UR	9999	JA9999	UR9999
V80:Z017	V80:Z017	UA	UR	9999	JA9999	UR9999
V80:Z018	V80:Z018	UA	UR	9999	JA9999	UR9999
V80:Z019	V80:Z019	UA	UR	9999	JA9999	UR9999
V80:Z020	V80:Z020	UA	UR	9999	JA9999	UR9999
V80:Z021	V80:Z021	UA	UR	9999	JA9999	UR9999
V80:Z022	V80:Z022	UA	UR	9999	JA9999	UR9999
V80:Z023	V80:Z023	UA	UR	9999	JA9999	UR9999
V80:Z024	V80:Z024	UA	UR	9999	JA9999	UR9999
V80:Z025	V80:Z025	UA	UR	9999	JA9999	UR9999
V80:Z026	V80:Z026	UA	UR	9999	JA9999	UR9999
V80:Z027	V80:Z027	UA	UR	9999	JA9999	UR9999
V80:Z028	V80:Z028	UA	UR	9999	JA9999	UR9999
V80:Z029	V80:Z029	UA	UR	9999	JA9999	UR9999
V80:Z030	V80:Z030	UA	UR	9999	JA9999	UR9999
V80:Z031	V80:Z031	UA	UR	9999	JA9999	UR9999
V80:Z032	V80:Z032	UA	UR	9999	JA9999	UR9999
V81:Z001	V81:Z001	UA	UR	9999	JA9999	UR9999
V81:Z002	V81:Z002	UA	UR	9999	JA9999	UR9999
V81:Z003	V81:Z003	UA	UR	9999	JA9999	UR9999
V81:Z004	V81:Z004	UA	UR	9999	JA9999	UR9999
V81:Z005	V81:Z005	UA	UR	9999	JA9999	UR9999
V81:Z006	V81:Z006	UA	UR	9999	JA9999	UR9999
V81:Z007	V81:Z007	UA	UR	9999	JA9999	UR9999
V81:Z008	V81:Z008	UA	UR	9999	JA9999	UR9999
V81:Z009	V81:Z009	UA	UR	9999	JA9999	UR9999
V81:Z010	V81:Z010	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V81:Z011	V81:Z011	UA	UR	9999	UA9999	UR9999
V81:Z012	V81:Z012	UA	UR	9999	UA9999	UR9999
V81:Z013	V81:Z013	UA	UR	9999	UA9999	UR9999
V81:Z014	V81:Z014	UA	UR	9999	UA9999	UR9999
V81:Z015	V81:Z015	UA	UR	9999	UA9999	UR9999
V81:Z016	V81:Z016	UA	UR	9999	UA9999	UR9999
V81:Z017	V81:Z017	UA	UR	9999	UA9999	UR9999
V81:Z018	V81:Z018	UA	UR	9999	UA9999	UR9999
V81:Z019	V81:Z019	UA	UR	9999	UA9999	UR9999
V81:Z020	V81:Z020	UA	UR	9999	UA9999	UR9999
V81:Z021	V81:Z021	UA	UR	9999	UA9999	UR9999
V81:Z022	V81:Z022	UA	UR	9999	UA9999	UR9999
V81:Z023	V81:Z023	UA	UR	9999	UA9999	UR9999
V81:Z024	V81:Z024	UA	UR	9999	UA9999	UR9999
V81:Z025	V81:Z025	UA	UR	9999	UA9999	UR9999
V81:Z026	V81:Z026	UA	UR	9999	UA9999	UR9999
V81:Z027	V81:Z027	UA	UR	9999	UA9999	UR9999
V81:Z028	V81:Z028	UA	UR	9999	UA9999	UR9999
V81:Z029	V81:Z029	UA	UR	9999	UA9999	UR9999
V81:Z030	V81:Z030	UA	UR	9999	UA9999	UR9999
V81:Z031	V81:Z031	UA	UR	9999	UA9999	UR9999
V81:Z032	V81:Z032	UA	UR	9999	UA9999	UR9999
V82:Z001	V82:Z001	UA	UR	9999	UA9999	UR9999
V82:Z002	V82:Z002	UA	UR	9999	UA9999	UR9999
V82:Z003	V82:Z003	UA	UR	9999	UA9999	UR9999
V82:Z004	V82:Z004	UA	UR	9999	UA9999	UR9999
V82:Z005	V82:Z005	UA	UR	9999	UA9999	UR9999
V82:Z006	V82:Z006	UA	UR	9999	UA9999	UR9999
V82:Z007	V82:Z007	UA	UR	9999	UA9999	UR9999
V82:Z008	V82:Z008	UA	UR	9999	UA9999	UR9999
V82:Z009	V82:Z009	UA	UR	9999	UA9999	UR9999
V82:Z010	V82:Z010	UA	UR	9999	UA9999	UR9999
V82:Z011	V82:Z011	UA	UR	9999	UA9999	UR9999
V82:Z012	V82:Z012	UA	UR	9999	UA9999	UR9999
V82:Z013	V82:Z013	UA	UR	9999	UA9999	UR9999
V82:Z014	V82:Z014	UA	UR	9999	UA9999	UR9999
V82:Z015	V82:Z015	UA	UR	9999	UA9999	UR9999
V82:Z016	V82:Z016	UA	UR	9999	UA9999	UR9999
V82:Z017	V82:Z017	UA	UR	9999	UA9999	UR9999
V82:Z018	V82:Z018	UA	UR	9999	UA9999	UR9999
V82:Z019	V82:Z019	UA	UR	9999	UA9999	UR9999
V82:Z020	V82:Z020	UA	UR	9999	UA9999	UR9999
V82:Z021	V82:Z021	UA	UR	9999	UA9999	UR9999
V82:Z022	V82:Z022	UA	UR	9999	UA9999	UR9999
V82:Z023	V82:Z023	UA	UR	9999	UA9999	UR9999
V82:Z024	V82:Z024	UA	UR	9999	UA9999	UR9999
V82:Z025	V82:Z025	UA	UR	9999	UA9999	UR9999
V82:Z026	V82:Z026	UA	UR	9999	UA9999	UR9999
V82:Z027	V82:Z027	UA	UR	9999	UA9999	UR9999
V82:Z028	V82:Z028	UA	UR	9999	UA9999	UR9999
V82:Z029	V82:Z029	UA	UR	9999	UA9999	UR9999
V82:Z030	V82:Z030	UA	UR	9999	UA9999	UR9999
V82:Z031	V82:Z031	UA	UR	9999	UA9999	UR9999
V82:Z032	V82:Z032	UA	UR	9999	UA9999	UR9999
V83:Z001	V83:Z001	UA	UR	9999	UA9999	UR9999
V83:Z002	V83:Z002	UA	UR	9999	UA9999	UR9999
V83:Z003	V83:Z003	UA	UR	9999	UA9999	UR9999
V83:Z004	V83:Z004	UA	UR	9999	UA9999	UR9999
V83:Z005	V83:Z005	UA	UR	9999	UA9999	UR9999
V83:Z006	V83:Z006	UA	UR	9999	UA9999	UR9999
V83:Z007	V83:Z007	UA	UR	9999	UA9999	UR9999
V83:Z008	V83:Z008	UA	UR	9999	UA9999	UR9999
V83:Z009	V83:Z009	UA	UR	9999	UA9999	UR9999
V83:Z010	V83:Z010	UA	UR	9999	UA9999	UR9999
V83:Z011	V83:Z011	UA	UR	9999	UA9999	UR9999
V83:Z012	V83:Z012	UA	UR	9999	UA9999	UR9999
V83:Z013	V83:Z013	UA	UR	9999	UA9999	UR9999
V83:Z014	V83:Z014	UA	UR	9999	UA9999	UR9999
V83:Z015	V83:Z015	UA	UR	9999	UA9999	UR9999
V83:Z016	V83:Z016	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

V83:Z017	V83:Z017	UA	UR	9999	JA9999	UR9999
V83:Z018	V83:Z018	UA	UR	9999	JA9999	UR9999
V83:Z019	V83:Z019	UA	UR	9999	JA9999	UR9999
V83:Z020	V83:Z020	UA	UR	9999	JA9999	UR9999
V83:Z021	V83:Z021	UA	UR	9999	JA9999	UR9999
V83:Z022	V83:Z022	UA	UR	9999	JA9999	UR9999
V83:Z023	V83:Z023	UA	UR	9999	JA9999	UR9999
V83:Z024	V83:Z024	UA	UR	9999	JA9999	UR9999
V83:Z025	V83:Z025	UA	UR	9999	JA9999	UR9999
V83:Z026	V83:Z026	UA	UR	9999	JA9999	UR9999
V83:Z027	V83:Z027	UA	UR	9999	JA9999	UR9999
V83:Z028	V83:Z028	UA	UR	9999	JA9999	UR9999
V83:Z029	V83:Z029	UA	UR	9999	JA9999	UR9999
V83:Z030	V83:Z030	UA	UR	9999	JA9999	UR9999
V83:Z031	V83:Z031	UA	UR	9999	JA9999	UR9999
V83:Z032	V83:Z032	UA	UR	9999	JA9999	UR9999
V84:Z001	V84:Z001	UA	UR	9999	JA9999	UR9999
V84:Z002	V84:Z002	UA	UR	9999	JA9999	UR9999
V84:Z003	V84:Z003	UA	UR	9999	JA9999	UR9999
V84:Z004	V84:Z004	UA	UR	9999	JA9999	UR9999
V84:Z005	V84:Z005	UA	UR	9999	JA9999	UR9999
V84:Z006	V84:Z006	UA	UR	9999	JA9999	UR9999
V84:Z007	V84:Z007	UA	UR	9999	JA9999	UR9999
V84:Z008	V84:Z008	UA	UR	9999	JA9999	UR9999
V84:Z009	V84:Z009	UA	UR	9999	JA9999	UR9999
V84:Z010	V84:Z010	UA	UR	9999	JA9999	UR9999
V84:Z011	V84:Z011	UA	UR	9999	JA9999	UR9999
V84:Z012	V84:Z012	UA	UR	9999	JA9999	UR9999
V84:Z013	V84:Z013	UA	UR	9999	JA9999	UR9999
V84:Z014	V84:Z014	UA	UR	9999	JA9999	UR9999
V84:Z015	V84:Z015	UA	UR	9999	JA9999	UR9999
V84:Z016	V84:Z016	UA	UR	9999	JA9999	UR9999
V84:Z017	V84:Z017	UA	UR	9999	JA9999	UR9999
V84:Z018	V84:Z018	UA	UR	9999	JA9999	UR9999
V84:Z019	V84:Z019	UA	UR	9999	JA9999	UR9999
V84:Z020	V84:Z020	UA	UR	9999	JA9999	UR9999
V84:Z021	V84:Z021	UA	UR	9999	JA9999	UR9999
V84:Z022	V84:Z022	UA	UR	9999	JA9999	UR9999
V84:Z023	V84:Z023	UA	UR	9999	JA9999	UR9999
V84:Z024	V84:Z024	UA	UR	9999	JA9999	UR9999
V84:Z025	V84:Z025	UA	UR	9999	JA9999	UR9999
V84:Z026	V84:Z026	UA	UR	9999	JA9999	UR9999
V84:Z027	V84:Z027	UA	UR	9999	JA9999	UR9999
V84:Z028	V84:Z028	UA	UR	9999	JA9999	UR9999
V84:Z029	V84:Z029	UA	UR	9999	JA9999	UR9999
V84:Z030	V84:Z030	UA	UR	9999	JA9999	UR9999
V84:Z031	V84:Z031	UA	UR	9999	JA9999	UR9999
V84:Z032	V84:Z032	UA	UR	9999	JA9999	UR9999
V85:Z001	V85:Z001	UA	UR	9999	JA9999	UR9999
V85:Z002	V85:Z002	UA	UR	9999	JA9999	UR9999
V85:Z003	V85:Z003	UA	UR	9999	JA9999	UR9999
V85:Z004	V85:Z004	UA	UR	9999	JA9999	UR9999
V85:Z005	V85:Z005	UA	UR	9999	JA9999	UR9999
V85:Z006	V85:Z006	UA	UR	9999	JA9999	UR9999
V85:Z007	V85:Z007	UA	UR	9999	JA9999	UR9999
V85:Z008	V85:Z008	UA	UR	9999	JA9999	UR9999
V85:Z009	V85:Z009	UA	UR	9999	JA9999	UR9999
V85:Z010	V85:Z010	UA	UR	9999	JA9999	UR9999
V85:Z011	V85:Z011	UA	UR	9999	JA9999	UR9999
V85:Z012	V85:Z012	UA	UR	9999	JA9999	UR9999
V85:Z013	V85:Z013	UA	UR	9999	JA9999	UR9999
V85:Z014	V85:Z014	UA	UR	9999	JA9999	UR9999
V85:Z015	V85:Z015	UA	UR	9999	JA9999	UR9999
V85:Z016	V85:Z016	UA	UR	9999	JA9999	UR9999
V85:Z017	V85:Z017	UA	UR	9999	JA9999	UR9999
V85:Z018	V85:Z018	UA	UR	9999	JA9999	UR9999
V85:Z019	V85:Z019	UA	UR	9999	JA9999	UR9999
V85:Z020	V85:Z020	UA	UR	9999	JA9999	UR9999
V85:Z021	V85:Z021	UA	UR	9999	JA9999	UR9999
V85:Z022	V85:Z022	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V85:Z023	V85:Z023	UA	UR	9999	JA9999	UR9999
V85:Z024	V85:Z024	UA	UR	9999	JA9999	UR9999
V85:Z025	V85:Z025	UA	UR	9999	JA9999	UR9999
V85:Z026	V85:Z026	UA	UR	9999	JA9999	UR9999
V85:Z027	V85:Z027	UA	UR	9999	JA9999	UR9999
V85:Z028	V85:Z028	UA	UR	9999	JA9999	UR9999
V85:Z029	V85:Z029	UA	UR	9999	JA9999	UR9999
V85:Z030	V85:Z030	UA	UR	9999	JA9999	UR9999
V85:Z031	V85:Z031	UA	UR	9999	JA9999	UR9999
V85:Z032	V85:Z032	UA	UR	9999	JA9999	UR9999
V86:Z001	V86:Z001	UA	UR	9999	JA9999	UR9999
V86:Z002	V86:Z002	UA	UR	9999	JA9999	UR9999
V86:Z003	V86:Z003	UA	UR	9999	JA9999	UR9999
V86:Z004	V86:Z004	UA	UR	9999	JA9999	UR9999
V86:Z005	V86:Z005	UA	UR	9999	JA9999	UR9999
V86:Z006	V86:Z006	UA	UR	9999	JA9999	UR9999
V86:Z007	V86:Z007	UA	UR	9999	JA9999	UR9999
V86:Z008	V86:Z008	UA	UR	9999	JA9999	UR9999
V86:Z009	V86:Z009	UA	UR	9999	JA9999	UR9999
V86:Z010	V86:Z010	UA	UR	9999	JA9999	UR9999
V86:Z011	V86:Z011	UA	UR	9999	JA9999	UR9999
V86:Z012	V86:Z012	UA	UR	9999	JA9999	UR9999
V86:Z013	V86:Z013	UA	UR	9999	JA9999	UR9999
V86:Z014	V86:Z014	UA	UR	9999	JA9999	UR9999
V86:Z015	V86:Z015	UA	UR	9999	JA9999	UR9999
V86:Z016	V86:Z016	UA	UR	9999	JA9999	UR9999
V86:Z017	V86:Z017	UA	UR	9999	JA9999	UR9999
V86:Z018	V86:Z018	UA	UR	9999	JA9999	UR9999
V86:Z019	V86:Z019	UA	UR	9999	JA9999	UR9999
V86:Z020	V86:Z020	UA	UR	9999	JA9999	UR9999
V86:Z021	V86:Z021	UA	UR	9999	JA9999	UR9999
V86:Z022	V86:Z022	UA	UR	9999	JA9999	UR9999
V86:Z023	V86:Z023	UA	UR	9999	JA9999	UR9999
V86:Z024	V86:Z024	UA	UR	9999	JA9999	UR9999
V86:Z025	V86:Z025	UA	UR	9999	JA9999	UR9999
V86:Z026	V86:Z026	UA	UR	9999	JA9999	UR9999
V86:Z027	V86:Z027	UA	UR	9999	JA9999	UR9999
V86:Z028	V86:Z028	UA	UR	9999	JA9999	UR9999
V86:Z029	V86:Z029	UA	UR	9999	JA9999	UR9999
V86:Z030	V86:Z030	UA	UR	9999	JA9999	UR9999
V86:Z031	V86:Z031	UA	UR	9999	JA9999	UR9999
V86:Z032	V86:Z032	UA	UR	9999	JA9999	UR9999
V87:Z001	V87:Z001	UA	UR	9999	JA9999	UR9999
V87:Z002	V87:Z002	UA	UR	9999	JA9999	UR9999
V87:Z003	V87:Z003	UA	UR	9999	JA9999	UR9999
V87:Z004	V87:Z004	UA	UR	9999	JA9999	UR9999
V87:Z005	V87:Z005	UA	UR	9999	JA9999	UR9999
V87:Z006	V87:Z006	UA	UR	9999	JA9999	UR9999
V87:Z007	V87:Z007	UA	UR	9999	JA9999	UR9999
V87:Z008	V87:Z008	UA	UR	9999	JA9999	UR9999
V87:Z009	V87:Z009	UA	UR	9999	JA9999	UR9999
V87:Z010	V87:Z010	UA	UR	9999	JA9999	UR9999
V87:Z011	V87:Z011	UA	UR	9999	JA9999	UR9999
V87:Z012	V87:Z012	UA	UR	9999	JA9999	UR9999
V87:Z013	V87:Z013	UA	UR	9999	JA9999	UR9999
V87:Z014	V87:Z014	UA	UR	9999	JA9999	UR9999
V87:Z015	V87:Z015	UA	UR	9999	JA9999	UR9999
V87:Z016	V87:Z016	UA	UR	9999	JA9999	UR9999
V87:Z017	V87:Z017	UA	UR	9999	JA9999	UR9999
V87:Z018	V87:Z018	UA	UR	9999	JA9999	UR9999
V87:Z019	V87:Z019	UA	UR	9999	JA9999	UR9999
V87:Z020	V87:Z020	UA	UR	9999	JA9999	UR9999
V87:Z021	V87:Z021	UA	UR	9999	JA9999	UR9999
V87:Z022	V87:Z022	UA	UR	9999	JA9999	UR9999
V87:Z023	V87:Z023	UA	UR	9999	JA9999	UR9999
V87:Z024	V87:Z024	UA	UR	9999	JA9999	UR9999
V87:Z025	V87:Z025	UA	UR	9999	JA9999	UR9999
V87:Z026	V87:Z026	UA	UR	9999	JA9999	UR9999
V87:Z027	V87:Z027	UA	UR	9999	JA9999	UR9999
V87:Z028	V87:Z028	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V87:Z029	V87:Z029	UA	UR	9999	UA9999	UR9999
V87:Z030	V87:Z030	UA	UR	9999	UA9999	UR9999
V87:Z031	V87:Z031	UA	UR	9999	UA9999	UR9999
V87:Z032	V87:Z032	UA	UR	9999	UA9999	UR9999
V88:Z001	V88:Z001	UA	UR	9999	UA9999	UR9999
V88:Z002	V88:Z002	UA	UR	9999	UA9999	UR9999
V88:Z003	V88:Z003	UA	UR	9999	UA9999	UR9999
V88:Z004	V88:Z004	UA	UR	9999	UA9999	UR9999
V88:Z005	V88:Z005	UA	UR	9999	UA9999	UR9999
V88:Z006	V88:Z006	UA	UR	9999	UA9999	UR9999
V88:Z007	V88:Z007	UA	UR	9999	UA9999	UR9999
V88:Z008	V88:Z008	UA	UR	9999	UA9999	UR9999
V88:Z009	V88:Z009	UA	UR	9999	UA9999	UR9999
V88:Z010	V88:Z010	UA	UR	9999	UA9999	UR9999
V88:Z011	V88:Z011	UA	UR	9999	UA9999	UR9999
V88:Z012	V88:Z012	UA	UR	9999	UA9999	UR9999
V88:Z013	V88:Z013	UA	UR	9999	UA9999	UR9999
V88:Z014	V88:Z014	UA	UR	9999	UA9999	UR9999
V88:Z015	V88:Z015	UA	UR	9999	UA9999	UR9999
V88:Z016	V88:Z016	UA	UR	9999	UA9999	UR9999
V88:Z017	V88:Z017	UA	UR	9999	UA9999	UR9999
V88:Z018	V88:Z018	UA	UR	9999	UA9999	UR9999
V88:Z019	V88:Z019	UA	UR	9999	UA9999	UR9999
V88:Z020	V88:Z020	UA	UR	9999	UA9999	UR9999
V88:Z021	V88:Z021	UA	UR	9999	UA9999	UR9999
V88:Z022	V88:Z022	UA	UR	9999	UA9999	UR9999
V88:Z023	V88:Z023	UA	UR	9999	UA9999	UR9999
V88:Z024	V88:Z024	UA	UR	9999	UA9999	UR9999
V88:Z025	V88:Z025	UA	UR	9999	UA9999	UR9999
V88:Z026	V88:Z026	UA	UR	9999	UA9999	UR9999
V88:Z027	V88:Z027	UA	UR	9999	UA9999	UR9999
V88:Z028	V88:Z028	UA	UR	9999	UA9999	UR9999
V88:Z029	V88:Z029	UA	UR	9999	UA9999	UR9999
V88:Z030	V88:Z030	UA	UR	9999	UA9999	UR9999
V88:Z031	V88:Z031	UA	UR	9999	UA9999	UR9999
V88:Z032	V88:Z032	UA	UR	9999	UA9999	UR9999
V89:Z001	V89:Z001	UA	UR	9999	UA9999	UR9999
V89:Z002	V89:Z002	UA	UR	9999	UA9999	UR9999
V89:Z003	V89:Z003	UA	UR	9999	UA9999	UR9999
V89:Z004	V89:Z004	UA	UR	9999	UA9999	UR9999
V89:Z005	V89:Z005	UA	UR	9999	UA9999	UR9999
V89:Z006	V89:Z006	UA	UR	9999	UA9999	UR9999
V89:Z007	V89:Z007	UA	UR	9999	UA9999	UR9999
V89:Z008	V89:Z008	UA	UR	9999	UA9999	UR9999
V89:Z009	V89:Z009	UA	UR	9999	UA9999	UR9999
V89:Z010	V89:Z010	UA	UR	9999	UA9999	UR9999
V89:Z011	V89:Z011	UA	UR	9999	UA9999	UR9999
V89:Z012	V89:Z012	UA	UR	9999	UA9999	UR9999
V89:Z013	V89:Z013	UA	UR	9999	UA9999	UR9999
V89:Z014	V89:Z014	UA	UR	9999	UA9999	UR9999
V89:Z015	V89:Z015	UA	UR	9999	UA9999	UR9999
V89:Z016	V89:Z016	UA	UR	9999	UA9999	UR9999
V89:Z017	V89:Z017	UA	UR	9999	UA9999	UR9999
V89:Z018	V89:Z018	UA	UR	9999	UA9999	UR9999
V89:Z019	V89:Z019	UA	UR	9999	UA9999	UR9999
V89:Z020	V89:Z020	UA	UR	9999	UA9999	UR9999
V89:Z021	V89:Z021	UA	UR	9999	UA9999	UR9999
V89:Z022	V89:Z022	UA	UR	9999	UA9999	UR9999
V89:Z023	V89:Z023	UA	UR	9999	UA9999	UR9999
V89:Z024	V89:Z024	UA	UR	9999	UA9999	UR9999
V89:Z025	V89:Z025	UA	UR	9999	UA9999	UR9999
V89:Z026	V89:Z026	UA	UR	9999	UA9999	UR9999
V89:Z027	V89:Z027	UA	UR	9999	UA9999	UR9999
V89:Z028	V89:Z028	UA	UR	9999	UA9999	UR9999
V89:Z029	V89:Z029	UA	UR	9999	UA9999	UR9999
V89:Z030	V89:Z030	UA	UR	9999	UA9999	UR9999
V89:Z031	V89:Z031	UA	UR	9999	UA9999	UR9999
V89:Z032	V89:Z032	UA	UR	9999	UA9999	UR9999
V90:Z001	V90:Z001	UA	UR	9999	UA9999	UR9999
V90:Z002	V90:Z002	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

V90:Z003	V90:Z003	UA	UR	9999	UA9999	UR9999
V90:Z004	V90:Z004	UA	UR	9999	UA9999	UR9999
V90:Z005	V90:Z005	UA	UR	9999	UA9999	UR9999
V90:Z006	V90:Z006	UA	UR	9999	UA9999	UR9999
V90:Z007	V90:Z007	UA	UR	9999	UA9999	UR9999
V90:Z008	V90:Z008	UA	UR	9999	UA9999	UR9999
V90:Z009	V90:Z009	UA	UR	9999	UA9999	UR9999
V90:Z010	V90:Z010	UA	UR	9999	UA9999	UR9999
V90:Z011	V90:Z011	UA	UR	9999	UA9999	UR9999
V90:Z012	V90:Z012	UA	UR	9999	UA9999	UR9999
V90:Z013	V90:Z013	UA	UR	9999	UA9999	UR9999
V90:Z014	V90:Z014	UA	UR	9999	UA9999	UR9999
V90:Z015	V90:Z015	UA	UR	9999	UA9999	UR9999
V90:Z016	V90:Z016	UA	UR	9999	UA9999	UR9999
V90:Z017	V90:Z017	UA	UR	9999	UA9999	UR9999
V90:Z018	V90:Z018	UA	UR	9999	UA9999	UR9999
V90:Z019	V90:Z019	UA	UR	9999	UA9999	UR9999
V90:Z020	V90:Z020	UA	UR	9999	UA9999	UR9999
V90:Z021	V90:Z021	UA	UR	9999	UA9999	UR9999
V90:Z022	V90:Z022	UA	UR	9999	UA9999	UR9999
V90:Z023	V90:Z023	UA	UR	9999	UA9999	UR9999
V90:Z024	V90:Z024	UA	UR	9999	UA9999	UR9999
V90:Z025	V90:Z025	UA	UR	9999	UA9999	UR9999
V90:Z026	V90:Z026	UA	UR	9999	UA9999	UR9999
V90:Z027	V90:Z027	UA	UR	9999	UA9999	UR9999
V90:Z028	V90:Z028	UA	UR	9999	UA9999	UR9999
V90:Z029	V90:Z029	UA	UR	9999	UA9999	UR9999
V90:Z030	V90:Z030	UA	UR	9999	UA9999	UR9999
V90:Z031	V90:Z031	UA	UR	9999	UA9999	UR9999
V90:Z032	V90:Z032	UA	UR	9999	UA9999	UR9999
V91:Z001	V91:Z001	UA	UR	9999	UA9999	UR9999
V91:Z002	V91:Z002	UA	UR	9999	UA9999	UR9999
V91:Z003	V91:Z003	UA	UR	9999	UA9999	UR9999
V91:Z004	V91:Z004	UA	UR	9999	UA9999	UR9999
V91:Z005	V91:Z005	UA	UR	9999	UA9999	UR9999
V91:Z006	V91:Z006	UA	UR	9999	UA9999	UR9999
V91:Z007	V91:Z007	UA	UR	9999	UA9999	UR9999
V91:Z008	V91:Z008	UA	UR	9999	UA9999	UR9999
V91:Z009	V91:Z009	UA	UR	9999	UA9999	UR9999
V91:Z010	V91:Z010	UA	UR	9999	UA9999	UR9999
V91:Z011	V91:Z011	UA	UR	9999	UA9999	UR9999
V91:Z012	V91:Z012	UA	UR	9999	UA9999	UR9999
V91:Z013	V91:Z013	UA	UR	9999	UA9999	UR9999
V91:Z014	V91:Z014	UA	UR	9999	UA9999	UR9999
V91:Z015	V91:Z015	UA	UR	9999	UA9999	UR9999
V91:Z016	V91:Z016	UA	UR	9999	UA9999	UR9999
V91:Z017	V91:Z017	UA	UR	9999	UA9999	UR9999
V91:Z018	V91:Z018	UA	UR	9999	UA9999	UR9999
V91:Z019	V91:Z019	UA	UR	9999	UA9999	UR9999
V91:Z020	V91:Z020	UA	UR	9999	UA9999	UR9999
V91:Z021	V91:Z021	UA	UR	9999	UA9999	UR9999
V91:Z022	V91:Z022	UA	UR	9999	UA9999	UR9999
V91:Z023	V91:Z023	UA	UR	9999	UA9999	UR9999
V91:Z024	V91:Z024	UA	UR	9999	UA9999	UR9999
V91:Z025	V91:Z025	UA	UR	9999	UA9999	UR9999
V91:Z026	V91:Z026	UA	UR	9999	UA9999	UR9999
V91:Z027	V91:Z027	UA	UR	9999	UA9999	UR9999
V91:Z028	V91:Z028	UA	UR	9999	UA9999	UR9999
V91:Z029	V91:Z029	UA	UR	9999	UA9999	UR9999
V91:Z030	V91:Z030	UA	UR	9999	UA9999	UR9999
V91:Z031	V91:Z031	UA	UR	9999	UA9999	UR9999
V91:Z032	V91:Z032	UA	UR	9999	UA9999	UR9999
V92:Z001	V92:Z001	UA	UR	9999	UA9999	UR9999
V92:Z002	V92:Z002	UA	UR	9999	UA9999	UR9999
V92:Z003	V92:Z003	UA	UR	9999	UA9999	UR9999
V92:Z004	V92:Z004	UA	UR	9999	UA9999	UR9999
V92:Z005	V92:Z005	UA	UR	9999	UA9999	UR9999
V92:Z006	V92:Z006	UA	UR	9999	UA9999	UR9999
V92:Z007	V92:Z007	UA	UR	9999	UA9999	UR9999
V92:Z008	V92:Z008	UA	UR	9999	UA9999	UR9999

Integriti SIA DECIMAL Map. V21

V92:Z009	V92:Z009	UA	UR	9999	JA9999	UR9999
V92:Z010	V92:Z010	UA	UR	9999	JA9999	UR9999
V92:Z011	V92:Z011	UA	UR	9999	JA9999	UR9999
V92:Z012	V92:Z012	UA	UR	9999	JA9999	UR9999
V92:Z013	V92:Z013	UA	UR	9999	JA9999	UR9999
V92:Z014	V92:Z014	UA	UR	9999	JA9999	UR9999
V92:Z015	V92:Z015	UA	UR	9999	JA9999	UR9999
V92:Z016	V92:Z016	UA	UR	9999	JA9999	UR9999
V92:Z017	V92:Z017	UA	UR	9999	JA9999	UR9999
V92:Z018	V92:Z018	UA	UR	9999	JA9999	UR9999
V92:Z019	V92:Z019	UA	UR	9999	JA9999	UR9999
V92:Z020	V92:Z020	UA	UR	9999	JA9999	UR9999
V92:Z021	V92:Z021	UA	UR	9999	JA9999	UR9999
V92:Z022	V92:Z022	UA	UR	9999	JA9999	UR9999
V92:Z023	V92:Z023	UA	UR	9999	JA9999	UR9999
V92:Z024	V92:Z024	UA	UR	9999	JA9999	UR9999
V92:Z025	V92:Z025	UA	UR	9999	JA9999	UR9999
V92:Z026	V92:Z026	UA	UR	9999	JA9999	UR9999
V92:Z027	V92:Z027	UA	UR	9999	JA9999	UR9999
V92:Z028	V92:Z028	UA	UR	9999	JA9999	UR9999
V92:Z029	V92:Z029	UA	UR	9999	JA9999	UR9999
V92:Z030	V92:Z030	UA	UR	9999	JA9999	UR9999
V92:Z031	V92:Z031	UA	UR	9999	JA9999	UR9999
V92:Z032	V92:Z032	UA	UR	9999	JA9999	UR9999
V93:Z001	V93:Z001	UA	UR	9999	JA9999	UR9999
V93:Z002	V93:Z002	UA	UR	9999	JA9999	UR9999
V93:Z003	V93:Z003	UA	UR	9999	JA9999	UR9999
V93:Z004	V93:Z004	UA	UR	9999	JA9999	UR9999
V93:Z005	V93:Z005	UA	UR	9999	JA9999	UR9999
V93:Z006	V93:Z006	UA	UR	9999	JA9999	UR9999
V93:Z007	V93:Z007	UA	UR	9999	JA9999	UR9999
V93:Z008	V93:Z008	UA	UR	9999	JA9999	UR9999
V93:Z009	V93:Z009	UA	UR	9999	JA9999	UR9999
V93:Z010	V93:Z010	UA	UR	9999	JA9999	UR9999
V93:Z011	V93:Z011	UA	UR	9999	JA9999	UR9999
V93:Z012	V93:Z012	UA	UR	9999	JA9999	UR9999
V93:Z013	V93:Z013	UA	UR	9999	JA9999	UR9999
V93:Z014	V93:Z014	UA	UR	9999	JA9999	UR9999
V93:Z015	V93:Z015	UA	UR	9999	JA9999	UR9999
V93:Z016	V93:Z016	UA	UR	9999	JA9999	UR9999
V93:Z017	V93:Z017	UA	UR	9999	JA9999	UR9999
V93:Z018	V93:Z018	UA	UR	9999	JA9999	UR9999
V93:Z019	V93:Z019	UA	UR	9999	JA9999	UR9999
V93:Z020	V93:Z020	UA	UR	9999	JA9999	UR9999
V93:Z021	V93:Z021	UA	UR	9999	JA9999	UR9999
V93:Z022	V93:Z022	UA	UR	9999	JA9999	UR9999
V93:Z023	V93:Z023	UA	UR	9999	JA9999	UR9999
V93:Z024	V93:Z024	UA	UR	9999	JA9999	UR9999
V93:Z025	V93:Z025	UA	UR	9999	JA9999	UR9999
V93:Z026	V93:Z026	UA	UR	9999	JA9999	UR9999
V93:Z027	V93:Z027	UA	UR	9999	JA9999	UR9999
V93:Z028	V93:Z028	UA	UR	9999	JA9999	UR9999
V93:Z029	V93:Z029	UA	UR	9999	JA9999	UR9999
V93:Z030	V93:Z030	UA	UR	9999	JA9999	UR9999
V93:Z031	V93:Z031	UA	UR	9999	JA9999	UR9999
V93:Z032	V93:Z032	UA	UR	9999	JA9999	UR9999
V94:Z001	V94:Z001	UA	UR	9999	JA9999	UR9999
V94:Z002	V94:Z002	UA	UR	9999	JA9999	UR9999
V94:Z003	V94:Z003	UA	UR	9999	JA9999	UR9999
V94:Z004	V94:Z004	UA	UR	9999	JA9999	UR9999
V94:Z005	V94:Z005	UA	UR	9999	JA9999	UR9999
V94:Z006	V94:Z006	UA	UR	9999	JA9999	UR9999
V94:Z007	V94:Z007	UA	UR	9999	JA9999	UR9999
V94:Z008	V94:Z008	UA	UR	9999	JA9999	UR9999
V94:Z009	V94:Z009	UA	UR	9999	JA9999	UR9999
V94:Z010	V94:Z010	UA	UR	9999	JA9999	UR9999
V94:Z011	V94:Z011	UA	UR	9999	JA9999	UR9999
V94:Z012	V94:Z012	UA	UR	9999	JA9999	UR9999
V94:Z013	V94:Z013	UA	UR	9999	JA9999	UR9999
V94:Z014	V94:Z014	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V94:Z015	V94:Z015	UA	UR	9999	JA9999	UR9999
V94:Z016	V94:Z016	UA	UR	9999	JA9999	UR9999
V94:Z017	V94:Z017	UA	UR	9999	JA9999	UR9999
V94:Z018	V94:Z018	UA	UR	9999	JA9999	UR9999
V94:Z019	V94:Z019	UA	UR	9999	JA9999	UR9999
V94:Z020	V94:Z020	UA	UR	9999	JA9999	UR9999
V94:Z021	V94:Z021	UA	UR	9999	JA9999	UR9999
V94:Z022	V94:Z022	UA	UR	9999	JA9999	UR9999
V94:Z023	V94:Z023	UA	UR	9999	JA9999	UR9999
V94:Z024	V94:Z024	UA	UR	9999	JA9999	UR9999
V94:Z025	V94:Z025	UA	UR	9999	JA9999	UR9999
V94:Z026	V94:Z026	UA	UR	9999	JA9999	UR9999
V94:Z027	V94:Z027	UA	UR	9999	JA9999	UR9999
V94:Z028	V94:Z028	UA	UR	9999	JA9999	UR9999
V94:Z029	V94:Z029	UA	UR	9999	JA9999	UR9999
V94:Z030	V94:Z030	UA	UR	9999	JA9999	UR9999
V94:Z031	V94:Z031	UA	UR	9999	JA9999	UR9999
V94:Z032	V94:Z032	UA	UR	9999	JA9999	UR9999
V95:Z001	V95:Z001	UA	UR	9999	JA9999	UR9999
V95:Z002	V95:Z002	UA	UR	9999	JA9999	UR9999
V95:Z003	V95:Z003	UA	UR	9999	JA9999	UR9999
V95:Z004	V95:Z004	UA	UR	9999	JA9999	UR9999
V95:Z005	V95:Z005	UA	UR	9999	JA9999	UR9999
V95:Z006	V95:Z006	UA	UR	9999	JA9999	UR9999
V95:Z007	V95:Z007	UA	UR	9999	JA9999	UR9999
V95:Z008	V95:Z008	UA	UR	9999	JA9999	UR9999
V95:Z009	V95:Z009	UA	UR	9999	JA9999	UR9999
V95:Z010	V95:Z010	UA	UR	9999	JA9999	UR9999
V95:Z011	V95:Z011	UA	UR	9999	JA9999	UR9999
V95:Z012	V95:Z012	UA	UR	9999	JA9999	UR9999
V95:Z013	V95:Z013	UA	UR	9999	JA9999	UR9999
V95:Z014	V95:Z014	UA	UR	9999	JA9999	UR9999
V95:Z015	V95:Z015	UA	UR	9999	JA9999	UR9999
V95:Z016	V95:Z016	UA	UR	9999	JA9999	UR9999
V95:Z017	V95:Z017	UA	UR	9999	JA9999	UR9999
V95:Z018	V95:Z018	UA	UR	9999	JA9999	UR9999
V95:Z019	V95:Z019	UA	UR	9999	JA9999	UR9999
V95:Z020	V95:Z020	UA	UR	9999	JA9999	UR9999
V95:Z021	V95:Z021	UA	UR	9999	JA9999	UR9999
V95:Z022	V95:Z022	UA	UR	9999	JA9999	UR9999
V95:Z023	V95:Z023	UA	UR	9999	JA9999	UR9999
V95:Z024	V95:Z024	UA	UR	9999	JA9999	UR9999
V95:Z025	V95:Z025	UA	UR	9999	JA9999	UR9999
V95:Z026	V95:Z026	UA	UR	9999	JA9999	UR9999
V95:Z027	V95:Z027	UA	UR	9999	JA9999	UR9999
V95:Z028	V95:Z028	UA	UR	9999	JA9999	UR9999
V95:Z029	V95:Z029	UA	UR	9999	JA9999	UR9999
V95:Z030	V95:Z030	UA	UR	9999	JA9999	UR9999
V95:Z031	V95:Z031	UA	UR	9999	JA9999	UR9999
V95:Z032	V95:Z032	UA	UR	9999	JA9999	UR9999
V96:Z001	V96:Z001	UA	UR	9999	JA9999	UR9999
V96:Z002	V96:Z002	UA	UR	9999	JA9999	UR9999
V96:Z003	V96:Z003	UA	UR	9999	JA9999	UR9999
V96:Z004	V96:Z004	UA	UR	9999	JA9999	UR9999
V96:Z005	V96:Z005	UA	UR	9999	JA9999	UR9999
V96:Z006	V96:Z006	UA	UR	9999	JA9999	UR9999
V96:Z007	V96:Z007	UA	UR	9999	JA9999	UR9999
V96:Z008	V96:Z008	UA	UR	9999	JA9999	UR9999
V96:Z009	V96:Z009	UA	UR	9999	JA9999	UR9999
V96:Z010	V96:Z010	UA	UR	9999	JA9999	UR9999
V96:Z011	V96:Z011	UA	UR	9999	JA9999	UR9999
V96:Z012	V96:Z012	UA	UR	9999	JA9999	UR9999
V96:Z013	V96:Z013	UA	UR	9999	JA9999	UR9999
V96:Z014	V96:Z014	UA	UR	9999	JA9999	UR9999
V96:Z015	V96:Z015	UA	UR	9999	JA9999	UR9999
V96:Z016	V96:Z016	UA	UR	9999	JA9999	UR9999
V96:Z017	V96:Z017	UA	UR	9999	JA9999	UR9999
V96:Z018	V96:Z018	UA	UR	9999	JA9999	UR9999
V96:Z019	V96:Z019	UA	UR	9999	JA9999	UR9999
V96:Z020	V96:Z020	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V96:Z021	V96:Z021	UA	UR	9999	JA9999	UR9999
V96:Z022	V96:Z022	UA	UR	9999	JA9999	UR9999
V96:Z023	V96:Z023	UA	UR	9999	JA9999	UR9999
V96:Z024	V96:Z024	UA	UR	9999	JA9999	UR9999
V96:Z025	V96:Z025	UA	UR	9999	JA9999	UR9999
V96:Z026	V96:Z026	UA	UR	9999	JA9999	UR9999
V96:Z027	V96:Z027	UA	UR	9999	JA9999	UR9999
V96:Z028	V96:Z028	UA	UR	9999	JA9999	UR9999
V96:Z029	V96:Z029	UA	UR	9999	JA9999	UR9999
V96:Z030	V96:Z030	UA	UR	9999	JA9999	UR9999
V96:Z031	V96:Z031	UA	UR	9999	JA9999	UR9999
V96:Z032	V96:Z032	UA	UR	9999	JA9999	UR9999
V97:Z001	V97:Z001	UA	UR	9999	JA9999	UR9999
V97:Z002	V97:Z002	UA	UR	9999	JA9999	UR9999
V97:Z003	V97:Z003	UA	UR	9999	JA9999	UR9999
V97:Z004	V97:Z004	UA	UR	9999	JA9999	UR9999
V97:Z005	V97:Z005	UA	UR	9999	JA9999	UR9999
V97:Z006	V97:Z006	UA	UR	9999	JA9999	UR9999
V97:Z007	V97:Z007	UA	UR	9999	JA9999	UR9999
V97:Z008	V97:Z008	UA	UR	9999	JA9999	UR9999
V97:Z009	V97:Z009	UA	UR	9999	JA9999	UR9999
V97:Z010	V97:Z010	UA	UR	9999	JA9999	UR9999
V97:Z011	V97:Z011	UA	UR	9999	JA9999	UR9999
V97:Z012	V97:Z012	UA	UR	9999	JA9999	UR9999
V97:Z013	V97:Z013	UA	UR	9999	JA9999	UR9999
V97:Z014	V97:Z014	UA	UR	9999	JA9999	UR9999
V97:Z015	V97:Z015	UA	UR	9999	JA9999	UR9999
V97:Z016	V97:Z016	UA	UR	9999	JA9999	UR9999
V97:Z017	V97:Z017	UA	UR	9999	JA9999	UR9999
V97:Z018	V97:Z018	UA	UR	9999	JA9999	UR9999
V97:Z019	V97:Z019	UA	UR	9999	JA9999	UR9999
V97:Z020	V97:Z020	UA	UR	9999	JA9999	UR9999
V97:Z021	V97:Z021	UA	UR	9999	JA9999	UR9999
V97:Z022	V97:Z022	UA	UR	9999	JA9999	UR9999
V97:Z023	V97:Z023	UA	UR	9999	JA9999	UR9999
V97:Z024	V97:Z024	UA	UR	9999	JA9999	UR9999
V97:Z025	V97:Z025	UA	UR	9999	JA9999	UR9999
V97:Z026	V97:Z026	UA	UR	9999	JA9999	UR9999
V97:Z027	V97:Z027	UA	UR	9999	JA9999	UR9999
V97:Z028	V97:Z028	UA	UR	9999	JA9999	UR9999
V97:Z029	V97:Z029	UA	UR	9999	JA9999	UR9999
V97:Z030	V97:Z030	UA	UR	9999	JA9999	UR9999
V97:Z031	V97:Z031	UA	UR	9999	JA9999	UR9999
V97:Z032	V97:Z032	UA	UR	9999	JA9999	UR9999
V98:Z001	V98:Z001	UA	UR	9999	JA9999	UR9999
V98:Z002	V98:Z002	UA	UR	9999	JA9999	UR9999
V98:Z003	V98:Z003	UA	UR	9999	JA9999	UR9999
V98:Z004	V98:Z004	UA	UR	9999	JA9999	UR9999
V98:Z005	V98:Z005	UA	UR	9999	JA9999	UR9999
V98:Z006	V98:Z006	UA	UR	9999	JA9999	UR9999
V98:Z007	V98:Z007	UA	UR	9999	JA9999	UR9999
V98:Z008	V98:Z008	UA	UR	9999	JA9999	UR9999
V98:Z009	V98:Z009	UA	UR	9999	JA9999	UR9999
V98:Z010	V98:Z010	UA	UR	9999	JA9999	UR9999
V98:Z011	V98:Z011	UA	UR	9999	JA9999	UR9999
V98:Z012	V98:Z012	UA	UR	9999	JA9999	UR9999
V98:Z013	V98:Z013	UA	UR	9999	JA9999	UR9999
V98:Z014	V98:Z014	UA	UR	9999	JA9999	UR9999
V98:Z015	V98:Z015	UA	UR	9999	JA9999	UR9999
V98:Z016	V98:Z016	UA	UR	9999	JA9999	UR9999
V98:Z017	V98:Z017	UA	UR	9999	JA9999	UR9999
V98:Z018	V98:Z018	UA	UR	9999	JA9999	UR9999
V98:Z019	V98:Z019	UA	UR	9999	JA9999	UR9999
V98:Z020	V98:Z020	UA	UR	9999	JA9999	UR9999
V98:Z021	V98:Z021	UA	UR	9999	JA9999	UR9999
V98:Z022	V98:Z022	UA	UR	9999	JA9999	UR9999
V98:Z023	V98:Z023	UA	UR	9999	JA9999	UR9999
V98:Z024	V98:Z024	UA	UR	9999	JA9999	UR9999
V98:Z025	V98:Z025	UA	UR	9999	JA9999	UR9999
V98:Z026	V98:Z026	UA	UR	9999	JA9999	UR9999

Integriti SIA DECIMAL Map. V21

V98:Z027	V98:Z027	UA	UR	9999	UA9999	UR9999
V98:Z028	V98:Z028	UA	UR	9999	UA9999	UR9999
V98:Z029	V98:Z029	UA	UR	9999	UA9999	UR9999
V98:Z030	V98:Z030	UA	UR	9999	UA9999	UR9999
V98:Z031	V98:Z031	UA	UR	9999	UA9999	UR9999
V98:Z032	V98:Z032	UA	UR	9999	UA9999	UR9999
V99:Z001	V99:Z001	UA	UR	9999	UA9999	UR9999
V99:Z002	V99:Z002	UA	UR	9999	UA9999	UR9999
V99:Z003	V99:Z003	UA	UR	9999	UA9999	UR9999
V99:Z004	V99:Z004	UA	UR	9999	UA9999	UR9999
V99:Z005	V99:Z005	UA	UR	9999	UA9999	UR9999
V99:Z006	V99:Z006	UA	UR	9999	UA9999	UR9999
V99:Z007	V99:Z007	UA	UR	9999	UA9999	UR9999
V99:Z008	V99:Z008	UA	UR	9999	UA9999	UR9999
V99:Z009	V99:Z009	UA	UR	9999	UA9999	UR9999
V99:Z010	V99:Z010	UA	UR	9999	UA9999	UR9999
V99:Z011	V99:Z011	UA	UR	9999	UA9999	UR9999
V99:Z012	V99:Z012	UA	UR	9999	UA9999	UR9999
V99:Z013	V99:Z013	UA	UR	9999	UA9999	UR9999
V99:Z014	V99:Z014	UA	UR	9999	UA9999	UR9999
V99:Z015	V99:Z015	UA	UR	9999	UA9999	UR9999
V99:Z016	V99:Z016	UA	UR	9999	UA9999	UR9999
V99:Z017	V99:Z017	UA	UR	9999	UA9999	UR9999
V99:Z018	V99:Z018	UA	UR	9999	UA9999	UR9999
V99:Z019	V99:Z019	UA	UR	9999	UA9999	UR9999
V99:Z020	V99:Z020	UA	UR	9999	UA9999	UR9999
V99:Z021	V99:Z021	UA	UR	9999	UA9999	UR9999
V99:Z022	V99:Z022	UA	UR	9999	UA9999	UR9999
V99:Z023	V99:Z023	UA	UR	9999	UA9999	UR9999
V99:Z024	V99:Z024	UA	UR	9999	UA9999	UR9999
V99:Z025	V99:Z025	UA	UR	9999	UA9999	UR9999
V99:Z026	V99:Z026	UA	UR	9999	UA9999	UR9999
V99:Z027	V99:Z027	UA	UR	9999	UA9999	UR9999
V99:Z028	V99:Z028	UA	UR	9999	UA9999	UR9999
V99:Z029	V99:Z029	UA	UR	9999	UA9999	UR9999
V99:Z030	V99:Z030	UA	UR	9999	UA9999	UR9999
V99:Z031	V99:Z031	UA	UR	9999	UA9999	UR9999
V99:Z032	V99:Z032	UA	UR	9999	UA9999	UR9999